

**apuro**

# Meat Grinder

Instruction manual



**Model  
CD400-A**

# Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- DO NOT feed meat in to the appliance by hand. ALWAYS use the pusher supplied.
- DO NOT use fingers to clear the exit hole while the appliance is turned on.
- DO NOT allow the motor to work against a blockage for any length of time.
- DO NOT immerse in water.
- DO NOT operate appliance with a damaged cord or plug.
- DO NOT let cord hang over edge of table or counter.
- DO NOT let cord contact hot surface, including the stove.
- Only use original Apuro parts and attachments with this appliance. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Always carry the appliance by the motor housing.
- Not suitable for outdoor use.
- Close supervision is necessary when the appliance is used by or near children.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a Apuro agent or a recommended qualified technician in order to avoid a hazard.

# Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this appliance will provide the best possible performance from your Apuro product.

# Pack Contents


The following is included:

- Apuro Meat Grinder
- Hopper tray
- Food pusher
- Feed screw
- Cutting screw
- Cutting plate (coarse - 8mm)
- Cutting plate (medium 6mm)
- Instruction Manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

## Assembly

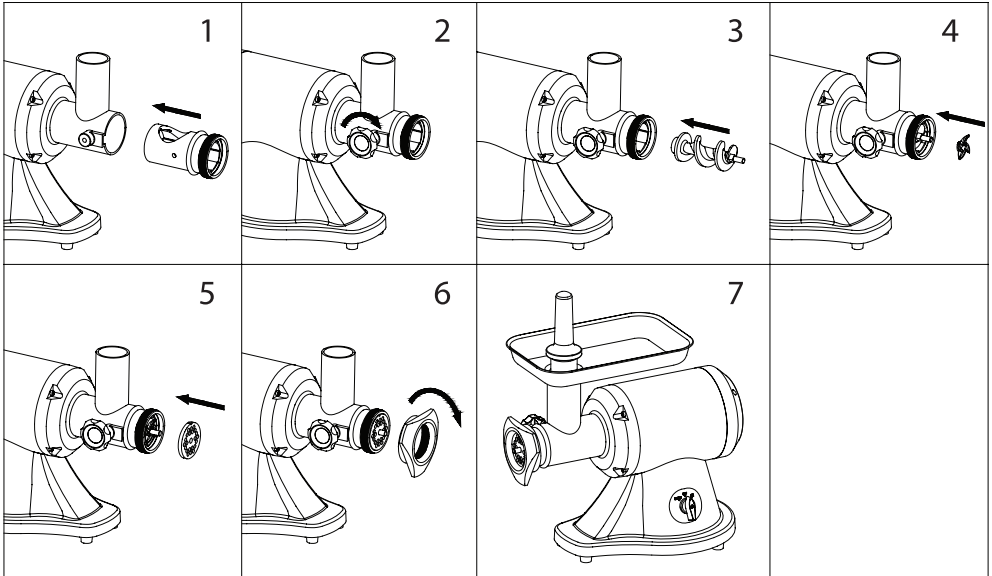

1. Insert the mincing barrel into the motor housing mouth, with the hole facing upwards **[Fig. 1]**.
2. Tighten the locking knob **[Fig. 2]**.
3. Insert the feed screw in to the mincing barrel. Turn the screw slightly to slot the base of the screw on to the transmission shaft, if necessary **[Fig. 3]**.
4. Insert the cutting blade on to the end of the feed screw **[Fig. 4]**.



**Note: Ensure the flat face of the blade faces forwards as illustrated.**

5. Match the groove on the edge of the desired cutting disc to the pin on the mincing barrel. Slide the cutting disc on to the feed screw **[Fig. 5]**.
6. Screw the barrel cap on to the end of the mincing barrel until tight **[Fig. 6]**.
7. Twist the hopper tray into place **[Fig. 7]**.

# Operation

 **Note: Clean the appliance with warm soapy water and dry thoroughly before using for the first time.**

1. Cut the meat into small enough pieces to fit in to the hole in the hopper tray.
2. Turn the power switch ON.
3. Feed the meat into the shaft using the food pusher.

 **WARNING: Never push the meat into the shaft using your fingers.**

If the circuit breaker stops the appliance or the appliance becomes jammed:

1. Turn Off the appliance immediately.
2. Press the RESET button located at the back of the appliance above the power cord.
3. Turn and HOLD the switch in the reverse position to clear the blockage.
4. Remove and clear the mincing barrel and all components.

## Cautions

- When carrying the unit, hold the Motor Housing with both Hands, not to hold only Plate.
- Be careful to carry the unit because it is very heavy.
- Do not grind hard food such as bones or nuts.
- Do not grind food with hard fiber (e.g. ginger).
- The air passage at the bottom and the side of Motor Housing.
- To avoid jamming, do not force to operate the unit with excessive pressure.
- Do not unplug the appliance by pulling the cord. To unplug, grasp the plug not the cord.
- Make sure that the voltage and frequency indicated on the rating plate are the same as your local supply, and that the external earthed wire is reliably connected.
- The appliance should be used strictly in accordance with these instructions as no liability can be accepted for any damage caused by non-compliance with these instructions, or any other improper of handling.

## Cleaning, Care & Maintenance

 **Note: Always switch off and disconnect the appliance from the power supply before cleaning.**

- Do not use any abrasive cleaning agents on the appliance. Use warm soapy water.
- Do not immerse the motor housing in water. Clean the exterior with a damp cloth.
- A Apuro agent or qualified technician should carry out repairs if required.

For ease of cleaning, disassemble the appliance:

- Unscrew the barrel cap.

 **Note: If the cap has been put on too tight, knock the corners of the cap with a rubber mallet or similar instrument to loosen it.**

- Remove the mincing barrel, plate, blade and feed screw as one unit. Gently tip the barrel to remove the pieces one by one.
- Twist off the hopper tray.
- Remove meat from all components and wash in warm, soapy water.
- Always dry thoroughly after cleaning.
- Lubricate the parts with a little cooking oil before replacing for best performance.

## Troubleshooting

If your Apuro appliance develops a fault, please check the following table before making a call to the Helpline.

Fault	Probable Cause	Action
The appliance is not working	The appliance is not switched on	Check the appliance is plugged in correctly and switched on
	Plug and lead are damaged	Call Apuro agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call Apuro agent or qualified technician
Minced meat does not exit the appliance evenly	The barrel cap is on too tight	Loosen the cap
	The cutting plate is blocked	Remove and clean the plate
	The cutting blade is blunt	Replace the cutting blade

## Technical Specifications

Model	Voltage	Power	Output	Dimensions h x w x d mm	Weight
CD400-A	230V 50Hz	800W	250kg/hour	444 x 270 x 506	24.5kg

## Compliance

To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.


Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.

# DECLARATION OF CONFORMITY

Equipment Type	Meat Mincer
Model	CD400-A
Legislation	C-Tick AS/NZ 3820 Essential Safety Requirements for Low Voltage Electrical Equipment
Standards	AS/NZS CISPR 14.1:2010 AS/NZS 60335.1:2002 IEC 60335-2-64:2000+ Annex ZZ of AS/ NZS60335.1:2002+A3
Producer Name	Apuro
Producer Address	15 Badgally Road, Campbelltown, NSW 2560

---

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

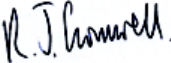Date	22/11/12
Signature	
Full Name	Richard Cromwell
Position	Commercial Director

**apuro**

**CD400-A\_v2**