



PhaZZer Stun Series Talon User Manual

Warnings

If your model has a safety disconnect rip cord, the unit WILL NOT activate unless the pin is installed into the hole in the bottom of the unit. ALWAYS WEAR RIP CORD AROUND YOUR WRIST SO THAT IF YOU ARE DISARMED, THE UNIT CANNOT BE USED AGAINST YOU. DO NOT DISCHARGE THE STUN GUN INTO THE AIR FOR MORE THAN TWO SECONDS AT A TIME. REPEAT FIRING INTO THE AIR FOR LONGER THAN TWO SECONDS CAN DAMAGE THE UNIT AND VOID THE WARRANTY. PLEASE DO NOT OPEN THE CASE THIS WILL VOID THE WARRANTY.

Operating the Unit

The PhaZZer Talon model has a safety disconnect pin, make sure the safety switch is in the OFF position before inserting the safety pin into the hole. Then slide the safety switch to the ON position or second position “Stun Mode”, then press the fire button. Make sure that no part of your hand or body is close to the contact probes as it may result in you receiving a shock. You will see and hear an electrical discharge between the two electrodes. In order to activate the blinding light, slide the switch to the first position and point it directly into the eyes of the assailant. This will cause a temporary blindness of 5 to 8 seconds. If the assailant continues to pursue you, touch the assailant with the outside metal contact probes while pressing the discharge button and having the safety switch in the engage or second position. The current will penetrate up to one full inch of clothing and does not have to touch the skin in order to be effective. You can touch any part of the assailant’s body, though the major muscle groups, neck, torso and groin are your primary targets. A ½ second touch will startle and repel assailants. This will give the assailant some pain and muscle contractions. A moderate length touch of 2 to 4 seconds can cause the attacker to fall to the ground and result in some mental confusion as well as disorientation. No sound will be heard when touching the attacker with the stun gun. Under no conditions can the charge be transferred into your body, even if the assailant is holding on to you. The unit cannot be damaged by a continued firing into the body of an assailant.

Battery Information

The PhaZZer Talon stun gun uses NiMH rechargeable batteries. It should work immediately out of the box, and was fully charged at the factory for 12 hours after assembly. After the battery is completely exhausted, the Talon will require an additional 12 hour charge, but not longer than 16 hours on this first recharge. DO NOT overcharge the battery; this will shorten the battery life. A fully charged battery should hold a charge for 1 to 3 months depending on how often the stun feature and light are used. The best way to keep the battery fully charged is to charge the battery once a month for 1 to 3 hours. This should keep the battery fully charged. But remember DO NOT OVERCHARGE THE BATTERY because this will shorten the battery life. Under normal conditions, the battery can be charged up to 500 times.

Limited Warranty & Safety

This product has a 1 year warranty from the date of original purchase. Warranty does not include rechargeable battery packs. Manufacturer warrants this product to be free from defective material or factory workmanship and agrees to repair or replace such products, which under normal use and service become defective. Our obligation under this warranty is limited to repairing, replacing or substituting the defective unit for a newer model of equal value. Purchaser must retain a copy of the purchase receipt and return the defective unit in order to obtain warranty service or replacement. This device is only allowed to be carried by persons 18 years of age or older. Purchaser agrees to use the stun gun in a lawful manner for self defense. Purchaser also agrees to hold harmless the importer, distributor, and retailer for any misuse of this product. Check local and state regulations to determine if possession of this device is legal in the jurisdiction the unit is being carried. Keep away from Children and flammable materials due to the spark being a means of combustion. Always remove the circuit disconnect rip cord when there are children present and the unit is not in use.