

GE 85 SKID - PSX - PMSX GE 115 SKID - PSX - PMSX

0 9 0 9

841169003 - GB


USE AND MAINTENANCE MANUAL SPARE PARTS CATALOGS

Main Characteristics of GE 85:

- Three-phase electric power (max) 88 kW / 400 V / 50 Hz
- Perkins Diesel engine / 1104C - 44TAG1
- Synchronous alternator
- Tank of 230l with autonomy of 16h
- Dimensions / weight, 2740(2000 skid)x1200x1640, 1425 Kg (SKID) - 1655 Kg (PSX) - 1620 Kg (PMSX)
- Noise level at 7m 70dB(A)
- Prepared for automatic start unit.
- Prepared for remote start/stop.

Main Characteristics of GE 115:

- Three-phase electric power (max) 110 kW / 400 V / 50 Hz
- Perkins Diesel engine / 1104C - 44TAG2
- Synchronous alternator
- Tank of 230l with autonomy of 14h
- Dimensions / weight, 2740(2000 skid)x1200x1640, 1450 Kg (SKID) - 1680 Kg (PSX) - 1665 Kg (PMSX)
- Noise level at 7m 71dB(A)
- Prepared for automatic start unit.
- Prepared for remote start/stop.

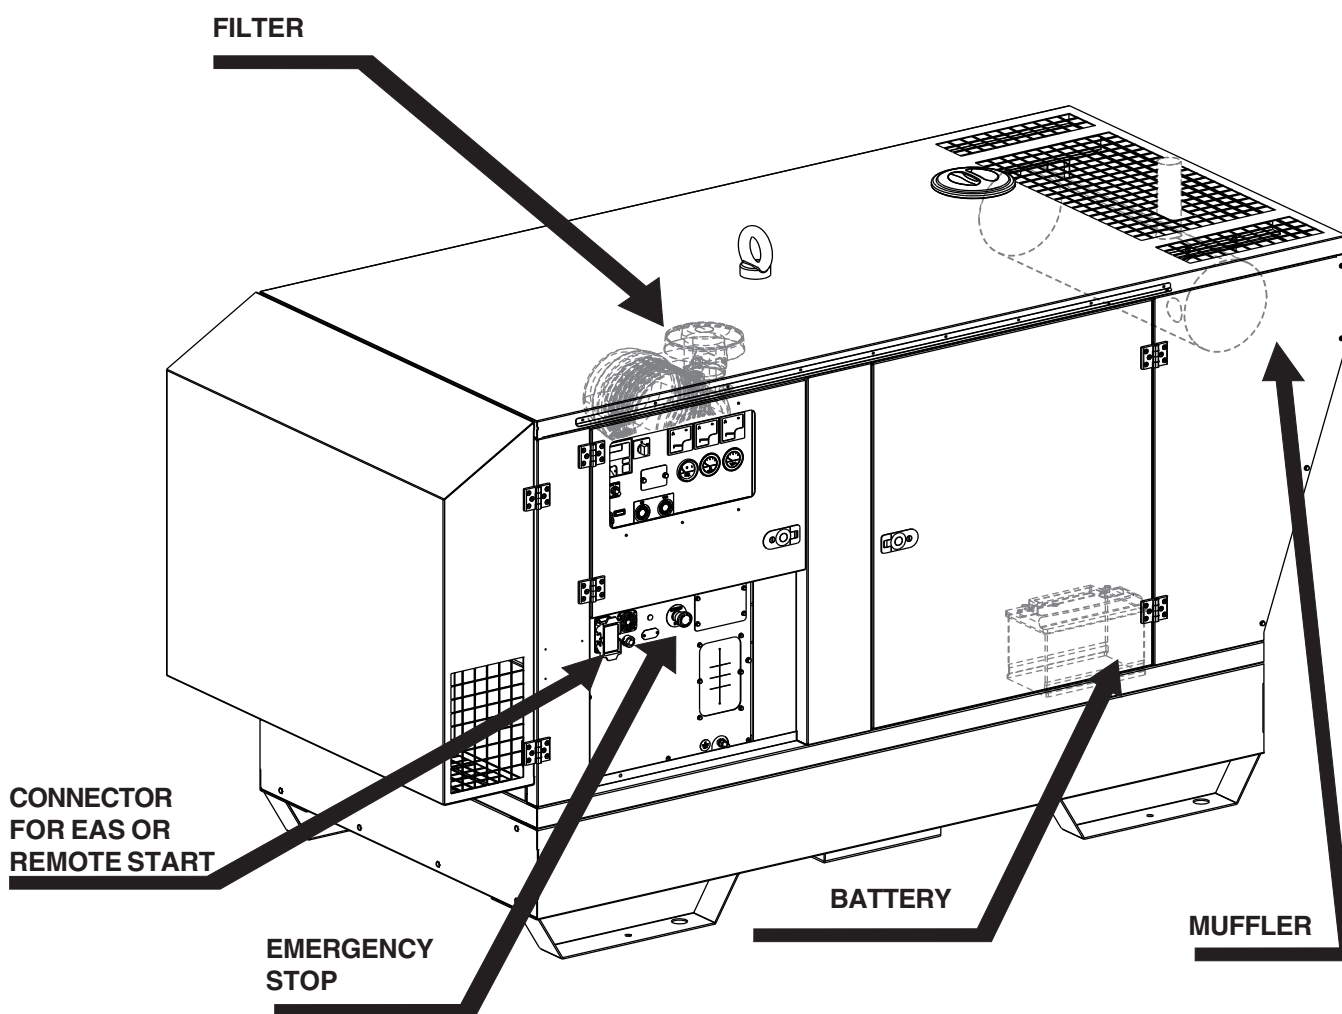

The unit is composed by : a base, a tank, an engine/alternator unit fixed on the base by 4 elastic dampers, a roll-bar, with hook for an easy and sure lifting, a base complete with doors for a quick access to the engine, to the air filter and to the battery. The set is also equipped with a electrical board where there are mounted protections and measuring instruments, which are protected by a same sized cover.


UNI EN ISO 9001 : 2000

ISO 9001:2000 - Cert. 0192

MOSA has certified its quality system according to UNI EN ISO 9001:2000 to ensure a constant, high quality of its products. This certification covers the design, production and servicing of engine driven welders and generating sets.

The certifying institute, ICIM, which is a member of the International Certification Network IQNet, awarded the official approval to MOSA after an examination of its operations at the head office and plant in Cusago (MI), Italy.

This certification is not a point of arrival but a pledge on the part of the entire company to maintain a level of quality of both its products and services which will continue to satisfy the needs of its clients, as well as to improve the transparency and the communications regarding all the company's activities in accordance with the official procedures and in harmony with the MOSA Manual of Quality.

The advantages for MOSA clients are:

- Constant quality of products and services at the high level which the client expects;
- Continuous efforts to improve the products and their performance at competitive conditions;
- Competent support in the solution of problems;
- Information and training in the correct application and use of the products to assure the security of the operator and protect the environment;
- Regular inspections by ICIM to confirm that the requirements of the company's quality system and ISO 9001 are being respected.

All these advantages are guaranteed by the CERTIFICATE OF QUALITY SYSTEM No.0192 issued by ICIM S.p.A. - Milano (Italy) - www.icim.it

M 1.01	COPYRIGHT
M 1.1	NOTES
M 1.4	NOTES
M 1.5	TECHNICAL DATA
M 2 ...	SYMBOLS AND SAFETY PRECAUTIONS
M 2.5 -...	ADVICEM 2.6INSTALLATION AND ADVICE
M 2.6	INSTALLATIONS AND ADVICE
M 2.7	INSTALLATION
M 3	UNPACKING
M 4.2	TRANSPORT AND DISPLACEMENTS
M 20	SET-UP FOR OPERATION
M 21	START AND STOP
M 30	CONTROLS LEGEND
M 31	CONTROLS
M 37 -...	USING THE GENERATOR
M 38.6	TCM 35 REMOTE CONTROL
M 39.10	INSULATION MONITORING PROTECTION
M 39.11	EARTH LEAKAGE RELAY
M 39.12...	EP6 ENGINE PROTECTION
M 40.2	TROUBLE-SHOOTING
M 43 -...	MAINTENANCE OF THE MACHINE
M 45	STORAGE
M 46	CUST OFF
M 60	ELECTRICAL SYSTEM LEGEND
M 61-...	ELECTRICAL SYSTEM
R 1	SPARE PARTS LIST
Jl...	SPARE PARTS



ATTENTION

This use and maintenance manual is an important part of the machines in question.

The assistance and maintenance personnel must keep said manual at disposal, as well as that for the engine and alternator (if the machine is synchronous) and all other documentation about the machine.

We advise you to pay attention to the pages concerning the security (see page M1.1).



© All rights are reserved to said Company.

It is a property logo of MOSA division of B.C.S. S.p.A. All other possible logos contained in the documentation are registered by the respective owners.

■ The reproduction and total or partial use, in any form and/or with any means, of the documentation is allowed to nobody without a written permission by MOSA division of B.C.S. S.p.A.

To this aim is reminded the protection of the author's right and the rights connected to the creation and design for communication, as provided by the laws in force in the matter.

In no case MOSA division of B.C.S. S.p.A. will be held responsible for any damage, direct or indirect, in relation with the use of the given information.

MOSA division of B.C.S. S.p.A. does not take any responsibility about the shown information on firms or individuals, but keeps the right to refuse services or information publication which it judges discutible, unright or illegal.

INFORMATION

Dear Customer,
We wish to thank you for having bought from MOSA a high quality set.

Our sections for Technical Service and Spare Parts will work at best to help you if it were necessary.

To this purpose we advise you, for all control and overhaul operations, to turn to the nearest authorized Service Centre, where you will obtain a prompt and specialized intervention.

☞ In case you do not profit on these Services and some parts are replaced, please ask and be sure that are used exclusively original MOSA parts; this to guarantee that the performances and the initial safety prescribed by the norms in force are re-established.

☞ ***The use of non original spare parts will cancel immediately any guarantee and Technical Service obligation from MOSA.***

NOTES ABOUT THE MANUAL

Before actioning the machine please read this manual attentively. Follow the instructions contained in it, in this way you will avoid inconveniences due to negligence, mistakes or incorrect maintenance. The manual is for qualified personnel, who knows the rules: about safety and health, installation and use of sets movable as well as fixed.

You must remember that, in case you have difficulties for use or installation or others, our Technical Service is always at your disposal for explanations or interventions.

The manual for Use Maintenance and Spare Parts is an integrant part of the product. It must be kept with care during all the life of the product.

In case the machine and/or the set should be yielded to another user, this manual must also given to him.

Do not damage it, do not take parts away, do not tear pages and keep it in places protected from dampness and heat.

You must take into account that some figures contained in it want only to identify the described parts and therefore might not correspond to the machine in your possession.

INFORMATION OF GENERAL TYPE

In the envelope given together with the machine and/or set you will find: the manual for Use Maintenance and Spare Parts, the manual for use of the engine and the tools (if included in the equipment), the guarantee (in the countries where it is prescribed by law).

Our products have been designed for the use of generation for welding, electric and hydraulic system; ANY OTHER DIFFERENT USE NOT INCLUDED IN THE ONE INDICATED, relieves MOSA from the risks which could happen or, anyway, from that which was agreed when selling the machine; MOSA excludes any responsibility for damages to the machine, to the things or to persons in this case.

Our products are made in conformity with the safety norms in force, for which it is advisable to use all these devices or information so that the use does not bring damage to persons or things.

While working it is advisable to keep to the personal safety norms in force in the countries to which the product is destined (clothing, work tools, etc.).

Do not modify for any motive parts of the machine (fastenings, holes, electric or mechanical devices, others..) if not duly authorized in writing by MOSA: the responsibility coming from any potential intervention will fall on the executioner as in fact he becomes maker of the machine.


☞ ***Notice: this manual does not engage MOSA, who keeps the faculty, apart the essential characteristics of the model here described and illustrated, to bring betterments and modifications to parts and accessories, without putting this manual uptodate immediately.***




Any of our product is labelled with CE marking attesting its conformity to appliable directives and also the fulfillment of safety requirements of the product itself; the list of these directives is part of the declaration of conformity included in any machine standard equipment.
 Here below the adopted symbol:



CE marking is clearly readable and unerasable and it can be either part of the data-plate (A) or placed as a sticker near the data-plate (B)

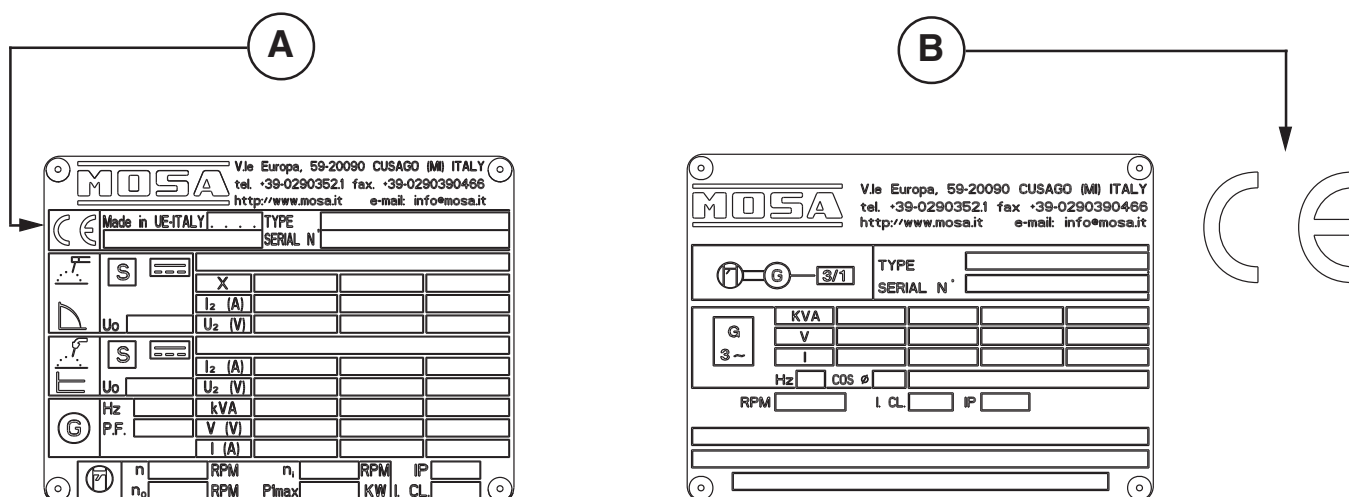

Furthermore, on each model it is shown the noise level value; the symbol used is the following:

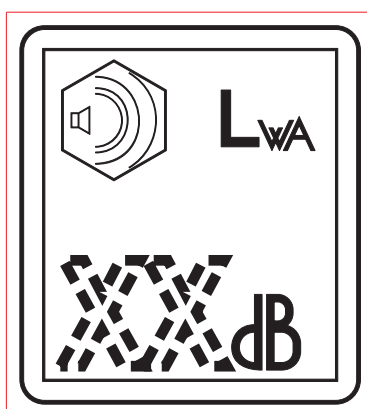

The indication is shown in a clear, readable and indeleble way on a sticker.

The generating set GE 85/115 is a unit which transforms the mechanical energy, generated by endothermic engine, into electric energy, through an alternator.

Is meant for industrial and professional use, powered by an endothermic engine; it is composed of various main parts such as: engine, alternator, electric and electronic controls, the fairing or a protective structure.

The assembling is made on a steel structure, on which are provided elastic support which must damp the vibrations and also eliminate sounds which would produce noise.

Technical data	GE 85 SKID - PSX - PMSX	GE 115 SKID - PSX - PMSX
GENERATOR		
Power three-phase (*stand by)	88 kVA / 400 V / 127 A	110kVA / 400 V / 159 A
Power three-phase (**PR.P.)	80 kVA / 400 V / 115 A	100 kVA / 400 V / 144 A
Active power (*stand by)	70.4 kW / 400 V	88 kW / 400 V
Active power (**PR.P.)	64 kW / 400 V	80 kW / 400 V
Frequency	50 Hz	50 Hz
Cos φ	0.8	0.8
ALTERNATOR		
Type	synchronous, three-phase, self-excited, self-regulated	
Insulation class	H	
ENGINE		
Make / Model	PERKINS / 1104C - 44TAG1	PERKINS / 1104C - 44TAG2
Type / Cooling system	Diesel 4-Stroke / Liquid Diesel	4-Stroke / Liquid
Cylinders/Displacement	4 / 4400 cm ³	4 / 4400 cm ³
Power (*stand by) / (**PR.P.)	78.4 kW (106.6 HP) / 71.3 kW (97 HP)	98 kW (133.3 HP) / 89 kW (121 HP)
Speed	1500 rpm	1500 rpm
Fuel consumption (75% to PR.P.)	14.3 l/h	17.1 l/h
Cooling system capacity	13 l	13 l
Engine oil capacity	8 l	8 l
Starter	Electric	Electric
GENERAL SPECIFICATIONS		
Battery	12V - 100Ah	12V - 100Ah
Tank capacity	230 l	230 l
Running time (75% to PR.P.)	16 h	13.5 h
Protection	IP 44	IP 44
Dimensions / max. on base Lxwxh (mm)*	2740(2000 skid)x1200x1640	2740(2000 skid)x1200x1640
Weight on base Kg	1425(SKID)-1655(PSX)-1620(PMSX)	1450(SKID)-1680(PSX)-1665(PMSX)
Measured acoustic power Lwa (pression LpA)	95 db(A) (70 db(A) @ 7m)	96 db(A) (71 db(A) @ 7m)
Garanteed acoustic power Lwa (pression LpA)	96 db(A) (71 db(A) @ 7m)	97 db(A) (72 db(A) @ 7m)
* Dimensions and weight are inclusive of all parts		

* Dimensions and weight are inclusive of all parts

OUTPUT

Declared power according to ISO 8528-1 (temperature 25°C, 30% relative humidity, altitude 100 m above sea level).

(*Stand-by) = maximum available power for use at variable loads for a yearly number of hours limited at 500 h. No overload is admitted.

(**Prime power P.R.P.) = maximum available power for use at variable loads for a yearly illimited number of hours. The average power to be taken during a period of 24 h must not be over 80% of the P.R.P.

It's admitted overload of 10% each hour every 12 h.

In an **approximative** way one reduces: of 1% every 100 m altitude and of 2.5% for every 5°C above 25°C.

ACOUSTIC POWER LEVEL

ATTENTION: The concrete risk due to the machine depends on the conditions in which it is used. Therefore, it is up to the end-user and under his direct responsibility to make a correct evaluation of the same risk and to adopt specific precautions (for instance, adopting a I.P.D. -Individual Protection Device)

Acoustic Noise Level (LWA) - Measure Unit dB(A): it stands for acoustic noise released in a certain delay of time. This is not submitted to the distance of measurement.

Acoustic Pressure (Lp) - Measure Unit dB(A): it measures the pressure originated by sound waves emission. Its value changes in proportion to the distance of measurement.


The here below table shows examples of acoustic pressure (Lp) at different distances from a machine with Acoustic Noise Level (LWA) of 95 dB(A)

Lp a 1 meter = 95 dB(A) - 8 dB(A) = 87 dB(A)

Lp a 4 meters = 95 dB(A) - 20 dB(A) = 75 dB(A)

Lp a 7 meters = 95 dB(A) - 25 dB(A) = 70 dB(A)

Lp a 10 meters = 95 dB(A) - 28 dB(A) = 67 dB(A)


PLEASE NOTE: the symbol  when with acoustic noise values, indicates that the device respects noise emission limits according to 2000/14/CE directive.

SYMBOLS IN THIS MANUAL

- The symbols used in this manual are designed to call your attention to important aspects of the operation of the machine as well as potential hazards and dangers for persons and things.

IMPORTANT ADVICE

- Advice to the User about the safety:

 N.B.: The information contained in the manual can be changed without notice.
Potential damages caused in relation to the use of these instructions will not be considered because these are only indicative.
Remember that the non observance of the indications reported by us might cause damage to persons or things.
It is understood, that local dispositions and/or laws must be respected.

WARNING



Situations of danger - no harm to persons or things

Do not use without protective devices provided

Removing or disabling protective devices on the machine is prohibited.

Do not use the machine if it is not in good technical condition

The machine must be in good working order before being used. Defects, especially those which regard the safety of the machine, must be repaired before using the machine.

SAFETY PRECAUTIONS



DANGEROUS

This heading warns of an immediate danger for persons as well for things. Not following the advice can result in serious injury or death.



WARNING

This heading warns of situations which could result in injury for persons or damage to things.



CAUTION

To this advice can appear a danger for persons as well as for things, for which can appear situations bringing material damage to things.



IMPORTANT



NOTE



ATTENTION

These headings refer to information which will assist you in the correct use of the machine and/or accessories.

SYMBOLS (for all MOSA models)


STOP - Read absolutely and be duly attentive



Read and pay due attention



GENERAL ADVICE - If the advice is not respected damage can happen to persons or things.



HIGH VOLTAGE - Attention High Voltage. There can be parts in voltage, dangerous to touch. The non observance of the advice implies life danger.



FIRE - Danger of flame or fire. If the advice is not respected fires can happen.



HEAT - Hot surfaces. If the advice is not respected burns or damage to things can be caused.



EXPLOSION - Explosive material or danger of explosion. in general. If the advice is not respected there can be explosions.



WATER - Danger of shortcircuit. If the advice is not respected fires or damage to persons can be caused.



SMOKING - The cigarette can cause fire or explosion. If the advice is not respected fires or explosions can be caused.



ACIDS - Danger of corrosion. If the advice is not respected the acids can cause corrosions with damage to persons or things.



WRENCH - Use of the tools. If the advice is not respected damage can be caused to things and even to persons.



PRESSION - Danger of burns caused by the expulsion of hot liquids under pressure.



ACCES FORBIDDEN to non authorizad people.

PROHIBITIONS No harm for persons

Use only with safety clothing -


It is compulsory to use the personal protection means given in equipment.

Use only with safety clothing -


It is compulsory to use the personal protection means given in equipment.

Use only with safety protections -


It is a must to use protection means suitable for the different welding works.

Use with only safety material -


It is prohibited to use water to quench fires on the electric machines.

Use only with non inserted voltage -


It is prohibited to make interventions before having disinserted the voltage.

No smoking -


It is prohibited to smoke while filling the tank with fuel.

No welding -


It is forbidden to weld in rooms containing explosive gases.

ADVICE No harm for persons and things

Use only with safety tools, adapted to the specific use -

It is advisable to use tools adapted to the various maintenance works.

Use only with safety protections, specifically suitable


It is advisable to use protections suitable for the different welding works.

Use only with safety protections -


It is advisable to use protections suitable for the different daily checking works.

Use only with safety protections -


It is advisable to use all protections while shifting the machine.

Use only with safety protections -


It is advisable to use protections suitable for the different daily checking works.and/or of maintenance.



The installation and the general advice concerning the operations, are finalized to the correct use of the machine, in the place where it is used as generator group and/or welder.

ENGINE	Stop engine when fueling	CHECKING BOARD	Do not touch electric devices if you are barefoot or with wet clothes.
	Do not smoke, avoid flames, sparks or electric tools when fueling.		
	Unscrew the cap slowly to let out the fuel vapours.		Always keep off leaning surfaces during work operations
	Slowly unscrew the cooling liquid tap if the liquid must be topped up.		
	The vapor and the heated cooling liquid under pressure can burn face, eyes, skin.		Static electricity can damage the parts on the circuit.
	Do not fill tank completely.		
	Wipe up spilled fuel before starting engine.		An electric shock can kill
	Shut off fuel of tank when moving machine (where it is assembled).		
	Avoid spilling fuel on hot engine.		
	Sparks may cause the explosion of battery vapours		



FIRST AID. In case the operator should be sprayed by accident, from corrosive liquids a/o hot toxic gas or whatever event which may cause serious injuries or death, predispose the first aid in accordance with the ruling labour accident standards or of local instructions.

Skin contact	Wash with water and soap
Eyes contact	Irrigate with plenty of water, if the irritation persists contact a specialist
Ingestion	Do not induce vomit as to avoid the intake of vomit into the lungs, send for a doctor
Suction of liquids from lungs	If you suppose that vomit has entered the lungs (as in case of spontaneous vomit) take the subject to the hospital with the utmost urgency
Inhalation	In case of exposure to high concentration of vapours take immediately to a non polluted zone the person involved



FIRE PREVENTION. In case the working zone, for whatsoever cause goes on fire with flames liable to cause severe wounds or death, follow the first aid as described by the ruling norms or local ones.

EXTINCTION MEANS	
Appropriated	Carbonate anhydride (or carbon dioxide) powder, foam, nebulized water
Not to be used	Avoid the use of water jets
Other indications	Cover eventual shedding not on fire with foam or sand, use water jets to cool off the surfaces close to the fire
Particular protection	Wear an autorespiratory mask when heavy smoke is present
Useful warnings	Avoid, by appropriate means to have oil sprays over metallic hot surfaces or over electric contacts (switches, plugs, etc.). In case of oil sprinkling from pressure circuits, keep in mind that the inflammability point is very low.

WARNING					CAUTION		DANGEROUS



**THE MACHINE MUST NOT BE USED IN AREAS WITH
EXPLOSIVE ATMOSPHERE**





INSTALLATION AND ADVICE BEFORE USE

GASOLINE ENGINES

- Use in open space, air swept or vent exhaust gases, which contain the deathly carbone oxyde, far from the work area.


DIESEL ENGINES

- Use in open space, air swept or vent exhaust gases far from the work area.

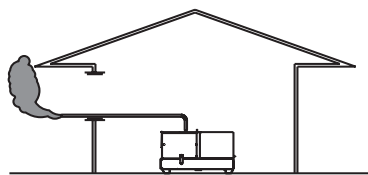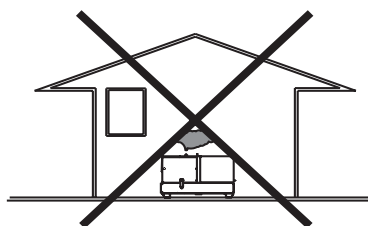


POSITION


Place the machine on a level surface at a distance of at least 1,5 m from buildings or other plants.

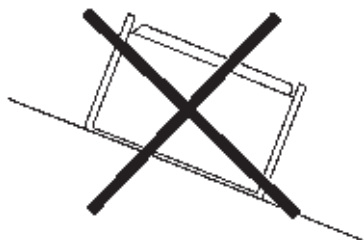

Maximum leaning of the machine (in case of dislevel)

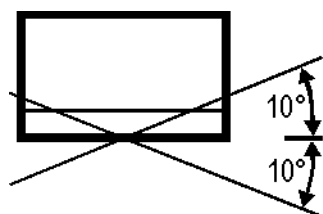


$\alpha = 20^\circ \text{ max}$

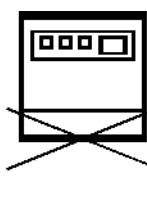

$\beta = 20^\circ \text{ max}$

Check that the air gets changed completely and the hot air sent out does not come back inside the set so as to cause a dangerous increase of the temperature.

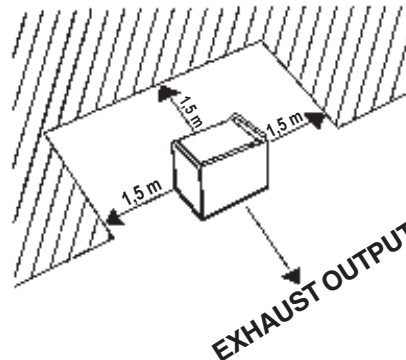

- ☞ Make sure that the machine does not move during the work: **block** it possibly with tools and/or devices made to this purpose.

MOVES OF THE MACHINE

- ☞ At any move check that the engine is **off**, that there are no connections with cables which impede the moves.

PLACE OF THE MACHINE




ATTENTION





For a safer use from the operator **DO NOT** fit the machine in locations with high risk of flood.

Please do not use the machine in weather conditions which are beyond IP protection shown both in the data plate and on page named "technical data" in this same manual.

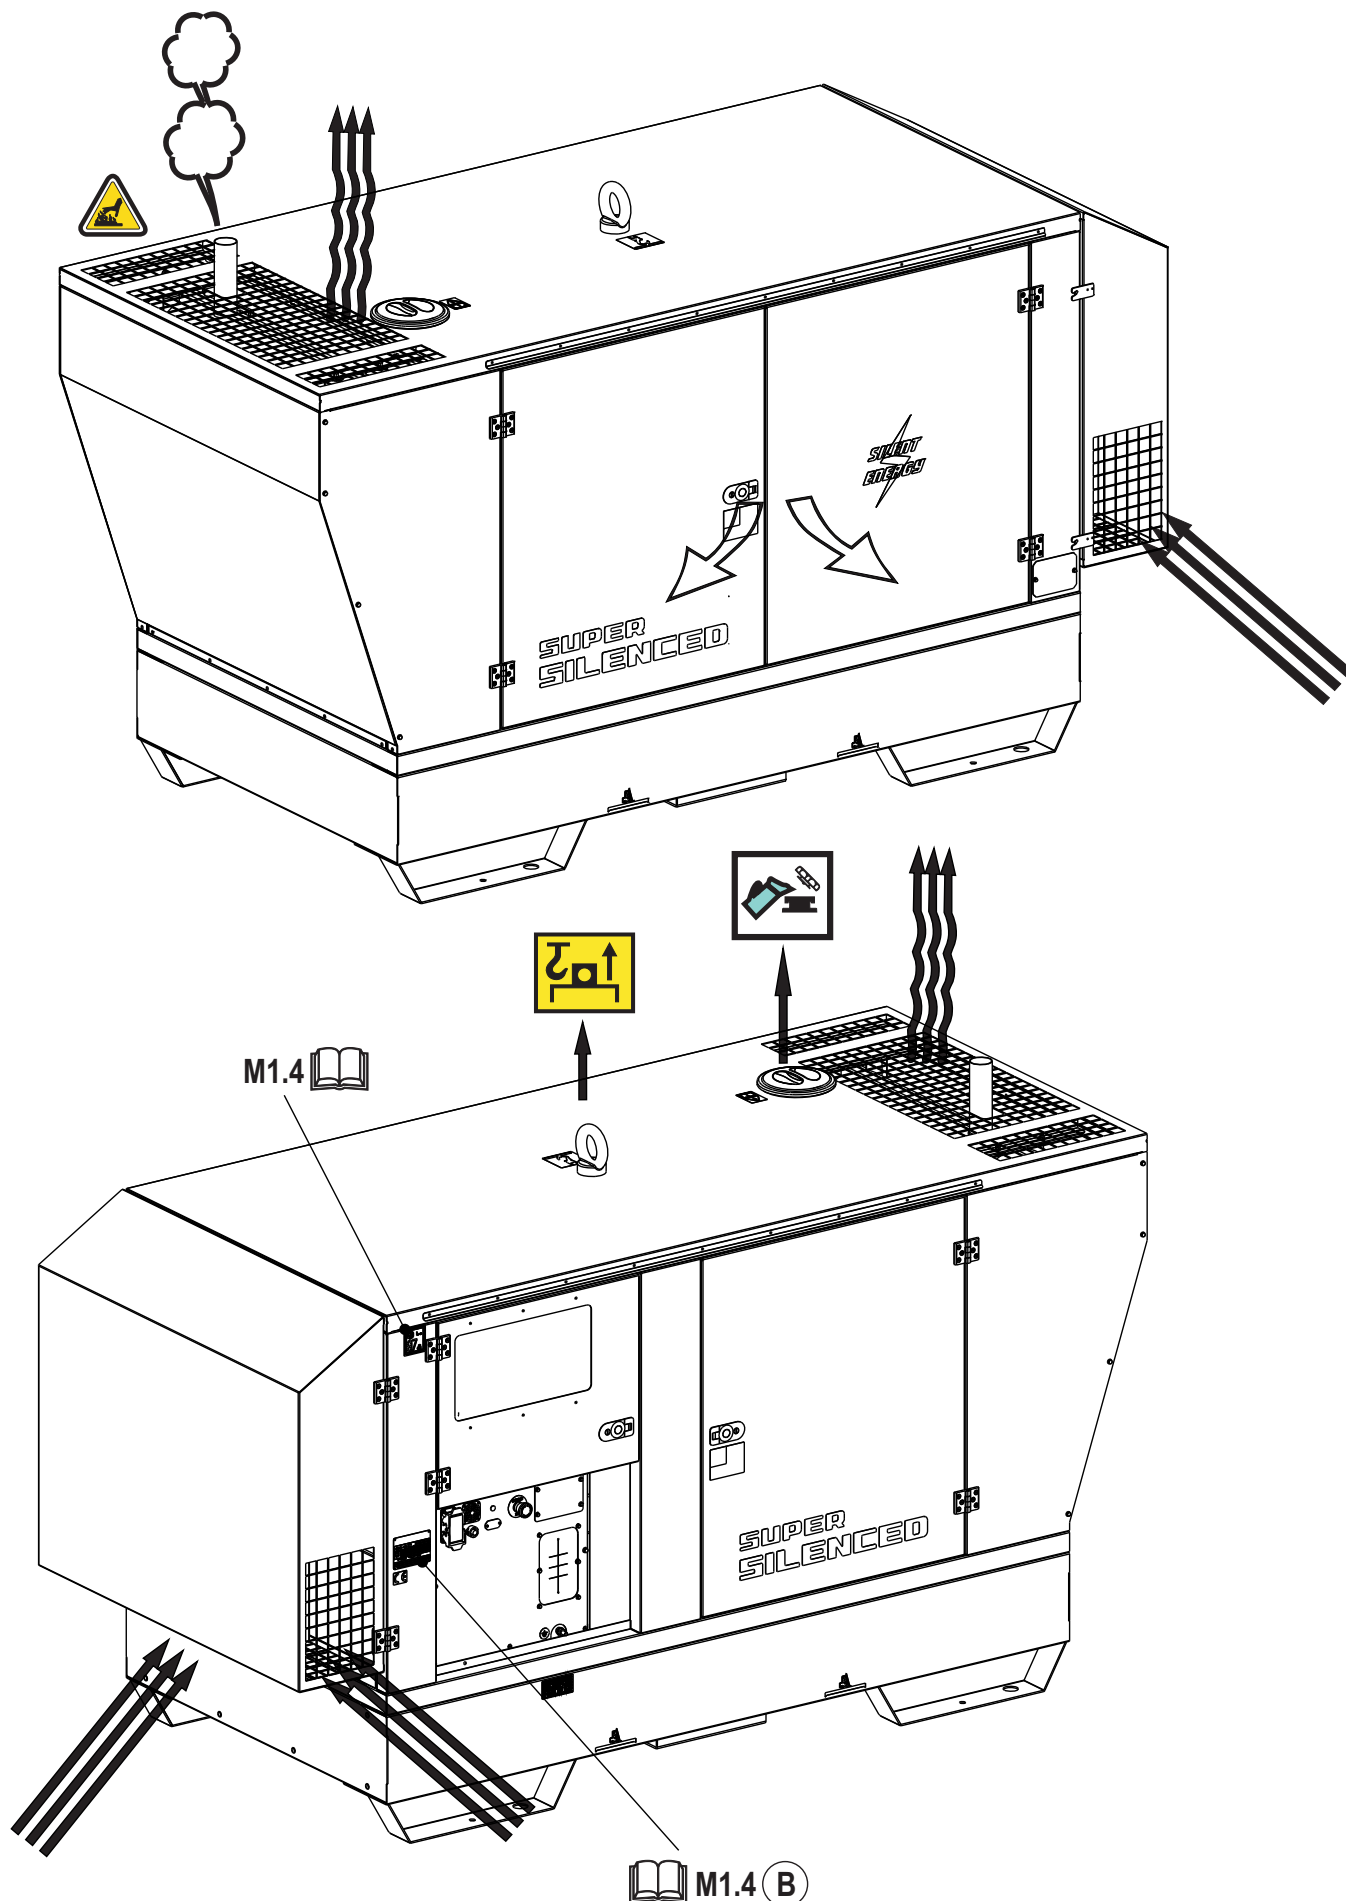



NOTE

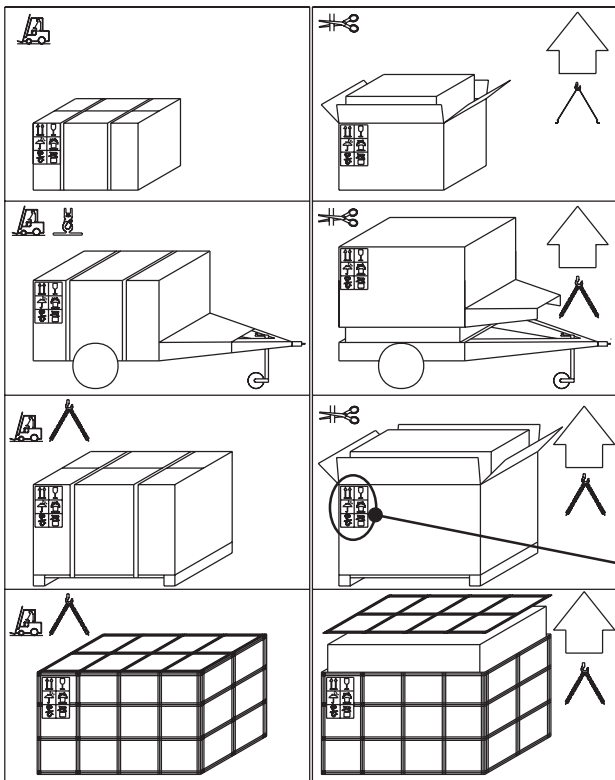 



Be sure that the lifting devices are: correctly mounted, adequate for the weight of the machine with its packaging, and conforms to local rules and regulations.

When receiving the goods make sure that the product has not suffered damage during the transport, that there has not been rough handling or taking away of parts contained inside the packing or in the set.

In case you find damages, rough handling or absence of parts (envelopes, manuals, etc.), we advise you to inform immediately our Technical Service.



For eliminating the packing materials, the User must keep to the norms in force in his country.

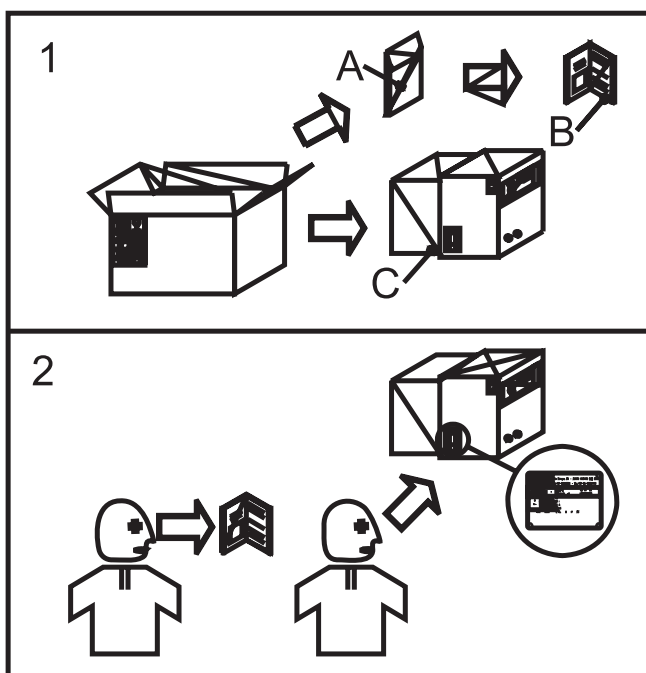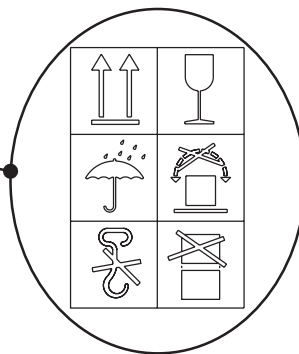

- 1) Take the machine (C) out of the shipment packing. Take out of the envelope (A) the user's manual (B).
- 2) Read: the user's manual (B), the plates fixed on the machine, the data plate.





NOTE

In case you should transport or move the machine, keep to the instructions as per the figures.

Make the transportation when the machine has **no** petrol in its tank, **no** oil in the engine and and electrolyte in the battery.











Be sure that the lifting devices are: correctly mounted, adequate for the weight of the machine with it's packaging, and conform to local rules and regulations.

Only authorized persons involved in the transport of the machine should be in the area of movement.

DO NOT LOAD OTHER PARTS WHICH CAN MODIFY WEIGHT AND BARICENTER POSITION.

IT IS STRICTLY FORBIDDEN TO DRAG THE MACHINE MANUALLY OR TOW IT BY ANY VEHICLE (model with no CTL accessory).

If you did not keep to the instructions, you could damage the structure of the machine.

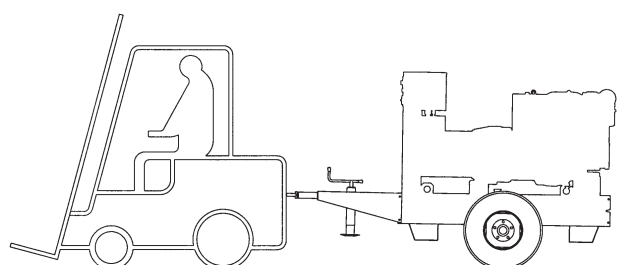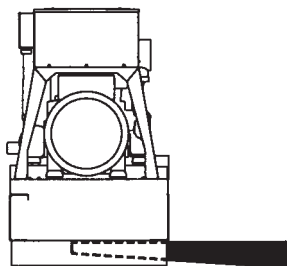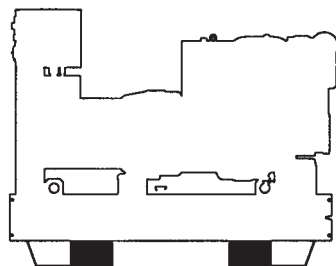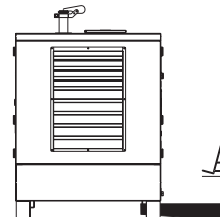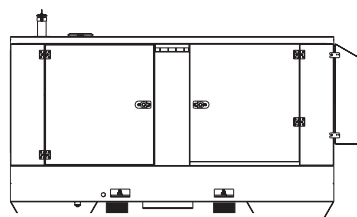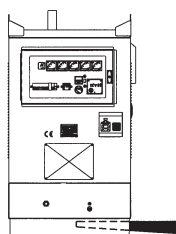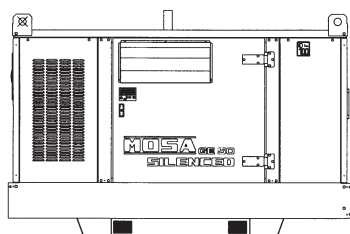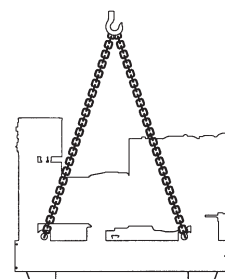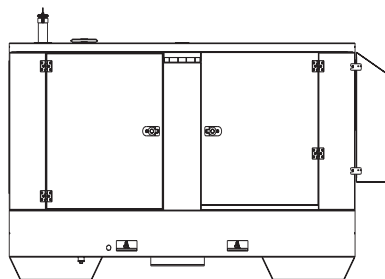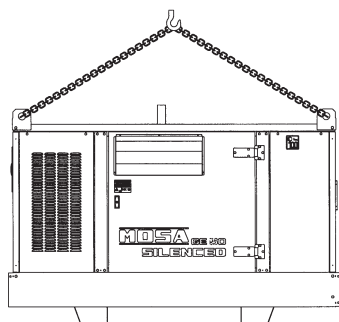



BATTERY WITHOUT MAINTENANCE



Connect the cable + (positive) to the pole + (positive) of the battery (after having taken away the protection), by properly tightening the clamp.

Check the state of the battery from the colour of the warning light which is in the upper part.

- Green colour: battery OK
 - Black colour: battery to be recharged
 - White colour: battery to be replaced
- DO NOT OPEN THE BATTERY.**



LUBRICANT

RECOMMENDED OIL

MOSA recommends selecting **AGIP** engine oil. Refer to the label on the motor for the recommended products.

PRODOTTI RACCOMANDATI RECOMMENDED PRODUCTS	
AGIP SUPERDIESEL 15W/40 API CF4-SG	OLIO MOTORE DIESEL DIESEL ENGINE OIL
AGIP SUPERMOTOROIL 20W/50 API CC-SF	OLIO MOTORE BENZINA GASOLINE ENGINE OIL
AGIP ANTIFREEZE EXTRA INIBITE ETHYLENE GLYCOL (50% + 50% H ₂ O)	CIRCUITO DI RAFFREDDAMENTO COOLING CIRCUIT (CUNA NC 956-16 ED 97)

Please refer to the motor operating manual for the recommended viscosity.

REFUELLING AND CONTROL:

Carry out refuelling and controls with motor at level position.

1. Remove the oil-fill tap (24)
2. Pour oil and replace the tap
3. Check the oil level using the dipstick (23); the oil level must be comprised between the minimum and maximum indicators.



ATTENTION

It is dangerous to fill the motor with too much oil, as its combustion can provoke a sudden increase in rotation speed.



AIR FILTER

Check that the dry air filter is correctly installed and that there are no leaks around the filter which could lead to infiltrations of non-filtered air to the inside of the motor.



FUEL



ATTENTION



Do not smoke or use open flames during refuelling operations, in order to avoid explosions or fire hazards.

Fuel fumes are highly toxic; carry out operations outdoors only, or in a well-ventilated environment.



Avoid accidentally spilling fuel. Clean any eventual leaks before starting up motor.

Refill the tank with good quality diesel fuel, such as automobile type diesel fuel, for example.

For further details on the type of diesel fuel to use, see the motor operating manual supplied.

Do not fill the tank completely; leave a space of approx. 10 mm between the fuel level and the wall of the tank to allow for expansion.

In rigid environmental temperature conditions, use special winterized diesel fuels or specific additives in order to avoid the formation of paraffin.



**COOLING LIQUID****ATTENTION**

Do not remove the radiator tap with the motor in operation or still hot, as the liquid coolant may spurt out and cause serious burns. Remove the tap very carefully.

Remove the tap and pour the liquid coolant into the radiator; the quantity and composition of the liquid coolant are indicated in the motor operating manual. Replace the tap, ensuring it is perfectly closed.

After refilling operations, allow the motor to run for a brief time and check the level, as it may have diminished due to air bubbles present in the cooling circuit; restore the level with water.

To replace the liquid coolant, follow the operations described in the motor operating manual.

**GROUNDING CONNECTION**

The grounding connection to an earthed installation **is obligatory** for all models equipped with a differential switch (circuit breaker). In these groups the generator star point is generally connected to the machine's earthing; by employing the TN or TT distribution system, the differential switch guarantees protection against indirect contacts.

In the case of powering complex installations requiring or employing additional electrical protection devices, the coordination between the protection devices must be verified.

For the grounding connection, use the terminal (12); comply to local and/or current regulations in force for electrical installations and safety.





Check daily



NOTE

Do not alter the primary conditions of regulation and do not touch the sealed parts.

The starting of the unit can be effected in 3 different modes:

1) Start with EP6 key (Engine Control)

Put the "Local/Remote" selector on Local. Turn the key on "ON", the EP6 display shows only on the machines with mounted glow plugs for 5 secs, the symbol "UUUU", then the message "Sta" appears the engine can be started, for which turn the key on "start" and start the engine.

On the display the word "Sta" remains for about 20 secs then automatically disappears; the engine **must be** started within 20 secs, otherwise the EP6 blocks the starting and on the display the word "fail" appears. Turning the key on "OFF" the EP6 is reset and a new starting cycle can be fixed.

Stop:

it is **COMPULSORY** to disconnect the load first, then to stop the engine turn the key on "OFF".

2) Remote starting with TCM35

Put the "Local/Remote" selector on Local. Connect TCM35 to the plug on the front panel and put the switch on "0".

Turn the key on ON in the EP6 (Engine Control), wait for the various signals to go out then press the button "AUTO" in the EP6 until the led "AUTO" flashes.

Shift the switch on "I" in the TCM35 and automatically the starting cycle will start. On the machines with mounted glow plugs appears in the display EP6 (for about 5 secs), the symbol "UUUU"; the starting cycle includes 3 starting trials.

When the engine starts the led "AUTO" remains lit continuously and simultaneously the red warning light will light in the TCM35.

Stop:

it is **COMPULSORY** to disconnect the load first, then shift the switch of the TCM35 on "0", the engine will stop immediately.

3) Start with Automatic start unit (EAS)

Put the "Local/Remote" selector on Remote.

Connect the EAS to unit.

The EAS controls the starting as well as the stop of the engine.

 
Follow attentively the instructions reported in the EAS manual. In these conditions the EP6 has the only function to measure the electric values, hour-meter, etc.




CAUTION

MACHINE WITH EMERGENCY BUTTON

Pressing the button the engine will stop immediately in any working condition.



Turn clockwise to reset the button.

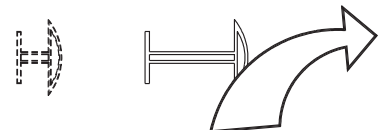

CAUTION


RUNNING-IN

During the first 50 hours of operation, do not use more than 60% of the maximum output power of the unit and check the oil level frequently, in any case please stick to the rules given in the engine use manual.




NOTE


For safety reason the key must be kept by qualified personel.

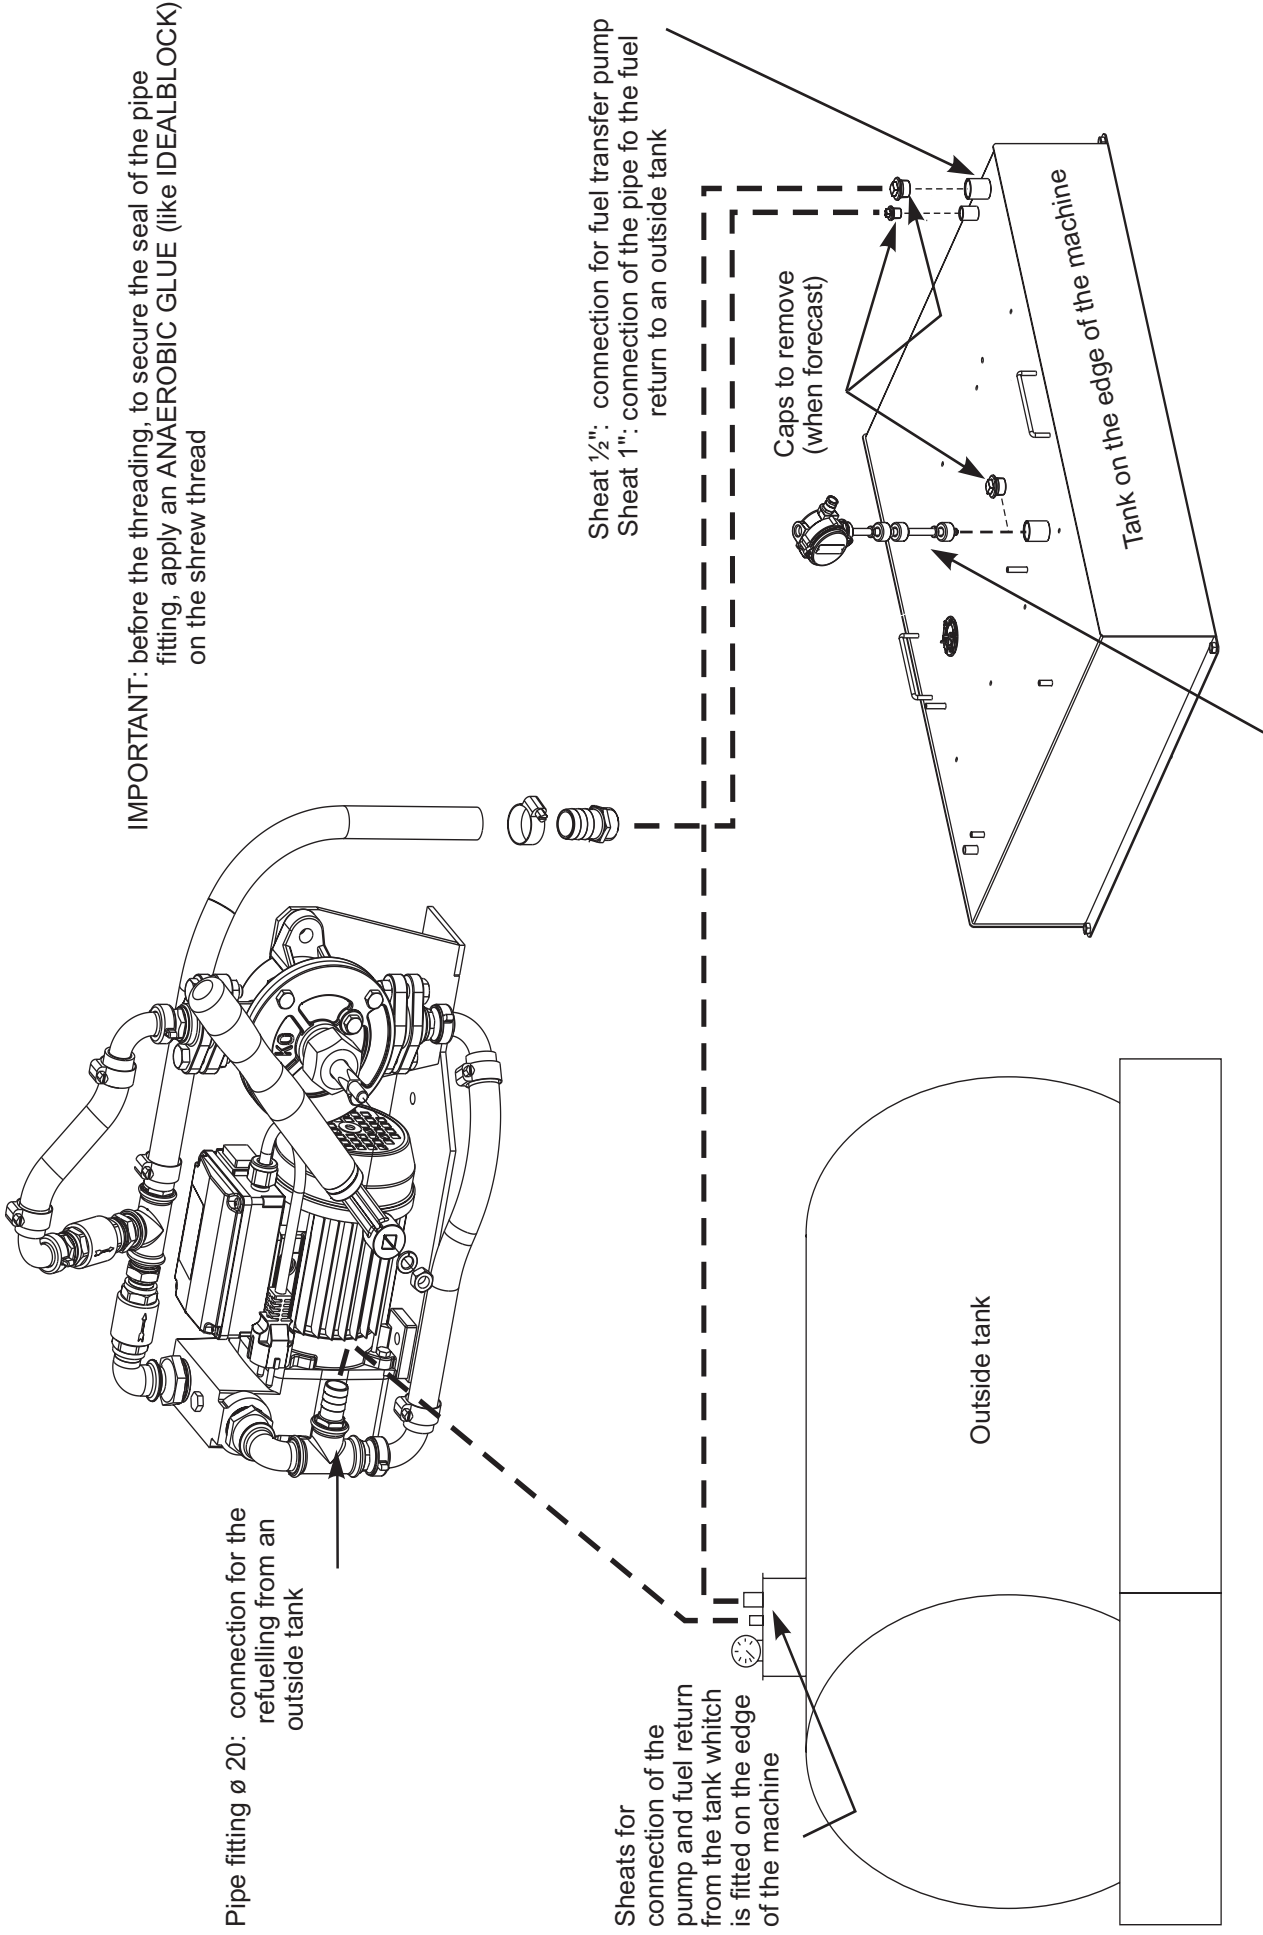


4A	Hydraulic oil level light	A4	Button indicating light 30 l/1' PTO HI	W5	Battery voltmeter
9	Welding socket (+)	B2	Engine control unit EP2	X1	Remote control socket
10	Welding socket (-)	B3	E.A.S. connector	Y3	Button indicating light 20 l/1' PTO HI
12	Earth terminal	B4	Exclusion indicating light PTO HI	Y5	Commutator/switch, serial/parallel
15	A.C. socket	B5	Auxiliary current push button	Z2	Thermal-magnetic circuit breaker
16	Accelerator lever	C2	Fuel level light	Z3	Selection push button 20 l/1' PTO HI
17	Feed pump	C3	E.A.S. PCB	Z5	Water temperature indicator
19	48V D.C. socket	C6	Control unit for generating sets QEA		
22	Engine air filter	D	Ground fault interrupter (30 mA)		
23	Oil level dipstick	D1	Engine control unit and economiser EP1		
24	Engine oil reservoir cap	D2	Ammeter		
24A	Hydraulic oil reservoir cap	E2	Frequency meter		
24B	Water filling cap	F	Fuse		
25	Fuel prefilter	F3	Stop switch		
26	Fuel tank cap	F5	Warning light, high temperature		
27	Muffler	F6	Arc-Force selector		
28	Stop control	G1	Fuel level transmitter		
29	Engine protection cover	H2	Voltage commutator		
30	Engine cooling/alternator fan belt	H6	Fuel electro pump		
31	Oil drain tap	H8	Engine control unit EP7		
31A	Hydraulic oil drain tap	I2	48V A.C. socket		
31B	Water drain tap	I3	Welding scale switch		
31C	Exhaust tap for tank fuel	I4	Preheating indicator		
32	Button	I5	Y/▲ switch		
33	Start button	I6	Start Local/Remote selector		
34	Booster socket 12V	I8	AUTOIDLE switch		
34A	Booster socket 24V	L	A.C. output indicator		
35	Battery charge fuse	L5	Emergency button		
36	Space for remote control	L6	Choke button		
37	Remote control	M	Hour counter		
42	Space for E.A.S.	M1	Warning level light		
42A	Space for PAC	M2	Contacteur		
47	Fuel pump	M5	Engine control unit EP5		
49	Electric start socket	M6	CC/CV switch		
54	Reset button PTO HI	N	Voltmeter		
55	Quick coupling m. PTO HI	N1	Battery charge warning light		
55A	Quick coupling f. PTO HI	N2	Thermal-magnetic circuit breaker/ Ground fault interrupter		
56	Hydraulic oil filter		Pre-heat push-button		
59	Battery charger thermal switch	N5	Connector - wire feeder		
59A	Engine thermal switch	N6	Oil pressure warning light/Oil alert		
59B	Aux current thermal switch	O1	Welding arc regulator		
59C	Supply thermal switch wire feeder- 42V	P	Starter key		
59D	Pre-heater (spark plug) thermal switch	Q1	Derivation box		
59E	Supply thermal switch oil/water heater	Q3	Battery charge sockets		
59F	Electropump thermal switch	Q4	Welding selector mode		
63	No load voltage control	Q7	Siren		
66	Choke control	R3	Welding ammeter		
67A	Auxiliary / welding current control	S	Battery		
68	Cellulosic electrodes control	S1	Engine control unit EP4		
69A	Voltmeter relay	S3	Wire feeder supply switch		
70	Warning lights	S6	Plug 230V singlephase		
71	Selecting knob	S7	Welding current regulator		
72	Load commut. push button	T	Dirty air filter warning light/indicator		
73	Starting push button	T4	Earth leakage relay		
74	Operating mode selector	T5	Analogic instrument V/Hz		
75	Power on warning light	T7	Current transformer		
76	Display	U	R.P.M. adjuster		
79	Wire connection unit	U3	Polarity inverter remote control		
86	Selector	U4	Release coil		
86A	Setting confirmation	U5	Engine control unit EP6		
87	Fuel valve	U7	Welding voltage voltmeter		
88	Oil syringe	V	Polarity inverter control		
A3	Insulation monitoring	V4	Oil pressure indicator		
		V5	Remote control switch		
		W1	Selection push button 30 l/1' PTO HI		
		W3			

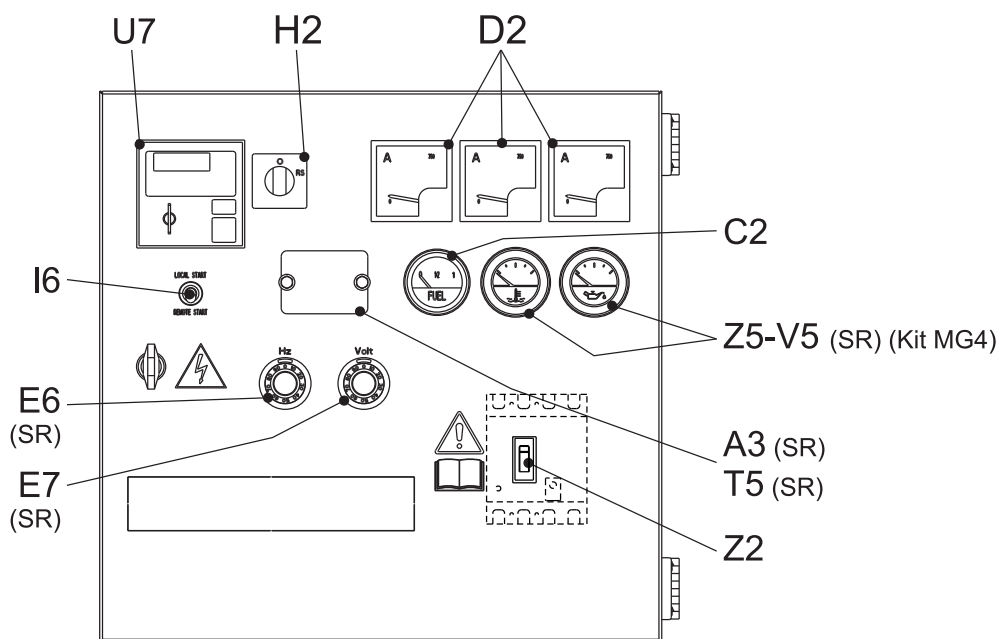


VERSIONE STANDARD STANDARD VERSION

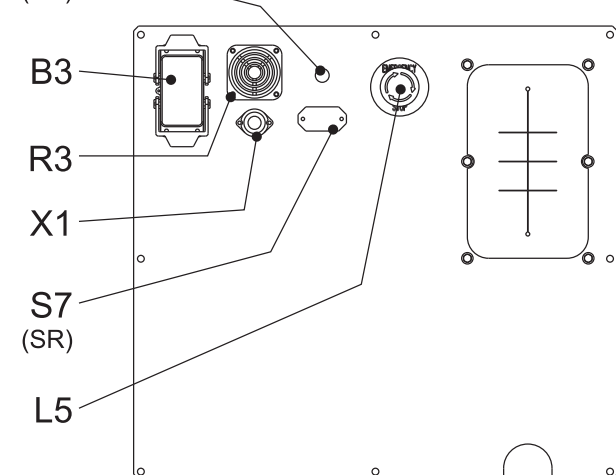

Z2

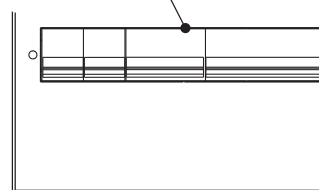

**KIT 6 PRESE
6 SOCKETS KIT
(SR)**

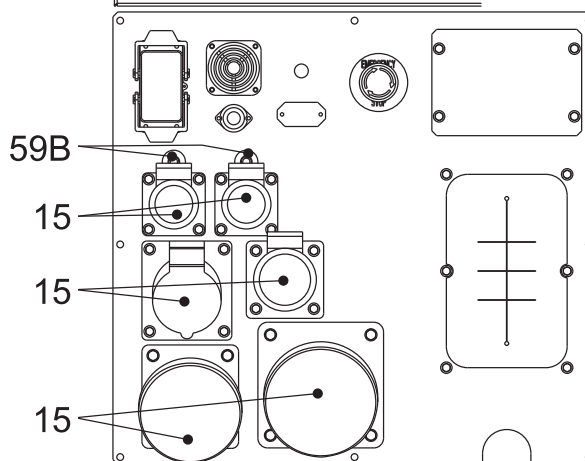



WARNING

It is absolutely forbidden to connect the unit to the public mains and/or another electrical power source .



Access forbidden to area adjacent to electricity-generating group for all non-authorized personnel.

The electricity-generating groups are to be considered electrical energy producing stations.

The dangers of electrical energy must be considered together with those related to the presence of chemical substances (fuels, oils, etc.), rotating parts and waste products (fumes, discharge gases, heat, etc.).

GENERATION IN AC (ALTERNATING CURRENT)

Before each work session check the efficiency of the ground connection for the electricity-generating group if the distribution system adopted requires it, such as, for example, the TT and TN systems.

Check that the electrical specifications for the units to be powered - voltage, power, frequency - are compatible with those of the generator. Values that are too high or too low for voltage and frequency can damage electrical equipment irreparably.

In some cases, for the powering of three-phase loads, it is necessary to ensure that the cyclic direction of the phases corresponds to the installation's requirements.

Connect the electric devices to be powered to the AC sockets, using suitable plugs and cables in prime condition.

Before starting up the group, make certain no dangerous situations exist on the installation to be powered.

Check that the thermal-magnetic switch (Z2) is in the OFF position (input lever in downward position).

Start up the electricity-generating group, positioning the thermal-magnetic switch (Z2) and differential switch (D) to ON (input lever in upward position).

Before powering on the utilities, check that the voltmeter (N) and frequency meter (E2) indicate nominal values; in addition, check on the voltmeter change-over switch (H2) (where it is assembled) that the three line voltages are the same.

In the absence of a load, the values for voltage and frequency can be greater than their nominal values. See sections on VOLTAGE and FREQUENCY.

OPERATING CONDITIONS

POWER

The electrical power expressed in kVA on an electricity-generating group is the available output power to the reference environmental conditions and nominal values for: voltage, frequency, power factors ($\cos \varphi$).

There are various types of power: PRIME POWER (PRP), STAND-BY POWER established by ISO 8528-1 and 3046/1 Norms, and their definitions are listed in the manual's TECHNICAL SPECIFICATIONS page.

During the use of the electricity-generating group **NEVER EXCEED** the power indications, paying careful attention when several loads are powered simultaneously.

VOLTAGE

GENERATORS WITH COMPOUND SETTING.

In these types of generators, the no-load voltage is generally greater than 3–5% with respect to its nominal value; f.e. for nominal voltage, threephase 400Vac or singlephase 230Vac, the no-load voltage can be comprised between 410-420V (threephase) and 235-245V (singlephase). The precision of the load voltage is maintained within $\pm 5\%$ with balanced loads and with a rotation speed variation of 4%. Particularly, with resistive loads ($\cos \varphi = 1$), a voltage over-elevation occurs which, with the machine cold and at full load, can even attain +10 %, a value which in any case is halved after the first 10-15 minutes of operation.

The insertion and release of the full load, under constant rotation speed, provokes a transitory voltage variation that is less than 10%; the voltage returns to its nominal value within 0.1 seconds.

GENERATORS WITH ELECTRONIC SETTING (A.V.R.).

In these types of generators, the voltage precision is maintained within $\pm 1,5\%$, with speed variations comprised from -10% to +30%, and with balanced loads. The voltage is the same both with no-load and with load; the insertion and release of the full load provokes a transitory voltage variation that is less than 15%; the voltage returns to its nominal value within 0.2–0.3 seconds.

FREQUENCY

The frequency is a parameter that is directly dependent on the motor's rotation speed. Depending on the type of alternator, 2 or 4 pole, we will have a frequency of 50/60 Hz with a rotation speed of 3000/3600 or 1500/1800 revolutions per minute.

The frequency, and therefore the number of motor revolutions, is maintained constant by the motor's speed regulation system.

Generally, this regulator is of a mechanical type and presents a droop from no-load to nominal load which is less than 5 % (static or droop), while under static conditions precision is maintained within $\pm 1\%$. Therefore, for generators at 50Hz the no-load frequency can be 52–52.5 Hz, while for generators at 60Hz the no-load frequency can be 62.5-63Hz.



In some motors or for special requirements the speed regulator is electronic; in these cases, precision under static operating conditions attains $\pm 0.25\%$, and the frequency is maintained constant in operation from no-load to load (isochronal operation).

POWER FACTOR - $\cos \varphi$

The power factor is a value which depends on the load's electrical specifications; it indicates the ratio between the Active Power (kW) and Apparent Power (kVA). The apparent power is the total power necessary for the load, achieved from the sum of the active power supplied by the motor (after the alternator has transformed the mechanical power into electrical power), and the Reactive Power (kVAR) supplied by the alternator. The nominal value for the power factor is $\cos \varphi = 0.8$; for different values comprised between 0.8 and 1 it is important during usage not to exceed the declared active power (kW), so as to not overload the electricity-generating group motor; the apparent power (kVA) will diminish proportionally to the increase of $\cos \varphi$.

For $\cos \varphi$ values of less than 0.8 the alternator must be downgraded, since at equal apparent power the alternator should supply a greater reactive power. For reduction coefficients, contact the Technical Service Department.

START-UP OF ASYNCHRONOUS MOTORS

The start-up of asynchronous motors from an electricity-generating group can prove critical because of high start-up currents the asynchronous motor requires (I start-up = up to 8 times the nominal current I_n). The start-up current must not exceed the alternator's admissible overload current for brief periods, generally in the order of 250–300% for 10–15 seconds.

To avoid a group oversize, we recommend following these precautionary measures:

- in the case of a start-up of several motors, subdivide the motors into groups and set up their start-up at intervals of 30–60 seconds.
- when the operating machine coupled to the motor allows it, see to a start-up with reduced voltage, star point/triangle start-up or with autotransformer, or use a soft-start system.

In all cases, when the user circuit requires the start-up of an asynchronous motor, it is necessary to check that there are no utilities inserted into the installation, which in the case of a voltage droop can cause more or less serious disservices (opening of contact points, temporary lack of power to control and command systems, etc.).

SINGLE-PHASE LOADS

Power to monophase utilities by means of three-phase generators requires some operating limitations.


- In single-phase operation, the declared voltage tolerance can no longer be maintained by the regulator (compound or electronic regulator), since the system becomes highly unbalanced. **The voltage variation on the phases not affected by the power can prove dangerous; we recommend sectioning the other loads eventually connected.**


- The maximum power which can be drawn between Neutral and Phase (start connection) is generally 1/3 of the nominal three-phase power; some types of alternators even allow for 40%. Between two Phases (triangle connection) the maximum power cannot exceed 2/3 of the declared three-phase power.
- In electricity-generating groups equipped with monophase sockets, use these sockets for connecting the loads. In other cases, always use the "R" phase and Neutral.

ELECTRIC PROTECTIONS

THERMAL-MAGNETIC SWITCH


The electricity-generating group is protected against short-circuits and against overloads by a thermal-magnetic switch (Z2) situated upstream from the installation. Operating currents, both thermic and magnetic, can be fixed or adjustable in relation to the switch model.

 In models with adjustable operating current **do not modify** the settings, since doing so can compromise the installation's protection or the electricity-generating group's output characteristics. For eventual variations, contact our Technical Service Department.

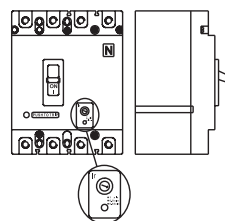

The intervention of the protection feature against overloads is not instantaneous, but follows a current overload/time outline; the greater the overload the less the intervention.

Furthermore, keep in mind that the nominal operating current refers to an operating temperature of 30°C, so that each variation of 10°C roughly corresponds to a variation of 5% on the value of nominal current.

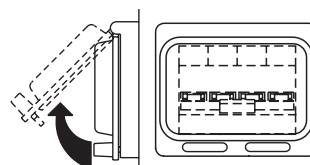


In case of an intervention on the part of the thermal magnetic protection device, check that the total absorption does not exceed the electricity-generating group's nominal current.



DIFFERENTIAL SWITCH

The differential switch or differential relay guarantee protection against indirect contacts due to malfunction currents towards the ground. When the device detects a malfunction current that is higher than the nominal current or the set current, it intervenes by cutting off

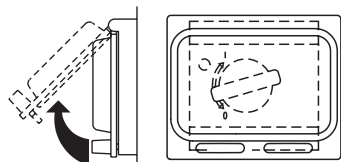

power to the circuit connected.

In the case of an intervention by the differential switch, check that there are no sheathing defects in the installation: connection cables, sockets and plugs, utilities connected.

Before each work session, check the operation of the differential protection device by pressing the test key. The electricity-generating group must be in operation, and the lever on the differential switch must be in the ON position.

THERMIC PROTECTION


Generally present to protect against overloads on an individual power socket c.a.

When the nominal operating current has been exceeded, the protection device intervenes by cutting off power to the socket.

The intervention of the protection device against overloads is not instantaneous, but follows a current overload/time outline; the greater the overload the less the intervention.

In case of an intervention, check that the current absorbed by the load does not exceed the protection's nominal operating current.

Allow the protection to cool off for a few minutes before resetting by pressing the central pole.

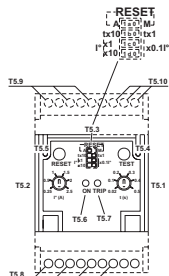

USAGE WITH EAS AUTOMATIC START-UP PANEL

The electricity-generating group in combination with the EAS automatic start-up panel forms a unit for distributing electrical energy within a few seconds of a power failure from the commercial electrical power line.

Below is some general operating information; refer to the automatic panel's specific manual for details on installation, command, control and signalling operations.

☐ Perform connections on the installation in safety conditions. Position the automatic panel in RESET or LOCKED mode.

☐ Carry out the first start-up in MANUAL mode. Check that the generator's LOCAL START / REMOTE START switch (I6) is in the REMOTE position.

Check that the generator switches are enabled (input lever in upward position).

Position the EAS panel in manual mode by pressing MAN. key, and only after having checked that there are no dangerous situations, press the START key to start the electricity-generating group.

☐ During the operation of the generator, all controls and signals from both the automatic panel and group are enabled; it is therefore possible to control its operation from both positions.

In case of an alarm with a shutdown of the motor (low pressure, high temperature, etc.), the automatic panel will indicate the malfunction that has caused the stoppage, while the generator's front panel will be disabled and will no longer supply any information.



ATTENTION

Do not keep the central pole on the thermic protection forcefully pressed to prevent its intervention.



**MAKE SURE**


- The selector LOCAL START/REMOTE START (I6) of the generating set must be switched on LOCALSTART.
- Put the selector „switch board (N7)“ on ON.

The coupling of the TCM 35 with the generating set, ready for remot starting, permits to work far from the set itself.

The remote control is connected to the front plate (X1), and/or rear plate, with a multiple connector.

N.B. The remote control TCM 35 can be used only with machines equipped with control and protection device EP6 (U7).

For use of TCM 35 see page M21 (start and stop) of this manual.

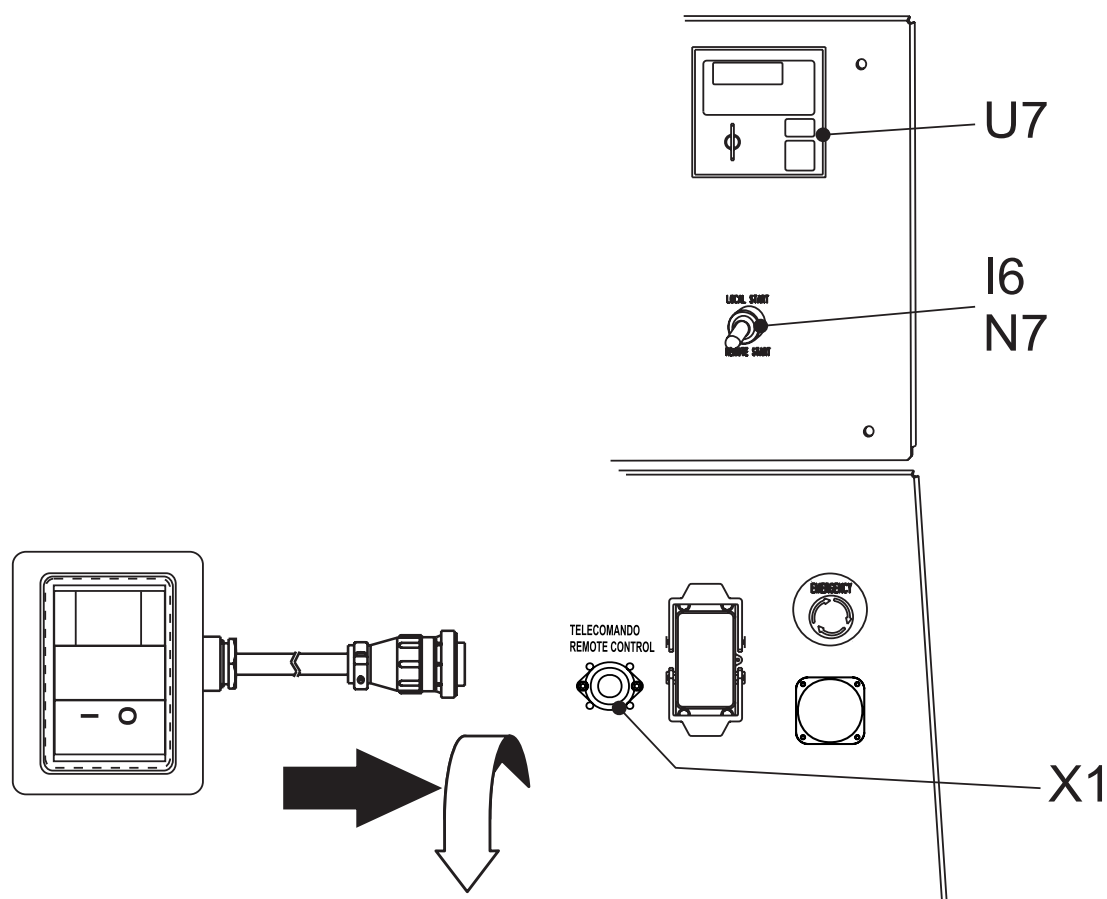



NOTE

Don not intervene on the setting of the protection switch. Before using the machine check the ON warning lamp lighting.

USE AS TROUBLE INDICATOR:

Placed on the front panel, the insulation monitor (A3) is a relay which controls continuously the insulation of the generation a.c. circuits towards the ground.


The device generates internally a continuous 12V voltage which is applied between the circuit under control and the ground.

USE AS TROUBLE INDICATOR AND INTERVENTION:

The insulation monitor controls a device (release coil, contactor, etc.) which opens the whole circuit, lifting voltage in the whole part of the machine a.c. generation.

USE OF RI – R22M MODEL:

- To vary the regulation call our Technical Assistance Department
- The LED ON shows that the device is fed.
- Check that it works correctly pressing the TEST push button
- The LED TRIP will simulate on intervention or anyway will show the real intervention in case the insulation fails.
- Reset the circuit pressing the RESET push button after having checked the plant and removed the problem cause.

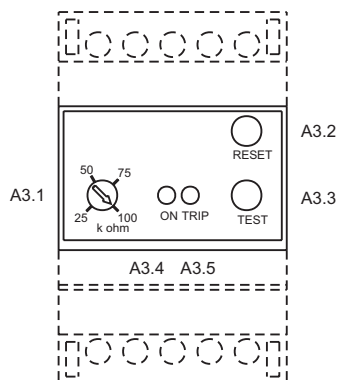


LEGEND:

- A3.1 - Adjustment potentiometer insulation resistance
- A3.2 - Manual reset push button
- A3.3 - Test push button
- A3.4 - Auxiliary feeding presence LED
- A3.5 - TRIP LED

USE OF SRI/D3 MODEL

- To vary the regulation call our Technical Assistance Department
- The warning light ON shows that the device is fed.-
- Pressing a long time the Test push-button, the Fault led lights and the Alarm led twinkles;
- Leaving it, the Alarm led goes off while the Fault led remains lit. The pressure on the Reset key brings the device back to initial conditions.
- If the insulation resistance goes down below the fixed alarm value, the Alarm led twinkles, at the same time the Alarm contact switches; if the insulation resistance goes down furtherly and becomes inferior to the fixed value for the Fault, the Fault led lights and at the same time both exchange contacts switch putting the Fault in activity and the Alarm at rest.
- After having checked the device and removed the cause of the problem, re-establish the circuit pressing the push-button RESET.

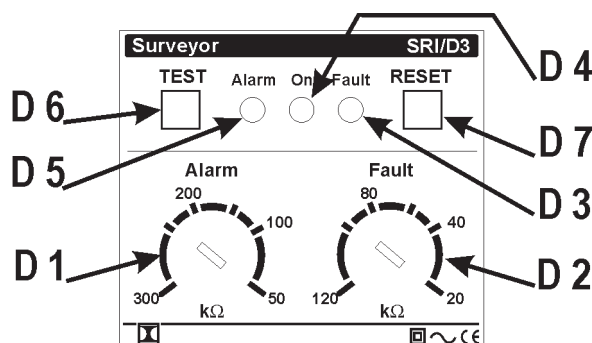

LEGEND:

- D1 Regulation of Alarm threshold
- D2 Regulation of Fault threshold
- D3 Led, fault indication
- D4 Led feeding indication
- D5 Led Alarm indication
- D6 Test push-button
- D7 Reset push-button



NOTE

Don not intervene on the setting of the protection switch. Before using the machine check the ON warning lamp lighting.

The relay allows to select the tripping current value so as to keep values of contact voltage of the limits indicated by the electrical security norms.

These adjustments allow to perform a tripping selectivity or either current or delay when more relays are located along the same line in protection of the different starting signals.

SW G.F.I.

The SW G.F.I. switch placed inside the electric control panel - or inside the electric box - allows to exclude the differential relay in case of need from the group to be feeded.

WARNING: Have qualified personnel to exclude protection in order to foresee other electrical safety solutions.

USE OF THE DER2 / D2B MODEL (MOSA SET UP)

- 1) Manual reset
- 2) Regulation of intervention time: 0.5 seconds
- 3) Regulation of fault current: 30 mA
- 4) Output relay: N.De or N.E. according to the model of the machine .

☎ - In order to modify the set up call the Technical Assistance Centres

The GFI is equipped with three tests, two of which are effected automatically by the instrument.

1. manual test (trial push button)
2. automatic test of the toroid/relay connection (guard)
3. automatic test of the board electronics. In case of fault the output relay trips and the Fault led lights with fixed light.

It is able to work correctly even in presence of harmonic distortion or anyway with very disturbed signals.


In case the internal temperature goes over the threshold for a good functioning , the Fault led will twinkle.

Its interruption due to a fault of the toroid (break of the connection wire) or a fault in the internal circuits brings to the automatic intervention of the protection

To help the user in setting up the intervention delay, the potentiometer t(s) rotation in correspondence of a reference mark causes the Fault led to twinkle for a few seconds.

LEGEND:

- D1 Potentiometer for earthing fault current regulation
- D2 Potentiometer for intervention time regulation
- D3 Multifunction led for indication of: internal electronics fault / internal temperature out of range/ t(s) centred correctly.
- D4 Led indicating presence of feeding
- D5 Led indicating intervention of GFI relay
- D6 Micro-switches for setting up of the instrument
- D7 Trial push-button
- D8 Push-button for the manual reset

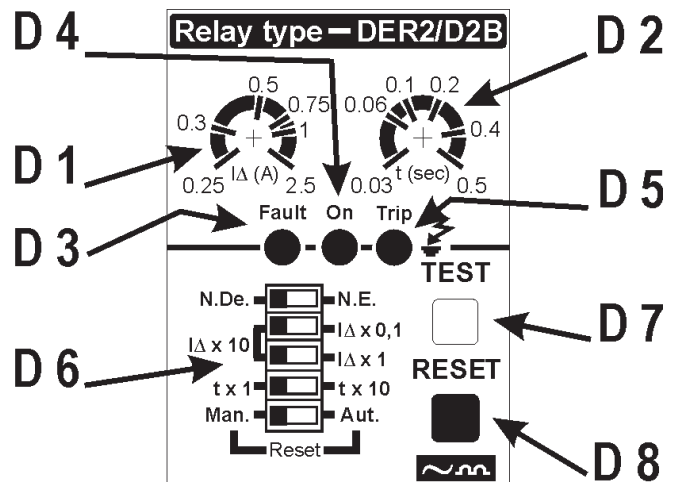

EP6 OEM's Manual - Contents

1.0 Introduction	M39.12
2.0 Operating Mode selection	M39.12
2.1 AUTO operating mode	M39.12
2.2 MANUAL operating mode	M39.12
2.3 OFF operating mode	M39.12
3.0 DISPLAY features	M39.12
4.0 ALARM messages	M39.12.1
4.1 Operating Messages	M39.12.1
5.0 LEDs for visual indication	M39.12.1
5.1 LEDs and Display Test	M39.12.1
6.0 Parameters and Settings	M39.12.1
7.0 Remote Start	M39.12.4
8.0 Safety	M39.12.4
9.0 Automatic Periodic Test	M39.12.4
10.0 Front Panel Description	M39.12.4
11.0 Dimensions and Rear View	M39.12.4

1.0 INTRODUCTION

The EP6 features Engine and Generating Set control and monitoring. The EP6 provides visual indication by means of LEDs (solid state lamps) and a Display (see section 10.0). It features OFF, MAN and AUTO operating modes. The display gives Messages for alarms and Measurement indications.

2.0 OPERATING MODE selection

The EP6 features AUTO (section 2.1), MANUAL (section 2.2) and OFF (section 2.3) operating modes. When the power supply is switched on, the EP6 behaves as follow:

- A) if the KEY-SWITCH is in the **OFF position**, the EP6 enters the OFF operating mode.
- B) if the KEY-SWITCH is in the **ON position**, the EP6 enters the AUTO operating mode. That is, if the EP6 was in AUTO prior to the supply removal. If not, the EP6 enters the MANUAL operating mode.

2.1 AUTO operating mode

To enter the 'AUTO' operating mode use the following instructions:

- A) - Turn ON the key switch: the Display and LEDs illuminate for 1 second.
- B) - Wait for the end of the LAMP test, then push the AUTO pushbutton after the [UUUU] (Pre-glow) or [Sta-] (Start prompt) has been displayed. After this, the yellow Led AUTO will illuminate. If the REMOTE START input is not operative, the LED will flash. If operative, the LED illuminates continuously and a start cycle will take place (**NOTE**: the EP6 shuts down the display during the crank).
- C) - In order to cancel the AUTO operating mode,

push the AUTO pushbutton (the yellow Led will turn OFF) or turn the KEY-SWITCH to OFF. Once in AUTO, the EP6 waits for a REMOTE START activation (see section 7.0). In case of an Automatic Periodic Test (A.P.T.), the display will show the message [tEst].

2.2 MANUAL operating mode

To start the engine follow the instructions:

- A) - Turn ON the KEY-SWITCH; the EP6 illuminates the LEDs and Display.
- B) - If the display shows the message [uuuu], the EP6 is counting the PRE-GLOW time; wait until the message disappears.
- C) - After the display shows the flashing message [StA-] (**NOTE**), turn the Key to START position (momentary position with spring-loaded return) until the engine starts. The message [. . .] indicates a MANUAL start.
- D) - To stop the engine, turn the KEY SWITCH to OFF.

NOTE: EP6 shows the blinking [StA-] message for 20 seconds. After this time, if the engine does not start, the EP6 displays the message [FAIL] (Fail to start, see section 4.07). To clear the alarm, turn the KEY-SWITCH to OFF.

2.3 OFF operating mode

This function is obtained by turning the KEY SWITCH to OFF. The OFF operating mode clears the fault alarms and shuts down the Display after 5 seconds. A blinking dot indicates the presence of the power supply. Press one of the pushbuttons to energize the display. In OFF operating mode, the EP6 allows reading of the parameters (see section 6.0)

3.0 DISPLAY features

The EP6 features a 4 Digit Display (section 10.0) to show measurements, settings and error messages. The [UP-DOWN] pushbutton selects one of the following menus:

- [AXXX] (*) Generator Current measurement
- [UXXX] The Voltage of the Generating Set
- [rPM] [XXXX] Speed of the engine
- [HXX.X] Frequency of the Generator
- [bXX.X] Battery Voltage.
- [cXX.X] Charger Alternator Voltage
- [h] [XXXX] HOUR METER (the message [h] appears for a moment, and then, the counter will be displayed continuously)

(*): the symbol 'X' means a numerical field.

4.0 ALARM messages

The alarms are displayed by means of messages. In case of alarm consult your Generating Set manufacturer. To remove the message, turn OFF the KEY-SWITCH. The EP6 may show one of the following:

[OIL]	Low Oil Pressure
[°C]	High Temperature
[O.SPd.]	Over Speed of the engine
[U.SPd]	Under Speed of the engine
[bELt]	Failure of the belt
[ALAr]	External Emergency Stop
[FUEL](1)	Low Fuel in the tank
[FAIL] (3)	Starting Failure Alarm
[E 05](2)	Generator Overload
[Hi H](2)	Generator Over Frequency
[Lo H](2)	Generator Under Frequency
[Hi U] (2)	Generator Under Voltage
[Lo U](2)	Generator Under Voltage
[XX.X]	Battery Voltage
[Err]	Memory error
[E 04]	Alternator Failure

(1) [FUEL] This message indicates Low Fuel in the tank . The engine stops if the contacts remain closed for 5 minutes continuously. To clear the alarm, follow the instructions:

- turn OFF the key switch - b) fill the tank
- turn ON the key to display the message [FULL]
- turn OFF the key in order to cancel the alarm
- turn ON the key to select the MANUAL or AUTO operating mode

(2) To determine the value that caused the failure, push the [F1] pushbutton.

4.1 OPERATING messages

EP6 features messages to inform you about the following:

[uuuu]	Glow-plugs timing
[U—]	Voltage out of range
[StA-]	Start prompt
[. . .]	Starting by key switch
[rEst]	Rest timing
[tEst]	Automatic Test
[CAL]	Calibration
[Pro-]	Programming
[rEAd]	Parameter reading
[StOP]	Stopping cycle
[MM.SS]	Remote Start or Remote Stop cycle

5.0 LEDs for visual indication

The EP6 features two LEDs (**see section 10.0**) to indicate the following conditions:

[ENGINE RUNNING]: this green led illuminates when the engine is running.

[AUTO]: this yellow LED blinks to indicate a standby mode. The EP6 monitors the REMOTE CONTROL and expects a command. The LED illuminates continuously when the REMOTE START is activated.

5.1 LEDs and Display Test

A test of the LEDs and DISPLAY is obtained automatically anytime the key switch is turned ON. The LEDs and DISPLAY light up for about 1 second.

6.0 Parameters and settings

The unit is programmed by the supplier of the Generating Set. Contact the Generator manufacturer in order to have the permission to program the module. It is possible to read the status of the internal programming at anytime. Follow the instructions:

- Turn the Key in OFF (if the display indicates [STOP], wait until it disappears)
- Push and hold the [F1] pushbutton until the message [rEAd] appears (10 secs).
- Release the button; the display will show the first programmable parameter ([P.0]).
- Push the [F1] pushbutton: the display will indicate the value of the parameter ([1"]).
- Push the [UP-DOWN] pushbutton to select a parameter ([P.0] to [P.29]). Push [F1] to display the setting.
- The display returns to menu mode if you have not used the pushbuttons for 30 seconds.

The list of the parameters follows ([.] means minutes and [.,] means seconds). Some parameters may differ according to the programming done by the genset manufacturer.

Display	Parameter [Default]
[P.0]	Remote Start Delay Timing (Input #7) [1"] Range: 1-59 secs or 1-15 mins Seconds or minutes of continuous REMOTE START command to initiate the automatic engine start (see section 7.0 and [P20] in this section).
[P.1]	Remote Stop Delay Timing (Input #7) [1"] Range: 1-59 secs or 1-15 mins Seconds or minutes of continuous absence of the REMOTE START command to initiate the stop cycle (see section 7.0 and [P.20] in this section).
[P.2]	Crank Timing (Output #10) [5"] Range: 1-20 seconds Maximum insertion time of the <i>Starter Motor</i> .
[P.3]	Engine Running Trigger (Input#1) [8.0] Range: 3V-24V,[inh] If the voltage of the Charger Alternator rises above the [setting], the <i>Starter Motor</i> is disconnected.
[P.4]	Rest Timing [3"] Range: 3-20 secs. Time interval between starting attempts
[P. 5]	Starting Attempts [3] Range: 1-10 This parameter sets the number of attempts in the automatic start cycle
[P.6]	Generator UnderVoltage, short-circuit [inh.] Range: 80-400V. If the voltage drops under the [setting] for at least 6 secs, or under [setting]-20% for 1 sec, the Under-Voltage protection [Lo U] will shut down the engine.
[P.7]	Generator Over-Voltage [500V] Range: 110-550V or [inh.]. If the Generator voltage rises above the [setting] for at least 2 seconds, the EP6 will energize the over voltage protection [Hi U] (see section 4.0) to stop the engine. The [inh.] code inhibits the over voltage.
[P.8]	Generator Under-Frequency [Inh.] [inh.] 1 to 99Hz ([inh.]=disables the under frequency) This protection is delayed by about 6 seconds. The EP6 shuts down the engine and the display will show the [Lo H] message.
[P.9]	Generator Over-Frequency [55] 45 Hz to [inh.] ([inh.] disables the over frequency) This protection is delayed by about 2 seconds. The EP6 shuts down the engine and displays [Hi H]
[P.10]	Current Transformer Size [...] The range is 10/5 up to 1000/5
[P.11]	Generator Overload Setting [inh.] Range: [inh.] to 1000 A The EP6 shuts down the engine after a delay of 6 secs and shows the message [E05].
[P.12][OFF]	Generator Failure Alarm selection: [on] or [OFF]. The code [on] enables the <i>Generator</i> failure alarm. The EP6 shows the [E04] message and the engine will shut down.
[P.13]	Glow Plugs/Choke Control (Output #11) [5"] Range: 1 to 99 secs. The EP6 energizes the output #11 for the programmed time.
[P.14]	Output Control [0] The following options are available: [0] None [1] Choke Control [2] Glow Plugs Control [3] Choke Control
[P.15]	Belt Break Control [ON] Selection: [on] or [OFF]. The Belt Break alarm is indicated by means of the message [bELt]

- [P.16] **Stop Solenoid Timing [2"]**
 Range: 2-99 secs. Duration of the Stop cycle.
- [P.17] **Alarm Output Timing [1']**
 [inh.]-59 secs 1-15 mins and [cont]. Time-out of the alarm output. The code [cont] disables the time-out, and the alarm remains energized until the OFF operating mode is selected. The [inh.] mode enables the use of the external contactor
- [P.18] **Temperature Switch [n.o.]**
 Selection: [n.o.] or [n.c.]
 [n.o.] the engine shuts down if the contact closes
 [n.c.] the engine shuts down if the contact opens
- [P.19] **ALARM Control [n.c.]**
 Selection: [n.o.] or [n.c.]
 [n.o.] the engine shuts down if the contact closes
 [n.c.] the engine shuts down if the contact opens
- [P.20] **Remote Start [n.o.]**
 Selection: [n.o.] or [n.c.]
 [n.o.] the engine starts if the contact closes
 [n.c.] the engine starts if the contact opens
- [P.21] **Under Speed setting [Inh.]**
 [Inh.] or 100-4000 r.p.m..The [Inh.] code disables the Under Speed shut down.
- [P.22] **Over Speed setting [Inh.]**
 100-4000 rpm or [Inh.]. The EP6 provides one second bypass delay. The [Inh.] code (>4000 r.p.m.) disables the Over Speed shut down.
- [P.23] **Number of Teeth of the Flywheel [Inh.]**
 [Inh.] or 1-500 teeth.
 The [Inh.] code disables the reading of the Speed (section 3.0), the Over/Under Speed alarms, and the Crank termination (see [P.24]).
- [P.24] **Crank OFF [Inh.]**
 Crank Termination setting: 100-800 rpm
 If the speed rises above the setting, the EP6 terminates the crank cycle. One second delay avoids false termination. The code [Inh.] inhibits the crank termination
- [P.25] **Low Oil Pressure Alarm By-Pass [6"]**
 Range: 0-99 secs. By-Pass Delay to ignore the Oil Pressure (input #3) during the engine starting cycle. This input requires normally closed contact
- [P.26] **Automatic Periodic Test Cycle [inh.]**
 Range: [inh.], 1-99 days
 This is the interval time between the automatic periodic tests of the engine. The code [inh.] disables the Automatic Periodic Test (see section 19.0)
- [P.27] **Automatic Engine Test Duration [5']**
 Range: 1-99 minutes.
 This is the duration of the automatic engine test.
- [P.28] **Generator warm-up timing [20"]**
 Range [inh.] 1-59 secs or 1-15 mins ([inh.]=No warm-up)
 Active only when [P17]= [inh.] and the ALARM output is used to drive the contactor
- [P.29] **Generator cooling timing [30"]**
 Range [inh.] 1-59 secs or 1-15 mins ([inh.]=No cooling)
 Active only when [P17]= [inh.] and the ALARM output is used to drive the GEN-SET contactor

7.0 REMOTE START

The EP6 features REMOTE START only in AUTO operating mode.

To operate the REMOTE START, follow the instructions.

- A) - Turn the KEY-SWITCH to the ON position; the Display and LEDs illuminate for 1 sec.
- B) - Wait until the end of the LEDs test.
- C) - Push the AUTO pushbutton as soon as possible (otherwise, after 20 seconds the EP6 enters the STARTING FAILURE); the [AUTO] yellow LED will illuminate as described in the next section

7.1 - REMOTE START SWITCH:

If the REMOTE START input is activated, the [AUTO] yellow LED illuminates continuously and the display will indicate the count down of the internal **start delay** timer by means of the message [MM.SS] (Minutes and seconds). The engine will start after the programmed **start delay** time. If the REMOTE START is deactivated, the EP6 drives the **stop delay time**. The display will indicate the count down by means of the message [MM.SS] (Minutes and seconds), and the [AUTO] yellow LED will flash. The engine will stop after the programmed **stop delay** time.

Note start delay time: see section 6.0 parameter [P.0]

Note stop delay time: see section 6.0 parameter [P.1]

8.0 SAFETY



NOTE

High voltage is present inside the EP6. To avoid electric-shock hazard, operating personnel must not remove the protective cover. Do not disconnect the grounding connection. Any interruption of the grounding connection can create an electric shock hazard. Before making external connections, always ground the PANEL first by connecting the control panel to ground.

9.0 Automatic periodic TEST

The EP6 does not use a clock to count the programmed days ([P.26] setting, section 6.0). The maximum error and drift of the counter is +/-0,5%. The user may experiment with shifting the periodic tests. To avoid error accumulation, and in case your unit is programmed to allow Automatic Periodic

Test, we recommend the following procedures.


- disconnect the power supply of the EP6 (*consult your genset supplier*)
- wait for the desired start time (external clock reference)
- apply the power supply to the EP6 (*consult your genset supplier*)
- select the 'AUTO' operating mode

The EP6 will start the engine after the programmed number of days and the engine will run for the programmed time. To determine how the Automatic Periodic Test is programmed enter the Reading Mode (section 6.0 parameter [P.26] and [P.27]).


IMPORTANT NOTES

If the supply (battery voltage) is removed, the EP6 loses the counts and timings. If the supply restores, the EP6 starts to count the A.P.T. according to the programmed parameters [P.26] and [P.27]. It is important to synchronize the power on sequence with the desired Automatic Periodic Test.

10.0 FRONT PANEL

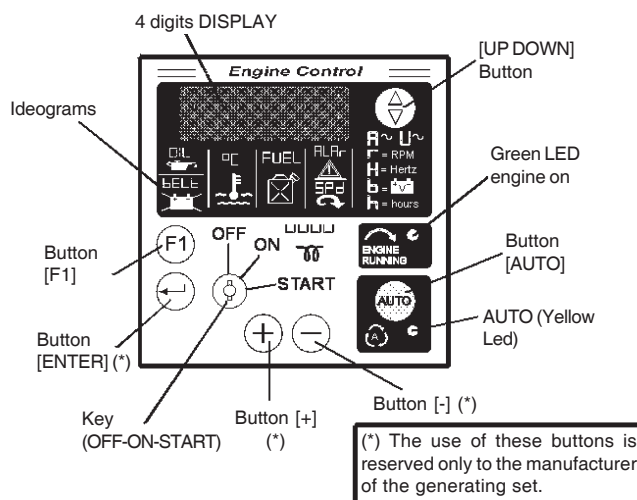

11.0 DIMENSIONS

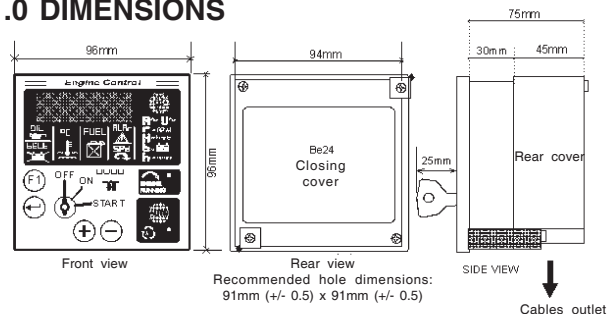

<i>Problem</i>	<i>Possible cause</i>	<i>Solution</i>
ENGINE		
The motor does not start up	1) Start-up switch (I6) (where it is assembled) in incorrect position 2) Emergency button (L5) pressed 3) Preheating (where it is assembled) 4) Engine control unit or starting key faulty. 5) Battery low 6) Battery cable terminals loose or corroded 7) Start-up motor defective 8) No fuel or air in feed circuit 9) Malfunction on feed circuit: defective pump, injector blocked, etc. 10) Air filter or fuel filter clogged 11) Air in the gasoil filter. 12) Motor stopping device defective 13) Malfunction on electrical power circuit on generator control panel	1) Check position 2) Unblock 3) Lacking or insufficient preheating phase for sparkplugs. Malfunction in circuit: repair. 4) Replace 5) Recharge or replace. Check the battery charge circuit on motor and automatic panel. 6) Tighten and clean. Replace if corroded. 7) Repair or replace. 8) Refill tank, un-aerate the circuit. 9) Ask for intervention of Service Department. 10) Clean or replace 11) Take the air out filling the filter with gasoil. 12) Replace. 13) Check and repair.
The motor does not accelerate. Inconstant speed.	1) Air filter or fuel filter clogged. 2) Malfunction on feed circuit: defective pump, injector blocked, etc. 3) Oil level too high. 4) Motor speed regulator defective.	1) Clean or replace. 2) Ask for intervention of Service Department. 3) Eliminate excess oil. 4) Ask for intervention of Service Department
Black smoke	1) Air filter clogged. 2) Overload. 3) Injectors defective. Injection pump requires calibration.	1) Clean or replace 2) Check the load connected and diminish. 3) Ask for intervention of Service Department.
White smoke	1) Oil level too high. 2) Motor cold or in prolonged operation with little or no load. 3) Segments and/or cylinders worn out.	1) Eliminate excess oil. 2) Insert load only with motor sufficiently hot 3) Ask for intervention of Service Department.
Too little power provided by motor.	1) Air filter clogged. 2) Insufficient fuel distribution, impurities or water in feed circuit. 3) Injectors dirty or defective.	1) Clean or replace. 2) Check the feed circuit, clean and refill once again. 3) Ask for intervention of Service Department.
Low oil pressure	1) Oil level insufficient 2) Air filter clogged. 3) Oil pump defective. 4) Alarm malfunction.	1) Reset level. Check for leaks. 2) Replace filter. 3) Ask for intervention of Service Department. 4) Check the sensor and electrical circuit.
High temperature	1) Overload 2) Insufficient ventilation. 3) Insufficient coolant liquid (Only for water cooled motors)	1) Check the load connected and diminish. 2) Check the cooling vent and relative transmission belts 3) Restore level. Check for leaks or breakage in the entire cooling circuit, pipes, couplings, etc.

<i>Problem</i>	<i>Possible cause</i>	<i>Solution</i>
ENGINE		
	4) Water radiator or oil clogged (where it is assembled)	4) Clean cooling fins on radiator
	5) Water circulating pump defective (Only for water cooled motors)	5) Ask for intervention of Service Department
	6) Injectors defective. Injection pump requires calibration	6) Ask for intervention of Service Department
	7) Alarm malfunction	7) Check the sensor and electrical circuit
GENERATOR		
Absence of output voltage	1) Voltage switch in position 0	1) Check position
	2) Voltage switch faulty	2) Check connections and working of the switch, repair or replace
	3) Protection tripped due to overload	3) Check the load connected and diminish
	4) Differential protection device tripped. (Differential switch, differential relay)	4) Check on the entire installation: cables, connections, utilities connected have no defective sheathing which may cause incorrect currents to ground
	5) Protection devices defective	5) Replace
	6) Alternator not sparked	6) Carry out external spark test as indicated in alternator manual. Ask for intervention of Service Department
	7) Alternator defective	7) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace. Ask for intervention of Service Department
No-load voltage too low or too high	1) Incorrect motor running speed	1) Regulate speed to its nominal no-load value
	2) Voltage regulating device (where it is assembled) defective or requires calibration	2) Adjust regulator device as indicated in alternator manual, or replace
	3) Alternator defective	3) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace Ask for intervention of Service Department
Corrected no-load voltage too low with load	1) Incorrect motor running speed due to overload	1) Check the load connected and diminish
	2) Load with $\cos \varphi$ less than 0.8	2) Reduce or rephase load
	3) Alternator defective	3) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace Ask for intervention of Service Department
Unstable tension	1) Contacts malfunctioning	1) Check electrical connections and tighten
	2) Irregular rotation of motor	2) Ask for intervention of Service Department
	3) Alternator defective	3) Check winding, diodes, etc. on alternator (Refer to alternator manual) Repair or replace Ask for intervention of Service Department



WARNING



**MOVING
PARTS
can injure**

- Have **qualified** personnel do maintenance and troubleshooting work
 - Stop the engine before doing any work inside the machine. If for any reason the machine must be operated while working inside, **pay attention** moving parts, hot parts (exhaust manifold and muffler, etc.) electrical parts which may be unprotected when the machine is open.
 - Remove guards only when necessary to perform maintenance, and replace them when the maintenance requiring their removal is complete.
 - Use suitable tools and clothes.
 - Do not modify the components if not authorized.
- See pag. M1.1-



**HOT surface
can
hurt you**

NOTE

By maintenance at care of the utilizer we intend all the operatios concerning the verification of mechanical parts, electrical parts and of the fluids subject to use or consumption during the normal operation of the machine.

For what concerns the fluids we must consider as maintenance even the periodical change and or the refills eventually necessary.

Maintenance operations also include machine cleaning operations when carried out on a periodic basis outside of the normal work cycle.

The repairs **cannot be considered** among the maintenance activities, i.e. the replacement of parts subject to occasional damages and the replacement of electric and mechanic components consumed in normal use, by the Assistance Authorized Center as well as by MOSA.

The replacement of tires (for machines equipped with trolleys) must be considered as repair since it is not delivered as standard equipment any lifting system.

The periodic maintenance should be performed according to the schedule shown in the engine manual. An optional hour counter (M) is available to simplify the determination of the working hours.

ENGINE and ALTERNATOR

PLEASE REFER TO THE SPECIFIC MANUALS PROVIDED.

VENTILATION

Make certain there are no obstructions (rags, leaves or other) in the air inlet and outlet openings on the machine, alternator and motor.

ELECTRICAL PANELS

Check condition of cables and connections daily. Clean periodically using a vacuum cleaner, **DO NOT USE COMPRESSED AIR.**

DECALS AND LABELS

*All warning and decals should be checked once a year and **replaced** if missing or unreadable.*

STRENUOUS OPERATING CONDITIONS

Under extreme operating conditions (frequent stops and starts, dusty environment, cold weather, extended periods of no load operation, fuel with over 0.5% sulphur content) do maintenance more frequently.

BATTERY WITHOUT MAINTENANCE

DO NOT OPEN THE BATTERY

The battery is charged automatically from the battery charger circuit supplied with the engine.

Check the state of the battery from the colour of the warning light which is in the upper part.

- Green colour: battery OK
- Black colour: battery to be recharged
- White colour: battery to be replaced



IMPORTANT



In the maintenance operations avoid that polluting substances, liquids, exhausted oils, etc. bring damage to people or things or can cause negative effects to surroindings, health or safety respecting completely the laws and/ or dispositions in force in the place.



NOTE

THE ENGINE PROTECTION NOT WORK WHEN THE OIL IS OF LOW QUALITY BECAUSE NOT CHARGED REGULARLY AT INTERVALS AS PRESCRIBED IN THE OWNER'S ENGINE MANUAL.





ATTENTION

- Maintenance operations on the electricity-generating group prearranged for automatic operation must be carried out with the panel in RESET mode.
- Maintenance operations on the installation's electrical panels must be carried out in complete safety by cutting off all external power sources: ELECTRICAL POWER, GROUP and BATTERY.


For the electricity-generating groups prearranged for automatic operation, in addition to carrying out all periodic maintenance operations foreseen for normal usage, various operations must be carried out that are necessary in relation to the specific type of use. The electricity-generating group in fact must be continuously prepared for operation, even after prolonged periods of inactivity

MAINTENANCE GENERATING SET WITH AUTOMATIC BOARD

	EVERY WEEK	EVERY MONTH AND/OR AFTER INTERVENTION ON LOAD	EVERY YEAR
1. TEST or AUTOMATIC TEST cycle to keep the generating set constantly operative	NO-LOAD X	WITH LOAD X	
2. Check all levels: engine oil, fuel level, battery electrolyte,, if necessary top it up.	X	X	
3. Control of electrical connections and cleaning of control panel		X	X

 **Carry out motor oil change at least once a year, even if the requested number of hours has not been attained.**

In case the machine should not be used for more than 30 days, make sure that the room in which it is stored presents a suitable shelter from heat sources, weather changes or anything which can cause rust, corrosion or damages to the machine.

 Have **qualified** personnel prepare the machine for storage.

GASOLINE ENGINE

Start the engine: It will run until it stops due to the lack of fuel.

Drain the oil from the engine sump and fill it with new oil (see page M25).

Pour about 10 cc of oil into the spark plug hole and screw the spark plug, after having rotated the crankshaft several times.

Rotate the crankshaft slowly until you feel a certain compression, then leave it.

In case the battery, for the electric start, is assembled, disconnect it.

Clean the covers and all the other parts of the machine carefully.

Protect the machine with a plastic hood and store it in a dry place.

DIESEL ENGINE

For short periods of time it is advisable, about every 10 days, to make the machine work with load for 15-30 minutes, for a correct distribution of the lubricant, to recharge the battery and to prevent any possible blocking of the injection system.

For long periods of inactivity, turn to the after sales service of the engine manufacturer.

Clean the covers and all the other parts of the machine carefully.

Protect the machine with a plastic hood and store it in a dry place.

In case of necessity for first aid and of fire prevention, see page. M2.5.



IMPORTANT



In the storage operations avoid that polluting substances, liquids, exhausted oils, etc. bring damage to people or things or can cause negative effects to surroundings, health or safety respecting completely the laws and/or dispositions in force in the place.

☞ Have **qualified** personnel disassemble the machine and dispose of the parts, including the oil, fuel, etc., in a correct manner when it is to be taken out of service.

As cust off we intend all operations to be made, at utilizer's care, at the end of the use of the machine. This comprises the dismantling of the machine, the subdivision of the several components for a further reutilization or for getting rid of them, the eventual packing and transportation of the eliminated parts up to their delivery to the store, or to the bureau encharged to the cust off or to the storage office, etc.

The several operations concerning the cust off, involve the manipulation of fluids potentially dangerous such as: lubricating oil and battery electrolyte.

The dismantling of metallic parts liable to cause injuries or wounds, must be made wearing heavy gloves and using suitable tools.

The getting rid of the various components of the machine must be made accordingly to rules in force of law a/o local rules.

Particular attention must be paid when getting rid of:

lubricating oils, battery electrolyte, and inflammable liquids such as fuel, cooling liquid.

The machine user is responsible for the observance of the norms concerning the environment conditions with regard to the elimination of the machine being cust off and of all its components.

In case the machine should be cust off without any previous disassembly it is however compulsory to remove:

- tank fuel
- engine lubricating oil
- cooling liquid from the engine
- battery

NOTE: MOSA is involved with custing off the machine **only** for the second hand ones, when not reparable.

This, of course, after authorization.



In case of necessity for first aid and fire prevention, see page M2.5.






IMPORTANT



In the cust-off operations avoid that polluting substances, liquids, exhausted oils, etc. bring damage to people or things or can cause negative effects to surroundings, health or safety respecting completely the laws and/or dispositions in force in the place.

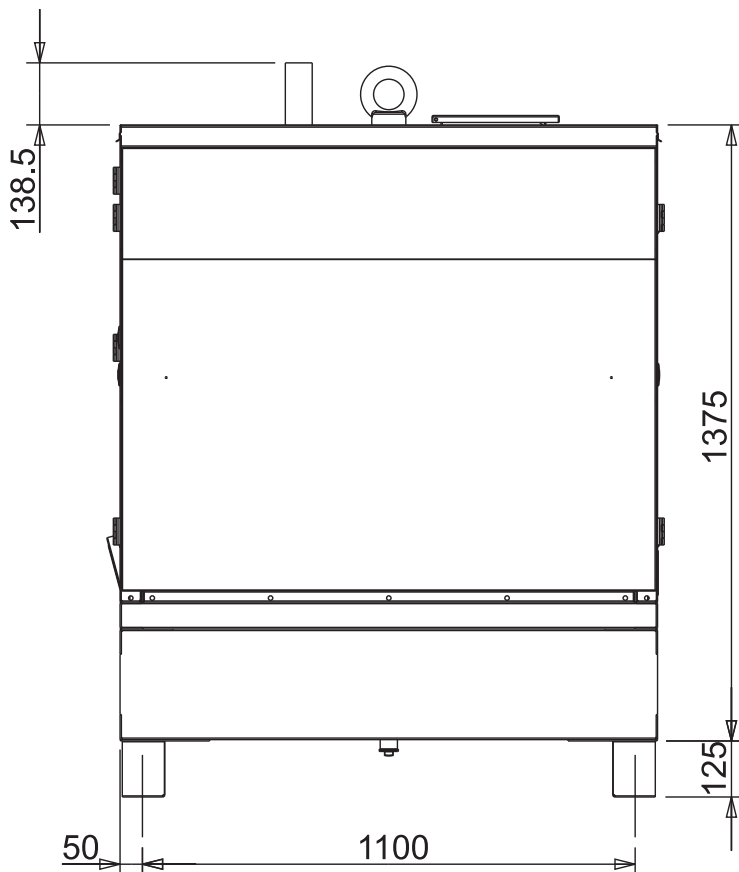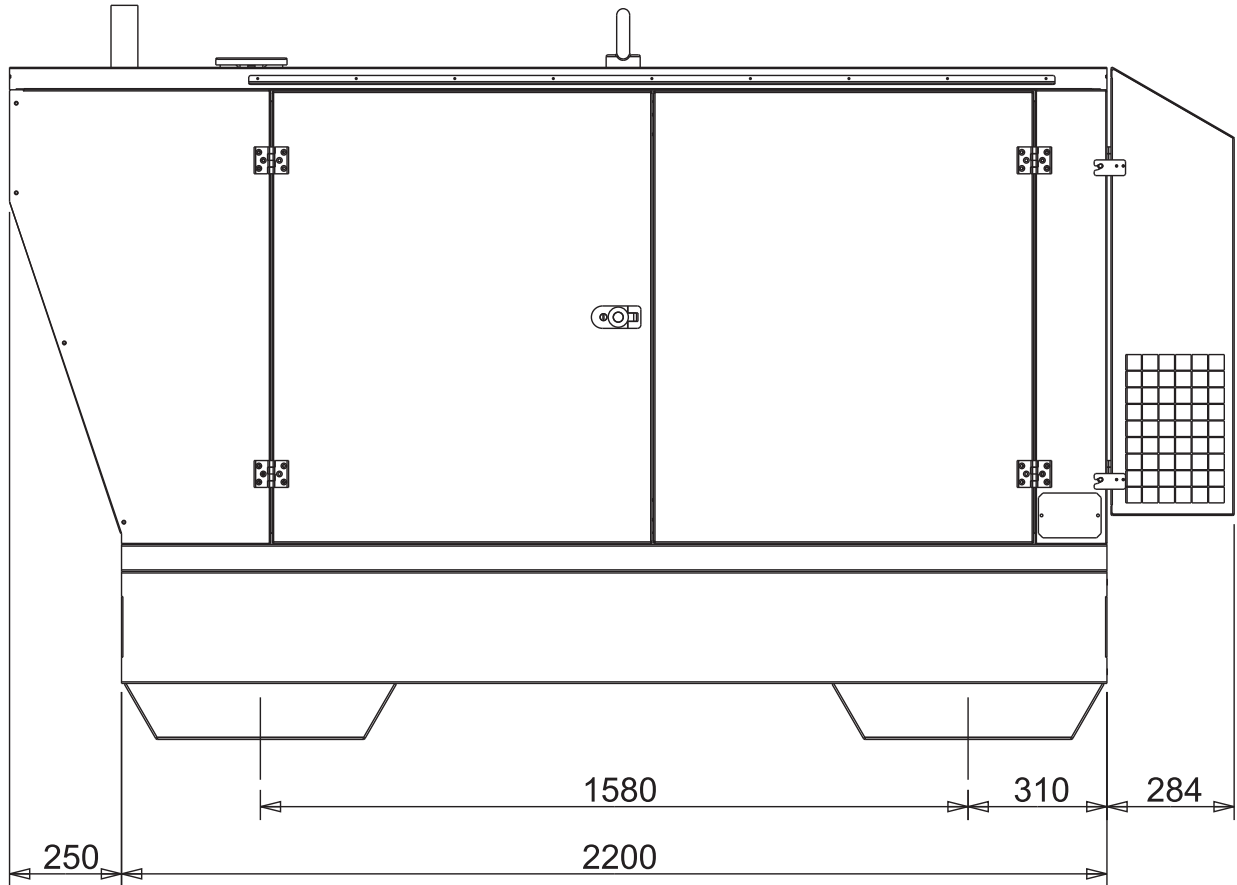


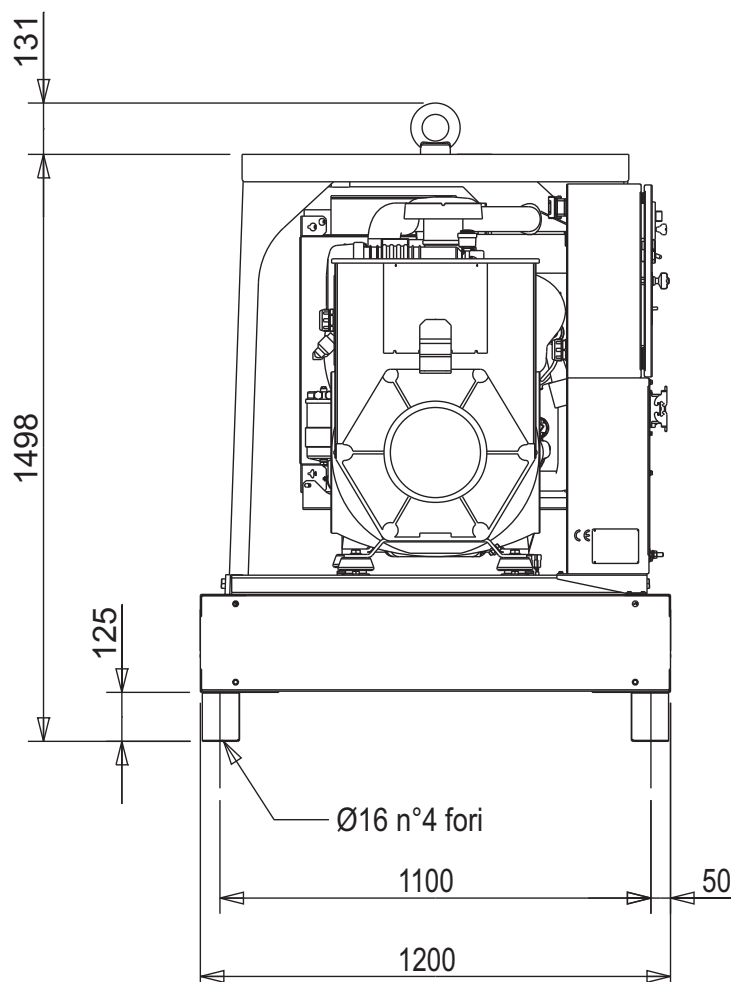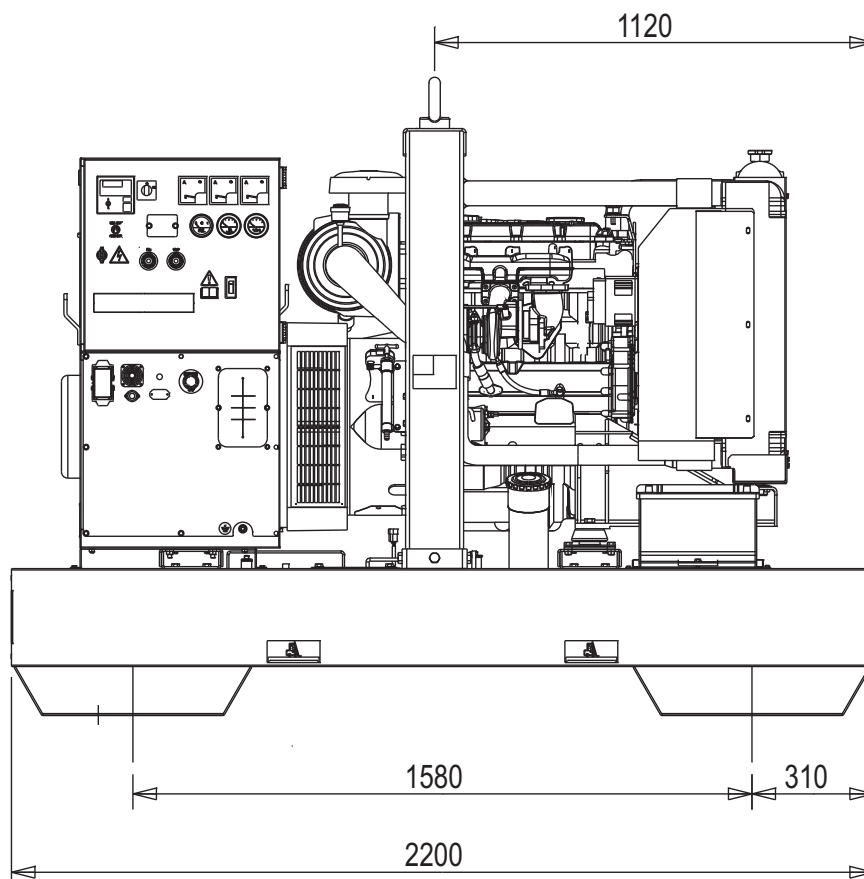

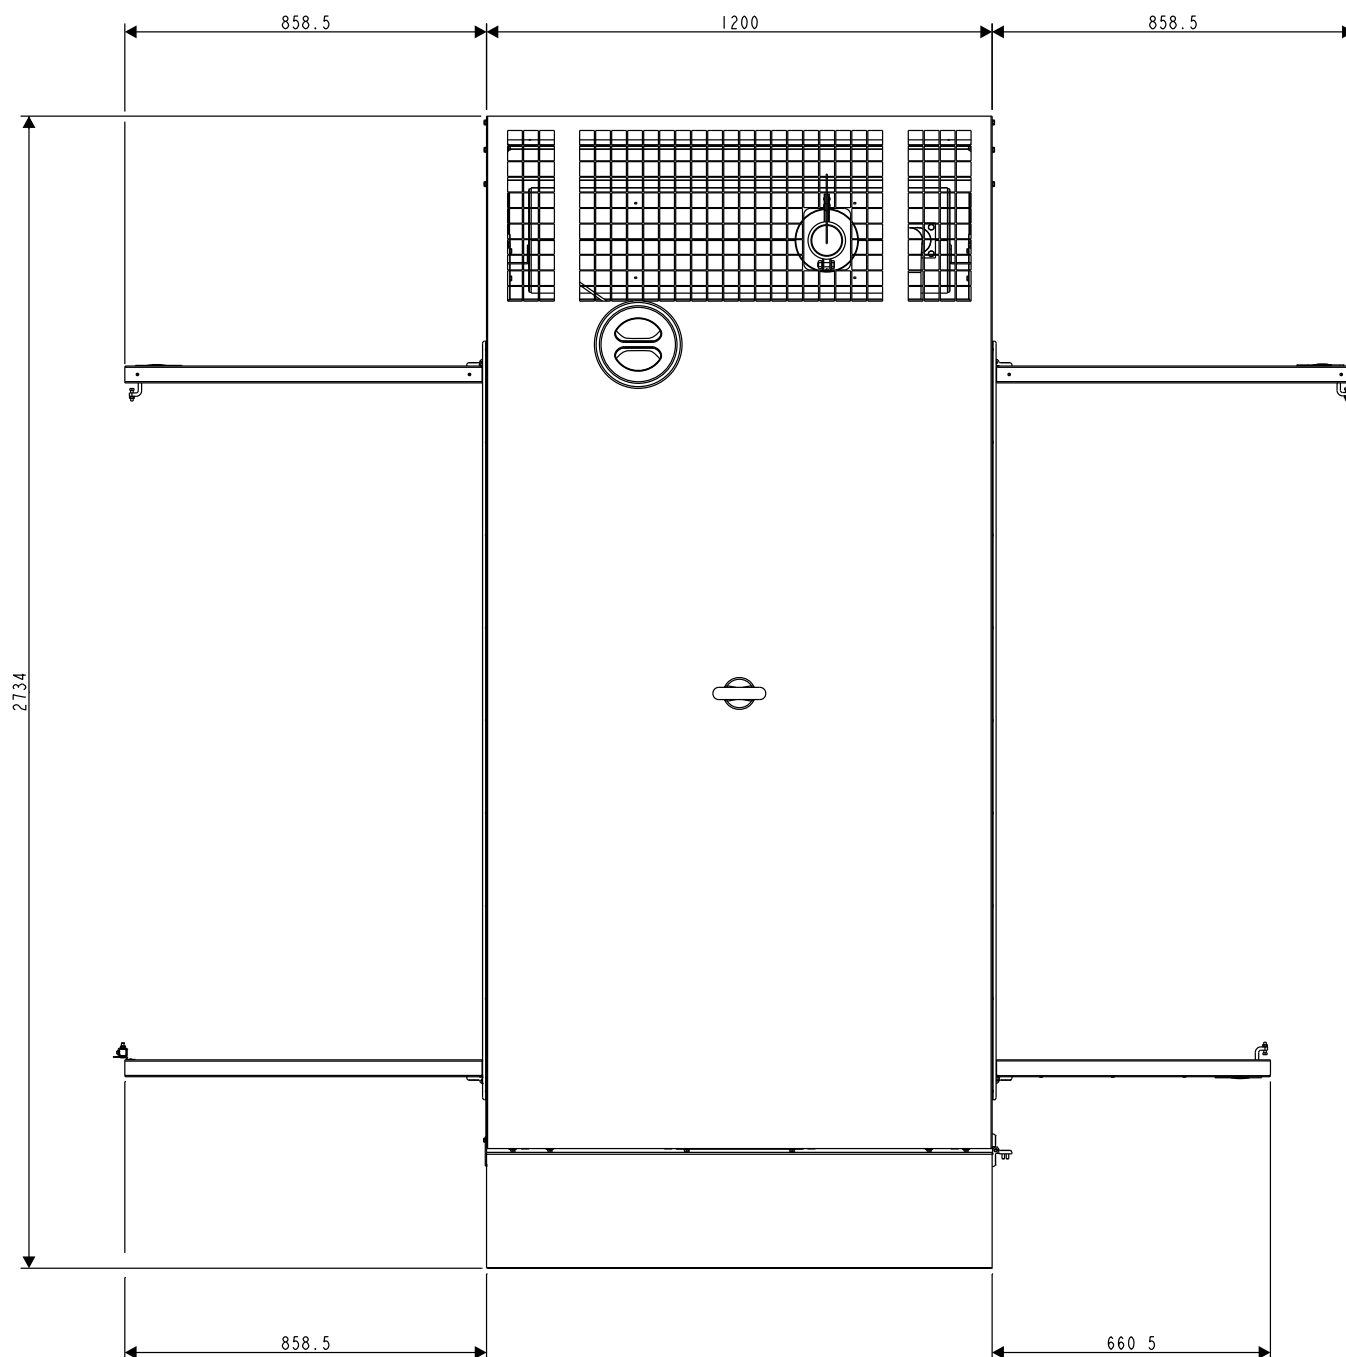

A : Alternator	A3 : Insulation monitoring	A6 : Commutator/switch
B : Wire connection unit	B3 : E.A.S. connector	B6 : Key switch, on/off
C : Capacitor	C3 : E.A.S. PCB	C6 : QEA control unit
D : G.F.I.	D3 : Booster socket	D6 : Connector, PAC
E : Welding PCB transformer	E3 : Open circuit voltage switch	E6 : Frequency rpm regulator
F : Fuse	F3 : Stop push-button	F6 : Arc-Force selector
G : 400V 3-phase socket	G3 : Ignition coil	G6 : Device starting motor
H : 230V 1phase socket	H3 : Spark plug	H6 : Fuel electro pump 12V c.c.
I : 110V 1-phase socket	I3 : Range switch	I6 : Start Local/Remote selector
L : Socket warning light	L3 : Oil shut-down button	L6 : Choke button
M : Hour-counter	M3 : Battery charge diode	M6 : Switch CC/CV
N : Voltmeter	N3 : Relay	N6 : Connector – wire feeder
P : Welding arc regulator	O3 : Resistor	O6 : 420V/110V 3-phase transformer
Q : 230V 3-phase socket	P3 : Sparkler reactor	P6 : Switch IDLE/RUN
R : Welding control PCB	Q3 : Output power unit	Q6 : Hz/V/A analogic instrument
S : Welding current ammeter	R3 : Electric siren	R6 : EMC filter
T : Welding current regulator	S3 : E.P.4 engine protection	S6 : Wire feeder supply switch
U : Current transformer	T3 : Engine control PCB	T6 : Wire feeder socket
V : Welding voltage voltmeter	U3 : R.P.M. electronic regulator	U6 : DSP chopper PCB
Z : Welding sockets	V3 : PTO HI control PCB	V6 : Power chopper supply PCB
X : Shunt	Z3 : PTO HI 20 l/min push-button	Z6 : Switch and leds PCB
W : D.C. inductor	W3 : PTO HI 30 l/min push-button	W6 : Hall sensor
Y : Welding diode bridge	X3 : PTO HI reset push-button	X6 : Water heater indicator
	Y3 : PTO HI 20 l/min indicator	Y6 : Battery charge indicator
A1 : Arc striking resistor	A4 : PTO HI 30 l/min indicator	A7 : Transfer pump selector AUT-0-MAN
B1 : Arc striking circuit	B4 : PTO HI reset indicator	B7 : Fuel transfer pump
C1 : 110V D.C./48V D.C. diode bridge	C4 : PTO HI 20 l/min solenoid valve	C7 : "GECO" generating set test
D1 : E.P.1 engine protection	D4 : PTO HI 30 l/min solenoid valve	D7 : Flooting with level switches
E1 : Engine stop solenoid	E4 : Hydraulic oil pressure switch	E7 : Voltmeter regulator
F1 : Acceleration solenoid	F4 : Hydraulic oil level gauge	F7 : WELD/AUX switch
G1 : Fuel level transmitter	G4 : Preheating glow plugs	G7 : Reactor, 3-phase
H1 : Oil or water thermostat	H4 : Preheating gearbox	H7 : Switch disconnecter
I1 : 48V D.C. socket	I4 : Preheating indicator	I7 : Solenoid stop timer
L1 : Oil pressure switch	L4 : R.C. filter	L7 : "VODIA" connector
M1 : Fuel warning light	M4 : Heater with thermostat	M7 : "F" EDC4 connector
N1 : Battery charge warning light	N4 : Choke solenoid	N7 : OFF-ON-DIAGN. selector
O1 : Oil pressure warning light	O4 : Step relay	O7 : DIAGNOSTIC push-button
P1 : Fuse	P4 : Circuit breaker	P7 : DIAGNOSTIC indicator
Q1 : Starter key	Q4 : Battery charge sockets	Q7 : Welding selector mode
R1 : Starter motor	R4 : Sensor, cooling liquid temperature	R7 : VRD load
S1 : Battery	S4 : Sensor, air filter clogging	S7 : 230V 1-phase plug
T1 : Battery charge alternator	T4 : Warning light, air filter clogging	T7 : V/Hz analogic instrument
U1 : Battery charge voltage regulator	U4 : Polarity inverter remote control	U7 : Engine protection EP6
V1 : Solenoid valve control PCBT	V4 : Polarity inverter switch	V7 : G.F.I. relay supply switch
Z1 : Solenoid valve	Z4 : Transformer 230/48V	Z7 : Radio remote control receiver
W1 : Remote control switch	W4 : Diode bridge, polarity change	W7 : Radio remote control trasnsmitter
X1 : Remote control and/or wire feeder socket	X4 : Base current diode bridge	X7 : Isometer test push-button
Y1 : Remote control plug	Y4 : PCB control unit, polarity inverter	Y7 : Remote start socket
A2 : Remote control welding regulator	A5 : Base current switch	A8 : Transfer fuel pump control
B2 : E.P.2 engine protection	B5 : Auxiliary push-button ON/OFF	B8 : Ammeter selector switch
C2 : Fuel level gauge	C5 : Accelerator electronic control	C8 : 400V/230V/115V commutator
D2 : Ammeter	D5 : Actuator	D8 : 50/60 Hz switch
E2 : Frequency meter	E5 : Pick-up	E8 : Cold start advance with temp. switch
F2 : Battery charge trasformer	F5 : Warning light, high temperature	F8 : START/STOP switch
G2 : Battery charge PCB	G5 : Commutator auxiliary power	G8 : Polarity inverter two way switch
H2 : Voltage selector switch	H5 : 24V diode bridge	H8 : Engine protection EP7
I2 : 48V a.c. socket	I5 : Y/s commutator	I8 : AUTOIDLE switch
L2 : Thermal relay	L5 : Emergency stop button	L8 : AUTOIDLE PCB
M2 : Contactor	M5 : Engine protection EP5	M8 : A4E2 ECM engine PCB
N2 : G.F.I. and circuit breaker	N5 : Pre-heat push-button	N8 : Remote emergency stop connector
O2 : 42V EEC socket	O5 : Accelerator solenoid PCB	O8 : V/A digital instruments and led VRD PCB
P2 : G.F.I. resistor	P5 : Oil pressure switch	P8 : Water in fuel
Q2 : T.E.P. engine protection	Q5 : Water temperature switch	Q8 : Battery disconnect switch
R2 : Solenoid control PCBT	R5 : Water heater	R8 : Inverter
S2 : Oil level transmitter	S5 : Engine connector 24 poles	S8 : Overload led
T2 : Engine stop push-button T.C.1	T5 : Electronic GFI relais	T8 : Main IT/TN selector
U2 : Engine start push-button T.C.1	U5 : Release coil, circuit breaker	U8 : NATO socket 12V
V2 : 24V c.a. socket	V5 : Oil pressure indicator	V8 : Diesel pressure switch
Z2 : Thermal magnetic circuit breaker	Z5 : Water temperature indicator	Z8 : Remote control PCB
W2 : S.C.R. protection unit	W5 : Battery voltmeter	W8 : Pressure turbo protection
X2 : Remote control socket	X5 : Contactor, polarity change	X8 :
Y2 : Remote control plug	Y5 : Commutator/switch, series/parallel	Y8 :


Exp. Exp.	Modifica Modification		Data Date	Dis. Dis.	Appr. Approved
	Da Pag. From Page	Denominazione. Denomination:	Data Date	Dis. Dis.	Appr. Approved
	Alta Pag. To Page	Macchine: Machines:	Dis. Dwg. n°:	Dis. Dis.	Appr. Approved
		Engine Perkins 1104C-44TAG2	16.10.2006	841116.prtg	841116
		GE 115 PSX	Leporace N.		841116.S.010
20090-CUSAGO (MI)-ITALY http://www.mosa.it					

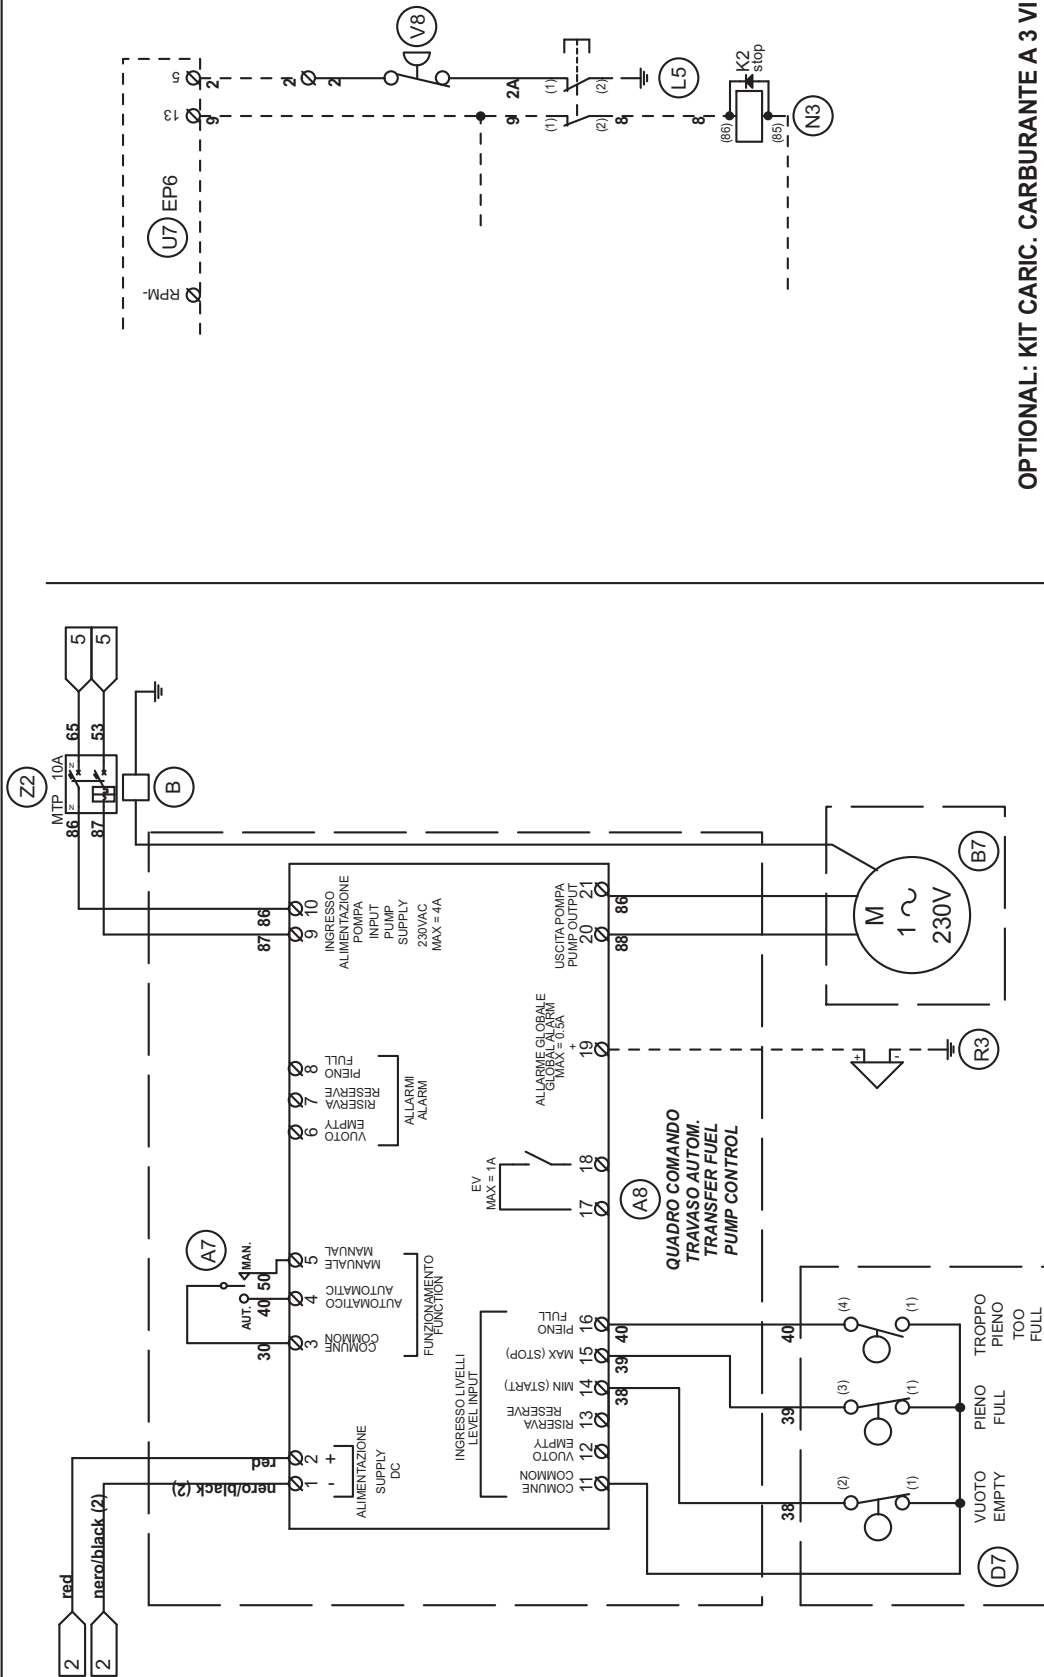






OPTIONAL: KIT CARIC. CARBURANTE A 3 VIE
OPTIONAL: 3 WAY FUEL CHARGE KIT

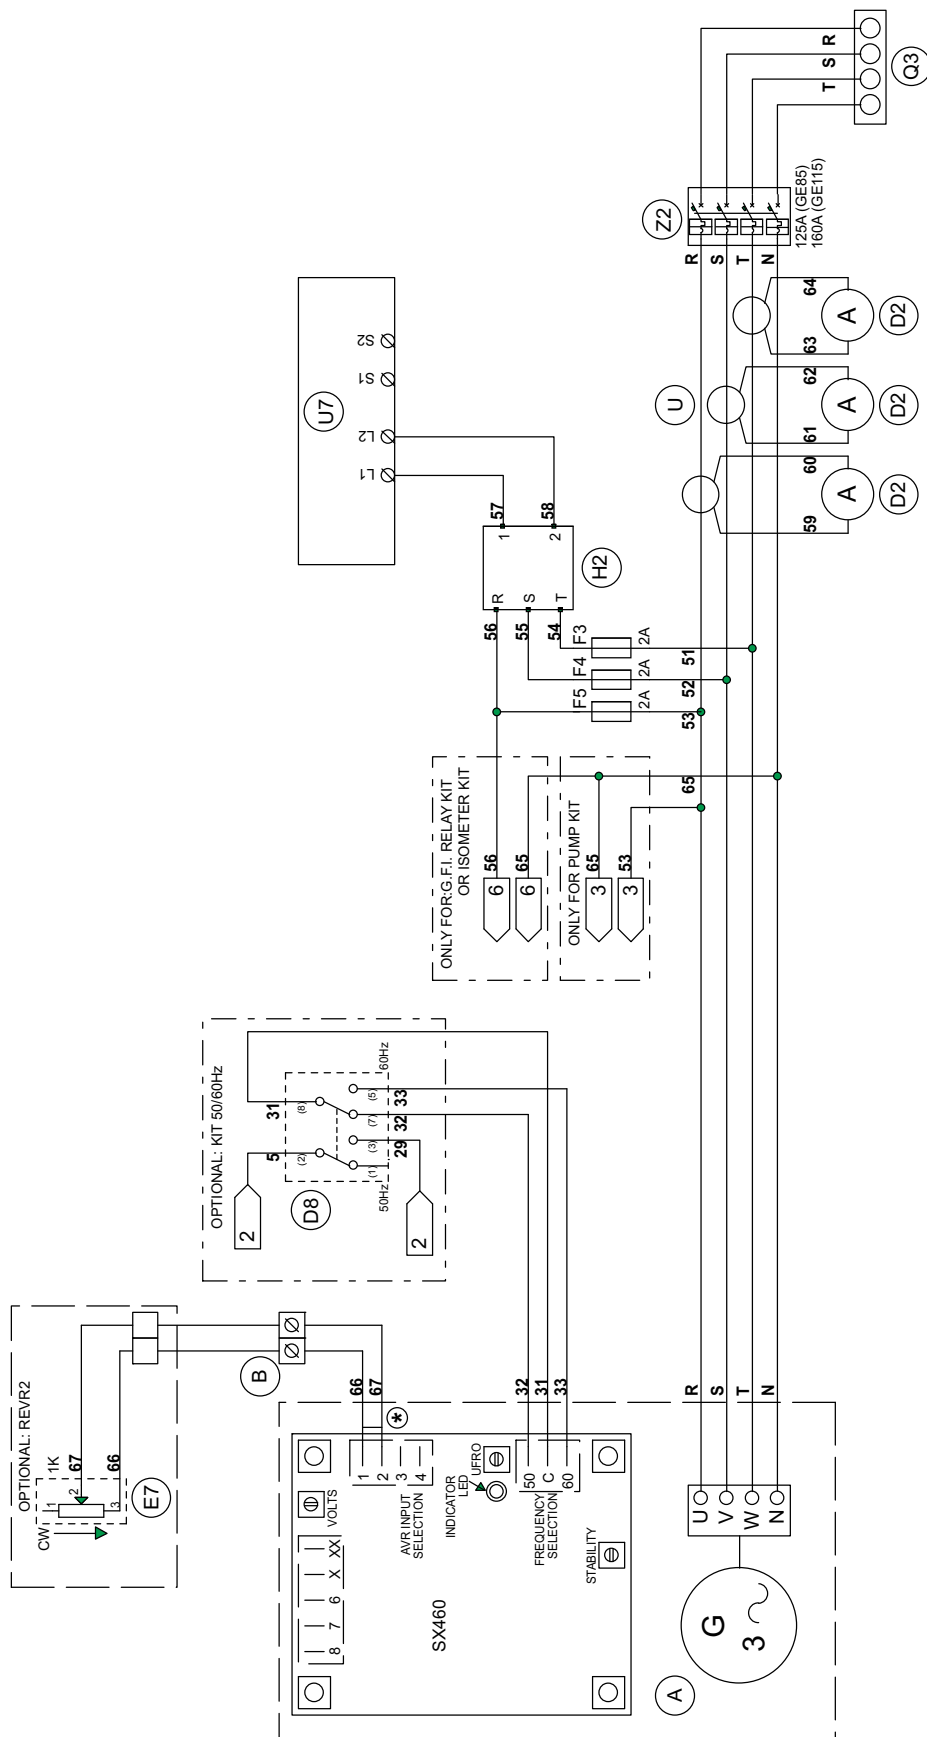B	Aggiunto kit caricamento carbur. a 3 vie	24.03.2009	N.L.
A	Modificato colleg. di terra motore pompa e unificato schema con GE 85/115/165.	29.10.2007	N.L.
Exp.	Modifica	Data	Dis.
Exp.	Modifica	Data	Dis.
Denominazione: Transfer fuel pump kit Disegnatore: Designer: Macchina: Machine: GE 115 PSX Disegnatore: Designer: Leporace N. 84116.S.015-B Macchina: Machine: 84116.prg Disegnatore: Designer: 3 Macchina: Machine: 6			
Approvato: Approved: 84116.prg Disegnatore: Designer: 3 Macchina: Machine: 6			

 
OPTIONAL: KIT POMPA CARBURANTE
OPTIONAL: FUEL PUMP KIT

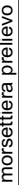


 


- ④ - TOGLIERE PONTICELLO E COLLEGARE CAVI 66-67 DEL POTENZIOMETRO
- REMOVE LINK AND CONNECT HAND TRIMMER BY CABLES 66-67

A Aggiunto morsetteria prelievo potenza (Q3) e unificato schema con GE 85.									
Exp. Exp.	Modifica Modification			Dis. Desi.		Dis. Date		Appr. Appr.	
				Da Pagn. From Page		Denominazione: Denomination	Aux. (400T/230M) M		
				Alta Pagn. To Page		Dis. n.°: Dwg. n.°	841116.prg		
20090-CUSAGO (MI)-ITALY http://www.mosa.it				Disegnatore: Designer:		Data: Date:		Approvato: Approved:	
				GE 115 PSX		24.10.2006		841116.S.020-A	
									

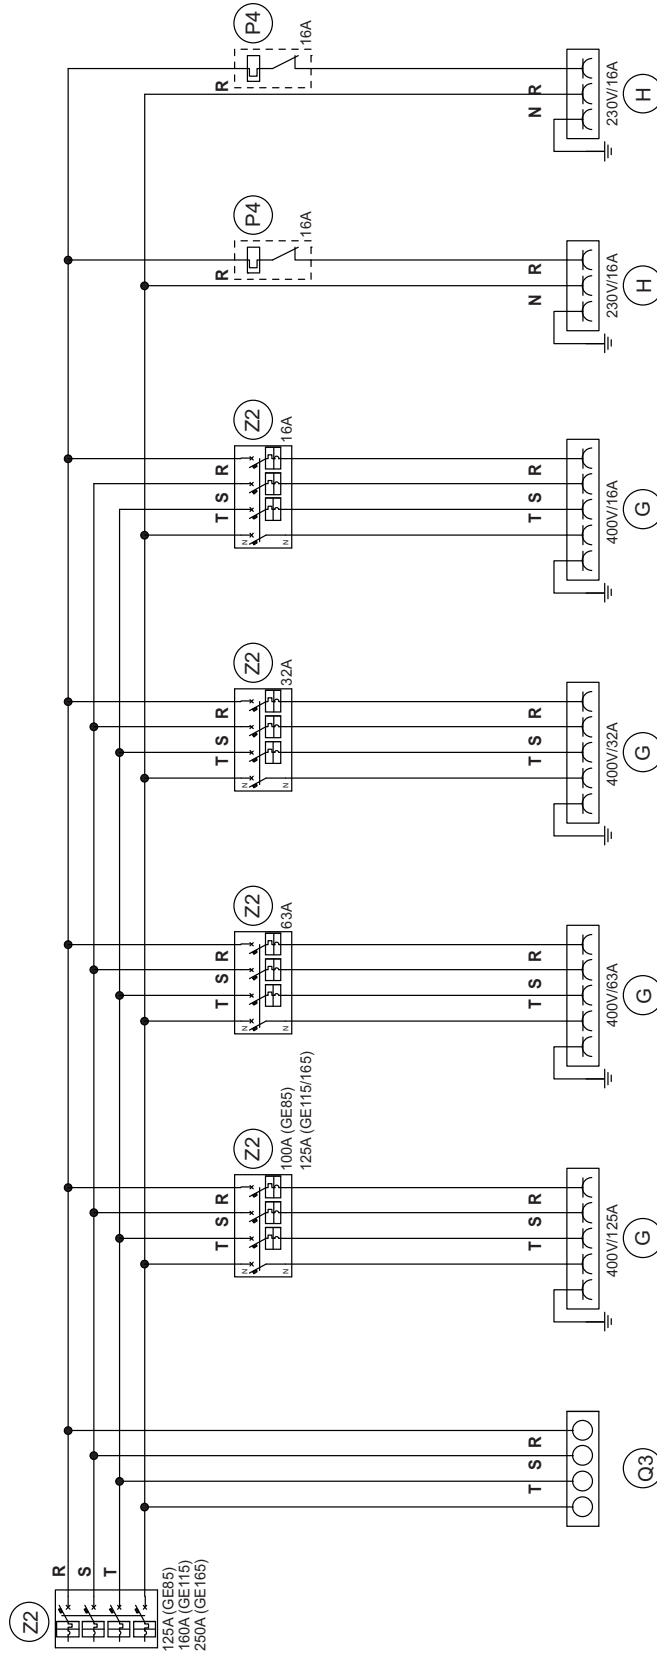
La MOSA si riserva a termini di legge la proprietà' del presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.



A Unificato schema tra GE 85/115/165.										15.10.2007		N.L.					
Esp. Exp.		Modifica Modification				Data Date		Dis. n° Page n°		Appr. n° Page n°		Dis. n° Page n°		Appr. n° Page n°			
				Denominazione: Denomination:		Aux. version with sockets (400Tx5/230x3M) MT										Dis. n° Page n°	
20090-CUSAGO (MI)-ITALY http://www.mosa.it				Disegnato: Designer:		Leporace N.		Data: Date:		16.10.2006		841116.S.021-A					
				Macchina: Machine:		GE 165 PSX											
				Alta Pag. n° to Page													


La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.

G.F.I. RELAY

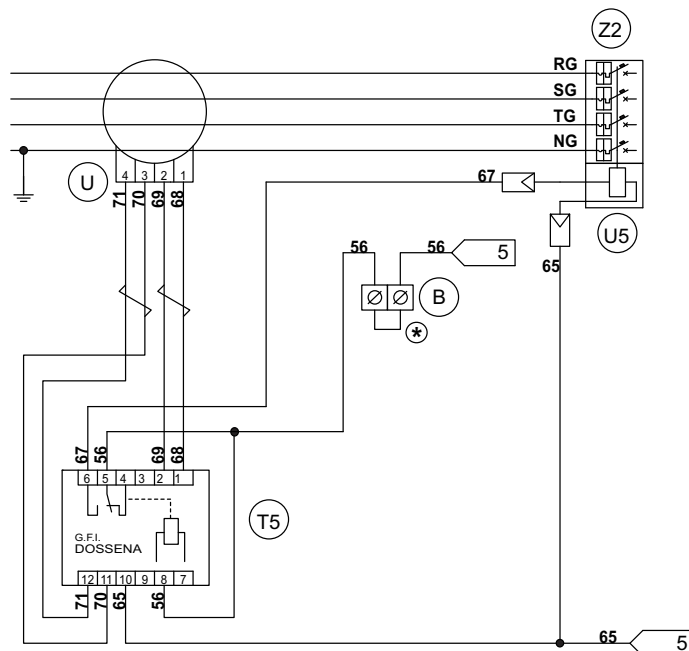


(*) **ATTENZIONE:**
 Scollegare ponticello
 per disabilitare G.F.I.
ATTENTION:
 To disable G.F.I.
 disconnect jumper

ISOMETER

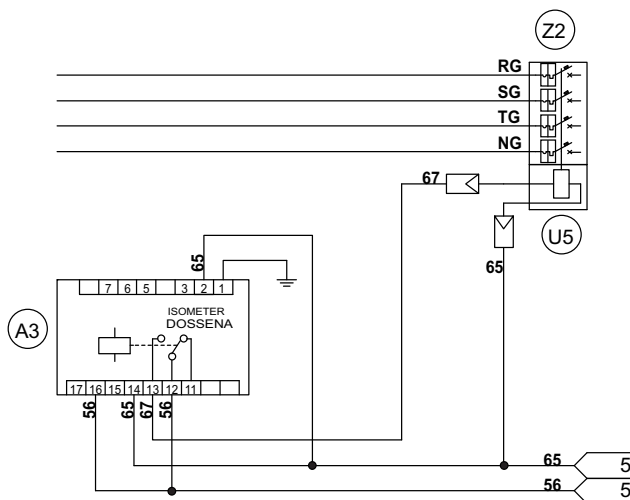

Esp. Exp.	Modifica Modification	Data Date	Dis. Desi.	Appr. Appr.
Da Pag. From Page	Denominazione: Denomination:	Progetto: Project:	Pag. n° Page n°	di n° of n°
Ala Pag. To Page	Macchina: Machine:	Disegnatore: Designer:	Dis. n°: Dwg. n°:	Approvato: Approved:
MOSA	20090-CUSAGO (MI)-ITALY http://www.mosa.it	GE 165 PSX	Leporace N. 16.10.2006	84116.S.025
		84165.prg	7	9

La MOSA si riserva a termini di legge la proprietà del presente disegno con divieto di riprodurlo o comunicarlo a terzi senza sua autorizzazione.

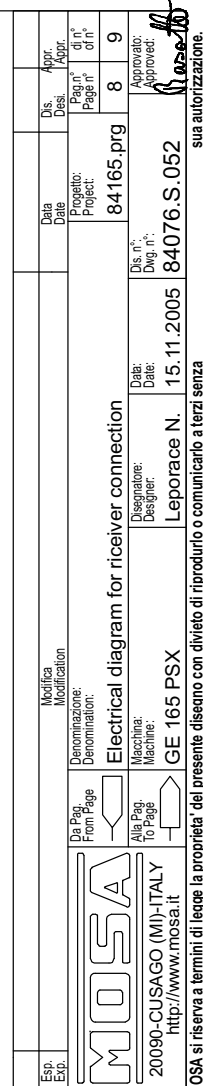

Exp. Exp.	MOSA		Modifica Modification				
Da Pagi. From Page	Denominazione: Denomination:	Allo Pagi. To Page	Macchina: Machine:	Designatore: Designator:	Data: Date:	Dis. n°: Dis. n°:	Approvato: Approved:
20090-CUSAGO (MI)-ITALY http://www.mosa.it	Set-up radio remote control diagram	—	GE 165 PSX	Leporece N.	15.11.2005	84076 S.090	Approvato: Approved: 84076 S.090
						Pag. n° Page n°	
						9 9	
						84.165 prg	
						Progetto: Project:	
						di n° of n°	
						9 9	

http://www.mosa.it

MOSA guarantees that any request for spare parts will be satisfied.



To keep the machine in full working order, when replacement of MOSA spare parts is required, always ask for genuine parts only.

👉 The requested data are to be found on the data plate located on the machine structure, quite visible and easy to consult. *

When ordering the spare parts, it is recommended to indicate:


- 1) * serial number
- 2) * model of welder and/or generating set
- 3) ♦ n. table
- 4) ♦ n. position
- 5) quantity

MOSA		V.le Europa, 59 - 20090 CUSAGO (MI) ITALY	
		Tel. +39-02 90352.1 - fax +39-02 90390466	
TYPE	TS 0000 GE		
SERIAL N°	0987654321		

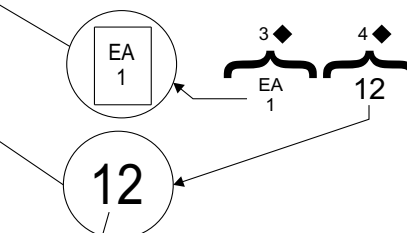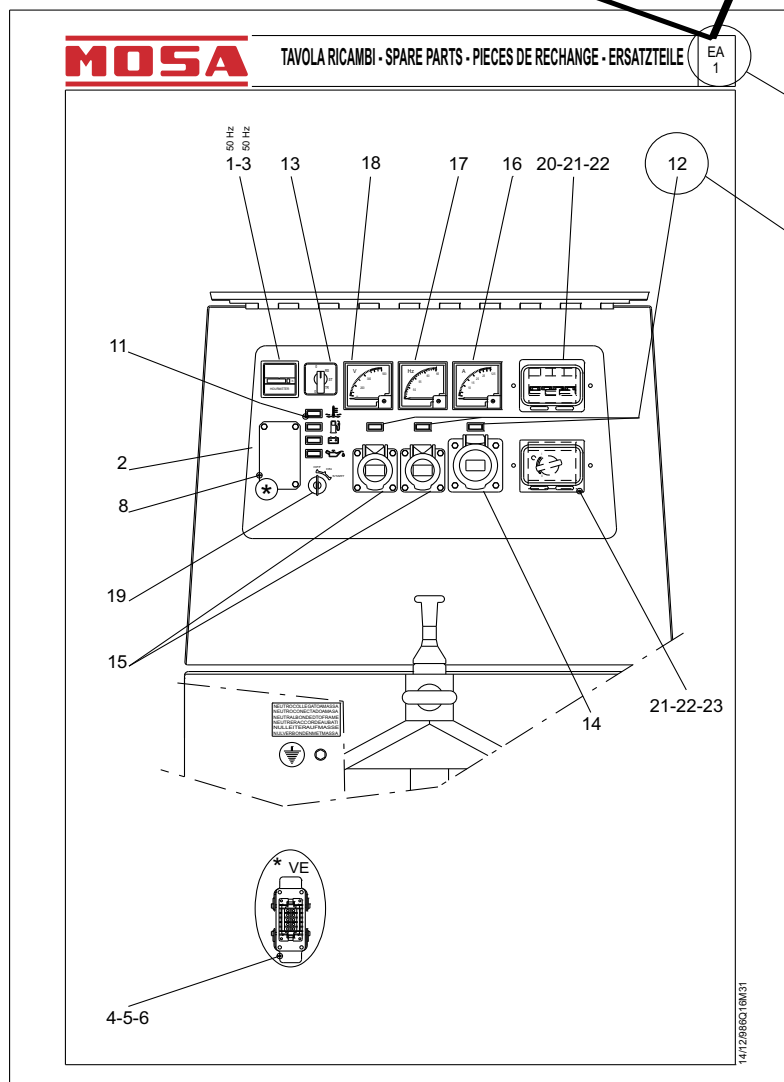


ABBREVIATIONS AND SYMBOLS:


- (EV) When ordering, specify the engine type and the auxiliary voltage
- (ER) Engine with recoil starter only
- (ES) Engine with electric starter only
- (VE) E.A.S version only.
- (QM) When ordering, specify the length in meters
- (VS) Special version only
- (SR) By request only

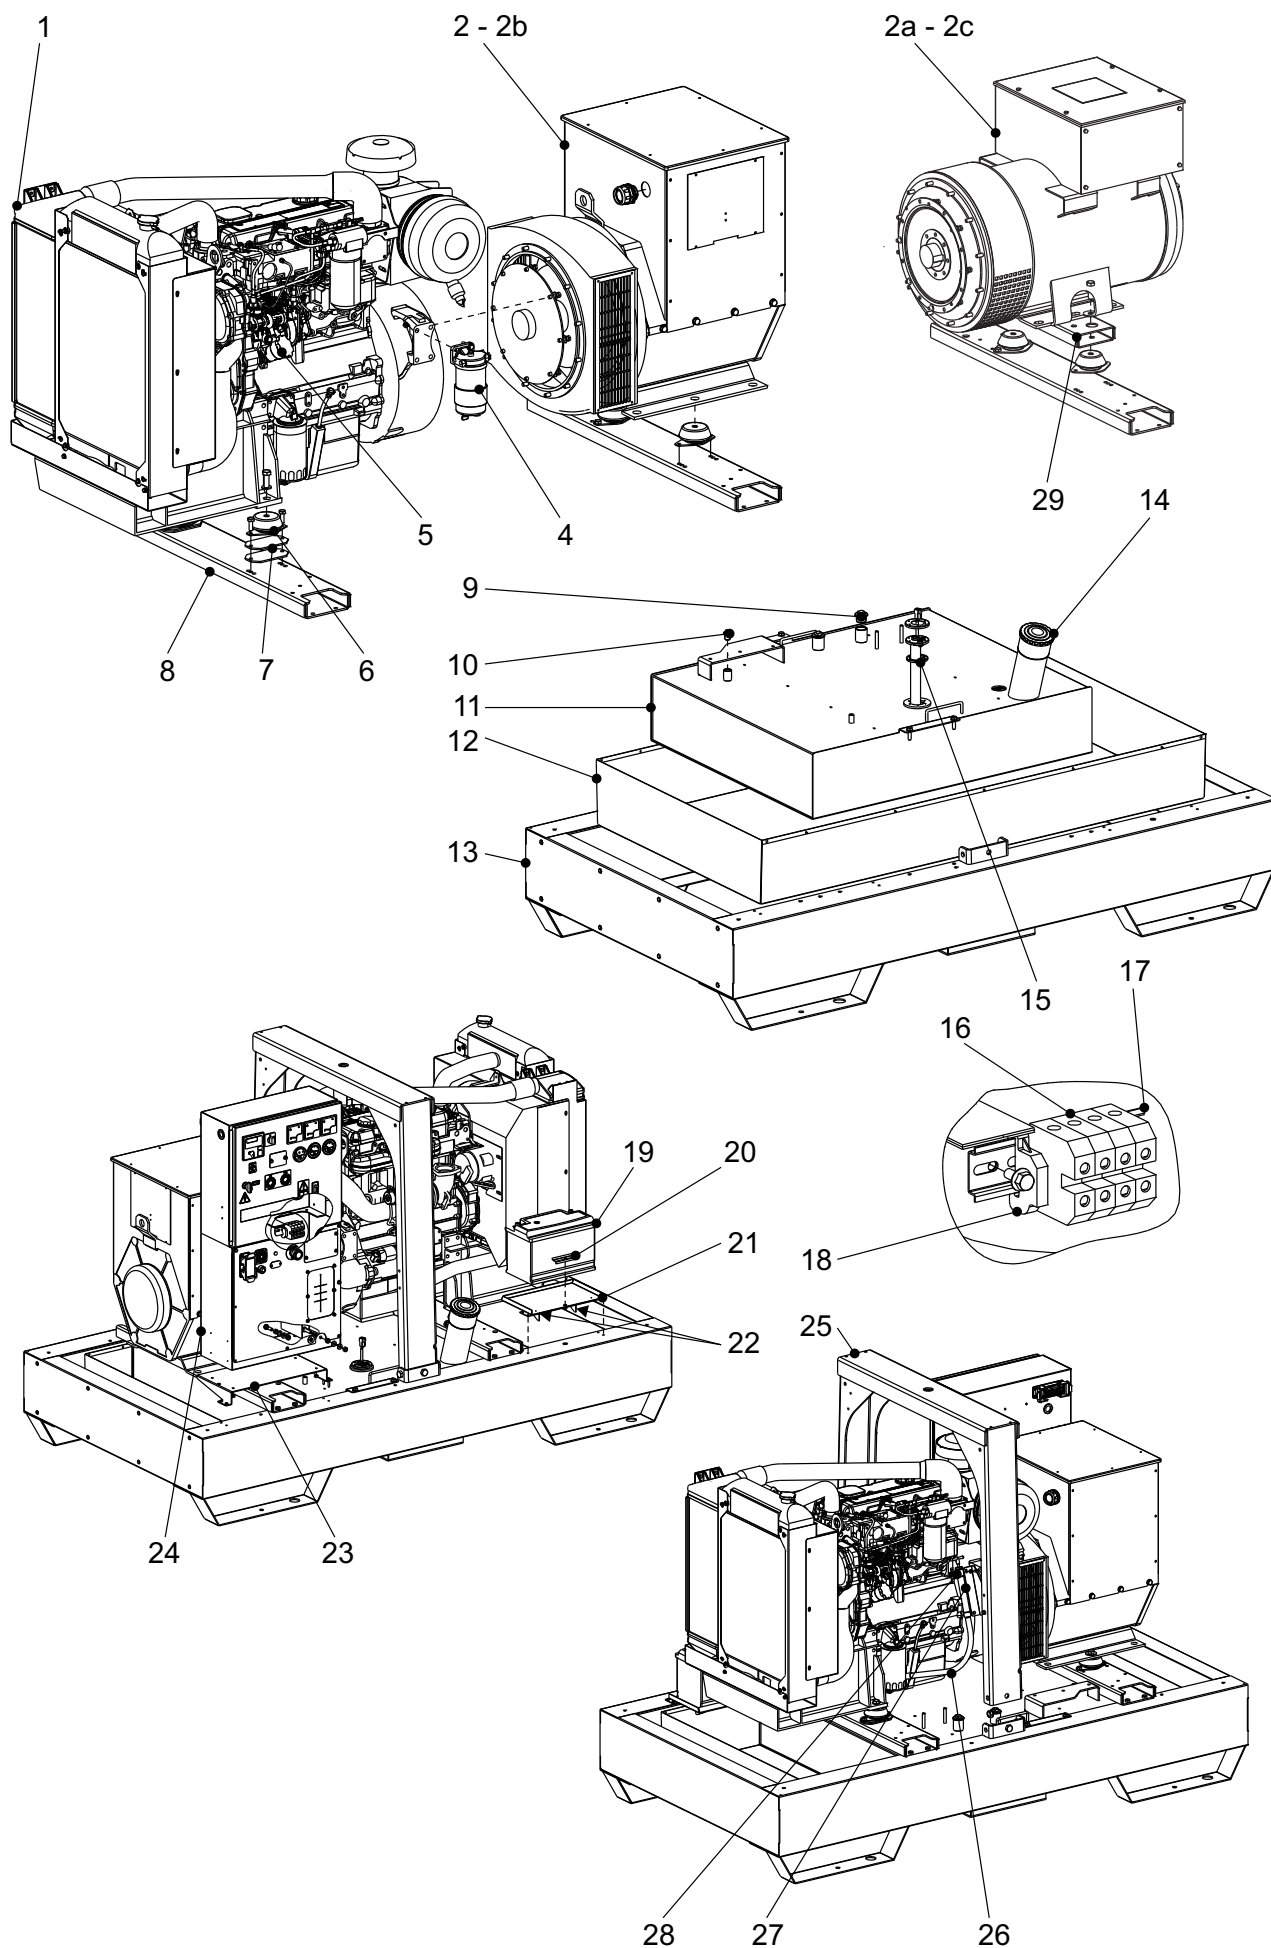

<i>Pos.</i>	<i>Cod.</i>	<i>Descr.</i>	<i>Note</i>
1	841162200	MOTORE PERKINS / <i>PERKINS ENGINE 1104C-44TAG2</i>	GE 115
1 a	840962200	MOTORE PERKINS / <i>PERKINS ENGINE 1104C-44TAG1</i>	GE 85
2	841153100	ALTERNATORE / <i>ALTERNATOR STAMFORD</i>	GE 115 PSX
2 a	841263100	ALTERNATORE / <i>ALTERNATOR MARELLI</i>	GE 115 PMSX
Da REV.1-09/09 Del.101/08-08/05/08			
2 b	840953100	ALTERNATORE / <i>ALTERNATOR STAMFORD</i>	GE 85 PSX
2 c	840873100	ALTERNATORE / <i>ALTERNATOR MARELLI</i>	GE 85 PMSX
Da REV.1-09/09 Del.101/08-08/05/08			
4	841162228	FILTRO PER GASOLIO / <i>FUEL FILTER</i>	
5	841162352	CARICAMENTO LATERALE OLIO / <i>SIDE OIL FILLER UNIT</i>	
6	105611550	ANTIVIBRANTE / <i>VIBRATION DAMPER</i>	
7	744502032	SPESSORE 4mm / <i>THICKNESS 4mm</i>	
8	841163101	TRAVERSA SUPPORTO ALTERNATORE /	
9	840951262	TAPPO 1" GAS (CONICO) / <i>TAP</i>	
10	842251262	TAPPO 1/2" GAS (CONICO) / <i>TAP</i>	
11	841162020	SERBATOIO CARBURANTE / <i>FUEL TANK</i>	
12	841161296	FONDO BASAMENTO / <i>BASE, BOTTOM</i>	
13	841161050	BASAMENTO / <i>BASE</i>	
14	842252026	TAPPO SERBATOIO / <i>FUEL TANK, CAP</i>	
15	764409975	SENSORE LIVELLO CARBURANTE / <i>FUEL LEVEL SENSOR</i>	
16	1240060	MORSETTO 35mmq / <i>TERMINAL 35mmq</i>	
17	1243020	GUIDA PER MORSETTIERA / <i>TERMINAL GUIDE</i>	
18	1241010	PIASTRINA / <i>PLATE</i>	
19	764409150	BATTERIA / <i>BATTERY 12V 100Ah</i>	
20	400409154	STAFFA FISSAGGIO BATTERIA / <i>BATTERY BRACKET</i>	
21	841161061	SUPPORTO BATTERIA / <i>BATTERY SUPPORT</i>	
22	107509905	SPINOTTO / <i>PLUG</i>	
23	841167102	SUPPORTO SCATOLA APP. ELETTR. / <i>SUPPORT, ELECTRICAL EQUIPMENT</i>	
24	841167004	SCATOLA APPARECCH. ELETTRICHE / <i>ELECTRICAL EQUIPMENT</i>	
25	841161100	ROLL BAR / <i>ROLL-BAR</i>	
26	841162212	TUBO SCARICO OLIO / <i>EXHAUST OIL PIPE</i>	
27	740352211	STAFFA SUPP.POMPA SCARICO OLIO / <i>BRACKET FOR OIL DISCHARGE PUMP</i>	
28	317802310	POMPA SCARICO OLIO / <i>EXHAUST OIL PUMP</i>	
29	841183101	TRAVERSA SUPPORTO ALTERNATORE / <i>ALTERNATOR SUPPORT BRACKET</i>	GE 85 / 115 PMSX
Da REV.1-09/09 Del.101/08-08/05/08			

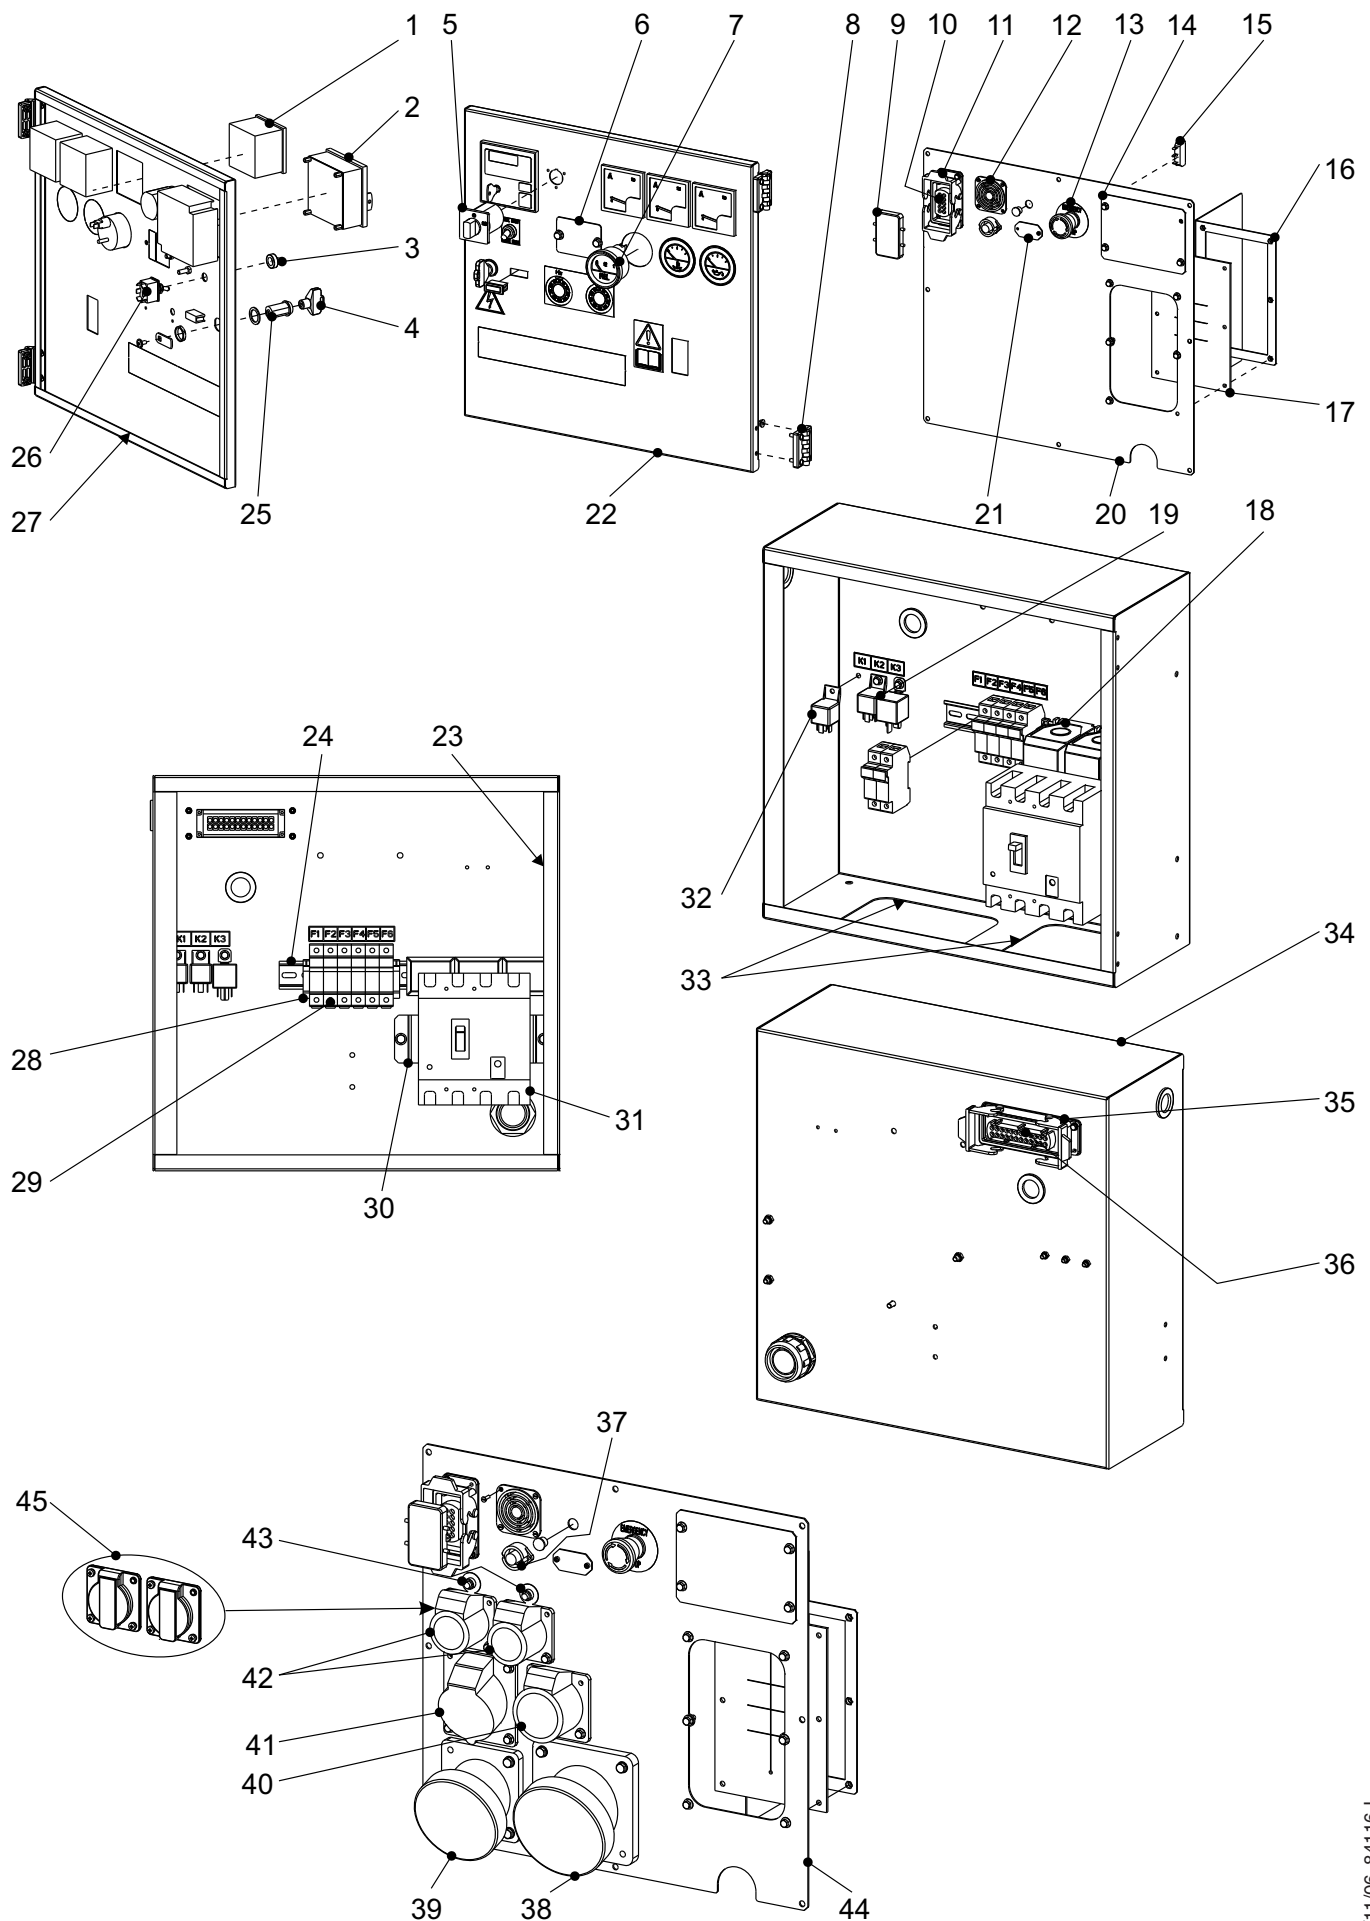


Pos.	Rev. Cod.	Descr.	Note
1	325507305	AMPEROMETRO / AMPEROMETER	
2	JK0029770	UNITA'CONTR. MOTORE (EP6) / ENGINE UNIT CONTROL EP6	
3	102042740	CAPPUCCIO / CAP	
4	744507057	CHIAVE SERRATURA QUADRO Elett. / ELECTRICAL BOARD KEY	
5	305717315	COMMUTATORE / COMMUTATOR	
6	325507027	COPERCHIETTO RELE DIFFERENZ. / RELAY COVER	
7	325507210	INDICATORE LIVELLO CARBURANTE / FUEL LEVEL GAUGE	
8	744508103	CERNIERA X COPERCHIO FRONTALE / LATCH X FRONT COVER	
9	105191560	FRUTTO PRESA CONNETTORE / SOCKET, EAS	
10	105191570	COPERCHIO PER PRESA EAS / BLIND PLATE, EAS SOCKET	
11	105191550	CUSTODIA PER PRESA EAS / BOX, EAS SOCKET	
12	315507215	AVVISATORE ACUSTICO / ACOUSTIC ALARM SYSTEM	
13	744507219	PULSANTE STOP D'EMERGENZA / EMERGENCY PUSH BUTTON STOP	
14	841167032	PIASTRA DI CHIUSURA / PLATE, LOCKSOCKET	
15	744507237	CONTATTO NC AGGIUNTIVO PER PULSANTE / SUPPLEMENTARY CONTACT FOR PUSH-KNOB	
16	841167074	CORNICE FISSAGGIO PANNELLO IN GOMMA / RUBBER FIXING FRAME	
17	841167075	PANNELLO IN GOMMA / RUBBER COVER	
18	325507306	TRASFORMATORE AMPEROMETRICO / AMOEROMETRIC TRANSFORMER	
19	317619199	RELE' 12V - 70A / RELAY 12V 70A	
20	840857009	PIASTRA APPARECCHIATURE ELETTRICHE / PLATE ELECTRICAL EQUIPMENT	
21	359257032	COPERCH. CHIUS.FORO SCALDIGLIA / COVER	
22	841167020	PANNELLO FRONTALE / FRONT PANEL	
23	306418310	GUARNIZIONE (L=MT.1) / PROTECTION GASKET (L=MT.1) (qm)	
24	1243020	GUIDA PER MORSETTIERA / TERMINAL GUIDE	
25	744508112	SERRATURA PER COPERCHIO FRONT. / FRONT COVER LOCK	
26	102013290	COMMUTATORE / COMMUTATOR	
27	309509005	GUARNIZIONE / GASKET (qm)	
28	1241010	PIASTRINA / PLATE	
29	107509045	PORTAFUSIBILE / HOLDER, FUSE	
30	841167036	STAFFA SUPPORTO INTERR. MAGNETOT. / BRACKET MAGNETO SWITCH	
31	841157325	INTERRUTTORE MAGNETOTERMICO / CIRCUIT BREAKER	
32	306479199	RELE' AVV. ELETTRICO / RELAY, ELECTRIC START	
33	107509005	GUARNIZIONE / GASKET	
34	841167010	SCATOLA ELETTRICA / ELECTRIC BOX	
35	744507170	CUSTODIA FISSA CONNETTORE / CONNECTOR HOUSING	
36	744507171	FRUTTO PRESA CONNETTORE / SOCKET, EAS	
37	107509903	PRESA / SOCKET	
38	746507270	PRESA CEE 400V 125A 3P+N+T / EEC SOCKET	
39	344027270	PRESA CEE 63A 400V 3P+N+T / EEC SOCKET	
40	305907270	PRESA CEE 16A 400V 3P+N+T / EEC SOCKET	
41	105111510	PRESA CEE 380V TRIFASE / EEC SOCKET THREE-PHASE 380V	
42	307017240	PRESA 220V 16A / EEC SOCKET	
43	155307107	DISGIUNTORE TERMICO 15A-250V / THERMAL SWITCH 15A-250V	
44	841167065	PANNELLO PORTA PRESE / SOCKETS HOLDER FRONT PANEL	
45	259107241	PRESE SCHUKO/SCHUKO SOCKETS	

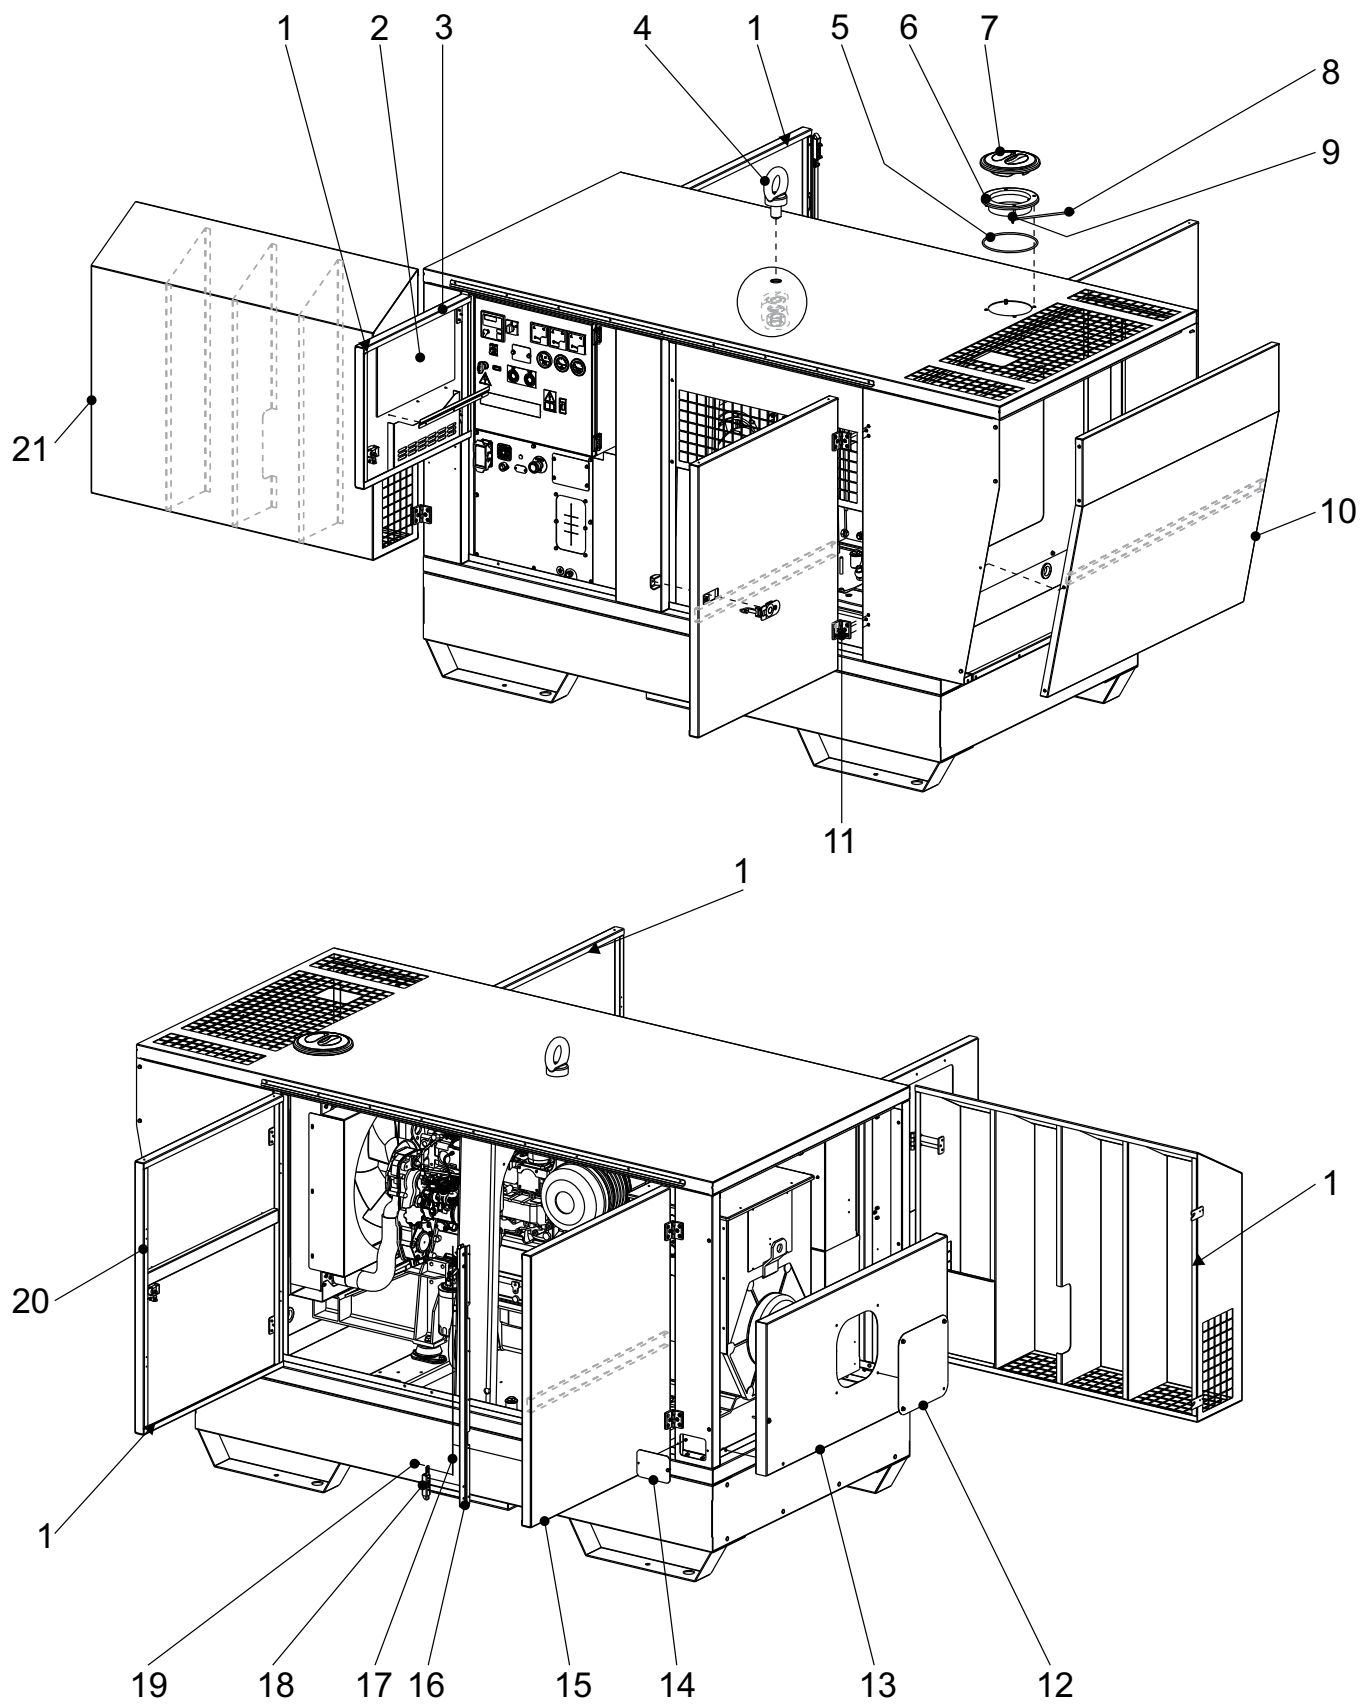


<i>Pos.</i>	<i>Rev. Cod.</i>	<i>Descr.</i>	<i>Note</i>
1	309509005	GUARNIZIONE	(qm)
2	841168080	SCHERMO PER PORTELLA	
3	841168426	FIANCATA LATO STRUMENTI	
4	6033050	GOLFARE	
5	1018130	ANELLO OR	
6	841658361	GHIERA PER COPERCHIO ERMETICO	
7	841658360	COPERCHIO ERMETICO	
8	841659357	TIRANTE IN GOMMA	
9	841659358	ANELLO DOPPIO	
10	841168035	CARENATURA POSTERIORE	
11	744508140	CERNIERA PER FIANCATA	
12	841258125	COPERCHIO MANUTENZIONE ALTERNATORE	
13	841168080	CARENATURA ANTERIORE	
14	741167032	PIASTRA DI CHIUSURA	
15	841168458	FIANCATA INTERMEDIA BATTENTE	
16	841168461	LISTELLO FERMO FIANCATA	
17	842258460	FILO ARMONICO	
18	842258163	CHIUSURA A CRICCHETTO	
19	105111450	MORSETTO	
20	841168428	FIANCATA INTERMEDIA	
21	841168220	CASSONETTO ASPIRAZIONE	

<i>Pos.</i>	<i>Rev. Cod.</i>	<i>Descr.</i>	<i>Note</i>
1	309509005	GASKET	(qm)
2	841168080	GLASS COVER	
3	841168426	COVER COMMANDS SIDE	
4	6033050	UP-EAVING RING	
5	1018130	OR RING	
6	841658361	FLANGE FOR AIR-TIGHT SEALED COVER	
7	841658360	ERMETIC COVER	
8	841659357	TIE ROD	
9	841659358	DOUBLE RING	
10	841168035	REAR COVER	
11	744508140	LATCH	
12	841258125	ALTERNATOR INSPECTION COVER	
13	841168080	FRONT COVER	
14	741167032	PLATE, LOCKSOCKET	
15	841168458	CENTRAL WING DOOR	
16	841168461	PANELIST FOR SIDE COVER	
17	842258460	HARMONIC WIRE	
18	842258163	JACK-GEAR LOCK	
19	105111450	TERMINAL	
20	841168428	MIDDLE COVER	
21	841168220	INDUCTION CASE	

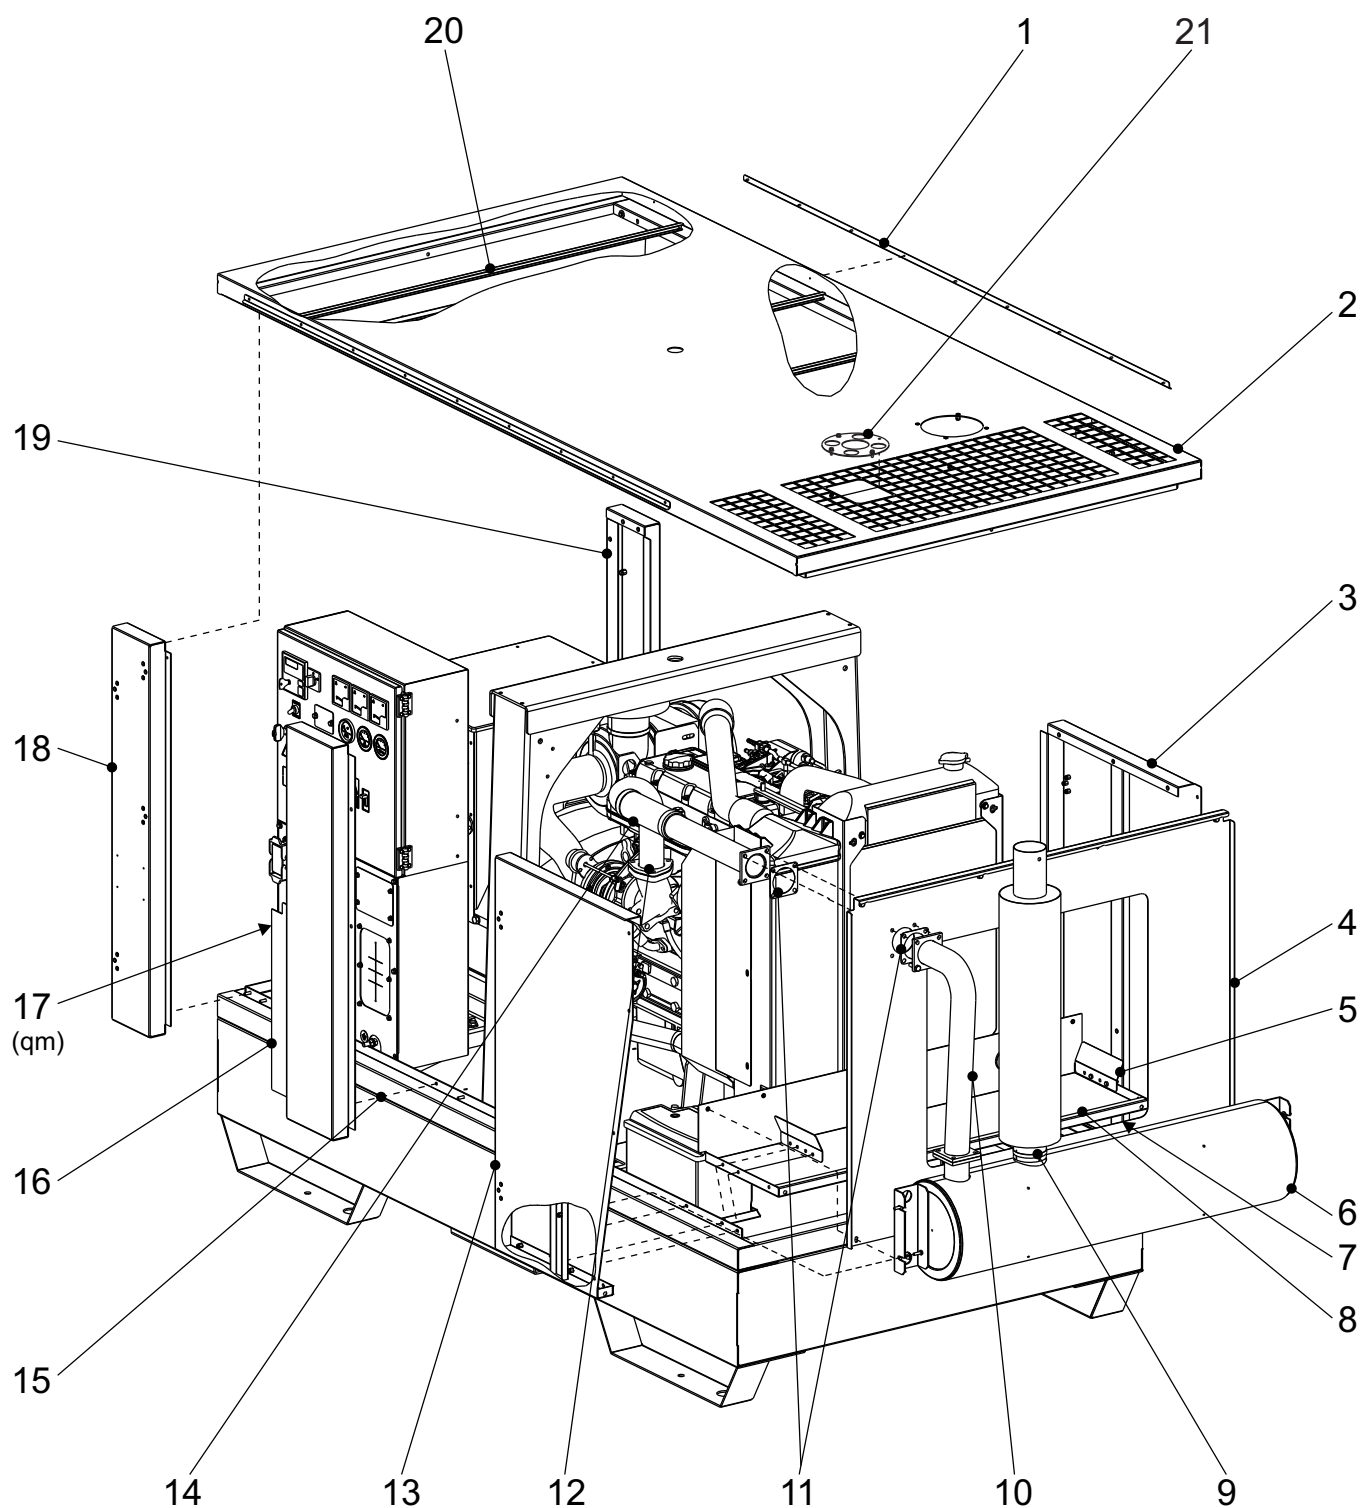

Pos.	Rev. Cod.	Descr.	Note
1	841168068	GOCCIOLATOIO	
2	841178091	CARENATURA SUPERIORE (COMPL.)	
3	841168025	FIANCATA POSTERIORE SINISTRA	
4	840858215	PARETE SCARICO ARIA MOTORE	
5	841168075	PIASTRA PARA ACQUA	
6	841252050	SILENZIATORE DI SCARICO	
7	105112270	GUARNIZIONE (L=MT.1)	(qm)
8	840858168	PANNELLO INFERIORE PER CASSONETTO SCARICO	
9	841172078	RACCORDO TUBO SCARICO	
10	841172081	TUBO SCARICO COLLEGAMENTO MARMITTA	
11	325252069	GUARNIZIONE	
12	840752069	GUARNIZIONE SCARICO MOTORE (fornita con motore)	
13	841168020	FIANCATA POSTERIORE DESTRA	
14	841162070	TUBO SCARICO	
15	841168340	CORNICE SUPPORTO CARENATURA	
16	841168015	FIANCATA CARENATURA DESTRA	
17	309509005	GUARNIZIONE	(qm)
18	841168003	FIANCATA CARENATURA DESTRA	
19	841168004	FIANCATA CARENATURA SINISTRA	
20	841168464	STAFFA FERMO FONO ASSORBENTE	
21	841252068	FLANGIA PER TUBO SCARICO	Da REV.1-09/09 Del.87/09-15/07/09

Pos.	Rev. Cod.	Descr.	Note
1	841168068	DRIPPER	
2	841178091	TOP COVER (COMPL.)	
3	841168025	REAR LEFT COVER	
4	840858215	ENGINE AIR EXHAUST SITE	
5	841168075	WATER BAFFLE BOARD	
6	841252050	EXHAUST MUFFLER	
7	105112270	STRIP, SEALING (L=MT.1)	(qm)
8	840858168	LOWER PANEL FOR AIR INLET BOX	
9	841172078	PIPE FITTING, EXHAUST PIPE	
10	841172081	EXHAUST PIPE FOR MUFFLER	
11	325252069	GASKET	
12	840752069	GASKET	
13	841168020	REAR RIGHT COVER	
14	841162070	EXHAUST PIPE	
15	841168340	SUPPORTING FRAME FOR COMPLETE COVER	
16	841168015	COVER RIGHT SIDE	
17	309509005	GASKET	(qm)
18	841168003	COVER RIGHT SIDE	
19	841168004	COVER LEFT SIDE	
20	841168464	SOUND-PROOF MATERIAL BRACKET	
21	841252068	EXHAUST PIPE FLANGE	From REV.1-09/09 Del.87/09-15/07/09

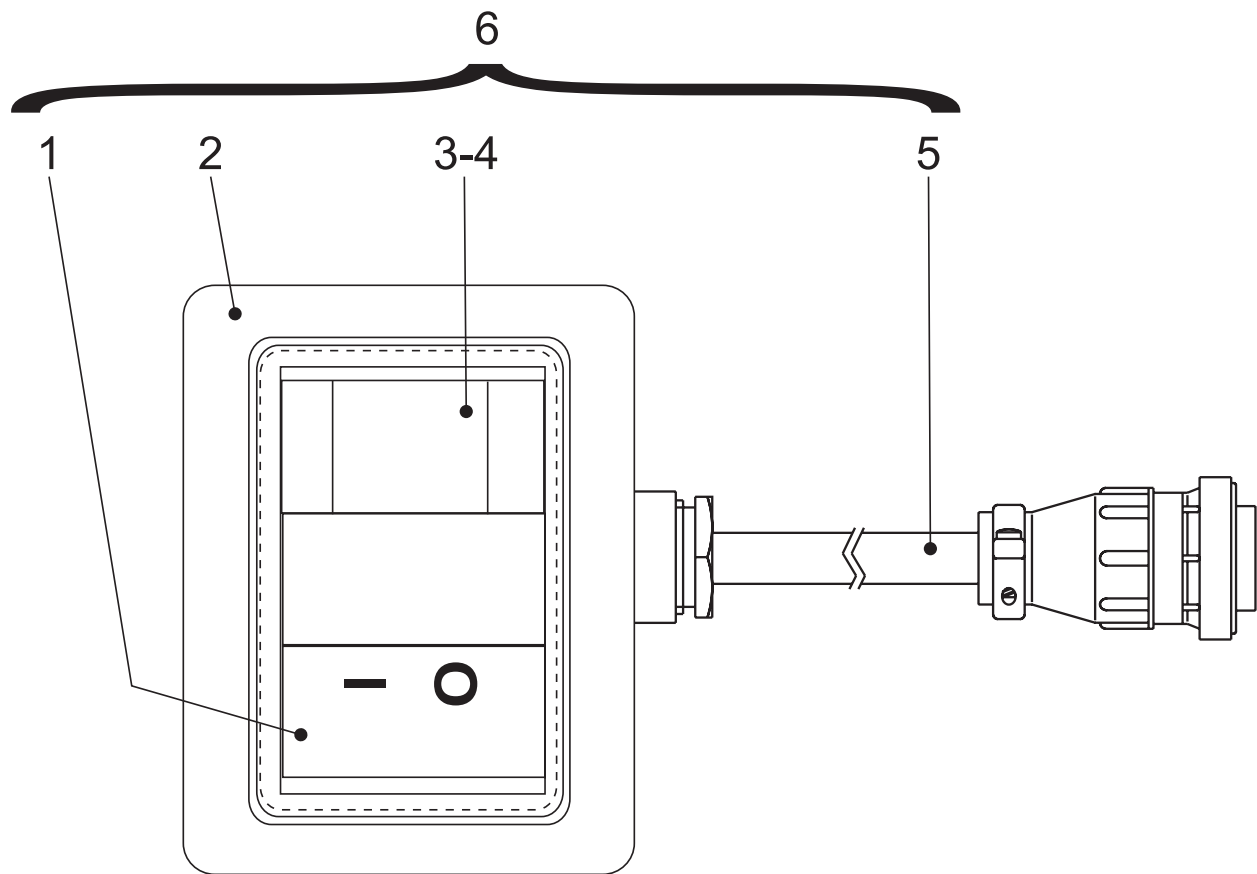

Pos.	Rev.	Cod.	Descr.	Descr.
1		930357219	INTERRUTTORE 2P 16A	INTERRUPTER 2P 16A
2		930359913	SCATOLA COMPLETA	CASE, COMPL.
3		930357227	LAMPADA 24V	WARNING LIGHT 24V
4		930357231	PORTALAMPADA SPIA ROSSA	WARNING LIGHT HOLDER
5		93035C060	GR. CAVI TCM	TCM CABLE KIT
6		930350000	TCM35 COMPLETO	COMPLETE TCM35