

M H - 5 1

CATALOGUE

SAFETY INSTRUCTIONS

PRECAUTIONS

SYSTEM CONNECTION

PANEL INSTRUCTION

REMOTE CONTROL

BASIC OPERATION

USB COPY

RADIO/AUDIO INPUT OPERATION

10-11 TROUBLESHOOTING GUIDE

SPECIFICATION

Thank you for purchasing this Osotto product. We trust that it will give you much pleasure, and long, reliable service. Please take the time to read these instructions carefully, and keep them safe for future reference.

Your new component system is not suitable for repair by the user. If you get a problem, please return it to the manufacturer or to a qualified service engineer for repair.

POWER

This unit is designed for use with AC Mains power at 220V.

VENTILATION

Please keep all vents clear to ensure that the unit does not overheat.

HEAT SOURCE

The machine should be kept away from heat sources, such as radiators and direct sunlight.

WATER AND MOISTURE

Don't use in humid environments, such as the bathroom or kitchen, or damp basements.

CLEANING

Before cleaning, please disconnect from the mains supply. Don't use liquid cleaners or corrosive fluid to clean the machine, just clean it with a soft cloth.

POWER CORD

If you won't be using your Osotto product for some time, please disconnect from the mains..

DISC TRAY DOOR

While closing the disc tray door, make sure that it's path of travel isn't blocked.

LOADING WEIGHT

Avoid placing items on top of this product..

CONNECTING OTHER EQUIPMENT

Before connecting other equipment to the CD Player, make sure to switch off the power. the power.**Laser Beam**
Never look at the laser unit in the CD player with naked eyes. You will seriously damage your eyesight.

DISC

Avoid using discs that are cracked, deformed or repaired. Doing so can harm the CD player and could invalidate your warranty.

MALFUNCTION REQUIRING MAINTENANCE

If the following problems occur, please disconnect from the mains and seek the advice of a qualified technician:

- A. The power cord or plug is damaged.
- B. Liquid or other foreign matters in the unit.
- C. The unit casing becomes broken

REPLACEMENT OF PARTS

The unit is not user serviceable, and if maintenance is required it should be entrusted to a qualified technician.

NOTE:

Please read the manual carefully before using the machine, and keep it safe for future reference.

1. When transporting the unit, use the original shipping carton and packing materials.
2. Don't place the CD Player near to heat sources, or in damp or humid locations.
3. The unit will give out heat, especially after long periods of use and at higher volumes. This is perfectly normal.
4. While not using the CD Player, please remove the disc and turn off the power.

LOCATION PRECAUTIONS

To avoid interference with other devices, it is best to avoid positioning your microsystem next to other devices such as your TV.

CLEANING PRECAUTIONS

1. Clean the external surfaces of your microsystem using a soft cloth.
2. If there is a stain on the unit, using a cloth with a little bit of diluted detergent to remove the stain. Don't use solvents or other chemicals, as these may damage the external casing.
3. To clean the CD laser, use a proprietary disk cleaning device according to the instructions provided by the manufacturer of the cleaning device.

NOTE: Only a qualified technician should undertake cleaning and adjusting interior parts.

DISC USAGE PRECAUTIONS

1. Hold the disk correctly – don't touch the surface of the disk!

2. Cleaning Disc: clean the disc from the center to outside with a soft cloth. If the sound quality was interrupted because of fingerprints or dust on the disc, try wiping it with a wet cloth and then with a dry cloth. Don't use solvents to clean the disc, as they can damage it.

3. Storing the disc in its case when not in use is the best way to ensure longevity.

BATTERY PRECAUTIONS

Incorrect use of batteries can lead to them leaking a corrosive acid, which will damage the remote.

1. Never short-circuit the +ve and -ve terminals.
2. Don't charge the battery, disassemble it or throw it into a fire.
3. Don't mix old and new batteries.
4. Don't leave damaged or dead batteries in the remote control.
5. If not using the remote control for a long time, remove the batteries.
6. If the remote doesn't work as expected, replace the batteries.
7. If battery fluid leaks, clean the battery case well before installing new batteries.
8. Always dispose of old batteries by recycling at an approved location. Most supermarkets offer this service.

REMOTE CONTROL PRECAUTIONS

1. If the remote sensor on the unit is in direct sunlight or bright light, it won't work as well as in low-light situations.
2. Always point the remote at the CD player system when making selections.
3. Don't drop the remote control or subject it to shock or vibration.
4. Don't allow the remote to come into contact with liquids.
5. Don't take the remote control apart.

NOTE:

1. For best results, operate within 7m range.
2. Remember to put the batteries into the remote before using it.

1.

FRONT PANEL FUNCTION

1
.
P
r
e
v
i
o
u
s
2
.
I

n
p
u
t
s
e
l
e
c
t
i
o
n
3
. P
o
w
e
r

4
. L
o
g
o
5
. V
o
l
u
m
e
6
. F
u
n
c
t
i
o
n
7
. S
e
a
r
c
h
8
. N

e
x
t
9
.
P
a
u
s
e
1
0
.
S
D
C
a
r
d
1
1
.
A
U
X

12.MIC1

1
3
.
D
V
D
d
o
o
r
1
4
.
M
I
C
2
1
5
.
E
a
r
p
h
o
n
e
1

6
.
U
S
B
I
n
p
u
t
1
7
.
C
l
o
s
e
/
O
p
e
n
1
8
.
T
o
n
e

REAR PANEL FUNCTION

(1) (2)

1
.
F
M
R
a
d
i
o
A
n
t
e
n
n
a
J
a

Note :

When connecting the speakers, be sure not to let the wires short-circuit. This can damage the unit and could invalidate your warranty.

When making connections with other components, please make sure that both units are switched off.

REMOTE CONTROL INSTRUCTION

1.POWER SWITCH

After connecting the speaker cables, press the POWER button on the front panel, and select radio or insert a CD Disk or USB to play.

POWER SWITCH

1.Power Standby Function key 2.Number Function key 3.Forward Function key 4.Reverse Function key
5.Play/Pause Function key 6.Stop Function key
7.FM Radio Function key 8.Single Copy Function key 9.Volume - Function key 10.Mute Function key

11.AUX Input Function key 12.All Copy Function key 13.Bass - Function key

2. VOLUME ADJUSTMENT

POWER SWITCH

14.Bass + Function key 15.Track Switching Function 16.Display Function key
17.Disc Chamber Function key 18.Go/To Function key 19.Previous Function key 20.Next Function key
21.Audition Function key 22.Radio Search Function key 23.Volume + Function key 24.USB Function
key
25.Treble + Function key 26.Treble - Function key
27.On-Screen Display Function key 28.Repeat Function key

Press on the front panel or VOL-/VOL+ on the remote control to adjust volume .

3. TONE SETUP

1. Bass Setup: Press BASS-/BASS+ on the remote control to turn down or up Bass (between -14 and +14)

2. Treble Setup: Press TREBLE-/TREBLE+ on the remote control to turn down or up Treble (between -14 and +14).

3. Dual Mono: Press MODE on the remote control, there are three kinds of sound output to be selected: MONO L, MONO R and STEREO.

4. Display Setup: Press DSP on the remote control, then the sound four kinds of different sound field to be chosen.

1.

4. CD PLAYER

Press POWER button on the front to switch the unit on, and press on the front panel or on the remote control to make the Disk tray open, then put Disc correctly, and press the
The Disc will start to play automatically after several seconds.

5. PLAY PAUSE STOP

While playing, press on the front panel or on the remote control to pause the disk. To recommence play, simply press the key once more.

While playing, press on the front panel or on the remote control to pause the disk. To recommence play, simply press the key once more.

6. PREVIOUS NEXT

While playing, press on the front panel or on the remote control to re-play the last track. While playing, press on the front panel or on the remote control to skip to the next track.

BASIC OPERATION:

When playing the chapters in USB or SD card, the other steps are the same as the operations of the DCD player.

7. USB Play

1. When no disc is in the CD PLAYER, inserting USB to the USB jack will cause the tracks on the USB to start playing automatically.

2. When disc and USB are in the CD PLAYER, the disc will be played first. If switching to USB CARD, press USB button on the remote control, then the disc will be stopped playing, and chapters on the USB will be played.

NOTE :

When playing the tracks on the USB, other operations are the same as for a disk.

8. USB COPY

1. While the CD Player is playing a CD disc, you can insert a USB stick into the USB jack, and press TRACK COPY on the remote control or ALL COPY to record.
2. While the CD Player is playing MP3 disc, you can insert a USB to USB jack, and press TRACK COPY to record.

SETUP

When you want to listen to a radio program, put the radio antenna into the jack on the rear panel, and select FM on the remote control. Use the SEARCH button on the remote to search all radio channels automatically between 87 MHz and 108 MHz. After searching, the radio channels will automatically be stored.

CONNECTION WITH OTHER AUDIO EQUIPMENT

When you connect another DVD or MP3 using the audio Aux input, press the AUX button on the remote control. You can press VOL-/VOL+ buttons on the panel or remote control to adjust the volume as normal.

FM ANT

AUX

BASIC OPERATION

1. When you are listening to radio program, press MODE button on the remote control, then you can swift the sound track between stereo and mono lang.
2. When you are listening to radio program, press on the remote control to the next channel; press on the remote control to the previous channel.
3. When you are listening to radio program, press on the remote control to search channels up and down.

LCD DISPLAYE

TROUBLE SHOOTING GUIDE

TECHNICAL SPECIFICATIONS

Problem	Cause	Solution		
No power	Unit not plugged in	Connect the power plug right		
No Sound	No Disc	Insert Disc		
No sound	Not connected to the right input	Connect to the right jack		
	Disconnected Audio Input cable	Connect the Audio Input cable		
		Volume is 0	Turn the volume up	
	No disc	Insert disc into the CD player		
	Disc is upside down	Turn disk over		
No picture			Disc doesn't contain images	Try an image disk
			Disc is dirty or damaged.	Clean disc
	Poor aim	Aim at the receiving window		
	The distance between the remote control and receiver is too far	Operate within 7m		
Remote control doesn't work			Obstruction between remote control and receiver	Remove the obstacle
			The batteries are old	Replace with new batteries

MP3 without sound or with noise	Disc has other file types	Skip those files
Can't play files in USB	No supported files on USB	Put the supported files onto the USB
	USB is damaged	Replace USB