

TD61-2472



WIRELESSIP5000 User's Manual

Hitachi Cable, Ltd.

1. NAMES & FUNCTIONS OF DEVICE PARTS	1
1.1. DISPLAYED ICONS	1
1.2. NUMBER PAD INPUT TABLE	3
1.2.1 Text input mode	3
2. APPLICATION.....	5
2.1. POWER ON	5
2.2. POWER OFF	5
2.3. CALL	6
2.4. RECEIVE.....	6
2.5. CONTACT LIST	7
2.5.1 New registration	8
2.5.1.1 Registration from telephone number	8
2.5.1.2 Registration from contact list menu	8
2.5.1.3 Registration from search results	10
2.5.1.4 Registration from a call log.....	11
2.5.1.5 Registration from IM.....	12
2.5.1.6 Registration from presence.....	13
2.5.2 Call from contact list	14
2.5.3 Group revision.....	15
2.5.4 Erase one item from contact list	17
2.5.5 Erase all.....	18
2.6. IM	19
2.6.1 Inbox	20
2.6.2 New	23
2.6.3 Drafts.....	25
2.6.4 Outbox.....	27
2.6.5 Delete All.....	29
2.7. CALL LOG	31
2.7.1 Details	32
2.7.2 Call log delete	32
2.7.3 Delete all data.....	33
2.7.4 Calling from the call log.....	34
2.8. PRESENCE	35
2.8.1 User list	35
2.8.2 User Registration.....	36
2.8.3 Block list	37
2.8.4 Block register	37
2.8.5 Status.....	39
2.9. BASIC SETTINGS MENU	40
2.9.1 Ringer/vibration	40
2.9.1.1 Distinctive Ringtones	41
2.9.1.2 Ringtones	41
2.9.1.3 Mode	42
2.9.1.4 LED.....	42
2.9.1.5 Volume adjustment	43
2.9.2 Caller ID.....	44
2.9.3 Service LED.....	44
2.9.4 Brightness adjustment	45
2.9.5 Security	46

2.9.6	Information display	47
2.9.7	Error Msg.....	49
2.9.8	Font size	49
2.9.9	Time setting.....	50
2.9.10	Language setting	52
2.9.11	Courtesy mode On/Off.....	53
2.9.12	KeyLock/KeyUnlock	54

3. VARIOUS OPERATION METHODS.....56

3.1.	HOLD FUNCTION	56
3.1.1	Hold.....	56
3.1.2	Hold release.....	56
	CALLING METHOD	57
3.1.3	Internal extension call	57
3.1.4	Outside-line call	57
3.1.5	184/186 call.....	58
3.1.6	Operation methods using call mode	59
3.1.6.1	Calling in call mode from the contact list	59
3.1.6.2	Calling in call mode from the incoming call log or outgoing call log.....	59
3.1.7	Redial	59
3.1.8	Speed dialing	60
3.1.9	Timer between digits.....	60

4. ACCESSORIES62

4.1.	ACCESSORY GUIDELINES.....	62
4.2.	ACCESSORIES COVERED	62
4.3.	AC POWER SUPPLY ADAPTOR.....	62
4.4.	USB CABLE (OPTION)	63
4.5.	INSTALLING THE BATTERY	63
4.6.	REMOVING THE BATTERY	63
4.7.	CHARGING WITH THE DESKTOP CHARGER	63
4.8.	CHARGING WITHOUT THE DESKTOP CHARGER	64
4.9.	LED	64

5. SAFETY INFORMATION65

5.1.	WARNING ABOUT EMERGENCY SERVICES	65
5.2.	WARNING ABOUT EXPLOSIVE GAS	65
5.3.	WARNING ABOUT THE IMPACT OF ELECTROMAGNETIC SIGNALS.....	65
5.4.	WARNING ABOUT BATTERY HANDLING	65
5.5.	BATTERY SAFETY ITEMS	65

APPENDIX SPECIFICATIONS66

1. Names & Functions of Device Parts

Figure 1 shows side and front diagrams of the WIRELESSIP5000.

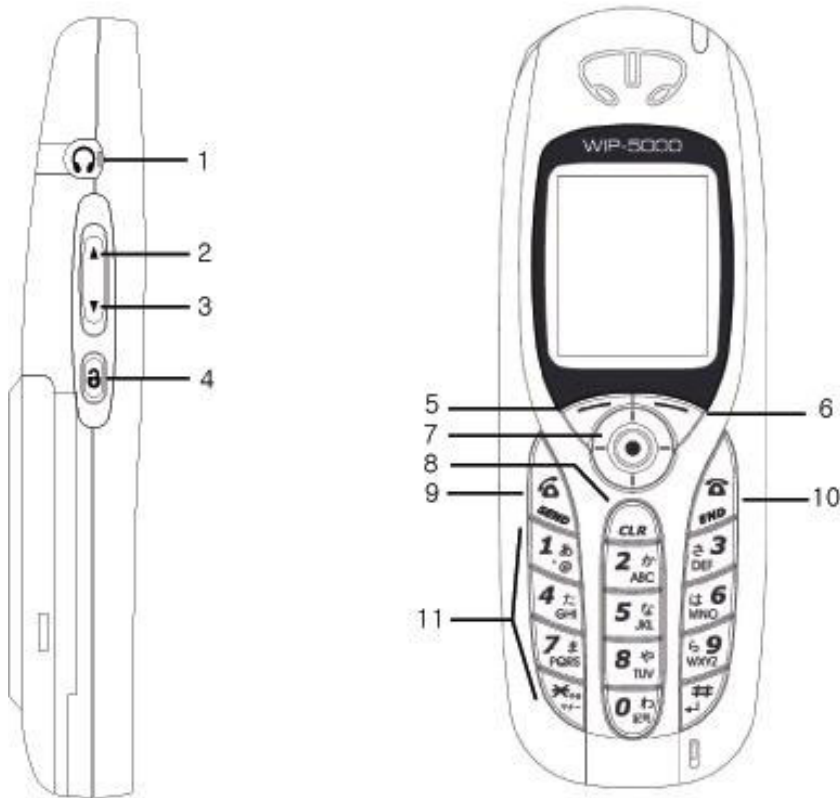 


Figure 1. WIRELESSIP5000 Appearance

1.1. Displayed icons










 
 





 

 

-
-  Shows the reception signal strength. The more lines, the better the signal.
 -  shows that the location is outside the service area or is an environment where the signals do not reach.
 -  Shows that the phone is On in silent mode. This is displayed when the ringer is set to silent.
 -  Shows that vibration mode is On. Sets the incoming call ringer to vibration
 -  Shows that the alarm is On. Displayed when the Alarm clock function is on.
 -  Displayed when there is an unread message.
 -  Shows that the keys are locked. When this mode is On, key operation is disabled.
 -  Shows the remaining battery capacity. The more lines, the more capacity remains.
-

Table 1. Key Operation

No.	Key	Names and functions
1		Headphone jack
2		Volume Up: Increases the headphone/earpiece/ringer volume.
3		Volume Down: Decreases the headphone/earpiece/ringer volume.
4		Key lock
5		LeftSoft key
6		RightSoft key
7		Multi-function key: Enter/Up/Down/Left/Right Standby:  Incoming call log Standby:  Outgoing call log
8		Clear Text editing: Backspace Text editing: Press and hold down to erase all the characters. Viewing menu: Returns to previous screen
9		Calling: Makes/answers a call Press and hold down to redial the last number dialed.
10		End/Power off During call: Cuts off the call. Viewing menu: Menu erase Press and hold down to switch the power On/Off
11	 , ...	Number pad (0-9, *, #): Inputs numbers and letters for dialing etc. Also used for menu shortcuts. Standby *: Press and hold down to switch the courtesy mode.

1.2. Number pad input table

IP address input mode		Text input mode	
Key	Character assignments	Key	Character assignments
1	1	1	1 / ,
2	2	2	2 a b c 2 A B C
3	3	3	3 d e f 3 D E F
4	4	4	4 g h i 4 G H I
5	5	5	5 j k l 5 J K L
6	6	6	6 m n o 6 M N O
7	7	7	7 p q r s 7 P Q R S
8	8	8	8 t u v 8 T U V
9	9	9	9 w x y z 9 W X Y Z
*	.(dot)	*	. * ! ? [] ^ _ ` { } ~
0	0	0	0 @ space -
#		#	: # ; \$ % & ' () + < = >

1.2.1 Text input mode

With the WIRELESSIP5000, you can use the number pad to input letters.

 
 
- 1 On the input screen, you use the LeftSoft key to switch the input mode (uppercase/lowercase/special characters).



* The mode switching depends on the item being input.

Example: For an item for which only numbers and English letters can be input


 


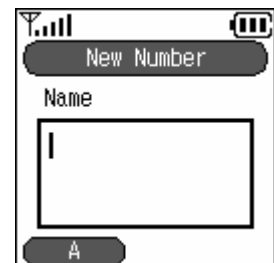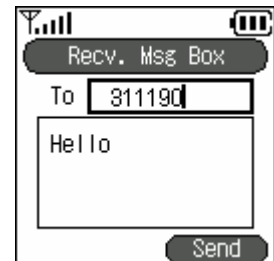
Example: For an item for which numbers and English letters and Japanese characters can be input

 
 
 




2 When symbols are selected, you can switch the symbol type with the   keys.




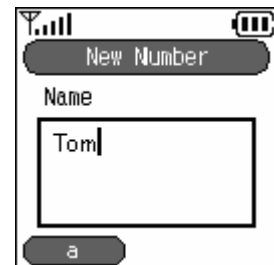 
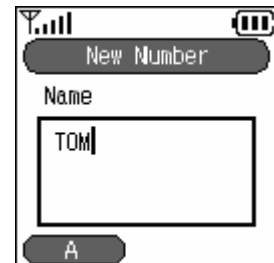 
Select a character with the   keys.

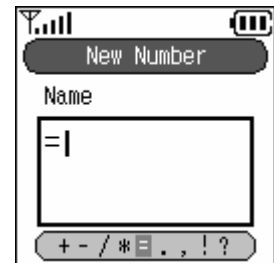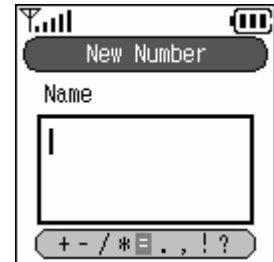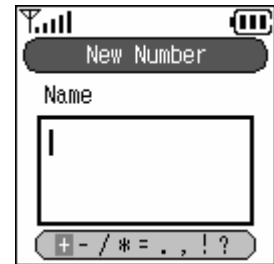
Press the  key to confirm the character.

 


3 When hiragana syllabic letters are selected, after input you can convert to kanji ideograms with the   keys.

Press the  key to confirm the character.



4 To delete the input character, press the  key.

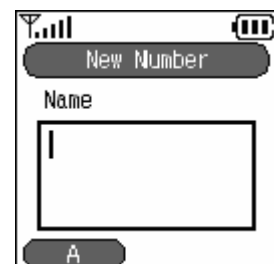


2. Application

2.1. Power ON

Switching on the power for the phone

- 1 With the power Off, if you hold down the **End** key for at least 1 second, a screen like that in the figure on the right is displayed and the power comes On.

*The messages "Waiting...", "Loading...", and "Running..." are displayed in order.



Loading...

2.2. Power OFF

Switching off the power for the phone

- 2 With the power On, if you hold down the **End** key for at least 1 second, a screen like that in the figure on the right is displayed and the power goes Off.




Note! After you switch off the power, you can not switch it back on again for 3 seconds.



Good Bye..!


2.3. Call




Inputting the telephone number and making a call

1	<p>If a set telephone number is shown on the display, you can make a call.</p> <p>Note! If the telephone number is not set correctly, "NotRegister" or "Network Fail" is displayed.</p>	
2	<p>Input the telephone number, then press the Send key.</p> <p>If you succeed in placing the call, you can hear the ringer at the other end.</p>	
3	<p>When the other party answers, a screen like that in the figure on the right is displayed, so during the call you can check the call duration.</p>	

2.4. Receive


Receiving a call.

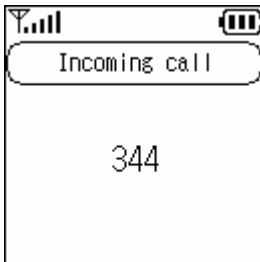1	<p>If a set telephone number is displayed on the screen, you can receive a call.</p> <p>Note! If the telephone number is not set correctly, "NotRegister" or "Network Fail" is displayed.</p>	
---	---	---

<p>2</p>	<p>When a call comes in, the other party's telephone number is displayed on the screen.</p> <p>If their name is registered in the contacts list, their name is displayed above the telephone number.</p> <p>You can answer the incoming call by pressing the Send key.</p> <p>* During call reception, "Receiving" is displayed on the screen.</p> <p>* Pressing the End key during an incoming call ends that call.</p>	
<p>3</p>	<p>When you answer an incoming call, a screen like that in the figure on the right is displayed, so during the call you can check the call duration.</p>	
<p>4</p>	<p>To cut off the power, press the End key.</p> <p>When the call ends, a screen like that in the figure on the right is displayed.</p>	

2.5. Contact list

Searching, adding to, and editing the contact list

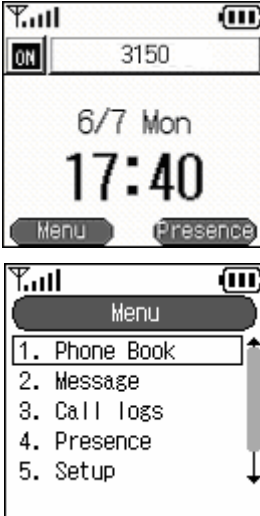 
<p>1</p>	<p>Press the LeftSoft key to select the menu item.</p> <p>The screen in the figure on the right (second line) is displayed.</p> <p>Either press the "1" on the number pad or select "1. Contact list" with the △ ▽ keys, then press the ⊙ key.</p>	
-----------------	--	---

2.5.1 New registration

 
2.5.1.1 Registration from telephone number

Inputting a telephone number to register it into the contact list

- 1** Input the telephone number, then press the **LeftSoft** key to select the sub-menu and select "1. Save".

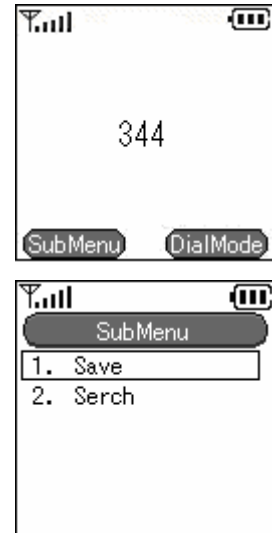

 
- 2** Please enter your information. (Input the necessary information (name, kana syllabic letters for name pronunciation, group, speed dialing number), then press the **OK** key to save this information.

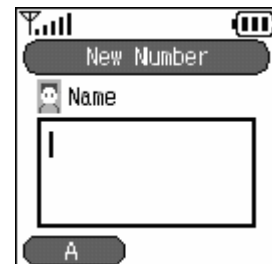



2.5.1.2 Registration from contact list menu

Registering information into the contact list from the new registration menu

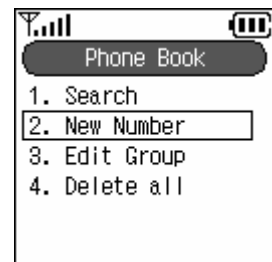- 1** From the contact list menu, select "2. New".



- 2 Please enter your information. (Input the necessary information (name, kana syllabic letters for name pronunciation, group, speed dialing number), then press the  key to save this information.

If you press the  key without inputting a telephone number, the <Warning> message in the figure on the right is displayed.

 
 
 
 


2.5.1.3 Registration from search results

 
Registering into the contact list from search results

- 1 Displaying the search results. (See the section on searches.)

Select the number you want to register, press the **LeftSoft** key to select the sub-menu, and select "1. Add".

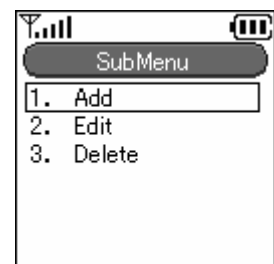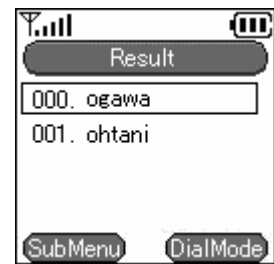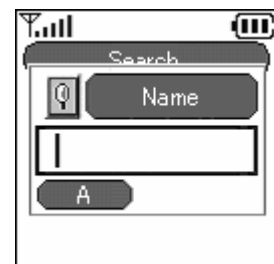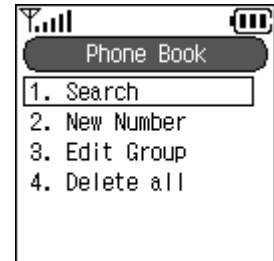

 
 
- 2 Input the information. Input the necessary information (name, kana syllabic letters for name pronunciation, telephone number, group, speed dialing number), then press **Enter** to save this information.

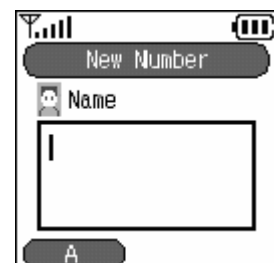

2.5.1.4 Registration from a call log

Registering into the contact list from the call log.

- 1 Display the call log. (See the section on the call log.)
 Select the number you want to register, press the **LeftSoft** key to select the sub-menu, and select "1. Save".

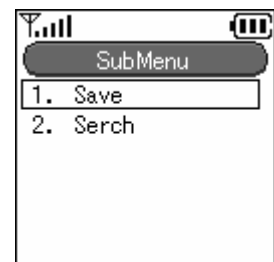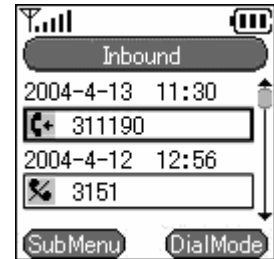

 
 
- 2 Input the information. Input the necessary information (name, kana syllabic letters for name pronunciation, telephone number, group, speed dialing number), then press **Enter** to save this information.



 
2.5.1.5 Registration from IM


Registering into the contact list from the IM Inbox, drafts, or Outbox.

 
- 1 Display the IM menu. (See the section on IM.)
Select "1. Inbox", "2. Drafts", or "3. Outbox".

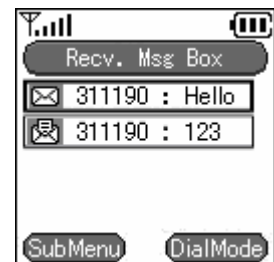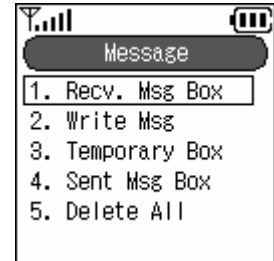

After selecting the message to register from, press the **LeftSoft** key to select the sub-menu, then select "1. Save".

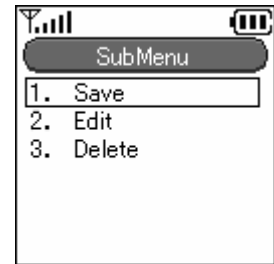

 
 
- 2 Input the information. Input the necessary information (name, kana syllabic letters for name pronunciation, telephone number, group, speed dialing number), then press  to save this information.

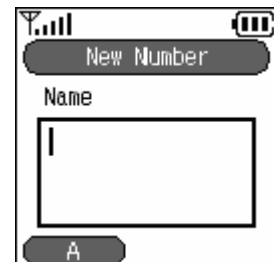

 
2.5.1.6 Registration from presence


Registering into the contact list from the presence user list or block list.

 
- 1 Display the presence menu. (See the section on presence.)
Select "1. User list" or "2. Block list".

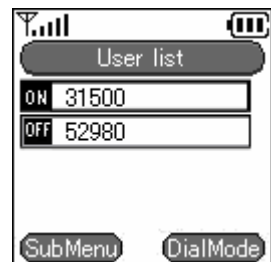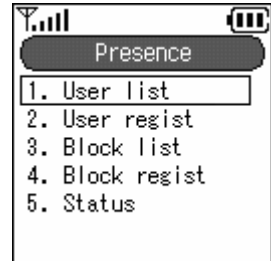

After selecting the user you wish to register, press the **LeftSoft** key to select the sub-menu, then select "1. Save".

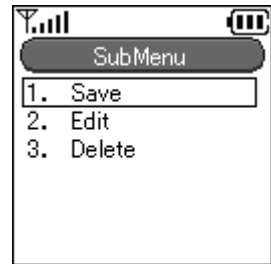




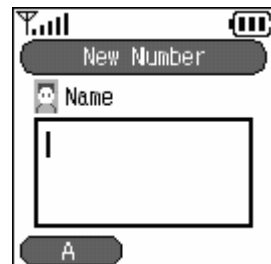


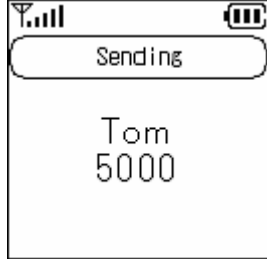


- 2 Input the information. Input the necessary information (name, kana syllabic letters for name pronunciation, telephone number, group, speed dialing number), then press  to save this information.

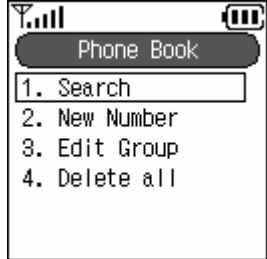





2.5.2 Call from contact list

Making a call from the contact list.

<p>1</p>	<p>From the contact list menu, select "1. Search".</p>	
<p>2</p>	<p>There are the following four methods for finding a telephone number.</p> <ul style="list-style-type: none"> (1) By speed dial number (2) By name (3) By telephone number (4) By group <p>The search results are displayed as in the figure on the right.</p> <p>Note! You can search without inputting the entire search text.</p> <p>Example: Suppose that the names "Ogawa" and "Ootani" are registered.</p> <p>In this case, if you input "o", then press the  key, both "Ogawa" and "Ootani" are displayed.</p>	 
<p>3</p>	<p>If you select a name then press the  key, detailed information is displayed.</p>	
<p>4</p>	<p>Press the  key or the  key to make the call.</p>	

 
 
2.5.3 Group revision

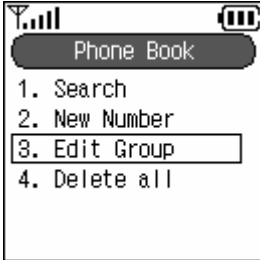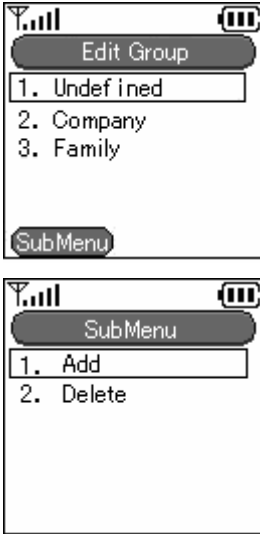Adding and deleting group names.

<p>1</p>	<p>From the contact list menu, select "3 Revise group".</p>	 <p>The screenshot shows a mobile phone interface with a signal strength indicator and a battery icon at the top. The main menu is titled "Phone Book" and contains four numbered options: "1. Search", "2. New Number", "3. Edit Group" (which is highlighted with a white background), and "4. Delete all".</p>
<p>2</p>	<p>" 1.The default is that groups can not be revised or erased. You can create up to 10 groups.</p> <p>To add a group, press the LeftSoft key to select the sub-menu, then select "1. Add".</p>	 <p>The first screenshot shows the "Edit Group" screen with three options: "1. Undefined", "2. Company", and "3. Family". Below the list is a "SubMenu" button. The second screenshot shows the "SubMenu" screen with two options: "1. Add" (highlighted) and "2. Delete".</p>
<p>3</p>	<p>The figure on the right shows the addition of a group named "WIP". To save the newly added group and return to the contact list menu, press the  key.</p>	 <p>The screenshot shows the "Add" screen within the "Edit Group" menu. It features an "Add" button at the top, a text input field containing "WIP", and a "A" button below the field. A "SubMenu" button is located at the bottom of the screen.</p>

4 To delete a group, select the group to delete, press the **LeftSoft** key to select the sub-menu, then select "2. Delete".

* After the deletion completion message is displayed, the display returns to the contact list menu.

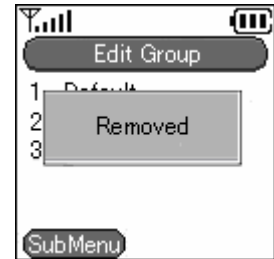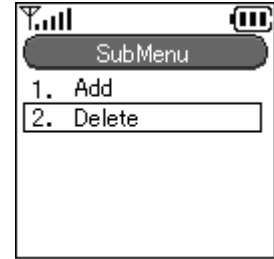

 
5 To change a group (name), select the group to change, then press the **Call** key. Edit according to Step 3. After this, when you press the **Call** key and save the new group name, the display returns to the contact list menu.



2.5.4 Erase one item from contact list

 
 
Deleting one data item from the contact list.

- 1** From the contact list menu, select "1. Search".

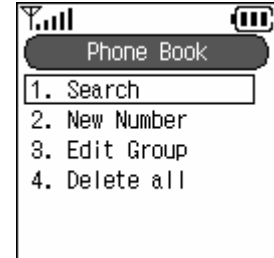 




- 2** Search for the telephone number you want to delete. (See the section on calling from the contact list.)

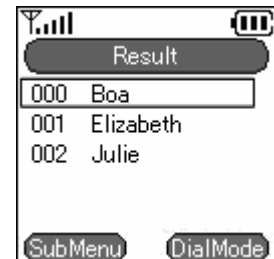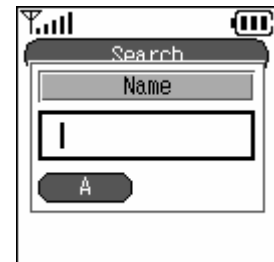Note! For Version 1.4.3, you can not delete through a search from "1. Speed dialing number" and "3. Telephone number".

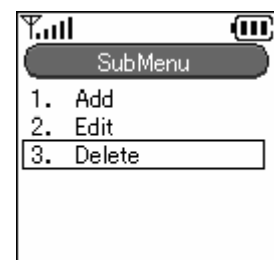 


Select the telephone number to delete, then press the **LeftSoft** key to select the sub-menu, then select "3. Delete".



- 3** A confirmation message is displayed. With the   keys select either "Yes" or "No".

 
If you select "Yes", the "Deletion complete" message is displayed immediately, then the display returns to the contact list menu.

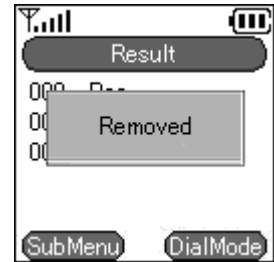



2.5.5 Erase all

Deleting all the data in the contact list.

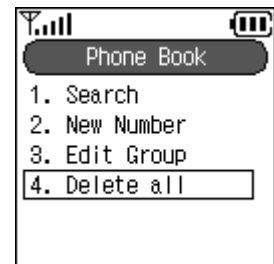- 1** From the contact list menu, select "4. Delete all".



- 2** A confirmation message is displayed. With the   keys, select either "Yes" or "No".



- 3** If you select "Yes", the process for deleting the entire contact list starts.

The "Deletion complete" message is displayed immediately, then the display returns to the contact list menu.



 
2.6. IM

Displays the mail menu.

- 1** Press the **LeftSoft** key to select the menu item.

Select "2. IM".

* With some connection equipment, this is not possible.

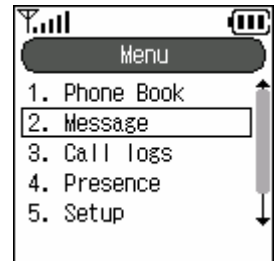 


2.6.1 Inbox

Displays, edits, and deletes received messages.




- 1** From the IM menu, select "1. Inbox".

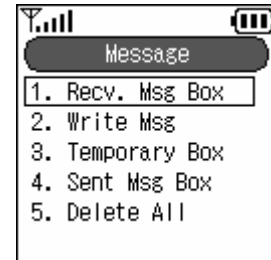

When a message is displayed, the screen becomes as in the figure on the right.

 



- 2** If there is an unread message, a screen is displayed showing the number of unread messages.

After this screen goes out, a list of the unread messages is displayed.


If you do not press the Enter key , the selected message automatically scrolls horizontally to display the entire message. Alternatively, you can use the  or  key to select the next message up or down.

To check a message manually, use the   keys.

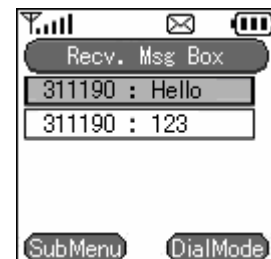

- 3** If you press the  key with the message selected in Step 2, a screen like that in the figure on the right is displayed.

 
 
If you do nothing with the display screen, the message is automatically scrolled vertically.



You can also use the  or  key to check a message manually.

* The screen contents include the date, telephone number, and message contents.

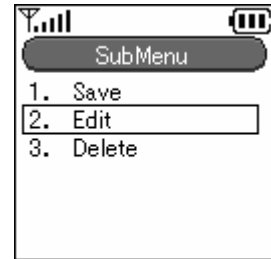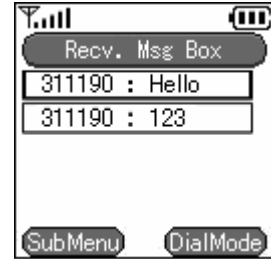

 
 
- 4 To edit a received message, select that message, press the **LeftSoft** key to select the sub-menu, then select "2. Edit".



The screen becomes like the figure on the right, so with the   keys move to the input column you want to edit and then edit it.



- 5 To delete a message, select the message to delete, press the **LeftSoft** key to select the sub-menu, then select "3. Delete".

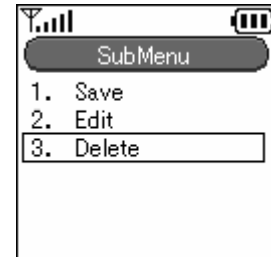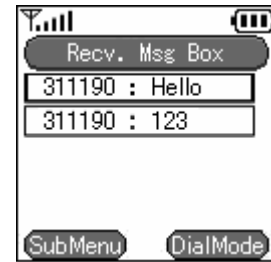





The screen in the figure on the right (3rd line) is displayed.

Select whether or not to delete with the **Left** **Right** keys, then press the **Enter** key to finalize the deletion.






2.6.2 New

Writing and sending a new message.

<p>1</p>	<p>From the IM menu, select "2. New".</p>	 <p>The screenshot shows a mobile phone screen with a status bar at the top. Below the status bar is a header labeled 'Message'. A list of options is displayed: '1. Recv. Msg Box', '2. Write Msg' (which is highlighted with a white background), '3. Temporary Box', '4. Sent Msg Box', and '5. Delete All'.</p>
<p>2</p>	<p>Input the telephone number to send to.</p>	 <p>The screenshot shows the 'Write Msg' screen. The 'To' field contains the number '311190'. Below the 'To' field is a large empty text input area. At the bottom of the screen, there are two buttons: '1' and 'Send'.</p>
<p>3</p>	<p>Input the message with the number keys and the LeftSoft key.</p>	 <p>The screenshot shows the 'Write Msg' screen. The 'To' field contains '311190'. The message input area now contains the text 'WiFi'. At the bottom, the buttons are labeled 'a' and 'Send'.</p>
<p>4</p>	<p>Send the message with the RightSoft key..</p> <p>The processing during sending is displayed as in the figure on the right.</p> <p>The "Message sent" message screen is immediately displayed.</p>	 <p>The first screenshot shows the 'Write Msg' screen with a grey box in the center that says 'Sending Message...'. The 'To' field still shows '311190' and the buttons are 'a' and 'Send'. The second screenshot shows the same screen, but the grey box now says 'Message has been sent.'.</p>






- 5 After the "Message sent" message screen is immediately displayed, a screen is displayed to confirm whether or not you want to save the message.

To save the sent message, select "Yes" with the   keys, then press the  key...

 
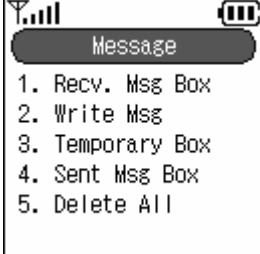 


2.6.3 Drafts

An unsent message is stored temporarily.

 
1	From the IM menu, select "3. Draft".	
2	<p>If you are not sending the message right away, to save it for later use, press the End key.</p> <p>To save the message, select "Yes" with the ◀▶ keys, then press the ⊙ key.</p>	  
3	<p>If you do not press the ⊙ key, the selected message is automatically scrolled horizontally to display the entire message. Alternatively, you can use the ▲▼ key to select the next message up or down.</p> <p>To check a message manually, use the ◀▶ keys.</p>	

- 6** To delete a "draft", press the **LeftSoft** key to select the sub-menu, then select "3. Delete".

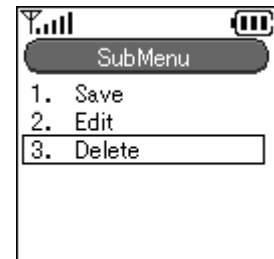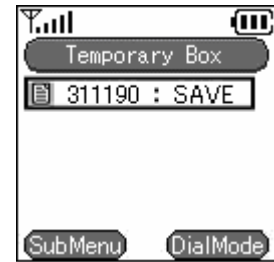

The screen in the figure on the right (3rd line) is displayed.

 
Select whether or not to delete with the **Left** **Right** keys, then press the **Enter** key to finalize the deletion.

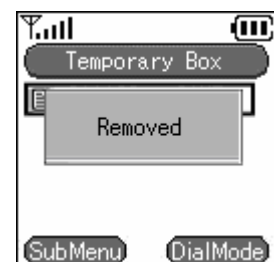







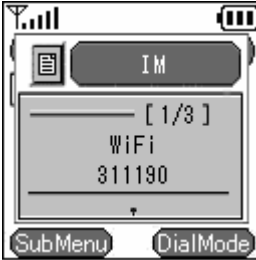


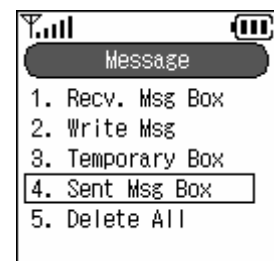


2.6.4 Outbox

 
 
Displaying, editing, deleting, and re-sending of sent messages

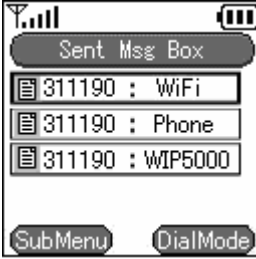- 1** From the IM menu, select "4. Outbox".






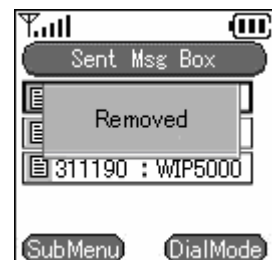 
<p>2</p>	<p>Alternatively, you can use the  or  key to select the next message up or down. The selected message is automatically scrolled horizontally to display the entire message.</p> <p>To check a message manually, use the   keys.</p>	
<p>3</p>	<p>When you select the message and press the  key, a screen like that in the figure on the right is displayed.</p> <p>You can also use the  or  key to check a message manually.</p> <p>* The screen contents include the date, telephone number, and message contents.</p>	
<p>4</p>	<p>To edit a send message, select that message, press the LeftSoft key to select the sub-menu, then select "2. Edit".</p> <p>The screen becomes as in the figure on the right, so with the   keys, move to the input column you want to edit and edit it.</p>	

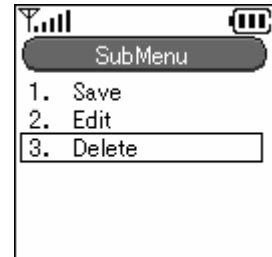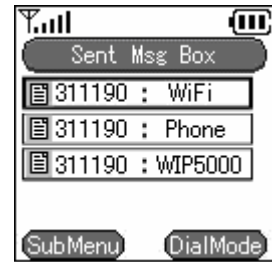- 5** To delete a send message, select that message, press the **LeftSoft** key to select the sub-menu, then select "3. Delete".



The screen in the figure on the right (3rd line) is displayed.

 
Select whether or not to delete with the   keys, then press the  key to finalize the deletion.









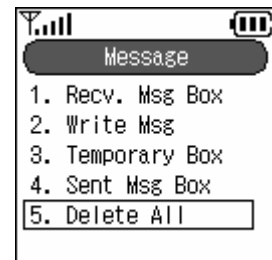


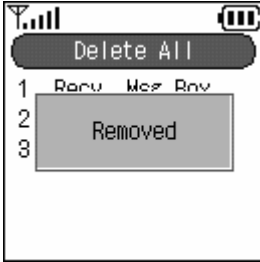


2.6.5 Delete All

Deleting all the messages from the Inbox, drafts, and Outbox.

- 1** From the IM menu, select "5. Delete all".



<p>2</p>	<p>To delete all the messages in the Inbox, either press the "1" on the number pad or select "1. Inbox", then press the  key.</p>	
<p>3</p>	<p>To delete all the messages in "Drafts", either press the "2" on the number pad or select "2. Drafts", then press the  key.</p>	
<p>4</p>	<p>To delete all the messages in the Outbox, either press the "3" on the number pad or select "3. Outbox", then press the  key.</p>	
<p>5</p>	<p>When you select one of these three menu items, a screen like that in the figure on the right is displayed asking you whether or not to delete the messages selected.</p> <p>To delete them, select "Yes" with the   keys, then press the  key.</p> <p>When you select "Yes", the message deletion process starts.</p> <p>The "Deletion complete" message is displayed.</p>	  

2.7. Call log

 
Displays the outgoing call log and the incoming call log.

- 1** Press the **LeftSoft** key and select the menu item.

A screen like that in the figure on the right is displayed.

Either press the "3" on the number pad or select "3. Call logs", then press the **OK** key.

* When on standby, you can also display the incoming call log with the **LeftSoft** key and the outgoing call log with the **RightSoft** key.

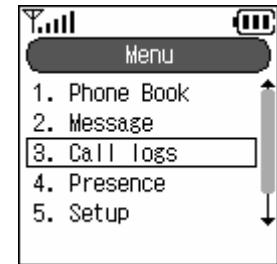



 
 
- 2** The call log menu has the "Incoming call log", "Outgoing call log", and "Delete all data" items.

Either press the "1" on the number pad or select "1. Incoming call log", then press the **OK** key.

The incoming call list is displayed. If a name is set for a telephone number, that is displayed. If not, the telephone number is displayed.

* The date and time the call came in are displayed above the name/telephone number.


-  Incoming call log
-  Missed call log

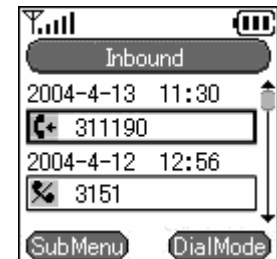 
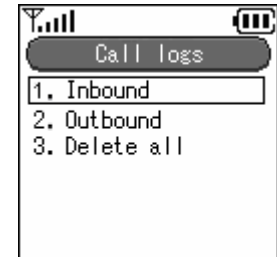 


- 3 " 2.Select "Outgoing call log".

The name or telephone number called is displayed in the same way as for the incoming call log.




* The date and time the call was made are displayed above the name/telephone number.

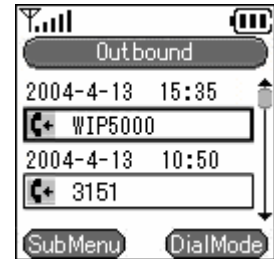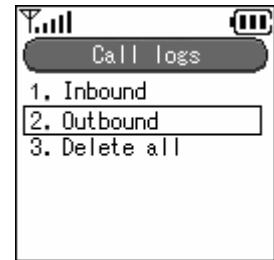 Outgoing call log



2.7.1 Details

Displays detailed call log information.

- 1 When you press the  key on the name/telephone number that you want more detailed information about, a pop-up window like that on the right is displayed. You can check information by moving up and with the   keys.

Information content: Name, telephone number, group, index, call time

 
 


 


2.7.2 Call log delete

 
Deleting one call from a call log.

- 1 Displays the call logs.

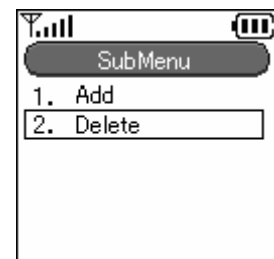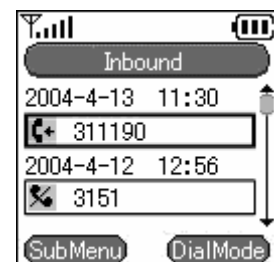To delete a call log, select the call log to delete, press the **LeftSoft** key to select the sub-menu, then select "2. Delete".



 
- 2** The screen in the figure on the right is displayed.
Select whether or not to delete with the   keys, then press the  key to finalize the deletion.

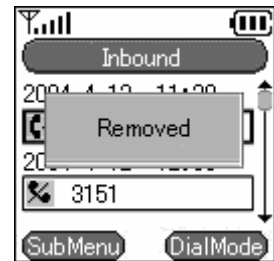 




2.7.3 Delete all data

Deleting the entire call logs.

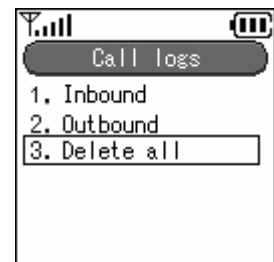- 1** " 3.Select "Delete all data".

 


- 2** The screen in the figure on the right is displayed.
 Select whether or not to delete with the   keys, then press the  key to finalize the deletion.



2.7.4 Calling from the call log

Making a call from a call log.

- 1** With a call log displayed, you can make a call by pressing the  key with the name/telephone number highlighted.
 If their name is registered in the contacts list, their name is displayed above the telephone number.



2.8. Presence

 
Displays the presence menu.

- 1 Press the **LeftSoft** key to select the menu.

* With some connected equipment, this is not possible.

A screen like that in the figure on the right (second row) is displayed.

 
Either press the "4" on the number pad or select "4. Presence", then press the **Call** key.

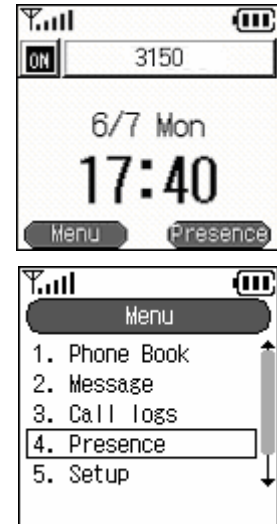

 
2.8.1 User list

Displaying a list of registered users.

 
- 1 To look at a list of registered users, either press the "1" on the number pad or select "1.User list", then press the **Call** key.

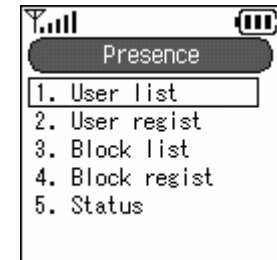

- 2 A list of the registered users is displayed.

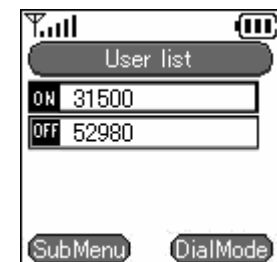
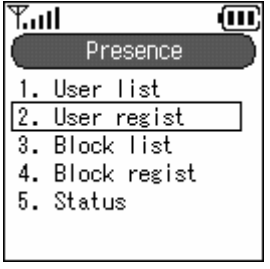
 
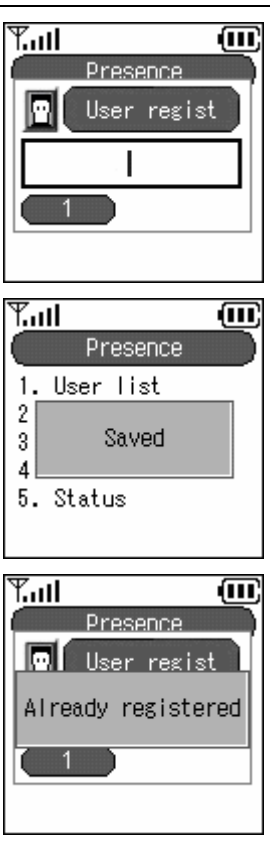


To add or delete a registered user, press the **LeftSoft** key to select the sub-menu, then select either "2. Add" or "3. Delete".

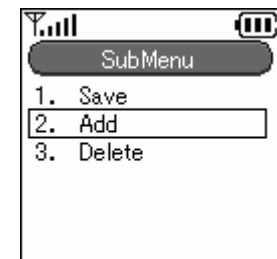


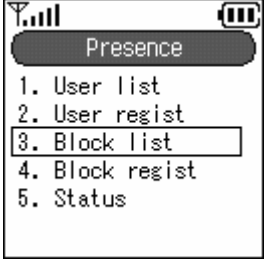
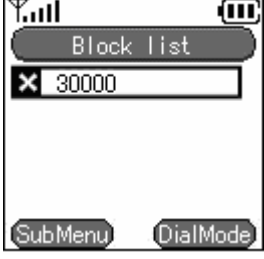

2.8.2 User Registration

Registering a user.

<p>1</p>	<p>To register a user, either press the "2" on the number pad or select "2. Register user", then press the  key.</p>	 <p>The screenshot shows a mobile phone screen with the title 'Presence'. At the top right are signal strength and battery icons. A list of options is displayed: '1. User list', '2. User regist' (highlighted with a white box), '3. Block list', '4. Block regist', and '5. Status'.</p>
<p>2</p>	<p>Use the number pad and the  key to enter the user's telephone number.</p> <p>If you try to input an Alias that is already registered, the "Already registered" message is displayed and the display returns to the input field.</p>	 <p>The three screenshots show the progression of the user registration process. The first screenshot shows the 'Presence' menu with 'User regist' selected and a numeric input field containing a vertical bar. The second screenshot shows the 'Presence' menu with '2' selected and a 'Saved' message box. The third screenshot shows the 'Presence' menu with 'User regist' selected and an 'Already registered' message box.</p>


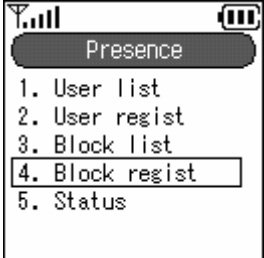
2.8.3 Block list

Displaying a list of users registered in the block list. Your status is not disclosed to users registered in the block list.

 
1	To look at the block list, either press the "3" on the number pad or select "3.Block list", then press the  key.	 <p>The screenshot shows a mobile phone screen with a signal strength indicator, a battery icon, and a 'Presence' title bar. Below the title bar is a list of menu items: '1. User list', '2. User regist', '3. Block list' (highlighted with a white background), '4. Block regist', and '5. Status'.</p>
2	<p>A list of the registered users is displayed.</p> <p>To add or delete a registered user, press the <u>LeftSoft</u> key to select the sub-menu, then select either "2. Add" or "3. Delete".</p>	  <p>The top screenshot shows a mobile phone screen with a signal strength indicator, a battery icon, and a 'Block list' title bar. Below the title bar is a text field containing '30000' with an 'X' icon to its left. At the bottom of the screen are two buttons: 'SubMenu' and 'DialMode'.</p> <p>The bottom screenshot shows a mobile phone screen with a signal strength indicator, a battery icon, and a 'SubMenu' title bar. Below the title bar is a list of menu items: '1. Save', '2. Add' (highlighted with a white background), and '3. Delete'.</p>

2.8.4 Block register

Registering a user to whom your status will not be disclosed.

1	To register a user for blocking, either press the "4" on the number pad or select "4. Block list", then press the  key.	 <p>The screenshot shows a mobile phone screen with a signal strength indicator, a battery icon, and a 'Presence' title bar. Below the title bar is a list of menu items: '1. User list', '2. User regist', '3. Block list', '4. Block regist' (highlighted with a white background), and '5. Status'.</p>
---	--	---

- 2 Use the number pad and the **LeftSoft** key to enter the user's telephone number.

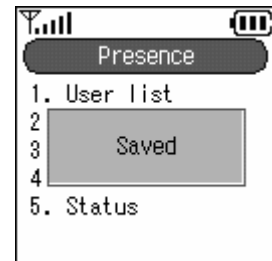


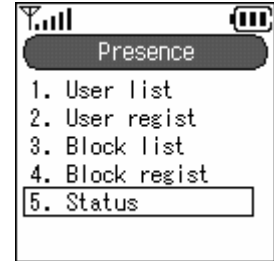 
If you try to input an Alias that is already registered, the "Already registered" message is displayed and the display returns to the input field.






2.8.5 Status








Changing your own status.

 
- 1** To look at a status list, either press the "5" on the number pad or select "5. Status", then press the  key.



- 2** You can set the status by using the   keys, then pressing the  key.

There are seven status modes.

- : Online
- : Picking up
- : Briefly away from seat
- : Away from seat
- : On another call
- : Lunch break
- : Offline

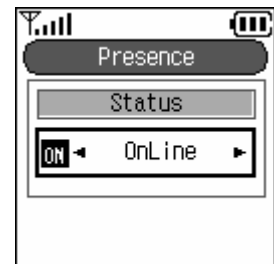 


2.9. Basic settings menu

Displays the setting menu.

- 1 Press the **LeftSoft** key to select the menu item.

 
A screen like that in the figure on the right (second row) is displayed.
"5.Select "Setting".

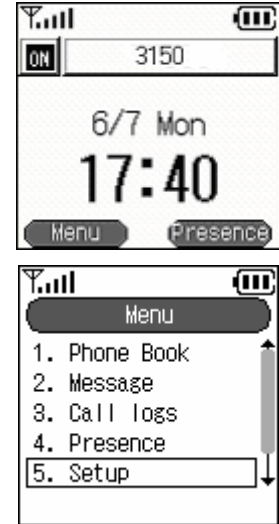

2.9.1 Ringer/vibration

 
Setting the ringer/vibration type.

- 1 From the setting menu, select "1. Ringer/vibration".

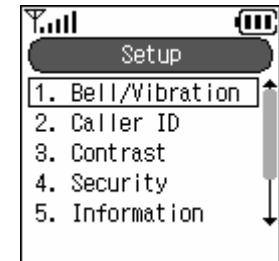 


- 2 Setting "1. Telephone" or "2. IM".

To set the telephone ringer, select "1. Telephone".

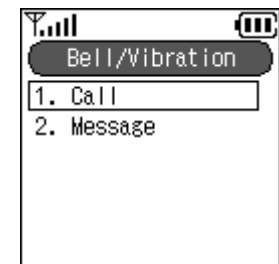

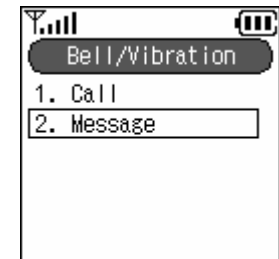

To set the message ringer, select "2. IM".



2.9.1.1 Distinctive Ringtones

You can switch the ringtone/ mode/ LED for inside lines and outside lines.

- 1 To set the ringer for a call coming in on an outside line, either press the "1" on the number pad or select "1. External 1", then press the  key.

 
 
To set the ringer for a call coming in on an inside line, either press the "3" on the number pad or select "3. Internal 1", then press the  key.

There are four settings available, two each for inside and outside lines.

Example

Setting	Ringer	Mode	LED
External 1	Bell 1	Bell	Blue
External 2	Bell 5	Vibration	Red
Internal 1	Bell 11	Bell + vibration	No alert
Internal 2	Bell 13	Mute	Blue

 
* With some connection equipment, this is not possible. In this case, only "1. External 1" is enabled.

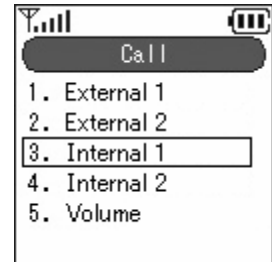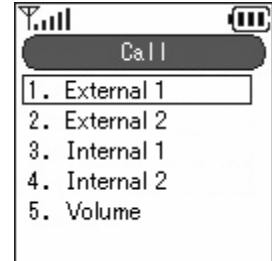 




2.9.1.2 Ringtones

Setting the inside line and outside line ringer tones.

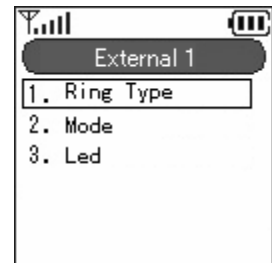- 1 To change the ringer tone, select "1. Ringer tone".





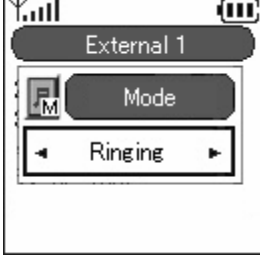


- 2 Use the   keys to select the ringer tone, then press the  key.



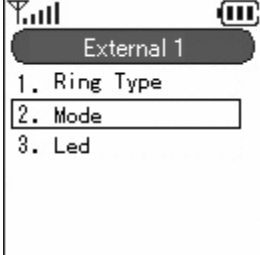



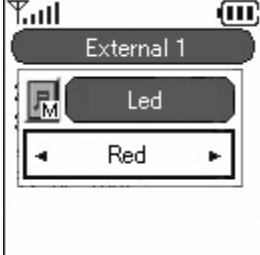
2.9.1.3 Mode

Setting the mode (bell, vibration, bell + vibration, or mute) on receipt of internal or external calls.

1	To change the ringer mode, select "2. Mode".	
2	<p>Use the   keys to set the mode, then finalize with the  key.</p> <p>There are four modes.</p> <ul style="list-style-type: none"> • Bell (bell) • Vibration (vibration) • Bell + vibration (bell + vibration) • Silent (mute) 	


 
 

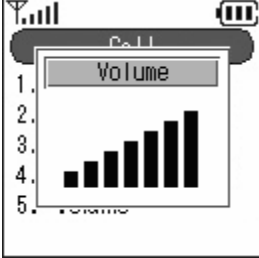
2.9.1.4 LED

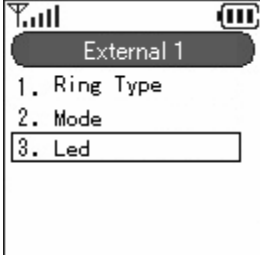Setting the LED color for calls coming in on internal lines and external lines.

1	To change the LED color for incoming calls, select "3. LED".	
2	<p>Use the   keys to set the LED color, then finalize with the  key.</p> <p>There are three LED colors.</p> <ul style="list-style-type: none"> • RED • BLUE • (None) 	


 



2.9.1.5 Volume adjustment

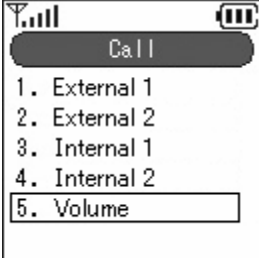Setting the headphone/earpiece/ringer volume.

1	From the telephone menu, select "5. Adjust volume".	 A screenshot of a mobile phone's 'Call' menu. At the top, there is a signal strength indicator on the left and a battery icon on the right. Below the title 'Call', there is a list of five options: '1. External 1', '2. External 2', '3. Internal 1', '4. Internal 2', and '5. Volume'. The '5. Volume' option is highlighted with a white background and a black border.
2	Use the   keys to set the volume, then finalize with the  key.	 A screenshot of a mobile phone's 'Volume' adjustment screen. At the top, there is a signal strength indicator on the left and a battery icon on the right. Below the title 'Volume', there is a bar graph with five bars of increasing height from left to right. The y-axis is labeled with numbers 1 through 5. The bars correspond to these numbers, with the height of the bar increasing as the number increases.



2.9.2 Caller ID

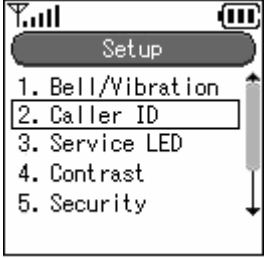Sets whether or not to display the incoming telephone number.

1	From the setting menu, select "2. Calling number".	 <p>The screenshot shows a mobile phone's settings menu titled "Setup". The menu items are: 1. Bell/Vibration, 2. Caller ID (highlighted with a white box), 3. Service LED, 4. Contrast, and 5. Security. A vertical scrollbar is on the right side of the list.</p>
2	Use the   keys to set caller ID on/off, then finalize with the  key.	 <p>The screenshot shows the "Caller ID" settings screen. At the top is a "Caller ID" header with a small icon. Below it is a toggle switch set to "On". At the bottom, the menu item "5. Security" is visible. A vertical scrollbar is on the right side.</p>



2.9.3 Service LED

Setting the Service LED.

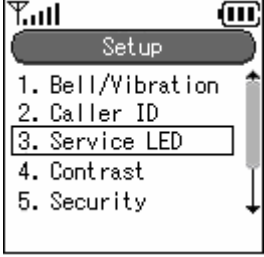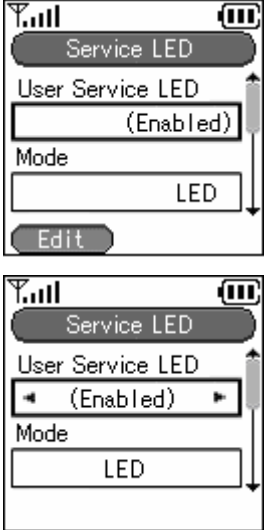1	From the setting menu, select "2. Service LED".	 <p>The screenshot shows the "Setup" menu with "3. Service LED" highlighted. The other menu items are: 1. Bell/Vibration, 2. Caller ID, 4. Contrast, and 5. Security.</p>
2	Service LED information: The User Service LED, mode, and interval are displayed.	 <p>The first screenshot shows the "Service LED" settings screen. It has a "Service LED" header, "User Service LED (Enabled)", and "Mode LED". An "Edit" button is at the bottom. The second screenshot shows the same screen but with the "User Service LED" field highlighted by a white box, indicating it is being edited.</p>


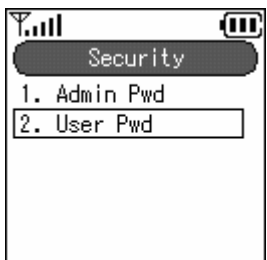



2.9.4 Brightness adjustment

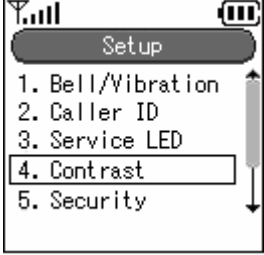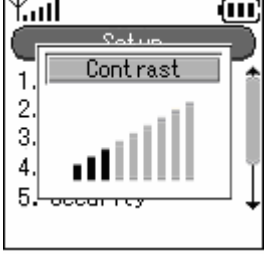
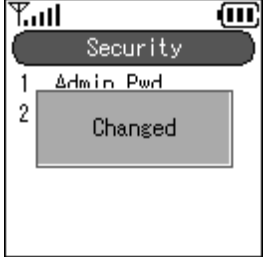
Adjusting the display screen brightness.

1	From the setting menu, select "4. Adjust brightness".	 A screenshot of a mobile phone's 'Setup' menu. The menu items are: 1. Bell/Vibration, 2. Caller ID, 3. Service LED, 4. Contrast (highlighted with a white box), and 5. Security. A vertical scrollbar is on the right side of the menu.
2	Use the ◀ ▶ keys to adjust the contrast, then finalize with the Ⓞ key.	 A screenshot of the 'Contrast' adjustment screen. It shows a bar chart with five bars of increasing height from left to right. The menu items are: 1. Contrast (highlighted), 2. Bell/Vibration, 3. Caller ID, 4. Service LED, and 5. Security. A vertical scrollbar is on the right side.

2.9.5 Security




Changing the Admin password or User password (keylock password).




<p>1</p>	<p>From the setting menu, select "5. Security".</p>	 <p>The screenshot shows a 'Setup' menu with a list of options: 1. Bell/Vibration, 2. Caller ID, 3. Service LED, 4. Contrast, and 5. Security. The '5. Security' option is highlighted with a white background and a black border.</p>
<p>2</p>	<p>Select "1.KeyLock password".</p> <p>* Do the same for the "Admin password".</p>	 <p>The screenshot shows a 'Security' menu with a list of options: 1. Admin Pwd and 2. User Pwd. The '1. Admin Pwd' option is highlighted with a white background and a black border.</p>
<p>3</p>	<p>When you select "1.KeyLock password", the system asks you for the current password. Please enter the correct password. The default value is 0000.</p>	 <p>The screenshot shows a 'Security' screen with a title bar 'Security' and a sub-header 'Old Password' next to a key icon. Below it is a text input field with a vertical cursor.</p>
<p>4</p>	<p>If you input the wrong password, a screen like that on the right is displayed.</p>	 <p>The screenshot shows a 'Security' screen with a title bar 'Security' and a sub-header 'Wrong Password' next to a key icon. Below it is a text input field.</p>
<p>5</p>	<p>When you input the correct password, the system asks you to input the new password.</p>	 <p>The screenshot shows a 'Security' screen with a title bar 'Security' and a sub-header 'New Password' next to a key icon. Below it is a text input field with a vertical cursor.</p>

<p>6</p>	<p>For verification, the system asks you to input the new password a second time.</p>	
<p>7</p>	<p>When you input the password, a screen like that on the right is displayed for a few seconds.</p>	

2.9.6 Information display



 


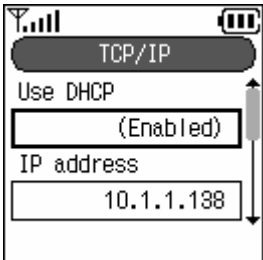Displaying the network information, server information, MAC address, and version information.
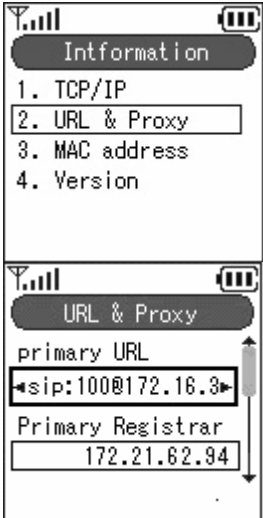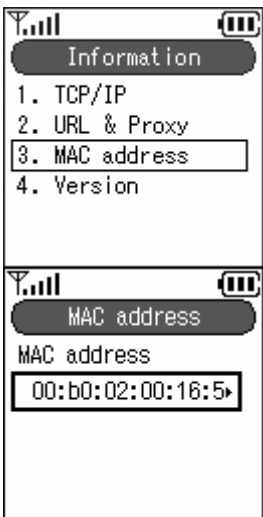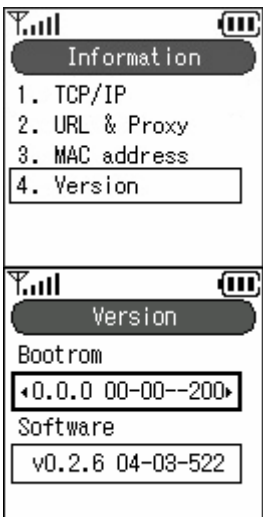
<p>1</p>	<p>From the setting menu, select "6. Information display".</p>	
<p>2</p>	<p>From the information display menu, select "1. TCP/IP".</p> <p>Network information: DHCP mode, IP address, Netmask, Gateway, DNS1, and DNS2 are displayed</p>	 

<p>3</p>	<p>From the information display menu, select "2. URL & Proxy".</p> <p>Server information: Primary URL, Primary Register Secondary URL、 Secondary Registrar、 Outbound Proxy</p>	
<p>4</p>	<p>From the information display menu, select "3. MAC address".</p> <p>The MAC address is displayed.</p>	
<p>5</p>	<p>From the information display menu, select "4. Version".</p> <p>The boot ROM and software version are displayed.</p>	

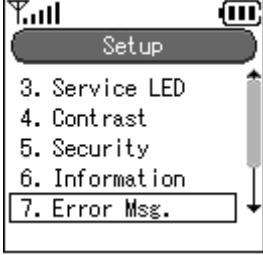



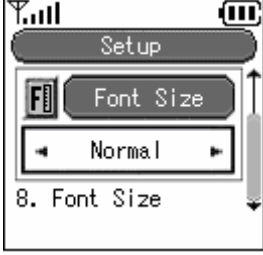
2.9.7 Error Msg.

Setting the Error Msg.

1	From the information display menu, select "7. Error Msg."	 <p>The screenshot shows a vertical menu titled "Setup" with options: 3. Service LED, 4. Contrast, 5. Security, 6. Information, and 7. Error Msg. The option "7. Error Msg." is highlighted with a white background and a black border.</p>
2	Use the   keys to switch the Error Msg On/Off, then finalize with the  key.	 <p>The screenshot shows a sub-menu titled "Error Msg." with a toggle switch icon on the left and the text "On" in the center. Below it, the option "7. Error Msg." is visible. The "On" text is highlighted with a white background and a black border.</p>




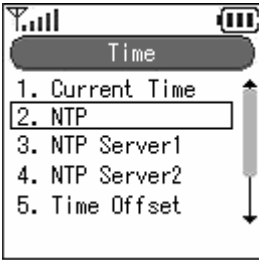


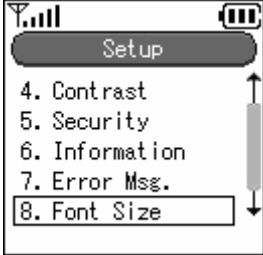

2.9.8 Font size






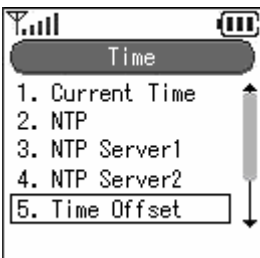

Setting the font size.

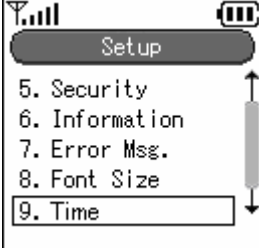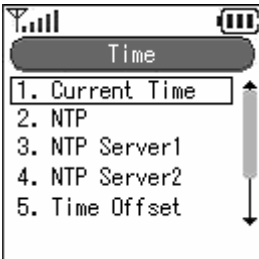1	From the information display menu, select "8. Font size".	 <p>The screenshot shows a vertical menu titled "Setup" with options: 4. Contrast, 5. Security, 6. Information, 7. Error Msg., and 8. Font Size. The option "8. Font Size" is highlighted with a white background and a black border.</p>
2	Use the   keys to select a font size of Large or Small, then finalize with the  key.	 <p>The screenshot shows a sub-menu titled "Font Size" with a font size icon on the left and the text "Normal" in the center. Below it, the option "8. Font Size" is visible. The "Normal" text is highlighted with a white background and a black border.</p>

 
2.9.9 Time setting

Setting the date, time, NTP, and alarm.

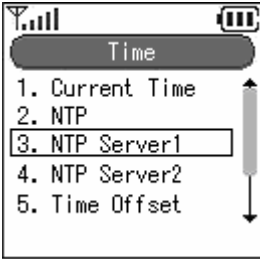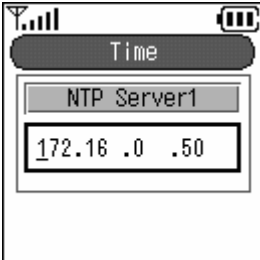 
<p>1</p>	<p>From the information display menu, select "9. Clock".</p>	
<p>2</p>	<p>From the clock menu, select "1. Setting the date and time".</p> <p>The date and time are displayed.</p>	 
<p>3</p>	<p>From the clock menu, select "2. NTP" and switch the NTP On/Off.</p> <p>Note! If no NTP server is set, when you reboot the time that has been set is initialized.</p>	
<p>4</p>	<p>Use the   keys to set NTP On/Off, then finalize with the  key.</p>	

<p>5</p>	<p>Select "3. NTP server 1" or "4. NTP server 2".</p> <p>Use the number pad to input the NTP server IP address.</p>	 
<p>6</p>	<p>Select "5. Time offset".</p> <p>Use the   keys to select the time, then finalize with the  key.</p>	 

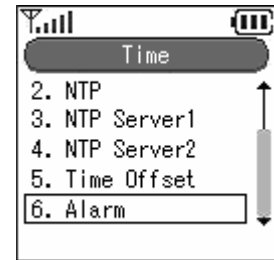

7 From the clock menu, select "6. Alarm".

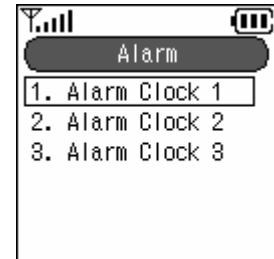 


Select "1. Alarm 1" or "2. Alarm 2" or "3. Alarm 3".



In order to change a field (time, bell, number of times, setting), use the multi-function key.

 
To change the setup to "Use", use the  key and save the setting. The  icon is displayed in the middle of the screen.

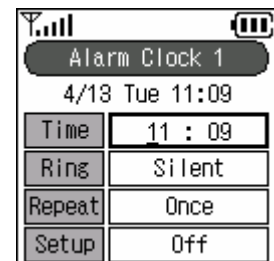 




2.9.10 Language setting

Setting the language (Japanese/English).

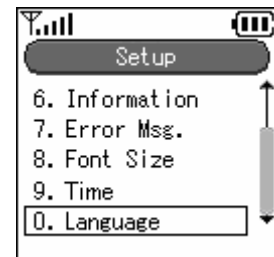1 From the setting menu, select "0. Language".










2 There are two languages, English and Japanese. Use the   key to select the language, then finalize with the  key.



Reference: The Admin menu is the menu for the network administrator. For details, refer to the "WIRELESSIP5000 Administrator Manual".

2.9.11 Courtesy mode On/Off

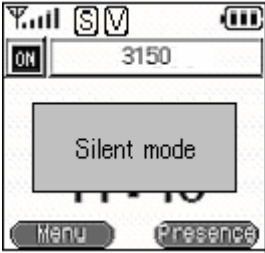When courtesy mode is set, the ringer does not ring and all ringers go into vibration mode.

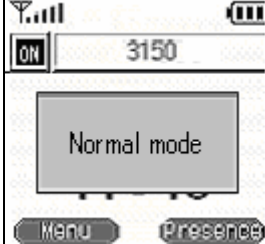1	Press and hold down the  key on the number pad.	 
2	Silent mode and vibration mode are switched On.	
3	To end courtesy mode, press and hold down the  key on the number pad again.	 

 
2.9.12 KeyLock/KeyUnlock

When the keylock is set, button operations are disabled.

 
- 1 Press and hold down the **Lock** key on the side of the phone.

Enter the password.

Note! The default value for the password is "0000". You can change the password freely. (See the security section.)

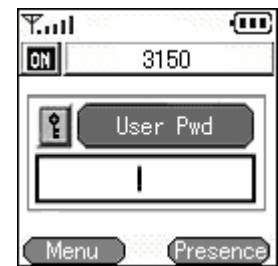

- 2 The keylock comes On.

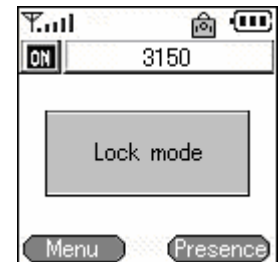

- 3** To unlock the keylock, press and hold down the **Lock** key on the side of the phone again.

Enter the password.



3. Various operation methods

3.1. Hold function

 
This is used to put a call on hold. The hold tone is played on the terminal that you have put on hold.

3.1.1 Hold

 
During a call, you can put the other party on hold by pressing the Send key.

Example: Putting B on hold

While A and B are talking, if A presses the Send key, B is put on hold.

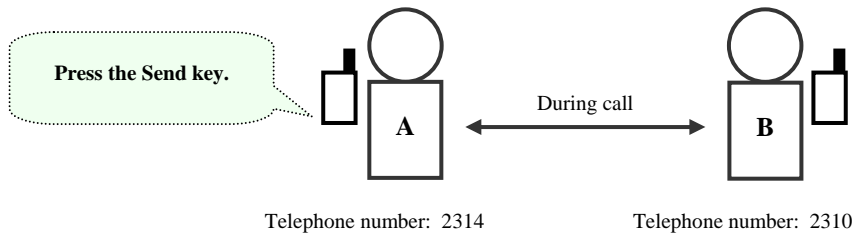

At this time, the screens for A (the terminal that put the call on hold) and B (the terminal that was put on hold) display as below and the hold tone is played on B (the terminal that was put on hold).

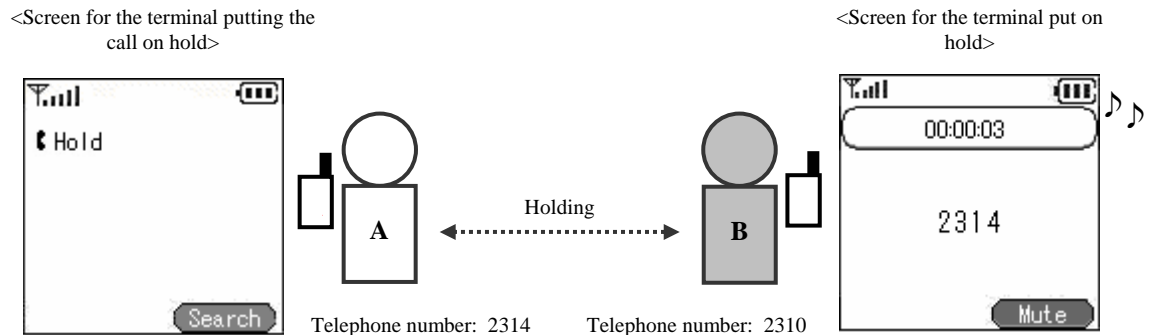

3.1.2 Hold release

 
During a hold, you can end the hold by pressing the **Send** key.

Calling method

3.1.3 Internal extension call

 
You can call an internal number by dialing the <extension number>, then pressing the **Send** key.

Check the inside number with the administrator.

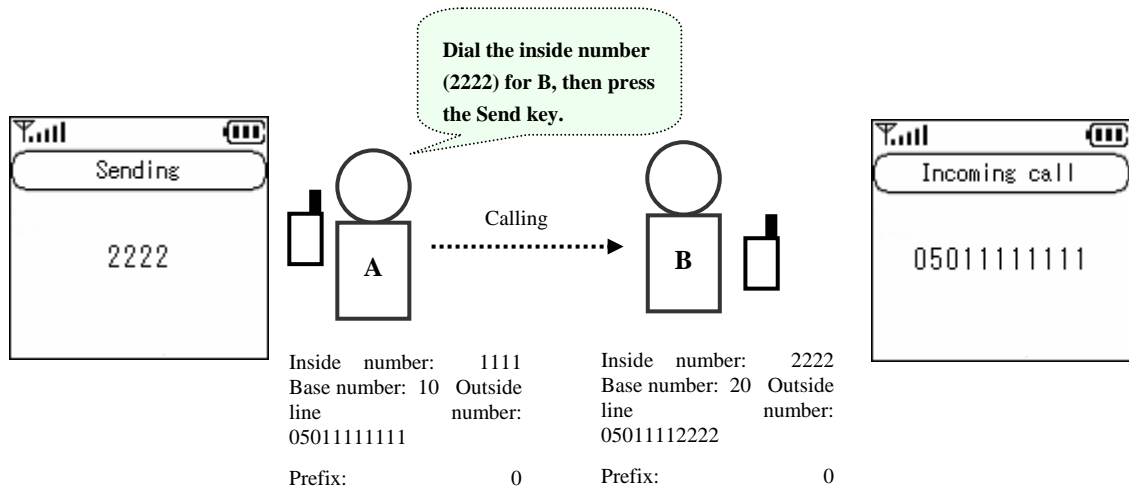

3.1.4 Outside-line call

You can call an outside number by dialing the <prefix> + <outside telephone number>, then pressing the Send key. Check the prefix and the outside number with the administrator.

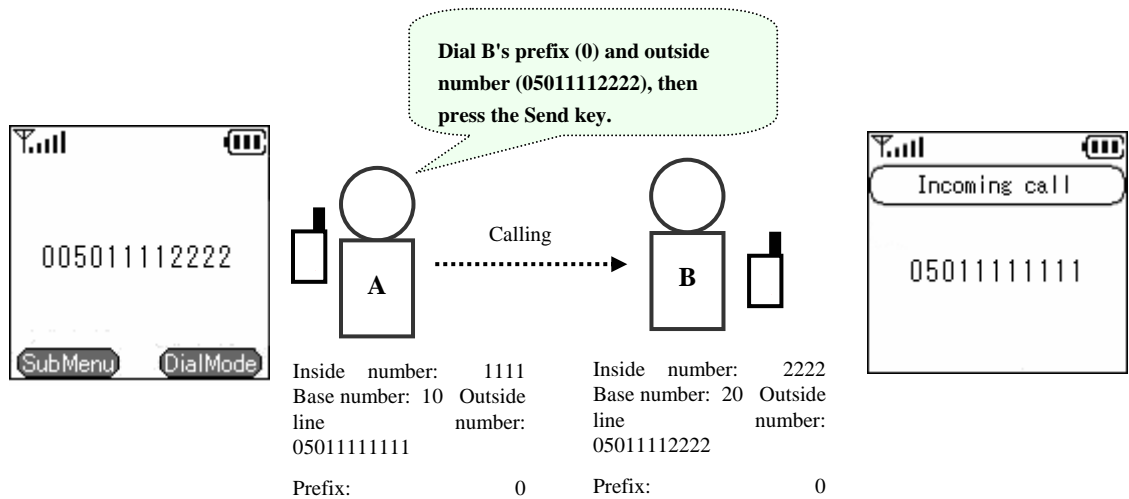

3.1.5 184/186 call

To temporarily switch caller ID On/Off, dial 184 or 186 before you dial the other party's telephone number.

 
184 (Do not identify caller): Your telephone number is not identified.

186 (Identify caller): Your telephone number is identified.

 
<Examples of combination of caller ID On/Off>

System settings	Dial input	Caller ID display
Displayed	No input	Displayed
	186	Displayed
	184	No alert
No alert	No input	No alert
	186	Displayed
	184	No alert

Example: 184 call

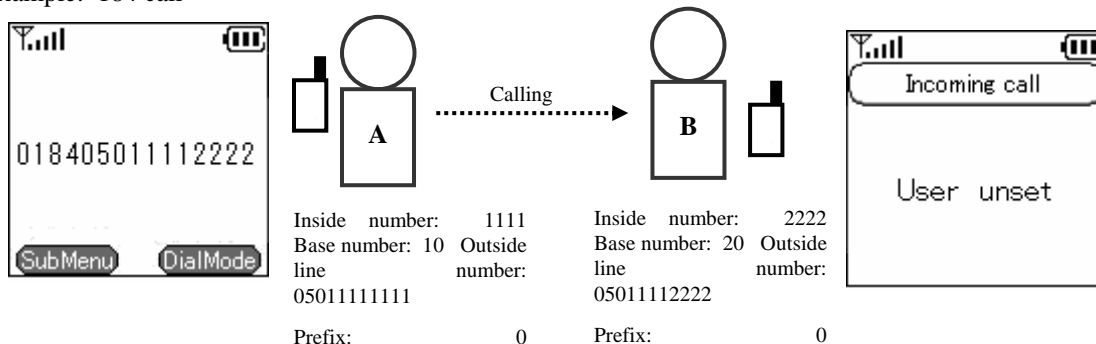

Example: 186 call

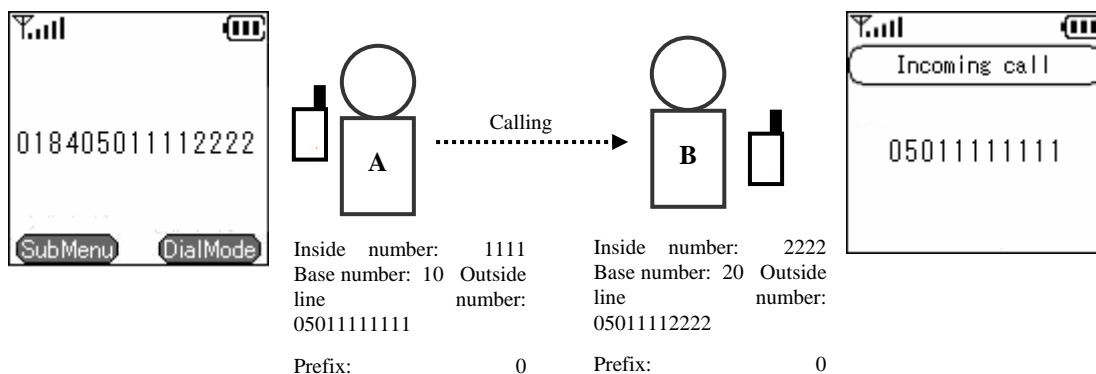

3.1.6 Operation methods using call mode

You can make prefixed calls and 184/186 calls from the contact list, incoming call log, and outgoing call log.

3.1.6.1 Calling in call mode from the contact list

When you select the telephone number from the contact list, press Right soft "Call mode", then on the call mode screen press <1. Prefix 2.184 3.186>, then press the Enter key. The number you have input is displayed with <0> attached and when you press Send, the outside call is made.

* Using the prefix + 184/186 gives the same results as the above operation.


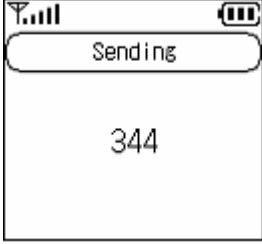
3.1.6.2 Calling in call mode from the incoming call log or outgoing call log

Displayed when the Enter key is pressed to the <Left <-> from the incoming call log display, or to the <Right->> from the outgoing call log. Select a telephone number from a call log, then press Right soft "Call mode", and then press <1. Prefix 2. 184 3. 186> on the call mode screen, then press the <Enter> key. The input number is displayed with <0> attached, and when you press **Send** the outside call is made.

* Using the prefix + 184/186 gives the same results as the above operation.




3.1.7 Redial

You can redial the last telephone number dialed.

1	Press and hold down the Send key for at least 1 second.	
2	The last telephone number dialed is redialed.	



3.1.8 Speed dialing

You can make a call using its speed dialing number.

1	Input a speed dialing number registered in the contact list.	
2	<p>Press the last digit in the speed dialing number and hold it down for at least 1 second.</p> <p>For example, for a speed dialing number of 001, hold down the "1" for at least one second.</p>	
3	A call is made to the telephone number corresponding to the speed dialing number input.	

 
3.1.9 Timer between digits

If you input the telephone number with the **Send** key held down, the call is made automatically after the telephone number is input.

1	Press the Send key.	
2	Entering the telephone number.	

- 3** After a short time, a call is made automatically to the telephone number for the speed dialing number entered.

Note! If call mode is used when inputting the telephone number, the timer between digits does not operate.

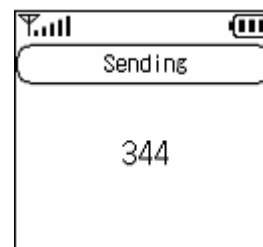

4. Accessories

4.1. Accessory guidelines

These guidelines concern WIRELESSIP5000 accessories.

- ◆ When unplugging the power cord for an accessory, hold it by the plug. Never pull on the cord itself.
- ◆ Keep accessories out of the reach of children.
- ◆ Use only chargers, batteries, and accessories specifically manufactured for the Hitachi Cable WIRELESSIP5000. Using a charger, battery, or accessory not designed for the WIRELESSIP5000 would cause danger and would void the warranty for your telephone.

4.2. Accessories covered

- ◆ Standard battery
- ◆ Power Supply for Japan
- ◆ Desktop charger
- ◆ USB cable (option)

4.3. AC power supply adaptor

The AC adaptor in Figure 2 can quick charge your WIRELESSIP5000.

When using the adaptor, plug the plug into a wall socket and connect the connector to the base of the WIRELESSIP5000 or to the rear of the desktop charger.

You can charge the telephone while you are using it.

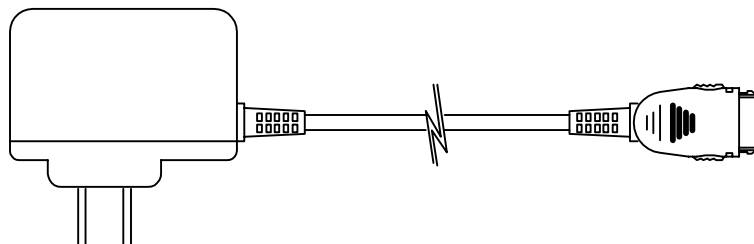 


Figure 2

4.4. USB cable (option)

If you connect your WIRELESSIP5000 to a PC with the USB cable shown in Figure 3, you can charge and change settings.

When setting the WIRELESSIP5000, check whether your WIRELESSIP 5000 is directly connected to your PC with the USB cable.

 


Figure 3

4.5. Installing the battery

Load the battery into the battery installation section at the rear of the WIRELESSIP5000, then push in in the direction of the release button until it clicks into place.

4.6. Removing the battery

While holding down the release button, pull the battery toward the bottom of the WIRELESSIP5000 and remove it.

4.7. Charging with the desktop charger

Step 1 Plug the AC adaptor into a wall socket, then connect the connector to the rear of the battery charger.

Step 2 As Figure 4 shows, insert the WIRELESSIP5000 onto the charger until it clicks into place and the LED lights up blue.

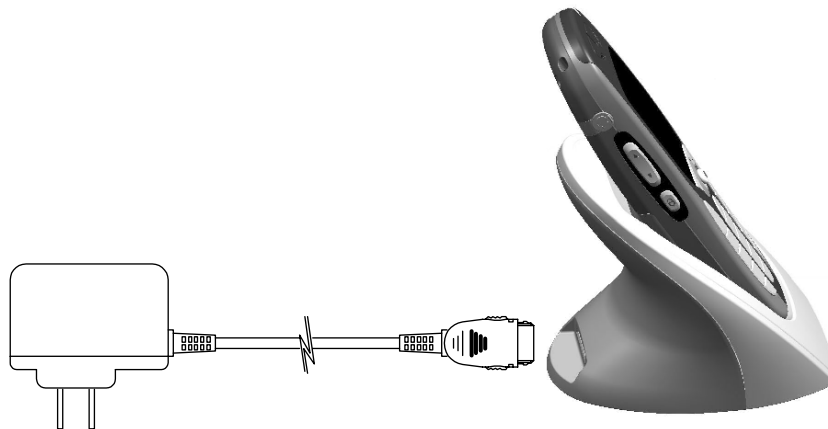 


Figure 4

Note: As Figure 5 shows, you can also charge with the optional USB cable instead of with the AC adaptor.

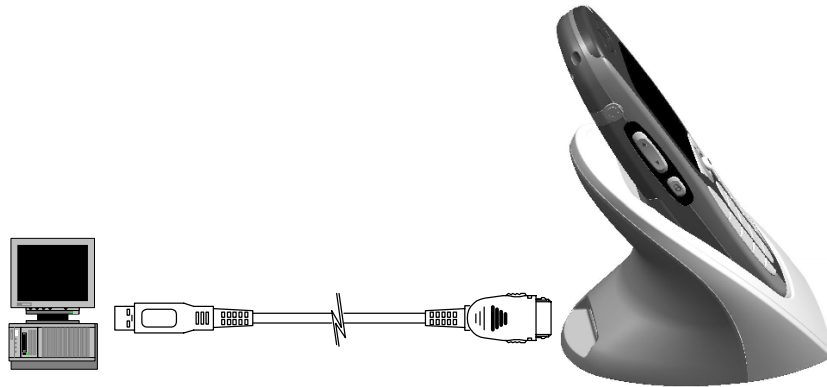 


Figure 5

4.8. Charging without the desktop charger

Step 1: Connect the AC adaptor to a wall socket.

Step 2: Remove the connector cover from the WIRELESSIP5000.

Step 3: Install the AC adaptor's 24-pin connector to the bottom of the WIRELESSIP5000.

Note: You can also charge with the optional USB cable instead of with the AC adaptor.

4.9. LED

LED color	Status
Red	Operating, Call underway
Blue	Charging (Goes out when the charging is complete)

Table 1

5. Safety Information

This safety information applies to the WIRELESSIP5000 telephone. Please read the section below before installing or using your WIRELESSIP5000.

5.1. Warning about emergency services

Since the WIRELESSIP 5000 utilizes a communications network that is dependent on commercial power supply, during a power failure, it can not access emergency services. Use some other means to access emergency services.

5.2. Warning about explosive gas

Do not use the WIRELESSIP5000 anywhere dangerous, such as in an area with explosive gas in the air. Verify safety with qualified personnel before using a wireless device in such an environment.

5.3. Warning about the impact of electromagnetic signals

Since the WIRELESSIP5000 uses wireless signals, there is a danger of it affecting nearby electronic equipment. Do not use the WIRELESSIP 5000 near medical equipment or anywhere that use is prohibited.

5.4. Warning about battery handling

Do not dispose of the battery pack in fire or water. The battery could explode in a fire.

5.5. Battery safety items

- ◆ Do not disassemble the battery pack, hit it, drill a hole in it, or incinerate it.
- ◆ Failure to observe these precautions can result in fire, explosion, and injury. Do not touch anything metal to the battery terminals.
- ◆ Be particularly careful with any battery that is damaged or leaking. If you come in contact with the battery fluid, wash that location well with plenty of soap and water. If any battery fluid should get into your eyes, wash your eyes out with water for about 15 minutes and seek medical attention.
- ◆ Do not charge the battery if the ambient temperature is over 40°C.
- ◆ Do not store the battery anywhere that the temperature goes over 60°C.
- ◆ When disposing of a used battery pack, consult a local waste processing contractor and follow all laws concerning disposal and recycling.
- ◆ To replace the battery, contact your local sales store. Use a battery specifically designed for the WIRELESSIP5000.
- ◆ Use the AC adaptor manufactured specifically for the WIRELESSIP5000.

Appendix Specifications

No.	Item		Specifications			
1	Physical dimensions	Main Unit	44(W)mm X 23(D)mm X 127(H)mm (Using lithium ion battery)			
		Lithium ion battery	43(W)mm X 11(D)mm X 68.5(H)mm			
		Small battery *1	43(W)mm X 9(D)mm X 68.5(H)mm			
		Desktop charger	64(W)mm X 89(D)mm X 80(H)mm			
2	Hardware	Display	Number of pixels	128 X 128 8 lines, 10 columns (double-byte characters)		
			Dot size	0.18(W)mm X 0.22(H)mm		
			Dot pitch	0.19(W)mm X 0.23(H)mm		
			Effective range	24.5(W)mm X 29.5(H)mm		
			Field of vision range	28.5(W)mm X 33.5(H)mm		
			Glass	FSTN liquid crystal, 4-tone monochrome		
		Backlight	White LED			
		Button	Number key pad (0-9, *, #), Send, End, Clear, Soft keys Four-way key (up, down, left, right, Enter), Vol, keylock			
		Audio interface	Microphone, speaker, 2.5-mm. stereo phone jack			
		Case material	ABS, PC(Polycarbonate)			
Other	Vibration					
3	Wireless Radio	Standards	IEEE802.11b (11Mbps wireless LAN)			
		Protocol	CSMA/CA			
		Modulation	DBPSK (1Mbps) DQPSK (2Mbps) CCK (5.5&11Mbps)			
		Communications technique	DSSS (Direct Sequence Spread Spectrum)			
		Frequency band	2.4 ~ 2.497 GHz (14Ch)			
		Output power	10 mW/MHz max.			
		Communications distance	Open space *2	160m (11Mbps) 200m (2Mbps)		
			Indoors	30m (11Mbps) 40m (2Mbps)		
		Data rate	1/2/5.5/11 Mbps			
		Minimum reception sensitivity	-84dBm@11Mbps(Typ.) -88dBm@5.5Mbps(Typ.) -89dBm@2Mbps(Typ.) -93dBm@1Mbps(Typ.)			
		Handover	Layer 2 *3			
		4	Software	Call control protocol	SIP	
				Audio encoding	G.711 A-Law/ μ -Law 64kbps G.729A 8kbps	
Network settings	DHCP (client operation only)/manual NAT(Static)					
Priority Control	DiffServ DSCP					
Security	SSID WEP key 64/128/256 bits 802.1x (MD5, EAP-TLS)					
Operational features	NTP (client operation only) Syslog (client operation only)					

		Transmission path diagnostics function	IP communications testing with Ping command	
		Firmware upgrade	TFTP (client operation only)	
5	Battery	Lithium ion battery	Capacity	3.7V 1350mAH Li-ion
			Call time	About 3 hours 10 minutes *4
			Standby time	About 55 hours *4 *5
			Battery charging time	About 3 hours
		Small battery *1	Capacity	3.7V 950mAH Li-ion
			Call time	About 2 hours 20 minutes *4
			Standby time	About 35 hours *4 *5
		Battery charging time	About 2 hours	

*1 The small battery is optional.

*2 The communications distance can vary with the weather, temperature, etc.

*3 L3 handover is also possible with the access point specifications.

*4 The charging state, temperature, signal strength, and other environmental conditions, function settings, etc, may make the call time and standby time shorter than these values.

*5 Design value for available time in power save mode