

# **USER'S MANUAL**

 
## **MIDI DVD KARAOKE**

### **AR-36MI/AR-36MD/AR-36**

#### **TERMS OF PRODUCT WARRANTY**

- The term of product warranty is 12 months as from the date of warranty activation, and not more than 18 months as from the date of manufacture.
- The product is within its warranty term, and the damages are caused by the manufacturer's faults.
- The product must have SMS (anti-tampering) stamp intact, and the manufacturer's sealing stamp is not torn, erased, or revised.
- No warranty for those products damaged due to accidents (broken due to dropping, acts of God, fire, explosion, water leaking in, insects,...), or their accessories (remote controls, disks, microphones,...) or their use not in accordance with the attached user's manual.
- No warranty for data stored by customer in the hard disk.
- Apart from the above terms, all products shall be repaired and charged depending on conditions of damage.


## 1. Installing and removing battery:

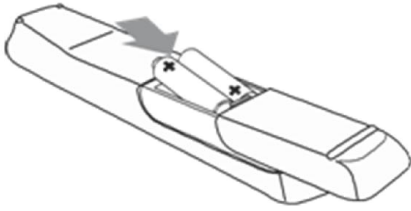

Insert 2 AA batteries into remote control

Make sure for installing in right polarity +/-


## 2. Position of keys on the remote control:

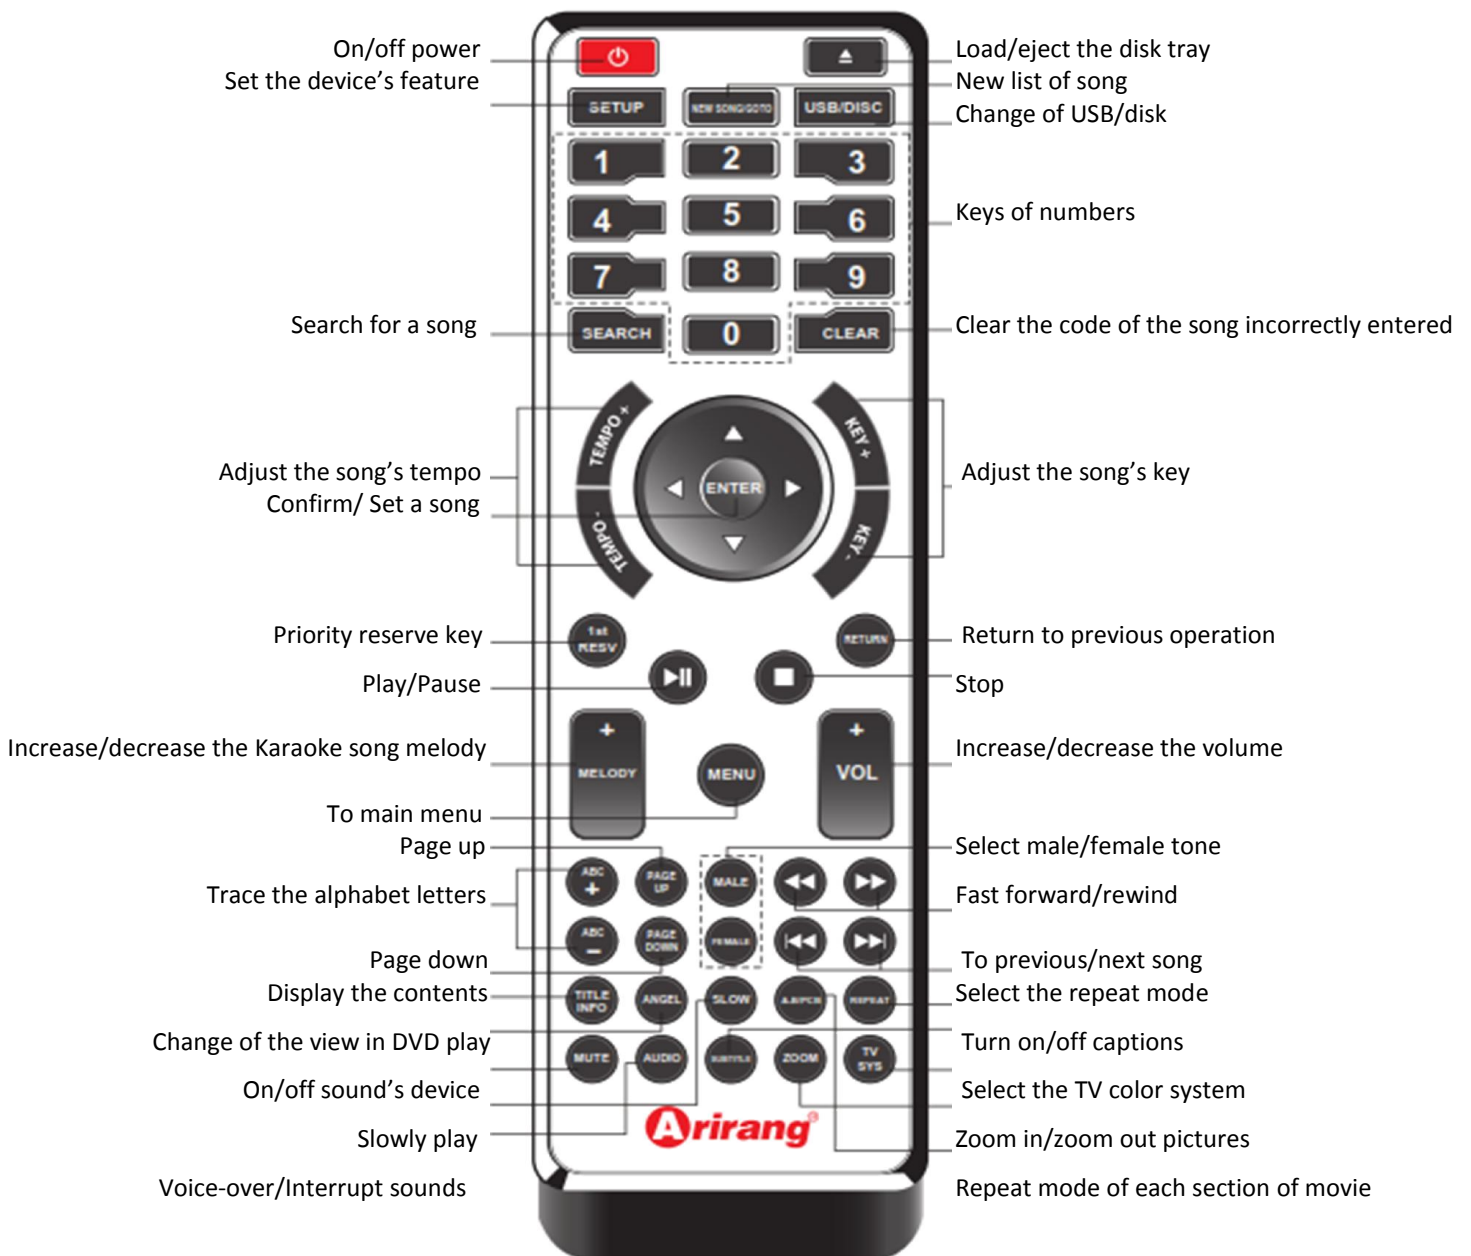 

**A- ACCESSORIES**



 Remote control



2 AA batteries



Audio cable



Video cable



Song book




Karaoke disk




User's manual

**B- CONNECTION WITH TV AND AMPLIFIER**

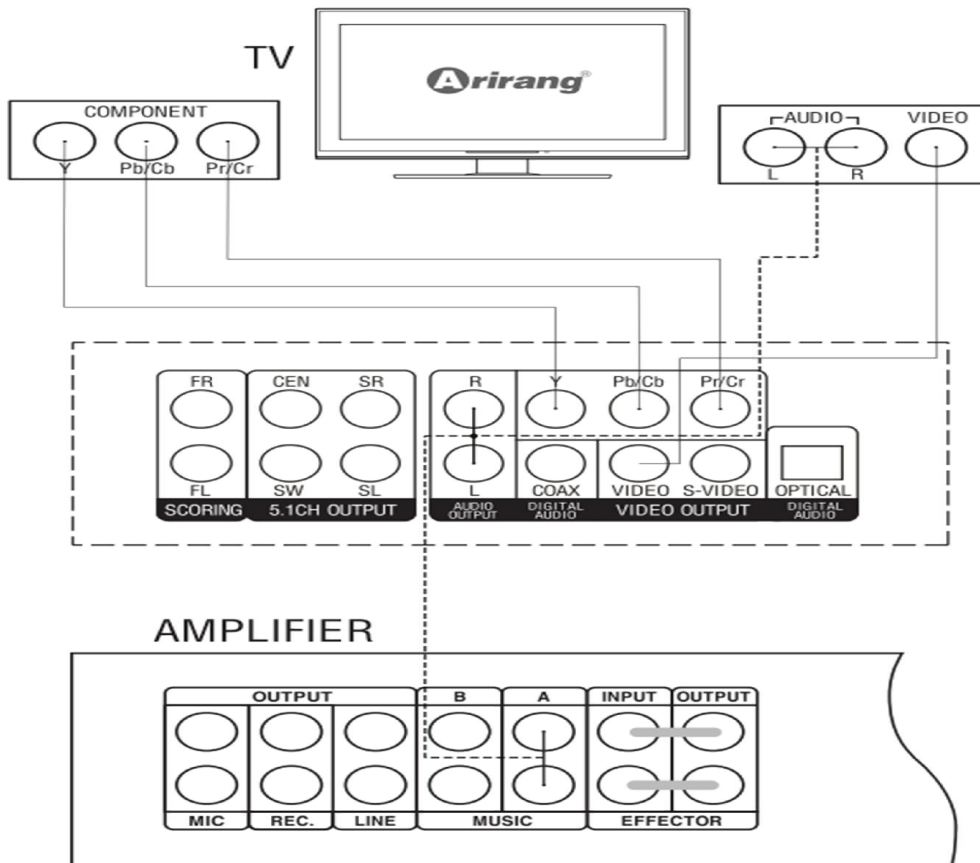 

## C- USE DVD KARAOKE PLAYER

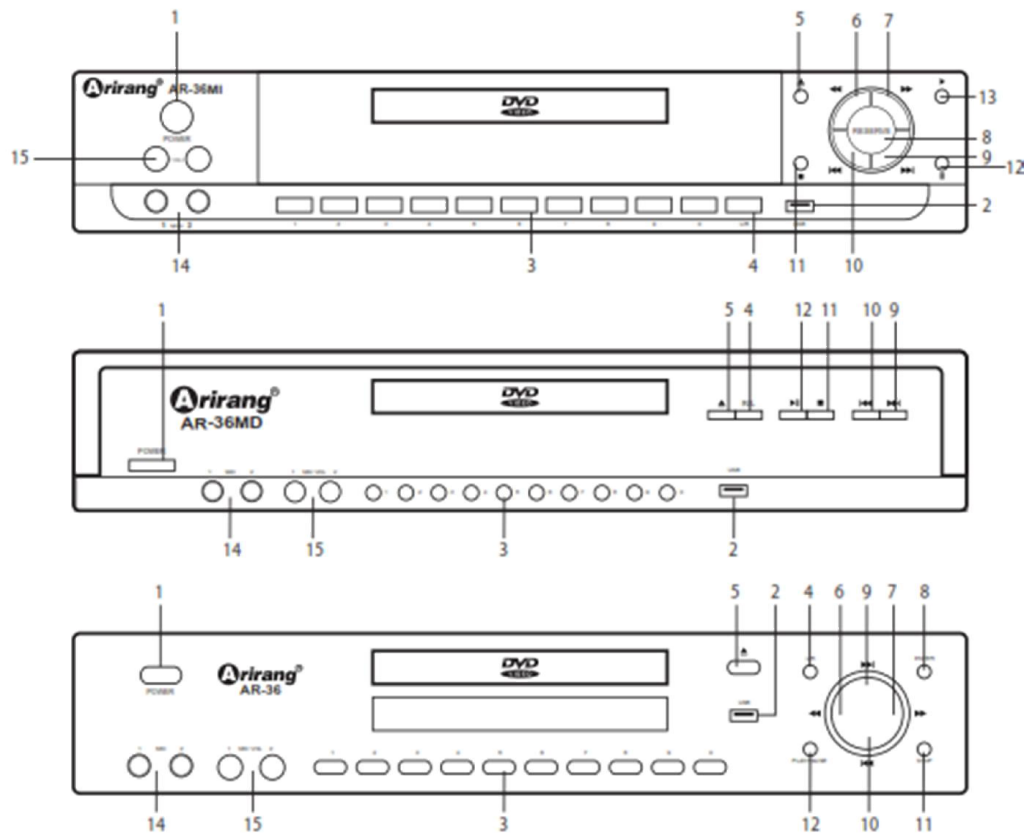 


- |                             |                       |
|-----------------------------|-----------------------|
| 1. Power                    | 9. Next song          |
| 2. USB port                 | 10. Previous song     |
| 3. Number keys              | 11. Stop              |
| 4. Interrupt VCD sounds     | 12. Pause (AR-36MI)   |
| 5. Load/eject the disk tray | Play/Pause            |
| 6. Fast rewind              | 13. Play              |
| 7. Fast forward             | 14. Microphone port   |
| 8. Store the selected song  | 15. Microphone volume |

## D- PLAY MASECO MIDI VISION KARAOKE DISK

 
### 1. Select the song:

#### 1.1 Use song book attached with the device

Press number keys to select the song

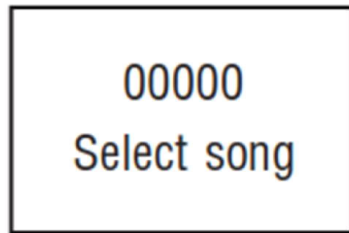

 Corresponding to the selected number, the song will be displayed

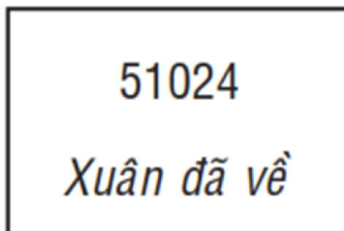

Press <ENTER> key to store song to list in order



## 1.2 Use the search menu on device

Press <SEARCH> key to enter the search menu


VIETNAM	CHINA	ENGLISH	PHILIPINE																							
50650	AI BIẾT																									
50070	AI CHO EM TÌNH YÊU																									
50012	AI CHO TÔI TÌNH YÊU																									
50210	AI LÊN XỨ HOA ĐÀO																									
52859	AI ĐI NGOÀI SƯƠNG GIÓ																									
50038	AI ĐƯA EM VỀ																									
0	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z

- Press ▲▼ key to select the song
- Press ◀▶ key to select the language
- Press <ENTER> key to store the selected song
- Press <GOTO> key to select the song according to the alphabet

\*NEW SONG: The list of new songs **(AR-909MD/909SMD)**

## 2. Delete the song:

Press <CANCEL> key to delete the selecting song

Press <STOP>  to stop the playing song, press CANCEL to delete the next song

## 3. Adjust tempo:

Press <TEMPO> +/- key to adjust tempo of the song

## 4. Adjust tone:

Press <KEY> +/- to adjust the pitch of the song

## **E- PLAY DVD, SVCD, VCD, CD, MP3, MP4, EVD DISK**

1. <SUBTITLE>: Select secondary language
2. <VOL> +/-: Adjust the volume of song
3. <PLAY>: Play
4. <PAUSE>: Pause
5. <AUDIO/Language>: Select the voice-over language
6. <REW>: Fast rewind
7. <FWD>: Fast forward
8. <PREV>: To previous song
9. <NEXT>: To next song