



ROTH BAR 2LX

High-Power Soundbar with
Wireless Subwoofer



“Turn it up.”

ROTH BAR 2LX

High-Power Soundbar with Wireless Subwoofer

IMPORTANT SAFETY INSTRUCTIONS READ BEFORE OPERATING EQUIPMENT

READ MANUAL

Read all the safety and operating instructions before the product is operated.

CLEANING

The product should be cleaned only with a polishing cloth or a soft dry cloth. Never use volatile liquids since they may damage the product.

OBJECT OR LIQUID ENTRY

Do not insert any kind of object into this product through any opening as they may make contact with electrical points and result in a fire or electric shock. Avoid spilling any kind of liquid on the product.

VENTILATION

Openings in the cabinet are provided for ventilation and to protect the product from overheating, and these openings must not be blocked or covered.

HEAT

The product should be placed away from sources of heat such as radiators, stoves, or other products that produce heat. Leave a comfortable gap between this product and all other electronics in your Home Theatre system.

LOCATION

This product should be installed in a stable location.

POWER-CORD PROTECTION

Power-supply cords should not be stepped on or pinched by items placed upon or against them. Pay particular attention to cords at plugs and the point where they exit from the product.

OVERLOADING

Do not overload wall outlets, extension cords, or power strips as this can result in a risk of fire or electric shock.

POWER SOURCES

This product should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supply to your home consult your local power company.

NON-USE PERIODS

The power cord should be unplugged from the outlet when left un-used for a long period of time.

LIGHTNING

For extra protection during a lightning storm or when the product is left unattended and unused for long periods of time, unplug the power cord. This will prevent damage due to lightning and power surges.

SERVICING

Do not attempt to service this product yourself as opening the product may expose you to electric shock, or the product may be damaged. Refer all servicing to qualified service personnel.



The exclamation point within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to a person.



Trouble Shooting

The power LED is on, but no sound?	If the LED is orange, the soundbar is in standby mode, press the standby button on in the remote control to power on.
LED display is normal, but no sound?	Switch through the sound modes to confirm the sound mode is corresponding with the indicator LED: AUX1 is green and OPTICAL is red.

BAR 2LX Specifications

Design:

BAR: Cloth Grill. 4 full-range drivers

SUB: Glossy mirror-top finish.

Wireless operation

Wall mount / Table Top Mount

Performance:

Output Power: 120 Watts

Wide Frequency Response: 30~20,000Hz

Input Sensitivity: 600mv

Bluetooth aptX

RCA Analogue Stereo (TV, Audio device)

Optical Input (Toslink)

Power Input: AC 230-240V, 50Hz

Dimensions:

BAR: 940 x 50 x 75mm (LxDxH)

SUB: 154 x 270 x 261mm (WxDxH)

Weight: 4.46Kgs (net weight combined set)

Weight: 5.6Kgs (gross weight combined set)

Inputs:

In accordance with our policy of continuous development, we reserve the right to change specifications without notice. Photographs are for illustration only and actual product may vary. E&OE.



Proper disposal of this product. This label indicates that, in the EU, electronic devices cannot be disposed of with regular household waste. Please use the return or collections systems of your municipality or contact the seller where you purchased this product

 
CAUTION To prevent electric shock do not plug a cable into a wall outlet, extension cord, or other receptacle unless the metal blades can be fully inserted to prevent blade exposure.

ROTH BAR 2LX


High-Power Soundbar with Wireless Subwoofer

Remote Control

Standby	Press to put soundbar into standby mode
Pair	Press to pair with wireless subwoofer (see instructions on pairing)
Vol +/-	Adjusts your soundbar's volume level
Mute	Mutes your system
Sub +/-	Adjusts your subwoofer's relative volume level.
Input	Switches between the soundbar's inputs. Toggle through choices: AUX1 > OPTICAL > BLUETOOTH

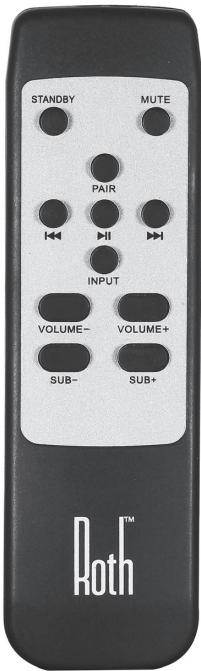



Soundbar Rear Panel

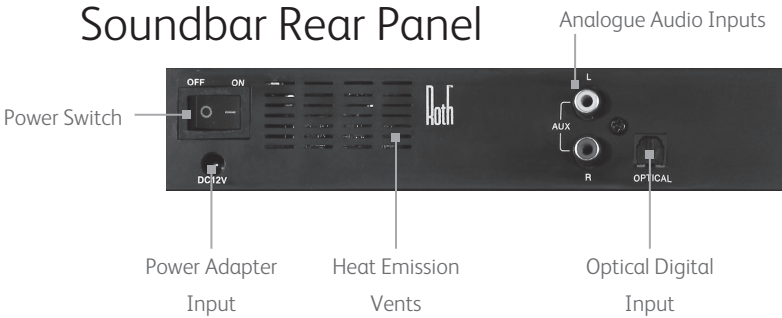 

Subwoofer Rear Panel

  - I/O button:** Power ON/OFF
- PAIR Button:** Press PAIR button for 5 seconds to connect with soundbar.
- PAIR-LED:** Flashes while the soundbar connects with the subwoofer, the LED stops flashing after successful connection

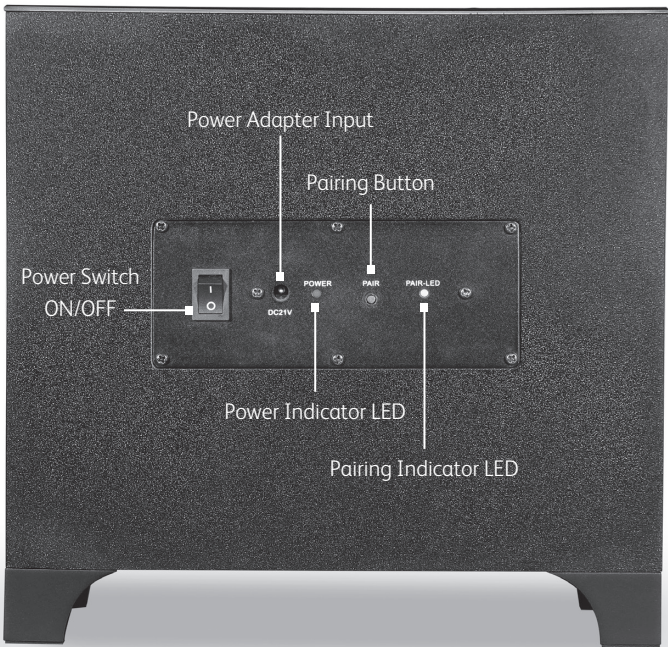

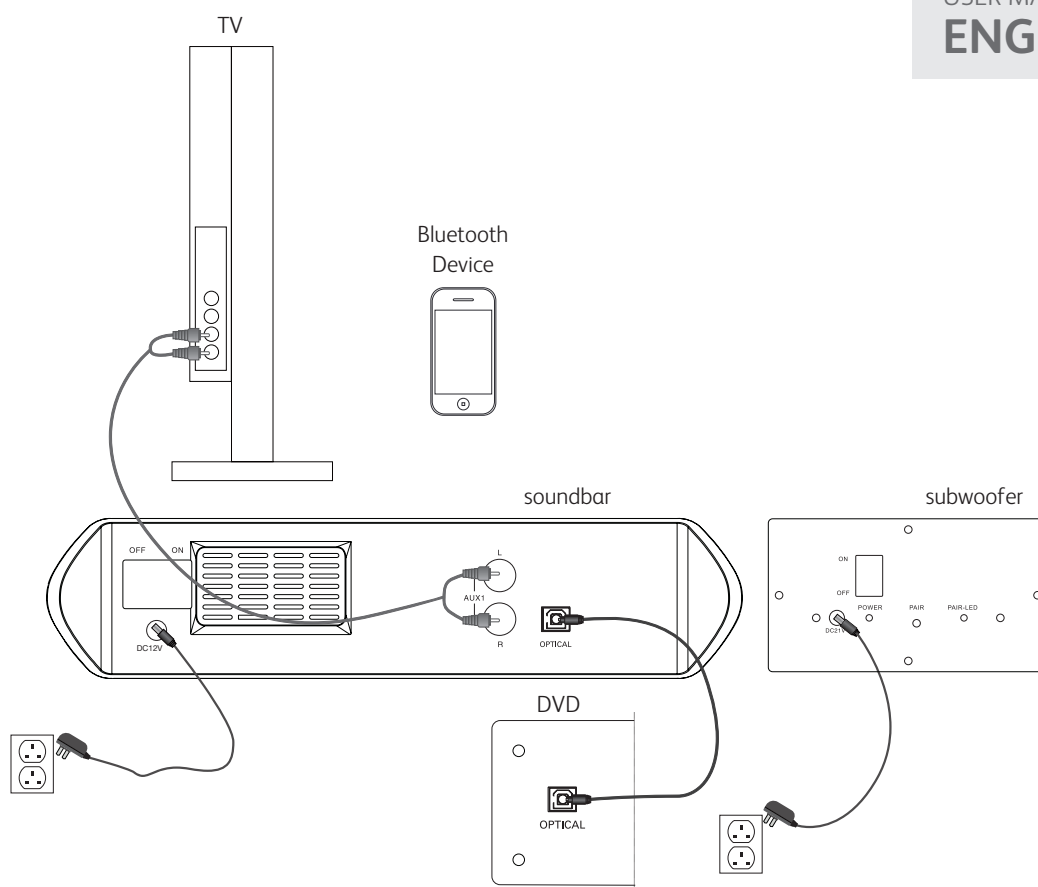

Connection Instructions

- Step 1:** Plug in the power adapters to both the soundbar and subwoofer.
- Step 2:** Switch the power button ON for both the soundbar and subwoofer
- Step 3:** Pair soundbar with wireless subwoofer (see below for Pairing instructions)
- Step 4:** Prepare sound source to connect with soundbar (default is AUX1)
- Step 5:** Press INPUT in remote to change alternately between: AUX1 > OPTICAL > BT
- Step 6:** When Bluetooth indicator is on, search for bluetooth name 'ROTH' to play sound.

Functions

PAIR - Pairing with wireless subwoofer. Press the PAIR key on the remote control for 5 seconds until the PAIR red light flickers on the soundbar, then press the PAIR button on the rear of the subwoofer until the green flashing light turns to red. If connection fails, turn the power off and on again and try again.

BT - Bluetooth The Indicator for Bluetooth connection status. Frequent blinking of the LED indicates a failure to connect, while infrequent blinking indicates a successful connection. Bluetooth connection name: ROTH.

AUX1 The input signal indicator. The indicator is green when using the AUX1 input.

OPTICAL The input signal indicator. The indicator is red when using the optical input, red light blinks slowly for Mute and only the PAIR indicator light is on when the soundbar unit is on standby.

ROTH BAR 2LX

High-Power Soundbar with Wireless Subwoofer



Recommended Soundbar Placement

We recommend you locate your soundbar horizontally, just below, or above your TV. The location that places the soundbar at the height closest to 'ear level' (from your listening position) is best.

Wireless Subwoofer

We recommend you place the subwoofer within a few inches of the front left or right corner of the room (for maximum bass output), or along the front wall (strong bass output and optimum blending with your soundbar). Connect your subwoofer's power supply to live wall power and to the input power jack on the side of the subwoofer and flip the On/Off switch to the On position. Press the Pair buttons on the soundbar (or Remote) and subwoofer. Within a minute or so your subwoofer should wirelessly connect to the soundbar and its Blue LED will stop blinking. Once connected play some music and adjust the subwoofer's relative volume level using the Sub+ & Sub- buttons on your soundbar remote. The subwoofer comes with an Auto-On/Off circuit. This circuit will activate the subwoofer when the soundbar is active and deactivate it when the soundbar is turned off.

 


Flush Wall Mounting Instructions:

Please note: The hanging methodology employed with this product is intended for mounting on walls of standard construction, which includes most residential and business office environments. Such environments are constructed with wooden studs behind the walls that will securely accept the enclosed screw. If you do not notice resistance behind the wall when drilling the pilot hole you probably do not have a stud in that location and will then need to use the enclosed wall anchor.

Wall Mounting Instructions:

1. Please refer to the back of the soundbar for Wall mounting spacing (400mm); fixed screw holes (A) must be placed in proper position on the wall.
2. Faster screws (B) in the correct positioning holes, thereby installing the plastic cradle.
3. Soundbar fastens directly to the plastic bracket.

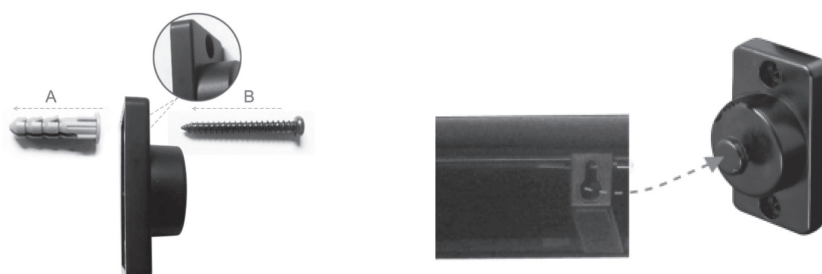

NOTES



facebook

Find us on Facebook.
Just search for Roth AV.

rothaudio.co.uk