



**FLOWER 002**

**USER MANUAL**

# FIXTURE BREAK DOWN.



# CONNECTION TO MAINS:

<b>Core (EU)</b>	<b>Core (US)</b>	<b>Connection</b>	<b>Plug Terminal</b>
Brown	Black	Live	<b>L</b>
Light Blue	White	Neutral	<b>N</b>
Yell/Green	Green	Earth	<b>E</b>

The Longman Flower 002 uses 220 volts power and consumes 24 watts.

Install a suitable plug on the power cord; note that the cores in the power cord are colored according to the above table. The Earth must be connected!

If you have any doubts about proper installation please consult a qualified electrician.

# DMX -512 CONNECTION:

The fixture is equipped with 3-pin XLR sockets for DMX input and output. The sockets are wired in parallel.

Only use a shielded twisted-pair cable designed for RS-485 and 3-pin XLR-Plugs and Connectors In order to connect the controller with the fixture or one fixture to another.

## DMX Connection:

Pin 1 – Shield

Pin 2 – Signal (-)

Pin 3 – Signal (+)



# Addressing the fixture:

1. Press “menu”
2. Press the “up” button till you see “Addr”
3. Press “enter”.
4. The display will flash “A” followed by a number between 0 and 512.
5. Use the “up” & “down” keys to set desired address.
6. Press “enter”
7. The display will now stop flashing and the address is set.

## DMX CHART:

Channels	Value	Function	Type
1	0-255	Red	Prop.
2	0-255	Green	Prop.
3	0-255	Blue	Prop.
4	0-255	White	Prop.
5	0-255	Strobe	Prop.
6	0-255	Effect	Step.

# **Menu functions:**

The following illustrates the onboard menu functions and what they do.

**“SoUf ”: Sound trigger flash mode.**  
When the unit is in this mode it will strobe in accordance to the ambient sound.

**“SoUA ”: Sound trigger Auto mode.**  
When the unit is in this mode it will change color in accordance to the ambient sound.

**“Pr00 - Pr15 ”: Preset mode,**  
This mode is for stand-alone use there are 16 programs built in to the unit set the desired program and press enter.

**“SP00 - SP15 ”**: Speed mode, this is for stand-alone use, there are 16 speeds built in to the unit set the desired speed and press enter. For example, if you choose a color scroll in the program mode this will set the speed of the scroll.

**“ Flash -FL00 - FL15 ”**: Flash mode, this is for stand-alone use, there are 16 Strobe functions built in to the unit. Set the desired strobe and press enter.

**“bL00 - bL15 ”**: Color temp orange mode, this is for stand-alone use, there are 16 color temp functions built in to the unit. Set the desired color temp from warm white to cool white and press enter.

**“gL00 - gL15 ”: Color temp magenta mode, this is for stand-alone use, there are 16 color temp functions built in to the unit. Set the desired color temp from magenta to pale pink and press enter.**

**“rL00 - rL15 ”: Color temp blue mode, this is for stand-alone use, there are 16 color temp functions built in to the unit. Set the desired color temp from blue to pale blue and press enter.**

**“ Fade -FA00 - FA15 ”: color fade mode, this is for stand-alone use, there are 16-color fade functions built in to the unit. Set the desired Color fade and press enter.**



**“ ASC -AS00 - AS15 ”: auto scroll mode, this is for stand-alone use, there are 16-color scroll functions built in to the unit. Set the desired Color scroll and press enter.**

Please note that the “sp” function can adjust the speed of any program you choose.