

P1



CE

User's Manual Air Inflator SAI-104 for Cars

Product Details:

1. Pressure gauge, can read PSI or Kg /cm²
2. Tyre valve connector
3. 12V cigarette lighter connector
4. ON- OFF switch
5. Deflation Switch
6. Hose Connectors for other uses



Product Features

1. Suitable for all Cars.
2. Fills up air in tyres in just minutes
3. Deflation switch for correcting the air pressure
4. Also suitable for motorcycle, cycles, balls, water pools and other domestic needs.
5. Handy in emergencies

P2

Operating Instructions Air Inflator SAI-104

Securide Air Inflators are very useful for maintaining the tyre pressures and for emergencies,. It is very easy to use. It will take just minutes to maintain the tyre pressure of all the tyres.



Unscrew the valve cap for filling the air in the tyre.



Connect the cigarette lighter connector of the Air Inflator to Cigarette lighter socket in your Car. Light in the Digital pressure gauge will turn on.



In case of any problem with cigarette lighter, you can also use crocodile Connector adopter to connect to vehicle battery (**not supplied with the product**).



P3



Pull the parking brake, keep gear in neutral and start the engine. It is recommended to keep the engine running during use.



Screw the Air Inflator Hose valve connector on the valve. Select PSI or Kg/cm². Press the air Inflator ON / OFF switch to ON position.

Keep looking at the pressure gauge. When the desired pressure is achieved, turn off the Inflator.

When inflator is running the pressure gauge shows the line pressure, which is slightly higher than actual tyre pressure. Check the pressure after switching off the inflator and keep it as per recommended pressure.



Use Deflation Switch to remove the excess air from tyre for correcting the pressure if required.

Now disconnect the Inflator hose from the valve and the Cigarette lighter connector.

Note :

1. Do not use the Air Inflator for more than 10 minutes at a stretch, allow it to cool down for 10 minutes before reuse.
2. Do not leave the air Inflator unattended.
3. Do not over inflate the tyres
4. Make sure that your cigarette lighter is free from ash or residues. A dirty cigarette lighter can cause Air Inflator and cord to overheat.
5. The Air Inflator is designed to for use only on 12V DC, do not attempt to use on any other source.

P4



Keeping it back:

1. Insert the electrical wire in this area.
2. Route air pipe as shown

Maintenance

Keep the Air inflator's hose valve connector clean so that there is no obstruction to air flow.

Advantages of maintaining the tyre pressure:

1. Improved Tyre life
2. Improved fuel consumption
3. Improved safety during drive.

During emergency of tyre puncture, you can repair your Tubeless Tyres without removing the tyre from the car , most of the time. Use our Tubeless Tyre Repair Kit SRK -101 for repair of the tyre and fill up air immediately using Securide Air Inflator. All within minutes.



Brought to you by:

Motocop

29, Pace City I, NH-8, Gurgaon-122001, India

Ph: +91 8285 888 000 email: customer.care@securide.in

Skype : securide.care www.secure.in