



## **Marco Beverage Systems Ltd.**


### **INSTRUCTIONS FOR MODEL**

# **TUBULAR FONT**

(P/N: 1000585)

(With Square Drip Tray)

<b>Marco Beverage Systems Limited.</b> 63d Heather Road, Sandyford Industrial Estate, Dublin 18.	<b>Marco Beverage Systems Limited.</b> Shire House, Strixton Manor, Strixton, Wellingborough, Northants, NN29 7PA
Ireland Tel: +353 (0)1 295 2674 Ireland Fax: +353 (0)1 295 3715 email: <a href="mailto:sales@marco.ie">sales@marco.ie</a> <a href="http://www.marco.ie">www.marco.ie</a>	UK Tel: +44 (0)2072 744 577 UK Fax: +44 (0)2079 788 141 email: <a href="mailto:sales@marco-bev.co.uk">sales@marco-bev.co.uk</a> <a href="http://www.marco-bev.co.uk">www.marco-bev.co.uk</a>

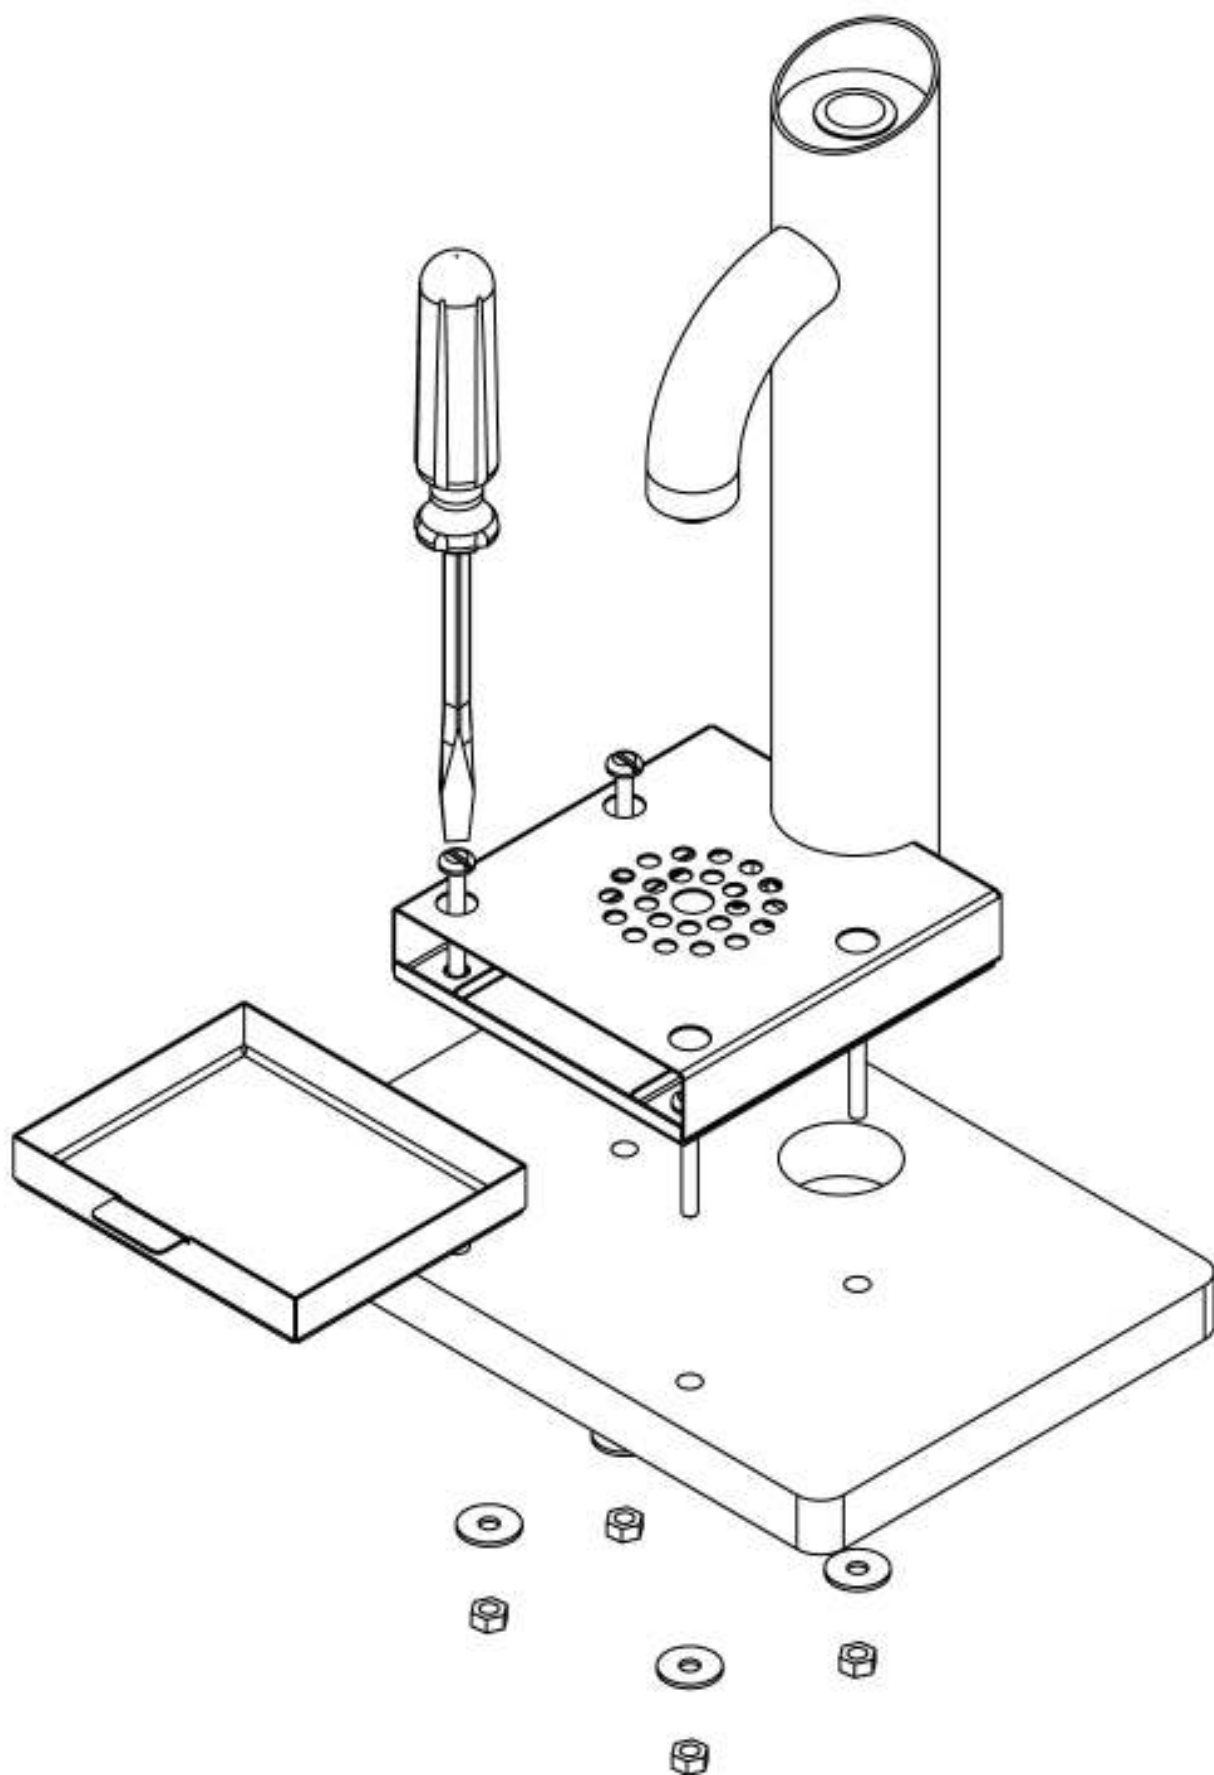

## **INSTALLATION:**

### **Mounting:**

- Drill the counter using the dimension on drawing provided. The Font is then securely mounted as shown above using the screws, washers and nuts provided. The wires and water outlet tube should pass freely through the large hole through to the underside of the counter

### **Plumbing:**

- The silicone tube from the under counter boiler should be attached to the black fitting using the provided clip. This should be securely tightened to ensure no leaks

### **Electrical:**

- The wires from the font consist of 2 male bullets. These should be connected to the wire coming from the under counter boiler.

## **USING THE FONT:**

The font is simply activated by pressing the switch in the top. The font will either dispense a set amount of liquid after a single press, or, need to be pressed continuously to dispense the required amount of liquid.

The dispense functionality is determined by the electronics in the undercounter boiler and not changeable at the font.

The drip tray should be emptied on a regular basis.


## **CLEANING:**

The exterior of these fonts may be cleaned with a damp cloth and a light detergent. Do not use abrasive cloths or creams, as this will spoil the finish of the font. Do not use a water jet or spray. Beware of accidentally operating the font when cleaning the front of the machine.

## **RISK OF SCALDING:**

Beware of accidentally operating the font –especially when cleaning the front of the boiler.

**The utmost care has been taken in the manufacture and testing of this unit. Failure to install, maintain and/or operate this font according to the manufacturer's instructions may result in conditions that can cause bodily injury or damage to property.** If in doubt about the serviceability of the font always contact the manufacturer or your own supplier for advice.

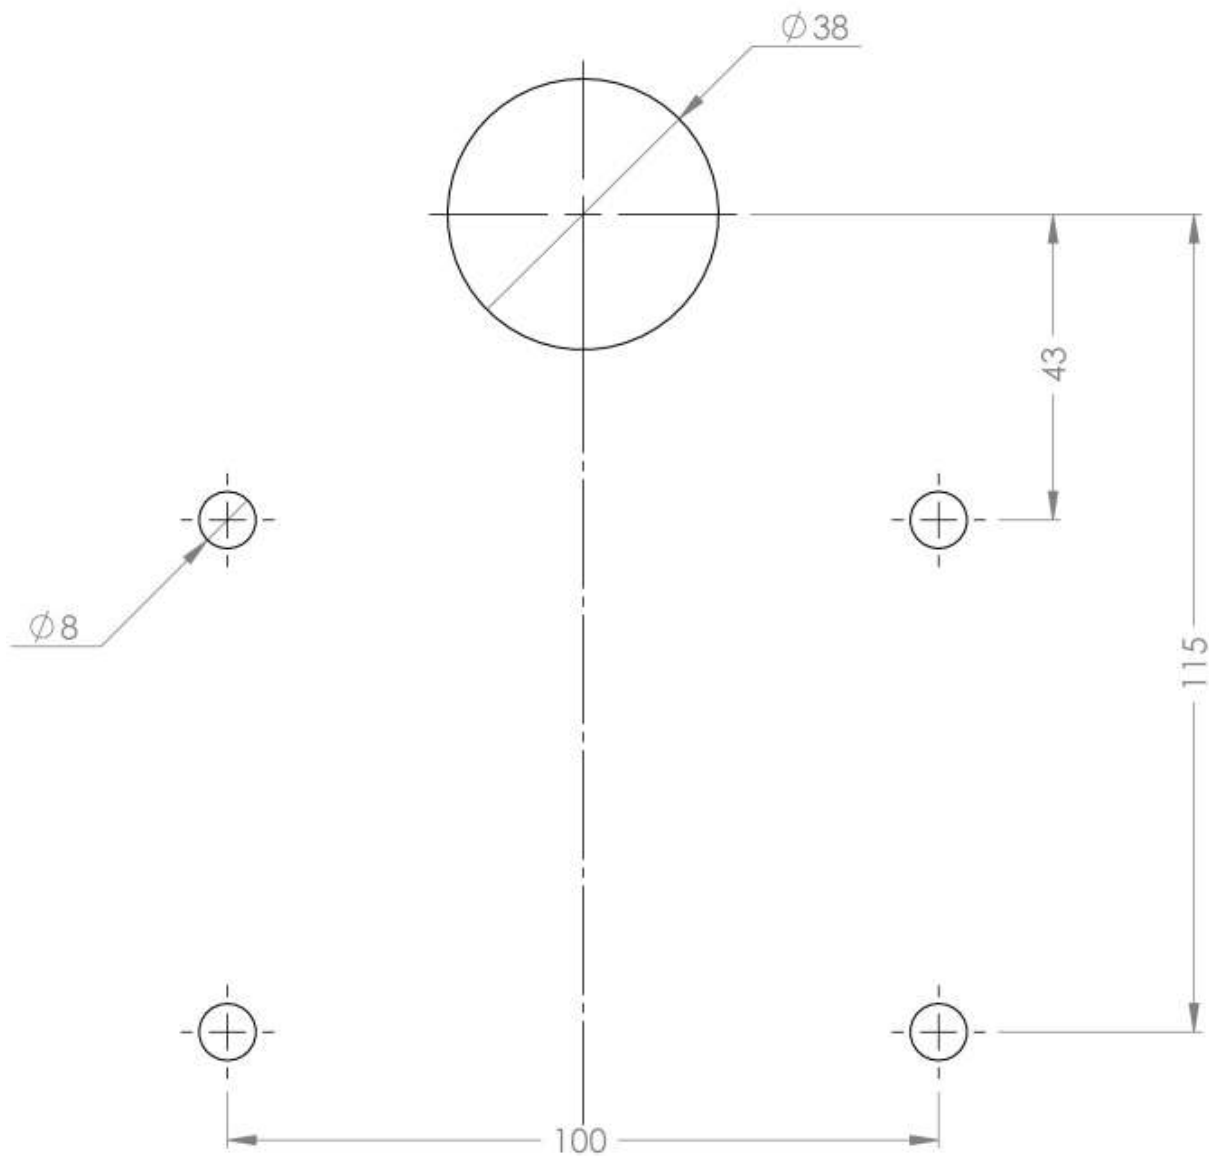

Drilling Template

MARCO is an  
ISO9001:2000  
Registered  
Company.

