 


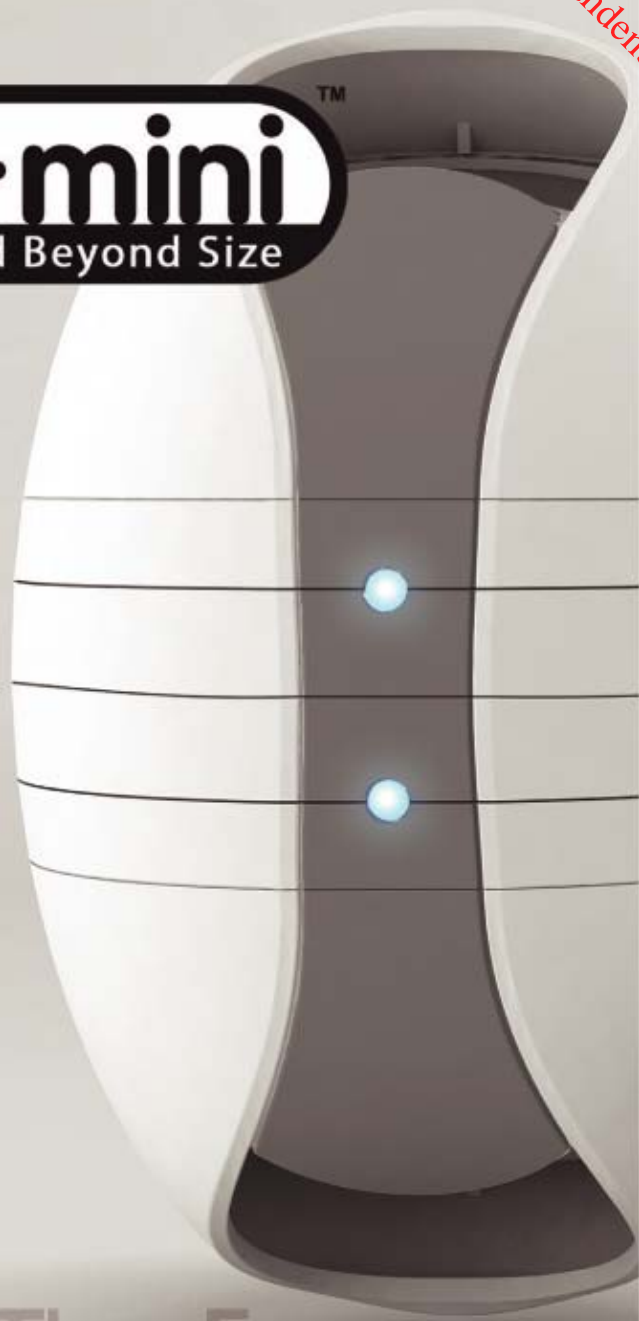

X-miniTM
Sound Beyond Size



Listen To The Future

CE Certificate

Declaration of Conformity

X-mini™ MAX II Capsule Speaker™

EC-Declaration of Conformity to the essential requirements of the applicable 89/336/EEC as last amended by EC Directive 93/68/EEC

We, (Xmi Pte Ltd), declare under our sole responsibility as authorized representative that the following product

Brand Name:	X-mini™
Model Name:	X-mini™ MAX II Capsule Speaker™
Model No.:	XAM7

Is fully in conformity with the essential requirement of the European Council Directive 93/68/EEC.

This declaration is based on the full compliance of the product with the following European standards:

EN 55022: 1998 + A1: 2000 + A2: 2003
EN 55024: 1998 + A1: 2001+ A2: 2003

Introduction

Congratulations on your purchase of an X-mini™ product. The X-mini™ MAX II Capsule Speaker™ comes with vastly improved features while retaining the best characteristics of the stereo X-mini™ MAX. Introducing a larger 40mm driver, the X-mini™ MAX II projects richer and crisper sounds resulting in a greater user experience from its innovative directional capsule design. Be it for individual or group entertainment, the X-mini™ MAX II is designed to meet the requirements of even the most demanding music enthusiasts.

Safety Rules

- 1) Please follow the rules depicted in this manual closely to ensure your safety. Before using the speaker, we would strongly encourage you to read through this user manual.
- 2) Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- 3) Keep this speaker out of reach of children. Take note that this speaker is not edible and should not be placed in your mouth.
- 4) Do not modify, repair or dismantle the speaker. Doing so may result in fires, electric shocks, complete breakdown of the speaker, etc. All of which, are not covered under warranty.
- 5) Do not use any diluents or volatile liquid to clean the speaker. Keep in mind that the surface of the speaker should only be wiped with a clean dry cloth.
- 6) Do not use this speaker in locations where there are high-temperatures or high humidity levels (For instance, bathrooms); ideally, the speaker should be used in a location free of dust and exposure to direct sunlight.
- 7) Do not insert foreign objects, such as pins, into this speaker.
- 8) Do not touch this speaker when your hands are wet as this may result in electric shocks.
- 9) Turn down the volume before/while using this speaker as sudden loud sounds may damage it.
- 10) Refrain from dropping the speaker as well as avoid any collision with other objects.
- 11) Do not use this speaker when in hazardous locations.
- 12) Should any abnormal situations or problems occur while using the speaker, discontinue use of speaker immediately.

Package Contents

 
The Package will contain the following:

1 x X-mini MAX II

1 x User Manual


1 x Input/Audio and Charging Cable

1 x Protection Pouch

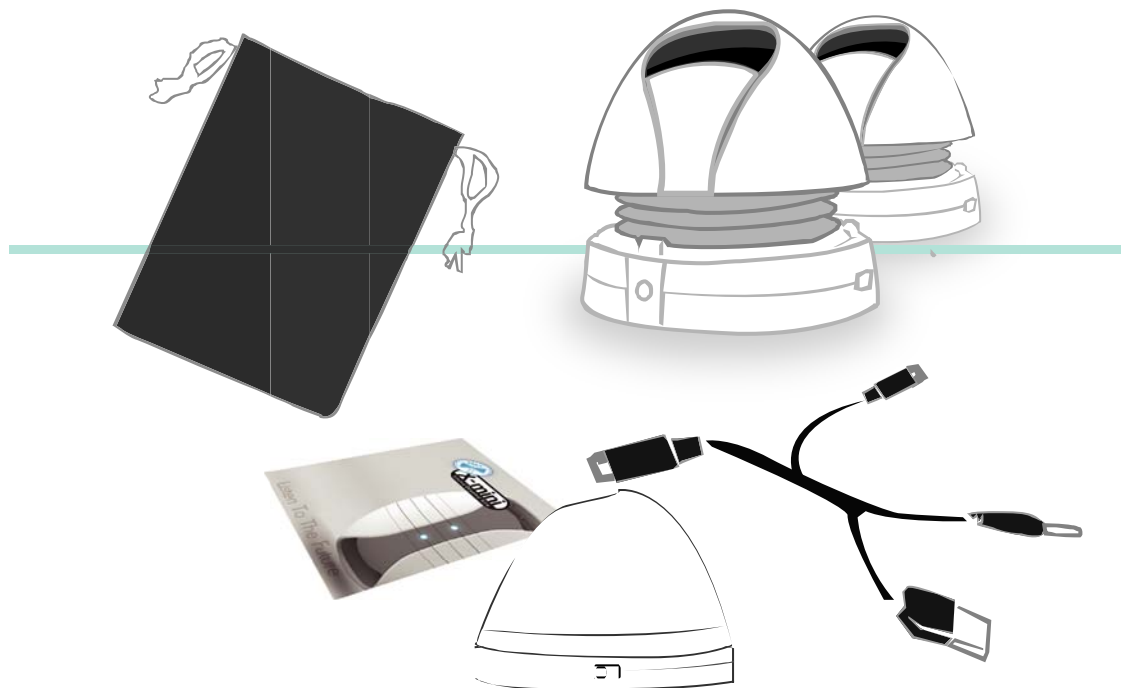


Connection Diagram

 CAPSULE MODE

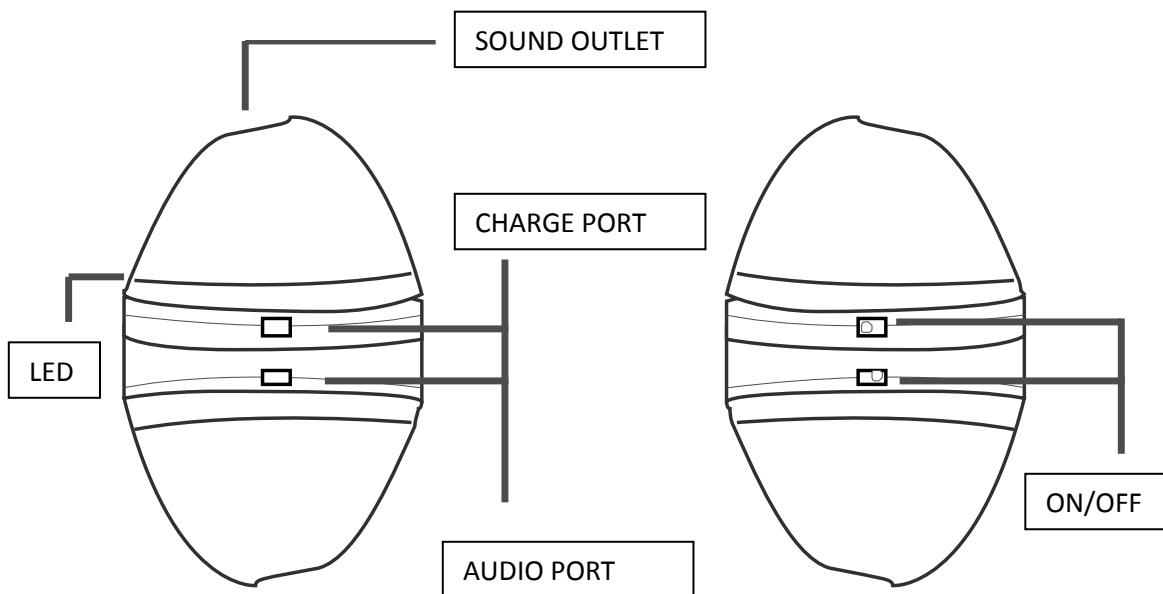


SPEAKER MODE

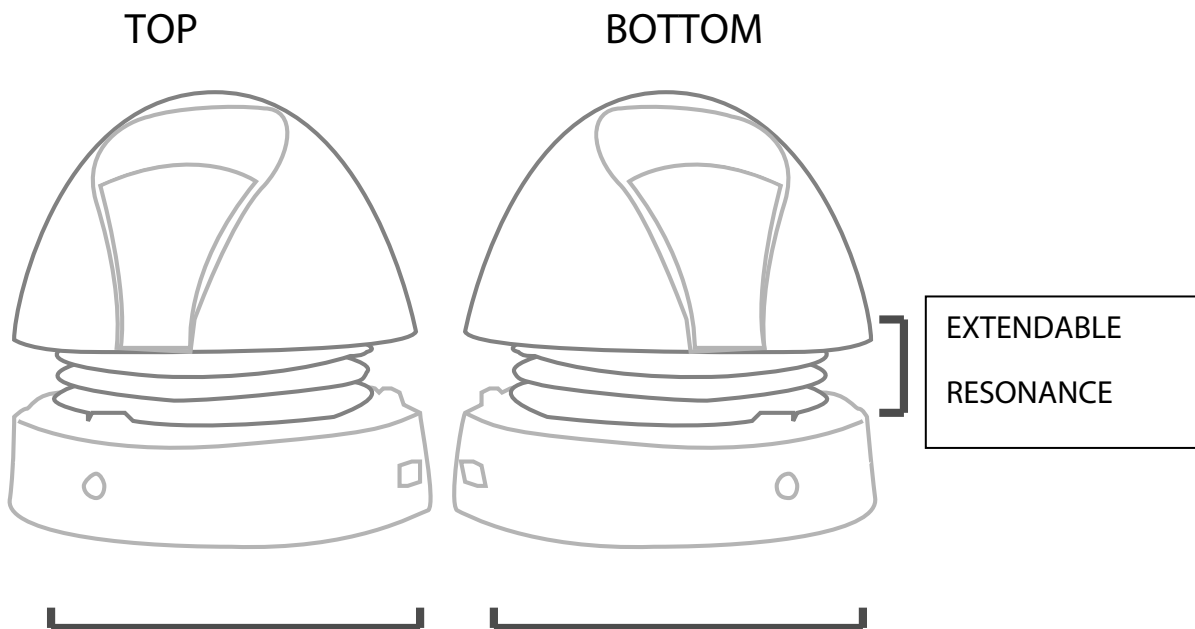 

SEPARATEABLE MAGNETIC BASE

Buddy-Jack™

 This all new feature enables you to connect one X-mini™ MAX II to another, to form a self-powered, bass-enhanced portable speaker system with a virtually endless “daisy chain” of speakers. With this feature, you can now combine your X-mini™ MAX II together with your friends’. You may also connect previous generations of X-minis™ or even earphones into the “Buddy-Jack” to expand on volume or multi-functionality

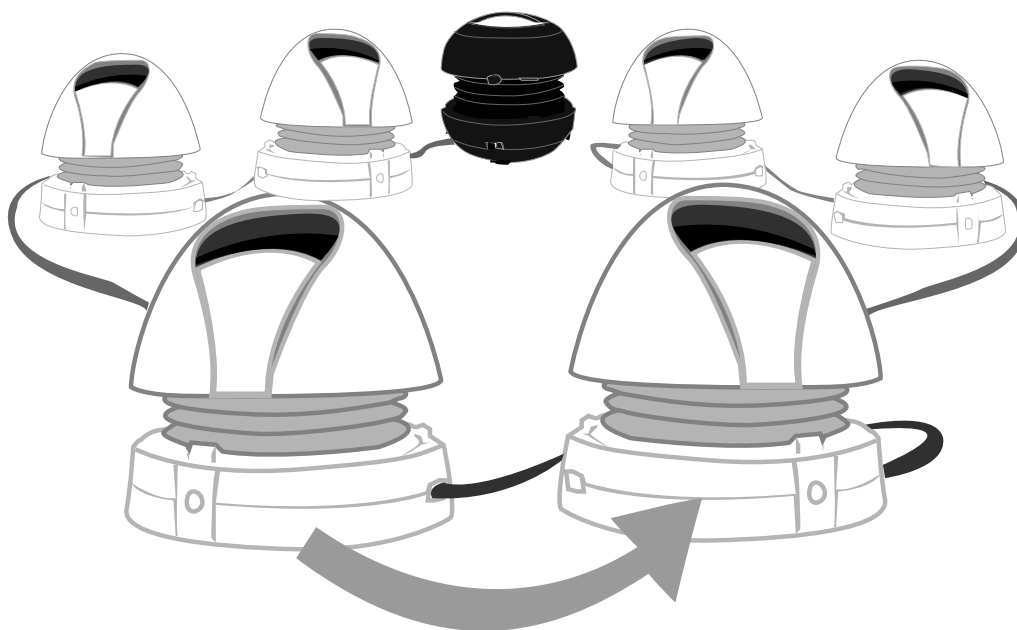


Connect another 2 pairs of X-mini™ MAX II into the
Buddy-Jack™ to create jaw-dropping audio!

Mode of Usage





CAPSULE MODE

 The X-mini™ MAX II speakers can be connected at the bottom by a magnetic base to form the Capsule Mode for easy storage and increased portability.

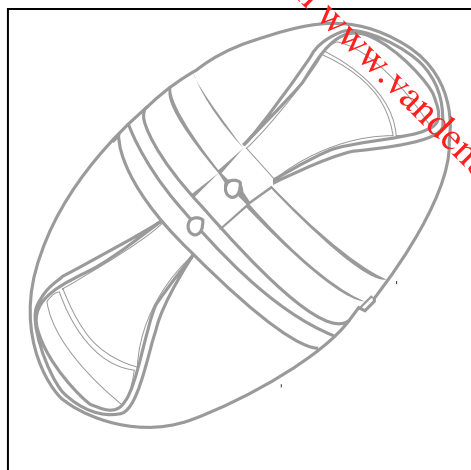


SPEAKER MODE

    
Separate the speakers from each other by gently pulling each speaker apart from the Capsule Mode.

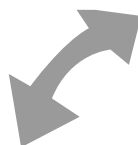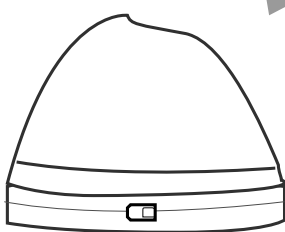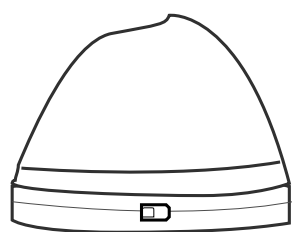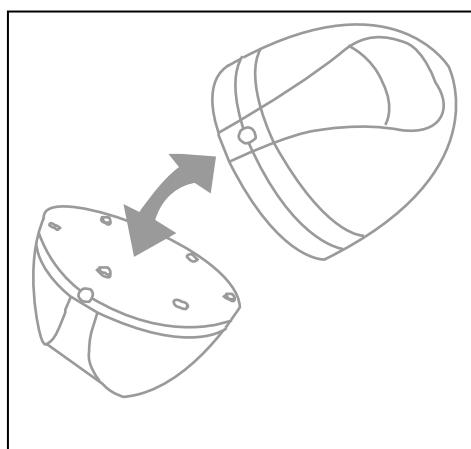

 Hold onto the top of the speaker and twist anti-clockwise to reveal the resonator.

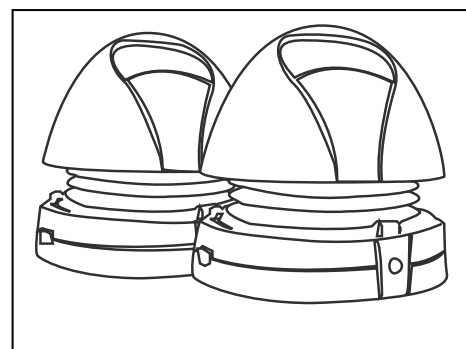

Connection

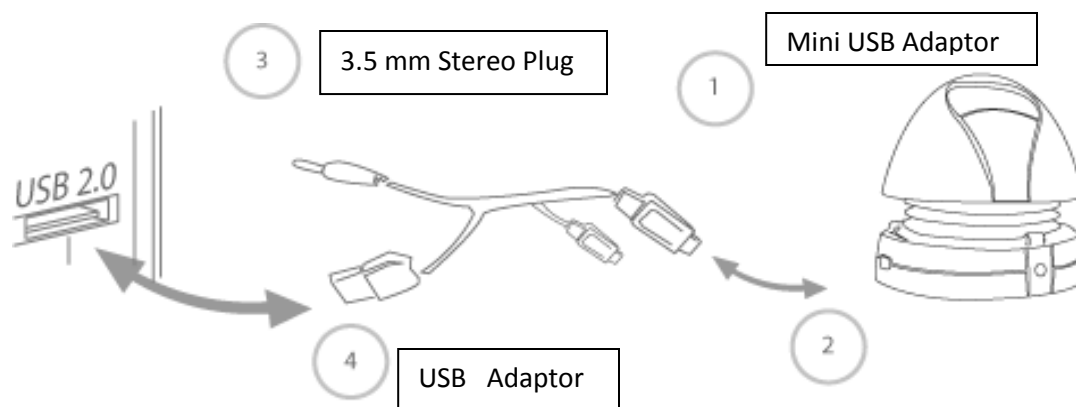 

Connection Connect your speaker to your music player:

Connect part 1 to 2 (mini-USB plug connects to CHARGE/AUDIO port located on the side of X-mini MAX II Capsule Speaker)

Connect part 3 to any audio playback devices with 3.5m Stereo jack

Charging

When the blue LED indicator dims, please connect part 4 to any USB port located on your computer to charge your speakers.

LED Battery Indicator

When charging:

Red – X-mini MAX II is charging

Blue – X-mini MAX II is fully charged

When in use:

Blue – X-mini MAX II is turned on

Blue (dim) – Battery low

Technical Specification

MODEL: X-mini Max II

Dimension (L×W×H)	:	65.8mm×53.4 mm (closed resonator)
Net Weight	:	178g
Speaker	:	MAGNETISM PREVENT D40*H20mm (4 Ω) /2W
Loudspeaker Output	:	2.5W×2
Frequency Response	:	200 Hz~18 kHz
Signal-to-Noise	:	≥80dB
Distortion	:	≤1.0%
Playback Time	:	Up to 12 hours
Battery Voltage/Capacity	:	400mAh
Battery Charging Voltage	:	5V/+0.5V
Battery Charge Time	:	5V input - 2.5 hours

F.A.Q

1. Why is there no power even when speaker is turned on?

Ans: Ensure that the battery has been charged for up to 4 hours. The LED will turn red when it is charging. Please set the volume level of your music player to 60-70% of its maximum volume for optimal performance.

2. There is no sound when playing music!

Ans: Check to see if the volume is adjusted too low. If it is too low, turn it up. Make sure that the 3.5mm stereo plug is properly connected.

3. The bass production is missing.

Ans: The vacuum below might be punctured. If so, please check warranty coverage.

4. Is this a USB audio device?

Ans: No, this is not a USB audio device. The USB plug is only for charging. Use the 3.5mm stereo plug for audio inputs.

5. How do I know that the speaker has been fully charged?

Ans: When the indicator LED turns to blue from red, the speaker has been fully charged.

Limited Warranty

- 1) If within 12 months of purchase this device or any part thereof is proven to be defective by reason of faulty workmanship or defects in materials, we will at our option repair or replace the same free of charge of labor or materials on condition that:
 - The original invoice or sales receipt with the date of purchase, or stamp from the dealer is presented together with the defective unit.
- 2) The warranty does not cover Product failures which have been caused by use of accessories other peripheral devices which are not X-mini™ branded original accessories intended for use with the Product.
- 3) The warranty does not cover Product failures caused by:
 - Modification, repair, and disassembly by any person who is not authorized by the manufacturer.
 - Any defective unit or part shall become property of the manufacturer. The warranty does not cover any damage caused by dropping or hitting of the product or misuse or neglect of the product.