Manual myPhone HAMMER 2+



Table of contents:

Table of contents:.....2 Technical specification of myPhone Hammer 2+61. Phone's design – the introduction......7 1.microUSB port (under the rubber plug)...8 5. The navigation buttons "up", "down", "right", "left" and button "OK"8 6.Button < green phone>.....8 7.Button <red phone >......8 11. 12. Installation of SIM card, memory card and

the battery	9
Battery charging	11
2. Using the basic functions	12
Locking the phone's keypad	12
Access to the menu	12
Turning on/off the "silent" mode	13
Functions regarding calls	14
Making phone calls	14
Receiving a phone call	14
Text messages	15
Sending the message	15
Displaying the messages	17
Phone contacts in myPhone HAMME	R 2+18
Adding new contact	18
3. Using the advanced features	19
Missed calls	20
4. Remaining functions of the phone	22
Display functions	23
Factory settings	27
Flashlight	27
pushing this button for 3 seconds	27
Call register	28
-	

Calendar	29
Bluetooth	29
Connection of Bluetooth devices	31
Sending files through Bluetooth	32
the approval of the receiver	32
Camera	33
Taking pictures	33
Recording videos.	34
Using the Internet	35
Data account settings	35
The phone myPhone Hammer 2+ is	
equipped with the Internet service	35
Using the web browser.	35
Using the email	36
5. General rues of proper phone maintenance	e37

Package contents of myPhone Hammer 2+:

- Before using your phone, make sure all of the following items are included in the box:
- Mobile phone: myPhone Hammer 2+,
- Battery,
- Charger (adapter + USB cable),
- Manual,
- Warranty card,
- Metal tool for untwisting the screws on the back flap.

Technical specification of myPhone Hammer 2+

- Display: TFT 2.2" QVGA
- Battery: Lit-ion 1450mAh
- Camera: 2 Mpx
- Bluetooth
- MicroUSB
- microSD slot card up to 8 GB
- IP68

1. Phone's design – the introduction

View of the phone and its keys and

functions



1. microUSB port (under the rubber plug).

- 2. LED.
- 3. Speaker.
- 4. Display.

 The navigation buttons "up", "down", "right", "left" and button "OK"

- 6. Button <green phone>.
- 7. Button <red phone >.
- 8. Keypad.
- 9. LED diode.
- 10. Camera.
- 11. Back speaker (buzzer).
- 12. Battery cover.

Turning on/off the device

turn on or turn off your phone, press and hold **<red phone>**.

If the phone is turned on soon after you will be asked for entering a PIN code (you'll see it in the form of stars: ****) and then press **<OK>**.

Installation of SIM card, memory card and the battery

Turn off the phone, remove the back cover (by unscrewing two screws with the usage of special metal tool which you can find in the box).



Insert the SIM card - SIM card must be placed with its gold contacts facing down in the way in which the recess is stamped.

Insert a memory card. MicroSD memory card should be placed with its gold contacts facing down in the way in which the recess is stamped. The maximum supported capacity of the memory card is 8 GB.

Insert the battery - the battery should be placed in such a way that its gold

contacts will touch the connector in the phone.

Tap the battery cover (pressing it into proper place and tighten the screws).

Battery charging

Using the nail, pry the rubber cap at the side of the phone to reveal the telephone connector. Connect the microUSB-B cable to the microUSB connector in your phone and then connect the USB-A connector to the adapter and to the low-voltage outlet.

During charging, static battery icon **O** will be animated which is located in the top of the right corner of the screen.

2. Using the basic functions

Locking the phone's keypad

To unlock the phone (when the screen is blank) press any key to turn on the screen then press the left button "Unlock" (located at the left corner at the bottom of the screen) and then the button <*> on the phone's keypad. Keypad will be unlocked.

Access to the menu

To gain the access to the phone's menu press the middle button **<OK>** or **<Menu>** on the desktop of the phone.

Using the navigation keys <up>, <down>, <left> or <right> go to the appropriate menu item.

Press the button <OK> to confirm (enter the menu item) or <Back> to return to the previous menu screen / desktop.

Customizing your telephone

The phone myPhone HAMMER 2+ can be customized to your needs. As a result, the usage will be more pleasant and easier.

Turning on/off the "silent" mode

To turn off the sounds in a standby mode, use the key **<#>**. Press this button and hold for about three seconds till the message will appear: "Silent mode turn on". Pressing and holding the key once again **<#>** will cause the return to the previous sound profile (the profile before muting sounds).

Sounds and user profiles

To set the phone's volume choose [User profiles] which is located in [Menu] \rightarrow [Settings] \rightarrow [Profiles].

Functions regarding calls

Making phone calls

In standby mode of the phone (on the main screen) enter the number using the keypad.

It is recommended to enter the dial code prior to the number of the phone.

Press the button **<green phone>** to make a phone call.

Press the button **<red phone>** to end the phone call.

Receiving a phone call

During an incoming call press <green

phone> or **[Receive]** to answer the incoming call.

Press the button **<red phone>** to rejent/end the call.

Text messages

Sending the message

Choose: [Menu] \rightarrow [Messages] \rightarrow [Create the message] \rightarrow [SMS].

Enter your message using the keypad. The characters are entered letter by letter.

The button <#> is used to change the input method. The choices are the following ones:

- PL there will be introduced only capital letters,
- pl there will be introduced only

lowercases,

- PI the first inserted letter will be capitalized and the rest lowercase,
- 123 there will be introduced only numbers.
- To enter the special charakter for example: period, comma, dash, etc. press <*> and choose a symbol from the list or press the button <1> in appropriate number of times (in a mode other than "123").
- To enter a space between words press the button **<0>**.
- The example of entering the characters:
- To enter the letter "b" please press the button <2> three times. To enter the letter "d" please Press the button <3> etc.

Once you have entered the message press [Options] then choose the option [Send].

It will appear the selection list:

- [Enter the number] enter the number using the keypad then press <0K>.
- [Add from the phonebook] when you select this option then enter the first few letters of the contact's name to search for it in the phonebook.

Select $\langle OK \rangle$ to confirm the choice. After entering the phone number / chosen contact please select: [Options] \rightarrow [Send] to send a message.

Displaying the messages

Select: [Menu] \rightarrow [Messages] \rightarrow [Inbox] select the message from the list and then choose [Options] \rightarrow [View] \rightarrow <Select>

to read its contents.

Phone contacts in myPhone HAMMER 2+

Adding new contact

To add new contact please choose: [Menu] \rightarrow [People] \rightarrow [New contact] \rightarrow $<OK> \rightarrow$ [to SIM1] or [to SIM2], [On the phone]) \rightarrow <OK>.

Enter the contact information by selecting the name or number by the cursor and and then press **<OK>**. After entering the phone number / name press **<OK>**. Select: **[Options]** \rightarrow **[Save]** to save the contact. If you want to save a phone contact, apart from the name and phone number, you can add a personal ringing tone. To move contacts between the SIM card and the phone memory select: [Menu] \rightarrow [Contacts] \rightarrow [Options] \rightarrow [Contacts settings] \rightarrow [Move contacts] \rightarrow [From phone] or [from SIM1]), then choose [to SIM1], [to SIM2] or [to phone] and confirm <OK>

Searching for a contact

To serach a proper contact please select: [Menu] \rightarrow [Contacts].

Type the first letter of the name.

The screen displays a list of contacts beginning with the letter specified.

To find another contact just use the navigation keys **<up>** and **<down>**.

3. Using the advanced features

Connecting with the contact from the phonebook

To connect with the number from the submenu **[People]** (the phonebook), following steps have to be done:

In a standby mode select [Menu].

Choose submenu [People] and then confirm using the button <OK>.

In the list of contacts search for the proper contact (by entering a contact name via the keypad) and then make a call by pressing **<green phone>** on the keypad.

Missed calls

Missed calls are displayed on the phone's screen.

The message on the display informs

about the missed call and the icon:

To check who has called:

Press [View].

Connecting your phone to the computer

myPhone Hammer 2+ can be connected to a PC via USB interface. This allows you to preview and exchange the data between your computer and your phone. To do this:

- 1) Connect the microUSB connector to your phone (located on the left side of the phone) then plug USB-A to USB connector of your computer.
- 2) On the phone's screen should appear the information about USB connectivity.
- 3) You should select from the list the following option [mass-storage device].
- 4) The phone is connected to your

computer. The contents of the memory can be viewed using Windows Explorer.

4. Remaining functions of the phone

Time and date settings

To set the time and date please select: [Menu] \rightarrow [Settings] \rightarrow [Phone settings] \rightarrow [Time and date].

Choose [Set time / date] and confirm by the button <OK>.

Enter the current time using the numeric keypad.

In the option [Phone options] \rightarrow [Set the format] select the appropriate format for date and time on your phone.

Setting the menu language

To set or change the language of the phone select: [Menu] \rightarrow [Settings] \rightarrow [Phone settings] \rightarrow [Language].

Select preferred language from the list.

Display functions

[Wallpaper] → [Systemic] (if you want to see the systemic wallpapers) or choose [Defined by the user] (if you want to add your own wallpaper from a microSD memory card) then select any image from the list. To activate the preview of the selected image, select <OK>.

To set the selected image as a

wallpaper select: [Preview] \rightarrow [OK] \rightarrow [OK].

- [Screensaver] → [System] (if you want to see the systemic wallpapers) or choose [User] (if you want to add your own wallpaper from a microSD memory card) then select any image from the list. To activate the preview of the selected image, select <OK>.
- [Show the time and date] turn on/off the display of date and time on the home screen phone.
- Call settings
- They are available in [Menu] → [Call register] → [Call settings] →
 [Advanced settings]. There are available such settings as:

automatic callback, call time control (the function [**Reminder**]) notification for calls

or the answer mode settings.

Configuration of the alarm / alarms

From the main menu select [Organiser].

Select the position from the list [Alarm] Rusing the navigation keys <up> and <down> and then confirm your choice pressing the button <OK>.

Select any item from the list and choose [Edit].

Using the function **[Status]** turn on (or turn off) the alarm.

Moving to the the items below (button <up>) you can set the time of the alarm using the numeric keypad of the phone.

Another function that you can set is selection of days when the alarm must be implemented (Function [Repeat], possible options are: once, everyday,

abnormally).

Lower, there is an option [alert type] where it can be defined whether the alarm will only consist in the vibration of the phone, ringtones or both the vibration and the ringtone.

In order to approve the settings of the alarm choose ([Perform] \rightarrow [Yes]).

Factory settings

In order to recover the factory settings of the system choose [Menu] -> [Settings] -> [Recover factory settings] next enter the password of the phone and approve your choice with the button <OK>.

The code to recovery of the factory settings is: 1122.

Flashlight

In order to turn the flashlight on push (and hold for about 3 seconds) the button **<OK>** on the keyboard of the phone. Turning the flashlight on and off is

possible only by pushing this button for 3 seconds.

Call register

In the phone there is available an option [Menu] -> [Phone calls] -> [List of phone calls]. By that it is possible to view the call register (see what phone calls were dialed, received, etc.). In the submenu there are items such as:

- Missed calls
- Dialed calls
- Received calles
- Delete register

In order to enter one of the options listed above choose it from the list and push the button **<OK>.**

Calendar

The calendar is available on the phone of myPhone Hammer 2+. The calendar provides preview of the current or any date.

In order to open the application calendar choose: [Menu] -> [Organizer] -> [Calendar].

Bluetooth

In the phone the Bluetooth module is available. It aims to wireless connecting and exchanging files with other devices that are equipped in the Bluetooth connection function.

The programme of Bluetooth module skills: [Menu] \rightarrow [Settings] \rightarrow [Connection] \rightarrow [Bluetooth]. There are

available options such as:

- [Status] by pushing <OK> button the transmition of the radio signal Bluetooth is turned on or off. Turning Bluetooth on is signalised on the screen in the top status bar with blue icon.
- [Visibility] turning this function on provides the visibility of the phone on the list of available devices of other phones, tablets and computers equipped in the Bluetooth module.
- [My devices] there is the option (Search New Device) by which it is possible to screen the list of available Bluetooth devices that are present in the range of the phone. This function provides connecting with the available on the list devices.
- [Search audio device] his option

provides searching and connecting the phone with audio devices that use connecting technology of Bluetooth, e.g. Bluetooth wireless headphones.

- [My name] provides inserting the name with which the phone will be visible during the connection with other Bluetooth devices. Default name is myPhone Hammer 2+.
 - [Advanced] this option provides configuration of the function of sound transmition between the Bluetooth headphone and the phone (the function [Transmit sound]) and screening the MAC address of the phone (the function [My address]).
- Connection of Bluetooth devices.
- In order to connect with Bluetooth device choose it from the list of available devices by enter: [Menu] ->

[Settings] -> [Bluetooth] -> [My devices] -> [Search new device], and then choose the device from the list and push [Connect]. On both devices the communication will appear with the question about password compliance. Push [Yes] in order to connect devices.

Sending files through Bluetooth.

In order to send the file located on the memory card to already connected device enter: [Menu] -> [File menager] - > [Memory card] -> choose from the memory card files which are going to be sent and then choose [Options] -> [Send] -> [via Bluetooth], and then look

for the receiving device or add it from the list of the connected devices. The file will be sent after the approval of the receiver.

Camera

The phone myPhone Hammer 2+ is equipped with the camera that provides the possibility of taking pictures and recording videos.

Taking pictures

In order to take a picture open the camera application by entering [Menu] -> [Multimedia] -> [Camera] or by being on your phone home screen and pushing the button <UP>. After entering the camera application put the object of which the picture is going to be made in the frame

and then push the button **<OK>**. The picture is going to be save by the default in the cataloque "Photos" on the microSD card on the phone.

The picture can be seen by using the application [View photo] (in [Menu] -> [Multimedia] -> [Album])

Recording videos.

In order to enter [Menu] -> [Multimedia] -> [Camera] or on the home screen push the button <UP>. Next put the recording object into the frame and push the button <UP> in order to select the camera mode and <OK> to start the recording. Recorded videos are saved by the default in the catalogue "Videos" on the microSD card on the phone. Those videos can be seen by using application [Movie Player] (in [Menu] -> [Multimedia] -> [Video]).

Using the Internet

Data account settings.

The phone myPhone Hammer 2+ is equipped with the Internet service.

Using the web browser.

To run a web browser go to [Menu] \rightarrow [Network services] \rightarrow [WAP]. The list of options will appear:

- [Homepage] view the previous browser's homepage.
- [Bookmarkers] the list of favourite websites,
- [Enter the address of the page] enter the address of the website you wish to visit,
- [Recently opened] displays a history of recently viewed websites,

• [Settings] – the ability to configure options such as the homepage, profile, active account data browser options, etc.

Using the email

To use an e-mail firstly you should configure your mail. To do so, please enter it into the [Menu] \rightarrow [E-mail] and the configuration will start. Firstly, provide the address then press [Options] \rightarrow [Next]. Next select the protocol (POP2 or IMAP) and press [Options] \rightarrow [Next]. If you do not want to change the account (the default setting: Auto you should press again [Options] \rightarrow [Next]. Set up the receiving server address and press [**Options**] \rightarrow [Next]. We do the same with the transmitting server. Enter your user name, password, profile name, and finally [Options] \rightarrow [Done]. After creating the account **[Options]** \rightarrow **[Edit]** \rightarrow **[Advanced settins].** We complement server settings. Once the servers are configured correctly we go back to the option E-mail and we can pick up the mail.

5. General rues of proper phone maintenance

Information about the certification (SAR)

Mobile phone is both transmitter and receiver of radio wave.

The phone was designed and produced according to security norms in order to provide the energy of radio waves to exceed the limits set by the Council of the European Union.

Those limits describe allowed level of the influence of the radio waves on whole population and they were created by the independent scientific organisation on the basis of the results of detailed scientific researches together with the consideration of a large security margin. The objective is to provide secured safety for all people regardless of age and health condition.

With reference to the mobile phone, the level of the exposure to radio waves activity is measured by SAR value (Specific Absorption Rate). The limit of SAR coefficient that is enjoined by the Council of the European Union is equal to 2W/kg and refers to the average value on 10 grams of tissue. The highest value of SAR coefficient for the phone of myPhone Hammer 2+ is equal to 0,562 W/kg.

Declaration of conformity with European Union Directives

Hereby, myPhone Sp.o.o declares that this product complies with the essential requirements and the other provisions of European Directive 1999/5 / EC.

Data wystawienia deklaracji 16-07-2015 (date of issue of declaration)

Numer Deklaracji 91/07/2015 Number of Declaration of Conformity

ŧ

DEKLARACJA ZGODNOŚCI WE EC DECLARATION OF CONFORMITY

My/We, myPhone Sp. z o. o. (nazwa importera / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa

(adres imponera / importer's address) niniejszym deklarujemy, że następujący wyrób: declare under our responsibility, that the electrical product:

telefon komórkowy / GSM mobile phone (nazwa wyrobu / name)

myPhone Hammer 2+ (typ wyrobu / type of model)

spełnia wymagania następujących norm: to which this declaration relates is in conformity with the following standards:

> EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A12:2011 EN 301 489-1V1.8.1 EN 301 489-7V1.3.1 EN 301 489-3V1.7.1 EN 301 489-34V1.7.1 EN 301 511 V9.0.2 EN 300 328 V1.7.1 EN 50360:2001 EN 62209-1:2006 EN 62209-2:2010

jest zgodny z postanowieniami następujących dyrektyw: following the provisions following directives:

Dyrektywa R&TTE 1999/5/EC

Rok, w którym umieszczono oznaczenie CE na produkcie: 2015

16-07-2015 Warszawa (data i miejscowość / date, place)

O WICh,

(podpis_sygnatariusza) (signature,of the signatory)

UI. Nowogrodzka 31, 00-511 Warszawa NIP 895-18-45-043, REGON 020167256