

- the shaver head to ensure continued performance
8. Move the power on/off switch to the OFF position.
9. Remove the shaver head from the handle
10. Remove the foil head assembly from the shaver head by pushing on the two side buttons and pulling the foil away from the head (see Fig. 3).
11. Using the supplied cleaning brush, gently brush the hair away from the cutter. Blow the hair off the foil, do not use the brush on the foil, it will cause damage.
12. The head may also be rinsed under water. Be sure to allow both to dry before using.

To maintain the best cutting performance, be sure to replace the foil head and cutter every six months of regular use. Contact Conair Customer Service to order the replacement parts

## TRIMMING

1. Be sure the unit is fully charged
2. Attach the trimming head as described in "Changing the Heads" section
3. To fully remove hair or to outline the bikini area, use the trimmer without the attachment comb
4. When removing hair, gently move the blades against the direction of growth.
5. To outline, place the blades perpendicular to the skin surface and apply the blades to the edge of the hair. Use the blades to create the desired outline.
6. For the cleanest finish, follow up with the foil shaver
7. For cutting hair without completely removing it, attach the 5-position comb to the head. Place the comb on the cutting blades first, and then snap down on to the back of the trimmer head.

8. Start with the longest setting, by moving the comb switch away from the back of the trimmer.
9. Gently move the comb through the hair in the direction of growth.
10. After you have done this with the longest setting, if you want to make the hair shorter, move to the next lowest position until the desired length of hair is achieved.
11. After hair removal, run a comb or brush (not included) through the hair to remove any cut loose hairs
12. When you have finished, move the switch to the OFF position. Clean the blades with the provided brush and then return the handle to the charging base to ensure it is fully charged for the next use.

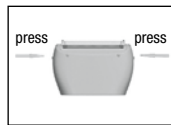


Fig. 3

## USING THE EYEBROW TRIMMER

1. Be sure the unit is fully charged
2. Attach the trimming head as described in "Changing the Heads" section
3. This trimmer comes with two trimming blades. The larger blade can be used to trim body hair and eyebrows. The smaller blade is ideal for detailing.
4. To outline and shape your eyebrows, use the trimmer without the attachment comb.
5. Move the power switch to the ON position.
6. Use the blades to define the edge of the eyebrow
7. Once the shape of your eyebrow has been defined, you may thin out the hair using the attachment comb
- NOTE:** Attachment comb is designed to work with the larger blade only.
8. Place the comb on the head in the longest

Congratulations on the purchase of your new ladies Total Grooming System. For maximum satisfaction when using this quality product, please take a minute to read the following operating and care instructions. Thank you for choosing Conair, the #1 brand in personal care appliances.

## **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical appliance, basic precautions should always be taken, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY DANGER— To reduce the risk of death or serious injury from electrical shock:**

1. Unplug this appliance before cleaning.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in a shower.
4. Do not place in, or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.
6. Except when charging, always unplug this appliance from electrical outlet immediately after using.
7. Never operate the adapter if the specification is out of the rating.

### **WARNING— To reduce the risk of burns, fire, electrical shock, or injury to persons:**

1. This appliance should not be used by, on, or

near children or individuals with certain disabilities.

2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the stand has been dropped into water. Return the appliance to a service centre for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this appliance with damaged or broken foils, as injury may occur.
8. Always attach plug to appliance first, then to outlet. To disconnect turn all controls to off position before removing plug from outlet.
9. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
10. Do not place appliance on any surface while it is operating.
11. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly. (See "Care of your Clippers").
12. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

position by sliding the comb into the groove on the head closest to the blades.

9. Gently move the comb through the hair. If you need to remove more hair, move the comb to the shortest position. If you want to remove the hair completely, leave the comb off and move the blades against the direction of growth.
10. When finished, move the on/off switch to the OFF position and clean the blades with the supplied cleaning brush.

## REPLACING THE FOILS FRAME

1. It is time to replace the foils when you find you have to push harder on the shaver to get a close shave, or if you have to go over your leg area more often to get a smooth result, or if you experience skin irritation. Replacement time will depend on how often use your shaver and how quickly your hair grows.
2. When replacing the foils, press the foil frame release buttons on the both sides of the shaver head, remove and then gently insert the new foil frame into position, being careful not to push on the foils.

## REPLACING THE CUTTER (INNER BLADES)

**CAUTION: NEVER REPLACE THE CUTTERS WITHOUT REPLACING THE FOILS AS WELL.**

1. To remove the shaver head from the unit, press the release buttons on both sides of the foil frame and then remove it from shaver head, the cutter is now in view.
2. Hold both sides of the inner blades and pull straight up (Fig. 4).



Fig. 4

3. Firmly hold the new inner blade and gently guide it into the inner blade mount.

**Caution: MAKE SURE YOU DO NOT LOSE THE SMALL SPRING UNDER THE CUTTERS.**

4. Firmly press the inner blades until they snap into place.
5. Replace the foil frame.

## BIKINI TRIMMER COMB ATTACHMENT

1. Place the comb attachment on the bikini trimmer head and press down (see Fig. 5).



Fig. 5



Fig. 6

2. Push up the comb attachment to release. (see Fig. 6).

## STORAGE STAND

The storage stand is designed with customized locations for both the bikini and eyebrow trimmer. After each use and maintenance, place the bikini trimmer and eyebrow trimmer into the customized locations for storage (see Fig. 7).

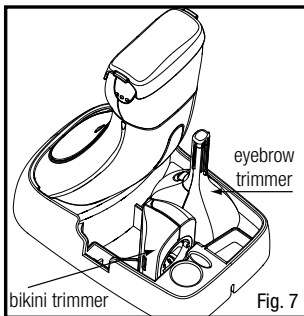


Fig. 7

13. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord does become tangled during use, turn the unit off and straighten cord before operating again

Shaver voltage: This appliance comes with an adapter that can be used on an alternating current (120V AC only).

## USER MANUAL

Before using the Class 2 Power Supply, read these instructions carefully.

Model: SW-038011A

Rated input voltage: 120Vac, 60Hz, 0.2 Amax

Rated output: 3.8VDC, 110mA

## OPERATION

1. For dry location use only. Do not expose to water.
2. When not in use, unplug unit completely.
3. Never operate this unit if the specification is out of the rating.
4. When using this unit, a warm temperature will be reached.

## CAUTION

1. Risk of electric shock, dry location use only or do not expose to liquid, vapor, or rain.
2. Do not short the polarity (output cord). Ensure jack is plugged into the Trimmer unit before plugging the adaptor into the outlet.
3. Do not operate any appliance which has a damaged output cord or housing.
4. Always unplug the unit before cleaning or when not in use.
5. This power unit is intended to be correctly oriented in a vertical or floor mount position.
6. Be sure voltage is in correct voltage before

plugging in.

# SAVE THESE INSTRUCTIONS WARNING

1. Women whose skin is sensitive to cosmetics or easily irritated by shaving, or who suffer from a skin allergy, should test one section of the leg or arm before using the shaver.
2. **The foils are thin and precisely finished pieces. Do not press hard against the foils, or drop foils. A warped or distorted foil will produce poor shaving results. Also a damaged foil may cause skin injury. A damaged foil should be replaced immediately.**
3. When cleaning, use cold or warm water. Do not use hot water, sea water, or cleaners, as they can cause damage to the waterproof seals.
4. Do not leave the entire unit submerged in water for a long period of time.
5. To prevent possible damage to the foils and the cutter, women who use underarm deodorant must thoroughly clean and air-dry the foil and cutter after each use. Failure to do this may result in corrosion
6. Keep out of reach of children.

The Conair® Personal Beauty Groomer gives you today's complete shaving and trimming all in one. It has three interchangeable heads that are specially designed to work quickly and leave you perfectly groomed all over.

## RINSE THE SHAVER HEAD

1. Rinse the shaver cutter and foil frame under warm or cold running water only; do not use hot water (you can also use the cleaning brush which is included).
2. Allow the shaver head and foil frame and cutters to air-dry before replacing foil frame.

## CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.
2. Do not use a dryer or heater to dry the shaver. This may result in malfunction or damage to the shaver.

**NOTE:** Never pull on the charging stand cord. Never twist or wrap the cord around the charging stand. Lay it flat in the storage pouch provided with the cord coiled up when not in use.

**NOTE:** The product you have purchased contains rechargeable batteries. The batteries are recyclable. At the end of their useful life, under various provinces and local laws, it may be illegal to dispose of these batteries into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling option or proper disposal.



## LIMITED TWO YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service centre listed below together with your sales slip and \$7.50 for postage and handling. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WARRANTY.**

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

This warranty gives you specific legal rights, and you may also have other rights which vary from province to province.

### SERVICE CENTRE:

**Conair Consumer Products Inc.**

100 Conair Parkway,  
Woodbridge, Ontario, L4H 0L2  
1-800-472-7606

©2011 Conair Consumer Products Inc.

[www.conaircanada.ca](http://www.conaircanada.ca)

Consumer Call Centre E-mail :

[Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

10CN118357

IB-10482

# GETTING TO KNOW YOUR PERSONAL BEAUTY GROOMER

Rechargeable Unit

(charge for 16 hours prior to first use)



1. Full size, shaver head
2. Bikini trimmer head
3. Eyebrow trimmer head
4. 2-position eyebrow comb
5. 5-position attachment comb
6. Oil
7. Cleaning brush
8. Stand
9. Charging adapter
10. Travel Storage Bag

# OPERATING INSTRUCTIONS

## HOW TO CHARGE

1. Make sure the on/off switch is in the OFF position
2. Plug the Adapter into a 120V outlet
3. Place the rechargeable handle on the base on the charging contacts
4. The charging indicator light should go on, indicating that the unit is being charged
5. **Before using the clipper for the first time, charge continuously for 16 hours. Maximum battery capacity will only be reached after 3 charging and discharging cycles.**
6. Preserving the batteries: in order to maintain the optimum capacity of the rechargeable batteries, the clipper should be recharged for 16 hours approximately every 3 months.

## CHANGING THE HEADS

Before changing the heads, be sure that the on/off switch is in the OFF position.

To remove the shaver head, gently twist counter clockwise and gently pull the head up and away from the handle (see Fig. 1).

Be careful not to push against or hold on to the foil. It is delicate and may be easily damaged.

To install the Bikini or



Fig. 1



Fig. 2

# Ladies Total Grooming System



## HAVE A QUESTION?

*Please do not return this product to the retailer.*

### CALL US FIRST!

Our customer service and product experts are ready to answer **ALL** your questions. Please call our **TOLL-FREE** customer service number at :

**1-800-472-7606**

Or visit us online at  
**[www.conaircanada.ca](http://www.conaircanada.ca)**

## Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

**Model LTGS40C**

**CONAIR®**

the eyebrow trimmer head, reverse the removal process. Position the head and gently twist clockwise until the attachment snaps into place (see Fig. 2).

To remove the bikini or the eyebrow trimmer, follow the same process for removing the shaver head.

## **USING THE SHAVER**

The shaver head is designed to provide a clean, close shave to your legs, arms, and underarms. Take care with the foil as it is very sensitive and easily damaged. Always inspect it for damage before you use it.

Never use a foil that is damaged, as this can result in injury. Make sure your skin is clean and dry before use. Do not use any lotions or oils before shaving.

## **SHAVING**

**NOTE: if you are switching to an electric shaver for the first time, it will take 12 uses for your skin and hair to adjust to this new method of removing hair. Do not evaluate performance until you have allowed your skin and hair to adjust.**

1. Be sure the unit is fully charged
2. Attach the shaver head as describe in “Changing The Heads” section
3. Move the power switch to the ON position
4. Hold the shaving foil against the skin moving the shaver gently against the direction of hair growth
5. Don’t push too hard against the skin as this will cause irritation and may damage the foil
6. As your skin may be sensitive after shaving, test your moisturizer on a small patch of skin and wait to see if irritation occurs
7. Cleaning: After each use you will need to clean