# **RUIKD**

## **Diode Laser Hair Removal Machine**



## **USER MANUAL**

Please be sure to read this USER MANUAL carefully before operation.

All responsibilities will be undertaken by yourself, if you don't operate it according to the following information.



### Attentions!!

### 1.1 Notice Items

- 1.1.1 The Hand Piece of the machine is fragile, please handle it with care.
- 1.1.2 The machine is not waterproof, please keep it dry.
- 1.1.3Please do not scratch the equipment to avoid being oxidized.
- 1.1.4 Please do not let the things with corrosion contact the equipment.
- 1.1.5 Please wear Laser protective operation goggles and patient shied goggles when operating the machine to do the treatment.
- 1.1.6 Please do not put the things which are irrelevant on the machine. During the operation, please handle it with care.
- 1.1.7 Please do not plug in many plugs into one socket to avoid fire emergency. And please do not use faulty power lead, power plug and socket. Do not touch the power plug with wet hand, otherwise, it probably causes electric shock or fire emergency.
- 1.1.8 Please use qualified power socket with at least 16A to protect power supply, otherwise, it maybe causes the damage of power supply.
- 1.1.9 Please connect power lead to grounded power socket to avoid any possible electric shock or fire emergency.
- 1.1.10 Please do not scratch or pull power cord to pull out from socket, hold the end and pull it out slightly, otherwise, it may cause electric shock or fire emergency.
- 1.1.11 The machine is installed with high voltage power supply, nonprofessional are prohibited to operate and maintain it.
- 1.1.12After finishing the treatment, please let the machine keep working condition at least 5 minutes, instead of turning it off right now.
- 1.1.13 When operating the machine, please provide a voltage stabilizer with voltage of 3000W, to keep the voltage stable.
- 1.1.14 Long time no use the machine or thunder storm weather, please pull out power lead to avoid possible electric shock or fire emergency.
- 1.1.15 Before and after every treatment, please dip a little alcohol, whose degree is 99.9% with cotton wool to wipe the laser lens gently, to reach the aim of cleaning and disinfection.
- 1.1.16 Laser has radiation and can be reflected, please do not aim at the human eyes or reflective objects, otherwise, it may cause blindness.
- 1.1.17 The machine is installed a filter, we advice replace it at the period of half year to guarantee the purity of distilled water.

### 1.2 Storage and Maintenance

Turn off the product after use.

Grab the head of cord and unplug to detach it from the socket. Do not grab the cord line and apply excessive force. Get right the entangled line and maintain it non-entangled.

Keep the warranty enclosed in each product because it is necessary for A/S.



Always keep the product clean as following:

Turn off the product before cleaning;

Clean the product with a soft cloth;

Clean only the surface of the product;

Do not use strong cleanser or combustible material such as thinner or alcohol and be cautious not to let the cleanser discharged into the inside of the product.

The product must be kept in the locations as followings:

A location where the water cannot reach;

The location where the pressure, the temperature, the humidity and the ventilation are appropriate.

The location where the sunlight, dust, salt or sulfur air cannot reach;

A location whose slope is not exceeding 10 degree.

### 1.3 Notice before Use

- 1.3.1 Check the mechanical handling before use.
- 1.3.2 Before you use the machine to do the treatment, please tear off the film on the Spot of the Hand Piece.
- 1.3.3 The manufacturer will not responsible for the accident caused by the refurbishment or remodeling of the product.
- 1.3.4 Plug in all the cords appropriately preventing their easy detachment.
- 1.3.5 In cases where the product is used after non-use for a while, check whether the product properly and safely works.
- 1.3.6 Do not use the cord when it is tied because it may cause a danger of overheating.
- 1.3.7 Do not step on or burst on the plug.
- 1.3.8Do not apply the inflammables to the product or use of fire.



## **CONTENTS**

1. Attentions	2
1.1 Notice Items	2
1.2 Storage and Maintenance	2
1.3 Notice before Use	3
2. Machine Introduction	5
2.1 Brief Introduction	5
2. 2 Treatment Principle	
2. 3 Treatment Scope	5
2.4 Technology Advantage	5
2.5 Curative Effect Contrast Figures	5
2.6 Compared with other Laser Hair Removal Machines	6
3. Packing List	7
4. Instrument Operation	8
4.1 Part Name and Function	8
4.2 Interface Instruction	10
5. Treatment Instruction	11
5.1 Preparation before Treatment	11
5.2 Setting Parameters	11
5.2.1 FHR Mode	11
5.2.2 HR MODE	12
5.2.3 SR MODE	12
5.3 Management after Treatment	12
5.4 Treatment Protocol	12
6. Specification	13



### 2. Machine Introduction

#### 2.1 Brief Introduction

This machine is used for permanence hair removal. It can be effectively damaged hair follicle but won't injury surrounding tissues.

The treatment time is short and no pain. It is the most ideal machine for permanence hair removal. No recurrence after treatment.

### 2.2 Treatment Principle

The principle is based on the "Selectively Thermal Absorption of Laser". When the abundant melanin in hair follicle and around tissues absorb laser energy, and the temperature rises rapidly, under this situation, the hair follicle and hair shaft are damaged by thermal, therefore, hair lose the primary environment and is completely removed.

### 2.3 Treatment Scope

Painless, fast and permanent hair removal.

Category of hair removal: chest,let,mustache,armpit,bikini line, forearm and so on.

Skin rejuvenation

### 2.4 Technology Advantage

### **Patent Cooling Type System:**

It adopts Skin Contacting Cooling System (patent technology), which can make the temperature reach **minus 16 degrees** to guarantee the epidermal tissue without any hurt and any uncomfortableness during the treatment process.

It can continuously work for **at least 5 hours**, and the energy won't weaken.

### **International Stander Wavelength:**

It has passed the laser wavelength FDA approved, so that the overlength pulse width make the laser energy have enough time to destroy the hair shaft, hair follicle and stem cells, to really realize permanence hair removal.

### **Experts Operation System:**

Professional menu with operation system for different requirements, the parameter can be automatically adjusted to reach perfect settings according to different races, gender, treatment area and the color, thickness and position of hair.

Through the observation of electron microscope, we can find that the deepest hair follicles can be destroyed completely.

### 2.5 Curative Effect Contrast Figures





## 2.6 Compared with other Laser Hair Removal Machines

# Type of Hair Removal Lasers

Type of laser	Wavelength	Characteristic	Devices
Long –pulse Alexandrite laser	755 nm	Good for hair removal , high Melanin absorption factor	Apogee 55 00
Diode laser	800 ~810 nm	-Longer wavelength than Alexandrite lasers so it works deeper. -Good for thick hair removal	LAMIS XL Light sheer
Nd:YAG laser	1064 nm	-Low absorption factor because of lon g wavelength. -Risk of burns because of wavelength that absorbed by the water. -Safe use for dark skin type.	
Ruby laser	694 nm	-The wavelength is short and absorp tion factor is high -Burns occur frequently -Recently don't use for hair removal	
IPL (Intense pulsed light)	700 ~ 1000 nm	-Side effect that burns and pigmentat ion -Originally for red blotches , so not g ood effect for hair removal	



# 3.Packing List

Description	Picture	Quantity (set/sets)
Main Body		1
Hand Piece		1
Funnel		1
Water In/ Out & Air Outlet Pine		2
Patient Goggles		1
Operator Goggles	AND THE	1
Power Lead (European Stander)		1
Main Body Keys		2
Hand Piece Case Keys		2
Foot Switch Chain		
Filter	( Permission Symptoms on novito	
Package Case		1

Your Beauty, We Create!

# RUIKD

### 4. Instrument Operation

### 4.1. Part Name and Function



A. **Emergency Switch:** This is a switch for a user or an operator to stop the power source in unexpected emergency situations. If you push the switch, it will stop the power source and, if you want remove such stop to re-activate the product, you need to turn the switch to the right though the angle of 45 degree.

**B. Key Power Switch:** If you want to turn it on, you need to turn it to the right. If you want to turn it off, you need to turn it to the left and then the product will stop.

**C. LED Touch Display:** LED touch display is connected with the main CPU for a telecommunication. If a user wants to select a specific process, he or she can touch the display.


**D. Hand-piece Holding Stack:** The hand-piece from which the laser beams are emitted must be held in the holding stack.

**E. Pilot Lamp:** According to the device operation condition, the light of LED lamp turns in red or green. The light of LED lamp will turn into Red when various errors are made, or when it is a Ready. Laser beams will be emitted. Otherwise, it will turn into green when it is in the normal situation or when it is a Standby.

# RUIKD



**F. Hand-piece Connector:** This is the place where the hand-piece and the product are connected with each other so that various sensors, power source lines and ultrapure cooling water are connected

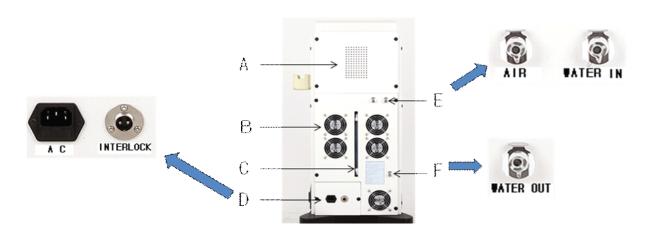

- A. **Vent:** The internal spaces are heated by the activation of each part. The internal heat is to be emitted outward through the vent. Thus, the equipment and product is recommended to be located more than 30cm from the wall.
- **B. Cooling Fan:** Cooling materials lowering the water temperature generate much heat. Thus, by force of the cooling fan, the heat is discharged outside
- **C. Water level Indication:** Cooling water composed of super power-saving water can be gradually extinct after the lapse of certain time. The user or the operator can personally check the water level indication and add the water in a regular base.
- **D. AC and Interlock:** This is the place at which the power source of the product is connected and a global standard connector is required to be used for a 3-hole connector. Interlock switch is for a safe operation and is composed of 2-hole connector. If the cap of 2-hole connector gets out by force, the system will stop.
- **E. AIR and WATERIN:** In order to add cooling water, the person in charge of the maintenance of product can insert the unlock connector provided by the manufacturer. At this point, the air connector must be unlocked.

Your Beauty, We Create!


# RUIKD

**F. WATER OUT:** This is the place where the cooling water is discharged outside. For this, an unlock switch must be inserted.



- **A Cooling System Head:** High Capability Cooling System can make the temperature reach minus 16 degrees when operating the machine about 5 mins later.
- **B Treatment Head:** Spot Size13\*15MM This is the place specially processed with the sapphire where the laser beam is emitted. Large Spot, make sure the laser can penetrate deeper and increase the treatment area to get better effect and save treatment time.
- **C Laser Blaster Switch:** If you push it, the laser beams will be emitted. At this point, the system must be in READY.
- **D Laser-emission Pilot Lamp:** If the laser is emitted, the pilot will turn in the green light. The user can check the laser emission by this pilot lamp.
- **E Wrist Strap Connector:** This is a connector to be worn around the wrist to prevent the hand-piece from falling down when it is used. The user can attach or detach the strap depending on his or her need.

### **4.2 Interface Instruction**

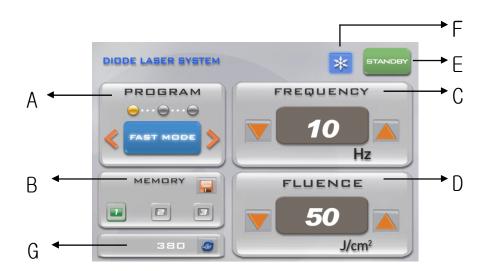

Your Beauty, We Create!



- **A. PROGRAM:** there are three programs, namely, FHR, HR, SR.
- **B. MEMORY:** For each program, three data for respective FLUENCE and FREQUENCY can be saved and retrieved.
- **C. FREQUNECY:** This means the speed of laser beam emission and is adjustable up to 10Hz
- **D. FLUENCE:** This indicates the energy unit and is adjustable up to  $1 \sim 100$ J. DIODE LASER LAMIS XL can be actually used up to 200 J but the present product is restricted its range of usage up to 100J.
- **E. STANDBY READY:** STANDBY is a stage when the user can input the treatment range numbers or let the product standby. If a user pushes the button, it will immediately turn into the state of READY and thus the laser beam will be immediately shot once the user pushes the Laser Blaster Switch. If the user re-selects the treatment number or touches the button again, then the product will be automatically turned into a SRANDBY state.
- **F. COOLING:** The contact cooling process can be checked. In blue light, the user can adjust the range of cooling. In grey light, the cooling cannot be processed.
- **G. COUNT:** The number of shots the user used in total is counted. If the user pushes the reset button, the system will be initialized.

### 5. Treatment Instruction

Use an appropriate parameter taking account of the patient's condition and before and after the treatment, please disinfect the Treatment Head of the handpiece.

### **5.1 Preparation before Treatment**

- 5.1.1 Wash the treatment area cleanly with Cleaner. But if the patient has made up, please makeup removal completely.
- 5.1.2 Shave the hair of the treatment area with a razor and make sure there is no any hiar remain in the treatment area.
- 5.1.3 Apply the gel refrigerated to the treatment area. The gel will let the treatment head move more smoothly and more laser reach in the treatment area.

### **5.2 Setting Parameters**

### **5.2.1 <FHR Mode>**

- -This Mode is used to do the big treatment area, such as leg,arm, body.
- -Treat in the level of FLUENCE 15 ~25J, and the FREQUENCY of 1-10Hz.
- -With the feel that the patien can stand the heat, slid vertically on the same treatment area 3 or 5 times back and forth.
- -After the treatment, the place where there is thick hair, will has some small pimples, which is the best treatment response.



### 5.2.2 <HR MODE>

- -This Mode is used to do the treatment of curved areas (forehead or chin) or narrow areas (sub-nasal or the back of neck). Commonly used for the treatment of thin hairs in the area that is hard to treat or narrow.
- Treat in the level of FLUENCE of  $20 \sim 40J$  and the FREQUENCY of  $1 \sim 3HZ$
- With the feel that the patien can stand the heat, slid vertically on the same treatment area 3 or 5 times back and forth.
- -After 1 or 2 times treatment, there is almost not any hair remains.
- -After the treatment, the place where there is thick hair, will has some small pimples, which is the best treatment response.

### 5.2.3 <SR MODE>

- -This Mode is used to do the Skin Rejuvenation, such as whitening, toning, Chloasma Removal.
- Treat in the level of FLUENCY of  $15 \sim 35J$  and gradually increase the level and 1-2Hz..
- With the feel that the patien can stand the heat, slid vertically on the same treatment area 3 or 5 times back and forth.
- -After the treatment, the place where there is thick hair, will has some small pimples, which is the best treatment response.

### **5.3 Management after Treatment**

After the treatment, massive heat can be temporarily produced in the treatment area.

In that case, please clean the gel completely and use cooling pack or cooling machine which may be able to quickly alleviate the inconvenience caused by the heat.

5.3.1 Apply a moisturizing mask or regeneration cream and sun block lotion. We recommend the Gold Stem Mask which has the function of antiphlogosis, analgesia and relieving redness and EGF DEESSE Skin Care Products, which are Super Reparing, Super Wrinkle Smooher and Super White.



5.3.2 If want to get a better effect, apply one macine to help the skin absort the care products better.



We recommend to apply our XUEFU Cryo Beauty Machine after the treatment. It uses the Freezing-function in conjunction with the right Cosmetics or active ingredients to desensitize and reduce swelling around surgically repaired areas.

### **5.4 Treatment Protocol**

- 5.4.1 Person having chronic skin disease
- 5.4.2 Patient having Light sensitive disease (LIGHT-LUPUS, COLD SORES)
- 5.4.3 Intervals can be increased from the third treatment.
- 5.4.4 Interval of treatment: 5-8 weeks (face: at 4-6 weeks intervals / body: at 8-10 weeks intervals)
- 5.4.5 The areas such as leg and back needs a longer treatment interval (up to 15 weeks)
- 5.4.6 The times of treatment may be increased for the area that has thin and light hairs or is influenced by hormone.
- 5.4.7 Several touch-up treatments may need in the cases where there is partial growth of hairs due to the patient's natural physiology.
- 5.4.8 Do not treat a sensitive area (bone area, dense hair area) in a high level of FLUENCE.
- 5.4.9 Start with a lower level of FLUENCE for the treatment of the thick hair area.
- 5.4.10 Use a supplement cooling to alleviate the patient's pain and protect his or her skin.

## 5. Specifications:

Laser Type	808/810nm Diode Laser	
Wavelength	808/810nm	
Energy	1100j	
Pulse Width	3-900MS	
Spot Size	13*15MM	
Frequency	Fast Hair Removal(FHR)1-10HZ	
	Hair Removal(HR)1-3HZ	
	Skin Rejuvenation(SR)1-2HZ	
Power	2000W	
Laser Power	Semiconductor Laser	
Power Supply	110V220V/10A/50HZ	
Cooling System Type	High capability chiller	
Cooling System	Sapphire Contact cooling system	
Screen	8 Inch LED Touch Screen	
Controller	Computer Intelligent Controller	
	Totally Imported Materials,	
Inside of Hand Piece	Continuously Work for at least 5	
	years	
Cooling Temperature	Down to -16	
Weight	53KG	
Size	75*67*125cm	
Package	Aluminum Box	