



Gebruiksaanwijzing • User instructions • Mode d'emploi • Gebrauchsanweisung • Brugsanvisning

EN 15918 🜒

















Make every day a 🍋 Yeppy day!

DVTCH DESIGN







closed

11





















www.yepptrailer.nl

GMG bv Zwanenburgerdijk 348^c 1161 NN Zwanenburg The Netherlands E info@yepp.nl www.yepp.nl

Yepp 🐿 trailer

EN

IMPORTANT! KEEP FOR FUTURE REFERENCE.

Congratulations on purchasing the multifunctional Yepp trailer.

Please read these instructions carefully before you start using the Yepp trailer and retain them for future reference. If you have any questions or suggestions after reading these instructions for use, please forward them to us.

CONTENT

- 1 Introduction
- 2 Specifications
- 3 Part description
- 4 Safety
- 5 Assembly
- 6 Instructions for use
- 7 Accessories
- 8 Maintenance
- 9 Warranty

1 GENERAL INSTRUCTIONS

The Yepp trailer can be used as both a bicycle trailer or a buggy. Only use the bicycle trailer during daylight on good cycle paths and/or roads with little traffic; if used as a buggy, only use it on pavements. We recommend using an approved lighting set when used in the dark or during bad weather conditions.

The Yepp trailer is **not** suitable for use under other conditions such as using it on unpaved areas. We do not recommend transporting children with animals, loading it too heavily, going at a speed that is too high, using it incorrectly, making product changes or not having repairs done by professionals.

The manufacturer cannot be held liable for damage as a result of incorrect use. The user is responsible for the correct use of the product.

2 SPECIFICATIONS

	SOLO	DUO
Maximum weight of a passenger(s)	18 kg	2 x 18 kg
Maximum total weight of a load		
(incl. passenger(s)	24 kg	42 kg
Maximum total weight	37 kg	56 kg
Basic Yepp trailer weight		
without accessories	13 kg	14 kg
Dimensions when folded		
(L x W x H) in cm	105 x 57 x 28	105 x 72 x 28
Dimensions of the buggy		
(L x W x H) in cm	115 x 75 x 100	115 x 85 x 100
Maximum allowed length		
of the passengers	105 cm	105 cm

EN

3 PART DESCRIPTION

Check whether the Yepp trailer is complete (fig.1). The Yepp trailer consists of the following parts:

- Yepp trailer frame
- 2 x 20" wheels with quick-lock • 1 x 7" rotary wheel for buggy use
- 1 x bicvcle coupler
- 1 x Yepp safety flag

4 SAFETY

Safe use of the Yepp trailer is very important. It is, therefore, very important that you carefully read and always follow the safety recommendations and warnings before use.

General safety instructions

- Keep these instructions for future reference.
- If you do not follow the instructions, the safety of your child may be at risk.
- Never leave your child or children alone without supervision in the Yepp trailer.
- Always use the handbrake when the Yepp trailer is parked.
- Do not transport additional children or luggage in the trailer.
- The Yepp trailer may become unstable when the maximum load is exceeded.
- Do not transport children who are too large and/or too heavy.
- If one child is transported in the Yepp Duo trailer, this must be on the right side.
- The user of the Yepp trailer must be aware of the conditions in which the Yepp trailer is used such as with regard to wind and cold. The child will not be moving and, therefore, will feel the cold more. Also ensure there is sufficient ventilation when conditions are hot.
- Ensure that no body parts, items of clothing, shoe laces or toys can come into contact with moving parts.
- Ensure that your fingers do not become trapped when unfolding and folding.
- Keep children away when unfolding and folding in connection with possible injuries.
- Do not use any car seats or any other seats and/or accessories that are not recommended by Yepp.
- Do not use any aggressive cleaners to clean the Yepp trailer, but only water and a mild detergent.
- Never modify the trailer yourself in any way.
- Pay attention with naked fire and flames near the trailer.
- The reflectors on the rear must always be visible when used as a bicycle trailer.
- Always install the safety flag.
- . Keep an eye on your speed; the maximum speed is 16 km/h and ensure you brake in a timely manner for bends.
- A WARNING! Keep in mind that the turning angle of the trailer is limited when compared to that of a bicycle.
- Always use the safety belts for passengers even when there are no children in the trailer. Always use the belts.
- Ensure you have a correctly fitting and approved safety helmet.
- Do not transport children who cannot sit alone and independently in the trailer for the duration of the journey.
- We do not recommend transporting children who are younger than 12 months; transporting children in an approved car seat is an exception to this. (Also see 6.2 on page 10.)

User manual Yepp trailer solo and Yepp trailer duo

• The head of the passenger may not be above the frame. The maximum height is indicated on the information label on the back of the interior.

EN

- Only park the Yepp trailer on a flat surface and always use the parking brake.
- Have your bicycle inspected by a professional before you have the bicycle trailer installed.
- The maximum total weight including passengers and loads is 45 kg for the Yepp Duo.
- The maximum total weight including the passenger and loads is 37 kg for the Yepp Solo.
- The cyclist must be experience and sufficiently strong to cycle with a trailer.
- Never cycle in the dark without approved lighting. We can supply approved rear lights for the Yepp trailer (art. 050908);
- Check whether the trailer does not impede cycling before every cycle journey and especially when braking, using the pedals and steering.

WARNING!

- If the Yepp trailer is used as a bicycle trailer, the buggy wheel on the front must be removed. Place the buggy wheel in the wheel support on the side.
- If the Yepp trailer is used as a buggy, the drawbar must be removed. Place the drawbar in the support on the side and secure it using the belt.

cEnsure that the rivet on the bottom side of the drawbar remains behind the bracket; this will ensure that the drawbar cannot slide to the front.

 Always keep in mind when loading the Yepp trailer that the weight is distributed equally in relation to a possible tipping risk. Test this by tipping the Yepp trailer backwards by 15 cm when loaded; upon release, the Yepp trailer must return to its original horizontal position.

A WARNING

This product is not suitable for running or skating.

A WARNING

Do not let your child play with this product.

5 ASSEMBLY

5.1 Unfolding and folding

The Yepp trailer will be supplied folded. Before use, the wheels and flag must be installed. Unfold the Yepp trailer in accordance with the instructions on **figures 2 and 3**.

Always use both locks (L and R)

- Hold the bottom side of the frame with your hand and, at the same time, pull the top side of the frame up with your other hand (fig.2).
- 2 Next, grab the black frame tube in the middle and pull strongly backwards until it locks automatically (clicks) (fig.3).
- 3 Lock the frame on both sides (L and R) fig.4).
- 4 To fold, both locks must be unlocked by moving the slide towards you and, next, folding it towards the front.
- 5 Next, pull out the red button and push the black frame tube forwards. Ensure when doing this that your fingers do not become trapped between the hinged points.

EN 5.2 Installation of the large wheels

- Disengage the trailer's brake.
- 2 Press the central unlocking button and insert the wheel into the wheel holder on the frame (fig.5).
- 3 Push the wheel backwards as much as possible and release the locking button.
- 4 Check whether the wheel is correctly secured by pulling it outwards.
- Repeat the above steps for the other wheel.
- 6 Regularly check the tyre pressure: it must be between 2.1 and 2.5 bar.

5.3 Installation of the wheel holder and drawbar holder

- 1 Fold both side bumpers as far as possible downwards in the horizontal position until they click and lock.
- 2 Next, install the wheel holder (fig.6) and the drawbar holder (fig.7).

5.4 Installation of the buggy wheel and drawbar

Install the buggy wheel when you use the Yepp trailer as a buggy (see A in the fig.8). Install the drawbar when you use it as a bicycle trailer. (See B in the fig.9)

5.5 Installation of the buggy wheel

- Insert the shaft of the buggy wheel from the bottom side in the hole of the Yepp trailer (fig.10).
- Insert the locking pin in the hole on the side so that the pin falls in the slot of the wheel shaft.
- Ensure that the pin is inserted through both holes.
- Pull the locking spring around the protruding part of the pin on the other side (fig.11).
- Check whether the wheel is correctly secured by pulling it.
- NEVER use the buggy wheel without the locking pin.

5.6 Installation of the drawbar

- Insert the drawbar from the front side into the hole under the Yepp trailer. Ensure that the S-form points to the right when you are standing in front of the trailer (fig.12).
- 2 Insert the locking pin in the hole on the side so that the pin goes **through** the drawbar and protrudes on the other side.
- 3 Pull the locking spring around the protruding part of the pin (fig.11).
- 4 Check whether the drawbar is correctly secured by pulling it.
- 5 **NEVER** use the drawbar without the locking pin.

5.5 Putting away the buggy wheel

The Yepp trailer is equipped with a useful clamp for the buggy wheel. If the trailer is used as a bicycle trailer, you can easily put away the buggy wheel on the side of the trailer. Ensure that the buggy wheel is secured correctly in the holder (clicks in place) **(fig.13)**.

5.6 Putting away the drawbar

The Yepp trailer is equipped with a drawbar holder on the outside of the trailer. If the trailer is used as a buggy, you can easily put away the drawbar on the side of the trailer.

First insert the drawbar in the loop on the side of the trailer (**fig.14**) and, next, click the other side in the holder and secure it using the Velcro belt. Ensure that the rivet on the bottom side of the drawbar remains behind the bracket; this will ensure that the drawbar cannot slide to the front (**afb.15**).

User manual Yepp trailer solo and Yepp trailer duo

NOTE: The drawbar holder and buggy holder are NOT interchangeable!

5.7 Installing the flag

The flag is made up of 2 parts. Insert both parts into each other and place the flag in the cover on the side of the trailer. **ALWAYS** use the bicycle flag when using the trailer as a bicycle trailer to ensure good visibility in traffic.

5.8 Adjusting the push handle

If you use the Yepp trailer as a buggy, you can adjust the position of the push handle based on your personal preference and length. Unlock the two clamps on the left and right **(fig.16)** and move the handle towards you. If required, loosen the clamps a few turns. Once the correct adjustment has been achieved, you can again fix the handle by tightening both clamps. If they do not clamp enough, you can tighten the clamps a few turns before you fix the clamps. When used as a trailer, we recommend folding the push handle fully to the front and to again secure it using the clamps.

5.9 Use of the brake

- 1 Pull the round black button to **position A (fig.17)**; the trailer will be on the brake in this position.
- 2 Push the round black button to **position A (fig.17)**;

the trailer's brake will be disengaged in this position. Always check whether the brake has really been engaged.

5.10 Installing the bicycle coupler

First the coupler must be installed on the rear shaft of the bicycle before you can use the trailer as a bicycle trailer. In principle, this is the left side (when viewed from the cycling direction) of the bicycle. Use the side that does not have the bicycle chain installed **(fig.18)**. Loosen the nut of the rear shaft of the bicycle and position the trailer coupler on the shaft. Next, again position the nut on the shaft and tighten it using the torque recommended by the bicycle manufacturer. We recommend having a recognised professional carry out this installation for reasons of safety.

5.11 Connecting the trailer to the bicycle

Check that everything has been installed correctly before you connect the trailer to the bicycle. Place the bicycle on a robust flat surface and use a two-legged kickstand for the bicycle.

- Slide the coupler on the front side of the drawbar over the bicycle coupler (fig.19).
- Insert the locking pin through the bicycle coupler and the drawbar and pull the locking spring around the protruding part of the locking pin.
- Check that the coupler is sufficiently fixed by pulling the drawbar. Always ensure that the bicycle cannot topple over.
- **ALWAYS** use the additional safety band by pulling it through at the rear of the frame and securing the hook to the D-ring on the drawbar. **(See fig.20)**

NOTE! Carefully check whether the safety belt cannot come in-between the moving parts of the bicycle. If required, wind it around the frame several times.

- Always use the flag while cycling for extra safety.
- The parking brake must always be disengaged when cycling.

• Go for a trial run without a load or passengers to verify that everything has been installed correctly and cycling is smooth without impedances and especially braking and bend manoeuvres.

A WARNING

The safety pin must always be in use. A hitch arm that has not been secured properly may come loose during travel. Make sure that the hitch arm is correctly attached and secured to the child carrier. Any kind of incorrect assembly may lead to the child carrier becoming separated from the bicycle.

A WARNING

Never leave your child unattended in this child carrier. The parking brake should always be engaged during the loading and unloading of children.

6 INSTRUCTIONS FOR USE

6.1 Engaging and adjusting the safety belts (fig.21).

- Block the wheels using the parking brake.
- 2 Disengage the belts by pinching on the side and, at the same time, pushing the 2 semicircles.
- 3 Put the passenger(s) in the trailer. For the Yepp Duo: if there is only one passenger in the Yepp Duo, this passenger must be put on the right-hand side.
- 4 Slide the height adjustment of the belt up until shoulder height.
- 5 To open the locking mechanism: press both semicircles and, at the same time, push both sides.
- 6 Set the belts to the correct length by using the sliding clasps. Ensure that the soft shoulder pads are positioned on the passenger's shoulders. Engage the belts.
- 7 Also always engage the hip belt.

A WARNING

This seat is unit is not suitable for children under 6 months. For children under 6 months an approved baby accessory must be used.

A NOTICE

When seating a child in the carrier always seat the child on the right side.

6.2 Use of the cover options

The Yepp trailer is equipped with 2 different locking options as standard that you can use depending on the use and the weather conditions. We recommend rolling up the plastic cover window and closing the fly screen for maximum ventilation. The passengers will then be protected against, for example, insects. If it is raining, you can close the plastic cover screen and secure it using the Velcro belt. If it is used as a bicycle trailer, we recommend always closing the screen against unwanted things that may fly in.

A WARNING

The user of this child carrier must be aware of exposure hazards such as wind chill and heat exhaustion, either by prolonged exposure in colder temperatures, or by extended periods in warmer temperatures without adequate ventilation or hydration.

User manual Yepp trailer solo and Yepp trailer duo

EN

A WARNING When this child carrier is used as a cycle trailer, the weather cover should be closed to prevent debris from entering the carrier.

6.3 Using a baby seat (accessory)

The Yepp trailer can also be used for transporting young children if a suitable baby seat is used. The backrest has a zipped closing mechanism that ensures that an opening in the backrest can be created for the baby seat. There is a fastening point on the front side to fasten the baby seat. Only use approved baby seats and follow the instructions for use for ensuring correct fastening.

7 ACCESSORIES

Different accessories are available for the Yepp trailers. Check what is on offer by visiting **www.yepptrailers.nl** (regularly updated).

8 MAINTENANCE

The Yepp trailer is made of sustainable materials of a high quality that will provide many years of pleasurable use Obviously, a Yepp trailer will also suffer from wear and tear. This wear, however, is partly dependent on use and treatment. The instructions below are important to ensure you enjoy the Yepp trailer as long as possible.

- Put away the Yepp trailer in a dry and correctly ventilated room as much as possible if you will not be using it for a longer period of time.
- Never fold and put away the Yepp trailer wet or moist. The fabric may become mouldy. If you do have to fold the Yepp trailer when it is wet, ensure that it is unfolded as soon as possible and that it dries to prevent shrinkage.
- The Yepp trailer fabric has a water-resistant coating. Cleaners may damage this coating and must, therefore, not be used. Only use lukewarm water to clean.
- Regularly check whether the fabric has not been damaged or is worn and have any damage repaired immediately.
- Regularly check the tyre pressure of the rear wheels. It must be between 2.1 and 2.5 bar. Ensure the tyres have sufficient tread and replace them in a timely manner.
- Regularly clean the wheels and shafts and ensure they are correctly lubricated.
- Check regularly that all fixings are still sufficiently tight.
- Regularly check metal parts on damage and have them repaired immediately if required.
- We recommend having the Yepp trailer checked at least once a year by a recognised professional for safety.

9 WARRANTY

Our products are guaranteed against defects in material and workmanship for one year after purchase. If you register the product on our website: **www.yepptrailers.nl**, the warranty period will be extended by an additional year.



We will gladly replace the product free of charge if it has a manufacturing fault. If it cannot be expected to repair the product, we will replace the part to our sole discretion. If a product should become defective as a result of careless or rough use, or as a result of accident, neglect or negligence or if the warranty period has expired, we will be happy to repair the product at a reasonable fee.

Who is covered?

The original purchaser who has purchased the product from an authorised dealer in the same country as the buyer. Proof of purchase is always required.

Production or material defects, whereby we have confirmed that the product has always been used under normal conditions as described in the instructions and that it has been properly maintained.

What is not covered?

Second owner or modified products, poorly maintained products, improper or abnormal use, faded material, failure to follow the instructions, a child who is left unattended, safety harness not used, overloading, damage caused by transport, including air transport and freight.

Costs to consumers within the warranty.

The consumer is responsible for all shipping costs that are required to send the product to the manufacturer or distributor for reasons of warranty cover and/or service.

Costs to consumers beyond the warranty.

When proof of purchase cannot be produced or when the product is no longer covered by the warranty period of one year, the manufacturer (or distributor) is entitled to charge for service fees and/or costs related to the replacement/repair of parts. A fee may also be required to return the product.

Exceptions.

Any consequential damage or injury to any person or property, directly or indirectly, resulting from use of the product.

Who can I contact?

For more information about procedures related to warranty claims, please consult our website at **www.yepptrailers.nl** under service and warranty.

Make sure to register your purchase through our online product registration at **www.yepptrailers.nl**.

GMG bv Zwanenburgerdijk 348^c, 1161 NN Zwanenburg, The Netherlands **www.yepp.nl**

User manual Yepp trailer solo and Yepp trailer duo