LEGAL INFORMATION Copyright © 2013 ZTE CORPORATION. All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Grand X WCDMA/GSM Mobile Phone **Quick Start Guide**

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software. Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Getting to Know the Home Screen

1

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application shortcuts, folders, widgets, and more.



NOTE: Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens

9

Opening Applications

1. Touch the Home Kev if the current screen is not the home screen.

2

- 2. Touch 🕂
- 3. Slide left or right on the screen and touch an app to open it.

Adding Shortcuts or Widgets

- 1. Touch the Home Key >
- 2. If you want to add a widget, touch WID-GETS
- 3. Touch and hold a widget or an app icon and drag it to the home screen.

Removing Shortcuts or Widgets

- 1. Touch and hold a widget or shortcut on the home screen.
- 2. Drag it to 🕆 to remove it.

Organizing Shortcuts With Folders

- 1. Touch and hold a shortcut on the home screen.
- 2. Drag the shortcut icon over another and release your finger. A new folder is created and both shortcuts are added into the folder
- 3. If needed, drag more shortcuts and drop them into the folder.

10

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc.

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSD logo Miss is a trademark of SD-3C. LLC.

Other trademarks and trade names are the property of their respective owners.

Version No. : R1.0 Edition Time: 201312 Manual No. : 079584506208

ZTE Mobile Phone Registration

Dear customer, in order to provide you better service, one registration message will send to ZTE service database. This message is free from ZTE. You will be charged one normal SMS rate by your operator.

3

You can set the wallpaper for the home

1. Touch the Home Key > Menu Key >

2. Select a wallpaper source from Gallery

Checking the Phone Status

The status bar at the top of the screen dis-

plays phone and service status with various

icons. Below are some of the icons and their

*

 $\ddot{}$

11

No signal

Flight mode

Bluetooth on

Connected to a

Wi-Fi network

New SMS /

New MMS

Live Wallpapers, Video Wallpaper, or

Wallpapers and touch the image or ani-

mation you want to use as the wallpaper.

Applying New Wallpapers

screen.

meanings.

G

G

X

1)

Wallpaper

3. Touch Set wallpaper.

Signal

in use

Ringer off

Vibrate

mode

Battery full

strength

Mobile data

Getting to Know Your Phone



Power Key

- Press and hold to power on, select phone modes, reboot, turn on/off airplane mode, or power off.
- · Press to turn off or on the screen display. Home Key
- Touch to return to the home screen from any application or screen. · Touch and hold to see recently used ap-
- plications.

Menu Kev

Touch to get the options for the current screen.

Back Key

Touch to go to the previous screen. Volume Up/Volume Down

Press or hold to turn the volume up or down

```
holder.
```

card into SIM slot 1.

Adjusting Volumes

To adjust call volume, press the Volume Key while on a call. To adjust other volumes, follow the steps below.

5

- 1. Touch the Home Key > > Settings > Audio profiles > General > Volumes.
- 2. Drag the sliders to adjust the volume for the ringtone and notification volume, and the alarm volume.
- 3. Touch OK to save

TIP: Press and hold the Power Key and then touch 📈 to enable the silent mode, touch 💭 to enable the vibration mode, or touch 🚺 to disable the silent mode.

Setting a Screen Lock

You can protect your phone by creating a screen lock. When enabled, you need to draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and keys.

- 1. Touch the Home Key > Menu Key > System settings > Security > Screen lock.
- 2. Touch None, Press, Pattern, PIN or Password.

13

word.

\bigcirc	Alarm set	\rangle	New Email
(()-	Portable Wi- Fi hotspot	\sum	New Gmail message
Ŷ	USB tether- ing is on		

4

Setting Ringtone and Sounds

Setting Ringtone or Notification Sound

- 1. Touch the Home Key > > Settings > Audio profiles > General.
- 2. Touch Voice call ringtone, Video call ringtone or Default notification.
- 3. Select the ringtone you want to use.
- 4. Touch OK.

Setting System Sounds

- Audio profiles > General.
- 2. Scroll to the SYSEM section and check the sounds you want to hear or uncheck those you do not need.

12

Starting Up

Switch off your phone before installing or replacing the battery or the SIM card. The microSD card is optional and can be installed and removed while the phone is turned on. Unmount the microSD card before removing

1. Place your finger in the slot of the back cover to lift and remove the cover.



2. Hold the SIM card with its cut corner oriented as shown and slip it into the card



Caution: Insert your WCDMA or GSM SIM

Insert your GSM SIM card into SIM slot 2.

6

 Touch Press to enable unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding **?** at the center of the display.

 Touch Pattern to create a pattern that you must draw to unlock the screen.

 Touch PIN or Password to set a numeric PIN or a password you must enter to unlock your screen.

Checking Voicemail

- 1. Touch the Home Key > C
- 2. In the dialer tab 📞 , touch and hold 🛯 🔤 3. Select a SIM card.
- 4. If prompted, enter your voicemail pass-

5. Follow the voice prompts to listen to and manage your voicemail messages.

Making a Call

1. Touch the Home Key > 🔇

2. In the dialer tab 📞 , enter the phone number with the on-screen keypad. Touch 💌 to delete incorrect digits.

3. Hold your microSD card with the metal contacts facing down and slide it into the microSD card slot.



4. Align the connectors on the phone and the battery and slide the battery into the compartment. Then gently press the battery down until it is secured.



5. Press the cover gently back into place until you hear a click.

7

3. Touch the 📞 icon below the keypad to

NOTE: To call a contact, touch the Home Key

1. Touch the Home Key > 🕂 > 🛂 and

4. Enter the contact name, phone numbers.

Touch DONE to save the contact.

2. Touch the Menu Key > Import/export.

3. Select SIM card, SD card, phone, or

5. If prompted, select an account in which

6. For importing from the SIM card, touch

all the SIM contacts you want to import

touch the all contacts tab 👤

3. Store the contact to SIM/Phone

Importing Contacts in Batches

1. Touch the Home Key > 🕂 > 🛄

phone storage.

and touch OK.

to save the contacts.

4. Touch Next.

> C > A and touch a contact or a number.

place the call.

Adding Contacts

2. Touch 🖳

Creating a New Contact

Charging the Battery

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



- 2. Connect the charger to a standard AC power outlet.
- 3. Disconnect the charger when the battery is fully charged.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- Press and hold the Power Key to turn on your phone.
- To turn it off, press and hold the Power Key to open the options menu. Touch Power off > OK.

8

Sending a Message

- 1. Touch 🕂 in the home screen and select Messaging, then touch
- 2. Enter the recipient(s) and message text. If you want to send an MMS, add subject and attachments.
- Touch
- 4. Select SIM card to send the message.

Setting Up Email Accounts

Setting Up Gmail

1. Touch 🕂 in the home screen and select Gmail

NOTE: If another Gmail account is already set up, touch the Menu Key > Settings > ADD ACCOUNT.

- 2. Touch Existing to sign in to your existing Google Account. If you have no Google Accounts, touch New to create one.
- 3. Follow the instructions on the screen to set up the account.

Setting Up Email

1. Touch **H** in the home screen and select Email.

NOTE: If another email account is already set up, touch the Menu Key > Account settings > ADD ACCOUNT.

- 2. Enter the email address and password.
- 3. Touch Next and follow the onscreen instructions.

Connecting With a Bluetooth Headset

- 1. Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more informa-
- 2. Touch 🕂 in the home screen and select Settings > Bluetooth
- 3. Slide the ON/OFF switch if Bluetooth is off. When Bluetooth is on, the R icon appears in the status bar.

NOTE: Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch SEARCH FOR DEVICES if you wanted to scan again.

- 17
- 1. Touch the Home Key > Menu Key > System settings > More > Mobile networks > Access Point Names.
- 2. Select a SIM card.
- 3. Touch the Menu Key > New APN.
- 4. Touch each item to enter the information you get from your service provider.
- 5. Touch the Menu Key > Save to complete.

Extending Battery Life

There are several things you can do to make your battery last longer.

- Turn on Wi-Fi, Bluetooth, GPS, mobile data, auto-sync only when you need to.
- Lower the screen brightness.
- Use Bluetooth tethering or USB tethering (when you have a cable) instead of portable Wi-Fi hotspot to share your phone's data service.
- From the home screen, touch -> Settings > Apps and close the apps you do not need but still run in the background.
- From the home screen, touch + > Settings > Audio profiles > General and uncheck Vibrate on touch

25

- 4. Touch the ID of the headset, or any other device you want to pair with your phone. Enter a passcode if prompted.
- 5. If necessary, touch the ID of the paired headset to connect with it. Once connected, the sicon in the status bar turns blue.
- TIP: Touch the ID again to end the connection

Installing Apps From the Google Play Store

There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application. Before you begin, make sure that you have signed in to your Google account.

NOTE: The content you can access in the Play Store depends on your region and your service provider.

- 1. Touch the Home Key > Play Store. The first time you launch Play Store, accept the Google Play Terms of Service.
- 2. Find the apps you need either by category or by touching Q.

18

Freeing Up Memory Space

Use Apps to free up memory space and optimize system speed.

- 1. From the home screen, touch **P** > Settings > Apps.
- 2. Touch the app and touch the Force stop button next to the application you do not need.

Managing the Phone Storage

Deleting Old Messages

You can manually delete old messages to free up some storage space. You may also set up auto deletion of the oldest messages when the limits are reached.

- 1. From the home screen, touch **Sec.** saging
- Touch the Menu Key > Settings > General.
- 3. Check Delete old messages to enable auto deletion.
- 4. Touch Text message limit or Multimedia message limit to set the maximum limit.

26

5. Touch Set.

- 3. Touch the app to see detailed description
- 4. Touch Install (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet account and select a payment method. **CAUTION:** Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch Accept & download (free apps) or Accept & buy (paid apps) to proceed, or touch the Back Key to cancel.
- 5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the icon appears in the status bar. You can find the new app after touching the Home Key > 💾

Taking a Photo

- 1. Touch 🕂 in the home screen and select Camera
- 2. Aim the camera at the subject and make any necessary adjustment.

19

Clearing Browser's Local Content

- 1. From the home screen, touch 🕂 > Browser
- 2. Touch the Menu Key > Settings > Privacy & security
- 3. Touch Clear cache, Clear history, and Clear all cookie data

Product Safety Information

- Do not use hand-held while driv-ing Do not use while re-fuelling For body-worn operation maintain **F** a separation of 15 mm This device may produce a bright or flashing light Small parts may cause a choking æ. hazard * Do not dispose of it in a fire This device may produce a loud sound
 - To prevent possible hearing dam age, do not listen at high volume levels for long periods.

27



Number	Number Function				
Number	Function				
1	Capture a photo.				
2	Change the camera settings.				
3	View photos and videos you				
5	have captured.				
4	Switch between the front camera				
4	and the back camera.				
5	Switch the flash.				
6	Select the camera mode.				

3. Touch the area where you want the camera to focus. Green brackets appear around the focused area.

20

Avoid contact with magnetic

Avoid Extreme Temperatures

Keep away from pacemakers and

other personal medical devices

4. Lightly touch the button 5

media

Ğ

Â

æ

Ĩ

*

Recording a Video

- 1. Touch 🕂 in the home screen and select Camera.
- 2. Aim the camera at the subject and make any necessary adjustment.





Number	Function
1	Start or stop recording a video.
2	View photos and videos you have captured.
 Touc cordi 	h 🚺 to start and 🚺 to stop re ng.

1
2
3
4
5

SAR

Number

Declaration of RoHS Compliance

21

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the ZTE Grand X manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- 1. Lead (Pb)
- 2. Mercury (Hg)
- 3. Cadmium (Cd)
- 4. Hexavalent Chromium (Cr (VI))
- 5. Polybrominated biphenyls (PBBs)

6. Polybrominated diphenyl ethers (PBDEs) The ZTE Grand X manufactured by ZTE CORPORATION meets the requirements of EU 2002/95/EC.

Avoid any contact with liquid,			
keep it dry			
Switch off when instructed in hos-			
pitals and medical facilities			
Do not attempt to disassemble			
Switch off when instructed in			
aircrafts and airports			
Only use approved accessories			
Switch off in explosive environ-			
ments			
Do not rely on this device for			

emergency communications

28

Plaving Music

- Music.



1. Touch 🕂 in the home screen and select

2. Touch a category, such as Artists or Albums, to find the song you want to play. 3. Touch the song to play it back.

Function Touch to return to the library.

Album artwork.

Song and artist names.

Plavback control. Skip songs. pause and resume playback. Drag the progress bar to jump to any part of the song.

Touch to see the current playlist (queue), Shuffle, or Repeat

22

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested was 0.318 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power reguired to communicate with the network.

Connecting to PC

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in either direction. Your device stores these files in internal storage or on a removable microSD card.

- 1. Touch and hold the status bar across the top of the screen and flick down.
- 2. Touch Ψ (Connected as [current connection model).
- 3. Choose one of the following options:
 - ▶ USB storage: XP recommended. Lets you transfer files between your computer and your Android device.
 - Media device (MTP): Lets you transfer media files on Windows, or using Android File Transfer on Mac.(See www.android.com/filetransfer)
 - Camera (PTP): Lets you transfer photos using camera software, and transfer any files on computers that don't support MTP.
 - Charge only: Stop all USB fuctions. Lets you speed up USB charging and decrease power consumption.
 - **Built-in CD-ROM:** Show a virtual CD-ROM containing some useful software.

23

E-Waste Management



What is E-waste?

 'E-waste' means waste electrical and electronic equipment (WEEE).

How harmful is e-waste?

E-wastes are considered dangerous, as certain components of some electronic products contain materials that are hazardous, depending on their condition and density. If improperly disposed, they can leach lead and other harmful substances into soil and groundwater.

Govt. of India vide notification dated May 12, 2011 has announced E-waste (Management and Handling) Rules, 2011 ("Rules").

According to these Rules, the consumer now has the legal responsibility to dispose of the waste electrical and electronic equipment (popularly known as "WEEE") in the prescribed manner and not by just throwing it into a dustbin or giving/selling it to scrap dealer.

To disconnect the device from the computer. simply unplug the USB cable when you're finished.

Connecting to the Internet

Connecting via Wi-Fi

- 1. Touch the Home Key > Menu Key > System settings > Wi-Fi
- 2. Slide the ON/OFF switch if Wi-Fi is off. Your phone automatically searches for Wi-Fi networks in range and displays their names and security settings. Your phone also connects to previously linked networks when they are in range.
- 3. Touch a network name to connect to it. If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

Connecting via Mobile Network

To connect to the Internet via mobile network you can use the default Access Point Names (APN). If you want to add a new APN, please contact the service provider to get the necessary information. Do not change the default settings unless instructed by the service provider. Otherwise the service might stop working.

24

V RECYCLE , is an initiative by Zte where we recycle your old and no longer useful phones. There are 3 easy steps to begin playing your part:

Step 1: Grab your old and useless phone (or its accessories)

Step 2: Locate a ZTE Collection Point near you, available at www.ztedevice.com

Step 3: Drop your old phone into the designated collection boxes.

Lets join hands today to celebrate the glory of nature earth & help in making it a better & healthier place for all of us.

This eq operate	luipmen ed in:	AT	BE		
CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT
SK	SI	ES	SE	GB	IS
LI	NO	СН	BG	RO	TR