

# Oster™

*User Manual*

## ELECTRIC KETTLE

MODEL **BVSTKT308** Series



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. *Read all instructions before using the machine.*
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, *do not immerse this appliance including power base, in water or any other liquid.*
4. Close adult supervision is necessary when this appliance is used by or near children.
5. Unplug the power base from the power outlet when not in use, before repositioning and before cleaning. *Allow to cool before putting on or taking off parts, and before cleaning the appliance.*
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return this appliance only to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
11. Ensure that the kettle is properly located on the power base before plugging into the wall or switching on. To disconnect, turn all controls to “Off” then remove plug from wall outlet.
12. Remove the kettle from power base before filling or pouring. Do not attempt to remove the kettle from the power base until it is switched off, manually or automatically.
13. Use the kettle only with the power base supplied and vice versa.
14. Do not use appliance for other than intended use.
15. Use on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.
16. *Extreme caution must be used when handling or moving kettle and pouring from the kettle containing boiling water.*
17. *Scalding may occur if the lid is removed during the heating cycle.*

## SAVE THESE INSTRUCTIONS

# SPECIAL CORD SET INSTRUCTIONS

1. A short power supply cord is provided to reduce the hazard resulting from becoming entangled in or tripping over a longer cord.
  2. A grounding Type 3 - conductor extension cord may be purchased and used if care is exercised in its use.
  3. If an extension cord is used the marked electrical rating of the extension cord must be at least 15 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.
- \* This appliance has a grounded 3-prong electrical plug. It must be plugged only into a properly grounded 3-prong outlet. Do not modify the plug in any way.

## PRECAUTIONS:

**WARNING: TO AVOID SCALDING**, handle this kettle with care as water is heating, boiling, and cooling. The lid must remain in place during use to avoid steam burns. Keep spout away from persons as scalding can result from steam.

1. Place the electric kettle well back from the edge of the counter.
2. This kettle is intended for boiling WATER ONLY. Do not heat any other liquid or attempt to cook any food in this appliance.
3. NEVER place the kettle NEAR HOT SURFACES.
4. Hand wash filter only. NO PARTS ARE DISHWASHER SAFE.
5. Do not exceed the “Max” water level mark when filling. Overfilling could cause hot water to boil out of the spout.
6. Do not hold the switch on as this may damage the auto shut-off mechanism.
7. Carry or move electric kettle by handle only.
8. Kettle body may get very hot, be careful when handling.
9. Do not immerse the kettle or power base in water or any other liquid.

## FOR HOUSEHOLD USE ONLY


# INTRODUCTION

## Table of Contents


	Page #
Important Safeguards .....	2
Special Cord Set Instructions .....	3
Precautions .....	3
Introduction .....	4
Diagram of Parts .....	4
Clean Your Electric Kettle Before First Use .....	5
Using Your Electric Kettle .....	5
If The Kettle Does Boil Dry .....	7
Filter Instructions .....	7
Filter Removal/Cleaning/Refitting .....	7
Care and Cleaning .....	8
Limited Warranty .....	9

## Diagram of Parts


1. Lid Release Button
2. Spout with Removable, Washable, Anti-Scale Filter (not shown)
3. Power Base with Cord Storage and Cable Exit
4. Handle
5. Power Button/Light
6. Temperature Selection Buttons/Lights
7. Keep Warm Button/Light

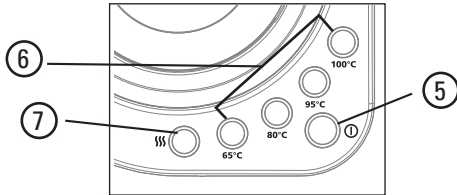


## Clean your electric kettle before first use

1. Wash the inside of the kettle and lid with mild detergent and water. Rinse each thoroughly. Do not immerse the kettle or power base in water or any other liquid. These items are not dishwasher safe.
2. Press the Lid Release Button () to open the lid. Fill the electric kettle with fresh water to the “MAX” water level mark.
3. Plug power base into power outlet. Place kettle onto power base. Follow the following section of “Boil Water at 100°C” to boil water.
4. When the water and unit have cooled, discard the water. Rinse with cold water and repeat.
5. Your electric kettle is now ready for use.

## Using Your Electric Kettle

1. Position the power base on a flat, heat resistant surface, as close as possible to a power outlet.
2. Follow cord routing in power base according to exit patterns. Proper cord routing will result in the power base laying flat when kettle is placed in base. DO not operate kettle if power base is not flat. If power base is not flat, remove kettle from power base and repeat cord placement instructions.
3. To fill with water, press the Lid Release Button () to open the lid. Fill the electric kettle with water to the desired level.  
**NOTE:** Do not exceed the “MAX” water level mark indicated on the electric kettle.
4. Plug the electric cord into an electric outlet, the kettle will beep and all button lights will flash in BLUE once and then go off. The power light ring will keep flashing in RED to indicate that the kettle is in standby mode.

## Boil Water at 100°C

1. Press Power Button () at standby mode, the kettle will beep once. The power light ring will illuminate in RED. The 100°C button will flash in BLUE for 3 seconds and then remain illuminated until the boiling process completes.
2. Once the water temperature reaches 100°C, the kettle will beep 5 times, and the 100°C button light will go off to indicate that the water boiling is completed and the kettle will return to standby mode automatically.  
**NOTE:** Lid should always be firmly closed during boiling process.
3. Carefully lift the kettle from the power base and pour the hot water.

4. The kettle will not re-boil until the Power Button is pressed again. If you need to reheat, wait 25 seconds, allowing kettle to cool down, and then press Power Button again.

**NOTE:** Never allow the kettle to boil dry or drop below the minimum mark.

### **Boil Water at different temperature settings**

1. Press Power Button (ⓘ) at standby mode, the kettle will beep once. The power light ring will illuminate in RED. The 100°C button will flash in BLUE for 3 seconds. Select any of the other temperature buttons (95°C, 80°C or 65°C) to press and hold for more than 3 seconds. The selected temperature button light will flash 3 seconds and then remain illuminated to indicate that the boiling process begins.
2. Once the water temperature reaches the desired temperature, the kettle will beep 5 times, and the selected temperature light will go off to indicate that the water boiling is completed and the kettle will return to standby mode automatically.
3. Carefully lift the kettle from the power base and pour the hot water.

### **Keep Warm**

1. The kettle includes a Keep Warm feature allowing you to boil the water to your desired temperature and then keep warm for 30 minutes. Press Power Button (ⓘ) at standby mode and follow the above steps to select your desired temperature. Press the Keep Warm Button (⌘), the kettle will beep and the keep warm button light will illuminate. Let the boiling process to begin.
2. Once the water temperature reaches the selected temperature, the kettle will turn to keep warm mode automatically. The kettle will keep the water at your selected temperature for 30 minutes. The keep warm button light will keep flashing in BLUE during the 30 minutes.
3. After 30 minutes, the keep warm mode will be cancelled automatically and the keep warm button light will go off, and the kettle will return to standby mode automatically.

**NOTE:** To cancel the keep warm feature, press the Keep Warm Button any time and the keep warm button light will go off.

## IF THE KETTLE DOES BOIL DRY

If the kettle is operated in accordance with instructions for use, it is unlikely that the kettle will boil dry. However, in the event that the kettle does boil dry, it is protected by a boil dry, fail-safe device which will switch the kettle off automatically on sensing a boil dry situation and keep it switched off until the kettle is refilled with at least the minimum amount of water. Always allow the kettle to cool for half an hour before reuse if the kettle has boiled dry.

### Filter instructions

A mesh filter has been integrated into the kettle to reduce the amount of scale residues entering your beverages or food. The filter is removable for cleaning. To reduce scale build-up, empty out any residual water after boiling.

How often the filter should be cleaned will vary according to where you live and how often you use your kettle. Filter should be cleaned whenever there are noticeable deposits left on the filter and especially if the rate of pouring decreases.

### Filter removal/cleaning/refitting

*Important:* The kettle must be switched off, disconnected from the power outlet and allowed to cool down completely prior to removing or refitting the filter. Do not use excessive force, as this might damage the filter or the lid.

1. Empty the kettle and lift lid.
2. Grip the top part of the filter with index finger and thumb and pull upwards. You may have to hold kettle while removing filter.  
**Caution:** Keep fingers clear of mesh. Pressing into mesh may damage filter.
3. To clean the filter, rinse under a tap while brushing it gently with a soft brush.
4. To refit filter, once again hold filter with index finger and thumb. Gently push filter back into the kettle until you hear a click. The filter is now reattached. Gently tug on filter to ensure filter is attached properly.
5. Rinse out kettle with fresh water and it's ready for use.

## Care and cleaning of your electric kettle

1. Mineral deposits in tap water may cause scale deposits to form inside the electric kettle after frequent use. To remove this scale build-up, fill the kettle with a solution of 3 cups of white vinegar and 3 cups water. Let sit overnight.
2. Empty the vinegar solution from the electric kettle. Remove any stain remaining inside by rubbing with a damp cloth.
3. Fill the electric kettle with clean water. Place kettle on power base and bring to a boil, then discard water. Repeat and the electric kettle will be ready to use.
4. The electric kettle will not operate again until the Power Button is pressed and the power light ring illuminates (see the “Using Your Electric Kettle” section for details).
5. Always remove kettle from power base and disconnect power base from electrical outlet before cleaning. Do not immerse kettle or power base in water or other liquid.
6. The outside of the electric kettle can be wiped with a soft damp cloth.

***NOTE: Never use any chemical, steel wool, or abrasive cleaners to clean any part of the kettle, including the power base.***

For product questions contact:

Jarden Consumer Service

USA : 1.800.334.0759

Canada : 1.800.667.8623

[www.oster.ca](http://www.oster.ca)

© 2012 Sunbeam Products, Inc. doing business as  
Jarden Consumer Solutions. All rights reserved.

In Canada, imported and distributed by Sunbeam Corporation (Canada) Limited,  
doing business as Jarden Consumer Solutions,  
20B Hereford St., Brampton, Ontario L6Y 0M1.

GCDS-OST27290-ZZ

Printed in China

BVSTKT308\_12EFM1



## ***1-Year Limited Warranty***

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### ***What are the limits on JCS's Liability?***

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### ***How To Obtain Warranty Service***

#### ***In the U.S.A.***

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800-334-0759 and a convenient service center address will be provided to you.

#### ***In Canada***

If you have any question regarding this warranty or would like to obtain warranty service, please call 1 800-667-8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write to Consumer Service Department.

***PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.***