

User Manual

(Version 2.1)




This user manual has been specially designed to guide you through the functions and features of your GPS vehicle tracker.

1. Accessories



Charging cable (Standard)

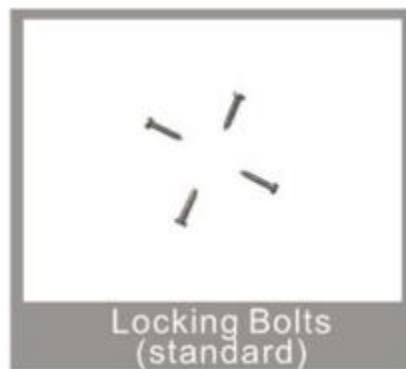

2. Specification

Dimension	90(L) x 45(W) x 13.5(H) mm
Weight	45g
Operation Temperature	-30 °C - 70 °C
Operation Voltage	9-36vDC
Humidity	20% - 80%
GSM Frequencies	850/900/1800/1900 MHz
GPRS	Class 12
GPS Sensitivity	-159dBm
Acquisition Sensitivity	-144dBm
Position Accuracy	10m
TTFF (Open Sky)	Cold Start: <38s
	Warm Start: <32s
	Hot Start: <2s
GSM/GPS Antenna	Built-in design
LED Indicator	GSM-green, GPS-blue, Power-red
Data Transmit	TCP, SMS
Non-movement Detection	Movement alarm based on built-in 3D motion sensor
Mileage Report	Track by time/distance interval

3. Quick Operation Instructions

3.1 Locate current position by GPRS/SMS

3.2 GPS tracking platform

3.3 Track by time interval via GPRS

3.4 Real-time Location Tracking via SMS

4. My Device



LED Indications

GPS LED Indicator	
Flashing (1s on, 1s off)	Searching GPS signal
Continuously bright	GPS fix
Continuously dark	No GPS fix or initializing

GSM LED Indicator	
Quick flashing	GSM initializing
Continuously bright	Connected to Server Successful
Continuously dark	No GSM signal

Power Status	
Flashing	Power on
Continuously bright	Not working properly
Continuously dark	Power off

5. Method of installation

5.1 Preparation before installation

- 1) Open the packing box to check whether the type of device is correct and whether the accessories are included.
- 2) This product is a high-tech electronic device, installation should be undertaken by a professional.
- 3) Please follow the below procedures to install your GT02A. During installation, there should be no power to the device.

5.2 Installing SIM card: each GT02A need to insert a GSM SIM card.

The SIM card used should be enabled for GPRS.

- 1) Testing SIM card: to test SIM card, please install it into a normal GSM mobile and ensure it can send and receive SMS, and enable for GPRS.
- 2) Installing SIM card: Remove the upper cover of device, insert SIM card as shown then replace cover, lock the Shell with 3 bolts.




5.3 Selecting installation place and fixing it. There are two kinds of installation: covert and non covert.

If you need the covert installation, please refer installation to an auto electrical contractor.

Note:

- 1) To prevent theft of the GT02A, the device should be installed as covertly as possible.
- 2) Avoid placing the GT02A close to higher power electrical devices, such as reversing radar, anti-theft device or other vehicle communication equipment.
- 3) The GT02A should be fixed into position with cable ties or wide double-side tape.
- 4) The device inbuilt GSM and GPS antenna. During installation, please make sure the receiving side face up, with no metal object above the device to interfere with GPS reception. The following places are suggested for installation:

- Under the dash board below the front windshield;

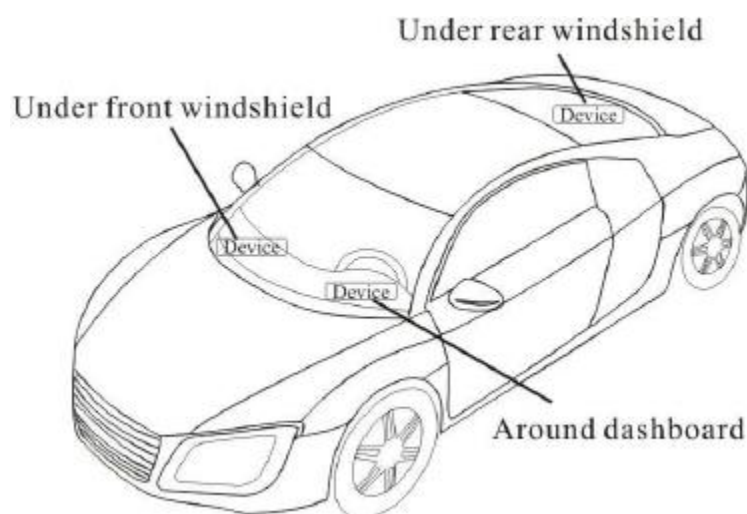

- In the parcel shelf in the rear;
- In the front bumper (non-material face), please ensure the device in dry place;
- Under the wiper version (non-metal), please ensure the device in dry place;

Notice: If the windshield is pasted with metal thermal-protective coating, it may affect the performance of the device. In this case, please change the installation place after consulting the professional.

5) Non Covert Installation,

Firstly fix the device on the dash board below windshield.

6. Cautions of device wiring

6.1 The standard voltage is 9V-36V, the red wire is the positive, the black wire is the negative.

6.2 Please connect the black wire to ground.

6.3 After connecting the power cord, run the power cord plug to the device. After installation, supply power device.

6.4 Covert installation: car battery cord is standard, with 2A FUSE for short-circuit over current protection.

6.5 Non covert installation: cigar lighter cord is optional, with 2A FUSE for short-circuit over current protection. Please contact your dealer if this mode is needed

7. Power on/ off

7.1 The device will power on automatically when connected to power.

During normal operation, red power LED flashes, while blue GPS LED and green GSM LED keep lighting. During signal searching process, GPS or GSM LED will flash. If there is no light presenting on LEDs, the device is not working normally installation, please make sure the receiving side face is up, with no metal object above the device to interfere with GPS reception. The following places are suggested for Installation

7.2 The device will power off after power is disconnected.

8. Side key function

At normal-work indication status, press the side key, all the three LEDs will extinguish and then the device will enter covert working mode. Press the key again, the three LEDs will go back to normal-work indication status.

9. Troubleshooting

9.1 If GPS can not receive the signals normally, please drive to the open areas for positioning. Generally, it needs 1-2 minutes to receive the first coordinates. If the data can not be received after 2-3 minutes, please check the installation position of the device, making sure it is not being shielded by any metal.

9.2 If GSM can not receive the signals normally, please check whether SIM card is installed correctly or there is no GSM signal at the current location, such as a basement parking, please drive to a place covered by GSM signal.

9.3 If the red LED does not work when power is connected, check whether the fuse is blown. If so, please replace the fuse.

9.4 If the three LEDs do not turn on when power up, press the down side key, if the three LEDs recover normally, the device is working normally.

9.5 If you have enabled the web based tracking application, and the device displays off-line on the platform, please check 3 LEDs status indicators first. You can check the status of the SIM card when you are in an inconvenient situation. Please refer to the following steps:

- 1) Call the device to check whether you can get through.
- 2) Check whether the SIM card supports GPRS and a local APN.
- 3) Check the GSM/GPS reception area.
- 4) Check whether there is enough credit on the SIM card.
- 5) Check if the connector and terminal is loose or the fuse has blown out

10. SMS commands (in another file, please ask for your distributor to send it to you)

