

STANDARD HORIZON

Nothing takes to water like Standard Horizon

CP190i - GPS Chart Plotters Owner's Manual



CP190i

WARNING!!!

Electronic charts displayed by the GPS Chart Plotter are believed to be accurate and reliable, but are not intended to be a substitute for the official charts, which should remain your main reference for all matters related to the execution of safe navigation.

For this reason you should always keep the official published and approved nautical charts on board.



FCC Compliance Statement

This device complies with Part 15 of the FCC limits for Class A digital devices. This equipment generates, uses and can radiate radio frequency energy and, if not installed or used in accordance with the instructions may cause harmful interference with radio communications.

There is no guarantee that interference will not occur in a particular instance. If this equipment does cause harmful interference to other equipment, try to correct the problem by relocating the equipment.

Consult an authorized STANDARD HORIZON dealer or other qualified service technician if the problem cannot be corrected. Operation is subject to the following conditions: (1) This device cannot cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

- The GPS Chart Plotter is designed for maritime use. To avoid water intrusion, ensure the C-MAP BY JEPPESEN C-CARD door is completely closed.
 - Extensive exposure to heat may result in damage to the GPS Chart Plotter.
 - The GPS Chart Plotter contains dangerous high-voltage circuits which only experienced technicians can handle.
 - STANDARD HORIZON will not be liable for errors contained herein, or for incidental or consequential damages in connection with the performance or use of this material.
 - Because we frequently update our software and applications, the pictures shown through this Owner's Manual may be slightly different from what you see.
-

CLEANING PROCEDURE FOR THE GPS CHART PLOTTER SCREEN

Cleaning of the chart plotter screen is a very important operation and must be done carefully. Since the surface is covered by a antireflective coating, the procedure for cleaning all the surfaces can be performed using the following procedure: Use a clean, soft, lint-free cloth to clean the glass. We recommend using a micro-fiber cloth. Spray a small amount of ammonia-free cleaner (isopropyl alcohol) onto the cloth. Spraying on the cloth will prevent overspray. Fold the cloth or lens cloth into a triangular shape, moisten the tip and use the index finger behind a corner to move the cloth across the surface in overlapping side to side strokes. If the cloth is too wet, a noticeable wet film will be left in its path and you will need to repeat the process. If too dry, the cloth won't glide easily, and may damage the surface.

TABLE OF CONTENTS

1. INTRODUCTION	11
1.0 GENERAL INFORMATION	11
1.1 PACKING LIST	11
1.1.0 Packing List	12
1.2 OPTIONAL ACCESSORIES	12
1.3 OPTIONAL DOME OR OPEN ARRAY RADAR ANTENNAS	12
2. INSTALLATION	14
2.0 MOUNTING THE GPS CHART PLOTTER	14
2.1 BRACKET MOUNTING	14
2.2 FLUSH MOUNTING	15
2.3 MOUNTING THE OPTIONAL EXTERNAL GPS ANTENNA	16
2.3.0 Flush Mounting the Antenna	16
2.4 CONNECTIONS	17
2.4.0 CP190i Connection Table	18
2.4.1 CP190i Connections	18
2.5 BATTERY CONNECTIONS	20
2.6 NMEA CONNECTIONS	20
2.7 GPS POSITION ON A VHF RADIO	20
2.8 OPTIONAL BLACK BOX FISH FINDER	21
2.9 RADAR ANTENNA (USA ONLY)	21
2.10 PERSONAL COMPUTER CONNECTIONS	21
2.11 NMEA DATA PAGE	22
2.12 DEMO MODE (For DEALER USE)	22
3. CONTROLS AND INDICATORS	24
3.0 CONTROLS AND CONNECTIONS	24
3.1 GETTING STARTED	25
3.1.0 Power On, Off and ShuttlePoint Knob Operation	25
3.1.1 Cursor Vs. Home Mode	27
3.1.2 Cursor and Menu Selection Speed	27
3.1.3 Changing the Ship Icons	27
3.1.4 Changing Backlight and Contrast	28
3.1.5 Selecting North Up or Course Up	28
3.2 TIME SETUP	29
3.3 SELECTING LORAN TD OR OTHER COORDINATE SYSTEM	30
3.4 CHANGING THE Display COLOR	31
3.5 SELECTING LANGUAGE	31
3.6 SETTINGS IN GENERAL SETUP MENU	32
3.7 ABOUT PAGE	34
4. FIND SERVICES	36
4.0 USING FIND SERVICES & MORE FUNCTIONS	36
4.0.0 Port Services	36
4.0.1 Port	37
4.0.2 Tide Stations	37
4.0.3 Wrecks	38
4.0.4 Obstructions	39
4.0.5 Lakes Information	40
4.0.6 Lakes By Name	41

4.0.7	Points Of Interest	42
4.0.8	User Points	43
4.0.9	Coordinates	43
4.0.10	Information	44
5.	MAX CARTOGRAPHY OVERVIEW	45
5.0	INSERTING THE OPTIONAL MAX C-CARD	45
6.	MAP FUNCTIONS	47
6.0	MAX FUNCTIONS MENU	47
6.0.0	Zoom Type	47
6.0.1	Icons Size	48
6.0.2	Place Names Size	48
6.0.3	Perspective View	49
6.0.4	Dynamic Nav-Aids	50
6.0.5	Safety Status Bar (DSI - Data Safety Indicator)	50
6.0.6	Satellite Imagery	51
6.0.7	Currents Prediction	51
6.0.8	Chart Language	52
6.0.9	Pictures or Diagrams	53
How to Show Pictures or Diagrams of an Object	53	
6.0.10	Enhanced Port Info	54
7.	CREATING MARKS	55
7.0	CREATING A NEW MARK USING THE CHART PAGE	55
7.1	EDITING A MARK	55
7.1.0	Deleting a Mark or Waypoint	56
7.1.1	Moving a Mark or Waypoint	56
7.2	MARKS/WAYPOINTS LIST	57
7.3	CREATING A NEW MARK WITH THE USER POINTS LIST	58
7.4	GOTO CURSOR, ROUTE AND MARK	59
7.4.0	Goto Cursor	59
7.4.1	Goto Route	60
7.4.2	Goto Mark	60
7.4.3	Stop Navigation to Destination	60
8.	MAN OVER BOARD (MOB) FUNCTION	61
8.0	PLACING A MOB POINT	61
8.1	DELETING A MOB POINT	61
9.	ROUTES	62
9.0	CREATING A ROUTE USING WAYPOINTS	62
9.1	CHANGING THE NAME OF A ROUTE	63
9.2	CREATING AN OLYMPIC ROUTE	63
9.3	MAKING ADDITIONAL ROUTES	64
9.4	CREATING A ROUTE USING MARKS ON THE CHART PAGE	64
9.5	INSERTING A WAYPOINT INTO A ROUTE	65
9.6	GOTO A ROUTE	65
9.6.0	Using [GOTO] to Select Route	65
9.6.1	Using the ShuttlePoint knob	66
9.7	DELETING A ROUTE	66
9.8	OTHER SETTINGS IN ROUTE MENU	67
9.8.0	Route Check	67
10.	TRACKS	69
10.0	TRACKING	69
10.0.0	Saving and Starting a New Track	70

10.0.1	Deleting a Track	70
10.0.2	Other Settings	70
10.1	TRIP LOG	71
10.1.0	Using the Trip Log	71
10.1.1	Setup / Reset	71
11.	USER C-CARD	72
11.0	USER C-CARD MENU	72
11.0.0	Formatting the Optional User C-CARD	72
11.0.1	Transferring Files to the Optional User C-CARD	72
11.0.2	Loading a File from the Optional User C-CARD	73
11.0.3	Deleting a File from the Optional User C-CARD	73
11.0.4	Refreshing the Optional User C-CARD	73
12.	PAGES	74
12.0	CHART PAGE	74
12.0.0	Change Focus on Dual Chart Page	75
12.0.1	Single Chart Page	75
12.0.2	Window Selections	76
12.0.3	Customizing Data Windows	76
12.0.4	Additional Functions on Chart Page: Information on Objects	78
12.0.5	Display Mode	78
12.0.6	Marine Settings	79
12.0.7	Depth Settings	80
12.0.8	Land Settings	80
12.0.9	Chart Settings	81
12.0.10	Underwater Objects Settings	82
12.1	CUSTOMIZING CHART SETTINGS	83
12.2	NAVIGATION PAGE	83
12.3	HIGHWAY PAGE	84
12.4	CELESTIAL PAGE	84
12.5	GPS STATUS PAGE	85
12.5.0	GPS Setup Menu	86
12.5.1	WAAS/EGNOS Setting	86
12.6	NMEA DISPLAY PAGE	86
12.7	NMEA DATA PAGE	87
12.8	NMEA TREND PAGES	88
12.9	VHF DIGITAL SELECTIVE CALLING	88
12.9.0	Interfacing	89
12.9.1	Distress Call	89
12.9.2	Position Request	89
12.9.3	DSC Directory	90
13.	ADVANCED SETTINGS	91
13.0	INPUT/OUTPUT (NMEA, AIS, RADAR)	91
13.0.0	Input	91
13.0.1	Ouput	91
13.1	NAVIGATE	92
13.1.0	Loran TD	92
13.2	COMPASS	93
13.3	ALARMS	93
13.4	SIMULATION	94
13.4.0	Navigating a Route in Simulation Mode	95
13.5	DSC POLLING	95

14. AIS	96
14.0 SYSTEM DEFINITIONS	96
14.1 AIS SETUP MENU	97
14.2 QUICK INFO ON AIS TARGET	97
14.3 AIS TARGET COLORS	98
14.4 AIS-SART	98
14.4.0 AIS-SART Test Mode	98
14.5 AIS LIST	99
14.6 Enhanced AIS Page	99
14.6.0 AIS Vessel Types	100
15. C-WEATHER SERVICE	102
15.0 C-WEATHER SERVICE MENU	102
15.0.0 Download	102
15.0.1 Copy from User C-CARD	103
15.0.2 Weather Forecast	103
15.0.3 Real Time View	103
15.0.4 Type of Data	103
16. MOBILARM	104
16.0 MOBILARM-GPS CHART PLOTTER CONNECTION	104
16.1 SOFTWARE SETUP	105
16.2 MOBILARM STATUS	105
16.3 MOBILARM PTX	106
16.3.0 MOBILARM MOB alert is received	106
16.4 PLACING CURSOR ON THE PTX ICON	107
16.4.0 Delete PTX	107
16.4.1 Goto PTX	108
16.4.2 The MOBILARM Alarm Status List	108
17. TROUBLESHOOTING	110
18. TECHNICAL TESTS	111
18.0 SYSTEM TEST	111
18.0.0 RAM Menu (reset)	111
18.0.1 DIM Menu	111
18.0.2 Cartridges	112
18.0.3 Serial Ports	112
19. SPECIFICATIONS	113
19.0 CP190i SPECIFICATIONS	113
19.1 CP190i DIMENSIONS	114
19.2 OPTIONAL FF525 FISH FINDER SPECIFICATIONS	114
19.3 OPTIONAL WAAS GPS RECEIVER SPECIFICATIONS	115
20. APPENDIX: TERMS	116
ANALYTICAL INDEX	118

1. INTRODUCTION

Congratulations on your purchase of the STANDARD HORIZON GPS Chart Plotter. Whether this is your first STANDARD HORIZON product or not, we are committed to ensuring your enjoyment and satisfaction with this unit. Our Technical support personnel stand behind every product we sell. Customers should contact STANDARD HORIZON on 714-827-7600 or email to marinetech@yaesu.com.

1.0 GENERAL INFORMATION

The CP190i (with internal GPS antenna) is a precision-crafted high-performance receiver for the Global Positioning System (WAAS GPS) constellation of satellites that provide precise location data with a host of navigation features and is ideal for nautical use and sealed against water ingress. The CP190i is housed in rugged, impact-resistant cases with outstanding ergonomic design for effortless operation. The CP190i is IP56 water resistant.

The advanced features of the GPS Chart Plotter include:

- 2Nm C-MAP World Wide Background chart included
- 5" 320x232 high resolution sunlight-readable display
- Internal 50 channel WAAS GPS antenna
- Optional external 50 channel WAAS GPS antenna with 15m (50ft) of cable
- Fish Finder capable when connected to optional FF525 50/200kHz (Black Box Fish Finder)
- AIS capable (Color AIS Targets, AIS List Enhanced page, AIS-SART, AIS-MOB and AIS-EPIRB handling) when connected to an optional AIS device
- C-MAP Weather Service predictions
- Dual Chart page with independent zoom levels
- Selectable Sail boat and Power boat Ship Icons with Compass Rose indication
- Route Check
- Grounding Alarm
- SOG Speed Filter function to resolve erratic speed readings in rough seas
- Displays DSC Distress and Position Report calls received from a DSC VHF radio
- Dedicated MARK, ROUTE and FIND keys
- Supplied swivel mounting bracket and flush mounting hardware
- NMEA-0183 connections: 2 Inputs, 3 Outputs
- 3000 Marks / 50 Routes / 10000 Track Points
- 3 years waterproof warranty

1.1 PACKING LIST

When the package containing the Navigation device is first opened, please check for the following contents. If any parts are missing contact the dealer this Navigation device was purchased from. Accessories and replacements parts may be ordered in the USA by contacting STANDARD HORIZON's Parts department on 714-827-7600 Extn. 6800 or by email at marineparts@yaesu.com.

1.1.0 Packing List

PART CODE	ITEM
S8002224A	External bracket
S8002225	Mounting knob with two washers
S8002222	Dust cover
T9101553	Power Data Cable
S8002223	Flush mounting screws
EM022U500	Flush mount template
XUCMP0052	2 Amp fuse and holder
EM050U102	Owner's Manual
EM023U513	Quick Reference Guide

1.2 OPTIONAL ACCESSORIES

ACCESSORIES	PARTS NAME	ITEM
	Q7000619A	50 Channel GPS Antenna Unit GSU-5H Series UXOGSU51SD
	FF525	50/200kHz Black Box Fish Finder
	DST520	600W 2" Nylon Thru-hull depth temp Transducer
	DST521	600W Transom mount depth, speed temp Transducer
	DST523	600W 2" Bronze Thru-hull depth temp Transducer
	DST525	600W In-hull Transducer
	DST526	600W 2" Bronze Thru-hull depth, speed temp Transducer
	DST527	1000W In-hull depth Transducer (FF525 ONLY)
	DST528A	1000W Bronze long stem depth temp Transducer (FF525 ONLY)

1.3 OPTIONAL DOME OR OPEN ARRAY RADAR ANTENNAS

The Radar antennas are supplied by SI-TEX (631) 996-2690 in the USA and Canada. Refer to the following table for compatible models:

MODEL NUMBER	DESCRIPTION
MDS-1	2kW 24 Mile 12.4" diameter Radome antenna
MDS-8	2kW 24 Mile 20" diameter Radome antenna
MDS-9	4kW 36 Mile 23.5" diameter Radome antenna
MDS-10-4	4kW 48 Mile 4ft Open Array
MDS-10-5	4kW 48 Mile 5ft Open Array

NOTE

For additional information, refer to the Radar Installation and Radar Operation Manuals located at www.standardhorizon.com.

2. INSTALLATION

NOTE

Throughout this Owner's Manual same conventions are used. See the legend below:

[MENU] If you see brackets around a bold and capital letter word this refers to a key press.

GENERAL SETUP When a word(s) is bold capital letters and underlined, this refers to a menu selection item.

A GPS receiver with antenna is located inside the CP190i, which is designed to be bracket mounted. It may be flush mounted, however an optional external GPS antenna may be needed to receive GPS satellite signals.

To use the external GPS antenna, the internal GPS antenna must be turned off, using the procedure below:

1. Turn the CP190i On and select the **GPS STATUS** page.
2. Press **[ENT]** to show the **GPS SETUP** menu.
3. Move the ShuttlePoint knob to highlight **INTERNAL GPS** and press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **OFF** and press **[ENT]**.

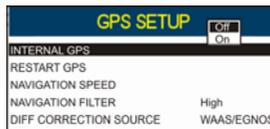


Figure 2 - GPS Setup menu

5. Press **[CLR]** to exit the **GPS SETUP** menu.
6. Confirm the GPS Status page is showing satellite signal strength bars and receive a fix.

2.0 MOUNTING THE GPS CHART PLOTTER

The CP190i is supplied with a swivel mounting bracket which allows them to be dash mounted. When flush mounting, the optional GPS antenna may be needed to receive GPS satellite signals. Refer to the images below for Bracket and Flush mounting.

NOTE

The CP190i is designed to be bracket and flush mounted. However when bracket mounting the CP190i in an area where satellite reception is not possible with the internal antenna or when flush mounted, the optional GPS antenna must be installed.

2.1 BRACKET MOUNTING

Before installing ensure the area the bracket is mounted to is strong enough to support the weight of the GPS Chart Plotter especially while under way. After the location is found, attach the mounting base to the area using the supplied hardware.

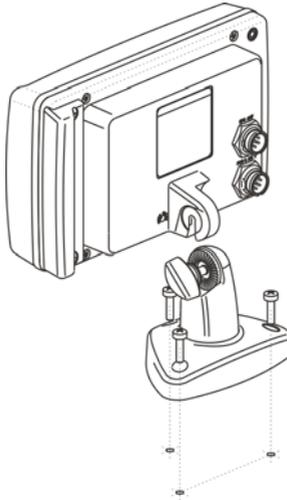


Figure 2.1 - Example of Bracket installation on CP190i

2.2 FLUSH MOUNTING

The CP190i is supplied with a Flush mount template for the cutout hole and screw holes required to install the GPS Chart Plotter.

NOTE

Before drilling holes make sure there is enough room to mount the GPS Chart Plotter and there are no obstructions.

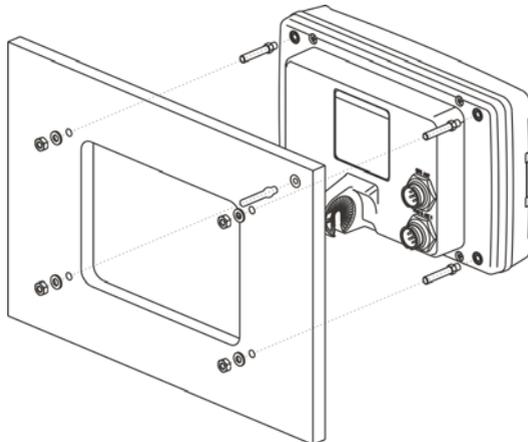


Figure 2.2 - Example of Flush installation on CP190i

1. After a location is found, peel the template label from the backing and apply the label to the mounting area.
2. Drill a hole in one area of the cutout area that will allow the blade of a jig saw to be inserted. Insert and cut out the area on the panel using the jig saw.
3. Next drill the four holes required to insert the GPS Chart Plotter with the mounting studs.
4. Install the mounting studs on the GPS Chart Plotter and insert into the mounting hole.
5. Attach the GPS Chart Plotter to the mounting location by attaching the supplied hardware to the mounting studs.

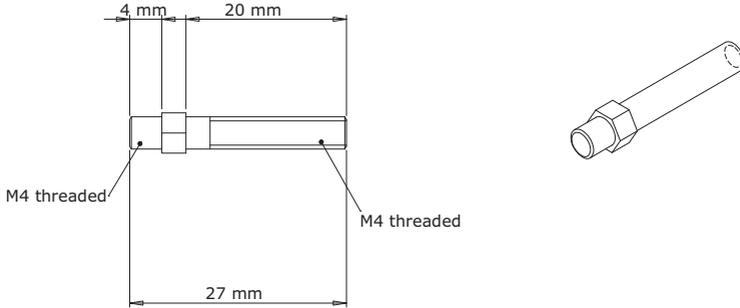


Figure 2.2.0 - Mounting Screws

2.3 MOUNTING THE OPTIONAL EXTERNAL GPS ANTENNA

An external WAAS GPS antenna is available when the CP190i is flush mounted or mounted in an area where satellite reception is not possible with the internal antenna. This antenna is designed to be mounted on a base, installed on an extension or flush mounted.

Choose a location for the antenna that has a clear view of the sky and is not located within 3ft of a Radar or other transmitting antennas. Ensure there are no major obstructions or fixtures in the immediate proximity to the antenna. The antenna relies on direct "line of sight" satellite reception. If you are unsure of the chosen location, temporarily mount the antenna in the desired location to verify correct operation. If mounted close to Radar, after the GPS Chart Plotter has a fix, turn on the Radar to ensure the GPS Chart Plotter holds the fix (use the GPS Status page, see Par. 12.5 "GPS Status page"). The thread used on the antenna is an industry standard (1inch 14TPI) used on a wide range of mounting brackets.

NOTE

The antenna cable can be cut and spliced to ease installation. Care must be taken when reconnecting the antenna cable to protect from water and corrosion.

2.3.0 Flush Mounting the Antenna

NOTE

Before drilling holes, it is recommended the antenna be positioned where the location is planned, cable connected to the GPS Chart Plotter and power turned on to ensure a GPS Fix is received.

1. Remove the threaded base from the antenna dome.

2. To ease installation a flush mounting template for the antenna has been included.
3. Apply the mounting template sticker to the area that was verified for GPS reception.
4. Then, drill out the 0.78" (20mm) and 0.13" (3.2mm) holes, and remove the template.
5. Insert the cable into the 0.78" (20mm) hole and route to the GPS Chart Plotter.
6. Apply a small amount of RTV to the underside of the antenna.
7. Place the antenna and then screw it into place using the screws.

NOTE

In some cases the screw may not be long enough. If this happens simply apply more RTV to the underside of the antenna to glue it into place.

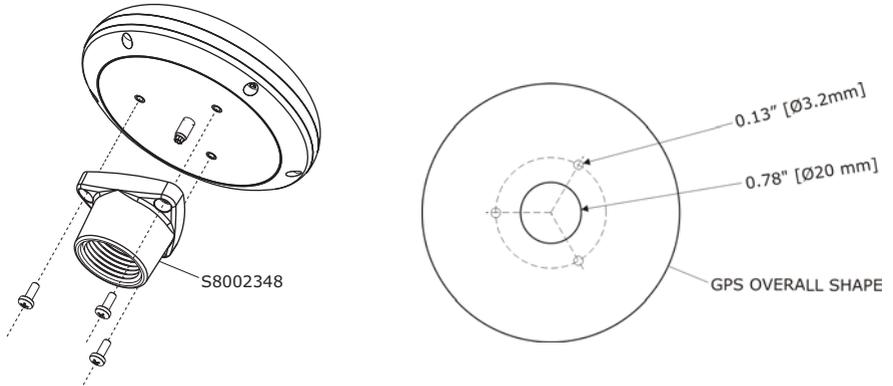


Figure 2.3.0 - Installing the External GPS antenna

Smart GPS Cable

Pin	Wire Color	Description
1	Red	Battery Positive
2	Green	Smart GPS NMEA Input
3	Brown	Smart GPS NMEA Output
4		NC
5		NC
6	Black/Yellow	Battery Ground

2.4 CONNECTIONS

The CP190i has connectors that allow them to be connected to a Power supply, optional WAAS GPS antenna, optional FF525 50/200kHz Black Box Fish Finder and NMEA Devices* such as VHF's, AIS Receiver, Digital Instruments and Autopilots.

*NOTE**

RS232 not opto-isolated electrical interface.

NOTE

The GPS Chart Plotter can send many sentences to external NMEA devices*. The NMEA Output wires are yellow and white. If you have connected devices as shown in the table on the next page and need to feed NMEA to other devices (Autopilot, RADAR...) you can parallel wires from the yellow, brown or white wires to other devices.

2.4.0 CP190i Connection Table

Power Data Cable

Pin	Wire Color	Description	Connection Example	Additional Comments
1	Black	Battery Ground	Connect to Battery Ground	
2	Red	Battery Positive	Connect to Battery Positive	
3	Green	NMEA Common	Common (ground) for NMEA devices**	
4	Blue	Port1 Input	Connect to Output of NMEA devices**	Default is NMEA 0183
5	Brown	Port1 Output	Connect to Input of NMEA devices**	Default is NMEA 0183 with GGA, GLL, RMC, DBT, DPT, MTW, VHW and XTE sentences
6	Grey	Port2 Input	Connect to FF525	Default is Fish Finder
7	White	Port2 Output	Connect to FF525	Default is Fish Finder
8	Yellow	Port3 Output	Connect to Input of NMEA devices**	Default is NMEA 0183 with APA, APB, BOD, GGA, GLL, RMC and BOD sentences*

NOTE* AUTOPILOT CONNECTION


Care must be taken when connecting the GPS Chart Plotter to an Autopilot. Normally Port3 (Yellow wire) will be used to connect to an Autopilot input, however older autopilots may not be able to read the sentences due to the talker ID that is being used (II Integrated Instrument). If the Autopilot connections are made to Port3 (Yellow wire) and the Autopilot is not reading the sentences, change the connections to Port1 (Brown wire) and change the sentences to APA, APB, BOD, GGA, GLL, RMC and XTE.

NOTE**



RS232 not opto-isolated electrical interface.

2.4.1 CP190i Connections

2.4.1.0 DC Power Connection

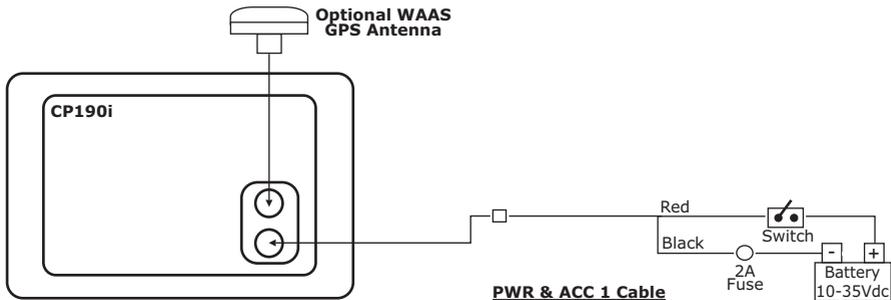

2.4.1.1 Connection of the FF525, AIS Receiver, VHF and Autopilot

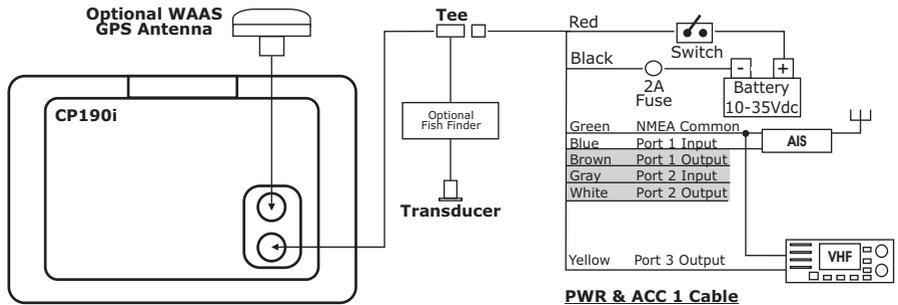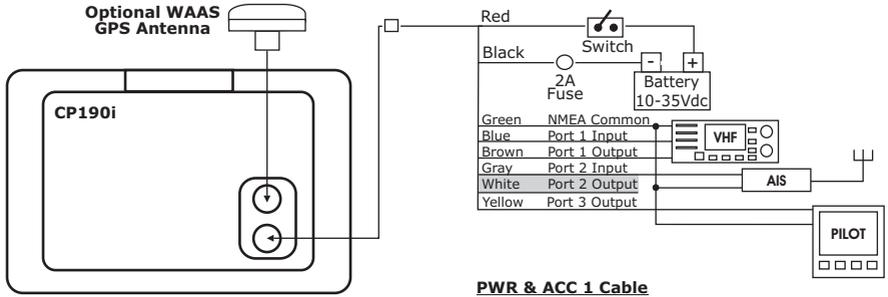

NOTE

Port2 Input and Output is used by the optional FF525. In the diagram above you will notice Port2 Input and Output wires are shown in gray and not used.

2.4.1.2 AIS Setup

The CP190i has to be set up to be able to receive NMEA information from the AIS receiver. The GPS Chart Plotter reads the AIS NMEA message VMD, type 1, 2, 3 and 5 for AIS Class A and type 18, 19, 24 for AIS Class B. Select the used port and transmission speed by following the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **PORT1 INPUT** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob up/down to select **AIS 38400** and press **[ENT]** or move the ShuttlePoint knob to the right.

NOTE

If an AIS receiver is not connected, Port1 Input can be connected to most DSC VHF's for position polling.

2.5 BATTERY CONNECTIONS

1. The GPS Chart Plotters are supplied with a fuse and holder. This fuse should be installed into the Black wire to protect the NMEA Output/Input circuits from possible damaged.
2. Connect the Red and Black wires from the GPS Chart Plotter to a 12VDC source as directly as possible.

2.6 NMEA CONNECTIONS

The GPS Chart Plotter can be connected to external devices with NMEA and display information. Examples:

- DSC VHF Radio
- Depth Sounder, Speed Log, Wind Instrument, Autopilot etc.
- Radar (USA ONLY)
- Personal Computer
- AIS Receiver
- MOBILARM System

2.7 GPS POSITION ON A VHF RADIO

STANDARD HORIZON has pioneered Digital Selective Calling (DSC) on VHF radios. Advancements in DSC have made it possible to show the coordinates of a vessel that has transmitted a DSC Distress Call or even Polled the location of another vessel and show the position of that vessel on the display of STANDARD HORIZON VHF's.

STANDARD HORIZON has taken this feature one step further. If a CP190i is connected to a DSC capable VHF, the vessel in Distress or the polled position of the vessel is shown on the display of the GPS Chart Plotter, making it easy to navigate to the location of the vessel. This is a great feature that could save someone's life or for anyone wanting to know the position of another vessel.

Other DSC VHF Manufactures

GPS Chart Plotter	Description	VHF
Green	NMEA Common Ground	Connect to NMEA Ground
Brown	NMEA Positive Output	Connect to NMEA Input
Blue	NMEA Positive Input	* Connect to NMEA Output (if available)

* Some manufacturers of DSC VHF's are not capable of outputting NMEA DSC and DSE sentences to the CP190i. Refer to the Owner's Manual and confirm the VHF can output NMEA DSC and DSE sentences.

NOTE

Refer to VHF Digital Selective Calling Section for operation.

2.8 OPTIONAL BLACK BOX FISH FINDER

STANDARD HORIZON offers an optional Black Box Fish Finder called the FF525. Please refer to the Owner's Manual supplied with the Fish Finder for connections and operations.



Figure 2.8 - FF525 50/200kHz Black Box Fish Finder

NOTE

The FF520 is also compatible.

2.9 RADAR ANTENNA (USA ONLY)

Please refer to Par. 1.3 "Optional Dome or Open Array Radar Antennas". The Radar antenna includes the necessary electronics to deliver Radar information to a compatible STANDARD HORIZON GPS Chart Plotter, and is supplied with mounting hardware kit, interconnection cable and a Radar Junction Box. Please refer to the Radar Installation Manual and Radar Operation Manual available at www.standardhorizon.com.

2.10 PERSONAL COMPUTER CONNECTIONS

The GPS Chart Plotter can be connected to output Marks and Routes to many available PC programs. To send or receive User Points the PC Program must be able to receive NMEA WPL and RTE sentences. Refer to the table below for connection to a Serial DB9 connector.

Pin	PC DB9 connection	Port 1 connection
2	Receive	Brown
3	Transmit	Blue
5	Signal ground	Green

By default Port1 is set to receive or send User Points to and from a PC. The GPS Chart Plotter may be set up to send and receive the User Points on a different Port using the following procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **SEND/REC RTE & MARKS** and press **[ENT]** or move the ShuttlePoint knob to the right to show the popup window.
5. Move the ShuttlePoint knob to desired Port and press **[ENT]**.

The PC COM settings are:

- Baud Rate : 4800
- Parity : None
- Data Bits : 8

- Stop Bits : 1
- Flow Control : None

The format of the sentences that are sent:

- MARK \$GPWPL,3249.061,N,00710.651,E,MRK002*22
- WAYPOINT \$GPWPL,3933.008,N,00639.969,E,WPT012*22
- ROUTE \$GPWPL,2544.362,N,08011.672,W,WPT003*32
\$GPWPL,2543.921,N,08011.481,W,WPT004*31
\$GPWPL,2543.493,N,08011.768,W,WPT005*37
\$GPRTE,2,1,c,ROUTE01,WPT003,WPT004,WPT005*21

2.11 NMEA DATA PAGE

The NMEA Data page is very useful to see if an external device (example: Depth Sounder) is transmitting NMEA sentences to the GPS Chart Plotter. This page can also be used to see if the GPS Chart Plotter NMEA Output is being loaded down by an external NMEA device the GPS Chart Plotter is connected to. Example: A VHF radio is connected but the radio is not receiving a GPS Position. Usually the VHF radio will be connected to the Green and Brown wires. To check to see if the GPS Chart Plotter is transmitting the sentences:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **NMEA DISPLAY** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **DATA** and press **[ENT]**.
3. The **NMEA DATA** page is shown.
4. Connect the Blue Wire on the GPS Chart Plotter to the junction of the Brown wire and the VHF wire. The display should look similar to the following picture.

```

NMEA DATA
#IIRMC,002558,A,3407.643,N,07702.028,W,003.2,000.0
,150404,9.3,M#61
#PCNPN,0,1,000000,060
#ISGL,3407.643,N,07702.028,W,002557,A#22
#IIUTG,000.0,T,009.3,M,003.2,N,005.9,K#SE
#IIXTE,R,R,0,065
#IIRMB,R,0,000000,066
#IIRMC,002559,A,3407.644,N,07702.028,W,003.2,000.0
,150404,9.3,M#62
#IIRMB,R,0,000000,066
#IIRMC,002559,A,3407.641,N,07702.028,W,003.2,000.0
,150404,9.3,M#60
#PCNPN,0,1,000000,060
#IIRPB,R,0,000000,053
#ISGL,3407.642,N,07702.028,W,002557,A#22
#IIUTG,000.0,T,009.3,M,003.2,N,005.9,K#SE
#IIXTE,R,R,0,065
ZOOM IN TO CHANGE PORT          Port: PORT1

```

Figure 2.11 - NMEA Data page

2.12 DEMO MODE (FOR DEALER USE)

In Demonstration Mode the GPS Chart Plotter automatically places a Destination point on the Chart page and simulates navigation to the point. Also, the active page displayed on the screen changes every 10 seconds. The pages are shown in the following order: Start-Up screen, GPS Status page, Chart/Compass tape page, Chart/Fish Finder page, Fish Finder Full page, Radar page, Navigation page, Highway page, Celestial page, NMEA Display page.

NOTE

This mode is used by dealers to promote the features of the CP190i when on a retail shelf.

The Demo Mode can be selected from the Simulation Menu following the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SIMULATION** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **DEMO MODE** and press **[ENT]** or move the ShuttlePoint knob to the right to show the popup window.
5. Move the ShuttlePoint knob to select **ON** and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Demo mode is now activated.

Once the Demo Mode is enabled, it is possible to temporarily exit Demo Mode by pressing a key and return to the GPS Chart Plotter normal operation. If a key is not touched for 30 seconds the Demo Mode will restart.

To disable the Demo Mode follow the procedure above selecting **OFF** at step 5.

3. CONTROLS AND INDICATORS

NOTE

This section defines each control of the CP190i. For instructions, refer to Getting Started and Advanced Settings sections of this Owner's Manual.

NOTE

Throughout this Owner's Manual same conventions are used. See the legend below:

[MENU] If you see brackets around a bold and capital letter word this refers to a key press.

GENERAL SETUP When a word(s) is bold capital letters and underlined, this refers to a menu selection item.

3.0 CONTROLS AND CONNECTIONS

The CP190i is controlled by using the keys located on the front panel. These labelled keys are dedicated to specific functions. As you press a key, a single audio beep confirms the key action; every time a key press is not valid, three rapid beeps sound to indicate that the key action is not valid. There is also a ShuttlePoint knob to move the cursor across the screen.

The ZOOM IN and ZOOM OUT keys

- Pressing **[ZOOM IN]** shows more details of a smaller area, by changing the chart scale and zooming in on your display.
- Press **[ZOOM OUT]** to change the scale and show a wider, otherwise less detailed view.
- Pressing and holding **[ZOOM IN]/[ZOOM OUT]** allows for quick zoom, that is the fast change of the chart scale where only the land areas are drawn.

NOTE

The GPS Chart Plotter contains a World Wide background that allows you to zoom in to 2Nm. For more detail, a C-MAP By JEPPESEN NT*/MAX C-CARD must be purchased and installed.

The ShuttlePoint knob

- Moves the cursor around the Chart page (Cursor Mode) and pans the chart.
- Used to scroll menu items. When in the menu, moving the ShuttlePoint knob to the right enters a selection and moving the knob to the left clears the function.
- Changes the GPS Chart Plotter from Home Mode to Cursor Mode on the chart screen (for a detailed explanation refer to Par. 3.1.1 "Cursor VS Home Mode").

The ENT key

Press **[ENT]** to select the desired option or to confirm the selection.

The CLR key

- When on the Chart page, press **[CLR]** to set Home Mode.
- Press **[CLR]** to clear a selected function, step backwards in a menu or exit a menu.

The MENU key

- Selects the Main Menu.
- Pressing and holding **[MENU]** for 3 seconds allows you to change the fields contained

within the data windows while on the Chart, Navigation, Highway, GPS Status or NMEA Display page.

The GOTO key

- Starts navigation (goto) to a destination point.
- When pressed, a popup window will be shown allowing you to select to start navigation to a Mark, a Route or the position of the cursor.
- To stop navigation, press **[GOTO]**, select **STOP** and press **[ENT]** in the popup window.

The MARK key

Places a Mark under the ship's position when in Home Mode. When the cursor is shown and **[MARK]** is pressed it will place a Mark under the location of the cursor.

The ROUTE key

- Places a Waypoint.
- Move the cursor and press **[ROUTE]** to place more Waypoints to form a Route.

The PWR key (Backlight and Contrast)

- Press and hold **[PWR]** to turn the GPS Chart Plotter On or Off.
- Once on, press **[PWR]** to show and change the Contrast and Backlight settings.

The MOB key

- Places a MOB (Man Over Board) mark on the Chart page under the boat's position to aid in the rescue or a person that may have fallen aboard.
- To delete MOB, press **[MOB]**, select **DELETE** and press **[ENT]** in the popup window.

The FIND key

Allows searching the optional C-MAP BY JEPPESEN NT*/MAX C-CARD for Port Services, Ports, Tide Stations, Wrecks, Obstructions, Points Of Interest, Lakes Information, Lakes By Name, User Points, GPS Coordinates or Information on any point on the chart.

3.1 GETTING STARTED

The Getting Started section will take you through the frequently used operations and assist you to customize the look of the GPS Chart Plotter.

3.1.0 Power On, Off and ShuttlePoint Knob Operation

1. Press and hold **[PWR]** until the display shows the Start-Up page (see the following picture). To turn Off, press and hold **[PWR]** until the display turns Off.

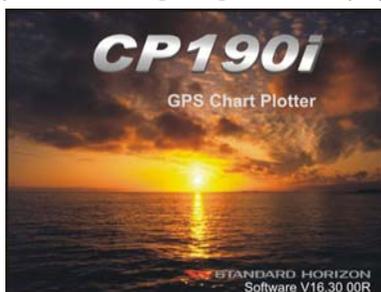


Figure 3.1.0 - Example of Start-Up page on CP190i

- When the power is first turned on two pages the Start-Up page and the Caution pages are briefly shown before the GPS Status page.



Figure 3.1.0a - Caution pages

NOTE

The Caution page on the left is shown only if the data C-CARD is over one year old.

- When the GPS Chart Plotter is first turned on it will take some time for the GPS to acquire a fix of your position. Look closely at the GPS Status page and you will see satellites and relative signal strengths of each satellite. After a fix is received the GPS Chart Plotter will automatically switch to the Chart page with the ship icon centered on the screen.

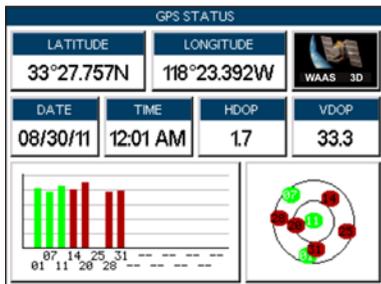


Figure 3.1.0b - GPS Status and Chart pages

- On the Chart page the ShuttlePoint knob is used to pan around the chart. Move the ShuttlePoint knob to the left and you will notice a cross hair \pm appears, this is called the cursor.
- When you move the ShuttlePoint knob you will notice DST and BRG values in the data window change. This shows the Distance and Bearing from the GPS Fix of your vessel to the position of the Cursor.
- If the cursor is moved to the edge of the screen the GPS Chart Plotter will automatically pan in the desired direction.

3.1.1 Cursor Vs. Home Mode

Cursor Mode

When the  cursor is shown on the Chart page, the GPS Chart Plotter is in Cursor Mode. In Cursor Mode the position of the vessel will not stay in the center of the page and will move right off the edge of the screen (as your boat moves). Cursor Mode allows you to pan around and look at areas on the chart. In this mode you can also create Marks, Routes, measure Distance and Bearings from your current position.

Home Mode

When the  ship icon is shown on the Chart page (cursor is not shown) you are in Home Mode. Now as the ship moves through the water the vessel's position will be kept in the center of the display.

NOTE

To change from Cursor Mode to Home Mode press **[CLR]**.

3.1.2 Cursor and Menu Selection Speed

The CP190i allows you to control the speed the Cursor moves when the ShuttlePoint knob is pressed. To change the speed:

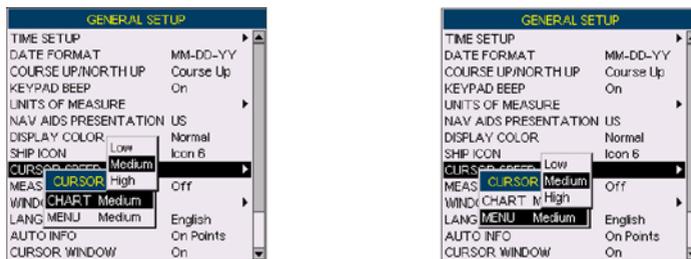


Figure 3.1.2 - Cursor Speed menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **CURSOR SPEED** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, Chart and Menu which allow the Cursor Speed to be selected as High, Medium or Low on the Chart page or within the menus.
5. With **CHART** or **MENU** selected, press **[ENT]** or move the ShuttlePoint knob to the right. Move the ShuttlePoint knob to the desired setting and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** until the menu disappears or an easier method is to press the ShuttlePoint knob to the left a few times.
7. Move the cursor on the Chart page and see if the speed is to your liking.

3.1.3 Changing the Ship Icons

The cursor may be changed to any of the following icons (see Figure 3.1.3). The default setting is Icon 6.

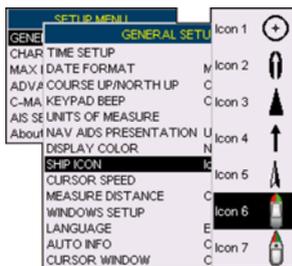


Figure 3.1.3 - Ship icons

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SHIP ICON** and press **[ENT]** or move the ShuttlePoint knob to the right to show the popup window with ship icons.
4. Move the ShuttlePoint knob to select the desired icon and press **[ENT]** or move the ShuttlePoint knob to the right to select a new icon.
5. Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.

3.1.4 Changing Backlight and Contrast

With the CP190i is turned on, briefly press **[PWR]** to show the backlight and contrast popup window. Move the ShuttlePoint knob to the left or right to adjust the LCD backlight intensity or up or down to change the LCD contrast. Press **[ENT]** to set.

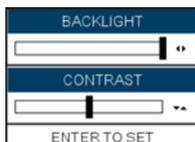


Figure 3.1.4 - Backlight and Contrast adjustment

3.1.5 Selecting North Up or Course Up

The default selection is **COURSE UP**: the top of the Chart page oriented so it will always show the area ahead of the direction your vessel is travelling. Also it is possible to select **NORTH UP**: the chart is shown with North toward the top of the display.

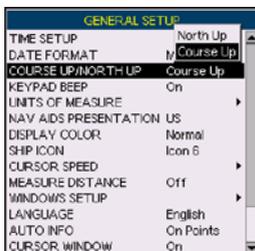


Figure 3.1.5 - Course Up/North Up menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **COURSE UP/NORTH UP** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Another popup window will be shown with **NORTH UP** and **COURSE UP**, move the ShuttlePoint knob to the desired selection and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.

NOTE

When the CP190i is in Course Up mode a small arrow icon  will be shown on the Chart page indicating North.

3.2 TIME SETUP

The time information supplied by the GPS satellites is in Universal Time Coordinates (UTC or Greenwich England Mean Time). To change the GPS Chart Plotter to read the correct time, first you must know the correct offset for your Time Zone, and then whether or not you are observing Daylight Saving time. For example on the West coast of the United States or Pacific Standard Time the offset needed would be -08:00 or -07:00 for Daylight Saving time, Eastern Standard Time -05:00 or -04:00 for Daylight Saving time.

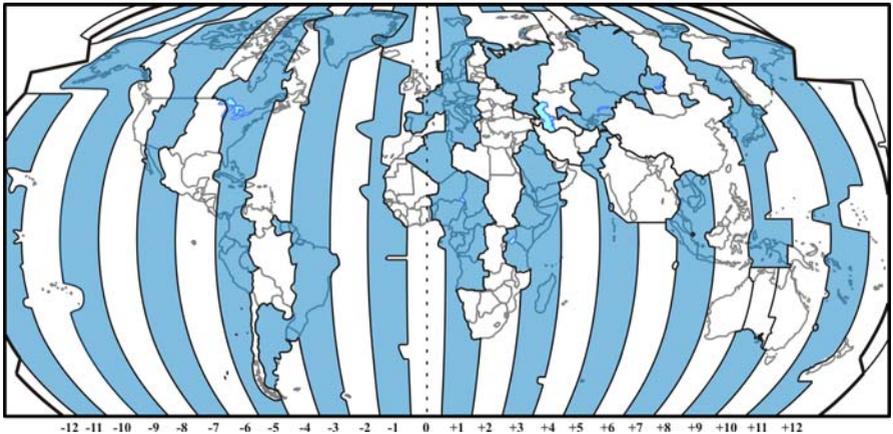


Figure 3.2 - Adjusting Time

The Time Setup menu allows you to enter a Time Zone offset for your location, selection to automatically adjust the time for Daylight Saving and to configure the time in 12 or 24 hour formats.



Figure 3.2a - Time Setup menu

NOTE

By setting the time in the steps below, the time shown on the Celestial page is automatically set up.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **TIME SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **TIME ZONE** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Look at the table and find the time zone for your area. Move the ShuttlePoint knob up or down to select the desired zone and press **[ENT]**.
6. Next move the ShuttlePoint knob to highlight **DAYLIGHT SAVING** and press **[ENT]** or move the ShuttlePoint knob to the right.
7. Daylight Saving menu has 2 options:
OFF Select Off when your location does not recognize Daylight Saving Time
ON Select On to manually turn Daylight Saving Time On. This is the default.
8. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

3.3 *SELECTING LORAN TD OR OTHER COORDINATE SYSTEM*

The GPS Fix coordinates can be changed to show Latitude/Longitude, Loran TDs or UTM. To change the Coordinate System, follow the procedure below:

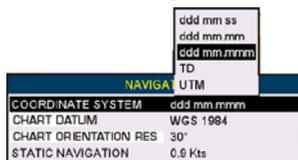


Figure 3.3 - Coordinate System menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **NAVIGATE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **COORDINATE SYSTEM** and press **[ENT]** or move the ShuttlePoint knob to the right.

5. Move the ShuttlePoint knob to highlight the desired coordinate type and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

NOTE

If the TD is selected, you should set the Chain, Pair, ASF1, ASF2 and Alter. If the TD numbers are not correct the Pair letters may be backwards. Reversing the two letters usually solves this issue. Example: Y/Z change to Z/Y.

3.4 CHANGING THE DISPLAY COLOR

The CP190i has preprogrammed settings allowing you to customize the look of the pages. The default is Sunlight, however there are other settings: Classic, NOAA, Night and Normal. Night is very useful during evening hours so not to impair night vision.

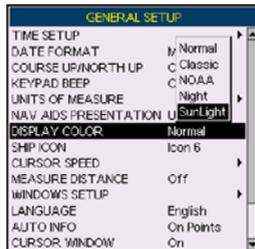


Figure 3.4 - Display Color menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **DISPLAY COLOR** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. A popup window will be shown with **Normal**, **Classic**, **NOAA**, **Night** and **Sunlight**. Move the ShuttlePoint knob to the desired selection and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.

3.5 SELECTING LANGUAGE

To ease operation in different countries, the software includes translation and display of the following 16 Languages:

- English
- German
- Swedish
- Danish
- Finnish
- Japanese
- Italian
- Spanish
- Portuguese
- Dutch
- Russian
- French
- Norwegian
- Chinese (Traditional)
- Greek
- Chinese (Simplified)

Multilanguage will display the digitized data in the charts as long as the source paper chart was done in the national language. For instance, if a Chinese chart is digitized in English,

the digitized data will only display in English. However, if it was digitized in Chinese, then the digitized data can display Chinese or English. The translations are included in menus, data pages, warning/alarm messages, full/quick info, list of objects found by find/nearest function, and on charts (such as place's names and buoy's names, etc.).

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **LANGUAGE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Another popup window will be shown with the available languages, move the ShuttlePoint knob to the desired language and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.



Figure 3.5 - Language Selection menu

NOTE

If the selected language is not available on cartographic data, English is used.

HOW TO RESET LANGUAGE if unable to understand current selected language

If you have accidentally selected a language and are unable to return to the Language Selection menu, perform the following procedure:

- a. Select the Chart page.
- b. Press **[MENU]** two times, move the ShuttlePoint knob to highlight the first (top) selection in the menu and press **[ENT]**.
- c. Move the ShuttlePoint knob to highlight the **LANGUAGE** item and press **[ENT]**.
- d. A language window will be shown, select your language and press **[ENT]**.

3.6 SETTINGS IN GENERAL SETUP MENU

The **GENERAL SETUP** menu has other selections that allow you to customize the display. All selections are listed in the following table:

TIME SETUP	Selects the Time Zone offset, enables or disables Daylight Saving time, selects 12 or 24 hour Time Format .
DATE FORMAT	Select the Date format MM-DD-YY (default), DD-MM-YY or YY-MM-DD .
COURSE UP/NORTH UP	Select North Up (the top of the page is fixed to North) or Course Up (the top of the page is orientated to the direction the vessel is heading. This is the default).
KEYPAD BEEP	Allows the beep produced when a key is pressed to be turned On (default) or Off .
UNITS OF MEASURE	Units of Measure can be selected for Distance , Speed , Depth , Altitude and Temperature :

Distance: selections are **Nm** (Nautical Miles), **Sm** (Statute Miles), **Km** (Kilometres), **Nm+Ft**, **Nm+Mt**. Note when "Nm+Ft" is selected if the distance is less than 1.0Nm, it turns to feet. When "Nm+Mt" is selected if the distance is less than 1.0Nm, it turns to meters.

Speed: selections are **Kts** (knots), **MPH** (miles per hour), **Kmh** (kilometer per hour).

Depth: selections are **Ft** (feet), **FM** (fathoms) and **Mt** (meters).

Altitude: selections are **Ft** (feet) and **Mt** (meters).

Temperature: selections are °F (Fahrenheit) and °C (Celsius).

NAV AIDS PRESENTATION Allows the Nav Aids presentation to be drawn using NOAA symbology when **US** (default) is selected or International symbols when **International** is selected. When selected these functions affect how the icons for Lights, Signals, Buoys and Beacons are displayed.

DISPLAY COLOR Changes the background colors to enhance the visibility of the screen depending on the surrounding light conditions. **Normal** is recommended when the GPS Chart Plotter is not exposed to the direct sunlight. When this mode is set the charts are displayed in order to use colors as similar as possible to ones used in the original paper charts. **Classic** uses vivid chart colors presentation. **NOAA** allows setting NOAA paper chart colors presentation. **Night** is recommended when the environment is dark in order to reduce the glare of the display. The GPS Chart Plotter displays charts and screen in darker colors. **Sunlight** (default) is designed to enhance the visibility of the screen when the GPS Chart Plotter is exposed to sunlight. The charts are much brighter than in the other modes and the depth areas are filled with the white color so different depth areas are not easily distinguishable.

SHIP ICON Selects from a variety of ship icons that represent your vessels position on the Chart page. The default is Icon 6.

CURSOR SPEED Selects the speed of the cursor when navigating the Chart page or within the menus. **Low**, **Medium** (default) and **High** are available.

MEASURE DISTANCE When this function is On, and the ShuttlePoint knob is moved to a location where you want to start measuring a distance and press **[ENT]**. Move the ShuttlePoint knob to move the cursor to a second location where you want to finish measuring a distance and press **[ENT]**. A line will appear between the Start and Finish points and a popup window will be shown indicating the distance and bearing from the Start and Finish points. Press **[ENT]** to delete both points. Off is the default.

START point



Finish point



WINDOWS SETUP Allows the data windows to be customized on the Chart page and Navigation page (refer to Par. 12.0.2).


LANGUAGE Allows changing the language for menus and data screens.

AUTO INFO When the cursor is moved over a buoy, Mark or other item a popup window will show information of the item. This menu item allows the window to be turned Off, **On Points** (default) or **On All**.

Auto Info OFF



Auto Info ON POINTS

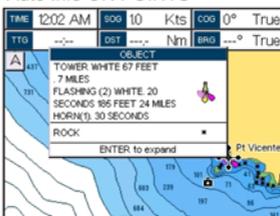


Auto Info ON ALL




CURSOR WINDOW

By default when the cursor is moved on the chart a window is shown with the Lat/Lon Distance and Bearing from the vessels location to the cursor. This selection allows the window to be turned On (default) or Off. The Cursor Window is automatically disabled when General is set in Windows Setup option.

Cursor Window ON

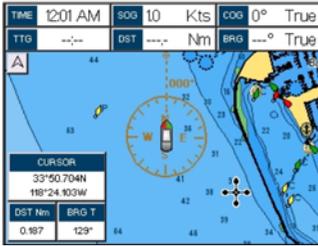

Cursor Window OFF

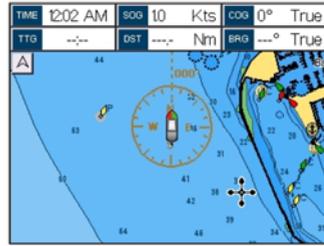

CURSOR POSITION

The position of the cursor can be customized so it is centered in the middle (if **Center** selected, default) or centered on the bottom of the Chart page (if **Bottom** selected).

COG TIME LINE

It is a line projected from the ship icon which indicates the distance your vessel will travel at the current speed. Selections are 2, 10 (default), 30 minutes, 1, 2 hours and infinite.

COMPASS ROSE

Allows selection of compass direction indication around Ship Icon. The default is Off.

Compass Rose ON



Compass Rose OFF



3.7 ABOUT PAGE

From Main Menu page it is possible to select the About page containing Software, Chart and optional devices information.

1 Software System Information

2 Cartography Information

3 Storage Capacity

CHARTING OPERATING SYSTEM, Copyright (C) 2006 - 2012 JEPPESEN Italia S.r.l.	
Software	XXXXXX YYYY
NTSL	V7.7.25 R [23/04/2010]
KERNEL	V15.0 R [08/04/2010]
FILE SYSTEM	V3.30.0 R [18/08/2009]
BIOS	V15.16 R [09/03/2010]
GPS	Generic
FF LIB.MOD	V132.00R [16/10/2009] FF 520
RADAR LIB.MOD	V120.00R [20/05/2009] SIMULATION [S/N FFFF]
C-WEATHER	V120.00 R [18/08/2009]
INTCHART 1	: WW-M012.03 MARINE FRESHWATER WWBK
C-CARD	: M-NA-M632.00 L_ANGELES and S. PEDRO BAYS
User Points	3000
Routes	50
Track Points	10000
Tracks	20
MOBILARM	Function not activated
Designed for C-MAP by JEPPESEN	
MENU for System Update Menu	

Figure 3.7 - Example of About page

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **About...** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. The information page appears on the screen (see the following picture).
4. Press **[CLR]** or move the ShuttlePoint knob to the left to exit and show the Chart page.

4. FIND SERVICES

4.0 USING FIND SERVICES & MORE FUNCTIONS

The CP190i has a dedicated **[FIND]** key that allows searching the optional C-MAP By JEPPESEN NT+/MAX C-CARD for Port Services, Ports, Tide Stations, Wrecks, Obstructions, Points Of Interest, Lakes, User Points, GPS Coordinates or Information on any point on the Chart.

4.0.0 Port Services

This feature is used to locate Port Services nearest the position of your vessel. The table below shows a list of some of the available Port Services and icons shown on the Chart page:

 HEALTH EMERGENCY	 HARBOUR MASTER	 COAST GUARD	 ENGINE REPAIRS	 FUEL STATION	 WATER	 PROVISIONS	 CAR PARKING	 SEWERAGE PUMP-OU...	 PUBLIC TELEGRAPH	 PUBLIC RADIO	 TRANSPD. SERVICES
 ELECTRICITY	 POLICE	 CUSTOMS... POLICE	 BOAT YARD	 ACCESSOR. ELECTRON...	 ELECTRICAL REPAIRS	 COMMERCIAL FISHING SE...	 OTHER MARIN...	 TOWING SERVICES	 PORT PARTNER	 BAIT/TACKLE SHOP	 OFFICE SERVICE
 SAILMAKER	 FISHING/DI... GEAR,SCU...	 PHARMACY	 SLIPWAY	 BOAT HOIST	 CRANE	 NEWSSTAND	 CHARTER	 LAND BASED VESSEL ST...	 AIRPORT	 HULL REPAIRS	 SPORT ACTIVITY
 CHANDLER	 BOTTLE GAS	 PARKING FOR BO...	 YACHT CLUB	 HOTEL/INN	 RESTAUR...	 BOAT RENTAL	 FLOODLIT BERTHS	 INTERNET POINT	 FIRST AID	 BOUTIQUE	 BAR
 BANK/EXC... OFFICE	 SHOWERS	 LAUNDRE...	 PUBLIC TOILETS	 PUBLIC TELEPHONE	 REFUSE BIN	 WATCHING SERVICE	 DIVERS	 MOORING SERVICE	 PROVISION DELIVERY		

Figure 4.0.0 - Port Services Table

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **PORT SERVICES** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of different Port Services.
4. Move the ShuttlePoint knob to highlight the desired type of service and press **[ENT]**.
5. Another popup window will appear displaying the distance and position of the services closest to your location.
6. Using the ShuttlePoint knob, highlight the desired service and press **[ENT]**. This will show information about the service.
7. Press **[CLR]** to show the actual position of the service on the Chart page.
8. Press **[CLR]** again at any time to return your cursor to your vessel's position.

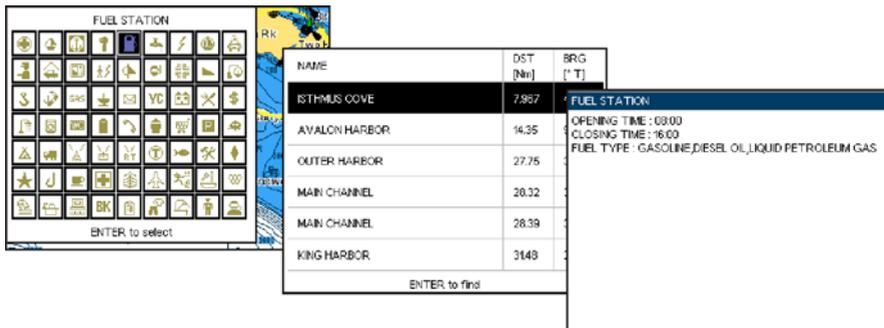


Figure 4.0.0 - Find Port Services

4.0.1 Port

A Port is represented with a  on the Chart page. This feature is used to locate the 20 nearest Ports to the position of your vessel.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **PORT** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Ports.
4. Move the ShuttlePoint knob to highlight the desired Port and press **[ENT]**.
5. Another window will appear displaying the details of the selected Port.
6. Press **[CLR]** to show the actual position of the Port on the Chart page.
7. Press **[CLR]** again at any time to return your cursor to your vessel's position.



Figure 4.0.1 - Find Port

4.0.2 Tide Stations

A Tide Station is represented with a  on the Chart page. This feature is used to locate the 20 nearest Tide Stations to the position of your vessel. Once a Tide Station is selected the Tide Graph can be used to determine Tide height and draught of the Tide based on a user-specified time.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **TIDE STATIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Tide Stations.
4. Move the ShuttlePoint knob to highlight the desired Tide Station and press **[ENT]**.

- Another window will be shown detailing the selected Tide Station information.
- Press **[CLR]** to show the actual position of the Tide Station on the Chart page.
- Press **[CLR]** again at any time to return your cursor to your vessel's position.

NAME	DST [N]	BRG [T]
CATALINA HARBOR	7.006	52
AVALON, SANTA CATALINA ISLAND	14.60	93
AVALON	14.88	92
WILSON COVE, SAN CLEMENTE ISLAND	21.47	172
SANTA BARBARA ISLAND	21.63	290
WILSON COVE	21.82	172
WILSON COVE	21.82	172
CABRILLO BEACH	26.67	38
LOS ANGELES HARBOUR	27.58	39

ENTER to find

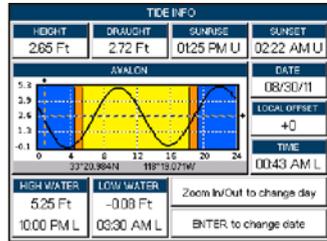


Figure 4.0.2 - Find Tide Stations

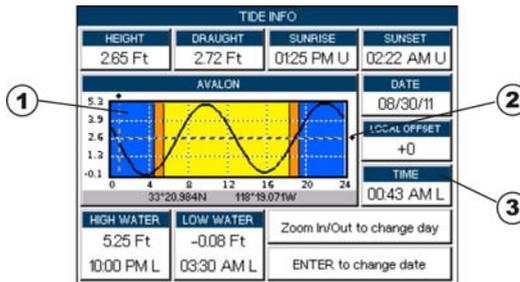


Figure 4.0.2a - Tide Graph page

Refer to the image above. The time **③** displayed corresponds to the location of the cross-hair cursor **②** in the Tide Graph **①**. Moving the ShuttlePoint knob to the left or right changes the time, and moving the ShuttlePoint knob up or down selects the Tide height and Tide draught on the Tide Graph.

NOTE

The Local Offset matches the Time Offset entered in the Time Setup menu (see Par. 3.2)

4.0.3 Wrecks

This feature is used to locate the 20 nearest Wrecks to the position of your vessel. A Wreck is represented with an icon on the chart. See the following table:

ICON	DESCRIPTION
++	non-dangerous wreck
⊕	dangerous wreck
# []	distributed remains of wreck
⊕ <i>Masts</i>	wreck showing mast/masts
✈	wreck showing any portion of hull or superstructure

Figure 4.0.3 - Wreck icons Table

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **WRECKS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Wrecks.
4. Move the ShuttlePoint knob to highlight the desired Wreck and press **[ENT]**.
5. Another window will be shown detailing the Wreck information.
6. Press **[CLR]** to show the actual position of the Wreck on the Chart page.
7. Press **[CLR]** again at any time to return your cursor to your vessel's position.

NAME	DST [Nm]	BRG [° T]
WRECK	6.605	107
WRECK	11.47	22
WRECK	13.46	235
WRECK	14.50	95
WRECK	20.14	176
WRECK	20.89	328
WRECK	21.45	50
WRECK	22.34	52
WRECK	24.15	35

ENTER to find

WRECK
CATEGORY OF WRECK : WRECK (NON-DANGEROUS)
WATER LEVEL : ALWAYS UNDER WATER/SUBMERGED

Figure 4.0.3a - Find Wrecks

4.0.4 Obstructions

This feature is used to locate the 20 nearest Obstructions to the position of your vessel. An Obstruction is represented with an icon on the chart, see the following table:

ICON	 Obstr	 Mast (1/2) Wk							 Obstr
DESCR.	snag / stump	wellhead	diffuser	crib	fish haven	foul area	foul ground	ice boom	ground tackle

Figure 4.0.4 - Obstruction icons Table

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **OBSTRUCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Obstructions.
4. Move the ShuttlePoint knob to highlight the desired Obstruction and press **[ENT]**.
5. Another window will be shown detailing the Obstruction information.
6. Press **[CLR]** to show the actual position of the Obstruction on the Chart page.
7. Press **[CLR]** again at any time to return your cursor to your vessel's position.

NAME	DST [Nm]	BRG [° T]
OBSTRUCTION	5.541	48
OBSTRUCTION	8.479	2
OBSTRUCTION	11.34	260
OBSTRUCTION	12.73	16
OBSTRUCTION	12.76	12
OBSTRUCTION	12.78	14
OBSTRUCTION	13.10	13
OBSTRUCTION	13.81	10
OBSTRUCTION	13.90	15

ENTER to find

OBSTRUCTION
DEPTH RELATIVE TO SURROUNDING AREA : SHOALER THAN SURROUNDING DEPTH AREA
QUALITY OF SOUNDING MEASUREMENT : VALUE REPORTED (NOT CONFIRMED)
DEPTH : 80.0 FEET
WATER LEVEL : ALWAYS UNDER WATER/SUBMERGED
INFORMATION : BUDY
QUALITY OF POSITION : APPROXIMATE

Figure 4.0.4a - Find Obstructions

4.0.5 Lakes Information

A Lake Info is represented with a  on the Chart page. This feature is used to find information on the 20 closest Lakes near the position of your vessel.

NOTE

An optional MAX Lake CARD must be inserted into the GPS Chart Plotter to take advantage Lakes Information. The available MAX Lake CARDS are: NA-M017 USA: North; NA-M018 USA: East; NA-M019 USA: South; NA-M020 USA: West; NA-M029: Alaska; NA-M048: Canada.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **LAKES INFORMATION** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of Outdoor Recreational Area objects.
4. Move the ShuttlePoint knob to highlight the desired object and press **[ENT]**.
5. Another popup window will appear displaying the distance and position of the Lakes closest to your location.
6. Using the ShuttlePoint knob, highlight the desired Lake and press **[ENT]**. This will show information on the Lake.
7. Press **[CLR]** to show the actual position of the Lake on the Chart page.
8. Press **[CLR]** twice to return your cursor to your vessels position.

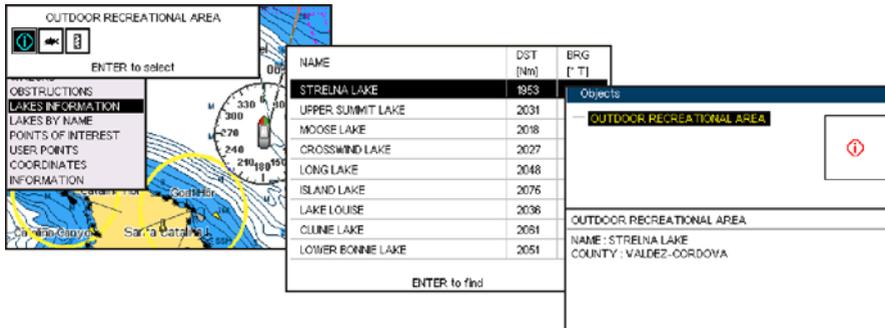


Figure 4.0.5 - Find Lakes Information

4.0.5.0 Quick Info On Lakes

Upon viewing the chart of a lake, you can click on the Lake Info icon to query the available information immediately displayed with many details. For example, see the following picture:

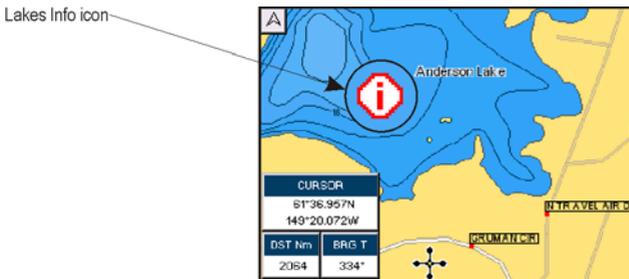


Figure 4.0.5.0 - Example of Lakes info

When the cursor is placed over the icon, the icons of the available services are shown:

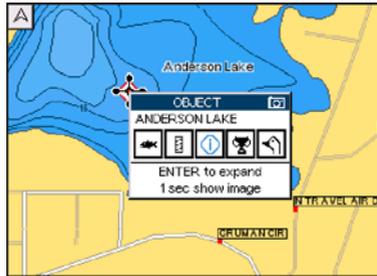


Figure 4.0.5.0a - Quick Info: available services

If you press **[ENT]** all available information about the cartographic point under the cursor will be shown. See the next paragraph.

4.0.5.1 Full Info On Lakes

The following is an example of Full Info on Lakes:

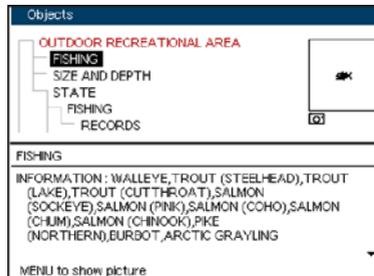


Figure 4.0.5.1 - Example of Full Info page

To see the "Fishing" object press **[MENU]** (when the "Fishing" object is highlighted). On the screen appears:

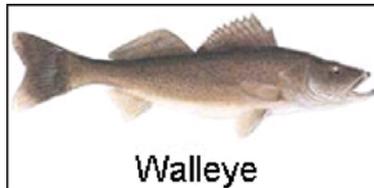


Figure 4.0.5.1a - Example of picture associated to the Fishing object

4.0.6 Lakes By Name

This feature is used to locate Lakes By Name nearest the position of your vessel.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **LAKES BY NAME** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Lakes.

NAME	DST [Nm]	BRG [° T]
ANDERSON LAKE	2062	334
BIG LAKE	2071	334
BYERS LAKE	2123	336
CARPENTER LAKE	2071	334
CHELATNA LAKE	2141	334
CLARENCE LAKE	2074	337
CLUNE LAKE	2058	334
COTTONWOOD LAKE	2051	334
CROSSWIND LAKE	2024	337

MENU to enter Lake name

Figure 4.0.6 - Find Lakes By Name

4. Move the ShuttlePoint knob to highlight the desired Lake. Otherwise press **[MENU]** to enter the desired Lake name. A window will be shown: move the ShuttlePoint knob to highlight the edit of Lake name and press **[ENT]** to accept: another popup window will appear displaying the distance and position of the Lake.
5. Press **[ENT]** to show the actual position of the Lake on the Chart page.
6. Press **[CLR]** twice to return your cursor to your vessel's position.

4.0.7 Points Of Interest

This feature is used to locate Points Of Interest nearest the position of your vessel.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **POINTS OF INTEREST** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A (Category) popup window will be shown with a list of Category types (i.e. attractions, emergency, entertainment).
4. Move the ShuttlePoint knob to highlight the desired Category and press **[ENT]**.
5. A (Type) popup window will be shown with a list of types.
6. Move the ShuttlePoint knob to highlight the desired Type and press **[ENT]**.
7. A popup window will be shown with a list of nearest Points Of Interest that fall into the Category and Type you have selected.
8. Move the ShuttlePoint knob up/down to highlight the desired Point Of Interest and press **[ENT]**.
9. Another window will be shown with detailing the Point Of Interest information.
10. Press **[CLR]** to show the actual position of the Point Of Interest on the Chart page.
11. Press **[CLR]** again at any time to return your cursor to your vessel's position.

NAME	DST [Nm]	BRG [° T]
PORT OF SAN DIEGO HARBOR POLICE	74.47	128
CORONADO POLICE DEPARTMENT	76.83	

POINT OF INTEREST

CATEGORY OF POINT OF INTEREST: POLICE STATION

NAME: PORT OF SAN DIEGO HARBOR POLICE DEPARTMENT

INFORMATION: TEL: 619-726-8070

Figure 4.0.7 - Find Points Of Interest

4.0.8 User Points

This feature is used to search for User Points (Marks and Waypoints you have created and stored) by name quickly and efficiently.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. The (Select Name) popup window will appear. This window will allow you to enter in the name of the User Point you wish to locate.

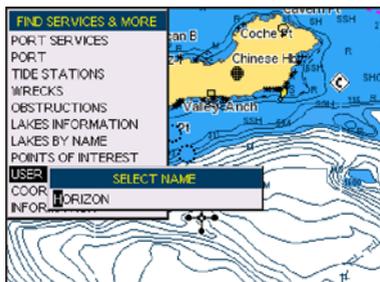


Figure 4.0.8 - Find User Points (Marks and Waypoints)

4. Move the ShuttlePoint knob up/down to change each number or letter and left/right to move to the next or previous position in the name of the Mark.
5. Once the name of the desired Mark reads in the (Select Name) window, press **[ENT]** to show the location the Mark on the Chart page.
6. Press **[CLR]** at any time to return your cursor to your vessel's position.

4.0.9 Coordinates

This feature allows you to enter Coordinates (Latitude/Longitude) and view the entered position on the Chart page.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **COORDINATES** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A (Coordinate) popup window will be shown to allow you to enter in a specified Latitude and Longitude.

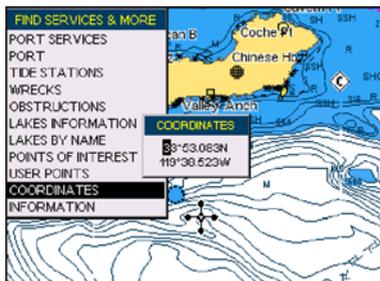


Figure 4.0.9 - Find GPS Coordinates

4. Move the ShuttlePoint knob up/down to change each number or letter and left/right to move to the next or previous position in the Coordinates.

5. Once the Coordinates are entered, press **[ENT]** to show the location the Mark on the Chart page.
6. Press **[CLR]** at any time to return your cursor to your vessel's position.

4.0.10 Information

This feature allows you to obtain information on any position on the Chart page.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **INFORMATION** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A page will be shown with objects information. The upper side of the page contains the Info Tree and the lower side contains the expanded information. While moving the ShuttlePoint knob through the Info Tree, all the relevant information of the selected object is shown on the lower part of the page.
4. Press **[CLR]** again at any time to return your cursor to your vessel's position.

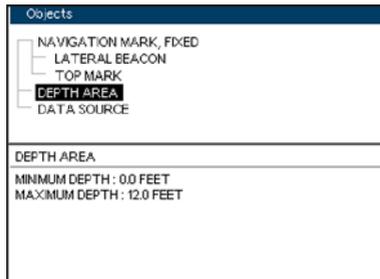


Figure 4.0.10 - Find Information

5. MAX CARTOGRAPHY OVERVIEW

5.0 INSERTING THE OPTIONAL MAX C-CARD

Hold the C-CARD by the long inclined side so that you can see the C-MAP BY JEPPESEN label.

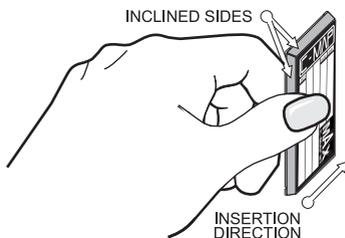


Figure 5.0 - Inserting C-CARD

Open the door, gently push the C-CARD into the slot: push the C-CARD in as far as it will go, then close the door.

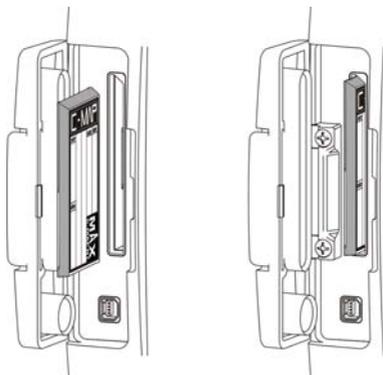


Figure 5.0a - Inserting C-CARD (details)

NOTE

The small connector below the C-CARD is only used by STANDARD HORIZON repair technicians.

Key points are:

Data Features

- **ISO Certification** (*electronic chart production process with quality certification*)
- **Extra Large Coverage** (*all the C-MAP electronic chart detail and a huge coverage without having to change cartridge*)
- **Official data source** (*data based on use of official data sources Hydrographic Offices Release*)

- **Detailed World Background** (*World Wide background chart with details*)
- **Depths & Land Elevations** (*color shading of sea depth and land altitude for improved chart appearance*)
- **Bathymetric & Spot Soundings** (*data base with depth and bathy information for an extraordinary view of the seabed depth*)
- **Detailed Port Plan to information** (*complete port and marina charts with detail*)
- **Search & Find** (*quickly locates chart contents and objects*)
- **Tides Preview** (*allows viewing of current, future and past tide cycles of specific NOAA Tide Stations*)
- **Dynamic Currents** (*current arrows showing speed and direction of current, future and past currents*)
- **Dynamic Nav-Aids** (*selection to enable the Nav-Aids to blink to their specifications and appear on the chart in color*)
- **Port Info** (*searchable data base of service in ports*)
- **Enhanced Port Info & Roads** (*searchable data base of detailed information that include facilities and services in ports and surrounding areas*)
- **Object Info** (*moving cursor over object to show restricted area details and related information*)
- **Quick Info** (*moving cursor over wrecks, shoals, Nav-Aids to show restricted area details and related information and object to show details*)
- **Photos & Diagrams** (*high definition pictures of ports, piers, bridge diagrams and nav-aids*)
- **Multilanguage Support** (*allows the GPS Chart Plotter to show language of your choice in using proper character set for Asian and other countries*)
- **True-Type Font** (*improves text on chart for optimal reading*)

Presentation Features

- **Clear View** (*advanced legibility techniques providing more chart data on the screen*)
- **Clear Info** (*sophisticated "Human Dictionary" to translate Nav-Aid abbreviations found on paper charts*)
- **Flexi-Zoom** (*increased Under and Over Zoom between chart levels, resulting in optimal scale display for any situation*)
- **Perspective View** (*"Real World" perspective view of the chart, updated real-time during navigation*)
- **Enhanced Mixing Levels** (*seamless data presentation*)
- **Off-line redraw** (*cartography level transition without image construction*)

Cartographic Data related Features

- **Grounding Alarm** (*the Grounding Alarm is a user defined area in front of your vessel to alert you while navigating of possible obstacles on the chart*)
- **Safety Status Bar** (*a status bar with six boxes to show the status of certain functions. Any warning or alarm condition is identified by the red color to indicate possible risk*)
- **Safety Route Check** (*sophisticated function that checks for dangerous objects along your navigation route*)

6. MAP FUNCTIONS

6.0 MAX FUNCTIONS MENU

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right. The MAX Functions menu appears on the screen:

MAX FUNCTIONS	
ZOOM TYPE	Standard
ICONS SIZE	Standard
PLACE NAMES SIZE	Standard
PERSPECTIVE VIEW	Off
DYNAMIC NAV-AIDS	On
SAFETY STATUS BAR	Off
SATELLITE IMAGER Y	On
CURRENTS PREDICTION	
CHART LANGUAGE	

Figure 6.0 - Max Functions Menu

The available Max Functions menu is described in the following.

6.0.0 Zoom Type

Zoom Type refers to the chart scale selection. It has two options: Standard (default) or Flexi-Zoom. When Zoom Type is set to Flexi-Zoom, a short **[ZOOM IN]/[ZOOM OUT]** push causes a change of chart level, while a long **[ZOOM IN]/[ZOOM OUT]** push (press and hold) causes an expansion or compression of the chart image, without a chart level change.

CHART: US,NOS,GRAPH,11472H
SCALE: 1:40000



CHART: US,NOS,GRAPH,11472H
SCALE: 1:40000



CHART: US,NOS,GRAPH,11474
SCALE: 1:80000



Figure 6.0.0 - Zoom Type

Note that in the top of the previous picture the chart scale remains the same but it is graphically compressed.

By pressing **[ZOOM IN]/[ZOOM OUT]** a popup window is displayed on a corner of the chart screen. The window shows the current zoom factor: Normal is the original chart level (1:1 scale), Over-Zoom x2, x4, x16, x32, Under-Zoom x1/2, x1/4.

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **ZOOM TYPE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **STANDARD** or **FLEXI-ZOOM**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left a few times.

6.0.1 Icons Size

On MAX charts it is possible to set the size of all icons drawn on the charts, selecting between Standard (default) and Large size.

ICONS SIZE standard



ICONS SIZE large



Figure 6.0.1 - Icons Size

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **ICONS SIZE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **STANDARD** or **LARGE**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left a few times.

6.0.2 Place Names Size

On MAX charts it is possible to set the size of all names drawn on the charts, selecting between Standard (default), Medium and Large size.

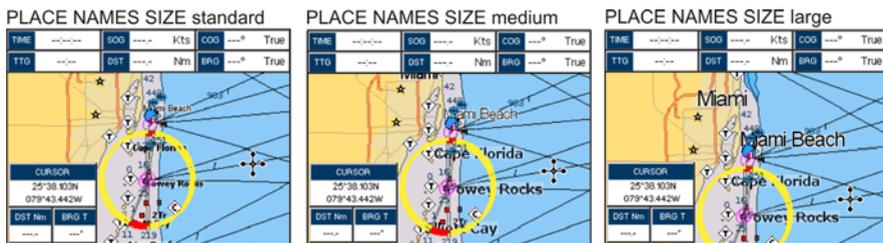


Figure 6.0.2 - Place Names Size

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **PLACE NAMES SIZE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows three selections, **STANDARD**, **MEDIUM** or **LARGE**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left a few times.

6.0.3 Perspective View

The Chart page may be show in a perspective (fly over) or normal mode during navigation. Perspective view of the chart is a type of “bird’s eye” view of a chart, and give you a more realistic perspective of the chart. As the upper side of the chart is more compressed than the lower side, a wider chart area is visible, so it allows showing more chart information immediately ahead and around the cursor.

Perspective View ON



Perspective View OFF



Figure 6.0.3 - Perspective View

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **PERSPECTIVE VIEW** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **ON** or **OFF**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the Chart page is shown.

6.0.4 Dynamic Nav-Aids

This function allows the blinking of the Nav-Aids to be turned On or Off. The blink period and color of each Nav-aid is read from the Nav-Aid attributes stored on the optional C-MAP BY JEPPESEN C-CARD. When the ship is inside the Nav-Aid nominal range, the light of the Nav-Aid will start blinking. When Dynamic Nav-Aids option is set to On, when the flashing light is Off, or when fix position is out of the sector, the light color is displayed by using a faint light color.

To activate this function follow the procedure below:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **DYNAMIC NAV-AIDS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **ON** or **OFF**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the chart page is shown.

6.0.5 Safety Status Bar (DSI - Data Safety Indicator)

When the Safety Status Bar is enabled, a status bar with six boxes show the status of certain functions. Any warning or alarm condition is identified by the red color to indicate possible risk.



- 1 **Normal:** when the chart is displayed at normal scale.
U. Zoom: red when the chart is under-zoomed out more than twice normal scale, gray otherwise.
O. Zoom: red when the chart is over-zoomed in more than twice normal scale, gray otherwise.
No Chart: red when the chart is zoomed in more than twice normal scale, gray otherwise.

- 2 Red when a more detailed chart is available under the cursor position.

- 3 Red when at least one of the following objects or layers is turned off (by the user) Depths/soundings; Wrecks/obstructions; Tracks/routes; Attention Areas; Nav-Aids.

- 4 Displays red when clearing overlapping objects.

- 5 Red when "Guardian Technology" detects one of the following objects: Land, Intertidal, Depth Area, Rocks, Obstructions, Shoreline Constructions, Fishing Facility, Wrecks, Dragged area, Diffusion area, Mooring facilities, Pingos and Production installations.

- 6 Red when "Guardian Technology" detects cautionary or restricted area.

Safety Status Bar



Figure 6.0.5 - Safety Status Bar

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.

2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SAFETY STATUS BAR** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows the following selections:
 - ON**: The Safety Status Bar is shown
 - OFF**: The Safety Status Bar is not shown

ICON: In this mode the Safety Status Bar is not shown, rather a Warning Icon  will be shown in the top right corner on the chart page when an alarm condition is met.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to press the ShuttlePoint knob to the left a few times.

6.0.6 Satellite Imagery

This function allows to overlay the Satellite image for background chart. When it is set On, the Palette is set to Normal to display the proper colors.

NOTE

The satellite image is only shown on 100Nm, 50Nm and 20Nm scales.

To activate this function follow the procedure below:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SATELLITE IMAGERY** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **ON** or **OFF**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the Chart page is shown.

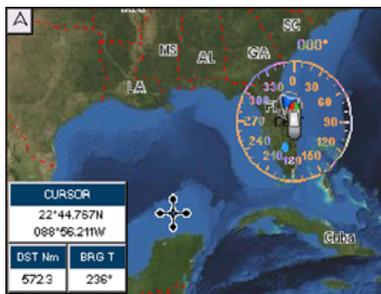


Figure 6.0.6 - Example of Satellite Imagery

6.0.7 Currents Prediction

The worldwide database with Tidal stream information is available with MAX C-CARDS. When data/time is available, Tidal stream arrows are shown on the charts, indicating the direction and strength of the Tide:

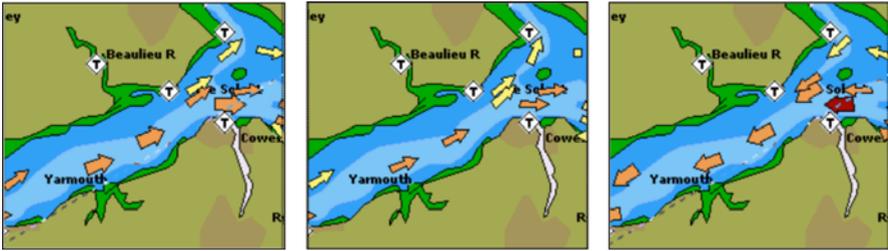


Figure 6.0.7 - Tidal stream arrows

If no data/time is available from the GPS or the GPS Chart Plotter is not in Simulation mode, the icon on the chart is generic one. The color of the arrow denotes the strength of the current as follows:

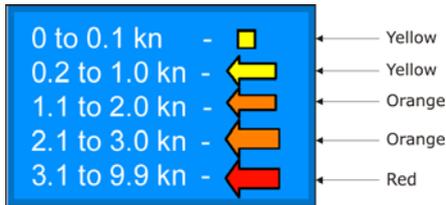


Figure 6.0.7a - Tidal stream arrows table

When the GPS Chart Plotter receives a valid position fix, the Tide icons are shown on the charts on the basis of the current date and time: the screen displays and changes arrows as date/time changes.

It is possible to see the variation of the Tidal arrows on the selected area at any given time. To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **CURRENTS PREDICTION** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. A window is shown on the low-left side of the chart. Press **[ENT]** to set the date and time manually, and **[GOTO]/[MENU]** to increase/decrease time; press **[CLR]** to exit.

6.0.8 Chart Language

The CP190i may be customized to show the local language of the chart.

To select the Chart Language you want:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **CHART LANGUAGE** and press **[ENT]** or move the ShuttlePoint knob to the right. A new popup window will appear on the screen. The available functions are described in the following table.

Language	: Allows setting the language to display chart information. The language is chosen among the list of languages available on the cartographic data (data cartridge or embedded charts).
Mode	: Defines how objects are translated. Selections are:

- Off : Enables the language chosen in the Language menu above. If the selected language is not present on the objects information, English is used.
- English: Always uses English.
- Local : Uses the Local language present on C-MAP BY JEPPESEN C-CARD. If no Local language is available, English is used.

4. After the selection is made, press **[CLR]** repeatedly or move the ShuttlePoint knob to the left repeatedly until the Chart page is shown.

NOTE

- a. When the Chart Language is changed, the following settings are automatically selected: MODE is set to Off and Chart Language is set to your selection.
- b. If the C-CARD is removed or changed, the Chart Language should be confirmed and changed if necessary.

6.0.9 Pictures or Diagrams

Using optional C-MAP BY JEPPESEN MAX data cards allows you to show pictures or diagrams on the CP190i display. These *Pictures* are typically used to facilitate the identification of cartographic objects or places around the chart: they can be the landscape layout nearby a harbour, the shape of a bridge or of a buoy etc. On some objects, such as bridges, the image associated can represent the *Diagram* representing the shape of the objects and the various characteristics (length, height, type of bridge etc.).

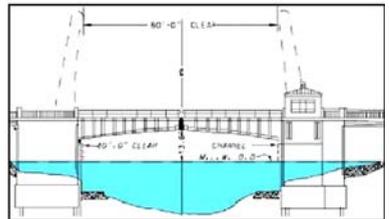


Figure 6.0.9 - Pictures and Diagrams

How to Show Pictures or Diagrams of an Object

They are shown on the Chart page with the camera icon , see the figure below:

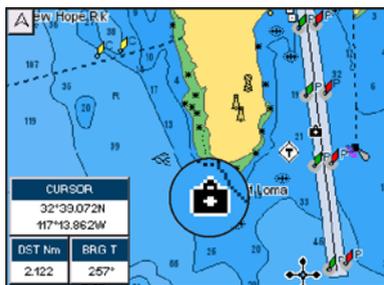


Figure 6.0.9a - Example of camera icon

Move the cursor over the camera icon. You are get the Quick Info on the object and there is the camera icon on the top bar of the window:

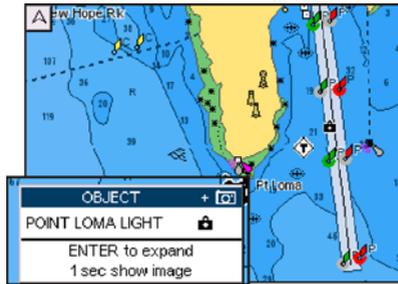


Figure 6.0.9b - Example of Quick Info on camera icon

Press **[ENT]** for 1 second to display the image on the screen:




Figure 6.0.9c - Example of displayed image

Otherwise press **[ENT]** to open the Full Info on the object. Note that on the Full Info there is the small camera icon on a corner of the square containing the object icon. To see the picture press **[MENU]** when the object with a picture is highlighted.

When the picture is shown, it is possible to fit it to screen by pressing **[ENT]**, to change the contrast by pressing **[ZOOM IN]** or **[ZOOM OUT]** and to display the next picture associated, if any, by moving the ShuttlePoint knob left or right.

6.0.10 Enhanced Port Info

Optional C-MAP BY JEPPESEN MAX C-CARDS include additional Port Services that were not present before. Additional attributes of Port Areas and Port Marinas have been included as Location, Country, Region, State, Harbour master telephone number etc., see the following figure.

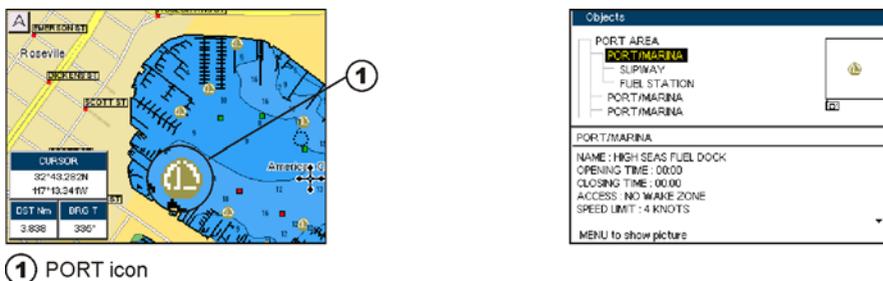

① PORT icon

Figure 6.0.10 - Example of enhanced Port Info

7. CREATING MARKS

A User Point is an object that you can place on the charts to mark a specific point. The GPS Chart Plotter features two types of User Points: Marks and Waypoints.

- Mark can be a stand alone position or be linked to a Route. A Mark is place on the Chart page using the **[MARK]** key or by entering in information in the Marks/Waypoints List page and selecting **NEW MARK**..
- Waypoints are always linked to a Route. Are placed on the Chart page using the **[ROUTE]** key.

NOTE

The difference between a Mark and a Waypoint is

- a. when a Route is created using Waypoints and the Route is deleted the Waypoints are also deleted.
 - b. if a Route is created using Marks and the Route is deleted the Marks remain.
-

7.0 CREATING A NEW MARK USING THE CHART PAGE

1. Move the ShuttlePoint knob to the desired or approx. Lat/Lon and press **[MARK]**.
2. You will notice a Mark is placed under the location of the cursor and a popup window is shown with the exact Lat/Lon of the Mark.
3. If the position is incorrect press **[ENT]**, select **EDIT** using the ShuttlePoint knob and press **[ENT]**: it will allow you to change the position, Mark name and icon type. Refer to Par. 7.1 for details.

- ① Mark placed under Cursor
- ② Lat/Lon of Mark, DST/BRG from vessel location
- ③ Press **[ENT]** to delete, to move, to edit a Mark or to show the Marks/Waypoint List (Directory)
- ④ Vessel location



Figure 7.0 - Mark creation

NOTE

After entering in all the Marks it is a good practice to back up the points to an User C-CARD. Refer to Chapter 11.

7.1 EDITING A MARK

If a Mark has previously been created and you wish to Edit it, move Cursor over the top of the Mark.

1. After a Mark is created press **[ENT]**, move the ShuttlePoint knob to highlight **EDIT** and press **[ENT]**.



Figure 7.1 - Mark editing

- The Mark Icon is selected, press **[ENT]**. A popup window appears:



Figure 7.1a - Mark Icons

- Move the ShuttlePoint knob to select the desired Mark Icon, when finished press **[ENT]**.
- Move the ShuttlePoint knob to the right to select the Mark Name. Press **[ENT]** and the first digit in the name will be highlighted.
- Move the ShuttlePoint knob up or down to select the first character.
- Move the ShuttlePoint knob to the right to select the next character.
- Repeat steps 4 and 5 until the Mark name is shown. Press **[ENT]**.
- Move the ShuttlePoint knob to the right to select the Lat/Lon and press **[ENT]**.
- Move the ShuttlePoint knob up or down to select the first character.
- Move the ShuttlePoint knob to the right to select the next character.
- Repeat steps 9 and 10 until the desired position is shown. Press **[ENT]** and **[CLR]** to store the Mark.

7.1.0 Deleting a Mark or Waypoint

- Move the ShuttlePoint knob over the Mark or Waypoint to delete.
- Press **[ENT]**, move the ShuttlePoint knob to highlight **DELETE** and press **[ENT]**. A popup window will be shown to confirm deleting the point.
- Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**.

7.1.1 Moving a Mark or Waypoint

- Move the ShuttlePoint knob over the Mark or Waypoint you want to move.
- Press **[ENT]**, move the ShuttlePoint knob to highlight **MOVE** and press **[ENT]**.
- Use the ShuttlePoint knob to move the cursor. A dotted line, connecting the previous Waypoint position to the new position, is shown:



Figure 7.1.1 - Moving Mark or Waypoint (1)



4. Press **[ENT]** (**[CLR]** to abort the move), the Waypoint appears in the new position.



Figure 7.1.1a - Moving Mark or Waypoint (2)

7.2 MARKS/WAYPOINTS LIST

The **MARKS/WPTS** List shows all the Marks and Waypoints that have been stored into the GPS Chart Plotter. This page also allows you to:

ICON	Sorts by icon type. Selections are: <ol style="list-style-type: none"> SELECT : only User Points with the selected icon are shown ALL : all User Points are shown
FIND	Searches through the Marks or Waypoints to find a point by name using the ShuttlePoint knob.
LOCATE	Shows the position of a Mark or Waypoint on the Chart page.
EDIT	Edits a previous stored Mark or Waypoint.
SORT	Sorts the name of User Points. Selections are: <ol style="list-style-type: none"> A-Z ASCENDING : sorts the name of the Mark or Waypoint in ascending order Z-A DESCENDING : sorts the name of the Mark or Waypoint in descending order
NEW MARK	Enters in Marks, editing icon type and position.
MODE	Controls how the Marks or Waypoints are shown on the Chart page. Selections are: <ol style="list-style-type: none"> SHOW : icon and name are shown ICON : only icon (no name) is shown HIDE : Mark or Waypoint is hidden SHOW ALL : all Marks or Waypoints are shown ICON ALL : all icons are shown without name HIDE ALL : all Marks or Waypoints are hidden
DELETE	Opens a window with two options: <ol style="list-style-type: none"> DELETE SELECTED : deletes the selected point DELETE ALL : deletes all stored points
SEND*	Sends the stored points to a external device (PC) capable of listening to NMEA WPL and RTE sentences.
RECEIVE*	Receives points from an external device (PC) that is capable of sending NMEA WPL sentence.

*NOTE**

The SEND and RECEIVE functions are used to receive or transmit User Points (Marks and Waypoints) to and from a Personal Computer (see also Par. 2.10).

MARKS/WAYPOINTS					
SYM	NAME	TYPE	LATITUDE LONGITUDE	DST[Nm] BRG[T]	MODE
◆	HORIZON	MARK	33°48.328N 118°02.215W	47.57 89°	SHOWN
◆	MRK002	MARK	33°48.328N 118°58.509W	1.283 37°	SHOWN
✕	MRK004	MARK	32°57.618N 119°04.178W	49.84 185°	SHOWN
⊙	WPT005	WPT	32°57.518N 119°50.005W	65.21 221°	SHOWN
⊙	WPT006	WPT	33°43.788N 120°13.525W	70.35 242°	SHOWN
ICON FIND LOCATE EDIT NEW MARK					
MODE DELETE SORT SEND RECEIVE					

Figure 7.2 - Example of Marks/Waypoints List

7.3 CREATING A NEW MARK WITH THE USER POINTS LIST

NOTE

This function is very useful if you have a list of Marks that you want to enter into the GPS Chart Plotter.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MARKS/WPTS** and press **[ENT]**.
3. The MARKS/WAYPOINTS List page will be shown (see Figure 7.2).
4. To create a New Mark, move the ShuttlePoint knob to the right to highlight **NEW MARK** and press **[ENT]**. A row is added for the new Mark.
5. Move the ShuttlePoint knob to highlight **EDIT** and press **[ENT]**; then press **[ENT]** again to display a popup icons window and change the icon.
6. Move the ShuttlePoint knob to highlight the desired Icon and press **[ENT]**.
7. Move the ShuttlePoint knob to the right to select the Mark name. Press **[ENT]** and the first digit in the name will be highlighted.
8. Move the ShuttlePoint knob up or down to select the first character.
9. Move the ShuttlePoint knob to the right to select the next character.
10. Repeat steps 8 and 9 until the Mark name is shown. Press **[ENT]**.
11. Move the ShuttlePoint knob to the right to select the Lat/Lon and press **[ENT]**.
12. Move the ShuttlePoint knob up or down to select the first character.
13. Move the ShuttlePoint knob to the right to select the next character.
14. Repeat steps 12 and 13 until the desired position is shown. Press **[ENT]**.
15. Move the ShuttlePoint knob to the right to select the Mode field and press **[ENT]**.
16. Move the ShuttlePoint knob up or down to select the mode to show the Mark. You can choose among **SHOW** to show on the chart the name and icon of Mark, **ICON** to show on the chart only the icon of Mark or **HIDE** to hide on the Chart page the created Mark. Press **[ENT]**.
17. Press **[CLR]** to save the created Mark.
18. Press **[CLR]** again and the new Mark appears on the Chart page.

WARNING

After entering in all the Marks it is a good practice to backup the points to a User C-CARD. Refer to Chapter 11.

7.4 GOTO CURSOR, ROUTE AND MARK

The CP190i can easily be set to start navigating to the cursor on the Chart page, a saved Mark or a Route that was created.

7.4.0 Goto Cursor

1. Move the ShuttlePoint knob to the exact position you want to navigate to.
2. Press **[GOTO]** and a GOTO popup window will be shown.



Figure 7.4.0 - GOTO menu (1)

3. Move the ShuttlePoint knob to highlight **CURSOR** and press **[ENT]**.



Figure 7.4.0a - GOTO menu (2)

4. The GPS Chart Plotter is now navigating from your current position to the location selected at step 1. A bearing line between the vessels location and the destination point is shown. A popup window shows the Distance (DST) and Bearing (BRG) from the vessels location to the destination point.



Figure 7.4.0b - GOTO menu (3)

5. The GPS Chart Plotter is in Cursor Mode, to switch to Home Mode press **[CLR]** so the vessel will stay in the center of the page.
6. To stop navigation, press **[GOTO]** and a WARNING window is shown. Move the ShuttlePoint knob to highlight **STOP** and press **[ENT]**.



Figure 7.4.0c - Warning window

7.4.1 Goto Route

When a Route is shown on the Chart page, move the cursor over the designed Waypoint and press **[GOTO]**. For more information about Routes refer to Chapter 9.

7.4.2 Goto Mark

1. Move the ShuttlePoint knob to an open position (no buoy, warning etc. under the cursor) on the Chart page.
2. Press **[GOTO]** to show the GOTO popup window.
3. Move the ShuttlePoint knob to highlight **MARK** and press **[ENT]** to show the MARKS/WAYPOINTS List.
4. Move the ShuttlePoint Knob to the highlight the desired Mark or Waypoint and press **[GOTO]**.
5. You will notice a circle is drawn around the Icon Symbol. This means the GPS Chart Plotter is now navigating to the point.
6. Press **[CLR]** to switch to the Chart page or Highway page to start navigating to the point.

7.4.3 Stop Navigation to Destination

When the last navigation point is reached (last point of navigated route or single navigation point), navigation stops. You can decide whether the navigation is automatically stopped or if the user confirmation is required (see Par. 13.1).

If confirmation is required, when the Destination is reached a WARNING window is shown. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]** to stop the navigation:



Figure 7.4.3 - Warning window

8. MAN OVER BOARD (MOB) FUNCTION

During navigation, the “MOB” feature provides a one-touch method of storing a location, such as a point where a crew member fell overboard. In this mode, the CP190i places a MOB point on the Chart page and all the navigation data shown is related to navigating back to this point, allowing you to retrace your path to the MOB point efficiently.

8.0 PLACING A MOB POINT

1. On the Chart page, press **[MOB]** to start navigating back to the point.
2. You will notice a MOB Mark will be on the Chart page and all navigation is referring back to this point.
3. To stop navigating to the MOB point, press **[GOTO]**, select **STOP** and press **[ENT]**.



Figure 8.0 - MOB point

8.1 DELETING A MOB POINT

1. Move the ShuttlePoint knob until the cursor is over the top of the MOB icon.
2. Press **[ENT]**, move the ShuttlePoint knob to highlight **DELETE** and press **[ENT]**: a popup window will be shown to confirm deleting the MOB point.
3. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**.



Figure 8.1 - Deleting MOB point

9. ROUTES

The CP190i has the capability to store 50 Routes with 100 Waypoints or Marks in each Route. A Route can consist of Waypoints or Marks. The difference is when a Route is made using Waypoints and the Route is deleted the Waypoints are also deleted. However if a Route is made of Marks and the Route is deleted the Marks stay in memory.

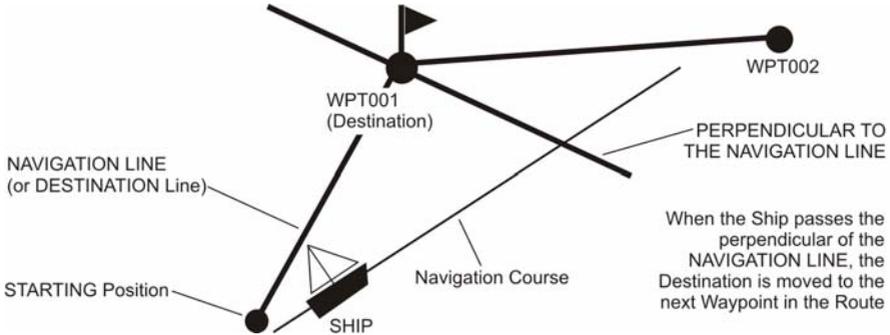


Figure 9 - Example to show how the plotter switches from one Waypoint to another

9.0 CREATING A ROUTE USING WAYPOINTS

1. On the Chart page move the ShuttlePoint knob to the Lat/Lon of the Starting Waypoint in the Route.
2. Press **[ROUTE]**, you will notice the Starting Waypoint will be placed under the cursor.
3. Move the ShuttlePoint knob to the second Lat/Lon of the next leg in the Route.
4. Press **[ROUTE]**. You will notice another Waypoint is shown under the cursor and a line joins the Starting Waypoint to the Second Waypoint.

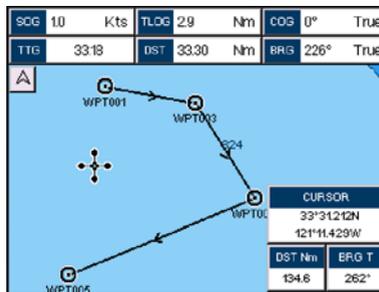


Figure 9.0 - Creating a Route using Waypoints

5. Repeat steps 3 and 4 until all Waypoints are entered into the Route.

NOTE

At this point the Route is saved as ROUTE01. If you would like to save the Route under a specific name follow the next steps.

9.1 CHANGING THE NAME OF A ROUTE

To name the Route:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **EDIT** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **NAME** and press **[ENT]**. A popup window will be shown.
5. Move the ShuttlePoint knob up/down to change the characters and left/right to select a different character in the Route's Name.

EDIT ROUTE						
ROUTE : 1			SPEED : 10.0 Kts			
NAME : ROUTE01			FUEL : 10.0 /h			
WAYPOINT	LATITUDE LONGITUDE	BRG T	LDST Nm	TDST Nm	TIME	FUEL
WPT005	23°11.900N 110°32.815W					
WPT006	23°16.025N 110°36.218W				000:24	4.05
WPT007	110°31.413W 23°25.760N	033°	2.855	6.309	000:41	6.30
WPT008	110°31.413W 23°36.218N	000°	7.347	14.26	001:25	14.2
WPT009	110°25.408W 23°36.218N	028°	11.82	26.08	002:36	26.0

SELECT	NAME	CLCLR	INVERT
CLEAR	SPEED	FUEL	

Figure 9.1 - Edit Route (Route Report)

6. When finished press **[ENT]** to save.
7. Press **[CLR]** to show the Chart page.

9.2 CREATING AN OLYMPIC ROUTE

This feature allows the starting point in a Route to be saved as the final destination point.

1. On the Chart page move the ShuttlePoint knob to the Lat/Lon of the Starting Waypoint in the Route.
2. Press **[ROUTE]**, the Starting Waypoint will be placed under the cursor.
3. Move the ShuttlePoint knob to the second Lat/Lon of the next leg in the Route.
4. Press **[ROUTE]**. Another Waypoint is shown under the cursor and a line joins the Starting Waypoint to the Second Waypoint.
5. Repeat steps 3 and 4 until all Waypoints are entered into the Route.

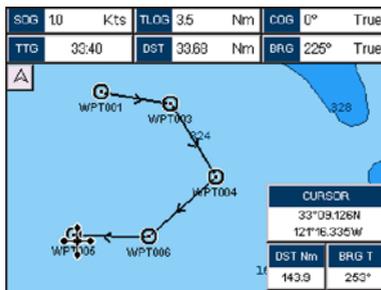


Figure 9.2 - Olympic Route creation (1)

- Then move the ShuttlePoint knob to the last Waypoint and press **[ENT]**.
- Move the ShuttlePoint knob to highlight **OLYMPIC** and press **[ENT]**. A line joins the Starting Waypoint and the last Waypoint.

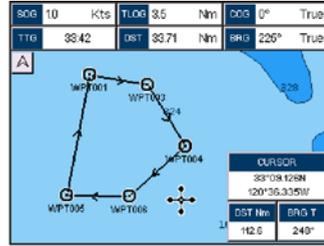


Figure 9.2a - Olympic Route creation (2)

9.3 MAKING ADDITIONAL ROUTES

To create another Route the GPS Chart Plotter must be told that you want to create a second Route.

- Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
- Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
- Move the ShuttlePoint knob to highlight **SELECT** and press **[ENT]** or move the ShuttlePoint knob to the right.
- Move the ShuttlePoint knob to an open Route number example Route 2.
- Press **[ENT]** or move the ShuttlePoint knob to the right.
- Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.
- To create the new Route, follow the steps in Creating a Route using Waypoints or Marks sections.

9.4 CREATING A ROUTE USING MARKS ON THE CHART PAGE

To create a Route containing Marks you first must create the Marks and show them on the Chart page.

- Move the ShuttlePoint knob over the top of a Mark that you wish to be the starting point in the Route and press **[ROUTE]**.
- Next move the ShuttlePoint knob until the cursor is over the Mark that you want to be the next leg in the Route.
- Press **[ROUTE]**. You will notice a bearing line joins the first and second Mark which means these Marks are selected into the Route.
- Repeat steps 3 and 4 until all Marks are entered into the Route.

NOTE

At this point the Route is saved as ROUTE01. If you would like to save the Route under a specific name follow the remaining steps.

- To name the Route press **[MENU]**. Move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
- Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
- Move the ShuttlePoint to highlight **EDIT ROUTE** and press **[ENT]** or move the ShuttlePoint knob to the right.
- Move the ShuttlePoint knob to highlight **NAME** and press **[ENT]** or move the Shuttle-

- Point knob to the right. A popup window will be shown.
9. Move the ShuttlePoint knob up/down to change the characters and left/right to select a different character in the Routes Name.
 10. When finished press **[ENT]** to save.
 11. Press **[CLR]** to show the Chart page is shown.

9.5 INSERTING A WAYPOINT INTO A ROUTE

Place the cursor on the navigation line between two Waypoints and press **[ROUTE]**. The line between the two Waypoints is turned into a dotted line, see the following picture.

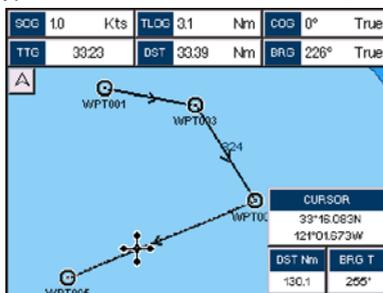


Figure 9.5 - Inserting Waypoint procedure (1)

Move the ShuttlePoint knob to the desired location for the new Waypoint: the line will “rubber-band”, drawing a dotted line between the previous Waypoint and the cursor, and another dotted line between the cursor and the next Waypoint (see the left side of the above picture). Once you have positioned the cursor at the location you want, press **[ENT]** (see the right side of the above picture).



Figure 9.5a - Inserting Waypoint procedure (2)

9.6 GOTO A ROUTE

By having created some Routes, you can choose one of them to place a GOTO on.

9.6.0 Using [GOTO] to Select Route

1. Move the ShuttlePoint knob to an open position (no buoy, warning etc. under the cursor) on the Chart page.
2. Press **[GOTO]** to show the GOTO popup window.
3. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.

4. The SELECT ROUTE popup window will be shown.



Figure 9.6.0 - GOTO ROUTE procedure (1)

5. Move the ShuttlePoint knob to the highlight the desired Route and press **[ENT]**.
6. On the Chart page a circle with a flag is shown on the first leg of the Route and a navigation line is shown, indicating the GPS Chart Plotter is navigating to the first Waypoint in the Route.



Figure 9.6.0a - GOTO ROUTE procedure (2)

9.6.1 Using the ShuttlePoint knob

1. On the Chart page move the ShuttlePoint knob until the cursor reaches the starting point of the Route.
2. Press **[GOTO]** to start following the Route.
3. Press **[CLR]** twice to revert to Home Mode.

9.7 DELETING A ROUTE

To delete a Route follow the procedure below:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **DELETE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. A Warning message appears to confirm. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**. The Route has been deleted.

WARNING

An active Route (one that you are navigating to) cannot be deleted until you stop navigating to the Route.

9.8 OTHER SETTINGS IN ROUTE MENU

You will notice the **ROUTE** menu has other selections.

SELECT	Choose an available Route to create or choose a stored Route to show and follow on the Chart page.
REVERSE	Reverses the Route, when chosen Starting point is at the end of the Route.
COLOR	Allows changing the color of the navigation lines between each leg in the Route.
EDIT	The Edit Route (Route Report) menu is useful to show details of the Waypoints contained within the Route. This menu also allows you to enter in your average speed and fuel consumption and calculate the approximate fuel used when following the Route.
SEND	Sends the stored points to an external device (PC) capable of listening to NMEA RTE sentence.
RECEIVE	Receive the points from an external device (PC) capable of sending NMEA RTE sentence.
THICKNESS	Selection that allows the Route line to be easily seen; default selection is Thick.

9.8.0 Route Check

The Route Check function is used after you have created a Route to ensure you and your vessel will not have problems while navigating. This is done by the CP190i by reviewing the Route and looking for the following hazards that may effect safe navigation.

- Land Areas
- Shallow Water
- Intertidal Areas (*areas emerged at low tide*)
- Rocks
- Wrecks
- Obstructions
- Shoreline Constructions
- Fishing Facility
- Dredged Areas
- Diffusers (*submarine pipeline*)
- Mooring/Warping Facility
- Production Installation (*an installation for the exploitation of natural resources*)
- Pingos (*small conical hills having a large central core of ice formed from the encroachment of permafrost and the resulting hydrostatic pressure*)
- No Data Available (*no adequate data coverage*)

If any of these alarm conditions is detected, the function returns the list of dangerous objects and the relative dangerous Route leg, that is drawn with a different color.

- Route legs which were classified as dangerous are displayed in RED. It means that there is at least one dangerous object in the vicinity of this leg and it has been found.
- Route legs which were classified as safe are displayed in GREEN. It means that the data was checked on detailed chart levels and no problems were found for all segments of the leg.
- Route legs for which there was not sufficient data to be checked are displayed in YELLOW. It means that no problems were found but the data was not sufficient or not available at all to classify such a leg as safe.



Figure 9.8.0 - Example of dangerous objects found on the chart

To activate this function:

AUTOMATIC CHECK	Turns the Route Check feature On or Off. Turn the Automatic Route Check on after you have created a new Route, or if you inserted a new Waypoint, deleted, moved or edited any Waypoint in a saved Route to confirm the Route can be safely navigated.
ROUTE WIDTH	This selection allows you to select the width from the left and right of the Route leg where the GPS Chart Plotter will check to confirm navigation threats. See the picture below. The default for this selection is 0.04Nm.
DEPTH LIMIT	This selection allows you to select the water depth in the Route width area so the GPS Chart Plotter can check and confirm underwater threats. It checks if some objects with the depth attribute (like Shallow Water, Dredged Areas, Diffusers, Obstructions, Pingos, Production Installation and Wrecks) are above this depth level. Only if the depth attribute is above the depth limit are they found and considered as dangerous. See the picture below. The default setting is 10ft.
ACCURACY	Defines a segment length into which a leg of the Route is divided in order to execute the search for dangerous objects with better accuracy. When accuracy is maximal, a segment length is the shortest. When accuracy is minimal, a segment length is the longest. Selects among Minimum, Low, Medium, High and Maximum. See the picture below. The default setting is Medium.
ROUTE CHECK REPORT	Shows the list of the dangerous objects found on the charts crossed by the Route.

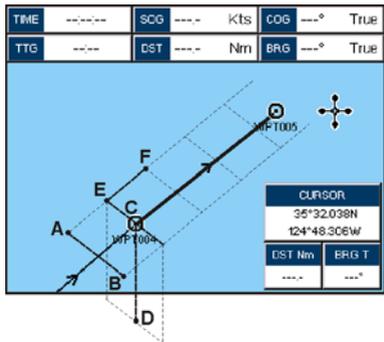


Figure 9.8.0a - Route Check parameters

NOTE

Although the functionality is called Route Check, it can also be activated when the navigation is set to a single point (like DSC, MOB, Mark). In the case of checking a single point towards which the navigation is started, the leg for which the Route Check is executed is defined by the current position (the leg's starting point) and the destination point (the leg's ending point).

10. TRACKS

The CP190i has the capability to store 20 individual Tracks and record up to 10000 Track Points.

Before using the Track function you will need to setup the Track function that suits your boat. The Track function records your tracks your vessels location as it moves through the water. The Track function can be setup to lay down a Track for a predetermined time or distance interval. If you have a fast moving boat you may want to setup the CP190i to record a Track point every 0.5Nm or if you have a sail boat you may want to setup to lay down a Track point once every 1 minute.

NOTE

Please note the Track point memory capacity is 10,000 points. This means for a long journey you may have to adjust the time or distance to be able to track your journey. It should be noted when the 10,000 Track points are used up, the first Track point layed down will be deleted when a new point is placed on the chart.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **TRACK** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **STEP UNIT** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **Dist** or **Time** and press **[ENT]** or move the ShuttlePoint knob to the right.



TRACK	
TRACKING	On
ACTIVE TRACK	1
VISIBLE	On
LINE COLOR	Dist
DELETE	Time
STEP UNIT	Dist
DISTANCE	0.1 Nm
TIME	5 min

Figure 10 - Distance Units and Time Units

5. Move the ShuttlePoint knob to highlight **DISTANCE** or **TIME** step interval and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Move the ShuttlePoint knob up/down to the desired step value and press **[ENT]** or move the ShuttlePoint knob to the right.
7. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

10.0 TRACKING

When using the tracking feature you will notice every time a Track Point is layed down on the Chart page a small filled in circle is shown on the Track line. If you move the cursor over the top of the circle a popup window will be shown with the Time, Water Temperature, Speed and Course Over Ground (COG). This is very useful if you are fishing and want to review the conditions where the fish were being caught.

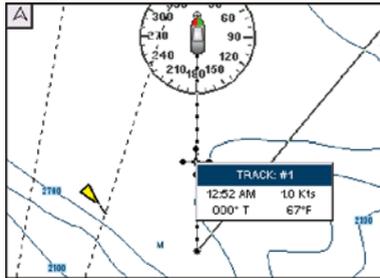


Figure 10.0 - Tracking

10.0.0 Saving and Starting a New Track

A Track is automatically saved and retained in memory when the power is turned off. To start a new Track:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **TRACK** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **ACTIVE TRACK** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob up/down to select the next available open Track and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob to highlight **TRACKING** and press **[ENT]** or move the ShuttlePoint knob to the right to set On.
6. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.
7. A new Track now will be laid down.

10.0.1 Deleting a Track

To delete a Track:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **TRACK** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **DELETE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. A warning popup window will be shown to confirm if you want to reset the Track. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]** or move the ShuttlePoint knob to the right. The Track is now deleted.
5. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

10.0.2 Other Settings

You will notice the Track menu has other selections:

TRACKING	Allows turning on or off the tracking function
ACTIVE TRACK	Allows saving a Track to one of the 20 Tracks available
VISIBLE	Shows or hides a Track shown in ACTIVE TRACK menu
LINE COLOR	Selects the color of the Track line
DELETE	Deletes a Track selected in the ACTIVE TRACK menu

STEP UNIT	Allowable selection are Distance or Time
DISTANCE	User adjustable Distance interval of when Track point is laid down on the Chart page.
TIME	User adjustable Time interval of when Track point is laid down on the Chart page.

10.1 TRIP LOG

10.1.0 Using the Trip Log

On the Chart, Navigation, Highway and NMEA Data pages the windows may be customized to show Trip Log information.

1. Select one of the pages listed above, press and hold **[MENU]**. You will notice one of the data boxes will be highlighted.
2. Press **[ENT]** and move the ShuttlePoint knob to highlight **TLOG**, press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with **Nm** (Nautical Mile), **Sm** (Statute Mile), **km** (kilometer), **Nm+Mt**, **Nm+Ft** and **RESET**. Move the ShuttlePoint knob to select the desired Units of Measure and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Press **[CLR]** or move the ShuttlePoint knob to the right until the selected page (Chart, Navigation, Highway or NMEA Data Page) is shown.

10.1.1 Setup / Reset

When Trip Log is selected in one of the data windows and you want to reset the log:

1. Press and hold **[MENU]** until a field is highlighted (it will be shown in a yellow frame).
2. Move the ShuttlePoint knob to highlight the Trip Log window **TLOG** and press **[ENT]**.
3. A popup window will be shown. Move the ShuttlePoint knob to **TLOG** and press **[ENT]**.
4. Another popup window will be shown. Move the ShuttlePoint knob to **RESET** and press **[ENT]**.
5. A warning popup window will be shown to confirm if you want to reset the Trip Log. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**. The Trip Log is now reset.
6. Press **[CLR]** to store and exit the editing mode.

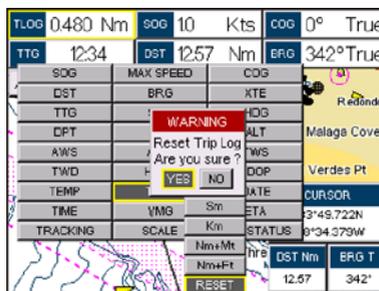


Figure 10.1. 1 - Trip Log Reset

11. USER C-CARD

The optional User C-CARD is used to backup Marks, Routes, and Tracks stored in your GPS Chart Plotter's memory. In the USA the User C-CARD is available directly from Jeppesen Marine at 800/424-2627. The User C-CARD is similar to a backup disk used with a PC, in case you have to clear the RAM to resolve an issue or load new software, or if you would like to transfer Waypoint, Track and Route information from one STANDARD HORIZON GPS Chart Plotter to another.

11.0 USER C-CARD MENU

This optional card is similar to using a floppy disk or memory stick on a PC to backup your files or to transfer the information that you have stored to a friends GPS Chart Plotter. The information shown below will assist you to transfer the User Points, Routes and Track history to the optional User C-CARD.

- ① Time of file creation
- ② Date of file creation
- ③ Type of data contained in the file (Mark file, Waypoint file...)
- ④ File name
- ⑤ Number of Selected file
- ⑥ Information on stored User Points on Internal Memory

FILE	NAME	TYPE	DATE	TIME
0	JILE06	TRACKS	01/01/80	00:00:00
MRKS	FILE02	MARKS	01/01/80	00:00:00
6	FILE07	TRACKS	01/01/80	00:00:00
WPTS	FILE04	MARKS	01/01/80	00:00:00
2	JILE0710	TRACKS	01/01/80	00:00:00
RTES	GILE06	TRACKS	01/01/80	00:00:00
1	GJLE07	TRACKS	01/01/80	00:00:00
TRKS	FILE08	MARKS	07/02/98	17:17:00
20	FILE09	ROUTES	07/02/98	17:17:00
	FILE01	TRACKS	01/01/80	00:00:00
	FILE03	MARKS	01/01/80	00:00:00
	FILE05	MARKS	01/01/80	00:00:00

SAVE LOAD DELETE FORMAT REFRESH

Figure 11.0 - User C-CARD Menu

11.0.0 Formatting the Optional User C-CARD

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **FORMAT** and press **[ENT]**.
4. A popup Warning window will to confirm you want to format the User C-CARD.
5. Select **YES** and press **[ENT]** to confirm (select **NO** otherwise). The format of User C-CARD must be done before using a new User C-CARD: this operation prepares the User C-CARD to receive and store information.

NOTE

Formatting permanently erases all files previously saved on the User C-CARD.

11.0.1 Transferring Files to the Optional User C-CARD

1. Remove a C-MAP B JEPPESEN NT*/MAX C-CARD if present and insert the optional User

- C-CARD into the slot.
2. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
 3. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
 4. A screen will appear. Move the ShuttlePoint knob to the left to highlight **SAVE** and press **[ENT]**.
 5. A popup **SAVE FILE** window will appear. In this window you can change the name and the file type by using the ShuttlePoint knob and pressing **[ENT]**, when finished press **[CLR]** once.
 6. To save the file, move the ShuttlePoint knob to **SAVE** in window and press **[ENT]**.
 7. A Information pop window will momentarily be shown **SAVING** then show **SAVING OK**.
 8. Press **[ENT]** to confirm.

11.0.2 Loading a File from the Optional User C-CARD

If you have a problem and accidentally loose the User Points in the GPS Chart Plotter with the optional User C-CARD it is possible to load the data back into the GPS Chart Plotter using the following procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Select the saved file from the User C-CARD list by using the ShuttlePoint knob and press **[ENT]**.
4. Move the ShuttlePoint knob to the left to highlight **LOAD** and press **[ENT]**.
5. A popup information window will appear when loading is complete.
6. Press **[ENT]** to confirm.

11.0.3 Deleting a File from the Optional User C-CARD

You may want to delete a saved file on the User C-CARD.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Select the saved file from the User C-CARD list by using the ShuttlePoint knob and press **[ENT]**.
4. Move the ShuttlePoint knob to the left to highlight **DELETE** and press **[ENT]**.
5. A popup Warning window will to confirm you want to delete the file.
6. Press **[ENT]** to confirm.

11.0.4 Refreshing the Optional User C-CARD

You may want to change the User C-CARD inserted in the slot with a new one.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Open the door, remove the User C-CARD from the slot and insert another User C-CARD into the same slot.
4. Move the ShuttlePoint knob to highlight **REFRESH** and press **[ENT]**. This "new" User C-CARD is now ready to receive and store information.

12. PAGES

The CP190i has many pages that are designed to ease your navigation.



Figure 12 - Example of screen display pages

The pages can be selected in the following way:

1. Press **[MENU]**. The following menu is shown on the screen:



Figure 12a - Main Menu

2. Move the ShuttlePoint knob to highlight the desired page and press **[ENT]**.

12.0 CHART PAGE

The Chart page is the main page of the GPS Chart Plotter. From this page the user can zoom in/out, pan around the chart, show information about cartographic objects, see the exact vessel position with the COG and SOG, place points, GOTO a destination point, show Track history etc.

It is possible to set the chart as a single or two charts side by side.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **CHART** and press **[ENT]**. Two Chart page types are available: Single and Dual.
2. Move the ShuttlePoint knob to highlight **Single** or **Dual** and press **[ENT]**.

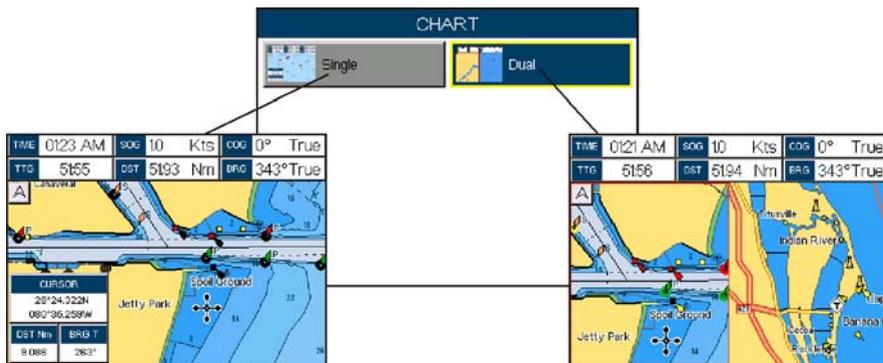


Figure 12.0 - Chart selection menu

NOTE

 may appear on the unused window of the Dual Chart page. It happens when the GPS Chart Plotter updates the displayed chart in the not active window. So the user understands that the GPS Chart Plotter is busy.

12.0.0 Change Focus on Dual Chart Page

When Dual Chart is selected, you will notice one of the chart windows will have a red border around it. This red border indicates which chart window the chart plotter has the focus on, meaning if the ShuttlePoint knob is moved the cursor on chart window will move. The focus may be changed to the other chart window with the procedure below:

1. Press and hold **[FIND]** for 2 seconds. The red border around the window is moved from active window to the other.
- Repeat the step 1. to move the focus from a window to another.

12.0.1 Single Chart Page

- 1 Time
- 2 Speed Over Ground
- 3 Course Over Ground
- 4 Time To Go
- 5 (If plotter is not navigating to a point TTG will show --:--)
- 6 Distance from Fix to Destination
- 7 (If plotter is not navigating to a point DST will show ---.)
- 8 Bearing from Fix to Destination
- 9 (If plotter is not navigating to a point BRG will show ---°)
- 7 Cursor Coordinates
- 8 Distance & Bearings from Fix to Cursor

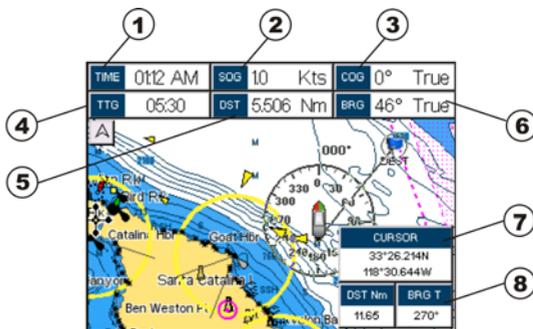


Figure 12.0.1 - Example of single Chart page

12.0.2 Window Selections

The CP190i windows, displayed on Chart page, may be changed in the following way. The default is the 2 lines small window.

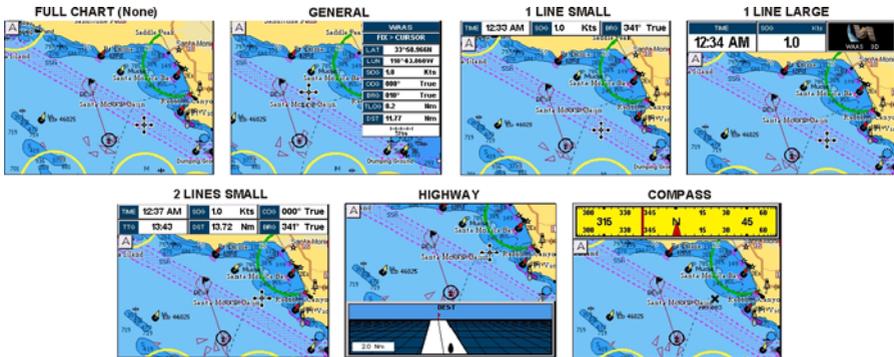


Figure 12.0.2 - Data window layout

1. To change, press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **WINDOWS SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **CHART PAGE** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Select the desired window, **HIGHWAY** or **COMPASS**, and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** or move the ShuttlePoint knob to exit the menu and show the Chart page.

12.0.3 Customizing Data Windows

The data fields contained on the General, 1 Line Small/Large and 2 Line Small data windows can be changed to the following selections:

- SOG = Speed Over Ground
- MAX SPEED = Max Speed
- COG = Course Over Ground
- DST = Distance to Destination¹
- BRG = Bearing to Destination¹
- XTE = Cross Track Error
- TTG = Time To Go
- STR = Steering Angle
- HDG = Heading from Electronic Compass
- DPT = Depth
- SPD = Speed Through Water
- ALT = Altitude
- AWS = Apparent Wind Speed
- AWD = Apparent Wind Direction
- TWS = True Wind Speed
- TWD = True Wind Direction

- HDOP = Horizontal Dilution of Precision
- VDOP = Vertical Dilution of Precision
- TEMP = Water Temperature
- TLOG = Trip Log²
- DATE = Current Date
- TIME = Current Time
- VMG = Velocity Made Good
- ETA = Estimated Time of Arrival
- TRACKING = Available free Track point
- SCALE = Chart Scale³
- GPS STATUS = Shows GPS fix status (WAAS, 3D, 2D, ...)⁴

NOTE¹

When the GENERAL window is selected and the GPS Chart Plotter is in Home Mode, the BRG will show -- -, unless the GPS Chart Plotter is navigating to a point. When in Cursor Mode, the BRG shows the Bearing from the ship's position to the cursor location.

NOTE²

See Par. 10.1.0 if Trip Log is selected in one of the Data Windows and you want to reset the log.

NOTE³

Chart Scale is always displayed in General chart window.

NOTE⁴

GPS Status is always displayed in General and 1 line large chart windows.

To select the desired field, follow the procedure:

1. Press and hold **[MENU]** until a field is highlighted (it will be shown in a yellow frame).
2. Move the ShuttlePoint knob to the desired data field (the yellow frame is moved to the desired data field) and press **[ENT]**. The popup window will be shown.
3. Move the ShuttlePoint knob up/down or left/right to choose the desired setting and press **[ENT]**.
4. Press **[CLR]** to store and exit the editing mode.

NOTE

Data window field on the NAVIGATION, HIGHWAY, GPS STATUS and NMEA pages may be customized in the above manner.

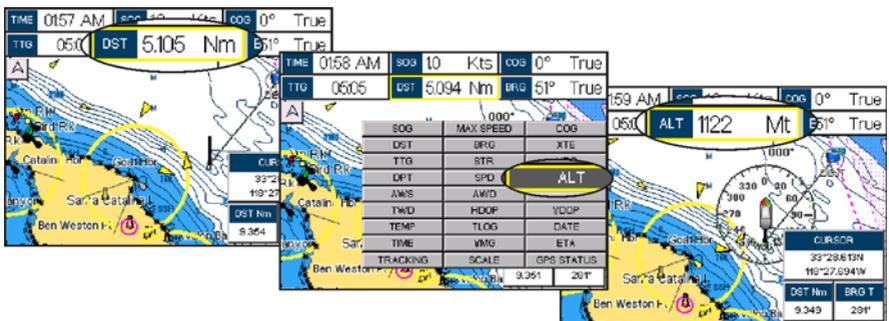


Figure 12.0.3 - Customizing the Data Windows

12.0.4 Additional Functions on Chart Page: Information on Objects

When on the Chart page, you will notice icons of Buoys, Towers, Lights, Wrecks, Tide Stations, Ports icons, etc.. If the cursor is moved over the top of these icons a popup window will be shown with information about the icon (this is possible only if the Auto Info function is enabled). The GPS Chart Plotter allows you to see information **On All** cartographic objects shown on the screen, or only **On Points** or to turn this function off (in this case no popup window is shown when the cursor is placed on a cartographic object). The default setting is On Points.

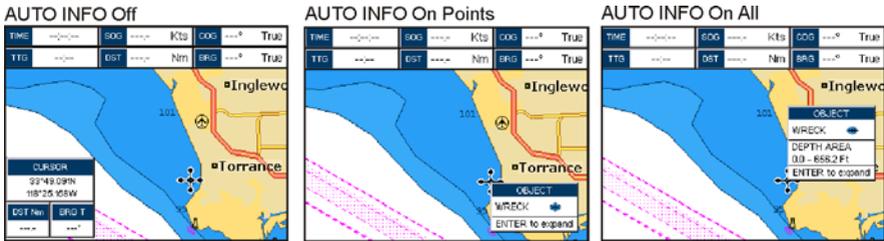


Figure 12.0.4 - Example of Auto Info settings

To select the information displayed on objects follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **AUTO INFO** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob up or down to highlight **OFF**, **ON POINTS** or **ON ALL** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Press **[CLR]** or move the ShuttlePoint knob to the left until the menu disappears.

12.0.5 Display Mode

Selects from a pre-defined table what cartographic objects are displayed and which display options are set. Preprogrammed settings are user selectable from Full, Medium, Low, Radar (reduces the information on the display to simulate items that would be shown on a Radar display. Please note this function is not actually showing Radar information it is only showing what typically would be shown by a separate dedicated Radar display), Tides, Custom (default mode).

To change to one of the preprogrammed settings:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **CHART CONFIGURATIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **DISPLAY MODE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob up or down to select the preset and press **[ENT]**.
5. Press **[CLR]** or move the ShuttlePoint knob to the right until the Chart page is shown.

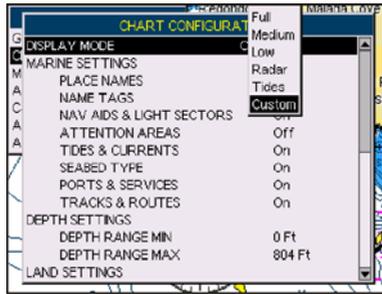


Figure 12.0.5 - Display Mode settings


The table below shows the selections for each mode:

Setting	Full	Medium	Low	Radar	Tides	Custom (Default values)
Place Names	On	On	On	On	On	On
Name Tags	On	Off	Off	Off	Off	Off
Nav Aids & Light Sectors	On	No Sectors	No Sectors	No Sectors	Off	On
Attention Areas	On	On	Off	Off	Off	Off
Tides & Currents	On	Off	Off	Off	On	On
Seabed Type	On	Off	Off	Off	Off	On
Ports & Services	On	On	Off	On	Off	On
Tracks & Routes	On	Off	Off	Off	Off	On
Depth Range Min	0Ft	0Ft	0Ft	0Ft	0Ft	0 Ft
Depth Range Max	32804ft	32804ft	32804ft	32804ft	32804ft	32804ft
Land Elevations	On	On	Off	Off	Off	Off
Land Elevation Values	On	Off	Off	Off	Off	On
Roads	On	Off	Off	Off	Off	On
Points Of Interest	On	Off	Off	Off	Off	On
Lat/Lon Grid	On	Off	Off	Off	Off	Off
Chart Boundaries	On	Auto	Off	Off	Off	On
Value Added Data	On	Off	Off	Off	On	On
Chart Lock	On	On	On	On	On	On
Mixing Levels	On	On	On	On	On	On
Underwater Ob. Limit	1000ft	32ft	32ft	32ft	32ft	1000ft
Rocks	Icon + Depth	Icon	Icon	Icon	Icon	Icon
Obstructions	Icon + Depth	Icon	Icon	Icon	Icon	Icon
Diffusers	Icon + Depth	Icon	Icon	Icon	Icon	Icon
Wrecks	Icon + Depth	Icon	Icon	Icon	Icon	Icon

12.0.6 Marine Settings

Controls the display on the chart of the marine features.

Place Names	: Turns the local area names On or Off.
Name Tags	: Turns a tag for particular chart objects that either includes the Name of the chart object or the Depth of an Underwater chart object On or Off.
Nav Aids & Light Sectors:	Turns the presentation of Lights, Signals, Buoys and Beacons On (Nav-Aids & Light Sectors are shown), Off (Nav-Aids & Light Sectors are not shown) or No Sector (Nav-Aids are shown, Light Sectors are hidden).
Attention Areas	: Turns the Attention Areas (areas in which special attention by the mariner is required because of natural or man-made hazards sailing regulations and restrictions) On or Off.
Tides & Currents	: Turns the Tides and Currents On or Off. When data/time is available, Tidal stream arrows are shown on the charts, indicating the direction and strength of the Tide. If no data/time is available from the GPS or the GPS Chart Plotter is not in Simulation mode, the icon on the chart is generic one. The color of the arrow denotes the strength of the current as follows:

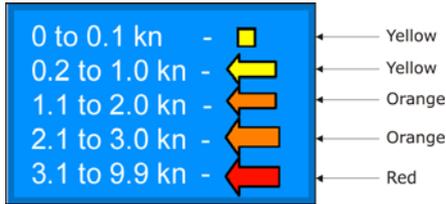

When the GPS Chart Plotter receives a valid position fix, the Tide icons are shown on the charts on the basis of the current date and time: the screen displays and changes arrows as date/time changes.

Seabed Type	: Turns the Seabed Type On or Off.
Ports & Services	: Turns the Ports and Service icons On or Off. Areas along the shore with facilities for mooring, downloading and uploading of ships, generally sheltered from waves and winds. Port installations are piers, wharves, pontoons, dry docks, cranes....
Tracks & Routes	: Turns the Tracks and Routes On or Off (recommended and established routes for ships at sea, including traffic separation schemes, deep water routes).

12.0.7 Depth Settings

Controls the depth information on the Chart page.

Depth Range Min	: Sets the minimum depth limit to show Depth Sounding, Bathymetric Lines and Depth Areas.
Depth Range Max	: Sets the max depth limit to show Depth Sounding, Bathymetric Lines and Depth Areas.

0-1000 Ft



50-100 Ft

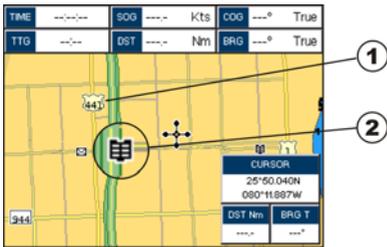


Figure 12.0.7 - Depth Settings

12.0.8 Land Settings

Controls the display on the map of the terrestrial features.

Land Elevations	: Turns the Land Elevations On or Off.
Land Elevation Values	: Turns the Land Elevation Values On or Off.
Roads	: Turns the Roads On or Off.
Points Of Interest	: Turns the Points of Information On or Off.



- ① ROAD
- ② POINT OF INTEREST (LIBRARY)

Figure 12.0.8 - Example of Roads and Points Of Interest

12.0.9 Chart Settings

Settings that control how the chart features will be shown on the Chart page of the GPS Chart Plotter.

Lat/Lon Grid : Turns the Latitude and Longitude grid lines on or off on the Chart page. See the following figure:

Lat/Lon Grid ON



Lat/Lon Grid OFF



Chart Boundaries : Turns the Chart Boundaries On, Off or Auto. The Chart Boundaries are the "ticked" boxes surround the coastline. Each box indicates an area where more detail is available. The Chart Boundaries are only show when a C-MAP By JEPPESEN NT*/MAX C-CARD is inserted into the GPS Chart Plotter. See the pictures below:

Chart Boundaries ON

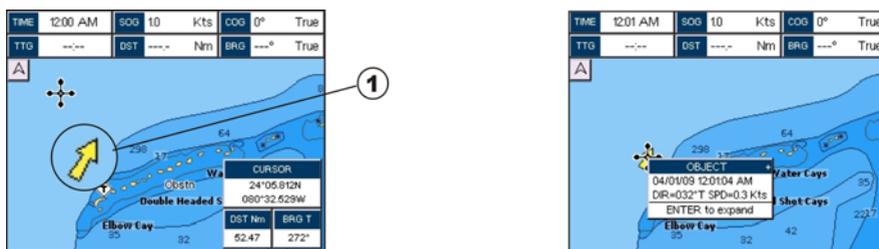


Chart Boundaries OFF



Value Added Data : Turns the Value Added Data On or Off. The Value Added Data (VAD) is a collection of additional cartographic objects which are not present on the original paper chart (from which the electronic chart derives). These objects have been obtained from other sources and then merged to the electronic charts in order to provide more information useful for the navigation. VAD object can be any cartographic objects and it can be distinguished from the official-chart-objects from the Quick Info. A dedicated icon is shown on the Quick Info window to indicate that the object queried is a VAD. The same icon is also shown on the Full Info page and in addition the extended text Value

Added Data is shown on the details of the VAD object. See the figure below:



1 Example of VAD object

- Chart Lock (*)** : Turns the chart function On/Off. When Chart Lock is On, the available zoom scales are only the ones containing cartographic data. Instead when Chart Lock is Off, it is possible to zoom down into zoom scales not covered by cartographic data after the last available zoom scale covered by cartographic data. The DSI (Data Safety Indicator) window, if present, will show "NO CHART", when an empty level is entered in the location of chart expansion mode.
- Mixing Levels** : When the chart coverage at the current chart scale does not fill the entire display, the GPS Chart Plotter draws the rest of the chart using charts from above and below the current scale. When this function is turned on you will notice the display may redraw 2 to 3 times to show all the details.

NOTE *

When an empty level is entered, the message "No cartographic coverage" is shown on a window in a corner of the chart display. The warning message is always displayed as long as the current zoom has no data coverage.

12.0.10 Underwater Objects Settings

The following selections are used to control which Underwater Objects are shown on the Chart page.

- Underwater Object Limit** : Selects the max depth value to display Underwater Objects. If value is set to 0ft, the Underwater Objects are not shown on the charts. Menu options are greyed out. If value is more than 0ft (i.e. 10ft), in the Range from 0ft to the selected value the Underwater Objects are displayed according to their setting below.
- Rocks** : Sets Off/Icon/Icon+Depth* the displaying of the Rocks.
- Obstructions** : Sets Off/Icon/Icon+Depth* the displaying of the Obstructions.
- Diffusers** : Sets Off/Icon/Icon+Depth* the displaying of Diffusers (Diffuser is a structure on an outfall through which liquids are discharged. The structure will usually project above the level of the outfall and can be an obstruction to navigation).
- Wrecks** : Sets Off/Icon/Icon+Depth* the displaying of Wrecks.

NOTE *

Choose the options: OFF (the object is not visible independently of the selected "Underwater Object Depth Value"); ICON (the object icon is visible without tags, in the range selected from "Underwater Object Depth Value" option); ICON+DEPTH (the object icon and tag is visible, in the range selected from "Underwater Object Depth Value" option).

12.1 CUSTOMIZING CHART SETTINGS

The GPS Chart Plotter also allows you to customize items shown on the chart (discussed in above sections) instead of using a pre-defined table discussed in Par. 12.0.5 "Display Mode".

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **CHART CONFIGURATIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **DISPLAY MODE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **Custom** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob up or down to select the desired item within the groups Marine Settings, Depth Settings, Land Settings, Chart Settings or Underwater Settings and press **[ENT]**. See the above sections for details on selections.

12.2 NAVIGATION PAGE

The Navigation page is useful to show information when heading to a destination, following a compass heading or navigating to a Mark or a Route. The default page is shown with a Compass Rose, however this can be customized to show a Compass Tape.

1. To change to show the Compass Tape, select the Chart page, press **[MENU]**. Move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **WINDOW SETUP** and press **[ENT]** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **NAVIGATION PAGE** and press **[ENT]** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint up or down to select **COMPASS TAPE** and press **[ENT]**.
6. Press **[CLR]** or move the ShuttlePoint knob to the right until the menu disappears.

① Fix position

② Time

③ Speed Over Ground

④ Course Over Ground

⑤ Bearing to Destination

⑥ Compass Rose

⑦ Time To Go

⑧ Distance to Destination



Figure 12.2 - Navigation page with Compass Rose

- ① Fix position
- ② Compass Tape
- ③ Time
- ④ Speed Over Ground
- ⑤ Time To Go
- ⑥ Course Over Ground
- ⑦ Distance to Destination
- ⑧ Bearing to Destination

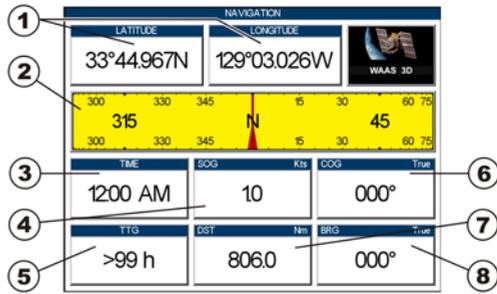


Figure 12.2a - Navigation page with Compass Tape

NOTE

The COG heading is computed and supplied to the plotter from the internal GPS or external GPS.

12.3 HIGHWAY PAGE

Shows a 3D view of the vessel travelling through the water when navigating to a destination point, Mark or following a Route. Data boxes on the Highway page can be customized (see ①, ② and ③ in the following picture), except for the GPS Status. In the bottom left corner there is a small gray window (see ⑤ in the following picture) which shows the scale (width) of the Highway. The default width is 0.2Nm however this may be changed by pressing **[ZOOM IN]** or **[ZOOM OUT]**.

- ① Speed Over Ground
- ② Course over ground
- ③ Bearing
- ④ Highway Display
- ⑤ Highway Scale


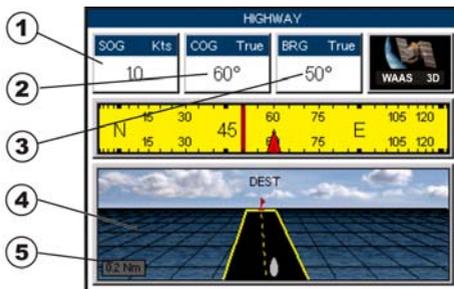


Figure 12.3 - Highway page

12.4 CELESTIAL PAGE

The Celestial page contains Tide information critical for safe navigation. It is also useful for boaters that are concerned about the height of the water under a bridge or by fisherman that wish to know the tide and moon phase of a specific date.

Refer to the following Figure 12.0. It includes information on the moon phase with image, rise and set times (4) and also rise and set times of the sun (5). Moving the ShuttlePoint knob left or right controls the Tide Prediction time (1) (see the vertical line which moves as the ShuttlePoint knob moves) and moving the ShuttlePoint knob up or down controls the draught value (3) (see the horizontal line which moves as the ShuttlePoint knob moves). The height value (6) shows the height of the Tide water during a 24 hours period of time. None of the data boxes on this page can be customized.

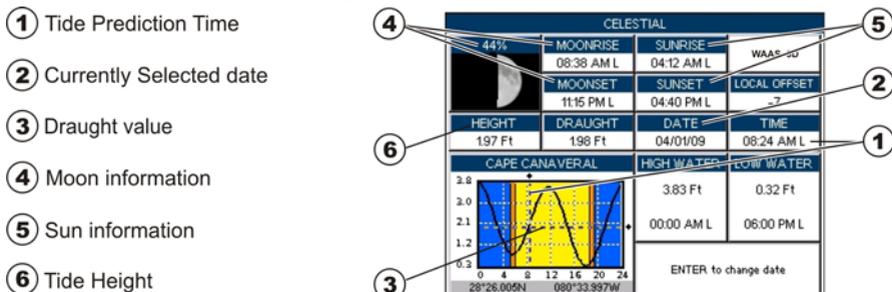

NOTE


The Local Offset matches the Time Offset entered in the Time Setup menu (see Par. 3.2)

To enter the desired date follow the procedure below:

1. Press [ENT] and a popup window will be shown.
2. Moving the ShuttlePoint knob up or down changes the digits and left and right selects the month, day and year.
3. Press [CLR] to exit and view the date shown in (2).

12.5 GPS STATUS PAGE

The GPS Status page is used as a reference to see how well the GPS is receiving satellites. Data boxes can be customized, except for Latitude, Longitude and GPS Status.

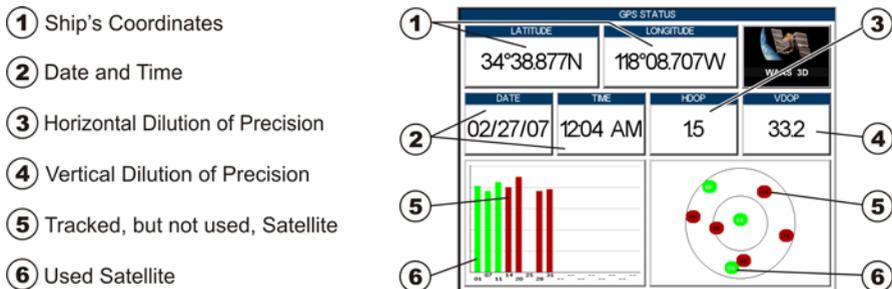

The WAAS/GPS Icon area (7) may change due to the satellite reception:

ACQUIRING	: the GPS is trying to receive a valid position fix.
GPS2D	: the GPS is receiving at least 2 satellites.
GPS3D	: the GPS is receiving at least 3 satellites.
WAAS 2D/3D	: the GPS is receiving a 2D or 3D position and the correction from the WAAS satellite.

12.5.0 GPS Setup Menu

From the GPS Status page it is possible to activate the GPS Setup menu.

1. Press **[MENU]**, move the ShuttlePoint knob to enter **GPS STATUS** page and press **[ENT]**.
2. Press and hold **[ENT]**. The GPS Setup menu¹ appears on the screen. See the following table:

Restart GPS	: Restarts all GPS processes. Once executed, the message "Done" is shown.
Navigation Speed	: Allows setting the Navigation Speed among Low and High. The default setting is High.
Speed Filter	: Allows to resolve erratic speed readings in rough seas. Available values are Off, Low, Medium, High. The default setting is Off.
Differential Correction Source	: Allows setting what kind of Differential Correction will be used by the GPS between WAAS-EGNOS and none. The default setting is WAAS-EGNOS.

3. Move the ShuttlePoint knob to highlight the preferred item and press **[ENT]**.
4. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the menu disappears.

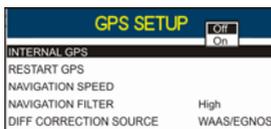


Figure 12.5.0 - GPS Setup menu¹

NOTE¹

The GPS Setup menu changes depending on the type of the external GPS used.

12.5.1 WAAS/EGNOS Setting

From the GPS Status page it is possible to disable the WAAS/EGNOS function.

1. Press **[MENU]**, move the ShuttlePoint knob to enter **GPS STATUS** page and press **[ENT]**.
2. Press and hold **[ENT]**. The GPS Setup menu appears on the screen.
3. Move the ShuttlePoint knob to highlight **DIFF CORRECTION SOURCE** and press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **None** (to disable) and press **[ENT]**.
5. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the menu disappears.

12.6 NMEA DISPLAY PAGE

The GPS Chart Plotter is capable of displaying information in the customizable data windows from external NMEA-0183 devices. Depth Sounder, Speed Log with Temp, Wind Speed and Direction, Flux Gate Compass, and GPS information can be shown in any of the boxes. The NMEA sentences read from external devices are: BWC, DSC, DSE, GGA, GLL, GSA, GSV, HDG, HDM, HDT, RMC, VHW, VTG, DPT, DBT, MTW, VWR, VWT, TLL, WPL, RTE. To display the desired NMEA Display page follow this procedure:

12.8 NMEA TREND PAGES

The CP190i has the following NMEA Trend pages. Trends will be shown for Depth, Temp and Speed (DST521 or DST526 must be connected to show speed through the water) when a STANDARD HORIZON transducer is connected. To show Wind trend information the CP190i must be connected to the NMEA Output of a external Wind instrument. To select a NMEA Trend Page:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **NMEA DISPLAY** and press **[ENT]**.

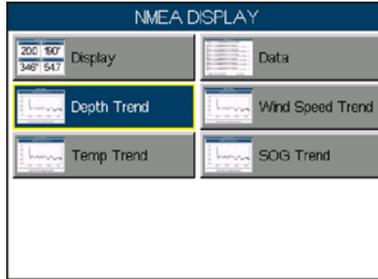


Figure 12.8 - NMEA Display menu

2. Move the ShuttlePoint knob to select **DEPTH TREND**, **WIND SPEED TREND**, **TEMP TREND** or **SOG TREND** and press **[ENT]**.

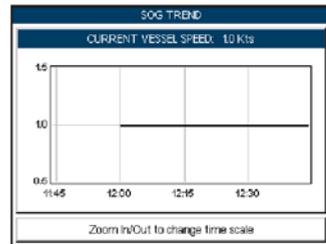
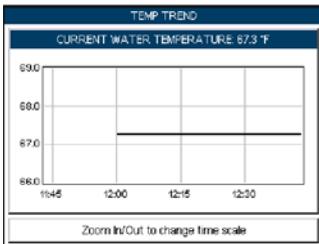
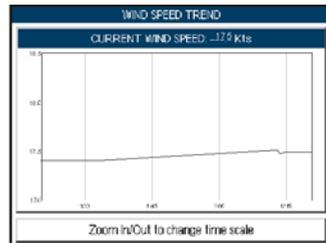
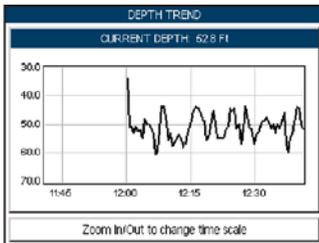


Figure 12.8a - NMEA Trend pages

12.9 VHF DIGITAL SELECTIVE CALLING

Digital Selective Calling is a semi-automated method of establishing a VHF Radio call. DSC had also been designated as part of the Global Maritime Distress and Safety System

13. ADVANCED SETTINGS

The Advanced Setup menu allows customization of many GPS functions, Alarms and NMEA interfacing.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.

While in this menu you will see many selections which are described in the next sections.

13.0 INPUT/OUTPUT (NMEA, AIS, RADAR)

13.0.0 Input

The CP190i has 2 Inputs and 3 Outputs connections.

These ports may be set up to receive and output the following.

- NMEA-0183 - NMEA devices* set to 4800 Baud (default setting)
- Fish Finder: FF525 50/200kHz Black Box Fish Finder - refer to Fish Finder Owner's Manual
- C-COM - C-Weather refer to Chapter 15
- Radar - SI-TEX optional Radar refer to Radar Owner's Manual
- AIS 38400 - AIS Receiver, refer to Chapter 14
- MOBILARM - Mobilarm receiver, refer to Chapter 16
- Disabled - allow the port to be disabled.

*NOTE**

RS232 not opto-isolated electrical interface.

NOTE

When a Port is configured, both the Input and Output have the same setting. Port1 is set to Radar, both the Input and Output wires are set to SI-TEX proprietary Radar sentences. This means other devices should not be connected to the Input or Output wires.

13.0.1 Output

The ports may be setup to output NMEA sentences. The table below shows the default setting each port.

Sentence	Port1	Port2	Port3
GLL	On	On	On
VTG	Off	Off	Off
BWC	Off	Off	Off
WCV	Off	Off	Off
APA	Off	Off	On
APB	Off	Off	On

HDG	Off	Off	Off
BOD	Off	Off	On
XTE	On	On	On
RMA	Off	Off	Off
RMB	Off	Off	Off
RMC	On	On	On
GGA	On	On	On
HSC	Off	Off	Off
DBT	On	Off	Off
DPT	On	Off	Off
MTW	On	Off	Off
VHW	On	Off	Off
GSA	On	Off	Off
GSV	On	Off	Off

13.1 NAVIGATE

The Navigate Menu allows customization of the Coordinate System (Loran TD's), Chart Datum, Chart Orientation Resolution (angle the vessel has to change before the chart is redrawn) and Static Navigation. See the following table

Coordinate System	: Selections are: a. TD: Time Difference, based on Loran (see the following Par. 13.1.0) b. UTM: Universal Transverse Mercator Grid c. ddd mm.mmm: Degrees Minutes and Thousands of Minutes d. ddd mm.mm: Degrees Minutes and Hundredths of Minutes e. ddd mm.ss: Degrees Minutes and Seconds (default)
Chart Datum	: Allows selection of Chart Datums. The default Datum is WGS84 as C-MAP BY JEPPESEN cartography has been compiled using the WGS84 Datum. A datum is a mathematical model of the Earth which approximates the shape of the Earth, and enables calculations such as position and area to be carried out in a consistent and accurate manner.
Chart Orientation Resolution	: Sets the angle the vessel has to change before the chart is redrawn. The default setting is 30 degrees. Example: if the vessel is heading 000T at a speed of 25 Knots, the display will redraw: a. In Home Mode the GPS Chart Plotter centres the location of the vessel in the center of the display. To keep the vessel in the center of the display the GPS Chart Plotter will occasionally redraw. b. If the vessel changes course greater than 330T or more than 30T the chart will be redrawn.
Static Navigation	: Sets up a threshold for the speed. When the speed received from the positioning device is under that threshold, the GPS Chart Plotter displays zero.
Stop Navigation on Arrival	: When the Destination is reached, the navigation is automatically stopped. You can decide whether the navigation is automatically stopped or if the user confirmation is required (Auto Confirmation is the default setting): a. Auto Confirmation: the Destination is removed on arrival without informing the user. b. Manual Confirmation: on arrival a window pop-ups to require the user confirmation to remove the Destination.

13.1.0 Loran TD

The Loran TD selection allows the GPS Chart Plotter to be set up so the user can enter in LORAN TD's directly into the GPS Chart Plotter. After the TD's have been entered, and the user changes to ddd mm.sss (Degrees Minutes and Seconds) the TD's will be converted to Lat / Lon coordinates. To use the TD Coordinate System the user must setup the Chain and Pair information of the TD's. If you do not know this information, refer to paper charts that show the Chain and Pair information.

ASF1/2	: Additional Secondary phase Factor (TD Coordinate System) Correction to TD1/2 values which can be inserted by the user to take in account the additional signal propagation delay over a mixed land/seawater path compared to on all-seawater path. Normally the user does not enter a ASF value. However for experienced users this function allows entering of signal delay values to fine adjust the calculated position. The user should enter delay values to fine adjust the position calculated.
Alter	: Alternate Solution (TD Coordinate System) Parameter selected by the user that is applied in the conversion of geographical coordinates Lat/Lon to TD values. To be used if the position displayed is roughly not correct.

13.2 COMPASS

The GPS Chart Plotter computes compass direction from the constellation of GPS Satellites. For the GPS Chart Plotter to compute direction the vessel must be moving through the water unless connected to an optional Flux Gate Compass sensor. The Compass menu allows the GPS Chart Plotter to customize the following selections:

Bearings	: Selects between True and Magnetic. When Magnetic bearings is enabled, the GPS Chart Plotter applies the selected Magnetic Variation (Auto or Manual, see next paragraph) to compute Magnetic bearing.
Variation	: Allows the user to select Auto or Manual. When Auto mode is selected the GPS Chart Plotter computes the offset by the current GPS fixed location. Manual mode allows the user to enter in a magnetic variation that is applied in the True conversion.
Calibration	: Allows a user to enter in the offset for areas that the vessel may cruise instead of entering in a manual offset for one location. This offset is useful for cruising vessels or vessels that travel internationally often.

N	N/E	E	S/E	S	S/W	W	N/W
+00°	+00°	+00°	+00°	+00°	+00°	+00°	+00°

Figure 13.2 - Compass Table

13.3 ALARMS

The Alarms menu is used to select and setup audible and visual Alarms. Available alarms are Arrival, XTE, Depth, Anchor and Grounding Alarm.

Arrival Alarm¹	: Alerts when the vessel is approaching single destination point or when arriving at a leg in a Route. Available selections: 0.00 to 9.99Nm.
XTE Alarm¹	: Alerts when the vessel is deviating from a defined course. Available selections: 0.00 to 9.99Nm.
Depth Alarm¹	: Alerts when the received depth Value is lower than the selected value. Available selections: 0000 to 3000ft.
Anchor Alarm¹	: Alerts when the ships moves off a selected locations by a selected distance. Available selections: 0.00 to 9.99Nm.
Audible Alarm	: Enables or disables the alarm beep.
Grounding Alarm²	: Looks ahead of the vessels heading to see if a potential danger exists. When the Grounding Alarm is enabled the GPS Chart Plotter will draw a triangle in front of the vessel on the Chart page showing the area that is being searched as shown below. The depth and range (distance) of the area the GPS Chart Plotter looks ahead for a shallow area can be set using this function.
Grounding Alarm Range:	Allows setting the distance of the grounding alarm zone (the length of the sector to be detected) among the 0.25, 0.5, 1.0 Nm selections. When a depth or any of the searched objects is found in the scanned area, a tick marker is printed on the relative box in the Grounding Alarm Report page to identify which dangerous objects have been currently detected.
Grounding Alarm Report:	This function allows displaying a report of the dangerous objects currently detected.

NOTES

⁽¹⁾ Please note that the alarm can be activated only if the GPS Chart Plotter is receiving a Fix position or Simulation mode is activated. Otherwise an error beep is returned and the Alarm value is kept to Off.

⁽²⁾ The Grounding Alarm function is available only if a NT*/MAX C-CARD is inserted. It also affects the screen redraw speed so we suggest to disable it when not used.

⁽²⁾ When any of the objects checked are found for the first time, the GPS Chart Plotter shows a pop up window to alert the user of the possible danger. The name of each new dangerous object found is reported in the warning window. In the Grounding Alarm Report page the relative item has a tick marker next to it, to identify the dangerous object currently detected. If in the next search cycle the same objects are found again, the alarm window will not be shown. Instead, if in the next searches the objects found before are no longer detected, their relevant item in the Grounding Alarm Report page is cleared (note that in this case, if the same object type is found again later, the Alarm will be shown). The GPS Chart Plotter shows an icon on the charts that identifies when a Grounding Alarm is detected.

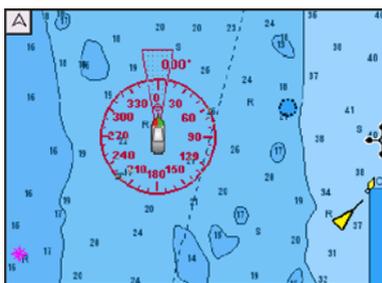


Figure 13.3 - Grounding Alarm

13.4 SIMULATION

The built-in Simulator function allows you to become proficient in the use of the GPS Chart Plotter, see the Simulation Menu below:

Simulation Mode	: Three selections: a. Off - turn the Simulation Mode Off b. On - enable the simulator mode, where the speed and course are adjusted by entering in values in the Course and Speed section discussed later in this table. c. Route - this selection allows you to navigate to a saved route.
Course	: To start the simulator you can insert the Course value.
Speed	: To start the simulator you can insert the Speed value.
Date	: To start the simulator you can insert the date.
Time	: To start the simulator you can insert the time.
Cursor Control	: Enables (On)/disables (Off) the cursor control. Moving the ShuttlePoint knob up or down will change the SOG and left or right will change the COG of the simulated vessel.
Demo Mode	: In Demo mode the GPS Chart Plotter automatically places a Destination point on the Chart page and simulates navigation to the point. Also, the active page changes automatically every 10 seconds. The pages are shown in the following order: Start-Up screen, GPS Status, Chart/Compass tape, Chart/Fish Finder, Full page Fish Finder, Full page Radar, Navigation, Highway, Celestial, NMEA. Once the Demo mode is enabled, pressing any key it is possible to temporarily exit and returns to GPS Chart Plotter normal operation, but if you do not touch any key for 30 seconds Demo Mode restarts.

13.4.0 Navigating a Route in Simulation Mode

This selection allows you to navigate to a saved Route to see how data windows on the Chart page and how the Navigation and Highway pages operate.

1. Create a Route. Refer to Par. 9.0 “*Creating a Route using Waypoints*”.
2. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
3. Move the ShuttlePoint knob down to highlight **ADVANCED SETUP**, then press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **SIMULATION** and press **[ENT]**.
5. Move the ShuttlePoint knob to highlight **SIMULATION MODE** and press **[ENT]** to show a popup window.
6. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]** which will show a popup window with the Route(s) that are stored in the GPS Chart Plotter’s memory.
7. Highlight the desired Route and press **[ENT]**.
8. Move the ShuttlePoint knob to highlight **SPEED** and press **[ENT]**.
9. Enter in the speed you want to vessel to travel at in Simulation Mode, by moving the ShuttlePoint knob left or right to select a number and up or down to change a number.
10. When the speed is adjusted, press **[ENT]**.
11. Press **[CLR]** multiple times until the Chart page is shown.

13.5 DSC POLLING

This menu is used to enable or disable features related to the DSC function.

Auto Position	: Selects between Manual or Auto. See also the Par. 12.8.1. When Auto Position item is set to Manual and receiving the Position Request, the Position Request popup window is not displayed and the cursor does not move to the position of the received Position Request data point. Otherwise when Auto Position item is set to Auto , the GPS chart plotter works as follows: <ol style="list-style-type: none">1 : when receiving the Position Request, the Position Request popup window s displayed;2 : when selecting VIEW ON CHART, the position is indicated on the chart marked with “P”. The cursor is moved to the point “P” and shows the point in the center of the screen;3 : when moving the cursor from “P”, the location can be confirmed. At this time, the same MMSI Position Request data that were received before are remaining and displayed.
Auto Info	: Enables or disables the Auto Info. This selection is available only when Auto Position is set to Manual. If Auto Info is set to On, when receiving the Position Request it is possible to center the cursor over the top of the Position Request icon and show the Position Request popup window

14. AIS

AIS is an Automatic Identification System. It has been introduced to improve the safety of navigation by assisting in the efficient operation of ship-to-ship location reporting and VTS applications. The system should enable operators to obtain information from the ship automatically, requiring a minimum of involvement of ship's personnel, and should have a high level of availability. AIS transponders installed on IMO vessels use VHF frequencies to:

- Transmit details of their own vessel
- Receive details from other vessels or navigation aids within VHF range.

STANDARD HORIZON GPS Chart Plotters are able to display AIS target (for collision avoidance) on the Chart page and AIS list pages when connected to a AIS receiver (GX2100 or GX2150 STANDARD HORIZON VHF/AIS transceiver) or transponders which output NMEA-0183 VDM sentence at 38400 or 4800 baud. The Chart Plotters are able to show targets from both Class A (commercial) and Class B targets.

14.0 SYSTEM DEFINITIONS

- **Target:** vessel equipped with AIS. Information about the Targets is being received by AIS Receiver and displayed on the screen.
- **CPA (Closest Point of Approach):** the closest distance that will be achieved between your vessel and the tracked Target, based on your vessel's speed and direction and the Target's speed and direction.
- **CPA Limit:** distance from your vessel that a Target may reach before a Target is deemed a threat.
- **CPA Alarm:** occurs if CPA is less or equal to CPA Limit. This test is done for active Targets only.
- **TCPA (Time to Closest Point of Approach):** time remaining until the CPA will occur.
- **TCPA Limit:** time remaining before the CPA is reached.
- **TCPA Alarm:** occurs if TCPA is less or equal to TCPA Limit. This test is done for active Targets only and if CPA value is less or equal to CPA Limit.
- **Radio Call Sign:** international call sign assigned to vessel, often used on voice radio.
- **Name:** name of ship, 20 characters.
- **MMSI (Maritime Mobile Service Identity) number:** a unique 9 digit number that is assigned to a DSC radio station. It primarily registers the boat information in the U.S. Coast Guard's national distress database for use in emergency situations.
- **Active Target:** Target located within the Activation Range. Active Targets are represented by oriented triangle with COG and Heading vectors. Rate of turn may also be displayed.
- **Dangerous Target:** Target detected by CPA or TCPA Alarm. Dangerous Targets are Active Targets by definition. For better visibility Dangerous Target symbol is flashing.
- **Sleeping Target:** Target located outside the Activation Range. Sleeping Targets are represented by a small oriented triangle.
- **Lost Target:** when the AIS info is not received from that vessel for 3.5 minutes. The presentation will be a flashing black triangle with a cross through.
- **Activation Range:** range around your boat where Targets become active. AIS Targets become active within this range. Activation Range should be greater than CPA Limit by definition.

NOTE

A Target is removed from the screen if data is not received for 10 minutes.
 The maximum number of tracked Class A or B targets is 200.
 This information is updated every 3 seconds to 6 minutes depending on speed and rate of turn, enabling the track of the vessels in range to be plotted.

TARGET STATUS	DESCRIPTION	SYMBOL
ACTIVE TARGET	Target located within the Activation Range.	
DANGEROUS TARGET	Target detected by CPA or TCPA Alarm. Dangerous Target is Active Target by definition.	
SLEEPING TARGET	Target located outside the Activation Range.	
LOST TARGET	Ais info is not received from that vessel for 3.5 minutes.	

Figure 14.0 - AIS Symbols

14.1 AIS SETUP MENU

To configure the GPS Chart Plotter to receive AIS data, follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **AIS SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right. The AIS menu appears on the screen. The available functions are described in the following table.

Display	: Turns the display of AIS Targets overlay on the cartography On or Off. The default setting is On.
Activation Range	: Defines the range from the fix within which the AIS Target becomes active. The values allowed are from 0.1 to 20Nm. The default setting is 5Nm.
CPA Alarm	: Turns On or Off the alarm. The default setting is On.
CPA Limit	: The values allowed are from 0.1 to 10 Nm. The default setting is 0.5Nm.
TCPA Alarm	: Turns On or Off the alarm. The default setting is On.
TCPA Limit	: The values allowed are from 1 to 30 Min. The default setting is 10 Min.
SART/MOB/EPIRB Test	: Turns On or Off receiving of AIS-SART, AIS-MOB or AIS-EPIRB test alerts.

14.2 QUICK INFO ON AIS TARGET

By placing the cursor over a AIS Target icon using the ShuttlePoint knob, the following information is displayed. Press **[ENT]** to select the Enhanced AIS Page with information related to the selected AIS object (see the following Par. 14.6).

- ① Vessel name
- ② MMSI number
- ③ Speed over Ground
- ④ Closest Point of Approach
- ⑤ Radio Call Sign
- ⑥ Course Over Ground
- ⑦ Time to Closest Point of Approach

The screenshot shows a map of a coastal area with a target icon. A data panel is overlaid on the right side of the map. The data panel contains the following information:

- AIS NAME**: SIMULG
- MMSI**: 100000006
- SOG Kts**: 3.2
- CPA Nm**: 0.5
- CALL SIGN**: SIMULG
- COG T**: 313°
- TCPA**: 00:00:00

Numbered callouts 1-7 point to the following elements:

- 1: The target icon on the map.
- 2: The AIS NAME field.
- 3: The SOG Kts field.
- 4: The CPA Nm field.
- 5: The CALL SIGN field.
- 6: The COG T field.
- 7: The TCPA field.

Figure 14.2 - Quick Info on AIS

NOTE

The selected AIS Target icon is surrounded by a square frame when user places the cursor over the icon.

14.3 AIS TARGET COLORS

The received AIS Targets are shown in color. The color depicts the type of AIS ship shown on the Chart page. Refer to following table.

TYPE OF SHIP	GRAPHICAL PRESENTATION
Undefined	▲ (yellow)
Fishing	△ (white)
Pleasure Craft	▲ (light green)
Tanker	▲ (dark blue)
Pilot Vessel	△ (light gray)
SAR	▲ (black)
Tug	△ (pale green)
Port tenders	▲ (brown)
Vessels with antipollution facilities or equipment	▲ (light blu)
Low enforcement vessels	▲ (light red)
Medical transport	▲ (dark green)
Vessels according to Resolution N° 18 (Mob-83)	▲ (cyan)
HSC	▲ (red)
Passenger ship	▲ (magenta)
Cargo ship	▲ (dark gray)

Figure 14.3 - AIS Targets Colors

14.4 AIS-SART

AIS-SART, AIS-MOB and AIS-EPIRB signals are all emergency signals sent out by different types of survivor locating devices.

When an AIS-SART, AIS-MOB or AIS-EPIRB signal is received, the GPS Chart Plotter will display and sound an alarm. The AIS-SART icons will be displayed on the chart depending on the current status of the emergency signal (see the following table).

ICON				
SIGNAL	SART AIS-MOB EPIRB } Active	SART AIS-MOB EPIRB } Test	SART AIS-MOB EPIRB } Active lost	SART AIS-MOB EPIRB } Test lost

Figure 14.4 - AIS-SART

14.4.0 AIS-SART Test Mode

The GPS Chart Plotter by default ignores test AIS-SART, AIS-MOB and AIS-EPIRB signals

in order to avoid a large number of alerts. However the GPS Chart Plotter can be enabled to receive test alerts (see Par. 14.1 “AIS Setup Menu”) if you want to test them.

14.5 AIS LIST

The AIS List page shows basic information of the Target ship with the ability to select a Target ship and locate it on the chart.

AIS Targets are sorted by distance from current GPS position: the closest Targets are displayed at the top of the list. AIS-SART, AIS-MOB and AIS-EPIRB objects are also listed on this page and are also sorted by distance.

NOTE

When the received Targets exceed the maximum limit allowed for the list, the closest Targets (which could be potentially the most dangerous) will be kept in memory and the farthest (potentially less dangerous) will be lost.

To select this page follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **AIS LIST** and press **[ENT]**.

AIS LIST				
NAME CALL SIGN	MMSI	IMO NUMBER	SOG Kts COG T	CPA Nm TCPA
SIMUL2 SIMUL2	100000002	100000005	3.0 49°	2.52 --:--:--
SIMUL5 SIMUL5	100000005	100000008	3.5 129°	2.75 --:--:--
SIMUL8 SIMUL8	100000008	100000011	2.6 23°	4.35 --:--:--
SIMUL7 SIMUL7	100000007	100000010	4.5 304°	4.82 --:--:--
SIMULO SIMULO	100000000	100000003	1.0 301°	*** --:--:--

EXPAND LOCATE

Figure 14.5 - AIS List page

3. Move the ShuttlePoint knob up or down to select the Target and scroll the page up or down. Press **[CLR]** exits the page and shows the Target ship on the Chart page along with the current position of the GPS Chart Plotter.

This page allows to:

LOCATE	Locates the selected AIS object on the Chart page
EXPAND	Opens the Enhanced AIS page with information related to the selected AIS object (see the following Par. 14.6).

14.6 ENHANCED AIS PAGE

The Enhanced AIS page contains all data related to the selected AIS object. The page shows data received from AIS sentences Class A Position Report, Class A Static & Voyage Data, Class B Reports or calculated by the software.

The Enhanced AIS page can be selected in two ways:

① **From the Chart page**

1. Place the cursor over a AIS Target icon using the ShuttlePoint knob.
2. Press **[ENT]** to select the Enhanced AIS Page with information related to the selected AIS object.

② **From the AIS List page**

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **AIS LIST** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **EXPAND** and press **[ENT]**.

AIS INFO							
MMSI		NAME			POSITION		
622121213		TAAWON 14			54°23.338N 019°23.612E		
CALL SIGN		IMO No.		STATUS		LAST SEEN	
SUSF		8316742		at anchor		08/16/13 01:10 AM	
SOG	COG	HDG	ROT	CPA	TCPA	DEST	ETA
10.5	90	89	3	15.6	00:55:46	PORT SAID	09/10/13 10:23 AM
TYPE	LENGTH	DRAUGHT	BEAM				
Tanker	220	5.6	33				

Figure 14.6 - Enhanced AIS page

The data contained in the Extended AIS page are:

- MMSI = MMSI number
- NAME = Name of ship (20 characters)
- POSITION = Latitude and Longitude
- CALL SIGN = Call Sign
- IMO No. = IMO number
- STATUS = AIS Navigation Status
- LAST SEEN = date and time of the last received updated for the selected object (MMSI number)
- SOG = Speed Over Ground
- COG = Course Over Ground
- HDG = True Heading
- ROT = Rate Of Turn
- CPA = Closest Point of Approach
- TCPA = Time to Closest Point of Approach
- DEST = Destination name (20 characters)
- ETA = Estimated Time of Arrival
- TYPE = Type of ship and cargo type
- LENGTH = Length of ship
- DRAUGHT = Maximun present static draught
- BEAM = Beam of ship

14.6.0 AIS Vessel Types

The types of vessel displayed in the Type data box are shown in the following table.

TYPE DATA BOX	TYPE OF SHIP	
Undefined	Reserved for future use	(1-38-39)
WIG	WIG	(20)
WIG-Hazard A	Hazardous category A	(21)
WIG-Hazard B	Hazardous category B	(22)
WIG-Hazard C	Hazardous category C	(23)
WIG-Hazard D	Hazardous category D	(24)
WIG	Reserved for future use	(25-28)
WIG	No additional information	(29)
Fishing	Fishing	(30)
Towing	Towing	(31)
Towing Long	Towing/length of the tow exc. 200m or breadth exc. 25m	(32)
Dredger	Engaged in dredging or underwater operations	(33)
Dive Vessel	Engaged in diving operations	(34)
Military Ops	Engaged in military operations	(35)
Sailing	Sailing	(36)
Pleasure Craft	Pleasure craft	(37)
HSC	HSC	(40)
HSC-Hazard A	Hazardous category A	(41)
HSC-Hazard B	Hazardous category B	(42)
HSC-Hazard C	Hazardous category C	(43)
HSC-Hazard D	Hazardous category D	(44)
HSC	Reserved for future use	(45-48)
HSC	No additional information	(49)
Pilot Vessel	Pilot vessel	(50)
SAR	Search and Rescue vessel	(51)
Tug	Tugs	(52)
Port Tender	Port Tenders	(53)
Anti-pollution	Vessel with anti-pollution facilities or equipment	(54)
Law Enforce	Law enforcement vessel	(55)
Undefined	Spare - for assignment to local vessels	(56-57)
Medical	Medical trans. (as defined in the 1949 Geneva Conventions and Additional Protocols)	(58)
Mob-18	Ship according to RR Resolution No.18 (Mob-18)	(59)
Passenger	Passenger ship	(60)
Passenger-Hazard A	Hazardous category A	(61)
Passenger-Hazard B	Hazardous category B	(62)
Passenger-Hazard C	Hazardous category C	(63)
Passenger-Hazard D	Hazardous category D	(64)
Passenger	Reserved for future use	(65-68)
Passenger	No additional information	(69)
Cargo	Cargo ships	(70)
Cargo-Hazard A	Hazardous category A	(71)
Cargo-Hazard B	Hazardous category A	(72)
Cargo-Hazard C	Hazardous category A	(73)
Cargo-Hazard D	Hazardous category A	(74)
Cargo	Reserved for future use	(75-78)
Cargo	No additional information	(79)
Tanker	Tanker(s)	(80)
Tanker-Hazard A	Hazardous category A	(81)
Tanker-Hazard B	Hazardous category A	(82)
Tanker-Hazard C	Hazardous category A	(83)
Tanker-Hazard D	Hazardous category A	(84)
Tanker	Reserved for future use	(85-88)
Tanker	No additional information	(89)
Other	Other types of ship	(90)
Other-Hazard A	Hazardous category A	(91)
Other-Hazard B	Hazardous category A	(92)
Other-Hazard C	Hazardous category A	(93)
Other-Hazard D	Hazardous category A	(94)
Other	Reserved for future use	(95-98)
Undefined	No additional information	(99)

Figure 14.6.0 - AIS Vessel Types

15. C-WEATHER SERVICE

C-Weather is a **free** service available on the CP190i. C-Weather service gives excellent coverage for the whole World. Weather forecasts are based on data received from the leading meteorological centres. This data is processed by Jeppesen server and made available via INTERNET connection to be transferred by using the C-MAP BY JEPPESEN PC-Planner Windows Application. Then the weather data can be saved into a User C-CARD to be loaded by the GPS Chart Plotter (see Par. 15.0.1).

Features: 5-day weather forecast updated every 6 hours; coverage of 180x180 Nm with information frequency of 0.5° Lat/Lon; Wind Direction and strength; wave height and direction; ground temperature; level of humidity; visibility in miles.

Data Type	Display
WIND (Speed & Dir)	- 0 →
WAVE Height & Dir	- 1 →
TEMPERATURE	18°
HUMIDITY (%)	30
VISIBILITY	20
WEATHER TYPE: Sun	
WEATHER TYPE: Rain	
WEATHER TYPE: Fog	
WEATHER TYPE: Snow	
WEATHER TYPE: Clouds	
WEATHER TYPE: Partly Cloudy	
WEATHER TYPE: Thunderstorm	

Figure 15 - Weather data package

15.0 C-WEATHER SERVICE MENU

To select the menu:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **C-WEATHER SERVICE** and press **[ENT]** or move the ShuttlePoint knob to the right.

The C-Weather menu is shown on the screen, the items are described in the following paragraphs.

15.0.0 Download


Allows to connect the software to the weather server and to download weather data directly via C-COM.

Select Country To Call : Allows the selection of the country to call. The whole telephone number set is automatically updated after every download.

SIM Pin : Allows inserting of the Pin of the SIM.

Download Area : Allows the weather download: a squared grey area, where the weather data will be downloaded, is centered on cursor position. See the following picture.

Area of coverage of downloaded data is located by default with its center on the cursor position

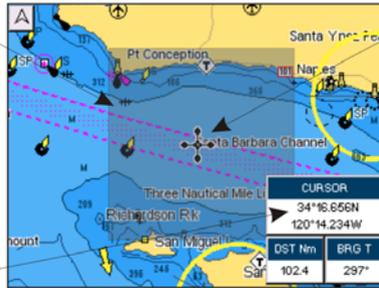

Cursor is locked to the gray area. Moving the cursor also moves the gray area allowing locating it over the area where the user wants to download the forecast.

Indicates the LAT/LON position of the cursor

Figure 15.0.0 - Example of Download Area

Press [ENT] to activate the C-Weather Download: the whole data package (see the previous "Weather data package" table) are downloaded. **[CLR]** allows to interrupt the data download. At the end of the operation press **[CLR]** to close the window.

15.0.1 Copy from User C-CARD

Allows the whole data package C-Weather loading from the User C-CARD.

15.0.2 Weather Forecast

Allows selecting the layer of specific weather data to be displayed on the screen and to change date and time of the forecast preview. The following functions are available:

- **Panning:** default usage of the cursor key is the normal panning function.
- **Zoom in/out:** zoom in/out functions are allowed as usual by using **[ZOOM IN]/[ZOOM OUT]**.
- **Set of date and time:** **[GOTO]** to modify date and time values.
- **Layer selection:** **[MENU]** to cycle of the weather layers.
- **Exit:** **[CLR]** to close the weather prediction page.

15.0.3 Real Time View

The following selections are available:

- **Real Time View On:** the data is shown (the area of the download) at the current date and time (received from the GPS).
- **Real Time View Off:** the Weather data is not displayed.

The layer displayed is the one selected into the previous menu item.

15.0.4 Type of Data

Allows selecting the type of data, refer to the table in the Figure 15.

16. MOBILARM

The MOBILARM is an automated crew monitoring system dedicated to monitoring onboard crew by maintaining a constant link between the crew member and the boat. When a man overboard event happens, an automatic alarm is sounded, and the vessels position is shown on the STANDARD HORIZON GPS Chart Plotter.

16.0 MOBILARM-GPS CHART PLOTTER CONNECTION

Connect the MOBILARM system to one of the Ports on the STANDARD HORIZON GPS Chart Plotter. Refer to Par. 2.4.0 "Connection Table" and MOBILARM Owner's Manuals for connections.

Connection Example

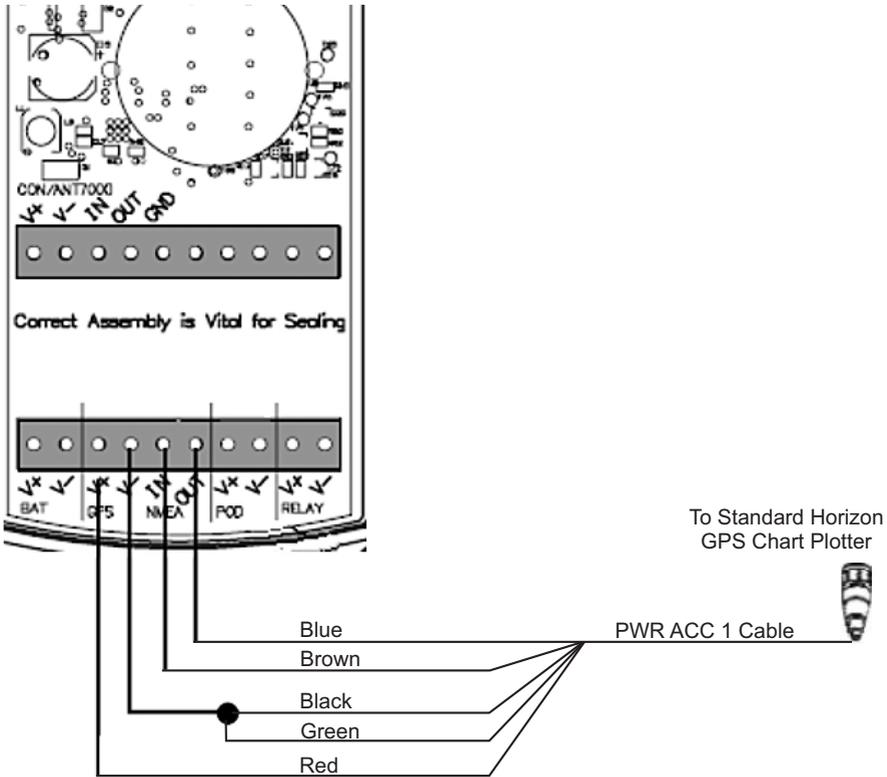


Figure 16.0 - Connection Example

NOTE

Note the CP190i has only one NMEA Input so Port1 will have to be set to MOBILARM.

Port1 Example

Chart Plotter	MOBILARM
Blue	NMEA Out
Brown	NMEA In
Red	GPS V+
Black	GPS V-

NOTE

Refer to the Figure 16.0, the Blue and Brown wires are from Port1. If these wires are being used to connect to another NMEA device, choose another wire pair and configure the port associated with the wires.

16.1 SOFTWARE SETUP

After the Port has been chosen and connected in Par. 16.0, the GPS Chart Plotter must be setup to communicate with the MOBILARM.

Use the steps below to set up the Port the MOBILARM is connected to the GPS Chart Plotter.

1. Select the Chart page.
2. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob to highlight any input port and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Move the ShuttlePoint knob up/down to select **MOBILARM** and press **[ENT]** or move the ShuttlePoint knob to the right. Selecting MOBILARM format, activates the function.
7. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

The GPS Chart Plotter continuously verifies the communication status with MOBILARM PTX (Personal Transponder) device. When a signal from the PTX is lost for more than one minute, the MOBILARM sends a NMEA message to the GPS Chart Plotter which will produce an alarm and a popup window will be shown on Standard Horizon GPS Chart Plotter.

16.2 MOBILARM STATUS

To confirm the status of the MOBILARM, select the About page:

1. Select the Chart page.
2. Press **[MENU]** two times. Move the ShuttlePoint knob to highlight **About...** and press **[ENT]**.

On the About page you can see the status of the MOBILARM, below are the possible messages.

- a. **Function not Activated** : MOBILARM has not been setup in the I/O Connections menu. Refer to Par. 16.1.
- b. **Not connected/detected** : possible wiring problem, confirm wires are correct con-

- c. **Connected** : the communication with MOBILARM device is Ok.
- d. **Signal Lost** : the MOBILARM has been connected in the past, however no signal is being detected from the MOBILARM. Check wire connections from the GPS Chart Plotter to the MOBILARM.
- e. **No valid GPS position** : the communication with MOBILARM device is Ok, but the GPS position fix is not received from the GPS Chart Plotter.

See the following example of About page:

1 MOBILARM status Information

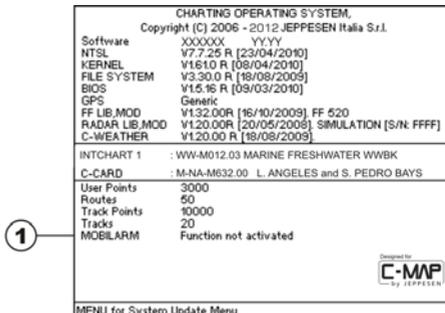


Figure 16.2 - Example of About page with MOBILARM information

16.3 MOBILARM PTX

A PTX is the Personal Transponder device that is worn by the crew. If a crew member falls in the water the MOBILARM sends a signal to the GPS Chart Plotter which creates and displays a PTX icon on the Chart page.

16.3.0 MOBILARM MOB alert is received

When crew member falls in the water, the MOBILARM sends a signal to the GPS Chart Plotter which creates and displays a PTX MOB icon on the Chart page.



Figure 16.3.0 - The PTX icon

On the GPS Chart Plotter all menus and/or pages are closed and the chart is centered on the PTX MOB received position. A Audible Alarm is heard and a popup warning window appears to notify that a PTX has been received:



Figure 16.3.0a - Example of PTX warning window

It is possible to Goto (navigate) to the received MOBILARM PTX position (see Par. 16.4.1) or open the MOBILARM Alarm Status List page (see Par. 16.4.2). Selecting Goto or Alarm Status List will mute the Audible Alarm.

NOTE

When the same PTX is received again:

- a. If the received PTX is not the active one, the user must confirm to navigate to it.
- b. If the received PTX is the active one, navigation data is updated. The PTX icon appears at the new position and a popup warning window appears.

16.4 PLACING CURSOR ON THE PTX ICON

Moving the ShuttlePoint knob so the cursor is over the PTX icon on the Chart page will show an information window and allow you to Goto the location of the PTX, delete the PTX icon or show the Alarm Status list as shown below.

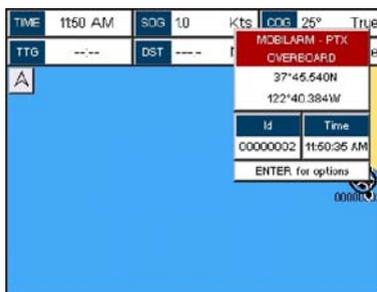


Figure 16.4 - Example of PTX information window

16.4.0 Delete PTX

The Delete PTX function permanently removes the selected PTX from the MOBILARM Alarm Status List and from the Chart page.

Using the ShuttlePoint knob, move the cursor over the PTX icon and then press **[ENT]**, select **DELETE** using the ShuttlePoint knob and press **[ENT]**. A warning popup window will be shown. Select **YES** and press **[ENT]**.

16.4.1 Goto PTX

When Goto is selected on the GPS Chart Plotter, navigation will start to the PTX icon location. After the GPS Chart Plotter has received a PTX MOB alarm, using the ShuttlePoint knob move the cursor over the PTX to navigate to and then press **[ENT]**, select **GOTO** using the ShuttlePoint knob and press **[ENT]**.



Figure 16.4.1 - Example of Goto PTX

If the navigation is set to the selected PTX icon, to terminate the navigation press **[ENT]**, select **STOP GOTO** using the ShuttlePoint knob and press **[ENT]**.



Figure 16.4.1a - Example of Stop Goto PTX

16.4.2 The MOBILARM Alarm Status List

The MOBILARM Alarm Status List shows the list of all PTX that the GPS Chart Plotter has received an alarm from. To review the page:

1. Select the Chart page.
2. Press **[MENU]** to show the Main menu.
3. Move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **MOBILARM** and press **[ENT]**.

This page allows you to:

GOTO	Activates navigation to the selected PTX. Once the navigation has been activated, close all menus/data pages (if open) and center the chart selected PTX.
DELETE	Deletes the selected PTX.
SHOW	Centres the chart on the selected PTX.
SHOW ALL	Selects the best chart scale to see all PTX icons on the chart at the same time.

17. TROUBLESHOOTING

The GPS Chart Plotter does not turn On. The voltage or the polarity may not be correct. Make sure that the correct voltage (10-35 volt dc) is present. Check also that the polarity is correct.

The GPS Chart Plotter does not get a GPS fix. The external WAAS GPS antenna may not be in an open sky position or the antenna cable may not be properly connected. Make sure that no metal obstacle (solar panel about the plotter) is placed around the chart plotter (or external antenna when connected) acting as a shield for the antenna and disconnect and connect again the antenna cable to the GPS Chart Plotter. If, after 15 minutes, the GPS Chart Plotter does not get the fix, turn it Off and On again.

The GPS Chart Plotter does not turn Off. The GPS Chart Plotter may be in an unpredictable status. If, after pressing [PWR] (for at least 3 seconds) the GPS Chart Plotter does not turn Off, turn Off the voltage.

The GPS Chart Plotter screen becomes very dark after a long exposure to direct sunlight. The internal temperature is very high. Protect the GPS Chart Plotter from direct sunlight.

The GPS Chart Plotter does not respond to any command. The GPS Chart Plotter may be in an unpredictable status. Try to turn Off, and then turn On. If the problem persists, reset the RAM or remove power from the battery.

The location of my fix is not shown correctly on the Chart page. Please report to C-MAP USA (800/424-2627) the Latitude & Longitude of your vessels position, the position where you think your vessels should be and details of the cartography such as "Compilation scale", "Notice to mariners" and "Horizontal datum" (which can be seen by selecting the Chart page, press [FIND], move the ShuttlePoint knob to **Data Source** and press [ENT]).

After storing the Chart Plotter over the winter, It takes a long time to receive a fix. This is usually caused by the internal rechargeable memory battery from becoming low which could cause the Internal RAM memory to become corrupted. To solve this issue, perform a RAM Clear (refer to Chapter 18).

NOTE

After performing a RAM Clear all Marks, Routes and tracks will be erased. To back up these points refer to Chapter 11 for details.

18. TECHNICAL TESTS

18.0 SYSTEM TEST

If you have connected your GPS Chart Plotter according to the instructions, and chosen the proper menu selection for your device, and are still having problems with your GPS Chart Plotter, the extended auto-test should help determine the problem. Make sure the GPS Chart Plotter is turned Off. While pressing and holding any other key, turn the GPS Chart Plotter On. A new menu will appear on the display:

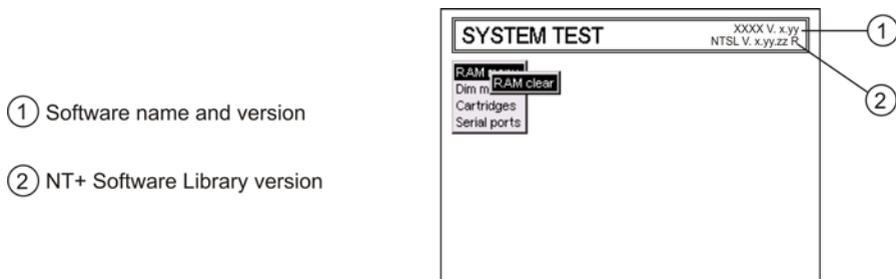


Figure 18.0 - System Test

Use the ShuttlePoint knob to select the desired test. Choose the test, press **[ENT]**. To exit from any submenu press **[CLR]**. To exit from the System Test turn Off the GPS Chart Plotter.

18.0.0 RAM Menu (reset)

This test verifies the integrity of the memories and if desired during this test all the internal Memory can be erased and the default setting restored.

RAM Clear

To clear internal memory. If the GPS Chart Plotter exhibits unusual operations, or appears to be malfunctioning, it may be possible to correct the problem by clearing RAM.

This operation will erase all Marks, Routes, stored Track plots and Destinations. It will also return all selections (Input Data Format, Autopilot selection, etc.) to original default values. To confirm clear RAM press **[ENT]** again (but if at this time you do not wish to clear RAM press **[CLR]**).

18.0.1 DIM Menu

To select the desired value for brightness and keypad light.

Contrast

Each time you move the ShuttlePoint knob to right, the screen will decrease brightness, move it to the left to increase brightness.

Backlight

The second option allows to set the backlight. Operates in similar mode as Contrast.

18.0.2 Cartridges

To check the C-CARD and its connector.

Internal Data Base Test

To test the World Wide background.

C-CARD Test

To test the C-CARD. There are the possible situations:

1. if there is a C-CARD inserted in the slot and there is not a malfunction, the name of the C-CARD zone and the message "OK" are shown.
2. if there is a C-CARD inserted in the slot, but it is a defective C-CARD, the name of the C-CARD zone and the message "Faulty" are shown.
3. if there is not any C-CARD inserted in the slot, the message "not present" is shown.
4. if there is a User C-CARD inserted in the slot, the message **USER C-CARD** is shown.

C-CARD Connector

Indicates if there is a malfunction in the connector.

18.0.3 Serial Ports

If you are having problems receiving data from the position-finding instrument, this test should help determine the problem.

Change Parameters

To change the parameters of the serial interface. This menu allows to select the **Port** (Signal Source) between PORT1, PORT2, PORT3; the **Baud Rate** between 300, 1200, 2400, 4800, 9600, 38400, 115200; the **Data Bits** (Word Length) between 7 or 8, the **Parity** between even, odd or none, the **Stop Bits** between 1 or 2. Default settings are: Port = PORT2, Baud Rate = 4800, Data Bits = 8, Parity = none, Stop Bits = 1.

Input Data Display

To allow the GPS Chart Plotter to act as a computer terminal and display the incoming data exactly as it is received.

If the data displayed on the screen are unrecognizable, you may have selected the wrong input parameters for your particular receiver, for example, Baud Rate 9600 instead of Baud Rate 4800. Check your receiver manual to be sure that you have selected the proper parameter. If the screen is blank, you may have a broken connection, and no data is being received or you may have connected the device to the other input port.

Use **[ZOOM IN]** to stop (or continue after pause) data displaying, **[ENT]** to show data in hex or ASCII mode (normal or small) and **[CLR]** to exit.

Loop-Back Test

This is a special test done during the production phase to check the serial ports integrity. This function is only required by STANDARD HORIZON.

19. SPECIFICATIONS

19.0 CP190i SPECIFICATIONS

Power Consumption Max Backlight	: CP190i = 0.5A @12VDC
Power supply	: 10-35 Volt DC
Interface	: Input/Output Interface NMEA-0183
Display	: TFT Color LCD (<i>active area 5"</i>) sunviewable technology
Display Resolution	: 320 x 232 pixels
Cartography	: C-MAP BY JEPPESEN NT⁺/MAX C-CARD
Operating Temperature range	: 32°F/+131°F (0°C/+55°C)
Storage Temperature	: -4°F/+158°F (-20°C/+70°C)
Water Resistance	: splash-proof
Memory	: Permanent
Keyboard	: Silicon rubber, backlight
Weight (without bracket)	: 1,655 lb (750 g)
User Points (Marks/Waypoints)	: 3000
Routes	: 50 (max 100 Waypoints each)
Track Points	: 10000 (recordable in 20 Tracks)
NMEA Output sentences	: GLL, VTG, BWC, WCV, APA, APB, HTG, BOD, XTE, RMA, RMB, RMC, GGA, HSC, DBT, DPT, MTW, VHW, WPL, RTE, GSA, GSV
NMEA Input sentences	: BWC, DSC, DSE, GGA, GLL, GSA, GSV, HDG, HDM, HDT, RMC, VHW, VTG, DPT, DBT, MTW, VWR, VWT, TLL, WPL, RTE

19.3 OPTIONAL WAAS GPS RECEIVER SPECIFICATIONS

This optional WAAS GPS Receiver is based on a ultimate GPS engine that delivers accuracy better than three meters by decoding the GPS correction signals from the satellite-based WAAS (*Wide Area Augmentation System*). The GPS engine, interface electronics and the passive antenna are enclosed inside the waterproof plastic housing. This provides advanced state of the art GPS performance in an easy to use package.

Physical Characteristics

Color	Ivory white
Dimensions	97mm in diameter x 32mm in height (flush mounted) or 61,5mm on flag-pole mount
Weight (without cable)	0,35 lb (160 g)
Cable	white 15 meter 8x28AWG cable with 6 pins female connector

Electrical Characteristics

Input Voltage	10 Vdc to 35 Vdc unregulated
Input Current	0.8 Wmax
GPS Receiver Sensitivity	Tracking, Navigation : -160 dBm Acquisition, Reacquisition : -160 dBm Cold Starts : -145 dBm

GPS Performance

GNSS Systems	GPS : L1 C/A GALILEO : L1 SBAS : WAAS (North America), EGNOS (Europe), MSAS (Asia), GAGAN (Indian)
Geodetic Datum	WGS84
Channels	32 + 18

Acquisition Time

Reacquisition	< 1 second
Hot Start	1 second
Warm Start	29 seconds
Cold Start	29 seconds

Accuracy

GPS	< 10ft
with SBAS	< 2.0m

NMEA Output

Messages	GGA, RMC, GSA, GSV, TXT
----------	-------------------------

20. APPENDIX: TERMS

AIS (*Automatic Identification System*): Improves the safety of navigation by assisting in the efficient operation of ship-to-ship location reporting and VTS applications.

AIS-EPIRB: EPIRB (*Emergency Position-Indicating Radio Beacon*) device with AIS transmitter.

AIS-MOB: Man Over Board Device (*Maritime Survivor Locating Device*) with AIS transmitter.

AIS-SART: SART (*Search And Rescue Transponder*) device with AIS transmitter.

ALT (*Altitude*): Shows the Altitude of the GPS antenna on the mean sea level. It is received from GPS, sentence GGA.

AWD (*Apparent Wind Direction*): Shows the Apparent Wind Direction when a external wind instrument with NMEA is connected.

AWS (*Apparent Wind Speed*): Shows the Apparent Wind Speed when a external wind instrument with NMEA is connected.

BRG (*Bearing*): The direction from your current position to a Destination point.

COG (*Course Over Ground*): The course your vessel is heading.

DATE: Shows the current date received by the GPS.

DEPTH AREAS: Sea areas included in the user selectable range of minimum and maximum depth limits. The sea area that is beyond the selected range is filled by an uniform white color, the sea area that is inside the selected range is filled by ordinary multicolor shading. The Spot Soundings and Depth Contours are displayed on the range only.

DPT (*Depth*): Shows the water depth when the optional FF525 50/200kHz Black Box Fish Finder or digital Depth Sounder is connected.

DRAUGHT: Depth of water the vessel draws. The definition of draught (or draft) of a ship's hull is the vertical distance between the waterline and the bottom of the hull (keel). Draught determines the minimum depth of water a ship or boat can safely navigate. On the Celestial page the "draught" window shows the height of the tidal water during a 24hr period of time. This height is dependant on the time of day selected using the ShuttlePoint knob.

DSC (*Digital Selective Calling*): Semi-automated method of establishing a VHF Radio Call. DSC had also been designated as part of the Global Maritime Distress and Safety System (GMDSS). It is planned that DSC will eventually replace aural watches on distress frequencies and will be used to announce routine and urgent maritime safety information broadcasts.

DST (*Distance*): The distance from your current position to a Destination point.

ETA: Estimated Time of Arrival

GPS Constellation: The Global Positioning System (GPS) is a space-based radio-navigation system consisting of a constellation of satellites and a network of ground stations used for monitoring and control. A minimum of 24 GPS satellites orbit the Earth at an altitude of approximately 11,000 miles providing users with accurate information on position, velocity and time anywhere in the world and in all weather conditions.

GPS2D: The GPS is receiving at least 2 valid satellites.

GPS3D: The GPS is receiving at least 3 valid satellites.

HDG (*Heading*): Shows heading from a external Flux Gate Compass when connected.

HDOP/VDOP (*Horizontal/Vertical Dilution of Precision*): Parameter indicating the precision of the positioning system (GPS). The smaller the HDOP/VDOP value, the more accurately the position fix is provided.

HEIGHT: The current Tide Height referred to the vertical cursor.

HEIGHT WATER: The maximum level of the Tide Height in 24 hours.

LOW WATER: The minimum level of the Tide Height in 24 hours.

PINGO: Mound of earth-covered ice found in the Arctic and subarctic that can reach up to 70m (230ft) in height and up to 600m (2,000ft) in diameter.

Position Request: Marine DSC VHF Function of transmitting a GPS position to another Marine DSC VHF. When the GPS Chart Plotter is connected to STANDARD HORIZON GPS the position of another vessel is shown on the Chart page.

SOG (*Speed Over Ground*): The speed your vessel is travelling at.

SPD (*Speed*): Shows the Speed Thru the Water when a Digital Speed Log is connected.

STR (*Steer*): Heading to steer to destination Waypoint.

TIME: Shows the current time received by the GPS.

TLOG (*Trip Log*): Shows the distance the vessel has travelled since the Trip Log was reset.

TWD (*True Wind Direction*): Shows the True Wind Direction when an external wind instrument with NMEA is connected.

TWS (*True Wind Speed*): Shows the True Wind Speed when an external wind instrument with NMEA is connected.

TTG (*Time To Go*): Shows time to go to reach a Destination point.

UNITS

Nm Nautical Mile (1Nm = 1.15SM or 1.85km)

SM Statute Mile (1SM = 0.87Nm or 1.61km)

km kilometer (1km = 0.62SM or 0.54Nm)

ft feet (1ft = 0.167fm or 0.305m)

ftm Fathom (1ftm = 6ft or 1.83m)

m meters (1m = 3.28ft or 0.55ftm)

kn knots (1kn = 1.15mph or 1.85km/h)

mph miles per hour (1mph = 0.87kn or 1.61km/h)

km/h kilometer per hour (1km/h = 0.54kn or 0.62mph)

VMG: It is the destination closing Velocity. The VMG is calculated using the current speed of the vessel (SOG) and the difference between the current vessel course and the bearing to the Destination.

WAAS 2D/3D: The GPS is receiving a 2D or 3D position and the correction from the WAAS satellite. WAAS consists of approximately 25 ground reference stations positioned across the United States that monitor GPS satellite data. Two master stations, located on either coast, collect data from the reference stations and create a GPS correction message. This correction accounts for GPS satellite orbit and clock drift plus signal delays caused by the atmosphere and ionosphere. The corrected differential message is then broadcast through one of two geostationary satellites, or satellites with a fixed position over the equator. The information is compatible with the basic GPS signal structure, which means any WAAS enabled GPS receiver can read the signal.

W-T (*Water Temperature*): Shows the sea water temperature when the FF525 50/200kHz Black Box Fish Finder or a digital Speed Log/Temp instrument with NMEA is connected.

XTE (*Cross Track Error*): The distance your vessel is off course (left or right) to a Destination point.

ANALYTICAL INDEX

2D 77
3D 77, 84

A

A-Scope 114
A-Z ASCENDING 57
About page 34, 105
Accessories 11
ACCURACY 68
Accuracy 115
ACQUIRING 86
Acquisition Time 115
Activation Range 96, 97
active Route 66
Active Target 96
ACTIVE TRACK 70
adjust the LCD backlight 28
Adjusting Time 29
Advanced Setup menu 91
Airmar 114
AIS 96, 116
AIS 38400 19, 91
AIS List 99
AIS menu 97
AIS Receiver 17, 19, 20, 91, 96
AIS SETUP 97
AIS Setup 19
AIS Symbols 97
AIS Target 98
AIS-EPIRB 11, 98, 116
AIS-MOB 11, 98, 116
AIS-SART 11, 98, 100, 116
Alarm 96
alarm 67
alarm beep 93
Alarm Report page 94
Alarm Status List 107, 108
Alarms 114
Alarms menu 93
ALT 76
Alternate Solution 93
Altitude 32, 76, 116
Anchor Alarm 93
antenna 16, 110, 115
APA 91, 113
APB 91, 113
Apparent Wind Direction 76, 116
Apparent Wind Speed 76, 116
Arrival Alarm 93
ASF1 31
ASF1/2 93
ASF2 31
Attention Areas 79
Audible Alarm 93, 106, 107
AUTO INFO 33

Auto Info 78, 95
Auto Position 95
AUTOMATIC CHECK 68
Automatic Identification System 96
Automatic Route Check 68
Autopilot 17, 18, 19, 20
AWD 76, 116
AWS 76, 116

B

back up 55
Backlight 25, 111
backlight 28, 113
Bathymetric 46, 80
BATTERY CONNECTIONS 20
Baud Rate 21, 112
BEAM 100
Bearing 26, 27, 34, 59, 87, 116
Bearing to Destination 76
Bearings 93
beep 32, 93
Black Box 11, 116, 117
Black Box Fish Finder 17, 21, 91
BOD 92, 113
bracket 12
Bracket installation 15
BRACKET MOUNTING 14
BRG 26, 59, 76, 87, 116
brightness 111
Built-In Charts 11, 24, 25
Buoys 78
Buoys and Beacons 79
BWC 86, 91, 113

C

C-CARD 24, 25, 26,
45, 51, 54, 72, 81, 94, 102, 103, 112
C-COM 91, 102
C-MAP Weather 11
C-Weather 91, 102
C-Weather Download 103
Cable 115
Calibration 93
camera icon 53
Canada 12
cartographic objects 78
CARTOGRAPHY 45
Cartography 113
Cartridges 112
CAUTION 5
Caution 26
Celestial 94
Celestial page 22, 84, 85
Chain 31, 92
Change Focus 75

Change Parameters	112
change the scale	24
Chart Boundaries	79, 81
CHART CONFIGURATIONS	83
Chart Datum	92
Chart Language	52
chart level	47
Chart Lock	79, 82
Chart Orientation Resolution	92
Chart page	26, 33, 74
Chart Scale	77
chart scale	24, 82
Chart selection menu	75
Chart Settings	81
Chart/Compass tape	22, 94
Chart/Fish Finder	22, 94
check the C-CARD	112
Chinese	31
Classic	31, 33
Cleaning	5
Clear Info	46
clear internal memory	111
clear RAM	111
Clear View	46
CLR	24
COG	69, 74, 76, 84, 87, 94, 96, 116
COG TIME LINE	34
Cold Start	115
COLOR	67, 70
Color	113, 115
Color AIS Targets	98, 101
Color LCD	113
colors	114
COMPASS ROSE	34
Compass Rose	11, 83
Compass Table	93
Compass Tape	84
Connection	104
CONNECTIONS	17, 20, 21
connector	112
Contrast	25, 28, 111
conventions	14, 24
COORDINATE SYSTEM	30
Coordinate System	30, 92
Coordinates	25, 43
Copy From User C-CARD	103
Course	94
Course Over Ground	69, 76, 87, 116
Course Up	28, 32
COURSE UP/NORTH UP	29, 32
CP190i	11, 91, 113, 114
CP190i Connection Table	18
CP190i Connections	18
CPA Alarm	96, 97
CPA Limit	96, 97
create a Route	64
CREATING A NEW MARK	55, 58
CREATING A ROUTE	62
CREATING AN OLYMPIC ROUTE	63
cross hair	26
Cross Track Error	76, 117
Current Date	77
Current Time	77
Currents	79
Currents Prediction	51
cursor	24, 25, 26, 27
Cursor Control	94
Cursor Mode	24, 27, 60, 77
CURSOR POSITION	34
CURSORSPEED	27, 33
Cursor Speed menu	27
Cursor Window	34
Customers	11
Customizing the Data Windows	76, 77
D	
dangerous objects	67, 68
dangerous Route leg	67
Dangerous Target	96
Danish	31
Data Bits	21, 112
Data Features	45
Data Safety Indicator	50, 82
Data Source	110
data window	26
data windows	25
DATE	116
Date	77, 94
DATE FORMAT	32, 89
Datum	92
Daylight Savings Time	29, 30, 32
DB9	21
DBT	86, 92, 113
decrease brightness	111
default setting	91
Default values	79
DELETE	57, 70, 73, 108
delete a Route	66
Delete PTX	107
Deleting a file	73
Deleting a Mark	56
DELETING A MOB	61
DELETING A ROUTE	66
Deleting a Track	70
Deleting a Waypoint	56
DEMO MODE	22, 23
Demo Mode	94
Depth	32, 76, 88, 114, 116
Depth Alarm	93
Depth Areas	80, 116
Depth Contours	116
DEPTH LIMIT	68
Depth Range Max	79, 80
Depth Range Min	79, 80
Depth Settings	80
Depth Sounder	20, 22, 86, 87, 116
Depth Sounding	80
DEPTH TREND	88, 100
Depths	46
destination	25
Detailed Port Plan	46

Detailed World Background	46
Diagrams	46, 53
Differential Correction Source	86
Diffusers	67, 79, 82
Digital Instruments	17
Digital Selective Calling	20, 88, 116
DIM Menu	111
DIMENSIONS	114
Dimensions	115
Direction	86
Display	97, 113
DISPLAY COLOR	31, 33
Display Mode	78
Display Mode settings	79
Display Resolution	113
DISTANCE	71
Distance	26, 32, 34, 59, 116
Distance to Destination	76
Distance Units	69
Distress Call	89, 90
Download Area	102
download weather	102
DPT	86, 92, 113, 116
DRAUGHT	100
Dredged Areas	67
DSC	11, 20, 68, 86, 88, 90, 95, 113, 116, 117
DSE	86, 113
DSI	50, 82
DST	26, 59, 76, 116
DST521	88
DST526	88
DTP	76
Dual chart	11
Dual Chart page	75
Dust cover	12
Dutch	31
Dynamic Currents	46
Dynamic Nav-Aids	46, 50
E	
EDIT	57, 67
Edit Route	63, 67
EDITING A MARK	55
EGNOS	86
English	31
Enhanced AIS	99, 100
Enhanced Mixing Levels	46
Enhanced Port Info	46, 54
ENT	24
EPIRB	97, 98, 116
Estimated Time of Arrival	77
ETA	77, 116
External bracket	12
external GPS antenna	14
Extra Large Coverage	45
F	
FA	117
Fathom	117
FCC	4

Feet	117
FF520	21
FF525	11, 17, 19, 21, 114, 116, 117
file	73
FIND	25, 57
Find	46
Find GPS Coordinates	43
Find Information	44
Find Lakes By Name	42
Find Lakes Information	40
Find Obstructions	39
Find Points Of Interest	42
Find Port	37
Find Port Services	37
FIND SERVICES	36
Find Tide Stations	38
Find User Points	43
Find Wrecks	39
Finnish	31
Fish Finder	11, 17, 21, 91, 116, 117
Fish Finder Full page	22
Fish Symbols	114
Fishing Facility	67
Fix	26
fix	77, 86, 106, 110
Flexi-Zoom	46, 47
Flow Control	22
Flush installation	15
Flush mount template	12, 15
FLUSH MOUNTING	15
Flush mounting	16
Flush mounting screws	12
Flux Gate Compass	86, 116
focus	75
forecast	102
FORMAT	72
French	31
Frequency	114
Ft	117
Full Info On Lakes	41
Full page Fish Finder	94
Full page Radar	94
fuse	12
G	
GENERAL SETUP . 27, 28, 29, 30, 31, 32, 83	
Geodetic Datum	115
German	31
Getting Started	25
GGA	86, 92, 113, 115, 116
GLL	86, 91, 113
GMDSS	89, 116
GNSS	115
GOTO	25, 74, 108
GOTO A ROUTE	65
GOTO menu	59
Goto PTX	108
GOTO ROUTE	66
GPS	11, 14, 17, 25, 26, 29, 52, 85, 106, 115, 116
GPS Setup menu	86

GPS Status	77, 94
GPS STATUS PAGE	85
GPS STATUS page	14
GPS Status page	16, 22, 26
GPS2D	86, 116
GPS3D	86, 116
Greek	31
ground temperature	102
Grounding	11
Grounding Alarm	46, 93
GSA	86, 92, 113, 115
GSV	86, 92, 113, 115
GX2100	96
GX2150	96

H

HDG	76, 86, 92, 113, 116
HDM	86, 113
HDOP	77, 117
HDT	86, 113
Heading	76, 96, 116, 117
HEIGHT WATER	117
Highway	94
Highway page	22, 84
Home Mode	24, 25, 27, 60, 77, 92
Horizontal Dilution of Precision	77
Hot Start	115
HSC	92, 113
HTG	113
humidity	102

I

I/O Connections menu	105
ICON	57
IN/OUT CONNECTIONS	105
increase brightness	111
Information	25, 44
Input	91
Input Current	115
Input Data Display	112
Input Voltage	115
Inputs	11
INSERTING A WAYPOINT	65
Inserting C-CARD	45
INSTALLATION	14
Installing the External GPS	17
Interface	113
Interfacing	89
Interference Rejection	114
INTERNAL GPS	14
internal GPS antenna	11
internal memory	111
Intertidal Areas	67
ISO Certification	45
Italian	31

J

Japanese	31
----------------	----

K

key	24, 32
Keyboard	113

KEYPAD BEEP	32
keypad light	111
kilometer	117
km	117
kn	117
knots	117

L

Lake CARD	40
Lakes By Name	25, 41
Lakes Information	25, 40
Land Areas	67
Land Elevation Values	79, 80
Land Elevations	46, 79, 80
Land Settings	80
LANGUAGE	32, 33
Language	52
Languages	31
Lat/Lon	34, 102
Lat/Lon Grid	79, 81
Latitude/Longitude	30, 43
Layer selection	103
LCD	28, 113
legend	14, 24
LENGTH	100
Light Sectors	79
Lights	78, 79
LINE COLOR	70
Loading a file	73
LOCATE	57
Loop-Back Test	112
Loran TD	92
Loran TDs	30
Lost Target	96
LOW WATER	117

M

m	117
Magnetic bearings	93
Magnetic Variation	93
Main Menu	24, 74
MAN OVER BOARD	61
MAP FUNCTIONS	47
Marine Settings	79
Mark	25, 55, 56, 57, 59, 60, 68
Marks	11, 21, 43, 55, 58, 62, 64, 72, 111, 113
Marks/Waypoints List	55, 58
MARKS/WPTS List	57
MAX	45, 47, 53, 72
MAX Lake CARD	40
Max Speed	76
Maximum Depth	114
MEASURE DISTANCE	33
Memory	111, 113
MENU	24
meter	117
Minimum Depth	114
Mixing Levels	79, 82
MMSI number	96
MOB	25, 61, 68, 97, 98, 106, 108, 116

MOBILARM	20, 104, 105, 107, 108
Mobilarm	91
MODE	57
Mooring/Warping Facility	67
MOUNTING	14, 16
mounting bracket	14
Mounting knob	12
Mounting Screws	16
mounting template	17
Moving a Mark	56
Moving a Waypoint	56
MPH	117
MTW	86, 92, 113
Multilanguage Support	46

N

Name Tags	79
name the Route	63, 64
Nautical Mile	117
Nav Aids & Light Sectors	79
NAV AIDS PRESENTATION	33
Navigate Menu	92
Navigating a Route	95
navigating to the MOB	61
Navigation	94
Navigation page	22, 33, 83
Navigation Speed	86
NEW MARK	57
Night	31, 33
night vision	31
Nm	117
NMEA	17, 21, 22, 67, 91, 94, 116
NMEA CONNECTIONS	20
NMEA Data page	22, 87
NMEA Display	22, 87, 88
NMEA Input	104, 113
NMEA Output	88, 113, 115
NMEA sentences	86, 87, 91
NMEA Trend pages	88
NMEA-0183	86, 89, 91, 96, 113
NOAA	31, 33, 46
Normal	31, 33
North Up	28, 32
Norwegian	31

O

Object Info	46
Obstruction icons Table	39
Obstructions	25, 39, 67, 79, 82
Off-line redraw	46
Official data source	45
Olympic Route	63, 64
Open Array	13
OPTIONAL ACCESSORIES	12
Ouput	91
Outputs	11
Over-Zoom	48

P

Packing List	12
PAGES	74
Pair	31, 92

pan	74
Panning	103
Parity	21, 112
PC	21, 67
PC COM settings	21
PC-Planner	102
Personal Computer	20
Personal Transponder	106
Perspective View	46, 49
Photos	46
Physical Characteristics	115
Pictures	53
Pin	102
PINGO	117
Pingos	67
Place Names	79
PLACING A MOB	61
Points Of Interest	25, 42, 79, 80
Port	37, 112
Port Areas	54
Port Info	46, 54
Port Marinas	54
Port Services	25, 36
Port1	18, 19, 91, 105
Port2	18, 19, 91
Port3	18, 91
Ports	25
Ports & Services	79, 80
Portuguese	31
Position Report	11
Position Request	89, 95, 117
Power boat	11
Power Connection	18
Power Consumption	113
Power Data Cable	12, 18
Power On	25
Power Output	114
Power supply	17, 113
Presentation Features	46
Production Installation	67
PTX	106, 107
PWR	25

Q

Quick Info	46
Quick Info on AIS	97
Quick Info On Lakes	40
Quick Reference Guide	12
quick zoom	24

R

Radar	12, 16, 20, 21, 78, 91
Radar Junction Box	21
Radar page	22
Radio Call Sign	96
Radome antenna	13
RAM Clear	110, 111
Reacquisition	115
Real Time View	103
RECEIVE	57, 67
Receiver	115

REFRESH	73	slot	45, 73, 112
replacements parts	11	Sm	117
reset the Track	70	Smart GPS Cable	17
reset the Trip Log	71	SOG	11, 74, 76, 94, 100, 117
Resolution	113	SOG TREND	88
Restart GPS	86	SORT	57
Reverses the Route	67	Spanish	31
RMA	92, 113	SPD	76, 117
RMB	92, 113	SPECIFICATIONS	113, 115
RMC	86, 92, 113, 115	SPEED	117
Roads	46, 79, 80	Speed	32, 69, 76, 88, 94, 114
Rocks	67, 79, 82	Speed Filter	11, 86
Route . 25, 55, 59, 60, 63, 64, 66, 67, 68, 95		Speed Log	20, 86
Route Check	46, 67, 68	Speed Over Ground	76, 100, 117
Route Report	63, 67	splash-proof	113
ROUTE WIDTH	68	Spot Soundings	46, 116
Routes	11, 21, 62, 72, 111, 113	start a new Track	70
RS232	17, 91	Start-Up	22, 25, 94
RTE	21, 22, 67, 86, 113	starting a new Track	70
Russian	31	Static Navigation	92
S		Statute Mile	117
safe navigation	67, 84	STC	114
safety of navigation	96	Steer	117
Safety Route Check	46	Steering	76
Safety Status Bar	46, 50	STEP UNIT	71
Sail boat	11	Stop Bits	22, 112
SART	98, 116	Stop Goto PTX	108
Satellite	51	stop navigation	25, 60
satellite	26, 29, 85, 115, 116	STR	76, 117
Satellite Imagery	51	Sunlight	31, 33
save the file	73	sunlight	110
saving a Track	70	sunlight-readable display	11
Scale	77	surface	5
screen	5	Swedish	31
Seabed Type	79, 80	System Test	111
Search & Find	46	T	
SELECT	67	Target	96
Select Country	102	TCPA Alarm	96, 97
selection speed	27	TCPA Limit	96, 97
SEND	57, 67	TD	30, 92
Serial DB9 connector	21	Technical support	11
Serial Ports	112	TECHNICAL TESTS	111
Setup Menu	86	Temp	77, 86, 88
Setup Menu Mode	24	TEMP TREND	88
Shallow Water	67, 114	Temperature	32, 113, 114
SHIP ICON	28, 33	template	12, 15, 16, 17
Ship Icon	11, 34	TERMS	116
ship icon	27	terrestrial features	80
Shoreline Constructions	67	test the C-CARD	112
SHOW	108	TFT	113
SHOW ALL	108	THICKNESS	67
ShuttlePoint knob	24	Tidal stream	51, 79
SI-TEX	12, 91	Tide	51, 117
Signal Source	112	Tide draught	38
Signals	79	Tide Graph page	38
SIM Pin	102	Tide height	38
Simulation Menu	23, 94	Tide Stations	25, 37, 78
Simulation Mode	94	Tides & Currents	79
Single Chart page	75	Tides Preview	46
Sleeping Target	96	TIME	71, 117

Time	77, 94
Time Difference	92
Time Format	32
TIME SETUP	29, 30, 32
Time To Go	76, 117
Time Units	69
Time Zone	29, 32
TLL	86, 113
TLOG	71, 77, 117
Towers	78
Track	11, 69, 70, 74, 111, 113
Tracks & Routes	79, 80
transducer	88, 114
Trend	88
Trip Log	71, 77, 114, 117
TROUBLESHOOTING	110
True Wind Direction	76, 117
True Wind Speed	76, 117
True-Type Font	46
TTG	76, 117
TWD	76, 117
TWS	76
TXT	115
Type of Data	103

U

Underwater Ob. Limit	79
Underwater Object Limit	82
UNITS	32, 117
Units of Measure	32, 71
Universal Time Coordinates	29
USA	12, 20, 72
User C-CARD	72, 102, 103, 112
USER POINTS	89, 108
User Points	21, 25, 43, 55, 57, 58, 73, 113
UTC	29
UTM	30, 92

V

VAD	81
Value Added Data	79, 81
Variation	93
VDM	96
VDOP	77, 117
Velocity Made Good	77
Vertical Dilution of Precision	77
VHF 11, 17, 19, 20, 22, 87, 88, 96, 116, 117	
VHW	86, 92, 113
VIEW ON CHART	95
visibility	102
VISIBLE	70
VMD	19

VMG	77, 117
voltage	110
VTG	86, 91, 113
VWR	86, 113
VWT	86, 113

W

WARRANTY	125
W-T	117
WAAS	77, 85, 110, 115
WAAS 2D/3D	117
WAAS GPS	11, 16, 17
Warm Start	115
WARNING	4
Warning window	60
Warranty	11
Water Resistance	113
Water Temperature	69, 77, 117
Waterproof	11
wave height	102
Waypoint	25, 56, 57, 60, 68
Waypoints	43, 55, 58, 62, 65, 67, 113
WCV	91, 113
Weather	11
weather	102
Weight	113, 115
WGS84	92
White Line	114
Wind Direction	102
Wind Instrument	20
Wind Speed	86
WIND SPEED TREND	88
Wind trend	88
Window Selections	76
WINDOW SETUP	83
WINDOWS SETUP	33
World Wide background	24, 112
WPL	21, 22, 86, 113
Wreck icons Table	38
Wrecks	25, 38, 67, 78, 79, 82

X

XTE	76, 92, 113, 117
XTE Alarm	93

Z

Z-A DESCENDING	57
Zoom	114
zoom	24, 74
ZOOM IN	24
Zoom in/out	103
ZOOM OUT	24
Zoom Type	47

PLEASE NOTE

The following "Limited Warranty" is for customers that have purchased products in the United States. For Limited Warranty details outside the United States, contact the dealer in your country.

STANDARD HORIZON LIMITED WARRANTY

STANDARD HORIZON (the Marine Division of YAESU USA) warrants, to the original purchaser only, each new Marine Product ("Product") manufactured and/or supplied by STANDARD HORIZON against defects in materials and workmanship under normal use and service for a period of 3 years from the date of purchase.

In the event of a defect, malfunction or failure of the Product during the warranty period, STANDARD HORIZON's liability for any breach of contract or any breach of express or implied warranties in connection with the sale of Products shall be limited solely to repair or replacement, at its option, of the Product or part(s) therein which, upon examination by STANDARD HORIZON, appear to be defective or not up to factory specifications. STANDARD HORIZON may, at its option, repair or replace parts or subassemblies with new or reconditioned parts and subassemblies.

To receive warranty service, the purchaser must deliver the Product, transportation and Insurance prepaid, to STANDARD HORIZON (Marine Division of YAESU USA) - Attention Factory Service - 6125 Phyllis Drive- Cypress, CA 90630, include proof of purchase indicating model, serial number and date of purchase.

STANDARD HORIZON will not warrant installation, maintenance or service of the Products. In all instances, STANDARD HORIZON's liability for damages shall not exceed the purchase price of the defective Product. This warranty only extends to Products sold within the 50 States of the United States of America and the District of Columbia.

STANDARD HORIZON will pay all labor and replacement parts charges incurred in providing the warranty repair service except where purchaser abuse or other qualifying exceptions exist. The purchaser must pay any transportation expenses incurred in returning the Product to STANDARD HORIZON for service.

This limited warranty does not extend to any Product which has been subjected to misuse, neglect, accident, incorrect wiring by anyone other than STANDARD HORIZON, improper installation, or subjected to use in violation of instructions furnished by STANDARD HORIZON, nor does this warranty extend to Products on which the serial number has been removed, defaced, or changed. STANDARD HORIZON cannot be responsible in any way for ancillary equipment not furnished by STANDARD HORIZON which is attached to or used in connection with Products, or for the operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. STANDARD HORIZON disclaims liability for range, coverage, or operation of the Product and ancillary equipment as a whole under this warranty.

STANDARD HORIZON reserves the right to make changes or improvements in Products, during subsequent production, without incurring the obligation to install such changes or improvements on previously manufactured Products. The implied warranties which the law imposes on the sale of this Product are expressly LIMITED, in duration, to the time period specified above. STANDARD HORIZON shall not be liable under any circumstances for consequential damages resulting from the use and operation of this Product, or from the breach of this LIMITED WARRANTY, any implied warranties, or any contract with STANDARD HORIZON. IN CONNECTION WITH THE SALE OF ITS PRODUCTS, STANDARD HORIZON MAKES NO WARRANTIES, EXPRESS OR IMPLIED AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXCEPT AS EXPRESSLY SET FORTH HEREIN.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how an implied warranty lasts, so the above limitation or exclusions may not apply. This warranty gives specific legal right, and there may be other right which may vary from state to state.