CHARGING STATION



Product NO.: DR-8012

Packaging: Box Color: White

For use with Wii™





PRODUCT FEATURES

- Manual included
- Single charging station
- Charge from any USB port
- Rechargeable battery pack included

•1 rechargeable battery pack included

- Charge 1 remote (not included)
- Store 1 remote (not included)
- Manual Included

■ • 1 pack batterie rechargeable inclus

- Recharger 1 télécommande (non compris)
- Rangement pour 1 télécommande (non compris)
- Manuel anglais inclus
- 1 oplaadbare batterij ingesloten
 - Opladen van 1 afstandsbediening (niet meegeleverd)
 - Opbergmogelijkheid voor 1 afstandsbediening (niet meegeleverd)
 - Engelse handleiding ingesloten



* Wii™ remote not included

PACKAGE INFORMATION:

Product description	EAN-Code	Category		Quantity &	& Size: LxWxH (mm)	Weight _(kg)
DR-8012 Wii CHARGING STATION	8716392004084	Wii™	Single	1 PCS	95 X 180 X 60 (mm)	0.168
			Inner	10 PCS	625 X 112 X 230 (mm)	2.03
			Master	40 PCS	645 X 250 X 490 (mm)	9.02





DR-8012 Wii Charging Station User Manual

The Charging Station provides a convenient and impressive way to charge your remote.

Set Up

- 1. Plug the USB Cable of the Charging Station into your console.
- 2. Replace your remote batteries and battery cover with the included rechargeable battery pack.
- 3. Place your remote into the slot. RED glowing LED colour lets you know that your remote is charging.
- 4. When the LED colour turns GREEN your remote is fully charged and ready for use.
- 5. The battery pack will only charge when the Wii™ console is powered on.

Rechargeable battery pack note: Battery pack features a small "sync" hole for syncing your remotes to your console without removing the cover.

For support and questions please contact us using the following e-mail address: support@draxter.net