 


What is in Your Box

- Handset
- Travel Charger
- Earphone
- User Manual
- 2 GB SD card
- Battery
- Micro USB data Cable
- Warranty card
- Quick Start Guide

Phone at a Glance

Note: All the pictures in this guide are for your reference only. The actual appearance and display features depend on the mobile phone you purchase.

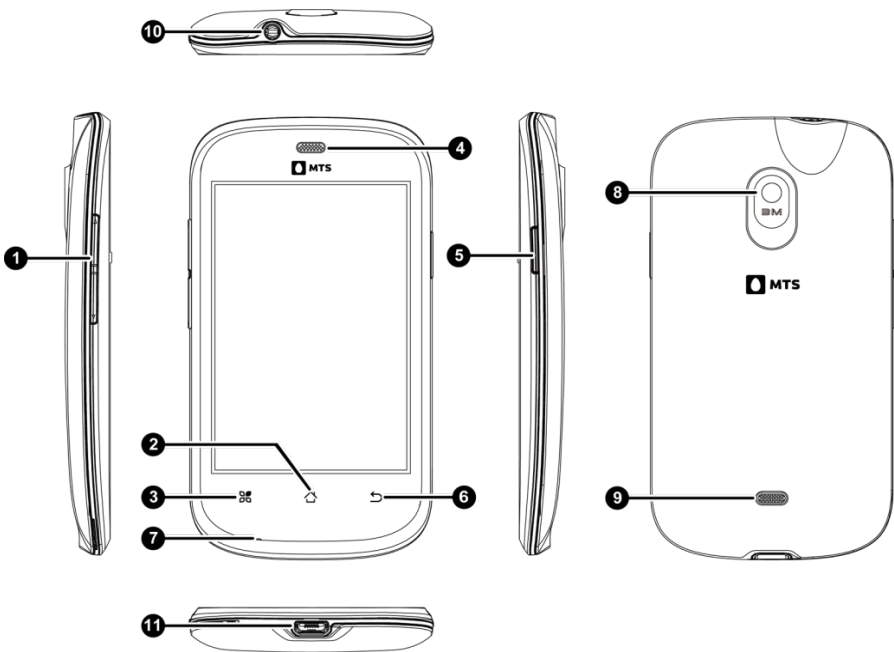


- | | | | |
|---|---------------------|----|-----------------------|
| 1 | Volume control keys | 2 | Home key |
| 3 | Menu key | 4 | Earpiece |
| 5 | Power key | 6 | Back key |
| 7 | Microphone | 8 | Camera |
| 9 | Loudspeaker | 10 | 3.5 inch Headset jack |

Key Functions at Your Fingertips


Key	Functionality
Menu Key	Tap for the menu to pop up at the functionality interface
Home Key	Tap to go back to the functionality interface from the application interface
Back Key	Tap to go back to the previous interface
Volume Key	Adjust call, ringtone, music and video volumes
Power Key	When the backlight is on, press the button shortly to turn off the backlight. Press and hold the key to select from: Power Off; Airplane Mode or Mute Mode. While the device is asleep, press the Power Key to wake it up.

Before getting started

 
- 1、 removing battery cover

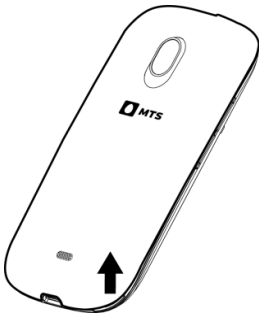


- 2 Installing micro SD card

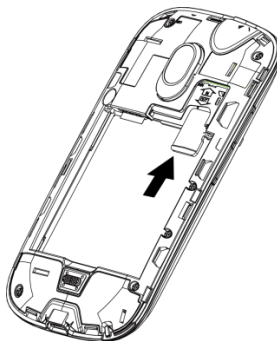 


3 Installing UIM card

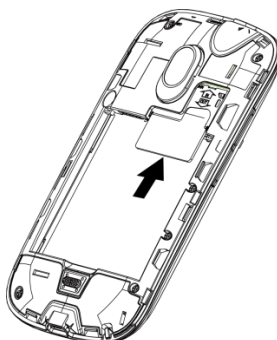 

4 Installing battery

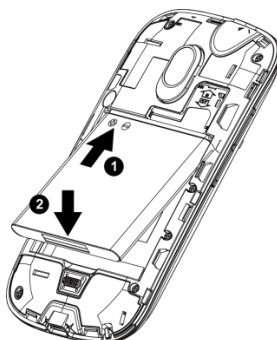 


5 Installing battery cover

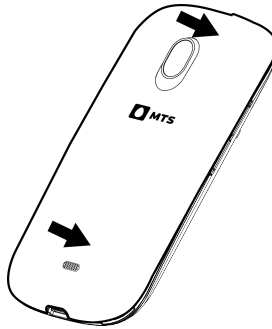 

*micro SD card is optional

 Charging the Battery

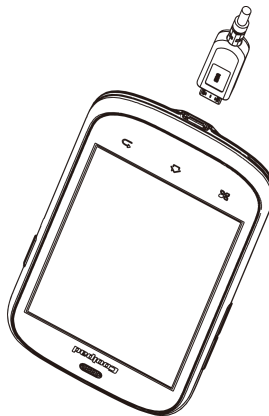

If your mobile phone is charged when it is powered on, the battery icon on the Notification bar shows the charging status. When the battery icon changes to , it indicates that your mobile phone is fully charged.

Powering On Your Mobile Phone

Press Power Key. The first time you power on your phone, you will be asked to sign in to your account and set up your mobile phone.

Powering Off Your Mobile Phone

1. Press and hold Power Key to open the **Phone options** menu.
2. Touch **Power off**.
3. Touch **OK**.

Extending the Battery Life

Active applications, screen brightness levels, Bluetooth and WLAN usage and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn Bluetooth off when not in use.
- Turn WLAN off when not in use.
- Turn off the data service when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

Using the Touch screen

Touch screen Actions

- **Touch:** Use the touch of your finger to select an item, confirm a selection, or start an application.
- **Touch and hold:** Touch an item with your finger and continue to press down until your mobile phone responds. For example, to open the options menu for the active screen, touch the screen and hold down until the menu appears.
- **Flick:** Move your finger either vertically or horizontally across the screen.
- **Drag:** Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.

 
Home Screen

Notifications bar:

Displays the reminders
and status icons of your
phone. Flick down to open
the notifications panel.

Display area:

Shows the operation
and display areas of
your phone.

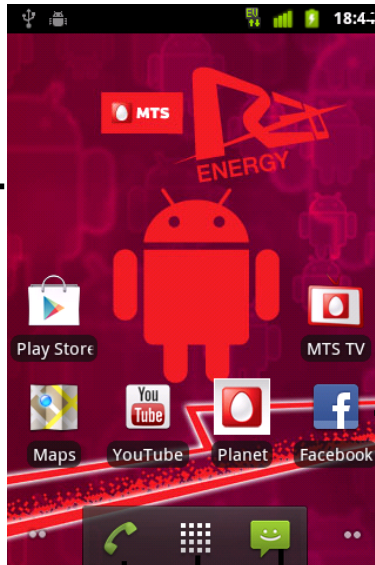

Application shortcuts

Touch to enter Dial

Touch to message

Touch to view all your
applications.

 
Touch and hold one of the shortcuts until the mobile phone vibrates, you can drag it to your desired location or move it to the trash. You can also drag a screen item to the shortcut position.

Locking the Screen

- When your phone is on, press Power Key to lock the screen. When the screen is locked, you can still receive messages and calls.
- If your phone is idle for a while, the screen will lock automatically.

Unlocking the Screen

1. Press Power Key to wake up the screen.
2. Drag the lock icon from left to right to unlock the screen.

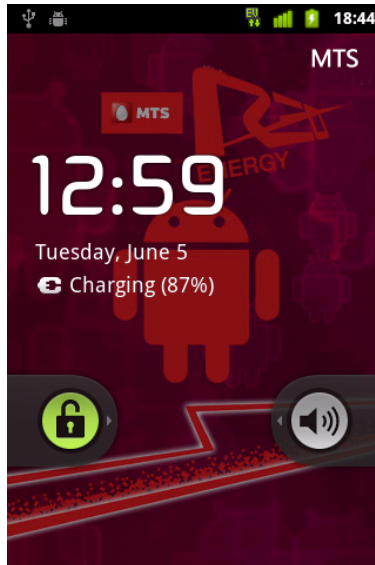

Adding a New Screen Item

1. Touch and hold a blank area on the Home screen until the Add to Home screen menu is displayed.
2. Select an item to add it to the Home screen.

Importing Contacts from a UIM Card

Touch MENU > Batch Act > Batch Copy, and select “Copy XXX to XXX”, then the system enters the screen of selecting specific phone No., select the phone No. you want to copy and touch OK.

Adding a Contact

1. In the contact list, touch Add.
2. If you have more than one account with contacts, touch the account to which you want to add the contact.
3. Enter the contact's name, and then add detailed information such as phone number or address.
4. When you are finished, touch Save to save the contact information.

Making a Call

To make a call, you can use the **Dial** application, or select a number from **Contacts** or **Call log**.

When you are on a call, you can press  to return to the Home screen and use other functions. To return to the calling screen, flick the notification bar down and touch **Current call**.

 
Do not block the microphone at the bottom of your phone if you want your voice heard.

Making a Call with the Phone Application

1. Touch  > Dial to display the dial.
2. Touch the appropriate numeric keys to enter the phone number.
3. Touch  to initiate the call.


Answering an Incoming Call

Drag the green button to right to answer the call.

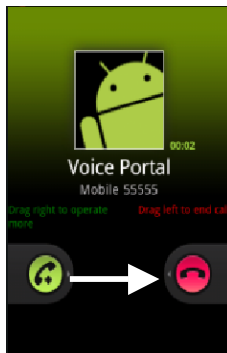

Rejecting an Incoming Call

 
Drag the red button to the left to reject the call.

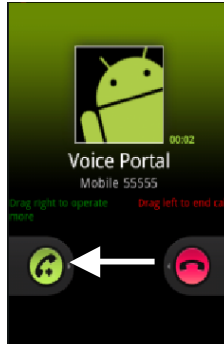

Ending a Call

During a call, touch **End** to hang up.

Reject by message

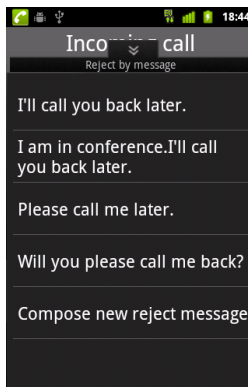

If you want to reject the incoming call, you can touch the reject by message, Select the information you need to respond, the system will automatically send.

Displaying the Keyboard Panel

To enter text, use the onscreen keyboard. Some applications open the keyboard automatically. In others, touch a text field to open the keyboard.

Touch the space where you want to write text to display the keyboard.

Touch  to hide the keyboard.

Touch and hold the space where you usually write your text to open the options menu.

Choosing an Input Method

1. Touch and hold the space where you enter your text until the **Edit text** menu is displayed.

2. Touch **Input method**.

3. Select the input method.

The keyboard panel will be displayed automatically.

Creating and Sending a Text Message

1. Touch  > **Messages** > **New message**

2. Enter a phone number in the **To** field.

As you enter the phone number, matching contacts appear. You can touch a suggested recipient or continue entering the phone number.

3. Touch the composition text box to start entering your message.

4. Once you are done, touch **Send**.

The message list opens, and your name appears in the list, followed by the message you just sent. Responses appear in the window. As you view and send additional messages, a message thread is created.

Getting Connected

Turning on the Data Service

Drag down the Notification bar to turn on Network.

Turning On WLAN

1. Touch  > **Settings**.

2. Touch **Wireless & networks**, and then select the **WLAN** check box to turn on WLAN.

Connecting to a Wireless Network

1. After turning on WLAN, touch  > **Settings**.

2. Touch **Wireless & networks** > **WLAN settings**. You will see a list of detected WLAN networks in the **WLAN networks** section.

3. Touch a WLAN network to connect to it.

Turning Bluetooth on or off

1. Touch  > **Settings**.
2. Touch **Wireless & networks**.
3. Check or uncheck **Bluetooth** to turn it on or off.

Pairing with a Bluetooth device

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Bluetooth settings**. You will see a list of detected Bluetooth enabled devices in the **Bluetooth devices** section.
3. Touch the ID of a Bluetooth device to pair with it.

Sharing Your Phone's Data Connection via USB

To use USB tethering in different operating systems, you may need to prepare your computer to establish a network connection via USB.

You cannot share your mobile phone's data connection and SD card via USB at the same time.

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Tethering & portable hotspot**.
3. Select the **USB tethering** check box to share your data connection.

Sharing Your Phone's Data Connection as a Portable WLAN Hotspot

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Tethering & portable hotspot**.
3. Select the **Portable WLAN hotspot** check box to share your data connection.

Opening the Browser

Touch  > **Browser** to open the home page.

When the known or open WLAN networks and the mobile networks are present at the same time, your phone will preferably select a WLAN network for internet access.

Using Your Phone as Modem to connect your PC to Internet On Windows XP

1. Click **Start->Control Panel->Network Connections**.
2. Click "**Create a New Connection**" under "**Network Tasks**" on the left side of the window. Click "**Next**" in the window that appears.
3. Select "**Connect to the Internet**" and then click "**Next**".
4. Select "**Set up my connection manually**" and then click "**Next**".
5. Select "**Connect using a dial-up modem**" and then click "**Next**".
6. If prompted to select Modem, select "**Coolpad Mobile USB Modem Phone**". And click "**Next**".
7. In the ISP Name field, type a name to identify your connection. Click "**Next**".
8. In the Phone number field, enter "**#777**". Click "**Next**".
9. Enter Username as "**internet@internet.mtsindia.in**" and password "**esn**".
10. Select the appropriate other options and click "**Next**".
11. Click "**Finish**".

On Windows Vista/Windows 7

1. Click the blue Windows logo at the bottom of the screen, then click "**Control Panel**".
2. Open "**Network and Sharing Center**" If you do not see this icon, click "**Classic View**" in Windows Vista. In Windows 7, click the "**View by:**" drop-down menu and select "**Small icons**".
3. Click "**Set up a connection or network**" on the left side of the window. Select "**Set up a dial-up connection**" and then click "**Next**".
4. If prompted to select Modem, select "**Coolpad Mobile USB Modem Phone**". And click "**Next**".
5. In **Dial-up phone number** enter **#777**. Enter Username as "**internet@internet.mtsindia.in**" and password as "**esn**".
6. Type a name in the "**Connection Name**" box that will help you remember which connection this is.

7. Click the "**Connect**" button to connect to the Internet and save the connection. You can connect to it in the future by clicking the Windows logo at the bottom of the screen, and then clicking "**Connect To**".

Using the micro SD Card as USB Mass Storage

1. Connect your mobile phone to your PC with the USB cable. Your PC will detect the micro SD card as a removable disk.
2. Open the notification bar, and then touch **USB connected**.
3. Touch **Turn on USB storage** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.

Disconnecting your phone from the computer

Warning! Carefully follow your computer's instructions to unmount the USB storage or SD card and disconnect USB devices correctly to avoid losing information.

1. **Unmount** the USB storage or SD card on your computer.
2. Open the Notifications panel and touch **Turn off USB storage**.
3. Touch **Turn off USB storage** in the screen that opens.

Managing Your Mobile Phone

To configure your mobile phone, touch  > **Settings**.

Changing the Phone Ringtone

On the **Settings** screen, touch **Sound > Profile > Select your desired profile > Ringtone**

Changing the Message Ringtone

On the **Settings** screen, touch **Sound > Profile > Select your desired profile > Msg. tone**

Changing the Wallpaper

1. On the Home screen, touch  > **Wallpaper**.
2. Touch the following menu items to select a picture and set it as the wallpaper:
 - **Gallery**

- **Live wallpapers**

- **Wallpapers**

 
Taking Photos and Recording Videos

The camera is a combination of camera and camcorder that you can use to shoot and share pictures and videos.

Opening Your Camera

- Touch  > **Camera** to open the camera. The camera opens in landscape mode, ready to take a picture or record a video.
- Touch  to close the camera.

Capture Screen

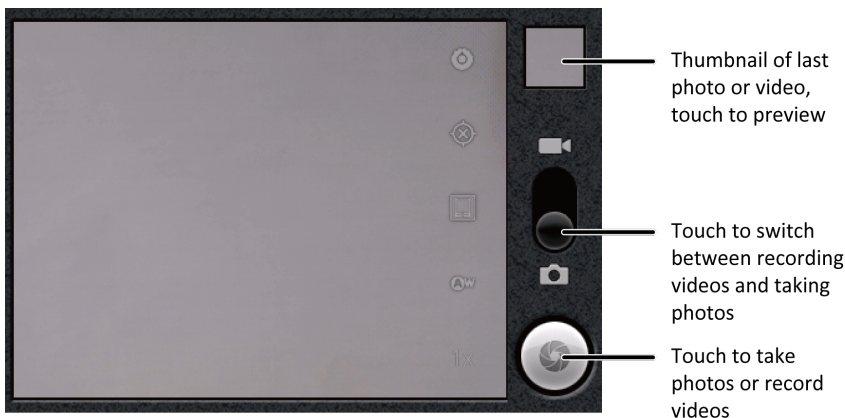

Taking a Photo

1. Open your camera and switch to the camera mode.
2. If necessary, change the camera settings. The preview changes as you change the settings.
3. Compose your photo within the photo capture screen.
4. Touch and hold then release  to take your photo.

The photo you just took is displayed for a moment. You can take another photo or preview your photos.

Recording a Video

1. Open the camera, and then switch to camcorder mode.

2. If necessary, change the camcorder settings.
3. Frame the scene which you want to start your video.
4. Touch  to start recording a video.

5. Touch  to stop recording.

Enjoying Music

Before you using music player, you must copy music files from your computer to the micro SD card.

Once you have done this, the player will search for music on the micro SD card. After the search is complete, you will be able to view all available music files in the music library.

Playing Music

1. Touch a category on the music library screen.
2. Touch the song you want to play.

Using Market

Android™ Market provides direct access to applications and games which you can download and install on your phone.

Installing an Application

If you want to install a non-Market application, touch  >

Settings >Applications, and then select the **Unknown sources** check box to allow installation of the non-Market application.

1. In the **Market**, touch **Apps**.
2. Touch a category, and then touch the item you want to download.
3. To install the item, touch **FREE** (if the item is free) or touch the button with a price (if the item is not free), and then touch **OK**.
4. After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.

Note: Availability of Google applications, services, and features may vary according to your country or carrier. Please follow the local laws and regulations to use them.

Using Preloaded Applications

Use the calculator to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

- **MTS TV** : To watch Live TV channels on your mobile open MTS TV.
- **MTS Video Bites** : To reality shows, Devotional & Regional movies, Short Movies& VOD.
- **MTS Planet** : To download Wallpapers, Pictures, Ringtones, Music, videos and many more applications open MTS Planet.
- **Nimbuzz** : chat application to combine most of the IM's together to stay connected with your friends.

Restoring Factory Data

If you reset your phone to the settings that were configured at the factory, all of your personal data stored on the phone, including information about your Google Account, any other accounts, your system and application settings, and any applications you have downloaded will be erased. Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music clips or photos.

1. On the **Settings** screen, touch **Privacy > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**. The mobile phone resets the settings to the original factory settings, and then restarts.

FAQs

How Can I Use a micro SD Card to Import Contacts to My Phone from a Different Mobile Phone?

Your mobile phone only supports contact files in the .vcf format.

1. Save the contacts you want to import to your mobile phone to a microSD card as a .vcf file.

2. Insert the microSD card into your mobile phone and find the .vcf file using **File Manager**.
3. Touch the .vcf file. The phone displays a message asking whether you want to import the contacts.
4. Touch **OK** to import the contacts.

Compatibility problems may occur with .vcf files created by different mobile phones and certain contact information may be lost after contacts are imported.

You can also use Bluetooth to share and import contacts.

How Do I Set a Song As a Phone Ringtone?

In **Music**, touch and hold the song to be set as a ringtone, and then touch **Use as phone ringtone**.

How Do I Prevent Automatic Change of Screen Orientation When Rotating My Phone?

On the Home screen, touch  > **Settings > Display > Auto-rotate screen** to disable the function.

How Do I Set an Unlock Pattern?

On the Home screen, touch  > **Settings > Location & security > Set up screen lock > Pattern**.

2. What to do if forget screen lock pattern and PIN both.

- 1) Try to guess the pattern several times.
- 2) After about 5 incorrectly drawn patterns it will lock you out and tell you to try again later.
- 3) But you will now notice that on the bottom right of the screen you now have the option to select "Forgot Pattern".
- 4) Click "Forgot Pattern".
- 5) Enter your Google account Username and Password that you use on the

device.

6) Click “Sign In”.

7) You’ll now have the ability to Draw a NEW unlock pattern.

8) Draw the new unlock pattern (make sure to remember it this time!)

9) Click “Confirm” on bottom right.

10) That’s it! You should now be on the home screen of your Android device with a new unlock pattern set.

OR

Need to reflash the software through ASC.

How to Use call forwarding and conference call?

Call Forwarding

If your phone is unreachable/out of service area or you do not wish to receive calls, then incoming calls can be diverted to other phone numbers. This service is a network feature and provided by default to all subscribers. You will be charged at the applicable rates according to your tariff plan for the diverted call.

This facility can be used to:

- Forward/Divert all incoming voice calls unconditionally
- Forward/Divert all incoming voice calls when you are unable to answer them
- Forward/Divert all incoming voice calls whenever your phone is busy

Call Forwarding – All Calls:

- For activation, dial 114 (followed by the number you wish to divert to)
- For deactivation, dial 115

Call Forwarding – No Answer

- For activation, dial 138 (followed by the number you wish to divert to)
- For deactivation, dial 130

Call Forwarding – Busy:

- For activation, dial 136 (followed by the number you wish to divert to)
- For deactivation, dial 128

Call Waiting

When you are already busy on a call, the Call Waiting option will alert you of a new incoming call. You will hear an audible beep notifying the call waiting. You can place the current call on hold and switch to the new incoming call.

- For activation, dial 118 (toll free)
- For deactivation, dial 119 (toll free)

Call Hold

This service enables you to put a caller on hold while a second call is answered or made.

Call Conference

The Call Conference facility enables you to call and speak with more than one person simultaneously. This feature is handset dependent. Please check your handset's user manual for more details.

How to initiate a Call Conference:

- While on a call, put the other party on Hold
- Go in Option/Menu/New Call and call the third party number
- On successful connection of the call, go to Options and select Call Conference
- Now all 3 parties can enjoy a conversation

The maximum number of parties that can be on a Call Conference at any given point of time is 3.

How Can I Change the Input Method?

Touch and hold the area where you write text and then select the input method you prefer.

How Do I Stop the Song Playing in the Background?

Touch the notification bar, flick downwards to open the notifications panel, touch the music playing notification to go to the music playing screen, and then stop playing the song.

How Do I Return to the Call Screen?

While in a call, if you're on another screen, you can touch the notification bar, and flick downwards to open the notifications panel. Then touch the current call notification to return to the call screen.

How Do I Create an Application Shortcut on the Home Screen?

Touch and hold an application icon on the application screen until the Home screen is displayed. Then drag the icon to where you want to place it and release your finger.

How Do I Hide the Keyboard?

Touch  to hide the keyboard.

How to use Bluetooth Tethering?

Bluetooth tethering is not supported.

Should I close applications running in background?

Android manages opened applications which are running in the background, so you shouldn't care about them. Android closes the applications when the system needs more memory. But background running applications, do utilize battery and can result in battery drainage. So you must close all the applications that are not in use.

To close background running application: Drag the status bar down-> Touch Manager.

The list of all the running applications will open. To close any application, just tap on the cross mark next to application icon.

What is accelerometer?

The accelerometer in mobiles is used to measure the orientation or vertical and horizontal positioning of the phone. The most basic application of this is the device knowing when to alternate the view of the screen depending on how you are holding it. This feature can be utilized in games and other programs.

How we can Install PC sync?

For installing PC sync please visit www.moborobo.com and download the PC sync software. After installation follow the instructions provided in the PC sync user guide.

Should I install Antivirus?

Android is fairly secured if you pay close attention to permissions notices and warnings when installing application from Google Market and unknown sources. If you regularly check what an application wants access to in order to install, then you probably do not need an antivirus solution. However, if you wish to pay little to no attention to what they are installing or what services the applications need to access, then you should have an antivirus solution.

SAR: 0.0781w/kg

Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive

atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.

- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.

- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.

- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.

- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.

- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other type of battery, charger, or accessory may invalidate any warranty for the device, may be in violation of local rules or laws, and may be dangerous. Please contact your dealer for information about the availability of approved batteries, chargers, and accessories in your area.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in

use.

- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.

- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.

- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.

- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it.

Otherwise, it may lead to battery leakage, overheating, explosion, or fire.

- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.

- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.

- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a qualified service center for inspection.

- Improper battery use may result in a fire, explosion or other hazard.

- Promptly dispose of used batteries in accordance with local regulations.

- The device should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

- Only use the battery with a charging system that has been qualified with

the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.

- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.

- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.

- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.

- Before you clean or maintain the device, power off the device and disconnect it from the charger.

- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

- If the device screen is broken by colliding with hard objects, do not touch

or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Personal Information and Data Security

The use of some functions or third-party applications on your mobile phone could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Keep your mobile phone on your person. Do not leave it unattended.
- Set your phone screen to lock and create a password or unlock pattern to open it.
- Periodically back up personal information kept on your SIM/UIM card, memory card, or stored in your phone memory. If you change to a different mobile phone, be sure to move or delete any personal information on your old phone.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your mobile phone to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as WLAN tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade mobile phone security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Some applications require and transmit location information. As a result, a third party may be able to share your location information.
- Your mobile phone may provide detection and diagnostic information to

third party application providers. Third party vendors use this information to improve their products and services.

Legal Notice

Copyright ©2012 Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. All rights reserved. Coolpad logo is the trademarks of Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. All other trademarks are the property of their respective owners. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.

Trademarks and Permissions

Coolpad is the trademark of Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.

Android is a trademark of Google Inc.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus the descriptions herein may not match exactly the product or its accessories you purchase.

Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. will not provide any warranty of any kind for these

third-party software and applications. Neither will **Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.** provide support to customers who use these third-party software and applications, nor be responsible or liable for the functions of these third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time. **Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.** does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of **Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.**. To the greatest extent permitted by applicable law, it is explicitly stated that **Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.** shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. shall not be responsible for the legality , quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos, or software. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-source Android™ platform. **Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.** has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. **Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.** shall not be liable for any of such situation.

DISCLAIMER OF WARRANTIES

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN

RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

LIMITATIONS OF LIABILITY

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL **YULONG COMPUTER TELECOMMUNICATION SCIENTIFIC (SHENZHEN) CO., LTD.** BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF **YULONG COMPUTER TELECOMMUNICATION SCIENTIFIC (SHENZHEN) CO., LTD.** ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

