



# **bizhub PRO 920**

## **Shortcut Manual**



For detail information , Please refer to the User Manual



KONICA MINOLTA

 
 
# PRO 920 Shortcut manual

## Power ON


To **power on**, please turn on the **Main Switch** , and then the **Sub Switch**

## Power OFF

To **power off** , please turn off the **Sub Switch** , and then the **Main Switch** (*Please wait 10 seconds before restart the machine*)

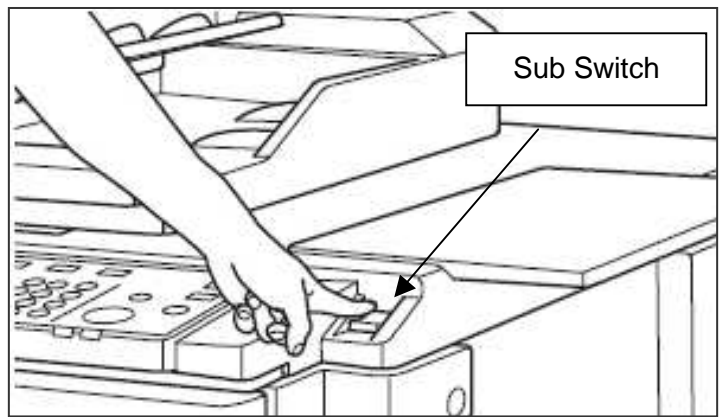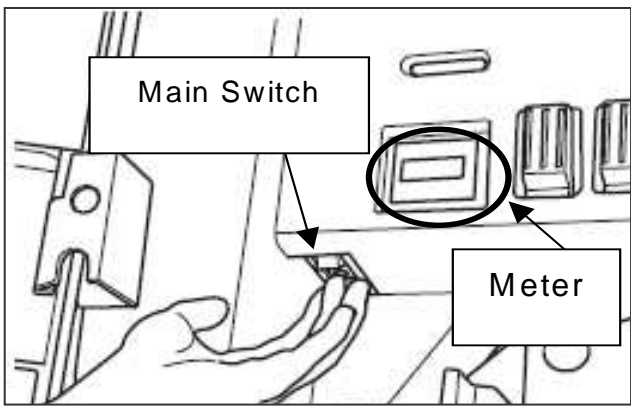


 
Warm-up takes aprox. 5.5 minutes. the machine will display message "Ready to copy" after the warm-up process completed.

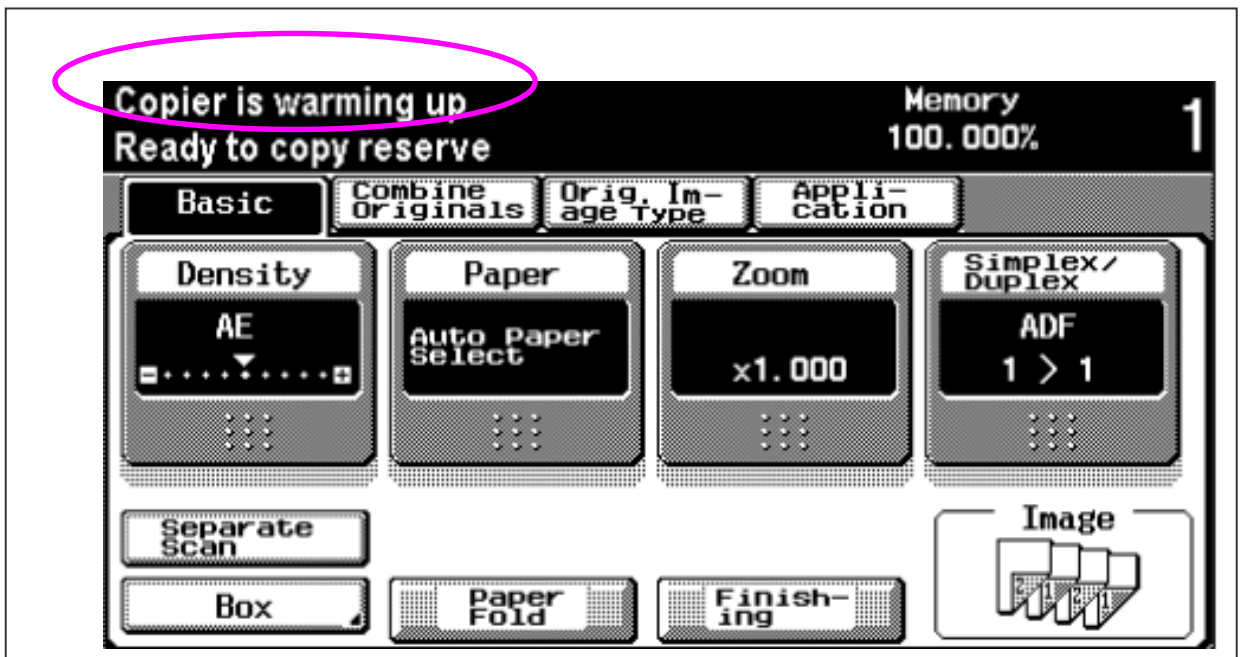




The essentials of imaging



## Replace Toner

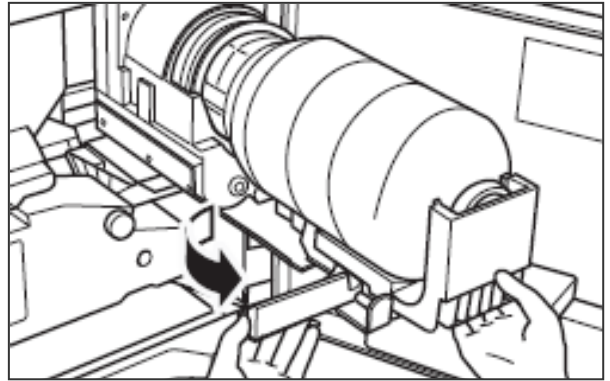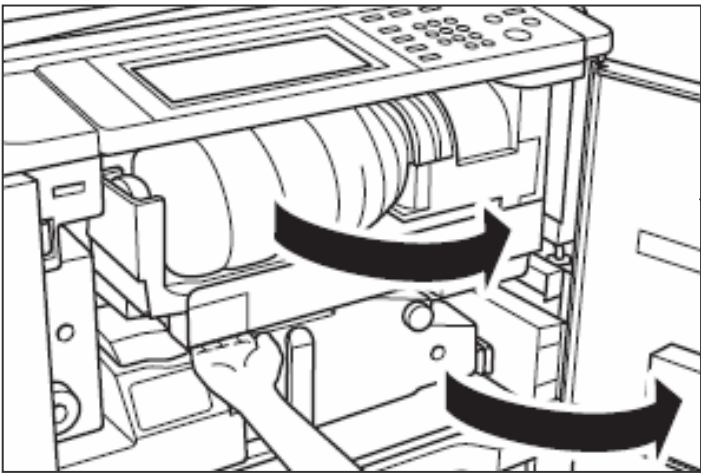  

  
 
When **Please add toner** or this signal appears,  
Please replace the toner

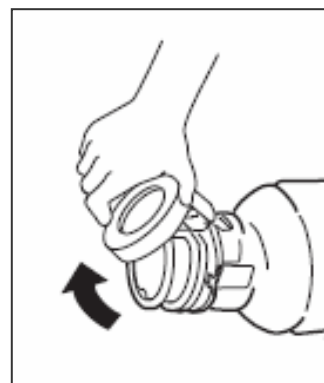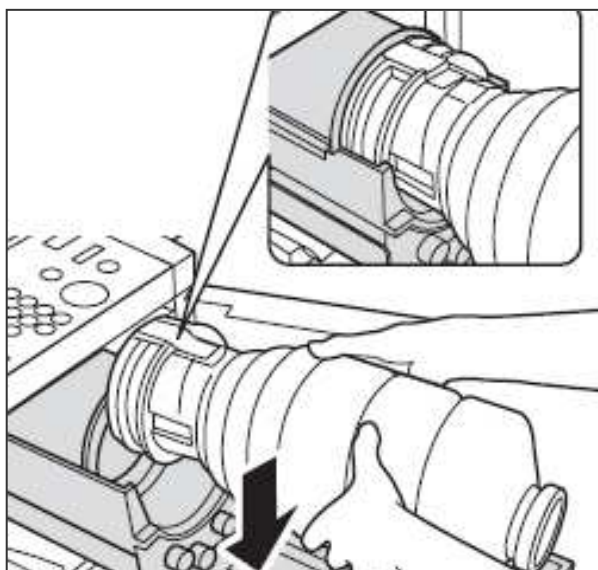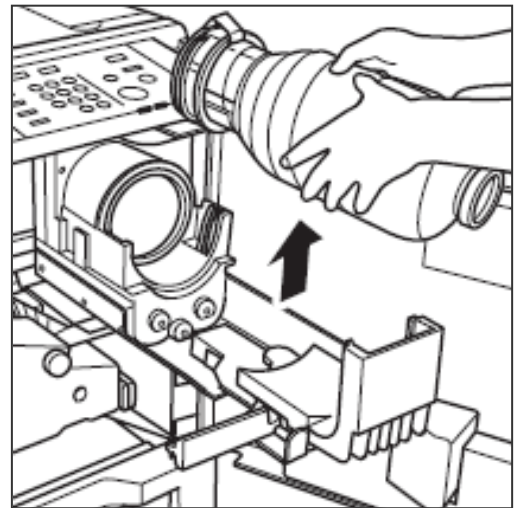



KONICA MINOLTA

  Place the original on the document feeder (max 100 sheets 80g/m<sup>2</sup>, face up), or using original glass (face down)

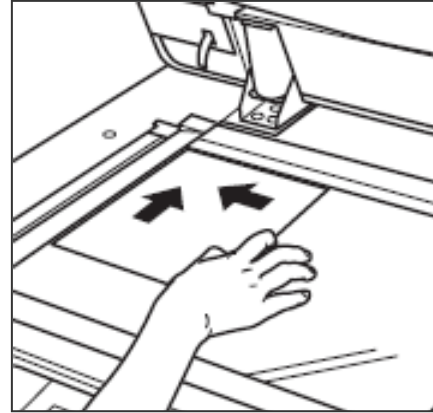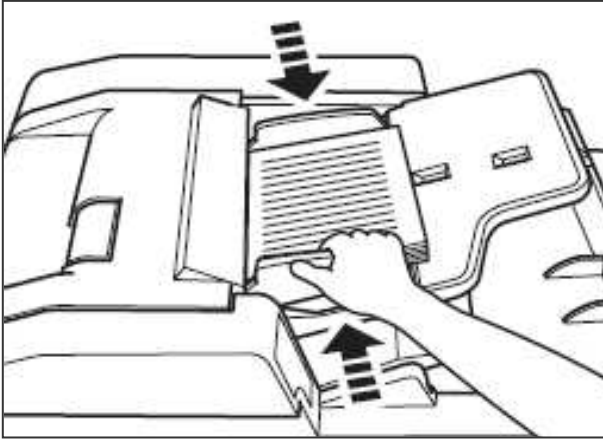

### Separate Scan

Use the original glass to scan original unsuitable for the document feeder

1. Touch **Separate Scan**
2. Position originals, then press **Start**

 
-Using original glass:

Place original FACE DOWN, starts scanning from the first page, then repeat for all originals

-Using ADF:

Position original FACE UP, if number exceeding 100 sheets, divides them into blocks.

3. After scan, touch Complete scan and press start

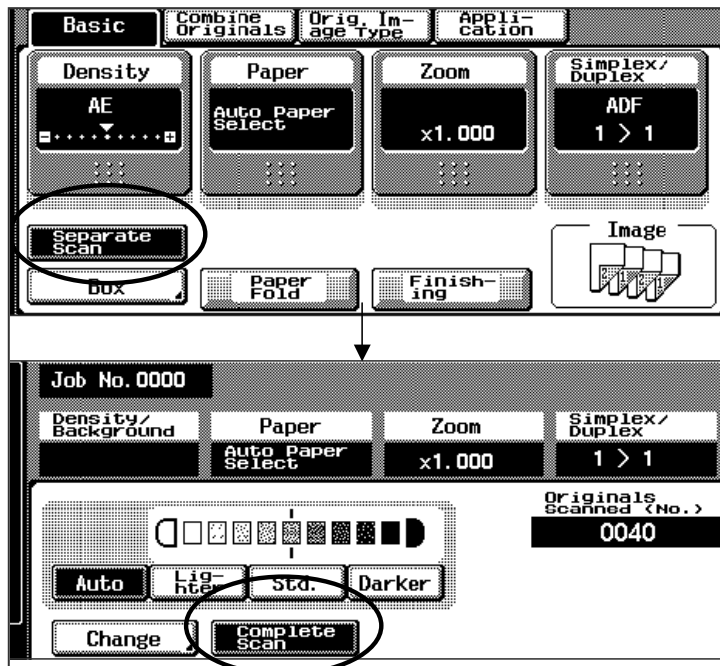




The essentials of imaging



## Change Paper Size

   
The capacity of the manual feed tray is 150 sheets (80g/m<sup>2</sup>)

1. Touch **Basic**, and **Paper**
2. Choose manual feed tray, and touch **Bypass Setting**
3. Choose suitable paper (**Thick, Thin, OHP Paper**)
4. For custom size input, touch **Custom**
5. Input the length **X** and width **Y**
6. Touch **Ok**

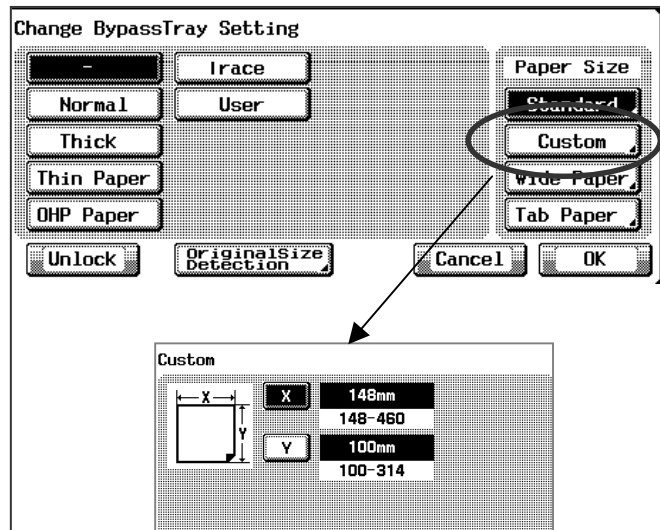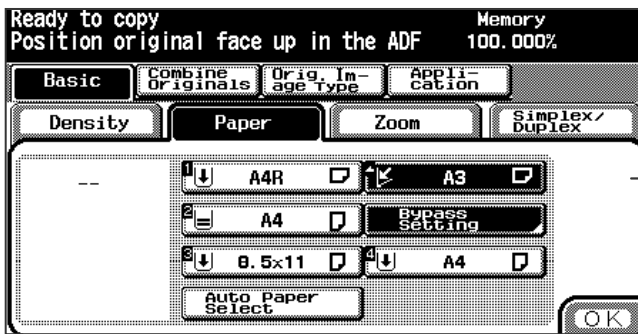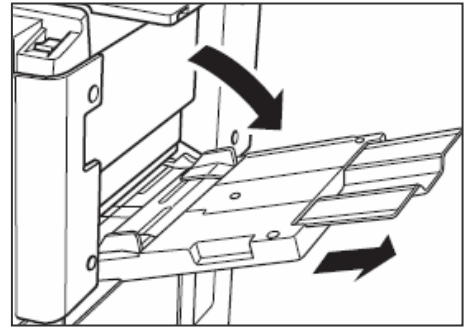

## Density Adjustment


 
1. Touch **Basic**, and **Density**
2. Choose **Lighter** or **Darker** to adjust

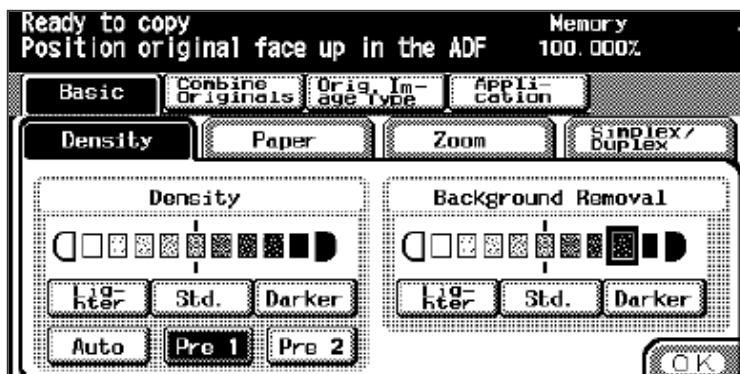




## Zoom

  1. Touch **Basic**, and **Zoom**
2. Touch desired ratio or touch **XY Zoom** to change the zoom ratio by input 4 digit ratio
3. Touch **Ok** to confirm

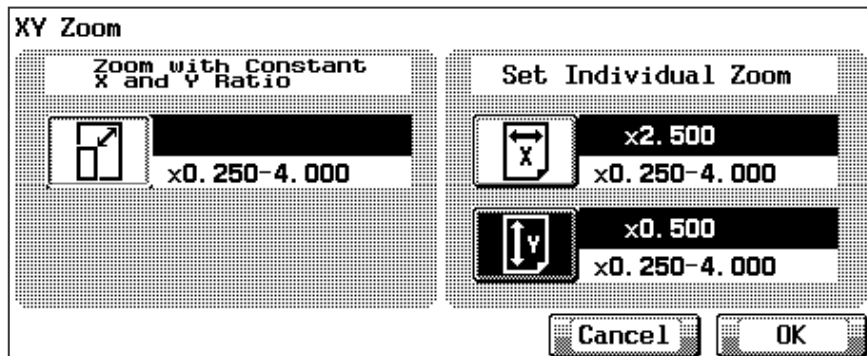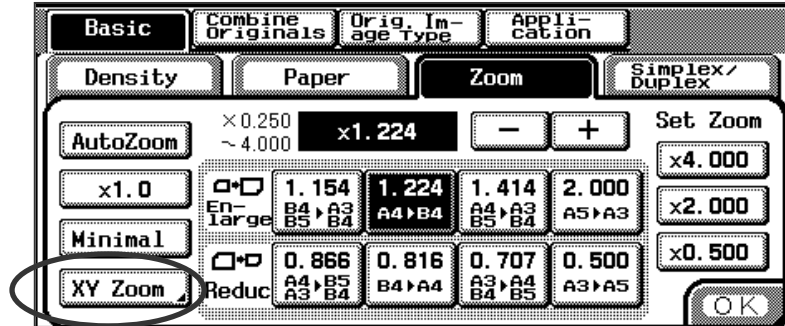


--Simplex / Duplex

 Touch **Simplex** / **Duplex**


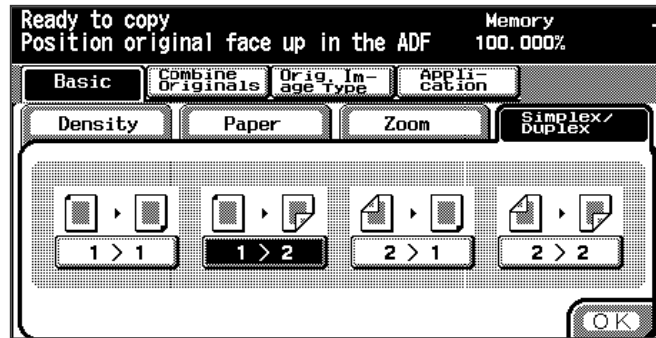


Can choose


 
a. Single side original to double side copy **1 > 2**

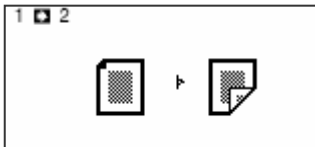

  b. Double side original to single side copy **2 > 1**

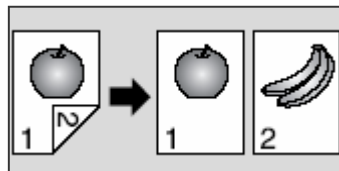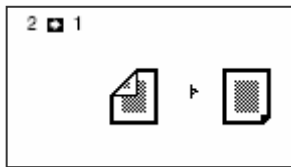

  c. Double side original to double side copy **2 > 2**

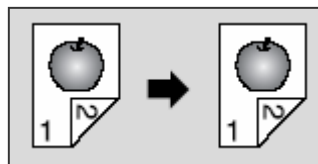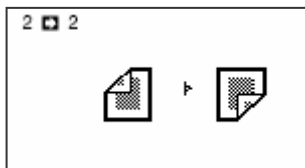


## Combine Originals

Lay out 2 pages (2in1) , or 4 pages onto one sheet (4in1)

Touch **Combine Originals**

 Choose **2in1** , **4in1**

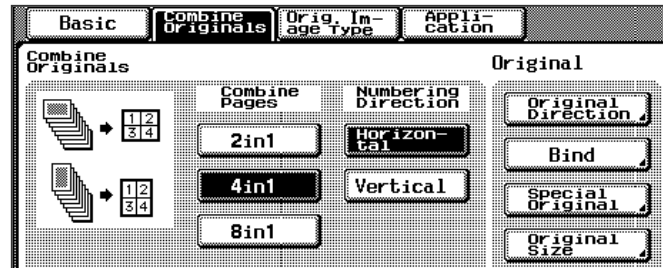


## Special Orig.

1. Touch **Combined Original**
2. Touch **Special Original**
3. Touch **Mixed Original**


## Bind

 1. **Combined Original**
2. Touch **Bind**  
Choose different binding direction  
For example **Left**

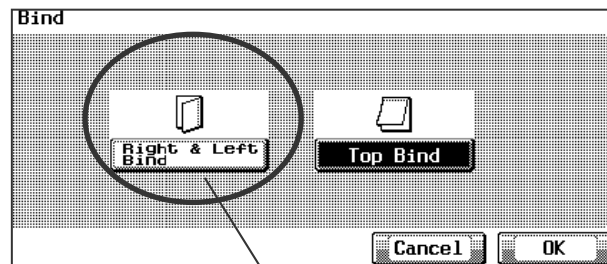

## Original Size

 
1. Touch **Combined Original**
2. Touch **Original Size**
3. Touch **Custom Size**
4. Choose different size for the original,  
Or choose Full Area

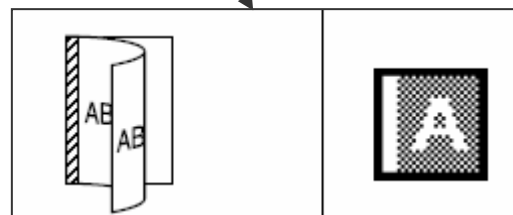

## Orig. Image Type

Choose different original type


 
Choose **Dot Matrix** for pencil written original

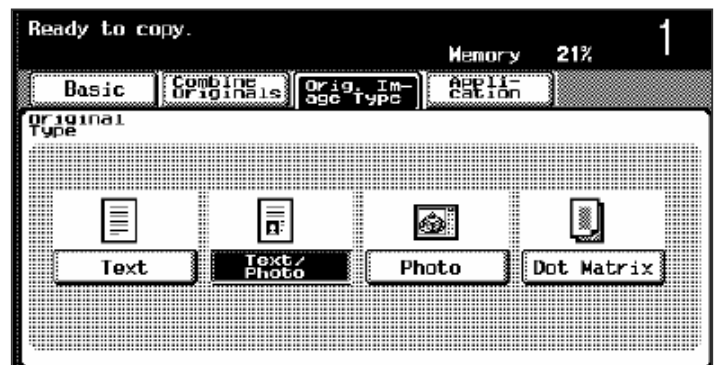







# Application

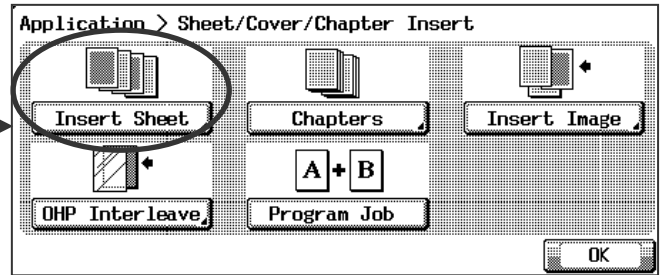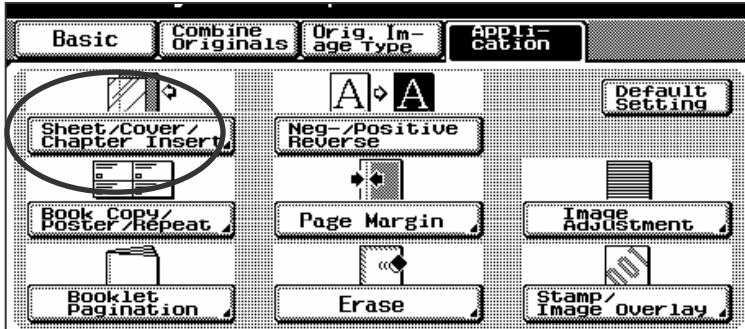  



## Sheet / Cover /Chapter Insert

 
 
1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **Insert Sheet**
4. Touch **Front Cover**
5. Touch **Cover/Print** for (Simplex/Duplex) or image setting
6. And choose the tray of the inserted paper
7. Touch **Ok**
8. Touch **Start**

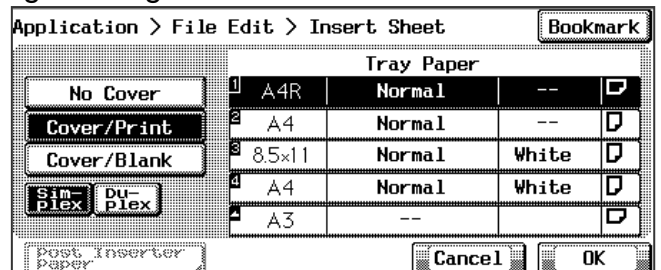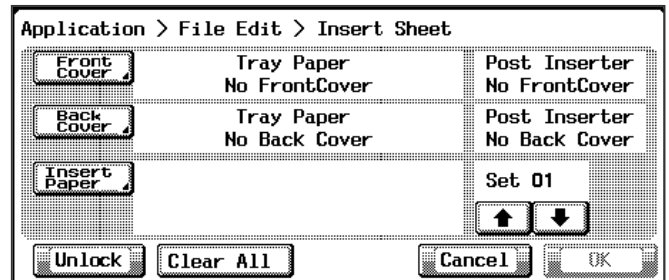

## For page insertion, please repeat step 1-3

   
 
1. Touch **Insert Paper**
2. Touch **Page Setting** to input location of page insertion
3. Use “,(comma)” for between pages or “-(hyphen)” for consecutive pages
4. Choose **Fix** after finished input
5. Choose which tray for the page insertion
6. Touch **OK**
7. Touch **Start**

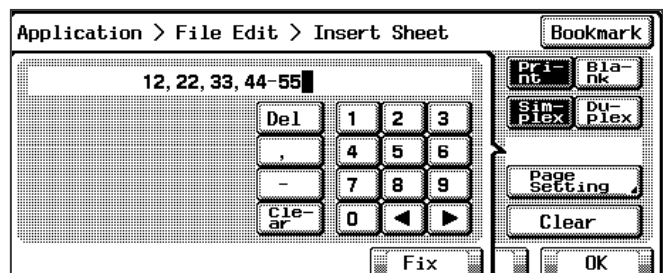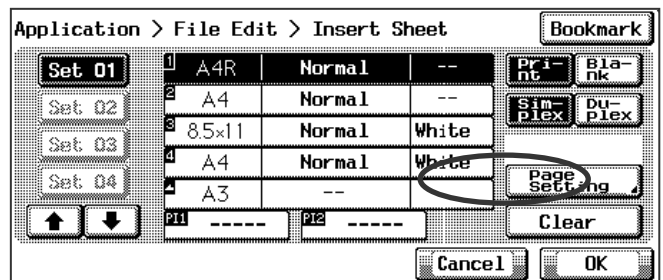

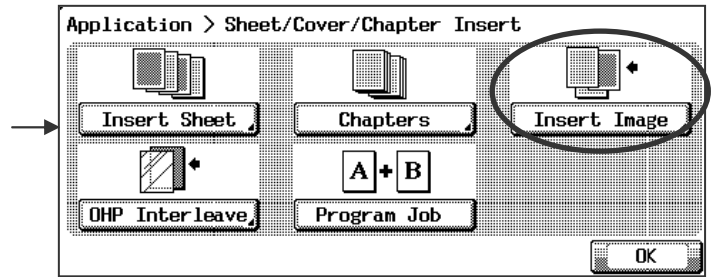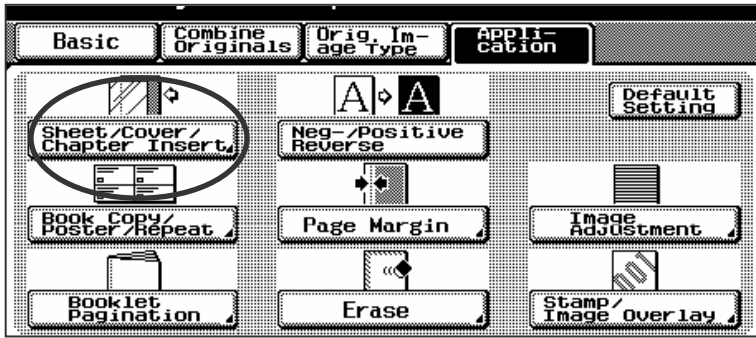



### Insert Image

 
 
1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **Insert Image**
4. Input page number, after each input, touch **Set**
5. After input the insert page number, touch **OK**
6. Place the original on the document feeder, touch **Start**
7. After finished all pages, place the insert original on the document glass, touch **Start**
8. When finished scanning all insert image, touch **Complete Scan**
9. Touch **Start**

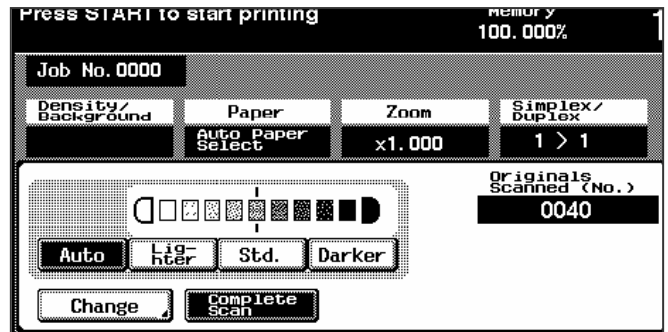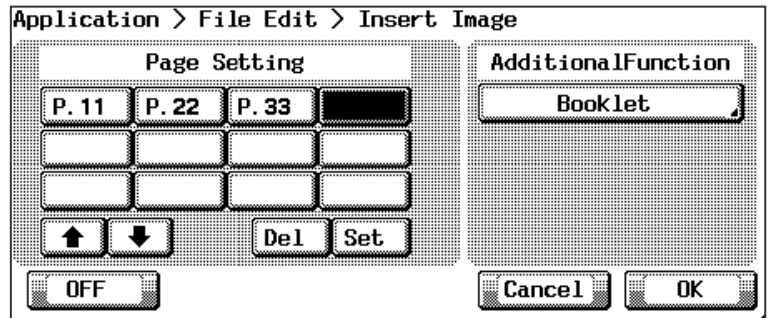

### Program Job

    1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **Program Job**
4. Touch **OK**
5. Choose the copy setting
6. Touch **Start**
7. Touch **Fix**
8. Finished scanning the document, touch **Fix**
9. Touch **Separate Scan**
10. Touch **Start**

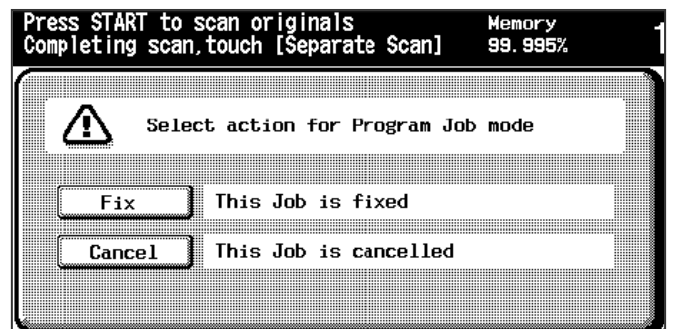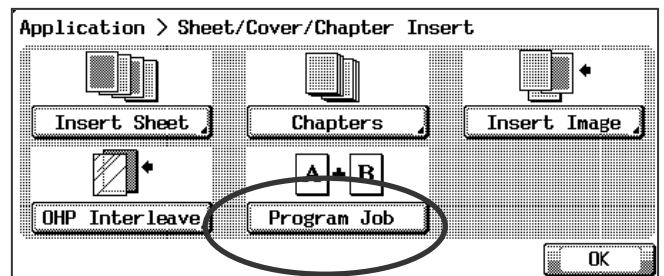

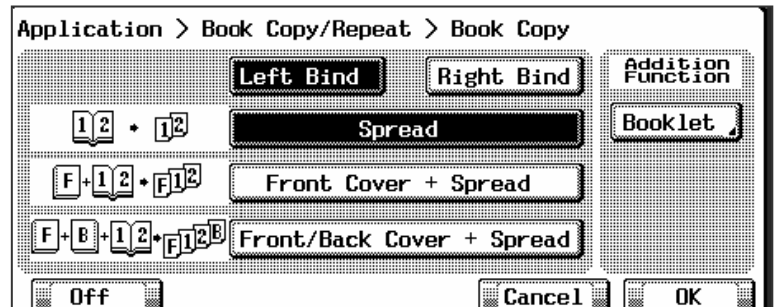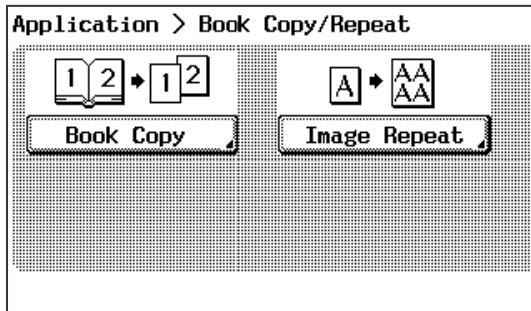

### Book Copy

1. Touch **Application**
2. Touch **Book Copy /Poster/Repeat**
3. Touch **Book Copy**
4. And touch **Left Bind/Right Bind**, and **Front Cover** can choose at the same time
5. Open the book and place at the upper left corner on the document glass, touch **Start**
6. After scanned all the pages, touch **Separate Scan**
7. And touch **Start**

### For Front Cover

 
- First put the front cover on the document glass, and touch **Start**
- And turn to the first page for scanning

### For Front Cover and Back Cover

- First put the front cover on the document glass, touch **Start**
- And place the back cover on the document glass, touch **Start**
- Then turn to the first page for scanning

### Image Repeat


1. Touch **Application**
2. Touch **Book Copy/Poster / Repeat**
3. Touch **Image Repeat**
4. Choose **Size Manual Input** to input image size
  - a. or touch **Size Auto Detect** for automatic size detection
  - b. or touch **Repeat** for 2Repeat/4Repeat/8Repeat
5. Touch **OK**
6. Touch **Start**

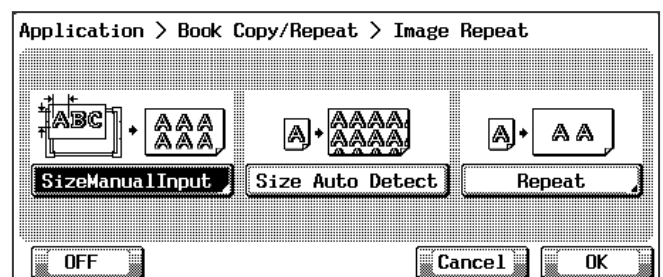




### Booklet Pagination

 1. Touch **Application**
2. Touch **Booklet Pagination**
3. Touch **Left Bind/Right Bind**
4. Touch **OK**
5. Touch **Start**

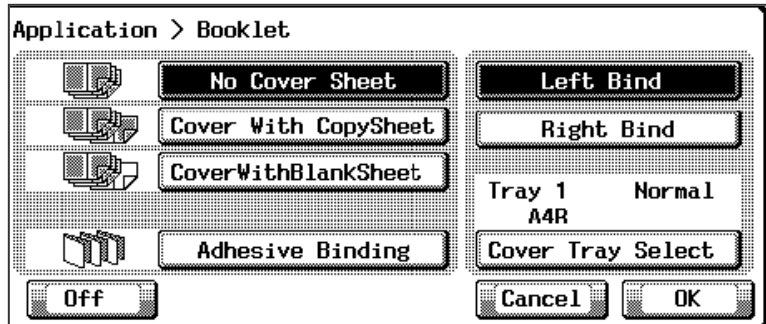


### Page Margin

 1. Touch **Application**
2. Touch **Page Margin**
3. Touch **Shift** or **Reduce & Shift** and input the shift distance
4. Touch **OK**
5. Touch **Start**

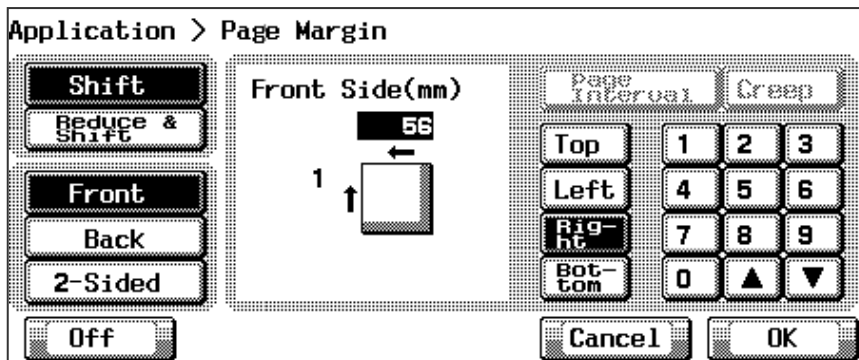


### Neg. Pos. Reverse

 1. Touch **Application**
2. Touch **Neg. Pos. Reverse**

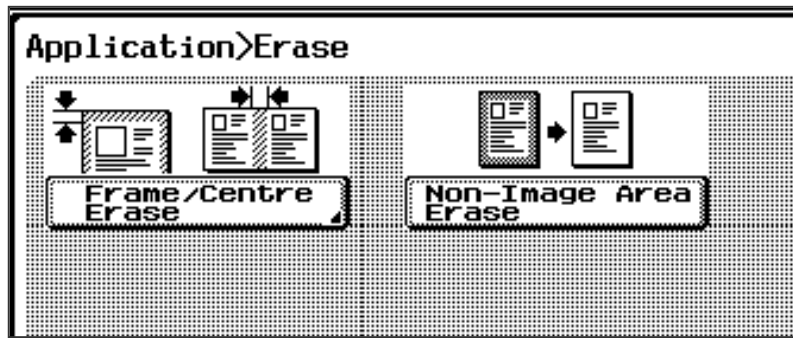


### Erase

 1. Touch **Application**
2. Touch **Erase**
3. Touch **Frame/Centre Erase**
4. Choose the location and the distance of the erase image.
5. Touch **OK**
6. Touch **Start**

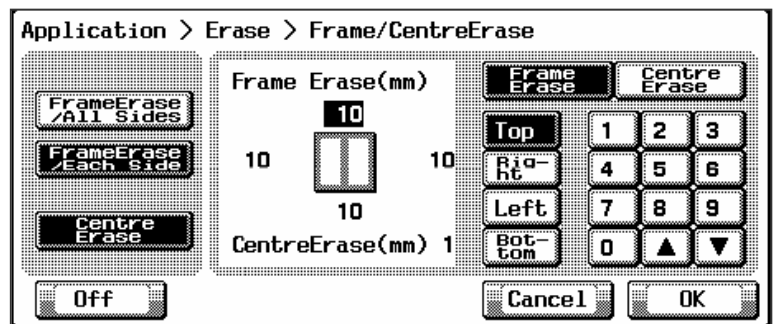


### Non-Image Area Erase


 
1. Touch **Application**
2. Touch **Erase**
3. Touch **Non-Image Area Erase**
4. Touch **OK**
5. Touch **Start**

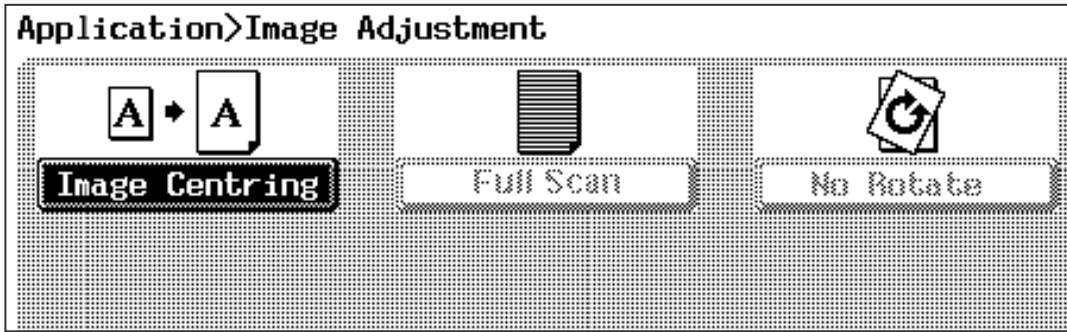

 
1. Touch **Application**
2. Touch **Image Adjustment**
3. Touch **Image Centering**
4. Touch **Start**

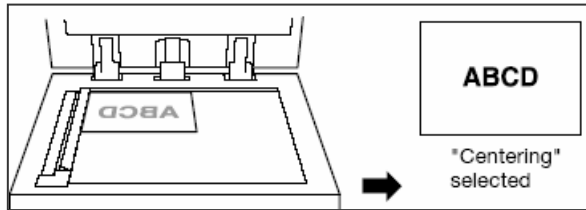


  1. Touch **Application**
2. Touch **Image Adjustment**
3. Touch **No Rotate**
4. Touch **Start**

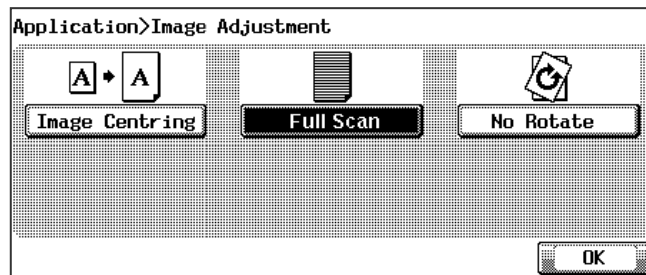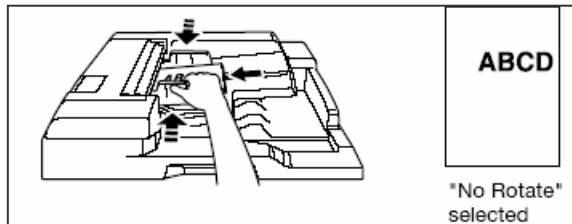

  
1. Touch **Application**
2. Touch **Image Adjustment**
3. Touch **Full Scan**
4. Touch **Start**

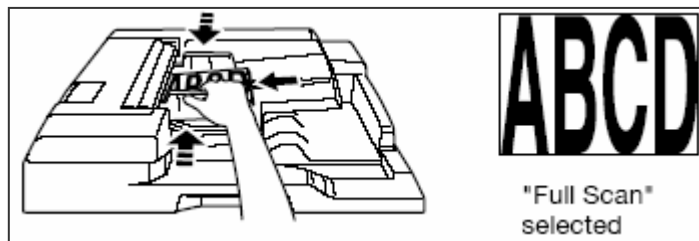

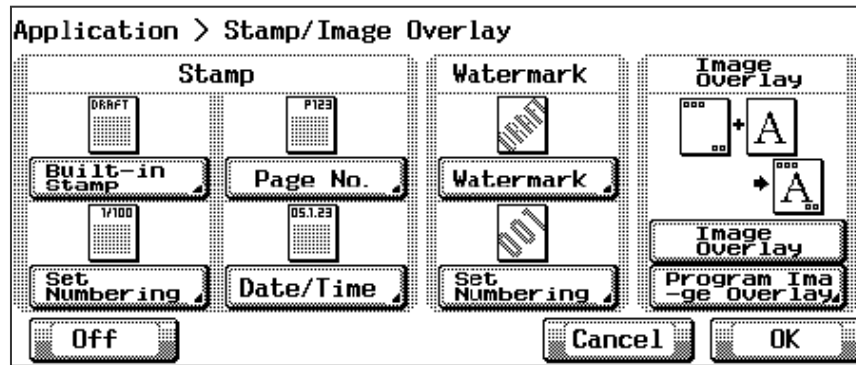


### Date / Time

 1. Touch **Application**
2. Touch **Stamp/Overlay**
3. Touch **Date/Time**
4. Choose different type of layout
5. Touch **OK**
6. Touch **Start**

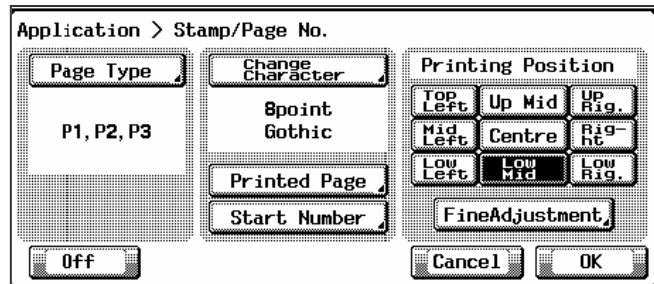

### Page #

 1. Touch **Application**
2. Touch **Stamp/Overlay**
3. Touch **Page No.**, touch **Print Type** to choose different layout of page number
4. From **Start No.** input the starting number
5. From **Print Position** select the print location of the date
6. Touch **OK**
7. Touch **Start**

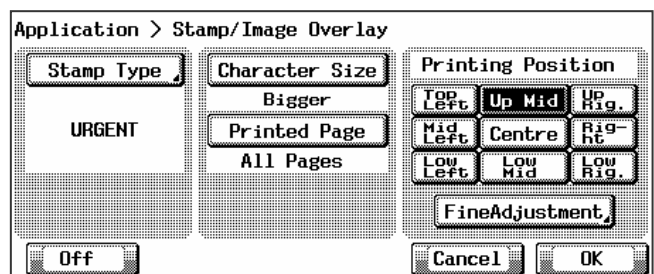


### Stamp

1. Touch **Application**
2. Touch **Stamp/Overlay**
3. Touch **Built-In Stamp**
4. Touch **Stamp Type** choose **Urgent, Please Reply, Top Secret**
5. From **Print Position** choose the print location
6. Touch **OK**
7. Touch **Start**



## Image Overlay

 1. Touch **Application**
2. Touch **Stamp/Image Overlay**
3. Touch **Image Overlay**
4. Touch **OK**
5. Place the original on the document feeder, Touch **Start**
6. And place the **Overlaid** original on the document feeder or glass
7. Touch **Start**
8. Touch **Complete Scan**
9. Touch **Start**

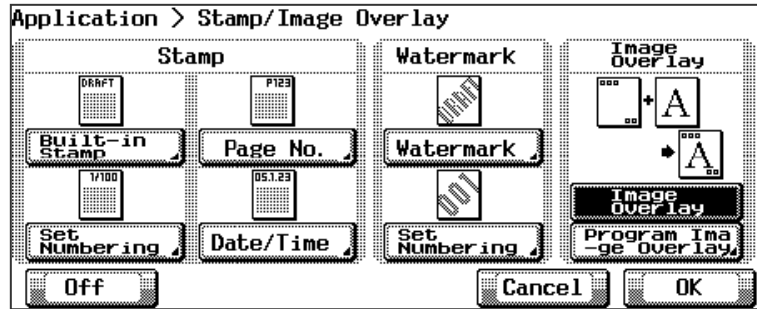

## Store Overlay Image

1. Touch **Application**
2. Touch **Stamp/Image Overlay**
3. Touch **Program Overlay**
4. Touch **Store**
5. Input the image of the name of the stored image, Touch **OK**
6. Place the original on the document feeder or glass, Touch **Start**

## Overlay Image II

 
7. Choose the name of the image from the list, Touch **OK**
8. Place the original on the document feeder, Touch **Start**







### To cancel job

1. Touch **Stop**
2. Touch **Stop Job**, on the screen

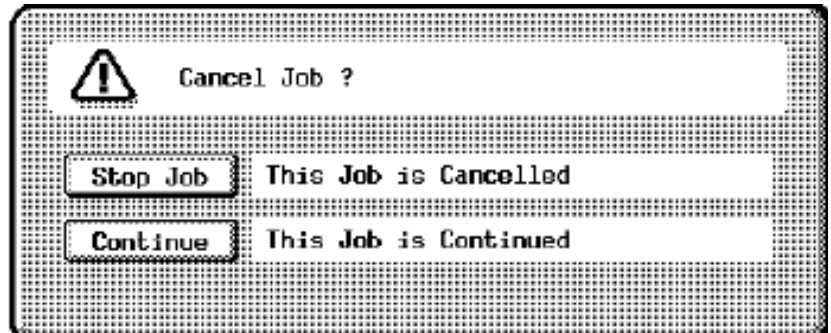

### To cancel waiting jobs

  1. Touch **Job List**
2. Touch **Print**, and **Active Jobs**
3. Choose the job from the list
4. Touch **Delete**
5. Touch **Yes**

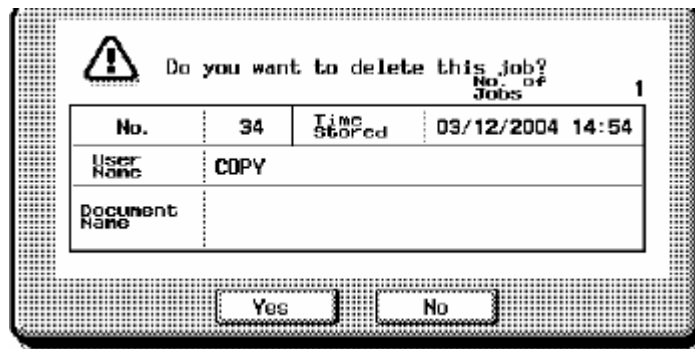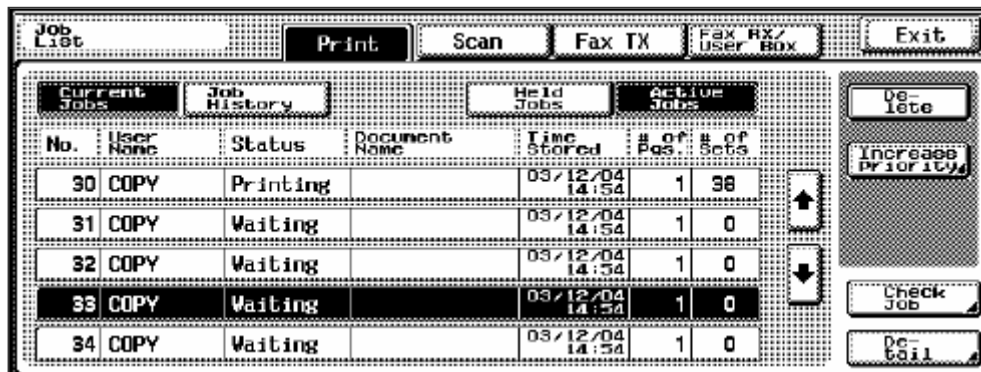



KONICA MINOLTA

部門熱線Particulars	聯絡方法Contact us
<p><b>市務科 Marketing Division</b></p> <ul style="list-style-type: none"> <li>➢ 銷售熱線Sales Hotlines               <ul style="list-style-type: none"> <li>• 查詢產品及銷售詳情 New Product and Sales Enquires</li> </ul> </li> </ul>	<p>電話Tel : 2565 2111</p> <p>電郵Email : <a href="mailto:bhkg_sales@bhk.konicaminolta.hk">bhkg_sales@bhk.konicaminolta.hk</a></p>
<p><b>服務科 Technical Service Division</b></p> <ul style="list-style-type: none"> <li>➢ 維修熱線Repair Hotline               <ul style="list-style-type: none"> <li>• 多功能產品之維修服務 MFP Repair Services</li> </ul> </li> </ul>	<p>電話Tel : 2565 2176</p> <p>傳真Fax : 2856 1024</p>
<p><b>服務科 Technical Service Division</b></p> <ul style="list-style-type: none"> <li>➢ 產品之技術支援熱線               <ul style="list-style-type: none"> <li>• 軟件及網絡支援 Application, Network and System Support</li> </ul> </li> </ul>	<p>電話Tel : 2565 2178</p>
<p><b>客戶服務Customer Service Department</b></p> <ul style="list-style-type: none"> <li>➢ 客戶服務熱線 Customer Service Hotlines               <ul style="list-style-type: none"> <li>• 保養合約查詢 Maintenance Agreement</li> <li>• 新客戶之產品培訓 New Customer Product Training</li> <li>• 賬單查詢 Invoice Enquiries</li> <li>• 報錶 (請於報錶結算日前報讀。)</li> </ul> </li> </ul> <p>Report meter reading through telephone system (Please report meter reading on or before cut-off date)</p>	<p>電話Tel : 2565 2190</p> <p>傳真Fax : 2565 2128</p> <p>電話Tel : 2856 4306</p> <p>電話Tel : 2565 8181</p> <p>English - Press “2”, then press “2”, 中文 - 按 “1” 字然後按 “2” 字</p> <p>傳真Fax : 2856 2008</p> <p>電郵Email : <a href="mailto:bhkg_csmeter@bhk.konicaminolta.hk">bhkg_csmeter@bhk.konicaminolta.hk</a></p>
<p><b>客戶服務 Customer Service Department</b></p> <ul style="list-style-type: none"> <li>➢ 用品供應熱線 Order Section Hotlines               <ul style="list-style-type: none"> <li>• 訂購消耗品如碳粉及影印紙 Ordering of Consumable Products (Toners, Paper, etc...)</li> </ul> </li> </ul>	<p>電話Tel : 2565 2139</p> <p>傳真Fax : 2565 7613</p> <p>電郵Email : <a href="mailto:bhkg_csorder@bhk.konicaminolta.hk">bhkg_csorder@bhk.konicaminolta.hk</a></p>
<p><b>財務科 Finance Division</b></p> <ul style="list-style-type: none"> <li>➢ 月結單查詢 Statement Enquiries</li> </ul>	<p>電話Tel : 2856 4710</p> <p>傳真Fax : 2516 9177</p>
<p><b>行政科 Administration Department</b></p> <ul style="list-style-type: none"> <li>➢ 客戶的建議及意見反映 Other Suggestions &amp; Comments</li> </ul>	<p>電話Tel : 2565 8181</p> <p>按Press “ 0 ”</p>
<p>網上客戶服務 Online Support Services</p>	<p><a href="http://www.konicaminolta.hk/hk/zh-hk/customer-services.php">http://www.konicaminolta.hk/hk/zh-hk/customer-services.php</a> <a href="http://www.konicaminolta.hk/hk/en-us/customer-services.php">http://www.konicaminolta.hk/hk/en-us/customer-services.php</a></p>