

## IMPORTANT INFORMATION

### Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of European directives 88/378/EEC, directives 89/336/EEC, 92/31/EC, 93/68/EEC, 2004/108/EC, 2002/96/EC and 2003/108/EC and 2002/95/EC.

### Warranty:

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

### InspirationWorks UK Ltd

Charlotte Court  
Proctor Way  
LUTON  
Bedfordshire  
LU2 9PE  
UK

[www.inspirationworks.co.uk](http://www.inspirationworks.co.uk)



INSPIRATION  
WORKS (UK) <sup>LTD</sup>



CATALANA DE  
INVESTIGACION  
Y DESARROLLO  
DE ELECTRONICA <sup>SA</sup>

[www.firemansamonline.com](http://www.firemansamonline.com)

© 2010 CIDE Toys - [www.cidetoys.com](http://www.cidetoys.com)

© 2011 Prism Art & Design Limited. The Fireman Sam name and character are trademarks of Prism Art & Design Limited.

© HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

V02  
July 2011  
Printed in China  
Made in China




WASTE ELECTRICAL PRODUCTS AND BATTERIES  
SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD  
WASTE. PLEASE RECYCLE WHERE FACILITIES  
EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR  
RECYCLING ADVICE



AGE 2+

## FIREMAN SAM'S QUIZ WHEEL

### Instruction manual

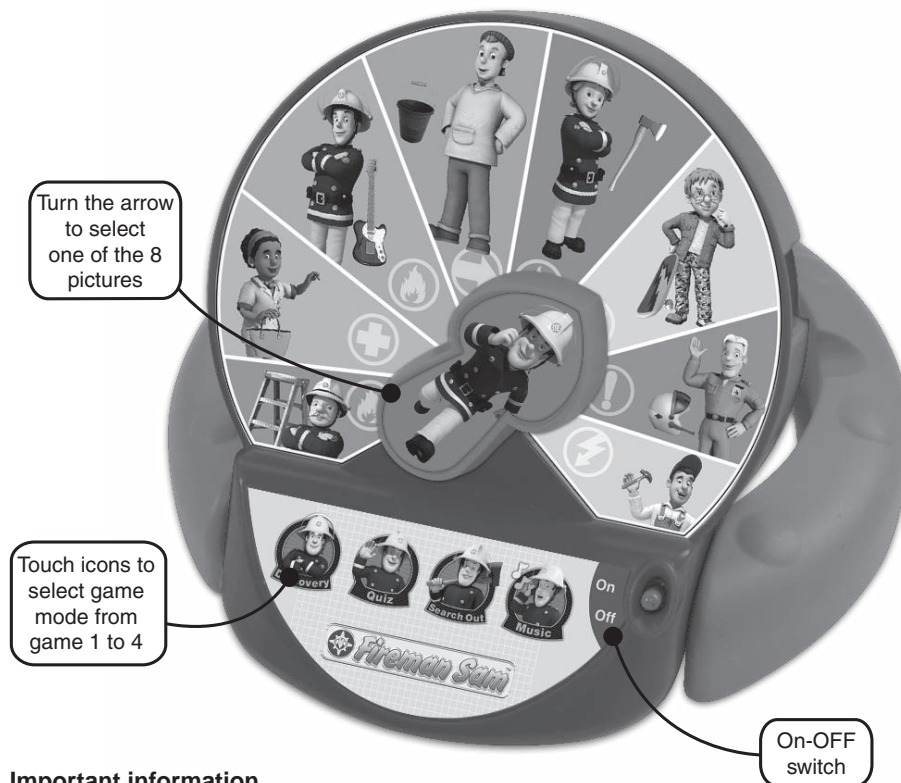

### Important information

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.

## CONTENT

- Unit
- Instruction manual

S1025

inspiration  
works

## HOW TO PLAY

- Switch the unit ON and select a game:

### Game 1: Discovery

In this mode, turn the arrow to select a picture of a character, and you will hear them say a phrase.

### Game 2: Quiz

In this mode, Fireman Sam will ask you to find one of the characters.

He will ask you to find them by name or by hearing them say a phrase (eg. Find Norman / Who says: "Reporting for duty"?).

Use the arrow to answer. You have 3 chances to find the correct answer. If after the third attempt you have not found the correct answer, the unit will give you the answer or/and ask you another question.

### Game 3: Search Out

In this mode, Fireman Sam will ask you to find one of the characters.

He will ask a question about something the character has or does (eg. : Who has a ladder? / Who drives Venus? / Who has a moustache?).

Use the arrow to answer.

You have 3 chances to find the correct answer.

If after the third attempt you have not found the correct answer, the unit will give you the answer or/and ask you another question.

### Game 4: Music


In this mode, turn the arrow to select a picture of a character, and listen to short music or sounds from the Fireman Sam series.

### Automatic shut off:

To save battery power, the unit will switch off automatically after a few seconds of inactivity.

## HOW TO CHANGE BATTERIES

1. This product requires 2 x AAA batteries
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 2 x AAA batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not over tighten.

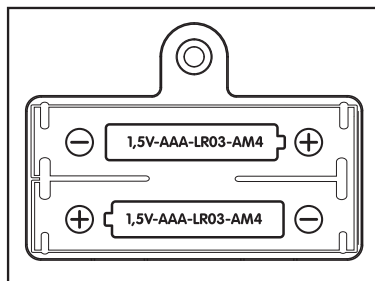

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries.
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
  - Rechargeable batteries shall be charged only under the supervision of an adult.
  - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.

## TROUBLE SHOOTING

If the unit doesn't operate...	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the unit malfunctions...	Install new batteries.