 



Quickstart Guide

UNIT SETUP

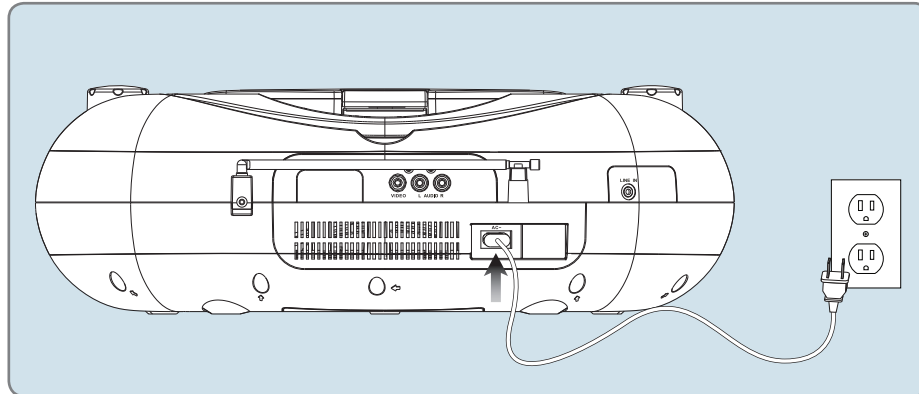


Power

 Plug the small end of the power cord into the AC Input on the back of the speaker, and the large plug into a standard wall outlet.

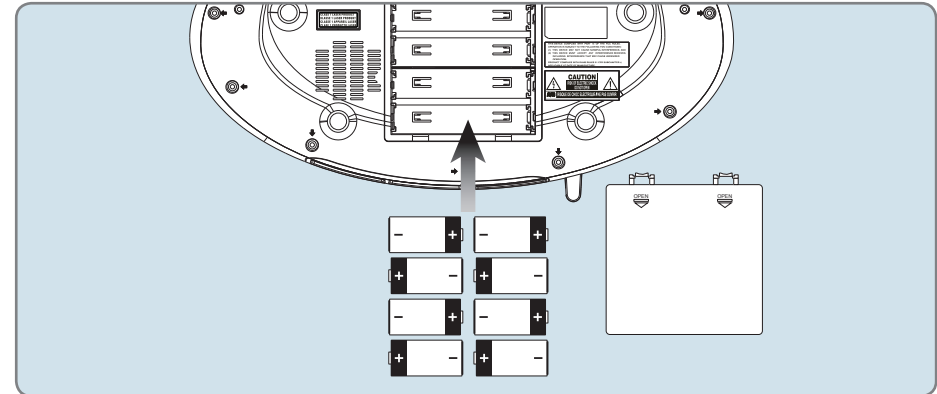

Battery

 
Requires 8 C sized batteries (not included).

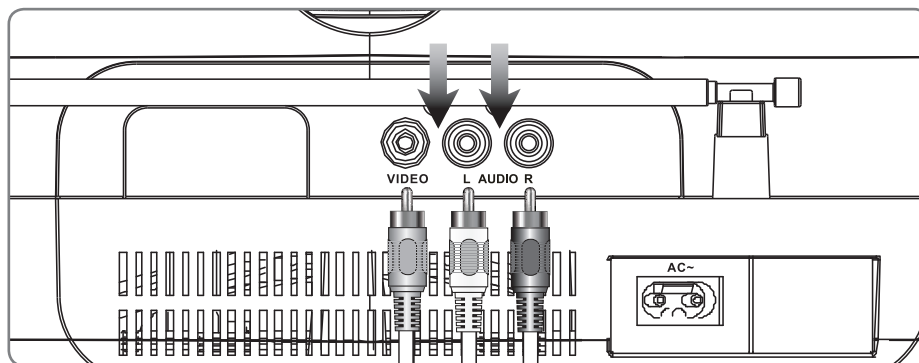

Composite Audio/Video Output

Requires an RCA audio/video cable (included).

 1. Connect an RCA AV cable (included) to the **Composite outputs** on the back of the unit, and the Composite inputs on a television.
2. Adjust the connected television to the proper input setting.
3. Video and sound from a loaded disc can now be played through the unit to the connected television.

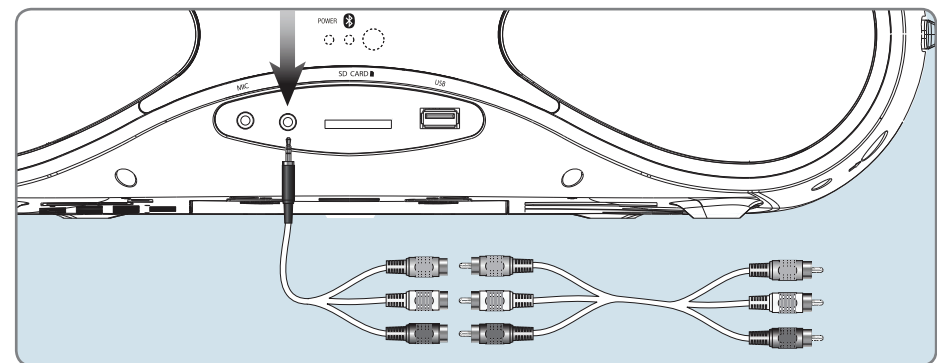

Using the AV Input

Requires an 3.5mm to RCA audio/video adapter (included).

1. Connect the included 3.5mm to RCA audio/video adapter to the **AV Input** and the RCA output on another device. *Note: You may also need to plug an RCA AV cable (included) into the adapter to finish connecting.*
2. Adjust the **Source** to **AV** mode.
3. Use the native controls on the connected device to play your audio/video through the unit.

Quickstart Guide

UNIT FUNCTIONS

Loading and Playing a CD

Note: This unit is not compatible with MP3 CDs.

1. Open the **Disc door**.
2. Load a CD, CD-R/RW, or CD+G disc into the player, label side facing up.
3. Close the **Disc door**.
4. Press the **Source** button to set the unit to **DVD** mode. The player will automatically detect the CD and begin playing music.

Loading and Playing a DVD

1. Open the **Disc Door**.
2. Load a DVD into the player, label side facing up.
3. Close the **Disc Door**.
4. Press the **Source** button to set the unit to **DVD** mode. The player will automatically detect the DVD and begin playing video.

Playing the FM Radio

1. Set the **Source** to **FM mode**.
2. Adjust the **Tuning** dial to tune the radio. Adjust the position of the **Telescopic FM Antenna** to improve FM radio reception.

Pairing a Bluetooth Device for the First Time

1. Power on the unit by pressing the **Power** button.
2. Set the **Source** to **Bluetooth** and press and hold the **Pair button**.
The pairing indicator will flash blue quickly. When pairing, remain within 3 feet of the unit.
3. Using the native controls on your Bluetooth device, select the **IBD704** in your Bluetooth settings to pair. If your device requests a password, enter the default password **0000**. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
4. When successfully paired and connected, a beep will issue from the unit and the **Pairing Indicator** will display a solid blue light. *After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.*

Playing Audio Wirelessly

1. After pairing to a bluetooth device, use the native controls on the connected Bluetooth Device to select a track.
2. Play, pause or skip a selected track using the native controls on the connected Bluetooth Device or the controls on the unit.
3. Audio played through the connected Bluetooth device will be heard through the speakers.

Using the Line In

Requires a 3.5 mm audio input cable (not included).

1. Plug one end of a 3.5 mm audio input cable into the **Line In** input on the front of the unit, and plug the other end of the cable into the audio output on an MP3 Player or other audio source.
2. Set the **Source** to **Line In**.
3. Audio played through the connected device will be heard through the speaker.

Using an SD Memory Card

1. Insert a SD memory card into the **SD Card Slot**.
2. In DVD mode, press and hold the **STOP/USB/SD** button to enter **USB/Card** selection mode.
3. Press the up or down **Arrow** buttons and then press the **OK** button to select **Card** mode.
4. Use the **Arrow** and **OK** buttons to select and play content from the connected SD memory card.

Using a USB Thumb Drive

1. Insert a USB thumb drive into the **USB Port**.
2. In DVD mode, press and hold the **STOP/USB/SD** button to enter **USB/Card** selection mode.
3. Press the up or down **Arrow** buttons and press the **OK** button to select **USB** mode.
4. Use the **Arrow** and **OK** buttons to select and play content from the connected USB thumb drive.