

User Manual

Coffee Maker

MODEL: WDC201*

1. READ these instructions carefully before installing and operating the coffee maker. Keep them for further reference.
2. Record in the space below the "SERIAL NO." found on the nameplate on your coffee maker and retain this information for future reference.

SERIAL NO.:

Please save sales receipt for warranty.



Westinghouse

INNOVATION YOU CAN BE SURE OF

CONTENTS

SAFETY INFORMATION

Important Safety Instructions	3
Electrical Requirement	5

SET UP & USE

Installation Guide	6
Parts & Features	7
Operation Instructions	8

CLEANING & CARE

TROUBLE SHOOTING & WARRANTY

Before You Call For Service	10
Customer Service	10
Troubleshooting	10
Limited Warranty	11

PRODUCT REGISTRATION

Thank you for purchasing our Westinghouse product. This easy-to-use manual will guide you in getting the best use of your coffee maker.

Remember to record the model and date code. They are on a label on the bottom of the coffee maker.

Model number

Serial number

Date of purchase

Staple your receipt to your manual. You will need it to obtain warranty service.

SAFETY INFORMATION

DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death

WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death

CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Warning, to reduce the risk of fire or electric shock, do not remove cover (or back).

No user-serviceable parts inside.

Repair should be done by authorized service personnel only.

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using.
2. To protect against electric shock, do not immerse cord, plug, or unit in water or any other liquid.
3. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
4. To disconnect, turn all controls to OFF, then remove plug from wall outlet.
5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to authorized service facility for examination, repair or adjustment.
6. Close supervision is necessary when any appliance is used by or near children. Not recommended for use by children.
7. Do not use this appliance for anything other than its intended use.
8. Do not touch hot surfaces. Use handles or knobs.
9. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury, and will void warranty.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.

SAFETY INFORMATION

13. Scalding may occur if the cover is lifted or removed during the brewing cycle.
14. Snap the cover securely to the carafe before serving.
15. Carafe is designed for use with this appliance. Never use the carafe on a range top or in a conventional oven. Do not put carafe into a microwave oven.
16. Do not set a hot carafe on a wet or cold surface.
17. Do not use a cracked carafe, or a carafe that has a loose or weakened handle.
18. Do not clean the coffee maker with scouring powders, steel wool pads, or other abrasive materials.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

SAFETY INFORMATION

ELECTRICAL REQUIREMENTS

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

POWER SUPPLY CORD

1. A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.
2. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman to install an outlet near the appliance.
3. If it is absolutely necessary to use longer cord sets or an extension cord, extreme care must be exercised.
 - a) The marked electrical rating of the cord set or extension cord must equal to or be greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.
 - b) If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - c) The longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over.

NOTE: Neither Westinghouse nor the dealer can accept any liability for damage to the product or personal injury resulting from failure to observe the electrical connection procedures.

SET UP & USE

INSTALLATION GUIDE

1. Carefully unpack the coffee maker.
2. Remove all labels and tags from the products.
3. To remove any dust that may accumulated during packaging, wash the carafe, lid, and filter basket with warm, soapy water. Rinse and dry. Do not use abrasive cleaners.

NOTE: We recommend that prior to brewing your first pot of coffee, you “brew” cold water only without ground coffee or a paper filter. This will remove any dust that may settled inside the coffee maker.

- Use only cold water - the automatic brewing system has been designed to work only with cold water.

SET UP & USE

PARTS & FEATURES

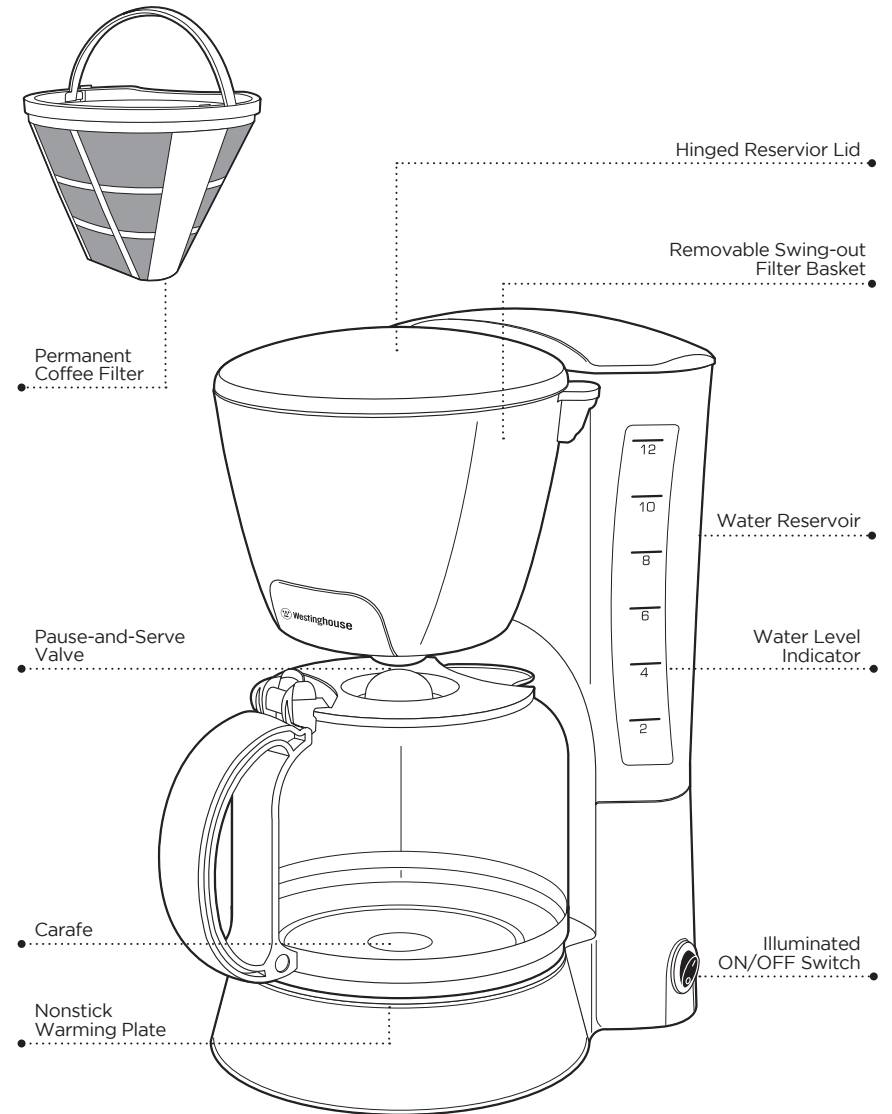


Diagram for instructional purposes only.

SET UP & USE

OPERATION INSTRUCTIONS

USING YOUR COFFEE MAKER

1. Place your coffee maker on a flat, level surface, such as a countertop. Plug the unit into a 120 volt 60 Hz AC-only outlet.
2. Swing open the filter basket. Insert a cone shape No. 2 filter into the removable filter basket. Place the desired amount of ground coffee into the paper filter. See the chart below to determine the amount of coffee to use. Your coffee maker includes a bonus permanent coffee filter. You can use this filter just as you would in place of a paper filter. To clean, rinse under warm water.

NOTE: · The swing-out filter basket and paper filter must be inserted correctly so that the filter basket closes properly. Ensure that the filter basket is fully closed prior to starting the brew cycle.

· We recommend using coffee ground specifically for automatic drip coffee makers. After using your drip coffee maker a few times you may adjust the amount to suit your own taste.

Number of Cups	Recommended
2	2 tablespoons
4	4 tablespoons
6	6 tablespoons
8	1/4 cup
10	1/4 cup & 2 tablespoon
12	1/2 cup

3. Fill the glass carafe with cold water up to the marked level for desired amount of coffee.

- NOTE:** · Use only cold water. The automatic brewing system has been designed to work only with cold water. Ensure that the filter basket is fully closed prior to starting the brew cycle.
4. Empty the water from the carafe into the water reservoir. Close the hinged lid. Place the glass carafe with the lid in place on the warming plate.
 5. Press the power switch button to "ON" (I). The "ON" (I) light will illuminate, indicating that your coffee maker has begun the brewing cycle. In a few minutes, your coffee maker will be finished brewing fresh coffee.
 6. Once the brewing cycle has completed, please ensure you manually turn the coffee maker to the "OFF" (O) position. This unit is not equipped with an automatic shut-off feature, so you will need to manually turn the unit "OFF".

NOTE: · Never leave an empty carafe on the warming plate while still hot.

PAUSE AND POUR FEATURE

Your coffee maker has been designed with a pause and pour feature. If you wish, at any time during the brewing cycle, you may temporarily remove the glass carafe from the unit and pour a cup of hot coffee. The brewing cycle will be interrupted and no coffee will drip from the filter basket. Simply replacing the carafe on the warming plate will restart the brewing process.

NOTE: · Do not remove the carafe for longer than 30 seconds.



CLEANING AND CARE

CLEANING THE COFFEE MAKER

Other than the care and cleaning procedures mentioned in this manual, no other servicing or maintenance of this unit is necessary.

Wash the carafe and carafe lid with warm, soapy water or place in top rack of the dishwasher.

To remove the filter basket, simply swing out the filter basket and lift up. You can remove the filter basket to discard your used coffee grounds. Wash the filter basket with warm, soapy water.

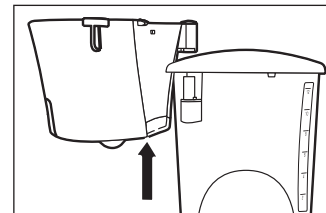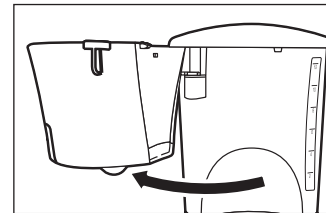

The heating stand may be wiped with a clean, damp cloth when necessary.

Do not try to clean the inside of the water reservoir with a cloth because this will leave a residue of lint and may clog your drip coffee maker. Just rinse with cold water periodically.

NOTE: · Be sure to unplug the coffee maker before cleaning. To protect against electric shock, do not immerse cord, plug or coffee maker in water or other liquid.

DECALCIFYING

Calcium build-up frequently occurs in drip coffee makers. This build-up is quite normal and is caused by minerals commonly found in drinking water.

Periodically, your drip coffee maker will need cleaning to remove any calcium or mineral deposits that may form. You will know when your coffee maker requires decalcifying when you notice an obvious slow down in brewing time.

We recommend decalcifying your drip coffee maker with a solution of white vinegar and cold water. A solution of two tablespoons white vinegar in one carafe of cold water works best.

Pour the solution into the water reservoir, then close the hinged lid and put the empty carafe into place. Switch the coffee maker on, and allow the coffee maker to "brew" the vinegar solution.

When the vinegar solution has finished brewing, empty the carafe and rinse it out with clean water. Refill the water reservoir with cold water only, and run another "brew" cycle. This will rinse out any remaining vinegar solution. If necessary, a second "brew" of water can be performed.

We strongly recommend decalcifying your drip coffee maker any time the brewing time slows down or when you begin to notice excessive steaming. The frequency of decalcifying will depend on the hardness of your water.

Suggested: Soft Water - 80 Brew Cycles
Hard Water - 40 Brew Cycles

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE COFFEE MAKER FAILS TO OPERATE:

- A) Check to make sure that the coffee maker is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE COFFEE MAKER YOURSELF.

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 1-855-855-0294.

DATED PROOF OF PURCHASE, MODEL # AND DATE CODE REQUIRED FOR WARRANTY SERVICE

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the coffee maker still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Appliance does not turn on	Appliance is not plugged in	Check that appliance is plugged into a working outlet

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Westinghouse brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service.** W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured coffee maker equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and other accessory items that are included with the unit.
12. Transportation and shipping costs associated with the replacement of the unit.
13. Food loss for loss due to product failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your coffee maker.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **1-855-855-0294**.

W Appliance Co.,
New York, NY 10018



®
®, WESTINGHOUSE, and INNOVATION YOU CAN BE SURE OF
are trademarks of Westinghouse Electric Corporation. Used under
license by W Appliance Company. All Rights Reserved.