

SAFETY GUIDE PLEASE READ CAREFULLY

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- Read all the instructions carefully before using this appliance and keep them for future reference.
- Retain the manual. If you pass the product on to a third party, make sure to include this manual.
- Unplug the appliance from the mains supply when not in use, or before cleaning any part of the appliance.
- This appliance is for household use only. Do not use it for professional catering.
- Do not use the appliance outdoors or in damp or wet conditions.
- Do not immerse the sandwich toaster or the electrical cord or plug in liquids.
- Do not use the appliance near a source of heat or on an unstable surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Make sure that the power cord does not touch any hot surface and that it does not overhang the edge of your work surface.
- When unplugging the power cord, hold the plug top, not the power cord.
- Do not use attachments or accessories which are not recommended by the manufacturer. They may cause malfunction or injury.
- Store the appliance away from direct sunlight and out of the reach of children.
- DO NOT touch the toasting surfaces when the appliance is operational. RISK OF BURNS

- Never insert any object or implement into the sandwich toaster other than bread and recommended fillings. This may cause damage to the appliance and personal injury.
- There are no user serviceable parts in your sandwich toaster. Unauthorised dismantling or servicing will void the product warranty.
- Do not operate the appliance with a damaged cord or plug or after the appliance or any component has been damaged. Take your toaster to a qualified electrical repair centre for repair.
- Do not use the appliance for any purpose not expressly specified in this manual
- This sandwich toaster is intended only for normal household use.
- The sandwich toaster must be properly installed and operated in accordance with these instructions. Failure to do this will invalidate the warranty.

DO NOT LEAVE THIS APPLIANCE UNATTENDED WHEN IT IS CONNECTED TO THE SUPPLY MAINS.

ELECTRICAL INFORMATION

Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the rating plate of the appliance.

The means of disconnecting this appliance from the mains supply is the mains plug. This should be unobstructed and readily operable at all times.

CONTROLS AND FEATURES



1. Temperature light
2. Power light
3. Safety catch

4. Upper handle
5. Upper toasting plate
6. Lower toasting plate
7. Lower handle

UNPACKING

Remove all packaging from the sandwich toaster and the toasting surfaces. Retain the packaging. If you dispose of it please do so according to any recycling regulations.

Check that the mains voltage on the rating plate under the appliance corresponds with the mains voltage in your area. If items are incorrect, missing or damaged, contact your nearest Tesco store for assistance.

USING YOUR SANDWICH TOASTER

IMPORTANT NOTE:

When switched on for the first time the sandwich toaster may emit a small amount of vapour and light smoke - this is normal - the manufacturing process includes the use of oils. The vapour will burn off safely within a few minutes.



Using the appliance for the first time:

Open the sandwich toaster with the upper handle after lifting open the safety catch.

Wipe the upper and lower toasting plates with a damp cloth containing a trace of dilute detergent. Remove all traces of detergent with a cloth dampened with clean water. Dry the toasting surfaces thoroughly.

Brush a very small amount of oil carefully over the toasting plates, making sure to cover the entire surface.

Do this for the first time only. It is unnecessary to repeat this operation.

OPERATION

Preheating the toaster:

This operation must be performed before you begin the toasting process.

- Plug the appliance into a wall electrical socket.
- Close the lid of the sandwich toaster. Switch the mains power "ON". The red power light will come on.

After a few minutes the correct operating temperature will be reached and the green temperature light will come on.

The toaster is now ready for use.

CAUTION: Whenever the toaster is connected to a live mains outlet it will be powered and the toasting surfaces will be hot.

Using the toaster:

During operation, the temperature light will go 'ON' and 'OFF'. This indicates that the unit is functioning correctly.

Cut slices of bread of sufficient size, so they do not overlap the edges of the toasting plates.

For golden toasted sandwiches we recommend lightly buttering the outside of the bread, i.e. the filling is placed between the plain sides of the bread.

If you wish to butter the insides of the bread in the normal way, you may find that after toasting a number of sandwiches, the indents (scallops) in the toaster plates may need to be re-oiled with margarine, butter or cooking oil.

Prepare one or two sandwiches, place them on the lower toasting plate and gently but firmly close the lid and click the catch into place.

If the filling is too thick, open the toaster and remove the excess. DO NOT FORCE THE LID DOWN.

Allow the sandwich to toast for approximately two minutes.

When the sandwiches are toasted open the appliance handles and remove the sandwiches.

Toasting time will be a matter of taste. Your sandwich toaster will toast both sides of the

sandwiches at once and will seal in the flavour. With "hard" fillings, stringy bread, or very thick sandwiches, you may have to cut them apart.

While the scallops are coated with a non stick coating, some fillings may melt and cause the sandwiches to adhere to the scallops. To free the sandwiches, use a heatproof plastic or wooden spatula.

NEVER USE A SHARP OBJECT SUCH AS A KNIFE OR STEEL SPATULA. THIS WILL DAMAGE THE NON-STICK COATING.

WARNING:- During use the toaster plates get very hot, and should be treated with extreme caution.

During use the surface will get hot.

USE OVEN GLOVES IF YOU NEED TO MOVE THE APPLIANCE.

Getting the best from your toaster:

Always preheat your sandwich toaster.

Always butter the outsides of the bread slices.

We recommend the use of natural hard cheeses, such as Cheddar. Avoid using processed cheeses as they tend to "run" under high temperatures.

A small amount of sugar sprinkled on the buttered sides makes the toasted sandwiches crispier.

After using the sandwich toaster:

Switch off the unit at the power outlet.

Remove the plug from the power outlet and allow the sandwich toaster to cool down completely.

INSIDE: Wipe the scallops and cutters with a clean absorbent cloth, or a length of kitchen roll.

OUTSIDE: Wipe with a soft cloth which has been rinsed almost dry in warm soapy water, and dry with a soft cloth.

DO NOT use abrasive chemicals steel wool, scouring pads or abrasive pads on either the inside or outside of the sandwich toaster.

After all the components have been cleaned and dried, stow the sandwich maker safely out of direct sunlight and out of the reach of children.

Some sandwich fillings:

Use brown, whole wheat, white or rye bread suitable to the size of the Sandwich Toaster.

Butter one side of the bread only with a thin layer of butter or spread.

The fillings below are sufficient for 4-6 sandwiches

Cheese fillings

Cheese, Tomato and Onion

250 ml grated cheese

1 large tomato, chopped and drained.

1 onion, chopped and lightly fried.

Salt, pepper and oregano to taste.

Mix all together.

Cheese and Asparagus

250 ml grated Cheddar

250 ml asparagus chopped and drained

salt, pepper.

Mix all together.

Ideal for breakfast or picnics

Bacon And Egg Sandwiches

250g rindless bacon, fried crisp and crumbled.

4-6 eggs, scrambled and lightly cooked;

Salt, pepper,

Sliced tomato, (optional)

Mix scrambled egg, bacon and salt and pepper, add sliced tomato to sandwich if required.

Ham/Salami and Egg

150g Ham or salami, cut in strips

4-6 eggs, scrambled and lightly cooked

Salt, pepper.

Mix all together.

WARRANTY

Your appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please return the unit to your nearest Tesco store together with the original receipt as proof of purchase. This warranty in no way affects your consumer rights

SPECIFICATIONS

Model:.....SMW1 sandwich toaster

Supply voltage:220-240 V~, 50Hz

Power consumption:700W

Net Weight :1.2 Kg



THIS APPLIANCE MUST BE EARTHED



UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities see www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

