

BOOST B795

3G MOBILE PHONE

USER MANUAL

ZTE Copyright © 2014. All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilised in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version 1.1 July 2014

WHAT'S INSIDE

A QUICK LOOK AROUND YOUR DEVICE	2	PLAY VIDEOS	57
GETTING STARTED	4	GALLERY	57
PHONE CALLS	20	SOUND RECORDER	57
CONTACTS	26	SECURITY	62
MESSAGES	26	UPDATING YOUR DEVICE	64
GETTING CONNECTED	43	TECHNICAL SPECIFICATIONS:	64
CONNECT TO A COMPUTER	46	TROUBLESHOOTING	66
USING THE BROWSER	47	WARRANTY INFORMATION	70
BLUETOOTH	48	SAFETY	71
USING MULTIMEDIA FUNCTIONS	53		

 
A QUICK LOOK AROUND YOUR DEVICE




GETTING STARTED

INSERT YOUR SIM CARD

1. Open the back cover using the thumb notch in the bottom left corner:

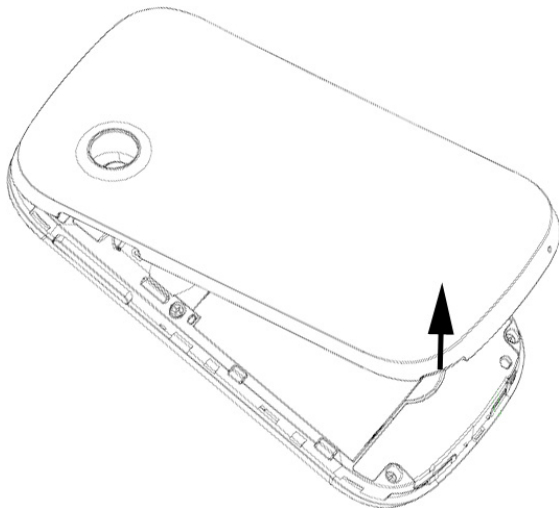


 
2. Insert your SIM card carefully into the SIM slot as shown:
Memory card is optional

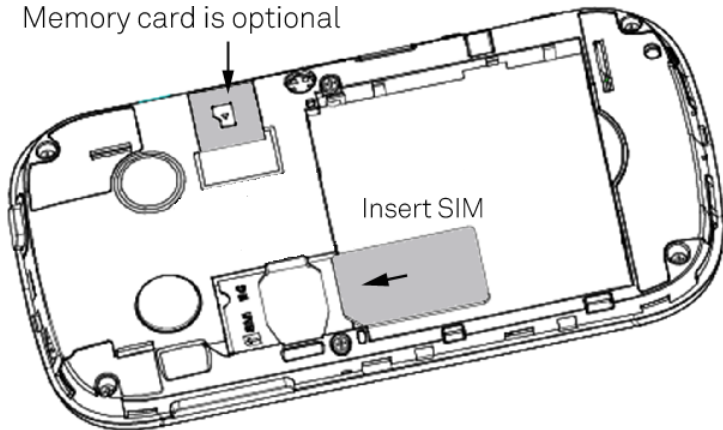


3. The handset memory can be expanded using a microSD(HC) card up to 32GB.
4. The battery will only fit one way, just check the gold pads on the battery line up with the gold springs in the phone.
5. Replace the battery cover and press to click into place.

SWITCH YOUR DEVICE ON OR OFF

  - Press and hold the Power Key to turn on your phone.
- To turn it off, press and hold the Power Key to open the options menu.
- Touch Power off and then touch OK.

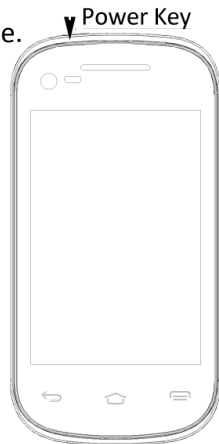

CHARGE THE BATTERY

- Ensure the plug has the correct orientation.
- Insert the charger lead carefully.
- Do not force the connector into the charger jack.
- Connect the charger to a standard AC wall outlet.
- Disconnect the charger when the battery is fully charged.
- If the phone is on, the charging icon  is shown on the status bar.
- A pop-up message on screen warns you when the battery is low.
- As you charge your phone, the lock screen displays the battery level.
- It is better to keep your battery topped up than to let it fully discharge.

SHOW BATTERY % LEVEL ON THE NOTIFICATIONS BAR

Go to Settings > Battery > Enable the Battery Percentage check box to display the current charge level on the Notifications bar.

Important Notes for Charging:

Only use the AC charger and USB lead supplied.

Insert the charger lead carefully.

Check the plug and socket are aligned correctly.

Do NOT use excessive force which may damage the USB port.

Be careful to avoid tripping on the lead whilst it is plugged in.

Physical damage to the USB port is NOT covered by warranty.

Normal charge time is 3-4 hours.

Do not leave on charge for more than 24hrs.

To maximise battery life limit multimedia functions.

Charge the battery between 0°C~45°C. Charge the battery promptly when flat.

With poor network conditions (less than 2 bars) battery life is reduced.

When not using the phone for long periods remove the battery.

TIPS TO MAXIMISE BATTERY LIFE

- After 2-3 charge / discharge cycles the battery life will improve. From then on use top up charging to recharge frequently and always charge promptly when flat.
- To avoid the battery entering a deep discharged state charge the battery promptly when flat.
- If the battery is deeply discharged it can take 30 minutes to start charging. Leave it on charge to recover the battery.
- Keep your handset and battery cool. High temperatures degrade the battery more quickly.
- Normal charge time is 3-4 hours. Do not charge more than 24hrs.
- When not using the phone for long periods charge to approx 40% and remove the battery.
- With low network signal conditions battery life is reduced.
- Turn off Bluetooth and Wi-Fi when not in use, and set the screen brightness to automatic to maximise battery life.

GOOGLE ACTIVATION WIZARD: CREATE OR LOG IN TO A GOOGLE ACCOUNT
We recommend you log in or create a new Google account to enable on line services.

Follow the on screen wizard to create or log in to an existing Google account.

TIP

If you set a lock code on your device and then forget the pattern or PIN number it can be reset using your Google Account. After entering the PIN, Pattern or Password incorrectly a number of times, the device will ask you to enter your Google Account details to unlock your device.

WAKE UP FROM SLEEP MODE

- Press the Power key to activate the display.
- Drag the padlock icon right to unlock.








SWITCH YOUR HANDSET TO SLEEP MODE

Press the Power key to activate sleep mode.

Sleep Mode activates automatically with the timeout set from Options > Settings > Display > Screen timeout.

TIP


If you set an unlock pattern, PIN or password you need to enter it to unlock the screen. If you forget your pattern or PIN use your Google Account password to reset the phone. This will only work if you register a Google account with this handset.

Keys and Icons	Function
Power Key	Hold down to power on your phone. Press to switch to sleep mode. Press to wake up. Hold down for Silent mode, Flight mode or Power off.
Back 	Press to go to the previous screen. Press to exit applications.
Home 	Press to return to the Home Screen from any screen. Hold down to access Google Search
Options 	Press to get the options on the current screen. Hold down to see the recently used applications.
Volume Keys	Use to control the volume Up and Down
	Phone icon – Open the dialer for Calls
	Contacts – Open your Phonebook for all your Contacts
	Apps – Open the Applications menu
	Messages – go to the Messages app, for SMS and MMS

THE HOME SCREEN

Slide the Home Screen left or right to view additional pages.

 Long press on the screen to add Shortcuts, Widgets, Wallpapers etc.

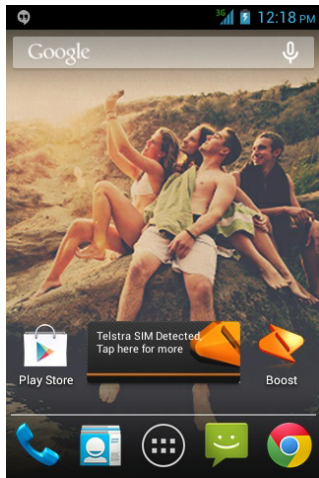

OPTIONS



Press the Options Key for

Wallpaper, set background image for the Homescreen or Lock screen

Manage Apps, view Downloaded, Running and All apps

System settings, shortcut to device Settings

ADD OR REMOVE ICONS, EXAMPLE: ADD THE CLOCK TO THE HOME SCREEN

- Press  to go to Apps then long press any icon to add it to the desktop.
- Hold the icon to move and release to place it on the home screen.
- Drag and drop the item in the trash to delete it.
- Eg: Select  > Long Press Clock to add this to your desktop:

THE NOTIFICATIONS AND CONTROL PANEL

The Notifications Panel at the top of the Home Screen shows useful device and status information. Use the Control panel to quickly enable Wi-Fi, Bluetooth, change Profiles etc.

Pull down the bar at the top of the display to view the Notifications and Control panels:

PHONE STATUS AND NOTIFICATION ICONS



Data connected



Signal strength



Data in use



Flight mode



Battery is very low



No signal



Battery is low



Speaker is muted



Battery is full



Microphone is muted



Battery is charging



Vibrate mode enabled



Speaker mode is on



FM Radio



Bluetooth is on



USB connected



GPS is on



Connected to a Wi-Fi network



Alarm is set



Headset connected

NOTIFICATION ICONS



New Email



New instant message



New SMS/MMS



Upcoming event



New voicemail



Song is playing



Missed call



Downloading data



Call in progress



Content downloaded



Call on hold



Uploading data



Call forwarding on



More notifications




Problem with SMS/MMS delivery

TIP

You can also open the Notifications panel from the home screen by tapping Options > Notifications.

APPLICATIONS AND SETTINGS

Tap  to access Applications. Flick the screen left or right to scroll through in alphabetical order.

You can install additional applications by going to Play Store

INSTALL APPLICATIONS FROM GOOGLE PLAY STORE



Tap Play Store from the Home Screen to download and install applications from the Google. Select the item and tap Install.

- You need a Google account to access Play Store
- Follow the wizard to sign in to an existing account or to create a new account.

UNINSTALL APPLICATIONS

- From the Home screen tap Options > Manage applications
- Select the application to remove
- Tap Uninstall, tap OK to confirm.

MULTI-TASKING

Run multiple applications simultaneously. Press the Home key from any application to launch, open or view something else. The original application will be suspended until you return to it.

TIPS

If you are finished with an application use the Back key to exit the application. If you leave applications running in the background the system memory will be depleted and the device will be slow to respond. Return to the app and close it, or from the Home screen press Options > Manage Apps > Running and select tasks to close them down.

OPEN RECENTLY USED APPLICATIONS

Press and hold the Options Key  from any screen to view recently used applications.

Tap Options > System Settings from the Home Screen:

SETTINGS MENU	
Wi-Fi	Connect to Wi-Fi devices and Networks
Bluetooth	Connect to Bluetooth devices and Networks
Data usage	View your data usage, and control Mobile Data
More...	Flight mode, Tethering and portable hotspot, VPN, Mobile networks
Sound	Sound levels, ringtones, notifications, vibrate.
Display	Brightness, screen timeout, orientation etc.
Storage	Check memory status. Mount or unmount the SD card
Battery	See what has been consuming your battery power. See how long the phone has been running.
Apps	Manage applications, set Quick Launch shortcuts, see running services and battery usage.



SETTINGS MENU

Location	Configure Location modes and services
Security	Set screen locks, enable SIM PIN etc
Language & input	Set the language and keyboard options.
Backup & reset	Backup your data on Google servers, and perform a factory reset to remove your default account.
Account	Add and remove accounts.
Date & time	Set the date, time, time zone, and formats. Enable automatic time update.
Schedule power on & off	Set a scheduled power on and off time.
Accessibility	Download a screen reader application and make other Accessibility settings
About phone	System updates, Status, Build information.

PHONE CALLS





MAKE A CALL FROM THE DIALER

- Unlock the phone and press the Call Key 
- Tap numbers on the dial pad or select from Call Logs, Contacts, or Favourites using the tabs at the bottom of the screen.
- Tap the call key  to make the call.
- Press End to end the call.


TIP You can make a call from any place you see the phone icon

MAKE A CALL FROM CONTACTS



- Tap  from the Home Screen. Contacts are displayed in alphabetical order.
- Slide up or down to scroll through your Contacts list.
- Tap to select the Contact then tap to call.

TIP Tap  to search for a Contact.

MAKE A CALL FROM CALL LOGS

- Unlock the phone and press the Call Key 
- Tap the Clock icon to view your Call logs.
- Scroll and tap the required number to start the call, tap the arrow button to view the call details if required

MAKE A CALL FROM A TEXT MESSAGE

- Unlock the phone and press  for messages. Tap the thread that contains the phone number to call.
- Tap the number then tap 
- Press End to end the call.

TURN THE SPEAKER ON/OFF (HANDSFREE)

Tap Speaker during a call. The speakerphone icon  is displayed.

MUTE A CALL

During a call tap Mute to mute your microphone.



The mute icon  is displayed.

MAKE A CONFERENCE CALL

A conference call can be made between yourself and two or more other parties.


- Call the first number.
- While you are connected, tap Add call.
- Call the second number.
- While you are connected to the second number, tap **Merge**
- To add the third party, tap Add call.
- Dial the number, and when connected, tap **Merge**


MAKING AN INTERNATIONAL CALL

- Press the Call Key  on the home screen to open the dialer.
- Hold down the 0 key to enter the '+' symbol for International Dialling
- Enter the full phone number.
- Tap  to make the call.
- Press End to end the call.

ANSWER AN INCOMING CALL

 
An incoming call presents three options:

Drag  right to answer the call


Drag  left to reject the call.

Drag  to Messages to send an SMS.

The default return SMS can be set at Dialler > Settings > Other settings > Quick responses.

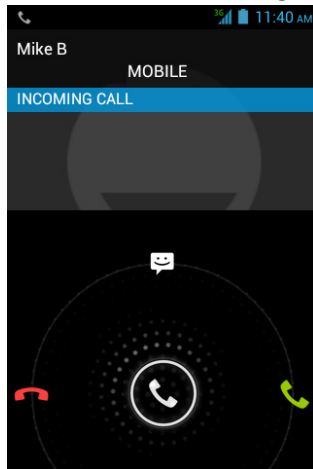

FUNCTIONS DURING A CALL

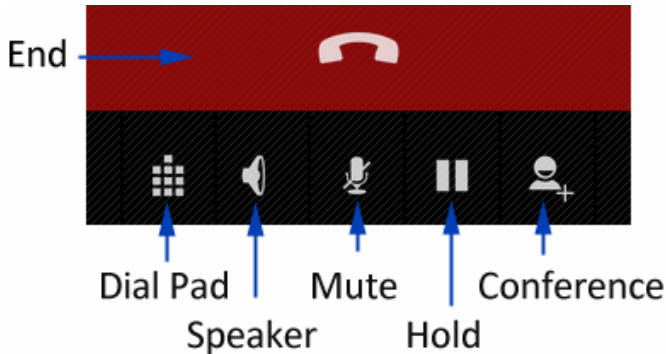 

During a call when you move the handset away from your ear the screen lights up. Use the buttons for the features described:

Dial Pad – enter DTMF tones

Speaker – Use Handsfree, Speaker mode

Mute – Mute the microphone

Hold – Place the caller on Hold

Conference – Dial in another party, the first call is put on hold.

INSERT A PAUSE OR WAIT SYMBOL INTO A PHONE NUMBER

- Enter the phone number on the Dial pad.
- Press Options > Add 2-sec pause to add a Pause
- Press Options > Add Wait to wait for the next key press.

CALL SETTINGS

From within the Dialler, press Options > Settings > Call settings:




Voice Call	Configure Voice Mail, IP calling, Call forwarding, Call barring, Additional > Caller ID, Call Waiting
Internet call	Configure internet based (SIP) accounts
Other settings	Fixed dialling numbers* Minute reminder Quick responses TTY mode



* Requires network support

CONTACTS






Add contacts to your phone and synchronise them with your Google account or other accounts that support contact syncing.

To see your contacts, touch **Home** > . From there, touch the tabs on the top of the screen to quickly switch to contact groups  or favourites .

- Touch Home >  and touch the all contacts tab  to access your contact list.
- Scroll through the list to view all your contacts.
- Touch a contact to view its details.

TIP: If you have a lot of contacts stored, you'll see a slider when you touch the right side of the screen. To go directly to a letter, press and hold the slider and drag it to a letter.

Adding a New Contact



- Touch Home >  and touch the all contacts tab .
- Touch  to add a new contact.
- Touch the account field on the top of the screen to choose where to

save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.

- Enter the contact name, phone numbers, email addresses, and other information.
- Touch DONE to save the contact.

Setting Up Your Own Profile

You can create your own name card in your phone.

- Touch Home >  and touch the all contacts tab .
- Scroll to the top of the screen and touch Set up my profile.
- Edit your profile information and touch DONE.



Import, Export, and Share Contacts

You can import/export contacts from/to your SIM or microSD card.


This is useful when transferring contacts between different devices.

Import your SIM card Contacts to add more features such as dedicated Ringtone, Photos etc.



Import Contacts From the SIM Card

- Touch Home >  > Options
- Touch Import/export > Import from SIM card.
- (If you have an account, Select the save account)
- Touch to select the contacts to import and then touch .

 
Import Contacts From the microSD Card

- Touch Home >  > Options
- Touch Import/export > Import from SD card.
- Select an account to save the contacts.
- Select the vCard file(s) in the microSD card and touch OK.




Export Contacts to the SIM Card

- Touch Home >  > Options
- Touch Import/export > Export to SIM card.
- Touch to select the contacts and then touch .

Export Contacts to the microSD Card




- Touch Home >  > Options
- Touch Import/export > Export to SD card.
- The phone will prompt you with the name of the vCard file. Touch OK to create the file in the microSD card.

Share Contacts




- Touch Home > , touch the all contacts tab .
- Touch Options > Select item(s).
- Touch to select the contacts you want to share and then touch .
- Choose to share the contacts via Bluetooth, Email, Gmail, Messaging.

Add a Contact to Favourites




You can add the contacts used frequently to Favourites, so you can find them quickly.

- Touch Home >  and touch the all contacts tab .
- Touch a contact and then touch  to add to favourites.





Remove a Contact From Favourites

- Touch Home >  > touch the favourites tab .
- Touch a favourite contact and then touch .



Using Groups

- Touch Home >  and touch the contact groups tab .
- Touch  to create a new group.
- Touch the account field on the top of the screen to choose an account for the group.
- Enter the group name and touch DONE.



Add Members to a Group

- Touch Home >  and touch the contact groups tab .
- Touch a group and then touch .
- Touch to select the contacts to add as group members.
- Touch .



Delete a Group

- Touch Home >  > touch the contact groups tab .
- Touch a group and then touch Options > Disband group.
- Touch OK to disband the group. The contacts in the group will not be deleted.

Edit a Group

- Touch Home >  > touch the contact groups tab .
- Touch a group and then touch Options.
- Touch Rename group to edit the group name. Or touch Select item(s) to select the members you don't need and remove them.

Searching for a Contact


- Touch Home > .
- Touch  on the bottom of the screen.
- Input the contact name to search. The contacts matched will be listed.

Edit Contact Details


- Touch Home > .

- Touch a contact to edit and then touch Options > Edit.
- Edit the contact and touch DONE when finished


Set a Ringtone for a Contact

- Touch Home > .
- Touch a contact to set a ringtone and then touch Options > Set ringtone (Contact must be saved on the phone)
- Select a ringtone and touch OK.

Delete a Contact

- Touch Home > .
- Touch a contact to delete and touch Options > Delete.
- Touch OK to confirm.

To delete several contacts:


- Touch Options > Select item(s) in the all contacts screen.
- Touch to select the contacts to remove and then touch .
- Touch OK to confirm.

Join Contacts

Your phone can synchronise with multiple accounts containing your contact information (such as Google, Microsoft Exchange ActiveSync, Facebook and Twitter). When you synchronise your phone with those accounts, each account adds a separate contact entry in the Contacts list.

The Join and Separate feature is only available in the menu after synchronising multiple contact sources. If you are only using SIM or Phone Contacts this option is not available.

You can merge all the separate information of multiple accounts into one record in the Contacts list.


- Touch Home > .
- Touch a contact to set as the prime contact. This is the contact you will see in the list after the joining.
- Touch Options > Join. The phone will list the suggested contacts to join.
- Touch the contact whose information you want to join with the first contact.

The information from the second contact is added to the first contact,

and the second contact is no longer displayed in the Contacts list.

Separate Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.


- Touch Home > .
- Touch a contact you want to separate, to view its details.
- Touch Options > Edit > Options > Separate.
- Touch OK to confirm.



The contact information is separated into individual contacts in the list of contacts.

MESSAGES



SMS AND MMS MESSAGES



From the Home screen tap the messages icon  to access SMS and MMS messages.

Unread message(s) display the  (SMS) and  (MMS) icons. Open new messages from the Notifications Panel or the Messaging Screen. Tap the message to read it.

COMPOSING AN SMS

- If the Messages app opens into an existing thread press the Back key to return to the SMS main menu.
- Tap the messages icon > Compose new message.
- Tap the To field to enter the recipient's number. You can also enter letters to display matching Contacts and select a recipient from the list or tap the Contacts icon to see your Contacts list.
- Tap the Type to compose field to type your message.
- Tap Send when done.

SEND A MULTIMEDIA MESSAGE

- On the Messaging screen, touch  at the bottom to create a new message.
- Enter the recipient and the text of the message, as you do when sending a text message.
- Touch the  icon to add an attachment:

Capture picture	Take a photo and add to your message.
Capture video	Shoot a video clip and add to your message.
Record audio	Record an audio file and add to your message.
Contact	Select a contact to add as an attachment.
Pictures	Select a picture to add to your message.
Videos	Select a video clip to attach to your message.
Audio	Select an audio file to add to your message.
Calendar	Add a Calendar event such as an appointment or meeting (VCS).
Slideshow	Add a series of pictures

Touch ► to Send.

TIPS: The maximum MMS size is 2MB. Large images are automatically re-sized but video files may be too large to send. Send large Video files by email instead or share using Social Media.

FORWARDING A MESSAGE

Long press the individual message to get further options such as Forward, Delete, View message details etc.

MANAGING MESSAGES AND MESSAGES THREADS

SMS and MMS messages sent and received are grouped into message threads in the Messaging screen. Message threads show you the history of messages from the specific contact. Threads are sorted by received time, with the latest one at the bottom.

REPLY TO A MESSAGE

- Tap the message (or thread) you want to reply to from the Messaging Screen.
- Tap Type to compose and enter the contents of your message.
- Tap Send when done.

ACCESS DRAFT MESSAGES

Draft messages are automatically saved when you exit the message application without having sent the message. If you have any messages in Draft status they are marked in red with **Draft**

DELETE A MESSAGE (THREAD)

- Tap Options > Delete threads from the Messaging Screen.
- Select the messages or threads you want to delete.
- Tap OK.
- To delete an individual message (not a thread) tap and hold the message and select Delete from the available options.

You can also delete a message by opening it from the Messaging

Screen and tapping Options > **Delete messages.**

MESSAGE SETTINGS

Tap Messages > Options > Settings to configure message settings such as Font size, Storage settings, SMS Settings, MMS Settings, Notifications settings and Signature settings.

MULTIPLE SMS MESSAGE CHARGING:

A standard SMS message can contain up to 160 characters. If you exceed this length the message will be sent as more than 1 SMS. You will be charged for multiple SMS messages depending on the length.



SET YOUR EMAIL ACCOUNT

Create an Email account to receive Emails on your phone.

- Tap Apps > Email to set up your email account
- Enter your Email address and Password
- Follow the prompts. You may need to refer to your email service provider to complete the settings.
- Set your required options choosing from the Account options screen.

You can also use web based email accounts or download specific email clients for your email provider.

COMPOSE AN EMAIL

- Tap Apps > Email > Options > Compose
- Tap the To field and enter the recipient's address. Tap Options > Add Cc/Bc to add more recipients if required.
- When you enter the address, the matching addresses saved in your Contacts will be displayed. You can tap the recipient from the list.
- Enter the subject and the content of your Email.

- Tap Send.

REPLY, REPLY TO ALL, FORWARD AN EMAIL

- Tap Apps > Email to see your Inbox.
- Press and hold the email
- Select from Open, Delete, Forward, Reply all, Reply, Mark as unread.
- Enter the contents / recipients of your Email. Tap Send.

EMAIL SETTINGS

Tap Apps > Email > Options > Accounts > Long press the account > Account settings

ACCOUNT SETTINGS

- Account name: Set your account name.
- Your name: Set the name displayed on the outgoing message.
- Signature: Edit your signature.
- Inbox check frequency: Set the email checking frequency.

- Default account: Send email from this account by default.

NOTIFICATION SETTINGS

- Email notifications: Status bar notification for new Email
- Select ringtone: Incoming Email notification
- Vibrate: Enable vibrate with ringtones when Email arrives.

SERVER SETTINGS

- Incoming settings: Set the incoming server settings.
- Outgoing settings: Set the outgoing server settings.

GETTING CONNECTED

CONNECT TO THE INTERNET

You can access the internet through the mobile network or via Wi-Fi. When logged on to a Wi-Fi connection, all data will be sent via your Wi-Fi network.

To disable mobile network data slide down from the top of the handset screen to open the quick settings panel, then switch off data connectivity using the Data conn. button.

WI-FI

Wi-Fi provides wireless Internet access over distances of up to 50 meters.


- Tap Home > Options > Settings > Wireless & networks.
- Select the Wi-Fi check box to turn Wi-Fi on.

CONNECT TO A WI-FI NETWORK

- Tap Home > Options > Settings > Wireless & networks > Wi-Fi settings

- The available Wi-Fi network names and security settings (open or secured) are displayed.
- Tap a network to connect.
- An open network will automatically connect,
- If you select a secured network you need to enter a password.

CHECK THE WI-FI NETWORK STATUS

- Check the wi-fi icon  in the status bar.
- Tap Home > Options > Settings > Wireless & networks > Wi-Fi settings, tap the current wireless network to view the network status.
- Set Wi-Fi always on Home > Options > Settings > Wireless & networks > Wi-Fi settings > Options > Advanced > Wi-Fi sleep policy.

SET UP A WI-FI HOTSPOT

A Wi-Fi hotspot shares your network internet connection with other devices nearby. For example, if you are travelling you can connect your laptop wirelessly to your handset to use the internet.

Options > Settings > Wireless & networks > Tethering & portable hotspot > Portable Wi-Fi hotspot

Select Configure Wi-Fi hotspot and add a password to your device.

USING USB MODEM TETHERING

Use USB tethering to connect a computer to the internet using your device network connection.

Plug your handset to a computer using the USB lead supplied.

Options > Settings > Wireless & networks > Tethering & portable hotspot > USB tethering.

CONNECT TO A COMPUTER

Connecting to a computer enables you to transfer music, pictures and other files to and from your handset. There are various ways to do this.

1. Connect using a USB lead. Select Built-in CDROM to install handset drivers for Windows PC's
2. Select MTP on the handset to browse the handset folders on your PC.
- 3 Use Google Drive to share files in the cloud
4. Connect via Bluetooth to share files with other devices.

 
See the full User Guide available on line at www.zte.com.au for more details.


MAC users need to download the File Transfer app from Android onto your MAC device.

Select Built-in CDROM to install handset drivers for Windows PC's

USING THE BROWSER

You can use your Browser to visit most websites.




- Tap the Google Search box on the Home Screen.
- Enter your search request using the keypad.
- Press the arrow when done.
- Tap the microphone icon  to use speech recognition. Speak your request clearly into the handset microphone.
- From the Home Screen tap on the Chrome icon to launch Chrome

BLUETOOTH

Bluetooth enabled devices can exchange information within a distance of about 10 meters without any physical connection. The Bluetooth devices must be paired to share information.

TURNING BLUETOOTH ON OR OFF

- Switch Bluetooth on or off from the quick settings panel or
- Tap Options > Settings > Wireless & networks.
- Tap the Bluetooth check box to turn Bluetooth on.
- The  icon is displayed in the status bar. To turn Bluetooth off, clear the Bluetooth check box.

MAKE YOUR DEVICE VISIBLE TO OTHER DEVICES

- Tap Options > Settings > Wireless & networks > Bluetooth settings.
- Select the Bluetooth check box to turn on.
- Select the Discoverable check box to make your device visible to other devices.

CHANGE YOUR DEVICE NAME

 
- Tap Options > Settings > Wireless & networks > Bluetooth settings.
- Select the Bluetooth check box to turn on.
- Tap Device name.
- Enter the name and tap OK.


PAIR WITH ANOTHER BLUETOOTH DEVICE

- Both devices must have Bluetooth turned on.
- Tap Options > Settings > Wireless & networks > Bluetooth settings.
- Tap Scan for devices to display available devices in your vicinity.
- Tap the device to pair with and enter your PIN if required. The same PIN should be used on both devices.
- File transfer (OPP) is set to Always ask.

USING THE BROWSER

Use the Google Search bar on the Home Screen or use Google Chrome.




- Tap the Google Search box on the Home Screen.
- Enter your search request using the keypad.
- Press the arrow when done.
- Tap the microphone icon  to use speech recognition. Speak your request clearly into the handset microphone.

The first time you open Chrome you are guided through how to use by on screen instructions and demos. Type the search in the top bar. Press Options for new Tabs, Incognito browsing, Bookmarks and other Settings options.

BLUETOOTH

Bluetooth enabled devices can exchange information within a distance of about 10 meters without any physical connection. The Bluetooth devices must be paired to share information.

TURNING BLUETOOTH ON OR OFF

- Switch Bluetooth on or off from the quick settings panel or
- Tap Options > Settings > Wireless & networks.
- Tap the Bluetooth check box to turn Bluetooth on.
- The  icon is displayed in the status bar. To turn Bluetooth off, clear the Bluetooth check box.

MAKE YOUR DEVICE VISIBLE TO OTHER DEVICES

- Tap Options > Settings > Wireless & networks > Bluetooth settings.
- Select the Bluetooth check box to turn on.
- Select the Discoverable check box to make your device visible to other devices.

CHANGE YOUR DEVICE NAME

- Tap Options > Settings > Wireless & networks > Bluetooth settings.
- Select the Bluetooth check box to turn on.
- Tap Device name.
- Enter the name and tap OK.

PAIR WITH ANOTHER BLUETOOTH DEVICE

- Both devices must have Bluetooth turned on.
- Tap Options > Settings > Wireless & networks > Bluetooth settings.
- Tap Scan for devices to display available devices in your vicinity.
- Tap the device to pair with and enter your PIN if required. The same PIN should be used on both devices.
- File transfer (OPP) is set to Always ask.

USING MULTIMEDIA FUNCTIONS

TAKING PICTURES

Line up your shot and tap the shutter button to take the picture.

- Tap the thumbnail in the bottom corner of your screen to view the picture.
- Tap the Settings button to review the camera settings

VIDEO RECORDER

- Select the Video camera switch from the main camera window
- Tap the shutter button to start shooting.
- Long press, or press and hold the shutter to pause
- Tap the shutter button to stop shooting
- Tap the icon in the right corner to view the last video clip.
- Tap the Settings button to review the video settings

FM RADIO

To use the FM radio you must insert the headphones for the antenna.

OPEN THE FM RADIO

- Insert the headphones
- Tap Home > Options > FM Radio
- Touch the arrow controls to scan for available channels
- Press the star to add to favourites
- Press Options to view your Channel list where you can long rpress on the channel to rename or delete it.
- Press the Power symbol to close the radio, otherwise it will continue to run in the background.

MUSIC

You need to have audio files stored on your memory card. Use downloads, Bluetooth or PC Connectivity to save files onto your memory card.

- Tap Home > Apps > Music
- Select from Songs, Playlists, Folders, Albums, Artists or Genre
- To play continuous tracks, select Songs > Options > Play All
- To play an album select Album then click the first track

CREATING PLAYLISTS

- Select a music file to add to a new playlist.
- Tap and hold on the file until a shortcut menu pops up.
- Tap Add to playlist.
- Tap New.
- Enter the playlist name and tap Save.
- The playlist is created and the selected file is added to the playlist.

MANAGING YOUR PLAYLISTS

- Tap Playlist from the Music Screen to view all playlists.
- Hold on the playlist you want to play or edit until a shortcut menu pops up.
- Tap Play to play the playlist.
- Tap Delete to delete the playlist.
- Tap Rename to edit the playlist name.

SETTING A SONG AS RINGTONE

- Open the folder where the song you want to set as ringtone is.
- Hold on the song until a shortcut menu pops up.
- Select Use as ringtone.

TIPS

You can also set a song as a ringtone when you are playing it by tapping Options > Use as ringtone.

The play controls are also available on the Control panel

PLAY VIDEOS

- Tap Home > Apps > Gallery, or Video Player
- Touch and Slide on the left of the screen to adjust the Brightness. Slide on the right to adjust the Volume, Slide on the bottom of the screen to use FW, RW and tap to Pasue and Resume.

GALLERY

Use Gallery to view pictures and play back videos. You can also set pictures as wallpaper, contact icons and share them with your friends.

SOUND RECORDER

Sound Recorder enables you to record voice memos that you can also set as a ringtone.

Tap Home > Apps > Sound Recorder.

GOOGLE APPLICATIONS

SIGN IN OR CREATE YOUR GOOGLE ACCOUNT

Sign in to your Google Account to synchronise Gmail, Calendar, and Contacts between your phone and the web.

- Tap a Google application, such as Talk or Market.
- Follow the instructions in the wizard and tap Next.
- Tap Sign in if you have a Google account.
Enter your user name and password, and then tap Sign in.
- Tap Create if you do not have a Google account.

USING GMAIL



Gmail is Google's web-based email service. Gmail is configured when you sign in to your Google account. Depending on your synchronisation settings, Gmail on your phone is automatically synchronised with your Gmail account on the web.

Tap Apps > Gmail to open.

CREATE AND SEND AN EMAIL

- In the Inbox, press Menu and then tap Compose.
- Enter email address in the To field. If you are sending an email to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
- Enter the email subject, and then compose your email.
- After composing your email, tap Send.

USING GOOGLE CALENDAR

Tap Home > Apps > Calendar to use Google Calendar. You can use the calendar to schedule appointments, meetings and other events. Your appointments are displayed on the screen as they are scheduled. All appointments are synchronised to your Google account, which enables you to share your schedule, get your entire calendar on the go, and receive Email reminders for your upcoming events.

USING GOOGLE TALK



Google Talk is an instant messaging program to communicate with other Google Talk users.

OPEN GOOGLE TALK

Tap Home > Apps > Talk.

ADD A NEW FRIEND

You can only add people who have a Google Account.

- In the Friends list, press Options > Add friend.
- Enter the Google Talk instant messaging ID or Google email address of the friend you want to add.

VIEW AND ACCEPT AN INVITATION

- In the Friends list, press Options > More > Invites.
- All chat invitations you have sent or received are listed on the pending invitations screen.
- Tap a pending invitation, and then tap Accept or Cancel.

CHANGE YOUR ONLINE STATUS

- Tap the online status icon to update your status.
- Tap the status message box and enter your status message using the onscreen keyboard.

START A CHAT

- Tap a friend from your Friends list and enter text on the on-screen keyboard.
- After entering your message, tap Send.

SECURITY

SET A SCREEN UNLOCK PATTERN, PIN, OR PASSWORD

Protect your phone from unauthorised use by creating a personal unlock pattern, PIN or password. Use a pattern, PIN or password you can easily remember.

- Tap Home > Options > Settings > Security > Set up screen lock
- Choose from Pattern, PIN or Password.
- Example for Pattern:
 - Watch the demo and tap Next
 - Draw a pattern of your choice, tap Continue
 - Draw the pattern again and tap Confirm.
- We recommend you register a Google account before setting your unlock pattern, PIN or Password. After five incorrect entries press Forgot Pattern to enter your Google account password to reset the screen lock.

UNLOCK THE SCREEN WITH A PATTERN

- Press Power Key.
- Draw your pattern to unlock the screen. If you make a mistake you can try again up to five times.

If you forget the unlock pattern then after five attempts you can enter your Google account details to unlock your device.

SET A SIM CARD PIN LOCK

- Set a PIN code on your SIM card to prevent others from using your account.
- The initial PIN code is provided by your service operator.
- Tap Options > Settings > Security > Set up SIM card lock.
- Select Lock SIM card. Enter the PIN and tap OK.

CHANGE SIM PIN

Before changing the SIM PIN, you need to enable it.

UPDATING YOUR DEVICE

Your phone can download and install Software updates.

Options > Settings > About phone > System updates

The software update service checks an online server to see if any updates are available for your phone. If an update is available you can choose whether to download and install the update.

Downloading via Wi-Fi is highly recommended. Data usage charges will apply if downloading via mobile networks such as the Telstra Next G[®] network. International roaming data charges will apply for customers downloading the upgrade on a mobile network whilst travelling outside of Australia.

A firmware update will require a restart of your device.

TECHNICAL SPECIFICATIONS:

Size and Weight	121 × 62.1 × 11.5 mm. 120g with battery
Networks	3G UMTS 850, 2100 MHz. HSPA+ 21Mbps data 2G GSM 900, 1800, 1900 MHz
Display	TFT 3.5", 320 x 480, Capacitive touch
Back camera	2.0M Pixels
Memory card	Supports microSD(HC) memory up to 32GB
Battery	Capacity 1200mAh Li-ion
	Charge Time 3-4 hrs with AC Charger
	Standby time 200 hours (subject to network)
	Voice talk time 3 hours (subject to network)
Connectivity	Bluetooth 3.0 Wi-fi 802.11b/g/n
Supported file types	jpg, gif, png, amr, mid, mp3, mp4, 3gpp, h263
Audio	3.5mm headset jack

TROUBLESHOOTING

PLEASE CHECK THE MANUAL THOROUGHLY BEFORE CONTACTING YOUR SERVICE PROVIDER.

Symptom	Solution
How do I check the software version?	Menu > Settings > About phone > Build number
How do I reset to factory defaults?	Menu > Settings > Backup & reset > Factory data reset
How do I check the SMS service centre number?	Menu > Messages > Options > Settings >Text Message (SMS)
How do I configure the MMS Settings?	Menu > Messages > Options > Settings >Multimedia Message (MMS)
How do I configure Email settings?	Apps > Email, or Menu > Settings > Accounts
How do I copy Contacts to or from my SIM card?	Contacts > Options > Import/Export > Follow the directions on screen

Symptom	Solution
How do I select Network mode?	Menu > Settings > More > Mobile Networks > Network mode
How do I manually select a carrier?	Menu > Settings > More > Mobile Networks > Network operators
How do I enable USB tethering?	Menu > Settings > More > Tethering and Portable hotspot. Connect as CDROM to install drivers
How do I configure APN's	Menu > Settings > More > Mobile Networks > Access Point Names > New APN
How do I enable Flight Mode?	Long press on the power key > Flight Mode
How do I clear my Browser?	Browser > Options > Settings > Privacy > Clear Browsing Data
How do I check Call forwarding etc	Calls > Options > Settings > Voice call > Call forwarding
How do I check for Software Updates?	Menu > System updates

Symptom	Solution
How do I get more technical support?	Visit zte.com.au or call 1300 789 475 during office hours AEST.
How do I change the Ringtone?	Menu > Settings > Sound > Phone Ringtone
The battery discharges quickly	Possible network coverage issue. Check the signal level. With only 1 or 2 bars, the battery has to work harder to maintain network contact. Limit multi-media to save power. The battery may be worn out.
The handset switches on by itself.	An alarm or calendar event switches the handset on automatically.
No incoming ring or alarm tone	Hold the power key to check the phone is not in silent mode. Check the ringtone and ring volume settings.

Symptom	Solution
I cannot charge the phone	Confirm the charger is properly inserted. Remove the battery, clean the contacts and check it is inserted correctly. The battery may be worn out. Tip: Charge the phone using the supplied USB cable.
The handset switches off after charging.	The handset is charging in the off state. Press and hold the Red key to switch the handset ON.
I cannot connect to other Bluetooth devices	Turn Bluetooth on. Set visibility to Show. Make sure the pass-code is correct. Possible compatibility issues. Not all functionality is supported between different Bluetooth devices and standards.

WARRANTY INFORMATION

The warranty does not apply to defects or errors caused by:

- (a) Normal wear and tear, mishandling, physical damage, improper installation.
- (b) Water, exposure to solvents or any other liquid damage.
- (c) Any unauthorised disassembly, repair or modification.
- (d) Power surges, lightning, fire, flood or other natural events.
- (e) Use of the product with unauthorised third party products such as generic chargers.
- (f) Any other cause beyond the range of normal usage for products.

The End User shall have no right to reject, return, or receive a refund for any product under the above-mentioned situations. The End User's statutory rights are not excluded by these terms and conditions.

Note: Consult the warranty card for full information.

SAFETY

GENERAL STATEMENT ON RF ENERGY

The phone is a low-power radio transmitter and receiver. When switched on it intermittently transmits radio frequency (RF) energy (radio waves). The transmit power level is optimised for best performance and automatically reduces when there is good quality reception. Maximum power is only used at the edge of network coverage so under most circumstances the power output is very low. Under poor network conditions the phone transmits at a higher power, may get hot and have a shorter battery life.

SPECIFIC ABSORPTION RATE (SAR)

The phone is designed not to exceed the limits for exposure to radio waves recommended by the ICNIRP. The limits include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines measure the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2W/Kg and the highest SAR value for this device is 0.906W/Kg.

PRODUCT SAFETY INFORMATION



Please read all instructions before use



This device may produce bright or flashing lights



Do not use while driving



Do not dispose of in fire



Do not use while re-fuelling



Avoid contact with magnetic media



Small parts may be a choking hazard



Avoid Extreme Temperatures



This device may produce loud sounds



Avoid any contact with liquid, keep it dry



Keep away from pacemakers and other personal medical devices



Only use approved accessories



Obey warning signs in hospitals and medical facilities



Do not attempt to disassemble



Switch off when flying



Do not rely on this device for emergency communications



Switch off in explosive environments

This device is certified by the Wi-Fi Alliance.



microSD™ is a trademark of SD Card Association