ENGLISH

# Buono

OThis product is intended for home use.

OPlease read this user's manual completely before using for the ?rst time. OImproper handling may result in an accident.

- OKeep this manual at hand for easy reference.
- OThis product is used for these cooking utensils on right side. Compatible all ?res (except microwave,oven)



SG mark for cooking heater compatible cooking utensil

VKB-120 06.08 S CH·IH

Obisplay of this mark is permitted only to cooking utensils that are compatible with the safety certi?cation standard that the Consumer Product Safety Association has estab lished for safe use with cooking heaters. It is part of a warrantee program against physical injury due to defective cooking utensils.

#### Caution in using the product

- OPlease check every part of the product to ensure there is no problem before using the product. Please do not use the product if any sign of a crack, chipping, dent, bending, slackness or other abnormality is discovered.
- OPlease do not use the product for any purpose other than boiling water since it may result in discoloration or corrosion. Do not use the product for cooking.
- ODo not use the product if it is ?lled with water to the brim. Always ?ll the product with water only up to the proper level. Over?lling the product may result in hot water to boil over and may result in burn injury.
- ONever heat the product empty. Heating an empty product may result in deformation or damage to the product and may also cause a ?re or burn injury.
- ODo not apply heat with the lid off. This will cause the handle to become heated by steam, which may cause burn injury. In addition, this may damage the handle.
- OThe handle may become very hot while boiling water or soon after boiling water. Use a pot-holder or kitchen mitten to avoid burn injury.
- OKeep the product away from children while boiling water or soon after boiling water to avoid children from touching the product.
- OPlease do not remove the lid while holding the handle after emptying boiled water from the product or if boiled water remains in the product. Steam may cause injury from burn.
- ODo not use the product if the handle becomes loose. It may result in the product dropping and cause burn injury.
- OPlease tighten the knob of the lid if it becomes loose. If the handle is damaged, do not attempt to repair or modify the handle and use the product.
- ODo not use the product on top of a space heater. This may result in the product toppling over and cause burn injury.
- OAttempting to pour out boiled water from the product immediately after water is boiled may result in hot water to splatter. Please wait at least 20seconds after turning off the heat.
- OPlease follow the effective capacity of the product in using the product.

# Using the product on a cooking heater

OEnsure to wipe off any water adhering to the bottom of the product before putting it on a cooking heater for a more effcient heating. OEnsure to place the kettle at the center of the heater.

OA humming noise may occur while heating the product on an IH heater. This is caused by vibrations of the heater and the kettle resonating. This does not mean that the kettle is defective.



Compatible all ?res

(except microwave oven

### Using the product on a gas range

- ODo not use the product to boil small amount of water. Part of the body that is not in contact with water will be overheated and become discolored.
- OPlease adjust the ?ame so that the ?ame does not spread out beyond the bottom of the product. The handle and lid knob may become overheated and become deteriorated or discolored if the ?ame is too large.
- OPlease place the kettle at the center of the cooking range to ensure stability while boiling.

## Caution

OSince the pouring spout, body and opening are small, there is a risk of boiling water to boil over from theseopenings. Please ensure not to over ?ll and take care to control the amount of heat to apply.


OApply some dishwashing detergent on a washing sponge and wash the product 2 to 3 times and rinse

off thoroughly before using the product for the ?rst time.

OThen put some water in the product and let the

water boil. Repeat this procedure once or twice.

ORemove all stickers, if any, attached to the body of

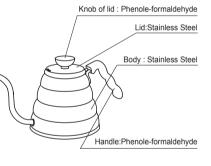

#### Care after use

Preparation before use

ODo not use chlorine bleach.

the product before use.

- OWash the product thoroughly using a sponge or a scrubbing brush. Wipe off any water and let the product dry thoroughly.
- OAllowing traces of salt or oil to remain on the surface of the product may result in corrosion. Please ensure to keep the product clean.
- OPlease be aware that allowing the product to remain in contact with other products made of steel or aluminum may cause corrosion to develop.
- Olf any sign of corrosion is discovered, apply some scouring compound cream on a sponge or a scrubbing brush and rub it off, then rinse thoroughly.
- OWhite spots may appear on the bottom as you keep using the product. This is caused by residue of magnesium and calcium contained in tap water. This is not harmful to your health. The same will adhere to the body, lid or pouring spout. Please wash off thoroughly after use.







