

Kinivo ZX100 - Pocket Speaker

User Manual



© 2012 Kinivo LLC. All rights reserved.

Kinivo is a trademark of Kinivo LLC. Bluetooth word mark and the Bluetooth logo are registered trademarks of Bluetooth SIG. All other trade names are registered trademarks of respective manufacturers. This manual may not be copied in any media or form without the written consent of Kinivo LLC.

Kinivo Product Support

Online: http://support.kinivo.com Email: support@kinivo.com

Table of Contents

•	aker Overview	
	kage Contentstures	
	eration	
1.	Turn Unit On/Off	
2.	Adjust Volume	
3.	Playing Music	
4.	Expanding and Closing the Resonator	
5.	Auxiliary Input-Output Port	
6.	Charging ZX100 Speaker	
7.	Chaining Multiple Speakers	
8.	LED Indication	
9.	Button Functions	
Trou	ubleshooting & FAQs	
Tech	nnical Specifications	
War	ranty	
Onli	ine Support / Contact Us	

Kinivo ZX100 Pocket Speaker

Read all safety and operation instructions before using the speaker.

Important Safety Instructions

- Do not expose the speaker to liquid, moisture or areas of high humidity.
- Do not use abrasive cleaners to clean the speaker's case as they may damage the unit. Always unplug and power off the unit before cleaning.
- 3. Do not expose the speaker to extremely high or low temperatures.
- 4. Keep the unit away from direct sunlight.
- 5. Do not attempt to open or modify the speaker in any way.
- 6. Store the speaker in a cool dry place.
- The ZX100 speaker contains a lithium ion battery. Lithium ion batteries are flammable and can cause fire if misused or defective.
- Always dispose of the packaging and unit in accordance with the local regulations and in a responsible manner.

Warning



This device contains a lithium ion battery. Lithium ion batteries are flammable and can cause fire if misused or defective. Please read the safety instructions carefully before using

Speaker Overview





Resonator Expanded

Closed Resonator

Package Contents

- ZX100 Pocket Speaker
- User Manual
- Micro-USB Charging Cable with longer audio cable.
- Carrying Pouch

Features

 Expansive Resonator Construction Design to give the best low frequency output

- Compatibility: all iPods, iPhones, MP3 players, CD players, laptops with 3.5-mm audio socket
- Full-bodied 360-degree sound
- Ultra-portable compact size with long-lasting internal chargeable battery
- Daisy chain multiple speakers for maximum sound

Operation

1. Turn Unit On/Off

Push and hold the **colored wavy strip** under the power \cup symbol for 4 to 5 seconds to turn the speaker on or off. The blue LED will be lit when the speaker is powered on.



2. Adjust Volume


Push and hold the **colored wavy strip** under the **VOL+** or **VOL-** symbols to increase or decrease volume.

Push and hold the buttons to change the volume rapidly.


By default, the speaker powers on at 50% volume.

3. Playing Music

The ZX100 speaker has a built-in 3.5mm audio cable at the base of the unit for connecting to audio devices.

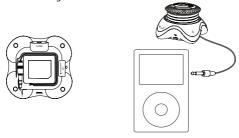

If a longer connection is needed, the charging cable has an additional 3.5mm audio connection.

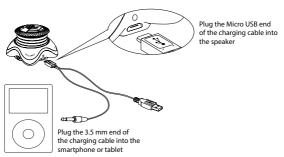


4. Expanding and Closing the Resonator

To Open		
	1.	Hold speaker firmly by the base with the resonator on the top.
	2.	Turn the resonator counter-clockwise.
	3.	The resonator will automatically expand.
To Close		
	4.	Hold speaker firmly by the base and press the resonator towards the speaker base.
	5.	Turn the resonator clockwise to close.


5. Auxiliary Input-Output Port

 The ZX100 has a 3.5mm port for both audio input and output. The port can be used to connect a 3.5mm to an input device or it can connect to another speaker. (See Chaining Multiple Speakers).



6. Charging ZX100 Speaker

 
To charge the ZX100 speaker, connect the micro USB cable to the ZX100 and plug the speaker into a USB power source. USB power sources include computers, laptops, USB hubs, USB AC adapters, and USB car chargers.



When the ZX100 is charging, the red light will be lit. When the battery is fully charged, the light will turn blue. The charging process can take 2 to 3 hours to charge the battery completely.

7. Chaining Multiple Speakers

The ZX100 is capable of being daisy chained to multiple ZX100 or other speakers. Simply connect the additional speaker's 3.5mm audio cable into the 3.5mm port on the ZX100.

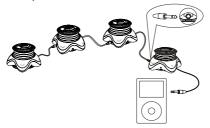

8. LED Indication

Status	LED Indicator
Powered off	Off
Powered on	Steady blue
Battery charging	Steady red

9. Button Functions

Function	Operation
Toggle unit on/off	Push and hold the colored wavy strip under the power
Increase volume	Push and hold the colored wavy strip under the VOL+ symbol
Decrease volume	Push and hold the colored wavy strip under the VOL – symbol

Troubleshooting & FAQs

Lost or damaged charging cable

If you have lost or damaged the included USB cable, you can use any standard micro-USB cable or micro-USB charger to charge the ZX100 speaker.

2. Speaker not powering on

Please check the following:

• Is the speaker fully charged?

 Press the colored wavy strip under the power icon (instead of directly on the power logo). Refer to section "Turn Unit On/Off".

3. Help! I'm unable to use to the speaker. What should I do?

Please view the troubleshooting section. If you have any questions or concerns, please contact Kinivo Support via email at support@kinivo.com or via Live chat at http://support.kinivo.com

Technical Specifications

Dimensions	68.5mm x 68.5mm x 42mm (L, W, H) 40mm (diameter)
Net Weight	94g
Input	360mV (L/R)
Power Output	3W
SNR	70dB
Frequency Range	280Hz ~ 16KHz
Charge Voltage	5V
Suitable Temperature	0°C ~ 40°C (32°F ~ 104°F)

Play Time	6 hours
Charging Time	2 hours

Warranty

1 Year Limited Hardware Warranty.

Kinivo hereby warrants to the customer of record that this product is in good-working condition and free from defects in material or workmanship under normal use for a duration of 1 year after the date of purchase. The product has been tested to meet the highest quality standards in each testing category. In the unlikely event that the product proves to be defective, Kinivo will repair or replace the product free of charge. If replacement is required and if Kinivo then no longer carries the same product, then Kinivo reserves the right to substitute the product with a replacement product of like quality and size, suitable for the intended use.

This warranty is limited to repair or replacement of the mentioned product only, is non-transferable and does not extend to any product damaged by misuse, natural disasters or any other circumstances beyond Kinivo's control. The warranty does not cover or provide for the reimbursement or payment of incidental or consequential damage resulting from breach of the limited warranty described above. Except for the limited warranty described above we offer no other warranties expressed or implied, and other than limited warranty expressly

contained herein, we hereby disclaim any and all warranties, including without limitation any implied warranties of merchantability, suitability or fitness for a particular purpose.

If your product is not functioning or you have any concerns please contact Kinivo Support before returning the product.

Online Support / Contact Us

Please visit us at <u>support.kinivo.com</u> or <u>www.kinivo.com</u> for support information, downloads and how-to's. You may also reach us via email or live chat (details below).

Kinivo Product Support
Email: support@kinivo.com

Live chat: http://support.kinivo.com



1 year limited hardware warranty

Kinivo Product Support

Online: http://support.kinivo.com

Email: support@kinivo.com

Made in china

FC ⇔ CE RoHS 🗵