

Product Version 5.0 January 2004

© 1990-2003 Cadence Design Systems, Inc. All rights reserved. Printed in the United States of America.

Cadence Design Systems, Inc., 555 River Oaks Parkway, San Jose, CA 95134, USA

Trademarks: Trademarks and service marks of Cadence Design Systems, Inc. (Cadence) contained in this document are attributed to Cadence with the appropriate symbol. For queries regarding Cadence's trademarks, contact the corporate legal department at the address shown above or call 800.862.4522.

All other trademarks are the property of their respective holders.

Restricted Print Permission: This publication is protected by copyright and any unauthorized use of this publication may violate copyright, trademark, and other laws. Except as specified in this permission statement, this publication may not be copied, reproduced, modified, published, uploaded, posted, transmitted, or distributed in any way, without prior written permission from Cadence. This statement grants you permission to print one (1) hard copy of this publication subject to the following conditions:

- 1. The publication may be used solely for personal, informational, and noncommercial purposes;
- 2. The publication may not be modified in any way;
- 3. Any copy of the publication or portion thereof must include all original copyright, trademark, and other proprietary notices and this permission statement; and
- 4. Cadence reserves the right to revoke this authorization at any time, and any such use shall be discontinued immediately upon written notice from Cadence.

Disclaimer: Information in this publication is subject to change without notice and does not represent a commitment on the part of Cadence. The information contained herein is the proprietary and confidential information of Cadence or its licensors, and is supplied subject to, and may be used only by Cadence's customer in accordance with, a written agreement between Cadence and its customer. Except as may be explicitly set forth in such agreement, Cadence does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Cadence does not warrant that use of such information will not infringe any third party rights, nor does Cadence assume any liability for damages or costs of any kind that may result from use of such information.

Restricted Rights: Use, duplication, or disclosure by the Government is subject to restrictions as set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor.

Contents

<u> Preface</u> 13
Related Documents
Typographic and Syntax Conventions 14 References 15
References
1
<u>l</u>
Introducing the Spectre Circuit Simulator
mprovements over SPICE
 Improved Capacity
Improved Accuracy
Improved Speed
Improved Reliability
Improved Models
Spectre Usability Features and Customer Service
Analog HDLs 21
RF Capabilities
Mixed-Signal Simulation 23
<u>Environments</u>
<u></u>
2
Getting Started with Spectre 25
<u> Jsing the Example and Displaying Results</u> 26
Sample Schematic
Sample Netlist
Elements of a Spectre Netlist
nstructions for a Spectre Simulation Run
Following Simulation Progress
Screen Printout
Viewing Your Output
Starting WaveScan

Plotting Signals Changing the Trace Color Learning More about WaveScan	 . 37
<u>3</u> SPICE Compatibility	11
Reading SPICE Netlists	
Running the SPICE Reader	
Running the SPICE Reader from Cadence Analog Design Environment	
Running the SPICE Reader from the Command Line	
Using the SPICE Reader to Convert Netlists	
Language Differences	
Comparing the SPICE and Spectre Languages	
Reading SPICE and Spectre Files	
Scope of the Compatibility	
Sources	
Compatibility Guidelines	
General Input Compatibility	
Compatibility Limitations	
4	
Spectre Netlists	57
Netlist Statements	
Netlist Conventions	
Basic Syntax Rules	
Spectre Language Modes	
Creating Component and Node Names	
Escaping Special Characters in Names	
Instance Statements	
Formatting the Instance Statement	
Examples of Instance Statements	
Basic Instance Statement Rules	
Identical Components or Subcircuits in Parallel	
Analysis Statements	 . 66
Basic Formatting of Analysis Statements	 . 66

Examples of Analysis Statements	. 67
Basic Analysis Rules	. 68
Control Statements	. 68
Formatting the Control Statement	. 69
Examples of Control Statements	. 69
Model Statements	
Formatting the model Statement	. 71
Examples of model Statements	. 71
Basic model Statement Rules	. 72
Input Data from Multiple Files	. 72
Formatting the include Statement	. 72
Rules for Using the include Statement	. 73
Example of include Statement Use	
Reading Piecewise Linear (PWL) Vector Values from a File	. 74
Using Library Statements	
Multidisciplinary Modeling	
Setting Tolerances with the quantity Statement	. 76
Inherited Connections	
<u>5</u>	
Parameter Specification and Modeling Features	70
Instance (Component or Analysis) Parameters	
Types of Parameter Values	
Parameter Dimension	
Parameter Ranges	
Help on Parameters	
Scaling Numerical Literals	
<u>Parameters Statement</u>	
Circuit and Subcircuit Parameters	
Parameter Declaration	
Parameter Inheritance	
Parameter Referencing	
Altering/Sweeping Parameters	
<u>Expressions</u>	. 86
Behavioral Expressions	. 90

Built-in Constants
User-Defined Functions 92
Predefined Netlist Parameters93
<u>Subcircuits</u>
Formatting Subcircuit Definitions94
A Subcircuit Definition Example9
Subcircuit Example95
Rules to Remember
Calling Subcircuits
Modifying Subcircuit Parameter Values
Checking for Invalid Parameter Values
Inline Subcircuits
Modeling Parasitics
Parameterized Models
Inline Subcircuits Containing Only Inline model Statements
Process Modeling Using Inline Subcircuits
Binning
Auto Model Selection
Conditional Instances
Scaling Physical Dimensions of Components
<u>N-Ports</u>
N-Port Example120
Creating an S-Parameter File Automatically
Creating an S, Y, or Z-Parameter File Manually
Reading the S, Y or Z-Parameter File
Touchstone Format
S-Parameter File Format Translator
<u>6</u>
•
Types of Analyses
Analysis Parameters
Probes in Analyses
Multiple Analyses
Multiple Analyses in a Subcircuit

<u>Example</u>
<u>DC Analysis</u>
 <u>AC Analysis</u>
Transient Analysis
Trading Off Speed and Accuracy with a Single Parameter Setting
Controlling the Accuracy14
Setting the Integration Method14
Improving Transient Analysis Convergence
Controlling the Amount of Output Data14
Pole Zero Analysis
<u>Syntax</u>
Example 1 14
Example 2 14
Example 3
Output Log File
Other Analyses (sens, fourier, dcmatch, and stb)
Sensitivity Analysis
Fourier Analysis15
DC Match Analysis15
Stability Analysis
Advanced Analyses (sweep and montecarlo)15
Sweep Analysis15
Monte Carlo Analysis16
Special Analysis (Hot-Electron Degradation)
Hot-Electron Degradation Analysis 17
Output Options for Hot-Electron Degradation Analysis
Example of Hot-Electron Degradation18
<u>7</u>
Control Statements
The alter and altergroup Statements18
Changing Parameter Values for Components
Changing Parameter Values for Models
Further Examples of Changing Component Parameter Values
Changing Parameter Values for Circuits

The assert Statement	89
<u>Example 1</u>	
<u>Example 2</u>	93
<u>Example 3</u>	94
The check Statement	94
The checklimit Statement	95
<u>Examples</u>	96
The ic and nodeset Statements	97
Setting Initial Conditions for All Transient Analyses	97
Supplying Solution Estimates to Increase Speed	99
Specifying State Information for Individual Analyses	99
The info Statement	202
Specifying the Parameters You Want to Save2	203
Specifying the Output Destination2	204
Examples of the info Statement2	204
Printing the Node Capacitance Table	205
The options Statement	208
options Statement Format 2	209
options Statement Example 2	209
Setting Tolerances	209
Additional options Statement Settings You Might Need to Adjust	210
The paramset Statement	210
The save Statement	211
Saving Signals for Individual Nodes and Components	<u>2</u> 11
Saving Groups of Signals 2	217
The set Statement	220
The shell Statement	
The statistics Statement	21
<u>8</u>	
Specifying Output Options	222
<u>Signals as Output</u>	
Saving Signals for Individual Nodes and Components	
Saving Main Circuit Signals	
Saving Subcircuit Signals	

Examples of the save Statement	225
Saving Individual Currents with Current Probes	226
Saving Power	
Saving Groups of Signals	229
Formatting the save and nestlyl Parameters	229
The save Parameter Options	229
Saving Subcircuit Signals	230
Saving Groups of Currents	230
Saving All AHDL Variables	232
Listing Parameter Values as Output	232
Specifying the Parameters You Want to Save	233
Specifying the Output Destination	
Examples of the info Statement	234
Preparing Output for Viewing	234
Output Formats Supported by the Spectre Simulator	234
Defining Output File Formats	235
Accessing Output Files	235
How the Spectre Simulator Creates Names for Output Directories and Files	236
Filenames for SPICE Input Files	238
Specifying Your Own Names for Directories	238
<u>9</u>	
Running a Simulation	230
•	
Starting Simulations	
Specifying Simulation Options	
Using License Queuing	
Determining Whether a Simulation Was Successful	
Checking Simulation Status	
Interrupting a Simulation	
Recovering from Transient Analysis Terminations	
Creating Recovery Files from the Command Line	
Setting Recovery File Specifications for a Single Analysis	
Restarting a Transient Analysis	
Controlling Command Line Defaults	
Examining the Spectre Simulator Defaults	244

Setting Your Own Defaults	245
References for Additional Information about Specific Defaults	
Overriding Defaults	
<u>10</u>	
Encryption	247
Encrypting a Netlist	248
What You can Encrypt	
Encrypted Information During Simulation	
Protected Device	
Protected Node	255
Protected Global and Netlist Parameters	255
Protected Subcircuit Parameters	255
Protected Model Parameters	255
Multiple Name Spaces	256
<u>11</u>	
Time-Saving Techniques	257
Specifying Efficient Starting Points	258
Reducing the Number of Simulation Runs	
Adjusting Speed and Accuracy	
Saving Time by Starting Analyses from Previous Solutions	258
Saving Time by Specifying State Information	259
Setting Initial Conditions for All Transient Analyses	259
Supplying Solution Estimates to Increase Speed	261
Specifying State Information for Individual Analyses	261
Saving Time by Modifying Parameters during a Simulation	264
Changing Circuit or Component Parameter Values	265
Modifying Initial Settings of the State of the Simulator	266
Saving Time by Selecting a Continuation Method	267
10	
<u>12</u>	
<u>Managing Files</u>	268
About Spectre Filename Specification	269

Creating Filenames That Help You Manage Data	269
Creating Filenames by Modifying Input Filenames	
Description of Spectre Predefined Percent Codes	
Customizing Percent Codes	
Creating Filenames from Parts of Input Filenames	
<u>13</u>	
Identifying Problems and Troubleshooting	275
Error Conditions	275
Invalid Parameter Values That Terminate the Program	
Singular Matrices	
Internal Error Messages	
Time Is Not Strictly Increasing	278
Spectre Warning Messages	278
P-N Junction Warning Messages	278
Tolerances Might Be Set Too Tight	280
Parameter Is Unusually Large or Small	280
gmin Is Large Enough to Noticeably Affect the DC Solution	280
Minimum Timestep Used	281
Syntax Errors	281
Topology Messages	282
Model Parameter Values Clamped	282
Invalid Parameter Warnings	282
Redefine Primitives Messages	283
Initial Condition Messages	283
Output Messages	283
Customizing Error and Warning Messages	284
Selecting Limits for Parameter Value Warning Messages	284
Selecting Limits for Operating Region Warnings	291
Range Checking on Subcircuit Parameters	292
Formatting the paramtest Component	292
Controlling Program-Generated Messages	294
Specifying Log File Options	
Correcting Convergence Problems	295
Correcting DC Convergence Problems	295

Correcting Transient Analysis Convergence Problems 298 Correcting Accuracy Problems 298 Suggestions for Improving DC Analysis Accuracy 298 Suggestions for Improving Transient Analysis Accuracy 298
<u>A</u>
<u>Example Circuits</u>
Notes on the BSIM3v3 Model
Spectre Syntax
SPICE BSIM 3v3 Model
<u>Spectre BSIM 3v3 Model</u> 302
Ring Oscillator Spectre Deck for Inverter Ring with No Fanouts (inverter_ring.sp) 302
Ring Oscillator Spectre Deck for Two-Input NAND Ring with No Fanouts (nand2_ring.sp) . 304
Ring Oscillator Spectre Deck for Three-Input NAND Ring with No Fanouts (nand3_ring.sp) 305
Ring Oscillator Spectre Deck for Two-Input NOR Ring with No Fanouts (nor2_ring.sp) 307
Ring Oscillator Spectre Deck for Three-Input NOR Ring with No Fanouts (nor3_ring.sp) 308
Opamp Circuit (opamp.cir)
Opamp Circuit 2 (opamp1.cir)
Original Open-Loop Opamp (openloop.sp)
Modified Open-Loop Opamp (openloop1.sp)
Example Model Directory (q35d4h5.modsp)
<u>B</u>
Dynamic Loading 312
Configuration File
Configuration File Format
Precedence for the CMI Configuration File
Configuration File Example
CMI Versioning
Index

Preface

This manual assumes that you are familiar with the development, design, and simulation of integrated circuits and that you have some familiarity with SPICE simulation. It contains information about the Spectre[®] circuit simulator.

Spectre is an advanced circuit simulator that simulates analog and digital circuits at the differential equation level. The simulator uses improved algorithms that offer increased simulation speed and greatly improved convergence characteristics over SPICE. Besides the basic capabilities, the Spectre circuit simulator provides significant additional capabilities over SPICE. SpectreHDL (Spectre High-Level Description Language) and Verilog[®]-A use functional description text files (modules) to model the behavior of electrical circuits and other systems. SpectreRF adds several new analyses that support the efficient calculation of the operating point, transfer function, noise, and distortion of common RF and communication circuits, such as mixers, oscillators, sample holds, and switched-capacitor filters.

This Preface discusses the following topics:

- Related Documents on page 13
- <u>Typographic and Syntax Conventions</u> on page 14
- References on page 15

Related Documents

The following can give you more information about the Spectre circuit simulator and related products:

- The Spectre circuit simulator is often run within the analog circuit design environment, under the Cadence design framework II. To see how the Spectre circuit simulator is run under the analog circuit design environment, read the <u>Cadence Analog Design</u> Environment User Guide.
- To learn more about specific parameters of components and analyses, consult the Spectre online help (spectre -h) or the <u>Spectre Circuit Simulator Reference</u> manual.
- To learn more about the equations used in the Spectre circuit simulator, consult the <u>Spectre Circuit Simulator Device Model Equations</u> manual.

- The Spectre circuit simulator also includes a waveform display tool, Analog Waveform Display (AWD), to use to display simulation results. For more information about AWD, see the <u>Analog Waveform User Guide</u>.
- For more information about using the Spectre circuit simulator with SpectreHDL, see the <u>SpectreHDL Reference</u> manual.
- For more information about using the Spectre circuit simulator with Verilog-A, see the <u>Verilog-A Language Reference</u> manual.
- If you want to see how SpectreRF is run under the analog circuit design environment, read <u>SpectreRF Help</u>.
- For more information about RF theory, see <u>SpectreRF Theory</u>.
- For more information about how you work with the design framework II interface, see <u>Cadence Design Framework II Help</u>.
- For more information about specific applications of Spectre analyses, see *The Designer's Guide to SPICE & Spectre*¹.

Typographic and Syntax Conventions

This list describes the syntax conventions used for the Spectre circuit simulator.

literal	Nonitalic words indicate keywords that you must enter literally. These keywords represent command (function, routine) or option names, filenames and paths, and any other sort of type-in commands.
argument	Words in italics indicate user-defined arguments for which you must substitute a name or a value. (The characters before the underscore (_) in the word indicate the data types that this argument can take. Names are case sensitive.
	Vertical bars (OR-bars) separate possible choices for a single argument. They take precedence over any other character.
[]	Brackets denote optional arguments. When used with OR-bars, they enclose a list of choices. You can choose one argument from the list.

^{1.} Kundert, Kenneth S. The Designer's Guide to SPICE & Spectre. Boston: Kluwer Academic Publishers, 1995.

January 2004 14 Product Version 5.0

{ }	Braces are used with OR-bars and enclose a list of choices. You must choose one argument from the list.
	Three dots () indicate that you can repeat the previous argument. If you use them with brackets, you can specify zero or more arguments. If they are used without brackets, you must specify at least one argument, but you can specify more.



The language requires many characters not included in the preceding list. You must enter required characters exactly as shown.

References

Text within brackets ([]) is a reference. See <u>Appendix A, "References,"</u> of the <u>Spectre Circuit Simulator Reference</u> manual for more detailed information.

1

Introducing the Spectre Circuit Simulator

This chapter discusses the following:

- <u>Improvements over SPICE</u> on page 17
- Analog HDLs on page 21
- RF Capabilities on page 21
- Mixed-Signal Simulation on page 23
- Environments on page 23

The Spectre[®] circuit simulator is a modern circuit simulator that uses direct methods to simulate analog and digital circuits at the differential equation level. The basic capabilities of the Spectre circuit simulator are similar in function and application to SPICE, but the Spectre circuit simulator is not descended from SPICE. The Spectre and SPICE simulators use the same basic algorithms—such as implicit integration methods, Newton-Raphson, and direct matrix solution—but every algorithm is newly implemented. Spectre algorithms, the best currently available, give you an improved simulator that is faster, more accurate, more reliable, and more flexible than previous SPICE-like simulators.

Introducing the Spectre Circuit Simulator

Improvements over SPICE

The Spectre circuit simulator has many improvements over SPICE.

Improved Capacity

The Spectre circuit simulator can simulate larger circuits than other simulators because its convergence algorithms are effective with large circuits, because it is fast, and because it is frugal with memory and uses dynamic memory allocation. For large circuits, the Spectre circuit simulator typically uses less than half as much memory as SPICE.

Improved Accuracy

Improved component models and core simulator algorithms make the Spectre circuit simulator more accurate than other simulators. These features improve Spectre accuracy:

- Advanced metal oxide semiconductor (MOS) and bipolar models
 - The Spectre BSIM3v3 is a physics-based metal-oxide semiconductor field effect transistor (MOSFET) model for simulating analog circuits.
 - The Spectre models include the MOS0 model, which is even simpler and faster than MOS1 for simulating noncritical MOS transistors in logic circuits and behavioral models, MOS 9, EKV, BTA-HVMOS, BTA-SOI, VBIC95, TOM2, HBT, and many more.
- Charge-conserving models

The capacitance-based nonlinear MOS capacitor models used in many SPICE derivatives can create or destroy small amounts of charge on every time step. The Spectre circuit simulator avoids this problem because all Spectre models are chargeconserving.

Improved Fourier analyzer

The Spectre circuit simulator includes a two-channel Fourier analyzer that is similar in application to the SPICE . FOURIER statement but is more accurate. The Spectre simulator's Fourier analyzer has greater resolution for measuring small distortion products on a large sinusoidal signal. Resolution is normally greater than 120 dB. Furthermore, the Spectre simulator's Fourier analyzer is not subject to aliasing, a common error in Fourier analysis. As a result, the Spectre simulator can accurately compute the Fourier coefficients of highly discontinuous waveforms.

Better control of numerical error

Introducing the Spectre Circuit Simulator

Many algorithms in the Spectre circuit simulator are superior to their SPICE counterparts in avoiding known sources of numerical error. The Spectre circuit simulator improves the control of local truncation error in the transient analysis by controlling error in the voltage rather than the charge.

In addition, the Spectre circuit simulator directly checks Kirchhoff's Current Law (also known as Kirchhoff's Flow Law) at each time step, improves the charge-conservation accuracy of the Spectre circuit simulator, and eliminates the possibility of false convergence.

Superior time-step control algorithm

The Spectre circuit simulator provides an adaptive time-step control algorithm that reliably follows rapid changes in the solution waveforms. It does so without limiting assumptions about the type of circuit or the magnitude of the signals.

More accurate simulation techniques

Techniques that reduce reliability or accuracy, such as device bypass, simplified models, or relaxation methods, are not used in the Spectre circuit simulator.

User control of accuracy tolerances

For some simulations, you might want to sacrifice some degree of accuracy to improve the simulation speed. For other simulations, you might accept a slower simulation to achieve greater accuracy. With the Spectre circuit simulator, you can make such adjustments easily by setting a single parameter.

Improved Speed

The Spectre circuit simulator is designed to improve simulation speed. The Spectre circuit simulator improves speed by increasing the efficiency of the simulator rather than by sacrificing accuracy.

Faster simulation of small circuits

The average Spectre simulation time for small circuits is typically two to three times faster than SPICE. The Spectre circuit simulator can be over 10 times faster than SPICE when SPICE is hampered by discontinuity in the models or problems in the code. Occasionally, the Spectre circuit simulator is slower when it finds ringing or oscillation that goes unnoticed by SPICE. This can be improved by setting the macromodels option to yes.

Faster simulation for large circuits

Introducing the Spectre Circuit Simulator

The Spectre circuit simulator is generally two to five times faster than SPICE with large circuits because it has fewer convergence difficulties and because it rapidly factors and solves large sparse matrices.

Improved Reliability

The Spectre circuit simulator offers you the following improvements in reliability:

Improved convergence

Spectre proprietary algorithms ensure convergence of the Newton-Raphson algorithm in the DC analysis. The Spectre circuit simulator virtually eliminates the convergence problems that earlier simulators had with transient simulation.

Helpful error and warning messages

The Spectre circuit simulator detects and notifies you of many conditions that are likely to be errors. For example, the Spectre circuit simulator warns of models used in forbidden operating regions, of incorrectly wired circuits, and of erroneous component parameter values. By identifying such common errors, the Spectre circuit simulator saves you the time required to find these errors with other simulators.

The Spectre circuit simulator lets you define soft parameter limits and sends you warnings if parameters exceed these limits.

Thorough testing

Automated tests, which include over 1,000 test circuits, are constantly run on all hardware platforms to ensure that the Spectre circuit simulator is consistently reliable and accurate.

Benchmark suite

There is an independent collection of SPICE netlists that are difficult to simulate. You can obtain these circuits from the Microelectronics Center of North Carolina (MCNC) if you have File Transfer Protocol (FTP) access on the Internet. You can also get information about the performance of several simulators with these circuits.

The Spectre circuit simulator has successfully simulated all of these circuits. Sometimes the netlists required minor syntax corrections, such as inserting balancing parentheses, but circuits were never altered, and options were never changed to affect convergence.

Introducing the Spectre Circuit Simulator

Improved Models

The Spectre circuit simulator has MOSFET Level 0–3, BSIM1, BSIM2, BSIM3, BSIM3v3, EKV, MOS9, JFET, TOM2, GaAs MESFET, BJT, VBIC, HBT, diode, and many other models. It also includes the temperature effects, noise, and MOSFET intrinsic capacitance models.

The Spectre Compiled Model Interface (CMI) option lets you integrate new devices into the Spectre simulator using a very powerful, efficient, and flexible C language interface. This CMI option, the same one used by Spectre developers, lets you install proprietary models.

Spectre Usability Features and Customer Service

The following features and services help you use the Spectre circuit simulator easily and efficiently:

- You can use Spectre soft limits to catch errors created by typing mistakes.
- Spectre diagnosis mode, available as an options statement parameter, gives you information to help diagnose convergence problems.
- You can run the Spectre circuit simulator standalone or run it under the Cadence[®] analog design environment. To see how the Spectre circuit simulator is run under the analog circuit design environment, read the <u>Cadence Analog Design Environment User Guide</u>. You can also run the Spectre circuit simulator in the Composer-to-Spectre direct simulation environment. The environment provides a graphical user interface for running the simulation.
- The Spectre circuit simulator gives you an online help system. With this system, you can find information about any parameter associated with any Spectre component or analysis. You can also find articles on other topics that are important to using the Spectre circuit simulator effectively.
- The Spectre circuit simulator also includes a waveform display tool, Analog Waveform Display (AWD), to use to display simulation results. For more information about AWD, see the <u>Analog Waveform User Guide</u>.
- If you experience a stubborn convergence or accuracy problem, you can send the circuit to Customer Support to get help with the simulation. For current phone numbers and email addresses, see the following web site:

http://sourcelink.cadence.com/supportcontacts.html

Introducing the Spectre Circuit Simulator

Analog HDLs

The Spectre circuit simulator works with two analog high-level description languages (AHDLs): SpectreHDL and Verilog®-A. These languages are part of the Spectre Verilog-A option. SpectreHDL is proprietary to Cadence and is provided for backward compatibility. The Verilog-A language is an open standard, which was based upon SpectreHDL. The Verilog-A language is preferred because it is upward compatible with Verilog-AMS, a powerful and industry-standard mixed-signal language.

Both languages use functional description text files (modules) to model the behavior of electrical circuits and other systems. Each programming language allows you to create your own models by simply writing down the equations. The AHDL lets you describe models in a simple and natural manner. This is a higher level modeling language than previous modeling languages, and you can use it without being concerned about the complexities of the simulator or the simulator algorithms. In addition, you can combine AHDL components with Spectre built-in primitives.

Both languages let designers of analog systems and integrated circuits create and use modules that encapsulate high-level behavioral descriptions of systems and components. The behavior of each module is described mathematically in terms of its terminals and external parameters applied to the module. Designers can use these behavioral descriptions in many disciplines (electrical, mechanical, optical, and so on).

Both languages borrow many constructs from Verilog and the C programming language. These features are combined with a minimum number of special constructs for behavioral simulation. These high-level constructs make it easier for designers to use a high-level description language for the first time.

RF Capabilities

SpectreRF adds several new analyses that support the efficient calculation of the operating point, transfer function, noise, and distortion of common analog and RF communication circuits, such as mixers, oscillators, sample and holds, and switched-capacitor filters.

SpectreRF adds four types of analyses to the Spectre simulator. The first is periodic steady-state (PSS) analysis, a large-signal analysis that directly computes the periodic steady-state response of a circuit. With PSS, simulation times are independent of the time constants of the circuit, so PSS can quickly compute the steady-state response of circuits with long time constants, such as high-Q filters and oscillators.

You can also embed a PSS analysis in a sweep loop (referred to as an SPSS analysis in the Cadence analog design environment), which allows you to easily determine harmonic levels

Introducing the Spectre Circuit Simulator

as a function of input level or frequency, making it easy to measure compression points, intercept points, and voltage-controlled oscillator (VCO) linearity.

The second new type of analysis is the periodic small-signal analysis. After completing a PSS analysis, SpectreRF can predict the small-signal transfer functions and noise of frequency translation circuits, such as mixers or periodically driven circuits such as oscillators or switched-capacitor or switched-current filters. The periodic small-signal analyses—periodic AC (PAC) analysis, periodic transfer function (PXF) analysis, and periodic noise (Pnoise) analysis—are similar to Spectre's AC, XF, and Noise analyses, but the traditional small-signal analyses are limited to circuits with DC operating points. The periodic small-signal analyses can be applied to circuits with periodic operating points, such as the following:

- Mixers
- VCOs
- Switched-current filters
- Phase/frequency detectors
- Frequency multipliers
- Chopper-stabilized amplifiers
- Oscillators
- Switched-capacitor filters
- Sample and holds
- Frequency dividers
- Narrow-band active circuits

The third SpectreRF addition to Spectre functionality is periodic distortion (PDISTO) analysis. PDISTO analysis directly computes the steady-state response of a circuit driven with a large periodic signal, such as an LO (local oscillation) or a clock, and one or more tones with moderate level. With PDISTO, you can model periodic distortion and include harmonic effects. PDISTO computes both a large signal, the periodic steady-state response of the circuit, and also the distortion effects of a specified number of moderate signals, including the distortion effects of the number of harmonics that you choose. This is a common scenario when trying to predict the intermodulation distortion of a mixer, amplifier, or a narrow-band filter. In this analysis, the tones can be large enough to create significant distortion, but not so large as to cause the circuit to switch or clip. The frequencies of the tones need not be periodically related to each other or to the large signal LO or clock. Thus, you can make the tone frequencies very close to each other without penalty, which allows efficient computation of intermodulation distortion of even very narrow band circuits.

Introducing the Spectre Circuit Simulator

The fourth analysis that SpectreRF adds to the Spectre circuit simulator is the envelope-following analysis. This analysis computes the envelope response of a circuit. The simulator automatically determines the clock period by looking through all the sources with the specified name. Envelope-following analysis is most efficient for circuits where the modulation bandwidth is orders of magnitude lower than the clock frequency. This is typically the case, for example, in circuits where the clock is the only fast varying signal and other input signals have a spectrum whose frequency range is orders of magnitude lower than the clock frequency. For another example, the down conversion of two closely placed frequencies can also generate a slow-varying modulation envelope. The analysis generates two types of output files, a voltage versus time (td) file, and an amplitude/phase versus time (fd) file for each specified harmonic of the clock fundamental.

In summary, with periodic small-signal analyses, you apply a small signal at a frequency that might not be harmonically related (noncommensurate) to the periodic response of the undriven system, the clock. This small signal is assumed to be small enough so that the circuit is unaffected by its presence.

With PDISTO, you can apply one or two additional signals at frequencies not harmonically related to the large signal, and these signals can be large enough to drive the circuit to behave nonlinearly.

For complex nonlinear circuits, hand calculation of noise or transfer function is virtually impossible. Without SpectreRF, these circuits must be breadboarded to determine their performances. SpectreRF eliminates unnecessary breadboarding, saving time.

Mixed-Signal Simulation

You can use the Spectre circuit simulator coupled with the Verilog-XL simulator in the Cadence analog design environment to simulate mixed analog and digital circuits efficiently. This mixed-signal simulation solution can easily handle complex designs with tens of thousands of transistors and tens of thousands of gates. The digital Verilog data can come from the digital designer as either an RTL block or gates out of synthesis.

Environments

The Spectre circuit simulator is fully integrated into the Cadence design framework II for the Cadence analog design environment and also into the Cadence analog workbench design system. You can also use the Spectre circuit simulator by itself with several different output format options.

Assura interactive verification, Dracula[®] distributed multi-CPU option, and Assura hierarchical physical verification produce a netlist that can be read into the Spectre circuit

Introducing the Spectre Circuit Simulator

simulator. However, only interactive verification when used with the Cadence analog design environment automatically attaches the stimulus file. All other situations require a stimulus file as well as device models.

2

Getting Started with Spectre

This chapter discusses the following topics:

- <u>Using the Example and Displaying Results</u> on page 26
- Sample Schematic on page 26
- Sample Netlist on page 28
- Instructions for a Spectre Simulation Run on page 32
- Viewing Your Output on page 34

Getting Started with Spectre

Using the Example and Displaying Results

In this chapter, you examine a schematic and its Spectre[®] circuit simulator netlist to get an overview of Spectre syntax. You also follow a sample circuit simulation. The best way to use this chapter depends on your past experience with simulators.

Carefully examine the schematic (<u>"Sample Schematic"</u> on page 26) and netlist (<u>"Sample Netlist"</u> on page 28) and compare Spectre netlist syntax with that of SPICE-like simulators you have used. If you have prepared netlists for SPICE-like simulators before, you can skim <u>"Elements of a Spectre Netlist"</u> on page 29. With this method, you can learn a fair amount about the Spectre simulator in a short time.

Approach this chapter as an overview. You will probably have unanswered questions about some topics when you finish the chapter. Each topic is covered in greater depth in subsequent chapters. Do not worry about learning all the details now.

To give you a complete overview of a Spectre simulation, the example in this chapter includes the display of simulation results with WaveScan, a waveform display tool that is included with the Spectre simulator. If you use another display tool, the procedures you follow to display results are different. This user guide does not teach you how to display waveforms with different tools. If you need more information about how to display Spectre results, consult the documentation for your display tool.

The example used in this chapter is a small circuit, an oscillator; you run a transient analysis on the oscillator and then view the results. The following sections contain the schematic and netlist for the oscillator. If you have used SPICE-like simulators before, looking at the schematic and netlist can help you compare Spectre syntax with those of other simulators. If you are new to simulation, looking at the schematic and netlist can prepare you to understand the later chapters of this book.

You can also get more information about command options, components, analyses, controls, and other selected topics by using the spectre -h command to access the Spectre online help.

Sample Schematic

A schematic is a drawing of an electronic circuit, showing the components graphically and how they are connected together. The following schematic has several annotations:

Names of components

Each component is labeled with the name that appears in the instance statement for that component. The names for components are in italics (for example, Q2).

Getting Started with Spectre

Names of nodes

Each node in the circuit is labeled with its unique name or number. This name can be either a name you create or a number. Names of nodes are in boldface type (for example, **b1**). Ground is node 0.


Sample instance statements

Getting Started with Spectre

The schematic is annotated with instance statements for some of the components. Arrows connect the components in the schematic with their corresponding instance statements.

Bold Type = Names of nodes. All connections to ground have the same node name. *Italic Type* = Names of components (also appear in the instance statement for each component).

= Link between components and instance statements.

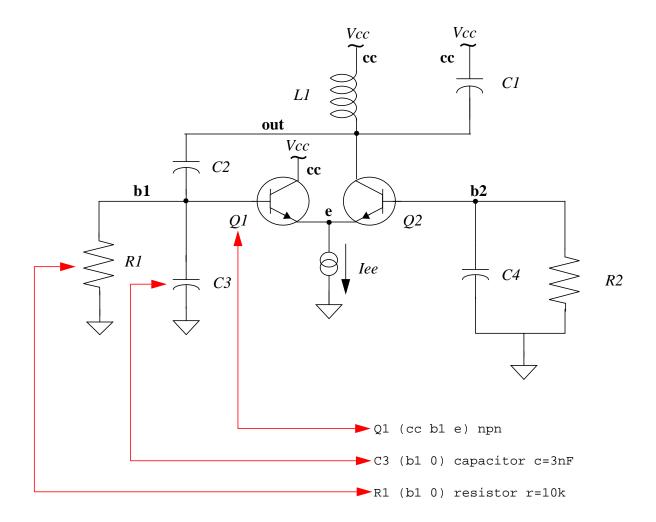


Sample Netlist

A netlist is an ASCII file that lists the components in a circuit, the nodes that the components are connected to, and parameter values. You create the netlist in a text editor such as vi or

Getting Started with Spectre

emacs or from one of the environments that support the Spectre simulator. The Spectre simulator uses a netlist to simulate a circuit.

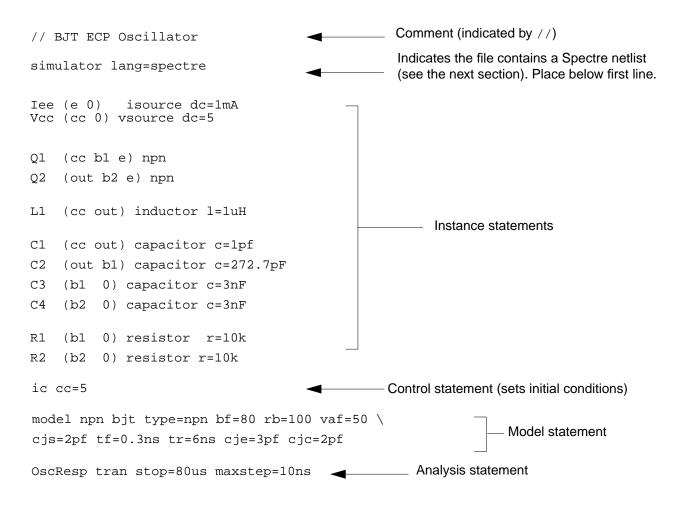

Elements of a Spectre Netlist

This section briefly explains the components, models, analyses, and control statements in a Spectre netlist. All topics discussed here (such as model statements or the simulator lang command) are presented in greater depth in later chapters. If you want more complete reference information about a topic, consult these discussions.

Title Line

The first line is taken to be the title. It is used verbatim when labeling output. Any statement you place in the first line is ignored as a comment. For more information about comment lines, see "Basic Syntax Rules" on page 59.

Getting Started with Spectre

Simulation Language

The second line of the sample netlist indicates that the netlist is in the Spectre Netlist Language, instead of SPICE. For more information about the simulator lang command, see <u>Spectre Language Modes</u> on page 59.

 
Instance Statements

The next section in the sample netlist consists of instance statements. To specify a single component in a Spectre netlist, you place all the necessary information for the component in a netlist statement. Netlist statements that specify single components are called instance statements. (The instance statement also has other uses that are described in Chapter 4, "Spectre Netlists.")

To specify single components within a circuit, you must provide the following information:

- A unique component name for the component
- The names of nodes to which the component is connected
- The master name of the component (identifies the type of component)
- The parameter values associated with the component

A typical Spectre instance statement looks like this:



Note: You can use balanced parentheses to distinguish the various parts of the instance statement, although they are optional:

```
R1 (1 2) resistor r=1
Q1 (c b e s) npn area=10
Gm (1 2)(3 4) vccs gm=.01
R7 (x y) rmod (r=1k w=2u)
```

Component Names

Unlike SPICE, the first character of the component name has no special meaning. You can use any character to start the component name. For example:

Getting Started with Spectre

```
Load (out o) resistor r=50
Balun (in o pout nout) transformer
```

Note: You can find the exact format for any component in the parameter listings for that component in the Spectre online help.

Master Names

The type of a component depends on the name of the master, not on the first letter of the component name (as in SPICE); this feature gives you more flexibility in naming components. The master can be a built-in primitive, a model, a subcircuit, or an AHDL component.

Parameter Values

Real numbers can be specified using scientific notation or common engineering scale factors. For example, you can specify a 1 pF capacitor value either as <code>c=lpf</code> or <code>c=le-l2</code>. Depending on whether you are using the Spectre Netlist Language or SPICE, you might need to use different scale factors for parameter values. Only ANSI standard scale factors are used in Spectre netlists. For more information about scale factors, see Instance Statements on page 62.

Control Statements

The next section of the sample netlist contains a control statement, which sets initial conditions.

Model Statements

Some components allow you to specify parameters common to many instances using the model statement. The only parameters you need to specify in the instance statement are those that are generally unique for a given instance of a component.

You need to provide the following for a model statement:

- The keyword model at the beginning of the statement
- A unique name for the model (reference by master names in instance statements)
- The master name of the model (identifies the type of model)
- The parameter values associated with the model

Getting Started with Spectre

The following example is a model statement for a bjt. The model name is npn_j and the component type name is bjt. The backslash (\) tells you that the statement continues on the next line. The backslash must be the last character in the line because it escapes the carriage return.

```
model npn bjt type=npn bf=80 rb=100 vaf=50 \
    cjs=2pf tf=0.3ns tr=6ns cje=3pf cjc=2pf
```

When you create an instance statement that refers to a model statement for its parameter values, you must specify the model name as the master name. For example, an instance statement that receives its parameter values from the previous model statement might look like this:

```
Q1 (vcc b1 e vcc) npn
```

Check documentation for components to determine which parameters are expected to be provided on the instance statement and which are expected on the model statement.

Analysis Statements

The last section of the sample netlist has the analysis statement. An analysis statement has the same syntax as an instance statement, except that the analysis type name replaces the master name. To specify an analysis, you must include the following information in a netlist statement:

- A unique name for the analysis statement
- Possibly a set of node names
- The name of the type of analysis you want
- Any additional parameter values associated with the analysis

To find the analysis type name and the parameters you can specify for an analysis, consult the parameter listing for that analysis in the Spectre online help (spectre -h).

The following analysis statement specifies a transient analysis. The analysis name is stepResponse, and the analysis type name is tran.

```
stepResponse tran stop=100ns
```

Instructions for a Spectre Simulation Run

When you complete a netlist, you can run the simulation with the spectre command.

➤ To run a simulation for the sample circuit, type the following at the command line:

```
spectre osc.scs
```

Getting Started with Spectre

Note: osc.scs is the file that contains the netlist.

Following Simulation Progress

As the simulation runs, the Spectre simulator sends messages to your screen that show the progress of the simulation and provide statistical information. In the simulation of osc.scs, the Spectre simulator prints some warnings and notifications. The Spectre simulator tells you about conditions that might reduce simulation accuracy. When you see a Spectre warning or notification, you must decide whether the information is significant for your particular simulation.

Screen Printout

The printout for the osc.scs simulation looks like this:

```
spectre (ver. 5.0.0.052603 -- 27 May 2003).
Simulating `osc.scs' on cds11047 at 1:21:54 PM, Wed Aug 20, 2003.
Circuit inventory:
             nodes 5
         equations 9
               bjt 2
         capacitor 4
          inductor 1
           isource 1
          resistor 2
           vsource 1
Transient Analysis `OscResp': time = (0 s -> 80 us)
*********
       Narration of transient
       analysis progress
\ldots .9 \ldots .8 \ldots .7 \ldots .6 \ldots .5 \ldots .4 \ldots .3 \ldots .2 \ldots .1 \ldots .0
Number of accepted tran steps = 23508.
Initial condition solution time = 0 s.
Intrinsic tran analysis time = 7.07 s.
Total time required for tran analysis `OscResp' was 7.08 s.
Aggregate audit (1:22:02 PM, Wed Aug 20, 2003):
Time used: CPU = 7.29 s, elapsed = 8 s, util. = 91.1%.
Virtual memory used = 1.3 Mbytes.
spectre completes with 0 errors, 0 warnings, and 0 notices
```

Getting Started with Spectre

Viewing Your Output

The waveform display tool for this simulation example is WaveScan, a display tool you receive when you purchase the Spectre simulator. In this section you will learn the following:

- How to start WaveScan
- How to plot signals
- How to change the color of a trace

Starting WaveScan


Type the following at the command line:

wavescan &

Note: To start WaveScan for the simulation example, type the following at the command line (from the directory where the Spectre simulator was run):

wavescan -dataDir osc.raw

The Results Browser window appears with the osc.raw data directory displayed in the right panel.

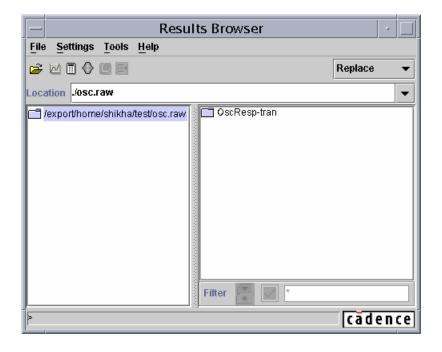


Getting Started with Spectre

Plotting Signals


1. In the Results Browser window, double-click on osc.raw.

The data directory moves to the left panel and the associated signals are displayed in the right panel.

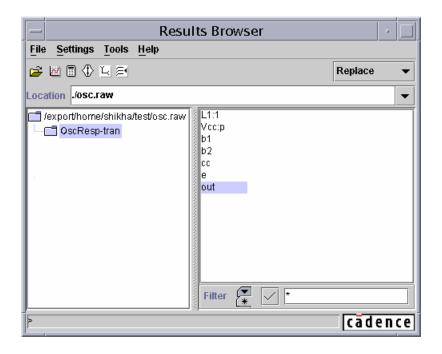

Getting Started with Spectre

2. Right-click on the signal you want to plot (for example, out) and choose *New Win* from the pop-up menu. The Graph Display window appears.

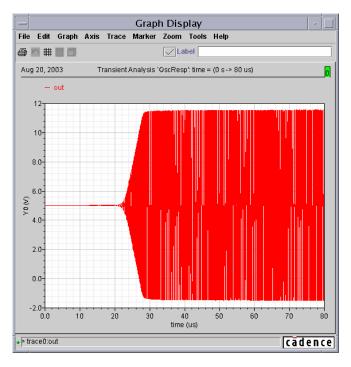


3. Choose Zoom – X-Zoom.

The \leftarrow cursor is displayed on the Graph Display window.

4. Left-click at around 70us and, drag, and release the mouse button at around 80us.

Getting Started with Spectre

The graph is zoomed such that 70us and 80us are the end points of the X-axis.

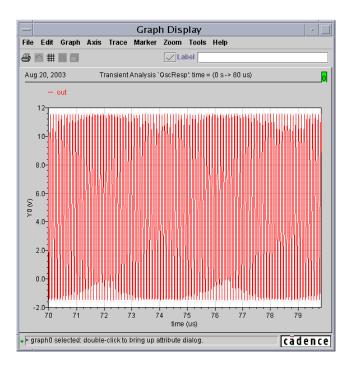

5. Click Zoom - Fit to return the graph to the unzoomed state.


Changing the Trace Color

To change the color of the trace,

1. Double-click on the trace.

Getting Started with Spectre

The Trace Attributes dialog box appears.

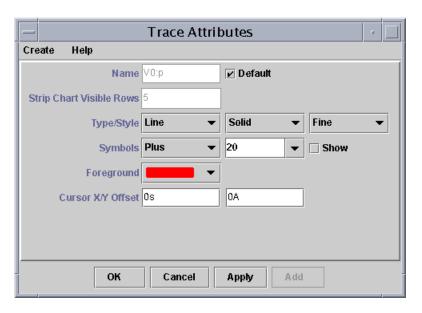

- **2.** In the *Foreground* field, select the color for the trace.
- 3. Click OK.

Learning More about WaveScan

The WaveScan display tool gives you a number of additional options for displaying your data. To learn more about using WaveScan, see the <u>WaveScan User Guide</u>.

Spectre Circuit Simulator User Guide Getting Started with Spectre

Spectre Circuit Simulator User Guide Getting Started with Spectre

3

SPICE Compatibility

While SPICE is an industry-standard language, there are many variations of SPICE syntax on the market today. Most of the language is common across the major commercial simulators, but each vendor has extended or modified it with different capabilities and/or slightly different syntax. For the convenience of SPICE users, the Spectre[®] circuit simulator provides a SPICE Reader as an extension to its native language that accepts most variations of SPICE input. The SPICE Reader provides support for SPICE2, SPICE3, and common extensions found in other simulators such as PSPICE and HSPICE. This chapter focuses on how to use the SPICE Reader with Spectre. This chapter is not intended to describe the syntax variations of SPICE, as they are well documented in other places, nor an exact listing of syntax supported by the SPICE Reader.

- Reading SPICE Netlists on page 42
- Language Differences on page 48
- Scope of the Compatibility on page 51

SPICE Compatibility

Reading SPICE Netlists

Spectre provides the SPICE Reader to let you simulate existing SPICE netlists with Spectre. While it is possible to gain access to many of Spectre's features with a SPICE netlist, the Spectre syntax is a much more powerful language designed to give the Spectre user features beyond those provided by SPICE. Whenever possible, you are encouraged to take advantage of Spectre's native language. When Spectre syntax is not an acceptable solution, the SPICE Reader can be used to ensure access to as much of Spectre's capabilities as possible.

Running the SPICE Reader

In order for Spectre to properly process a SPICE netlist, the SPICE Reader must be enabled. By default the SPICE Reader is disabled when you invoke Spectre. Use the command spectrespp rather than the spectre command to enable the SPICE Reader. For example, the following command invokes Spectre with the SPICE Reader for the input netlist amp.sp:

spectrespp amp.sp

The Spice Reader runs on the top-level netlist, as well as on any included files that contain SPICE syntax. The SPICE Reader converts the netlist to Spectre native syntax before it sends the design to the Spectre netlist reader. From the 5.0 release, any .measure statements found in the Spice input file are converted to MDL (Measurement Description Language) before being passed on to Spectre. The conversion is done via the creation of an MDL control file, which is written to the current directory. This control file takes on the name of the netlist, with a suffix of .mdl. The simulation that immediately follows the conversion uses the MDL option to Spectre with this control file to evaluate the .measure expressions. Results are written to a file with the same name as the control file (netlist) with a .measure suffix. For example, the amp.sp SPICE netlist above creates a control file named amp.mdl, and a measurement output file named amp.measure. You simply enter the spectrespp command with the netlist, and the rest of the steps are completed for you automatically. The MDL control file is left behind for future use.

Note: In previous releases, the command line option +spp was used to invoke the SPICE Reader. While this method is still supported, it is advised that you use the spectrespp command if .measure statements are included in the input file. For more information on MDL, see the <u>SpectreMDL User Guide and Reference</u>.

For backward compatibility, a limited SPICE2 netlist reader is embedded into the Spectre netlist reader. This reader supports much of SPICE2G6 syntax and has as its primary use the processing of SPICE-style model cards. If the SPICE Reader is not used, this limited SPICE netlist reader is used. This is only for backwards compatibility and might be removed in a future release, to be replaced by the SPICE Reader. This limited SPICE netlist reader is no longer documented as of the 4.4.3 release. In the rest of this chapter, "SPICE Reader" refers to the full SPP SPICE Reader, and not this limited version.

SPICE Compatibility

Running the SPICE Reader from Cadence Analog Design Environment

When using Spectre within Cadence Analog Design Environment, the need to read SPICE netlists is usually limited to model files and information from extraction tools that comes into the netlist by included files. For all other design data, Analog Artist produces netlists in the Spectre native syntax. You can enable the use of the SPICE Reader by choosing the Setup -> Environment form and toggling the Use SPICE Netlist Reader (spp) button to Y. Be sure that you do not have any relative paths specified for included files, such as model files, and that the Include Path field in the Setup -> Simulation Files field is blank. The SPICE Reader's inability to handle relative paths is documented in the Spectre Known Problems and Solutions.

Running the SPICE Reader from the Command Line

When you run Spectre from the command line (outside of the Artist/Composer environment), the SPICE Reader is disabled by default. As described in "Running the SPICE Reader" on page 42, you must use the spectrespp command for the SPICE Reader to process the top-level netlist:

```
spectrespp opamp.sp
```

This command calls Spectre with the spp and mdl command line options. There are several command line options that can be used in conjunction with spectrespp:

Specifying the Design File

The command line option <code>-design</code> is used to identify the input file. In the absence of any command line options, the single argument after the <code>spectrespp</code> command is assumed to be the input netlist. Therefore the following commands are identical:

```
spectrespp opamp.sp
spectrespp -design opamp.sp
```

Specifying the spp Binary to be Used

By default, the spp binary that is located in the Cadence hierarchy, $your_install_directory/tools/dfII/bin/spp$, is used by the spectrespp command. You can specify the use of other spp executables with the -sppbin command line option. In the following example, spp from the current directory is used:

```
spectrespp -sppbin ./spp opamp.sp
```

SPICE Compatibility

Specifying the Location of the Measurement Output

The command line option -measure is used to specify the location of the measurement output. The following command

```
spectrespp -measure design.measure -design opamp.sp
```

writes the output to design.measure. If you do not use this option, the output of the .measure statement is written to a file with the same base name as the netlist and the suffix .measure. In the above example, this would be opamp.measure.

Notice that when specifying the -measure option, you must also specify the -design option to identify the netlist.

All other command line options are passed to Spectre. Type spectrespp -usage for online help.

Using the SPICE Reader to Convert Netlists

In many cases, the SPICE data to be used with Spectre is a library of models or reusable blocks (that is, subcircuits). Rather than using the SPICE Reader to interpret these files each time they are used, you can convert the netlist to Spectre's native syntax. This is done by running the SPICE Reader alone (spp) and using the -convert option. The -convert option removes special embedded codes for tracking the line numbers of the original netlist, returning a cleanly converted netlist.

```
spp -convert -iofile inputFile [outputFile]

Or

spp -convert < inputFile [ > [outputFile] ]
```

where

spp Runs the SPICE reader.

-convert Converts the SPICE netlist to an equivalent Spectre netlist. This

option does not descend into included files to convert them but only converts the include statement. Included files must be converted independently. In this case, the SPICE Reader cannot always resolve conflicts and ambiguities, and you must

verify the resulting netlist files.

January 2004 44 Product Version 5.0

SPICE Compatibility

-iofile	Replaces all instances of the input file name (in include statements) with the output file name in the converted netlist. Do not put < > around the input file name if you use this option.
inputFile	The SPICE netlist to be converted. Put < > around the input file name only if you do not use the iofile option.
outputFil	The file name for the converted netlist. If you do not specify this, the converted netlist is displayed at standard output — i.e., in the terminal window.

Examples

The following command converts the SPICE netlist amp.sp to an equivalent Spectre netlist and displays the result in the terminal window:

```
spp -convert < amp.sp</pre>
```

The following command converts the SPICE netlist amp.sp to an equivalent Spectre netlist with the name amp.scs:

```
spp -convert < amp.sp > amp.scs
```

The following command converts the SPICE netlist amp.sp to an equivalent Spectre netlist with the name test.scs. All references to amp.sp in the input file are replaced by test.scs in the output file.

```
spp -convert -iofile amp.sp test.scs
```

Converting Hierarchically Arranged Netlists

Great care must be taken when converting hierarchically arranged netlists. Some of the possible issues include the following:

Distinguishing instance models from instance parameters

For some devices, such as resistors, SPICE instance statements can use an orderdependent mechanism to define the values of parameters. An example could be

```
r1 1 0 myres
```

The field myres could be either a model name or a parameter representing the resistance value in SPICE. The SPICE Reader maps this to a parameter if a .param statement is encountered with this assignment or to a model name if a model card with the name myres is found. If neither is present, the field is assumed to be a model name. In the case of the -convert mode, where these assignments could be part of included

SPICE Compatibility

files, this assumption could be incorrect, and the instance statement would need to be fixed.

Global nodes

In Spectre, global nodes must be at the very beginning of the netlist, while they can be present anywhere in a SPICE netlist. If a converted file contains global nodes, these must be moved to the top level of the netlist before the file can be included in a higher level netlist. Multiple global statements cause fatal errors in Spectre.

Location of measurement data

The SPICE Reader converts Hspice style .measure statements to Measurement Description Language (MDL) statements. The SPICE Reader does this by creating an MDL control file, which can then be used in the simulation. In normal operation (using the spectrespp <netlist> command), the control file that is created takes on the name of the netlist, with the suffix .mdl. When a netlist is converted with the -convert option, the MDL control file that is created is always named Netlist.mdl. If this control file is used in a subsequent simulation, the results output is written to a file named Netlist.measure. For example, say that you have an SPICE netlist named amp.sp. In order to convert this netlist without executing the simulation, use spp with the -convert option:

```
spp -convert < amp.sp > amp.scs
```

Upon completion of this command, the Spectre equivalent for amp.sp is in the amp.scs file. In addition, a file called Netlist.mdl is created. This additional file contains the MDL expressions that correspond to any .measure statements in the original netlist. In order to run the Spectre simulation using the new netlist and control file, use the following command:

```
spectremdl -batch Netlist.mdl -design amp.scs
```

Upon completion of the simulation, you'll find a file named Netlist.measure, which contains the values calculated for each of the MDL expressions.

For more information on the expression evaluation capabilities in Spectre, see the <u>SpectreMDL User Guide and Reference</u>.

Netlist parameters

In Spectre, parameters are order dependent; that is, they must be defined before being used. When the SPICE Reader is run on the entire design, parameters are moved to the top of the netlist, but, in convert mode, they are moved to the top of each file. If a parameter is accessed before inclusion, it will fail until it is fixed.

Order-dependent statements

SPICE Compatibility

Some statements in SPICE are mapped into multiple statements in Spectre. Things like temp sweeps, analysis sweeps, and alter sections all get converted into multiline statements. If temp statements, analysis statements, or alter statements are not in the same file, they might not get properly unfolded.

Here is an example of a Mos characterization deck written in SPICE:

```
M1 1 2 0 0 NCH
VDR 1 0 2
VG 2 0 1
.OP
.MODEL NCH NMOS LEVEL=49
+ TOX=1e-9 VTH0=0.5 VBOX=5
.TEMP 25 75 100
.INCLUDE "dcAnalysis.inc"
.END

where dcAnalysis.inc is
.DC VDR 0 5 0.1 VG 0 2 0.1
```

The netlist produced with spp -convert does not include the sweep statement within the temperature sweep:

```
// Mos characterization deck
simulator lang=spectre insensitive=yes
m1 ( 1 2 0 0 ) nch
vdr ( 1 0 ) vsource dc=2
vg ( 2 0 ) vsource dc=1
model nch bsim3v3 type=n tox=1e-9 vth0=0.5 vbox=5
include "dcAnalysis.inc"
swp_tmp1 sweep param=temp values=[25 75 100] {
sppSaveOptions options save=allpub
analysisOP1 dc oppoint=logfile
}
// end
```

You need to edit the netlist to insert the included analysis into the temperature sweep:

```
// Mos characterization deck
simulator lang=spectre insensitive=yes
m1 ( 1 2 0 0 ) nch
vdr ( 1 0 ) vsource dc=2
vg ( 2 0 ) vsource dc=1
model nch bsim3v3 type=n tox=le-9 vth0=0.5 vbox=5
swp_tmp1 sweep param=temp values=[25 75 100] {
sppSaveOptions options save=allpub
analysisOP1 dc oppoint=logfile
analysisDCswp1 sweep param=dc dev=vg start=0 stop=2 step=0.1 {
    analysisDCswp2 dc param=dc dev=vdr start=0 stop=5 step=0.1
}
// end
```

Mixed language

Spectre allows the use of both SPICE and Spectre syntax in the same netlist. The SPICE Reader does not read the Spectre statements; thus, statements in the SPICE sections

SPICE Compatibility

that are dependent on Spectre statements might get improperly mapped. Except for model and subcircuit names, do not have any dependencies between these two language sections.

Language Differences

Comparing the SPICE and Spectre Languages

When you run the SPICE Reader, all SPICE statements are mapped directly to Spectre input. There are several important differences between these two languages that are addressed by the SPICE Reader.

To get a better idea at the differences between the two languages, an example netlist is shown below. First is the SPICE version of the netlist for an oscillator (from <u>"Sample Netlist"</u> on page 28):

```
BJT ECP Oscillator
Vcc 1 0 5
Iee 2 0 1MA
Q1 1 3 2 NPN
Q2 4 5 2 NPN
L1 4 5 1UH
C1 1 5 1PF
C2 5 3 272.7PF
C3 3 0 3NF
C4 5 6 3NF
R1 3 0 10K
R2 5 6 10K
.ic\ V(3)=1
.model NPN NPN BF=80 RB=100
+ VAF=50 CJS=2PF TF=0.3NS TR=6NS CJE=3PF CJC=2PF
.option method=trap
.tran lus 80us 10ns
Here is the Spectre version of the same netlist:
// BJT ECP Oscillator
simulator lang=spectre
Vcc (vcc 0) vsource dc=5
Iee (e 0)
           isource dc=1mA
01
   (vcc b1 e) npn
Q2 (out b2 e) npn
L1
   (vcc out) inductor l=1uH
C1
   (vcc out) capacitor c=1pf
   (out b1 ) capacitor c=272.7pF
    (b1 0) capacitor c=3nF
        in ) capacitor c=3nF
C4
   (b2
R1
   (b1 0) resistor r=10k
R2
   (b2 in ) resistor r=10k
```

SPICE Compatibility

```
ic b1=1
model npn bjt type=npn bf=80 rb=100 vaf=50 \
    cjs=2pf tf=0.3ns tr=6ns cje=3pf cjc=2pf
OscResp tran stop=80us maxstep=10ns method=trap
```

This example shows several of the basic differences between SPICE and Spectre netlists:

- Spectre netlists define the language context at the beginning of the netlist with the simulator lang=spectre statement. By default, netlists are assumed to be in SPICE unless the simulator lang=spectre statement is encountered or unless the netlist file ends in the extension .scs. The SPICE Reader will insert this line at the beginning of each SPICE-to-Spectre converted netlist.
- In the SPICE language, the component type is determined by the first letter of the component name, which limits the component types to 26. The Spectre Netlist Language has unlimited component types since the component type is determined by the master name instead of the first letter of the component name. An example of using the master name is the resistor field in the instance statements for R1 and R2.
- In many versions of SPICE, the component name, node numbers, and other fields are limited to a maximum of 8 characters. The Spectre netlister allows each of these fields to be greater than 200 characters.
- In the SPICE language, instance statements often have their parameter values listed in a particular order. In the Spectre language, you can specify parameter values in any order using parameter name =. This allows for a more readable netlist.
- Spectre netlists are case sensitive and use lower case for all keywords. SPICE netlists are case insensitive. This means that you can name one model myModel and another mymodel, and Spectre treats them as two distinct models. In SPICE, they would be considered to be the same model.
 - Spectre always tries to match the case of a model/subcircuit's name when there is a call to a model/subcircuit from an instance line, an alter statement, or other part of the netlist. During the netlist conversion process, the SPICE Reader converts included models/subcircuits to lower case, which can prevent Spectre from identifying the right model/subcircuit for a given device. For this reason, the SPICE Reader will insert the flag insensitive=yes at the beginning of each converted netlist on the simulator command statement (that is, simulator lang=spectre insensitive=yes). The insensitive=yes language directive marks the models/subcircuits that were converted so that Spectre can perform a lower case compare.
- Because the SPICE language is case insensitive, the scale factors are different from the Spectre scale factors (see <u>"Scaling Numerical Literals"</u> on page 83 for more information). The Spectre Netlist Language uses the ANSI standard (SI) scale factors.

SPICE Compatibility

- Options that are analysis specific are found on the global .options card in SPICE. In Spectre, options pertaining to an analysis are listed on the analysis card.
- Spectre supports the idea of named analyses, which allows you to include multiple analyses of the same type in a single netlist. The SPICE Reader takes advantage of Spectre's ability to have more than one analysis of each type, mapping each analysis statement to the equivalent Spectre analysis and providing each a unique name. If multiple analysis of the same type are listed within the SPICE deck, each will be simulated instead of the "last one wins" mode of SPICE
- In both Spectre and Spice, the first line is always the title card and ignored by the simulator.
- A card (other than the title or a comment) can be continued onto the next card by putting the continuation character (+) in the first column of the next card. Spectre also supports continuations at the end of the line in its native mode, with the backslash character (\).
- In many versions of Spice, there are punctuation characters (such as parentheses and commas) that are treated as white space. Spectre will treat all characters as relevant input. The SPICE Reader will treat all of these characters as literals.
- The Spectre simulator does not require an .end statement; it assumes the end of the input file is the end of the input statements. The .end statement, if included in a SPICE netlist, is treated like the end of file; and the SPICE Reader does not read beyond the .end.

Reading SPICE and Spectre Files

When the Spectre simulator opens a netlist file, the simulator determines whether the file is a SPICE or Spectre netlist and interprets it accordingly. This is true regardless of whether the file is the main netlist or an included netlist. The Spectre simulator recognizes Spectre files because they start with the line simulator lang=spectre or the filename ends in the Spectre circuit simulator extension of .scs. Files that do not start with this line or end in the .scs extension are taken to be SPICE files. Thus, SPICE files do not need to be modified to work with the Spectre simulator as the SPICE Reader will automatically map them correctly to Spectre input. The .scs extension allows users to write netlists, included files, and library files using only the Spectre Netlist Language without having to switch from SPICE mode.

To learn more about controlling the input language, see "General Input Compatibility" on page 51.

SPICE Compatibility

Scope of the Compatibility

Many current variants of SPICE have their own alterations to the SPICE input language. The SPICE Reader in Spectre does support many of these variations using the following sources and guidelines.

Sources

- The SPICE Version 2G User's Guide [vladimirescu81] is the reference for the SPICE2 input language. The SPICE Reader accepts input formats from this document for all SPICE capabilities the Spectre simulator supports.
 - The SPICE Reader might not accept variations from SPICE 2G6 that are not in the user guide.
- The SPICE3 Version 3e User's Manual [B.JohnsonXX] is the reference for SPICE3 batch input language. The SPICE Reader accepts input formats (batch mode only) from this document for all SPICE capabilities the Spectre simulator supports.
- The SPICE BOOK [vladimirescu81] is a general reference for SPICE2/3-based syntax's with common extensions.
- Publicly available netlists provide references for many of the extensions to SPICE.

Compatibility Guidelines

- Mapping of SPICE must not adversely affect simulation results.
- Where simulators follow different syntax rules, support for each is attempted. For example, the TC property is an instance property in SPICE2 and model parameters (TC1,TC2) in SPICE3—both are supported.
- When a conflict exists between simulator syntax rules, one method is selected and documented.

General Input Compatibility

By default, the SPICE Reader processes its input in the following manner:

- Accepts the SPICE instance (A-Z) and control (dot) cards as well as the Spectre native input language.
- Reads in the first line as the title card.

SPICE Compatibility

- Generally ignores the case of alphabetic characters in the input (The program internally converts them to lowercase). Quoted strings are exceptions to this rule.
- Interprets scale factors following numerical values according to SPICE conventions.
- Accepts the SPICE comment and continuation conventions.
- Accepts the /, +, -, and * characters as valid parts of a node or an instance or parameter name. You can also use the Escape backslash convention to include otherwise illegal characters in the names.
- Spectre statements are not allowed in the SPICE mode, and SPICE statements are not allowed in the Spectre mode.
- In simulator lang=spectre mode, you can refer to model names and subcircuit names defined with the simulator lang=spice mode .model and .subckt statements, even though they are in another portion of the netlist.
 - Spectre always tries to match the case of a model/subcircuit's name when there is a call to a model/subcircuit from an instance line, an alter statement, or other part of the netlist. During the netlist conversion process, the SPICE Reader converts included models/subcircuits to lower case, which can prevent Spectre from identifying the right model/subcircuit for a given device. For this reason, the SPICE Reader will insert the flag insensitive=yes at the beginning of each converted netlist on the simulator command statement (that is, simulator lang=spectre insensitive=yes). The insensitive=yes language directive marks the models/subcircuits that were converted so that Spectre can perform a lower case compare.
- The SPICE Reader treats the * character as a math function if found inside of an expression and as a comment if found outside of an expression.
- Lines beginning with #CPP keywords are not treated as comments by the SPICE Reader but will result in an syntax error unless you run CPP on the netlist.
- You can force the SPICE Reader to treat all bit devices as having four terminals with the -q4term command line option to spp. By default, the fourth field after the device name of an instance statement is treated as a terminal, unless one of the following occurs:
 - ☐ There is a model name within the netlist that is named the same as the fourth field.
 - It is the last item on the instance line.

For example:

```
q1 1 2 3 4 mybjt // The 4 is treated as a device terminal q1 1 2 3 nch mybjt
```

The nch is treated as a device terminal unless

SPICE Compatibility

- mybjt is defined as a parameter in the netlist
- □ nch is defined as a model in the netlist

In the second case, the -q4term option can be used to override the default behavior of the converter.

You can gain full access to Spectre and its features with a SPICE netlist by controlling the input language. Spectre provides three ways to gain access to its language in a SPICE netlist:

- 1. Change the input language to Spectre using the simulator lang command
- 2. Append Spectre parameters to a SPICE statement
- 3. Hide Spectre text from SPICE

Each of these methods is discussed in the following sections.

Spectre's simulator lang Command

You can use the Spectre Netlist Language or an extended form of the SPICE2/3 input language for your simulation. You specify which language with a simulator lang command.

You can change the input-processing mode with the simulator lang command. A simulator lang=spice command causes subsequent input to be processed in the SPICE extension mode; a simulator lang=spectre command causes the input processing to conform to the Spectre Netlist Language. (Remember that you can give the simulator lang command anywhere that you can enter an instance statement, and it affects all subsequent input regardless of whether the command is part of an if statement.) Use of Spectre syntax in the SPICE mode or SPICE syntax in the Spectre mode results in an error.

The format of the simulator lang command is as follows:

```
simulator lang=spice
simulator lang=spectre
```

Although the simulator lang command is expected to be the first line in the netlist, it does not have to be. The commands take effect immediately and remain in effect until the end of input or until the next simulator lang command. For example, you can include Spectre lines in the middle of a SPICE netlist by surrounding the Spectre lines with the simulator lang command:

```
r1 1 0 1k
v1 1 0 1
```

SPICE Compatibility

```
simulator lang=spectre
r2 1 0 resistor r=1k
simulator lang=spice
.op
```

If you do not specify an input language, the Spectre simulator uses SPICE mode by default. You do not need to place simulator lang commands around include statements, but you must specify simulator lang=spectre in include files written in the Spectre Netlist Language.

Spectre allows you to specify the netlist input format to be Spectre without the simulator lang command by naming the file with the Spectre circuit simulator extension of .scs. Files ending in this extension are treated as Spectre syntax.

Appending Spectre Parameters

While you can gain full access to Spectre features by switching to the Spectre syntax, you can also gain access to specific parameters on the SPICE input statements. The SPICE Reader maps each SPICE statement to the Spectre equivalent statement. Mapping of parameters is done first for order-dependent parameters and then for name=value based parameters. The SPICE reader tries to map parameters in the name=value form if they are known; otherwise, they are passed directly to Spectre as is. This allows you to add Spectre parameters to the end of any SPICE statement. For example,

```
* Additional Spectre parameter to resistor
Vin input 0 dc=1 AC 1 0
X1 mainnetlist in out
Rload out 0 1k isnoisy=no //isnoisy is spectre parameter
.include "./main.ckt"
.ac dec 10 1k 100k
.noise v(out)
.end
```

If the netlist is to be run by a SPICE simulator at a later time, these Spectre parameters must be hidden or removed. See the next section for information on how to hide Spectre text.

Hiding Spectre Text from SPICE

You can create a SPICE-mode input file that you can use with both a SPICE-based simulator and the Spectre simulator. When you run the Spectre simulator, you can use Spectre features unavailable in SPICE. For example, if you want to specify a Spectre parameter that SPICE does not support, you write the Spectre statements so they do not cause syntax errors when you run the SPICE-based simulator. To create such an input file, follow these steps:

1. Insert the special prefix *spectre: at the beginning of a line in your SPICE netlist.

SPICE Compatibility

The line should start with an asterisk, optionally followed by blanks or tabs, followed by the string spectre: .

```
* spectre: (Spectre text)
```

Be sure to leave a space after the colon.

2. Place Spectre-specific input language statements after the : Notepecial prefix.

The Spectre simulator recognizes the Spectre statements after the prefix as input, but the SPICE-based simulator ignores the whole line as a comment.

```
*spectre: Rp 15 0 resistor r=50m
```

Note: These statements must be in the Spectre context of a netlist.

3. If you need to place the Spectre input in continuation lines, begin each line of a continuation with a (+).

```
Vbias vbb 0 1.2
*spectre: + tc=0.001
.options reltol=0.001
*spectre: + diagnose=yes
```

Compatibility Limitations

Conflicts between Spectre and Spice

- The Spectre simulator does not support all SPICE capabilities (for example, the .disto and .PZ analyses).
- Slight modifications are often necessary to make input acceptable to both languages. Superficial punctuation differences, such as ignoring extra parentheses or equal signs (=), fit this category. For example, the statement .temp = 125, which is legal in SPICE, cannot be mapped by the SPICE Reader. Removing the extraneous punctuation solves the problem.
- Compatibility is limited in the area of unsupported primitive devices in Spectre. You are encouraged to use the extensive capabilities of Verilog-A to model such devices.
- Parameters that are to be passed into a subcircuit from an instance statement must be specified on the SPICE subcircuit line. Allowing the instance to define a subcircuit parameter is not allowed in Spectre.
- Incompatibilities remain for some rarely used SPICE2 features because the authors have concentrated their efforts on creating compatibility with commonly used features.

SPICE Compatibility

Conflicts between SPICE variations

- Node 00 is treated as a number (that is, zero) in SPICE2 and a string (that is, 00) in SPICE3 and thus are interpreted differently. The SPICE Reader treats these like SPICE3.
- Leading spaces are ignored in SPICE2 and treated as a comment in SPICE3. The SPICE Reader treats these as SPICE2 does.
- lib in PSPICE provides a file to search for each instantiated model; in HSPICE, it acts as a section-specific include statement. The SPICE Reader treats these as HSPICE does.
- alter in SPICE2 allows multiple lines to be relisted with deltas following this statement. In SPICE3, the .alter is an interactive command and only allows one parameter to be changed per alter statement. The SPICE Reader treats these as SPICE2 does.
- In some versions of SPICE, global parameters values override values specified on instances of subcircuits. The SPICE Reader treats all parameter values specified on any instance including subcircuits as the final value instead of allowing a global to override it.

For more information on specific SPICE Reader limitations, please see the SPP Known Problems and Solutions on SourceLink.

Spectre Netlists

This chapter discusses the following topics:

- Netlist Statements on page 58
- Instance Statements on page 62
- Analysis Statements on page 66
- Control Statements on page 68
- Model Statements on page 70
- Input Data from Multiple Files on page 72
- Multidisciplinary Modeling on page 76
- Inherited Connections on page 78

Spectre Netlists

Netlist Statements

A Spectre[®] circuit simulator netlist describes the structure of circuits and subcircuits by listing components, the nodes that the components are connected to, the parameter values that are used to customize the components, and the analyses that you want to run on the circuit. You can use SpectreHDL or Verilog[®]-A to describe the behavior of new components that you can use in a netlist like built-in components. You can also define new components as a collection of existing components by using subcircuits.

A netlist consists of four types of statements:

- Instance Statements on page 62
- Analysis Statements on page 66
- Control Statements on page 68
- Model Statements on page 70

 
Before you can create statements for a Spectre netlist, you must learn some basic syntax rules of the Spectre Netlist Language.

Netlist Conventions

These are the netlist conventions followed by the Spectre simulator.

Associated Reference Direction

The reference direction for the voltage is positive when the voltage of the + terminal is higher than the voltage of the – terminal. A positive current arrives through the + terminal and leaves through the – terminal.



Spectre Netlists

Ground

Ground is a common reference point in an electrical circuit. The value of ground is zero.

Node

A node is an infinitesimal connection point. The voltage everywhere on a node is the same. According to Kirchhoff's Current Law (also known as Kirchhoff's Flow Law), the algebraic sum of all the flows out of a node at any instant is zero.

Basic Syntax Rules

The following syntax rules apply to all statements in the Spectre Netlist Language:

- Field separators are blanks, tabs, punctuation characters, or continuation characters.
- Punctuation characters such as equal signs (=), parentheses (()), and colons (:) are significant to the Spectre simulator.
- You can extend a statement onto the next line by ending the current line with a backslash (\). You can use a plus sign (+) to indicate line continuation at the beginning of the next line. The preferred style is the \ at the end of the line.
- You can indicate a comment line by placing a double slash (//) at the beginning of the comment. The comment ends at the end of that line. You can also use an asterisk (*) to indicate a comment line. The preferred style is using //.
- You can indicate a comment for the remainder of a line by placing a space and double slash (//) anywhere in the line.

Spectre Language Modes

The Spectre netlist supports two language modes:

- Spectre mode (mostly discussed here)
- SPICE mode

You can specify the language mode for subsequent statements by specifying simulator lang=mode, where mode is spectre or spice.

Spectre mode input is fully case sensitive. In contrast, except for letters in quoted strings, SPICE mode converts input characters to lowercase.

Spectre Netlists

Creating Component and Node Names

When you create node and component names in the Spectre simulator, follow these rules.

- Do not use the name of an analysis (such as tran) or built-in primitive (such as resistor).
- Except for node names, names must begin with a letter or underscore. Node names can also be integers.
- If the node name is an integer, leading zeros are significant in the Spectre language mode.
- Names can contain any number of letters, digits, or underscores.
- Names cannot contain nonalphanumeric characters, blanks, tabs, punctuation characters, or continuation characters (\, +, -, //, *) unless they are escaped with a backslash (\). The exception is bang (!), for example, vdd!.
- The following reserved words (case specified) should not be used as node names, net names, instance names, model names, or parameter names.

M_1_PI	M_2_PI	M_2_SQRTPI	M_DEGPERRAD
M_E	M_LN10	M_LN2	M_LOG10E
M_LOG2E	M_PI	M_PI_2	M_PI_4
M_SQRT1_2	M_SQRT2	M_TWO_PI	P_C
P_CELSIUS0	P_EPSOP_H	P_K	P_Q
P_U0	abs	acos	acosh
altergroup	asin	asinh	atan
atan2	atanh	ceil	correlate
cos	cosh	else	end
ends	exp	export	floor
for	function	global	hypot
ic	if	inline	int
library	local	log	log10
march	max	min	model
nodeset	parameters	paramset	plot

Spectre Netlists

pow	print	pwr	real
return	save	sens	sin
sinh	sqrt	statistics	subckt
tan	tanh	to	truncate
vary			

Multiple Namespace

From release 5.0.32 onwards, you need not have unique names for device instances, models, nets, subcircuit parameters, enumerated named values for parameters, and netlist parameters that are expressions. Consider the following example:

```
simulator lang=spectre
parameters c1=1p c2=2p c10=c1+c2
parameters res=10k
res c10 0 resistor r=res
c10 c10 0 capacitor c=c10
run dc
spectre2 options currents=all
```

res is used as a parameter and instance name. c10 is used as a node, instance, and parameter name. The Spectre circuit simulator can now read this netlist.

The Spectre circuit simulator can resolve ambiguous statements as shown in the example below:

```
parameters xyz=1
xyz 1 0 vsource dc=xyz
h1 3 0 ccvs probe=xyz rm=xyz
```

The Spectre circuit simulator assigns the instance xyz to probe and the parameter xyz to rm.

In the example below,

```
vcc vcc 0 vsource dc=1
save vcc
```

the Spectre circuit simulator saves the node vcc rather than the instance vcc. If you want to save the instance vcc, you must assign a different name to it.

Spectre Netlists

Escaping Special Characters in Names

If you have old netlists that contain names that do not follow Spectre syntax rules, you might still be able to run these netlists with the Spectre simulator. The Spectre Netlist Language permits the following exceptions to its normal syntax rules to accommodate old netlists. Use these features only when necessary.

If you place a backslash (\) before any printable ASCII character, including spaces and tabs, you can include the character in a name.

You can create a name from the following elements in the order given:

A string of digits, followed by

- □ Letters, underscores, or backslash-escaped characters, followed by
- □ A digit, followed by
- Underscores, digits, or backslash-escaped characters

This accommodates model or subcircuit libraries that use names like \2N2222.

Instance Statements

In this section, you will learn to place individual components into your netlist and to assign parameter values for them.

Formatting the Instance Statement

To specify components, you use the instance statement. You format the instance statement as follows:

```
name [(]node1 ... nodeN[)] master [[param1=value1] ...[paramN=valueN]]
```

When you specify components with the instance statement, the fields have the following values:

name

The name you give to the statement. (Unlike SPICE instance names, the first character in Spectre instance names is not significant.)

Spectre Netlists

[(]node1...nodeN[)]

The names you give to the nodes that connect to the component. You have the option of putting the node names in parentheses to improve the clarity of the netlist. (See the examples later in this chapter.) You can use the hierarchical operator . to represent nodes inside a subcircuit hierarchy in your netlist. The Spectre circuit simulator supports forward referencing (retaining information about a node that is not defined yet, and mapping it when the node is defined) and relative path referencing (accessing a node with reference to the current scope). Look for examples in the section below. The simulator does not support hierarchical terminals in netlists.

master

This is the name of one of the following: A built-in primitive (such as resistor)

A model A subcircuit

An AHDL module (SpectreHDL or Verilog-A language)

Note: The instance statement is used to call subcircuits and refer to AHDL modules as well as to specify individual components. For more information about subcircuit calls, see "Subcircuits" on page 93. For more information about the SpectreHDL product, see the SpectreHDL Reference manual. For more information about Verilog-A, see the Verilog-A Language Reference manual.

parameter1=value1..
.parameterN=valueN

This is an optional field you can repeat any number of times in an instance statement. You use it to specify parameter values for a component. Each parameter specification is an instance parameter, followed by an equal sign, followed by your value for the parameter. You can find a list of the available instance parameters for each component in the Spectre online help (spectre -h). As with node names, you can place optional parentheses around parameter specifications to improve the clarity of the netlist. For example, (c=10E-12).

For subcircuits and ahdl modules, the available instance parameters are defined in the definition of the subcircuit or AHDL module. In addition, all subcircuits have an implicit instance parameter $\mathfrak m$ for defining multiplicity. For more details about $\mathfrak m$, see "Identical Components or Subcircuits in Parallel" on page 65.

Spectre Netlists

Examples of Instance Statements

In this example, a capacitor named c1 connects to nodes 2 and 3 in the netlist. Its capacitance is 10E-12 Farads.

```
C1 (2 3) capacitor c=10E-12F
```

The following example specifies a component whose parameters are defined in a model statement. In this statement, npn is the name of the model defined in a model statement that contains the model parameter definitions; Q1 is the name of the component; and o1, i1, and b2 are the connecting nodes of the component.

```
Q1 (o1 i1 b2) npn
```

Note: The model statement is described in "Model Statements" on page 70. You can specify additional parameters for an individual component in an instance statement that refers to a model statement. You can find a list of available instance parameters and a list of available model parameters for a component in the Spectre online help for that component (spectre -h).

Example of Forward Referencing in Hierarchical Nodes

```
simulator lang=spectre
...
c1 xa.mid 0 capacitor c=0.2p
...
xa 1 2 buffer
```

Example of Relative Path Referencing in Hierarchical Nodes

```
simulator lang=spectre
...
subckt wrapper a b
    x1 a b res_in_series
    rh x1.int1 x1.int2 resistor r=1
ends
x2 1 0 wrapper
```

Basic Instance Statement Rules

When you prepare netlists for the Spectre simulator, remember these basic rules:

- You must give each instance statement a unique name.
- If the master is a model, you need to specify the model.

Spectre Netlists

Identical Components or Subcircuits in Parallel

If your circuit contains identical devices (or subcircuits) in parallel, you can specify this condition easily with the multiplication factor (m).

Specifying Identical Components in Parallel

If you specify an $\mathfrak m$ value in an instance statement, it is as if $\mathfrak m$ identical components are in parallel. For example, capacitances are multiplied by $\mathfrak m$, and resistances are divided by $\mathfrak m$. Remember the following rules when you use the multiplication factor:

- You can use m only as an instance parameter (not as a model parameter).
- The m value need not be an integer. The m value can be any positive real number.
- The multiplication factor does not affect short-channel or narrow-gate effects in MOSFETs.
- If you use the m factor with components that naturally compute branch currents, such as voltage sources and current probes, the computed current is divided by m. Terminal currents are unaffected.
- You can set the built-in m factor property on a subcircuit to a parameter and then alter it.

Example of Using m to Specify Parallel Components

In the following example, a single instance statement specifies four 4000-Ohm resistors in parallel.

```
Ro (d c) resistor r=4k m=4
```

The preceding statement is equivalent to

```
Ro (d c) resistor r=1k
```

Specifying Subcircuits in Parallel

If you place a multiplication factor parameter in a subcircuit call, you model m copies of the subcircuit in parallel. For example, suppose you define the following subcircuit:

```
subckt LoadOutput a b
    r1 (a b) resistor r=50k
    c1 (a b) capacitor c=2pF
ends LoadOutput
```

If you place the following subcircuit call in your netlist, the Spectre simulator models five LoadOutput cells in parallel:

Spectre Netlists

x1 (out 0) LoadOutput m=5

Analysis Statements

In this section, you will learn to place analyses into your netlist and to assign parameter values for them. For more information on analyses, see Chapter 6, "Analyses," and the Spectre online help (spectre -h).

Basic Formatting of Analysis Statements

You format analysis statements in the same way you format component instance statements except that you usually do not put a list of nodes in analysis statements. You specify most analysis statements as follows:

Name [(]node1 ... nodeN[)] Analysis Type parameter=value

where

Name The name you give to the analysis.

[(] node1...nodeN[Names you give to the nodes that connect to the analysis. You

have the option of putting the node names in parentheses to improve the clarity of the netlist. (See the examples later in this chapter.) For most analyses, you do not need to specify any nodes. You can use the hierarchical operator . to represent nodes inside a subcircuit hierarchy in your netlist. The Spectre circuit simulator supports forward referencing (retaining information about a node that is not defined yet, and mapping it

when the node is defined) and relative path referencing (accessing a node with reference to the current scope). Look for examples in the section below. The simulator does not support

hierarchical terminals in netlists.

Analysis Type Spectre name of the type of analysis you want, such as ac,

tran, or xf. You can find this name by referring to the topics list

in the Spectre online help (spectre -h).

parameter=value List of parameter values you specify for the analysis. You can

specify values for any number of parameters. You can find parameter listings for an analysis by referring to the Spectre

online help (spectre -h).

Spectre Netlists

Note: The noise, xf, pnoise, and pxf analyses let you specify nodes, p and n, which identify the output of the circuit. When you use this option, you should use the full analysis syntax as follows:

```
Name> [p n] Analysis Type parameter=value
```

If you do not specify the p and n terminals, you must specify the output with a probe component.

Examples of Analysis Statements

The following examples illustrate analysis statement syntax.

```
XferVsTemp xf start=0 stop=50 step=1 probe=Rload param=temp freq=1kHz
```

This statement specifies a transfer function analysis (xf) with the user-supplied name XferVsTemp. With all transfer functions computed to a probe component named Rload, it sweeps temperature from 0 to 50 degrees in 1-degree steps at frequency 1 kHz. (For long statements, you must place a backslash (\) at the end of the first line to let the statement continue on the second line.)

```
Sparams sp stop=0.3MHz lin=100 ports=[Pin Pout]
```

This statement requests an S-parameter analysis (sp) with the user-supplied name sparams. A linear sweep starts at zero (the default) and continues to .3 MHz in 100 linear steps. The ports parameter defines the ports of the circuit; ports are numbered in the order given.

The following example statement demonstrates the proper format to specify optional output nodes $(p \ n)$:

```
FindNoise (out gnd) noise start=1 stop=1MHz
```

Example of Forward Referencing in Hierarchical Nodes

```
simulator lang=spectre
...
c1 xa.mid 0 capacitor c=0.2p
...
xa 1 2 buffer
```

Example of Path Referencing in Hierarchical Nodes

```
xf1 ( I3.op3 I3.on3 ) xf start=1k stop=10G dec=20 annotate=status
```

Spectre Netlists

Basic Analysis Rules

When you prepare netlists for the Spectre simulator, remember these basic analysis rules:

- The Spectre simulator has no default analysis. If you do not put any analysis statements into a netlist, the Spectre simulator issues a warning and exits.
- For most analyses, if you specify an analysis that has a prerequisite analysis, the Spectre simulator performs the prerequisite analysis automatically. For example, if you specify an AC analysis, the Spectre simulator automatically performs the prerequisite DC analysis. However, if you want to run a pac, pxf, or pnoise analysis, you must specify the prerequisite pss analysis.
- You specify analyses in the order you want the Spectre simulator to perform them.
- You can perform more than one of the same type of analysis in a single Spectre run. Consequently, you can perform several analyses of the same type and vary parameter values with each analysis.
- You must give each analysis or control statement a unique name. The Spectre simulator requires these unique names to identify output data and error messages.

Control Statements

The Spectre simulator lets you place a sequence of control statements in the netlist. You can use the same control statement more than once. Spectre control statements are discussed throughout this manual. The following are control statements:

- alter
- altergroup
- **■** assert
- check
- checklimit
- ic
- info
- nodeset
- options
- paramset

Spectre Netlists

- save
- set
- shell
- statistics

Formatting the Control Statement

Control statements often have the same format as analysis statements. Like analysis statements, many control statements must have unique names. These unique names let the Spectre simulator identify the control statement if there are error messages or other output associated with the control statement. You specify most control statements as follows:

Name Control Statement Type parameter=value

where

Name	Unique name you give to the control statement.
Control Statement Type	Spectre name of the type of control statement you want, such as alter. You can find this name by referring to the topics list in the Spectre online help (spectre -h).
parameter=value	List of parameter values you specify for the control statement. You can specify values for any number of parameters. You can find parameter listings for a control statement by referring to the Spectre online help (spectre -h).

Examples of Control Statements

```
SetTemp alter param=temp value=27
```

The preceding example of an alter statement sets the temperature for the simulation to 27°C. The name for the alter statement is SetTemp, and the name of the control statement type is alter.

You cannot alter a device from one primitive type to another. For example,

```
inst1 (1 2) capacitor c=1pF
alterfail altergroup{
   inst1 (1 2) resistor r=1k
}
```

is illegal.

Spectre Netlists

Another example of a control statement is the altergroup statement, which allows you to change the values of any modifiable device or netlist parameters for any analyses that follow. Within an alter group, you can specify parameter, instance, or model statements; the corresponding netlist parameters, instances, and models are updated when the altergroup statement is executed. These statements must be bound within braces. The opening brace is required at the end of the line defining the alter group. Alter groups cannot be nested or be instantiated inside subcircuits. Also, no topology changes are allowed to be specified in an alter group.

The following is the syntax of the altergroup statement:

```
Name altergroup ... {
    netlist parameter statements ...

and/or
    device instance statements ...

and/or
    model statements ...

and/or
    parameter statements ...
}

The following is an example of the altergroup statement:

v1 1 0 vsource dc=1
R1 1 0 Resistor R=1k
dc1 dc // this analysis uses a 1k resistance value
al altergroup {
    R1 1 0 Resistor R=5k
}
dc2 dc // this analysis uses a 5k value
```

Model Statements

model statements are designed to allow certain parameters, which are expected to be shared over many instances, to be given once. However, for any given component, it is predetermined which parameters can be given on model statements for that component.

This section gives a brief overview of the Spectre model statement. For a more detailed discussion on modeling issues (including parameterized models. expressions, subcircuits, and model binning), see Chapter 5, "Parameter Specification and Modeling Features."

Spectre Netlists

Formatting the model Statement

You format the model statement as follows:

```
model name master [[param1=value1] ... [param2=value2 ]]
```

The fields have the following values:

model The keyword model (.model is used for SPICE mode).

name The name you give to the model.

master The master name of the component, such as resistor, bjt, or

tline. This field can also contain the name of an AHDL

module. (For more information about using the Spectre simulator with SpectreHDL, see the <u>SpectreHDL Reference</u> manual.)

parameter1=value1 ...<parameterN=valueN>

This is an optional field you can repeat any number of times in a model statement. Each parameter specification is a model parameter, followed by an equal sign, followed by the value of the parameter. You can find a list of the available model parameters for each component in the parameter listings of Spectre online

help (spectre -h).

Examples of model Statements

The following examples give parameters for a tline model named tuner and a bjt model named NPNbjt.

```
model tuner tline f=1MHz alphac=9.102m dcr=105m model NPNbjt bjt type=npn bf=100 js=0.1fA
```

Note: The backslash (\setminus) is used as a continuation character in this lengthy model statement.

```
model NPNbjt2 bjt \
    type=npn is=3.38e-17 bf=205 nf=0.978 vaf=22 \
    ikf=2.05e-2 ise=0 ne=1.5 br=62 nr=1 var=2.2 isc=0 \
    nc=1.5 rb=115 re=1 rc=30.5 cje=1.08e-13 vje=0.995 \
    mje=0.46 tf=1e-11 xtf=1 itf=1.5e-2 cjc=2.2e-13 \
    vjc=0.42 mjc=0.22 xcjc=0.1 tr=4e-10 cjs=1.29e-13 \
    vjs=0.65 mjs=0.31 xtb=1.5 eq=1.232 xti=2.148 fc=0.875
```

The following example creates two instances of a bit transistor model:

```
al (C B1 E S) NPNbjt
a2 (C B2 E S) NPNbjt2
```

Spectre Netlists

Basic model Statement Rules

When you use the model statement,

- You can have several model statements for a particular component type, but each instance statement can refer to only one model statement.
- Occasionally, a component allows a parameter to be specified as either an instance parameter or as a model parameter. If you specify it as a model parameter, it acts as a default for instances. If you specify it as an instance parameter, it overrides the model parameter.
- Values for model parameters can be expressions of netlist parameters.

Input Data from Multiple Files

If you want to use data from multiple files, you use the include statement to insert new files. When the Spectre simulator reads the include statement in the netlist, it finds the new file, reads it, and then resumes reading the netlist file.

If you have older netlist files you want to incorporate into your new, larger netlist, the include statement is particularly helpful. Instead of creating a completely new netlist, you can use the include statement to insert your old files into the netlist at the location you want.

Note: The Spectre simulator always assumes that the file being included is in SPICE language mode unless the extension of the filename is .scs.

Formatting the include Statement

You can use any of two formatting options for the include statement. When you want to use C preprocessor (CPP) macro-processing capabilities within your inserted file, use the second format (#include). These are the two format options:

```
include "filename"
#include "filename"
```

The first option (include) is performed by the Spectre simulator itself. The second option (#include) is performed by the CPP. You must use the #include option when you have macro substitution in the inserted file.

Note: CPP is not supported in Spectre Direct.

Spectre Netlists

Rules for Using the include Statement

Remember the following rules and guidelines when using the include statement:

- You must use the #include format if you want the CPP to process the inserted file. Also, you must specify that the CPP be run using the -E command line option when you start the Spectre simulator.
- Regardless of which include format you use, you can use the ¬I command line option, followed by a path, to have the Spectre simulator look for the inserted files in a specified directory, in addition to the current directory, just as you would for the CPP #include.
- If filename is not an absolute path specification, it is considered relative to the directory of the including file that the Spectre simulator is reading, not from the directory in which the Spectre simulator was called.
- You must surround the filename in quotation marks.
- You can place a space and then a backslash-escaped newline (\) between include and filename for line continuation.
- You can place other include statements in the inserted file (recursive inclusion).
- With any of the include formats, you can set the language mode for the inserted file by placing a simulator lang command at the beginning of the file. For more information about the simulator lang command, see Chapter 3, "SPICE
 Compatibility." The Spectre simulator assumes that the file to be included is in the SPICE language unless one of the following conditions occurs:
 - The file to be included has a simulator lang=spectre line at the beginning of the file. (The first line is not a comment title line, even in SPICE mode.)
 - ☐ The file to be included has a .scs file extension.
- With the include format, if you change the language mode in an inserted file, the language mode returns to that of the original file at the end of the inserted file.
- You cannot start a statement in an original file and end it in an inserted file or vice versa.
- You can use include "~/filename", and the Spectre simulator looks for filename in your home directory. This does not work for #include.
- You can use environment variables in your include statements. For example, include "\$MYMODELS/filename"

The Spectre simulator looks for filename in the directory specified by \$MYMODELS. This works for include, but not for #include.

Spectre Netlists

There are two major differences between using #include and include:

- You can specify #include to run CPP and use macros and #-defined constants.
- #include does not expand special characters or environment variables in the filename.

Example of include Statement Use

In the following include statement example, the Spectre simulator reads initial program options and then inserts two files, cmos.mod and opamp.ckt. After reading these files, it returns to the original file and reads further data about power supplies.

```
// example of using include statement
global gnd vdd vss
simulator lang=spectre
parameters VDD=5
include "cmos.mod"
include "opamp.ckt"
// power supplies
Vdd vdd gnd vsource dc=VDD
Vss vss gnd vsource dc=-VDD
```

Reading Piecewise Linear (PWL) Vector Values from a File

You could type the following component description into a netlist:

```
v4 in 0 vsource type=pwl wave=[0 0 1n 0 2n 5 10n 5 11n 0 12n 0]
```

You could also enter the vector values from a file, in which case the component description might look like this:

```
v4 in 0 vsource type=pwl file="test.in"
```

You can use the -I command line option, followed by a path, to have the Spectre simulator look for the inserted files in a specified directory if they cannot be found in the current directory.

If you place PWL vector values in an input file that is read by the component, do not specify scale factors in your parameter values.

If you use an input file, the values in the file must look like this—without scale factors:

```
0 0 0 0 1e-9 0 2e-9 5 11e-9 0 12e-9 0
```

Spectre Netlists

Using Library Statements

Another way to insert new files is to use the library statements. There are two statements: one to refer to a library and one that defines the library. A library is a way to group statements into multiple sections and selectively include them in the netlist by using the name of the section.

As for the include statement, the default language of the library file is SPICE unless the extension of the file is .scs; then the default language is the Spectre Netlist Language.

Library Reference

This statement refers to a library section. This statement can be nested. To see more information on including files, see <code>spectre -h include</code>. The name of the section has to match the name of the section defined in the library. The following is the syntax for library reference:

```
include "file" section=Name
```

where *file* is the name of the library file to be included. The library reference statement looks like an include statement, except for the specification of the library section. When the file is being inserted, only the named section is actually included.

Library Definition

The library definition has to be in a separate file. The library has to have a name. Each section in the library has to be named because this name is used by the library reference statement to identify the section to include. The <code>statements</code> within each section can be any valid statement. This is important to remember when using libraries in conjunction with alter groups because the <code>altergroup</code> statement is restrictive in what can be specified.

The optional names are allowed at the end of the section and library. These names must match the names of the section or library.

The following is the syntax for library definition:

```
library libraryName
    section sectionName
    statements
    endsection [sectionName]
    section anotherName
        statements
    endsection [anotherName]
library [libraryName]
```

One common use of library references is within altergroup statements. For example:

Spectre Netlists

```
al altergroup {
    //change models to "FAST" process corner
    include "MOSLIB" section=FAST
}
```

Multidisciplinary Modeling

Multidisciplinary modeling involves setting tolerances and using predefined quantities.

Setting Tolerances with the quantity Statement

Quantities are used to hold convergence-related information about particular types of signals, such as their units, absolute tolerances, and maximum allowed change per Newton iteration. With the quantity statement, you can create quantities and change the values of their parameters. You set these tolerances with the abstol and maxdelta parameters, respectively. You can set the huge parameter, which is an estimate of the probable maximum value of any signal for that quantity. You can also set the blowup parameter to define an upward bound for signals of that quantity. If a signal exceeds the blowup parameter value, the analysis stops with an error message.

Generally, a reasonable value for the absolute tolerance of a quantity is 10^6 times smaller than its greatest anticipated value. A reasonable definition for the huge value of a quantity is $10 \text{ to } 10^3$ times its greatest expected value. A reasonable definition of the blowup value for a quantity is 10^6 to 10^9 times its greatest expected value.

Predefined Quantities

The Spectre Netlist Language has seven predefined quantities that are relevant for circuit simulation, and you can set tolerance values for any of them. These seven predefined quantities are

- Electrical current in Amperes (named I)
 - (Default absolute tolerance = 1 pA)
- Magnetomotive force in Amperes (named MMF)
 - (Default absolute tolerance = 1 pA-turn)
- Electrical potential in Volts (named v)
 - (Default absolute tolerance = 1 μ V; Default maximum allowable change per iteration = 300mV)

Spectre Netlists

■ Magnetic flux in Webers (named wb)

(Default absolute tolerance = 1 nWb)

■ Temperature in Celsius (named Temp)

(Default absolute tolerance = 100μ C)

■ Power in Watts (named Pwr)

(Default absolute tolerance = 1 nW)

■ Unitless (named U)

(Default absolute tolerance = 1×10^{-6})

For more information, see spectre -h quantity.

quantity Statement Example

The electrical potential quantity has a normal default setting of 1 μ V for absolute tolerance (abstol) and 300 mV for maximum change per Newton iteration (maxdelta). You can change abstol to 5 μ V, reset maxdelta to 600 mV, define the estimate of the maximum voltage to be 1000 V, and set the maximum permitted voltage to be 10 9 with the following statement:

```
VoltQuant quantity name="V" abstol=5uV maxdelta=600mV
huge=1000V blowup=1e9
```

VoltQuant is a unique name you give to the quantity statement.

The keyword quantity is the primitive name for the statement.

The name parameter identifies the quantity you are changing. (V is the name for electrical potential.)

abstol, maxdelta, huge, and blowup are the parameters you are resetting.

Note: The quantity statement has other uses besides setting tolerances. You can use the quantity statement to create new quantities or to redefine properties of an existing quantity, and you can use the node statement to set the quantities for a particular node. For more information about the quantity statement, see the Spectre online help (spectre—h quantity) and the <u>SpectreHDL Reference</u> manual. For more information on the node statement, see spectre—h node. The following is an example of a node statement:

```
setToMagnetic t1 t2 node value="Wb" flow="MMF" strength=insist
```

Spectre Netlists

Inherited Connections

Inherited connections is an extension to the connectivity model that allows you to create global signals and override their names for selected branches of the design hierarchy. The flexibility of inherited connections allows you to use

- Multiple power supplies in a design
- Overridable substrate connections
- Parameterized power and ground symbols

You can use an inherited connection so that you can override the default connection made by a signal or terminal. This method can save you valuable time. You do not have to re-create an entire subbranch of your design just to change one global signal.

For more detailed information on how to use inherited connections and net expressions with various Cadence[®] tools in the design flow, see the *Inherited Connections Flow Guide*.

5

Parameter Specification and Modeling Features

You can use the Spectre[®] circuit simulator models and AHDL modules in Spectre netlists. This chapter describes the powerful modeling capabilities of Spectre, including

- Instance (Component or Analysis) Parameters on page 80
- Parameters Statement on page 84
- Expressions on page 86
- Subcircuits on page 93
- Inline Subcircuits on page 99
- Binning on page 107
- Scaling Physical Dimensions of Components on page 118
- N-Ports on page 120

Parameter Specification and Modeling Features

Instance (Component or Analysis) Parameters

In this section, you will learn about the types of component or analysis parameter values the Spectre circuit simulator accepts and how to specify them.

Types of Parameter Values

Spectre component or analysis parameters can take the following types of values:

Real or integer expression, consisting of		
	Literals	
	Arithmetic or Boolean operators	
	Predefined circuit or subcircuit parameters	
	Built-in constants (fixed values) or mathematical functions (software routines that calculate equations)	
	Real or integer constants	

- The name of a component instance or model
- The name of a component parameter
- A character string (must be surrounded by quotation marks)
- A name from a predefined set of names available to specify the parameter value (enumerated types)

Parameter Dimension

Component or analysis parameters can be either scalar or vector.

If a component or analysis parameter value is a group of numbers or names, you specify the group as a vector of values by enclosing the list of items in square brackets ([])—for example, $coeffs=[0\ 0.1\ 0.2\ 0.5]$ to specify the parameter values 0, 0.1, 0.2, and 0.5. You can specify a group of number pairs (such as time-voltage pairs to specify a waveform) as a vector of the individual numbers.

Remember these guidelines when you specify vectors of value:

■ You can mix numbers and netlist or subcircuit parameter names in the same vector (coeff=[0 coeff1 coeff2 0.5]).

Parameter Specification and Modeling Features

- You cannot leave a list of items empty.
- You can use expressions (such as formulas) to specify numbers within a vector. When you use a vector of expressions, each expression must be surrounded by parentheses (coeff=[0 (A*B) C 0.5]).
- You can use subcircuit parameters within vectors.

Parameter Ranges

Parameter ranges have hard limits and soft limits. Hard limits are enforced by the Spectre simulator; if you violate them, the Spectre simulator issues an error and terminates. You specify soft limits; if you violate them, the Spectre simulator issues a warning and continues. Soft limits are used to define reasonable ranges for parameter values and can help find "unreasonable" values that are likely errors. You can change soft limits, which are defined in one or more files. Use the +param command line option to use the suggested parameter range limits.

You can specify limits for any scalar parameter that takes either a real number, an integer, or an enumeration. To specify the limits of a parameter that takes enumerations, use the indices or index values associated with the enumerations. For example, consider the region parameter of the bjt. There are four possible regions (see spectre -h bjt):

- off
- fwd
- rev
- sat

Each enumeration is assigned a number starting at 0 and counting up. Thus,

- off=0
- fwd=1
- rev=2
- sat=3

The specification bjt 3 <= region <= 1 indicates that a warning is printed if region=rev because the conditions 3 <= region and region <= 1 exclude only region=2 and region 2 is rev.

For more information on parameter range checking, see <u>"Checking for Invalid Parameter Values"</u> on page 98.

Parameter Specification and Modeling Features

Help on Parameters

There are four main ways to get online help about Spectre component or analysis parameters.

spectre -help

When you type spectre -help name, where name is the name of a component or analysis, you get the following information:

- Parameter names
 - Related parameters are grouped together.
- Parameter defaults
- Units
- Parameter description

For analyses and controls, parameters are listed in the "Parameters" section. At the end of the longer parameter listings is the parameter index. This index lists the parameters alphabetically and gives the number that corresponds to where the parameter is in the numbered list.

For components, parameters are divided into up to four sections: "Instance Parameters," "Model Parameters," "Output Parameters," and "Operating Point Parameters." At the end of longer parameter listings is the parameter index. This index indicates where to find a parameter's description with a letter and a number. The letter refers to the section (for example, *I* refers to the instance parameters section, *M* refers to the model parameters section, *O* refers to the output parameters section, and *OP* refers to the operating-point parameters section), and the number refers to where the parameter is in the numbered list.

spectre -helpsort

When you type spectre -helpsort name, where name is the name of a component or analysis, you get the same information as you do with spectre -h name, but the parameters are sorted alphabetically instead of divided into related groups.

Parameter Specification and Modeling Features

spectre -helpfull

When you type spectre -helpfull name, where name is the name of a component or analysis, you get related parameters grouped as you do with spectre -h name, and you get the following additional information:

- Parameter type
- Parameter dimension—scalar or vector
- Parameter range

spectre -helpsortfull

When you type spectre -helpsortfull name, where name is the name of a component or analysis, you get the same information as you do with spectre -helpsort name, but the parameters are sorted alphabetically instead of divided into related groups.

Scaling Numerical Literals

If a parameter value is an integer or a floating-point number, you can scale it in the following ways:

- Follow the number with an e or an E and an integer exponent (for example, 2.65e3, 5.32e-4, 1E-14, 3.04E6)
- Use scale factors (for example 5u, 3.26k, 4.2m)

Important

You cannot use both scale factors and exponents in the same parameter value. For example, the Spectre simulator ignores the p in a value such as 1.234E-3p.



The Spectre simulator also accepts additional data files, such as the waveform and noise files accepted by the independent sources or the Sparameter file accepted by the N-port. Generally, these files do not accept numbers with scale factors.

Parameter Specification and Modeling Features

The Spectre mode (simulator lang=spectre) accepts only the following ANSI standard (SI) scale factors:

$T=10^{12}$	G=10 ⁹	M=10 ⁶	$K=10^{3}$	$k=10^{3}$
_=1	%=10 ⁻²	c=10 ⁻²	$m=10^{-3}$	u=10 ⁻⁶
n=10 ⁻⁹	p=10 ⁻¹²	f=10 ⁻¹⁵	a=10 ⁻¹⁸	

Note: SI scale factors are case sensitive.

The Spectre simulator allows you to specify units, but only if you specify a scale factor. If specified, units are ignored. Thus,

are accepted, but

r=500hms

is rejected because units are provided without a scale factor. For the last example, use r=50 Ohms

SPICE mode (simulator lang=spice) accepts only the following SPICE scale factors:

Note: SPICE scale factors are not case sensitive. Any other scale factor is ignored (treated as 1.0).



If you are not clear about the scaling rules for each simulation mode, you can cause errors in your simulation. For example, 1.0M is interpreted as 10^{-3} in the SPICE mode but as 10^{6} in the Spectre mode.

Parameters Statement

In this section, you will learn about the circuit and subcircuit parameters (collectively known as netlist parameters) as defined by the parameters statement.

Circuit and Subcircuit Parameters

The Spectre Netlist Language allows real-valued parameters to be defined and referenced in the netlist, both at the top-level scope and within subcircuit declarations (run spectre -h subckt for more details on parameters within subcircuits).

The format for defining parameters is as follows:

```
parameters param=value param=value ...
```

Once defined, you can use parameters freely in expressions. The following are examples:

```
simulator lang=spectre
parameters p1=1 p2=2
                             // declare some parameters
rl 1 0 resistor r=p1
                             // use a parameter, value=1
r2 1 0 resistor r=p1+p2 // use parameters in an expression, value=3
x1 s1 p4=8
             // subckt "s1" is defined below, pass in value 8 for "p4"
subckt s1
 parameters p1=4 p3=5 p4=6 // note: no "p2" here, p1 "redefined"
 r1 1 0 resistor r=p1 // local definition used: value=4
                         // inherit from parent(top-level) value=2
 r5 1 0 resistor r=p1+p2/p3 //use local+inherited/local=(4+2/5)=4.4
ends
time_sweep tran start=0 stop=(p1+p2)*50e-6 // use 5*50e-6 = 150 us
dc sweep dc param=p1 values=[0.5 1 +p2 (sqrt(p2*p2)) ] // sweep p1
```

Parameter Declaration

Parameters can be declared anywhere in the top-level circuit description or on the first line of a subcircuit definition. Parameters must be declared before they are used (referenced). Multiple parameters can be declared on a single line. When parameters are declared in the top-level, their values are also specified. When parameters are declared within subcircuits, their default values are specified. The value or default value for a parameter can be a constant, expression, a reference to a previously defined parameter, or any combination of these.

You can declare parameters between subcircuit definitions if the subcircuits do not refer to parameters in the parent scope defined after the subcircuit definition. If you want to use altergroups, you must declare all parameters before the subcircuit definitions.

Parameter Inheritance

Subcircuit definitions inherit parameters from their parent (enclosing subcircuit definition, or top-level definition). This inheritance continues across all levels of nesting of subcircuit

Parameter Specification and Modeling Features

definitions; that is, if a subcircuit s1 is defined, which itself contains a nested subcircuit definition s2, then any parameters accessible within the scope of s1 are also accessible from within s2. Also, any parameters declared within the top-level circuit description are also accessible within both s1 and s2. However, any subcircuit definition can redefine a parameter that it inherited. In this case, if no value is specified for the redefined parameter when the subcircuit is instantiated, then the redefined parameter uses the locally defined default value, rather than inheriting the actual parameter value from the parent. See how the r2 resistor is used in the examples in "Circuit and Subcircuit Parameters" on page 85.

Parameter Referencing

Spectre netlist parameters can be referenced anywhere that a numeric value is normally specified on the right-hand side of an = sign or within a vector, where the vector itself is on the right-hand side of an = sign. This includes referencing of parameters in expressions (run spectre -h expressions for more details on netlist expression handling), as indicated in the preceding examples. You can use expressions containing parameter references when specifying component or analysis parameter values (for example specifying the resistance of a resistor or the stop time of a transient analysis, as outlined in the preceding example), when specifying model parameter values in model statements (for example specifying bf=p1*0.8 for a bipolar model parameter, bf), or when specifying initial conditions and nodesets for individual circuit nodes.

Altering/Sweeping Parameters

Just as certain Spectre analyses (such as sweep, alter, ac, dc, noise, sp, and xf) can sweep component instance or model parameters, they can also sweep netlist parameters. Run spectre -h analysis to see the particular details for any of these analyses, where analysis is the analysis of interest.

Expressions

An expression is a construct that combines operands with operators to produce a result that is a function of the values of the operands and the semantic meaning of the operators. Any legal operand is also an expression in itself. Legal operands include numeric constants and references to top-level netlist parameters or subcircuit parameters. Calls to algebraic and trigonometric functions are also supported. The complete lists of operators, algebraic, and trigonometric functions are given after some examples.

The following are examples:

```
simulator lang=spectre parameters p1=1 p2=2 // declare some top-level parameters
```

Parameter Specification and Modeling Features

```
// the simplest type of expression r2 (1 0) resistor r=p1 // a binary (+) expression r3 (1 0) resistor r=5+6/2 // expression of const
x1 s1 p4=8 // instantiate a subcircuit, defined in the following lines
subckt s1
parameters p1=4 p3=5 p4=p1+p3
                                      // subcircuit parameters
                                  // another simple expression
    r1 (1 0) resistor r=p1
    r2 (1 0) resistor r=p2*p2 // a binary multiply expression
                                          // a more complex expression
    r3 (1 0) resistor r=(p1+p2)/p3
    r4 (1 0) resistor r=sqrt(p1+p2)
                                           // an algebraic function call
    r5 (1 0) resistor r=3+atan(p1/p2) //a trigonometric function call
    r6 (1 0) RESMOD r=(p1 ? p4+1 : p3) // the ternary operator
ends
// a model statement, containing expressions
model RESMOD resistor tc1=p1+p2 tc2=sqrt(p1*p2)
    some expressions used with analysis parameters
time_sweep tran start=0 stop=(p1+p2)*50e-6 // use 5*50e-6 = 150 us
// a vector of expressions (see notes on vectors below)
dc sweep dc param=p1 values=[0.5 1 +p2 (sqrt(p2*p2))] // sweep p1
```

Where Expressions Can Be Used

The Spectre Netlist Language allows expressions to be used where numeric values are expected on the right-hand side of an = sign or within a vector, where the vector itself is on the right-hand side of an = sign. Expressions can be used when specifying component or analysis instance parameter values (for example, specifying the resistance of a resistor or the stop time of a transient analysis, as outlined in the preceding example), when specifying model parameter values in model statements (for example, specifying bf=p1*0.8 for a bipolar model parameter, bf), or when specifying initial conditions and nodesets for individual circuit nodes.

Operators

The operators in the following table are supported, listed in order of decreasing precedence. Parentheses can be used to change the order of evaluation. For a binary expression like a+b, a is the first operand and b is the second operand. All operators are left associative, with the exceptions of the "to the power of" operator (**) and the ternary operator (? :), which are right associative. For logical operands, any nonzero value is considered true. The relational and equality operators return a value of 1 to indicate true or 0 to indicate false. There is no short-circuiting of logical expressions involving && and | |.

Operator	Symbol(s)	Value
Unary +, Unary -	+, -	Value of the operand, negative of the operand.

Parameter Specification and Modeling Features

Operator	Symbol(s)	Value
To the power of	**	First operand to be raised to the power of the second operand.
Multiply, Divide	*, /	Product, quotient of the operands.
Binary Plus/Minus	+, -	Sum, difference of the operands.
Shift	<<, >>	First operand shifted left by the number of bits specified by the second operand; first operand shifted right by the number of bits specified by the second operand.
Relational	<, <=, >, >=	Less than, less than or equal, greater than, greater than or equal, respectively.
Equality	==, !=	True if the operands are equal; true if the operands are not equal.
Bitwise AND	&	Bitwise AND (of integer operands).
Bitwise Exclusive NOR	~^ (or ^~)	Bitwise exclusive NOR (of integer operands).
Bitwise OR		Bitwise OR (of integer operands).
Logical AND	&&	True only if both operands true.
Logical OR		True if either operand is true.
Conditional selection	(cond) ? x : y	Returns x if $cond$ is true, y if not; where x and y are expressions.

Algebraic and Trigonometric Functions

The trigonometric and hyperbolic functions expect their operands to be specified in radians. The atan2() and hypot() functions are useful for converting from Cartesian to polar form.

Function	Description	Domain
log(x)	Natural logarithm	<i>x</i> > 0
log10(x)	Decimal logarithm	x > 0
exp(x)	Exponential	<i>x</i> < 80
sqrt(x)	Square root	x > 0

Spectre Circuit Simulator User Guide
Parameter Specification and Modeling Features

Function	Description	Domain
min(x,y)	Minimum value	All x , all y
$\max(x,y)$	Maximum value	All x , all y
abs(x)	Absolute value	All x
pow(x,y)	\boldsymbol{x} to the power of \boldsymbol{y}	All x , all y
sin(x)	Sine	All x
cos(x)	Cosine	All x
tan(x)	Tangent	All x, except $x = n^*(\pi/2)$, where n is odd
asin(x)	Arc-sine	-1 <= <i>x</i> <= 1
acos(x)	Arc-cosine	-1 <= <i>x</i> <= 1
atan(x)	Arc-tangent	All x
atan2(x,y)	Arc-tangent of x/y	All x , all y
hypot(x,y)	sqrt(x*x + y*y)	All x , all y
sinh(x)	Hyperbolic sine	All x
cosh(x)	Hyperbolic cosine	All x
tanh(x)	Hyperbolic tangent	All x
asinh(x)	Arc-hyperbolic sine	All x
acosh(x)	Arc-hyperbolic cosine	x >= 1
atanh(x)	Arc-hyperbolic tangent	-1 <= <i>x</i> <= 1
int(x)	Integer part of x (number before the decimal)	
ceil(x)	Smallest integer greater than or equal to x	All x
floor(x)	Largest integer less than or equal to x	All x
fmod(x,y)	Floating-point remainder of x/y	$y \neq 0$

Parameter Specification and Modeling Features

Using Expressions in Vectors

Expressions can be used as vector elements, as in the following example:

```
dc_sweep dc param=p1 values=[0.5 1 +p2 (sqrt(p2*p2)) ] // sweep p1
```

Note: When expressions are used within vectors, anything other than constants, parameters, or unary expressions (unary +, unary -) must be surrounded by parentheses. Vector elements should be space separated. The preceding dc_sweep example shows a vector of four elements: 0.5, 1, +p2, and sqrt(p2*p2). Note that the square root expression is surrounded by parentheses.

Behavioral Expressions

You can use behavioral expressions within a resistor, inductor, capacitor, voltage or current source. Using behavioral expressions, you can express the value of a resistance, capacitance, voltage or current as a combination of device operating points, node voltages, branch currents, and built in Spectre expressions. The syntax is:

```
name (node1 node2) resistor|inductor|capacitor behav_param_param_list
```

where behav_param can be

c=simple_expr	Capacitance between the nodes.
g=simple_expr	Conductance between the nodes.
l=simple_expr	Inductance between the nodes.
r=simple_expr	Resistance between the nodes.

The performance of bsource devices has been improved by implementing a one-time compilation step. The performance improvement obtained is proportional to the complexity of the bsource expression. Following the initial compilation, recompilation is only performed if the bsource expression is changed.

By default, the compilation step is enabled. If you are making frequent changes to bsource expressions in your design, the overhead of the compilation step may become an issue. To turn off compilation, type

```
setenv CDS AHDLCMI ENABLE NO
```

To re-enable bsource compilation, type

```
setenv CDS AHDLCMI ENABLE YES
```

Parameter Specification and Modeling Features

Built-in Constants

You can use built-in constants to specify parameter values.

The Spectre Netlist Language contains the built-in mathematical and physical constants listed in the following table. Mathematical constants start with M_{-} , and physical constants start with M_{-} .

Constant Name	Value	Description
M_E	2.7182818284590452354	e or escp(1)
M_LOG2E	1.4426950408889634074	log2(e)
M_LOG10E	0.43429448190325182765	log10(e)
M_LN2	0.69314718055994530942	In(2)
M_LN10	2.30258509299404568402	In(10)
M_PI	3.14159265358979323846	π
M_TWO_PI	6.28318530717958647652	2π
M_PI_2	1.57079632679489661923	π/2
M_PI_4	0.78539816339744830962	$\pi/4$
M_1_PI	0.31830988618379067154	$1/\pi$
M_2_PI	0.63661977236758134308	$2/\pi$
M_2_SQRTPI	1.12837916709551257390	$2/\pi$
M_SQRT2	1.41421356237309504880	$\sqrt{2}$
M_SQRT1_2	0.70710678118654752440	$\sqrt{1/2}$
M_DEGPERRAD	57.2957795130823208772	Number of degrees per radian (equal to $180/\pi$)
P_Q	1.6021918x10 ⁻¹⁹	Charge of electron in coulombs
P_C	2.997924562x10 ⁸	Speed of light in vacuum in meters/second
P_K	1.3806226x10 ⁻²³	Boltzman's constant in joules/Kelvin
P_H	6.6260755x10 ⁻³⁴	Planck's constant in joules times seconds

Parameter Specification and Modeling Features

Constant Name	Value	Description
P_EPS0	8.85418792394420013968x10 ⁻¹²	Permittivity of vacuum in farads/meter
P_U0	$\pi \times (4.0 \times 10^{-7})$	Permeability of vacuum in henrys/meter
P_CELSIUS0	273.15	Zero Celsius in Kelvin

User-Defined Functions

The user-defined function capability allows you to build upon the provided set of built-in mathematical and trigonometric functions. You can write your own functions and call these functions from within any expression. The Spectre function syntax resembles that of C or the SpectreHDL language.

Defining the Function

The following is a simple example of defining a function with arguments of type real and results of type real:

```
real myfunc( real a, real b ) {
    return a+b*2+sqrt(a*sin(b));
}
```

When you define a function, follow these rules:

- Functions can be declared only at the top level and cannot be declared within subcircuits.
- Arguments to user-defined functions can only be real values, and the functions can only return real values. You must use the keyword real for data typing.
- The Spectre function syntax does not allow references to netlist parameters within the body of the function, unless the netlist parameter is passed in as a function argument.
- The function must contain a single return statement.

Note: If you create a user-defined function with the same name as a built-in function, the Spectre simulator issues a warning and runs the user-defined function.

Parameter Specification and Modeling Features

Calling the Function

Functions can be called from anywhere that an expression can currently be used in the Spectre simulator. Functions can call other functions; however, the function must be declared before it can be called. The following example defines the function myfunc and then calls it:

```
real myfunc( real a, real b ) {
     return a+b*2+sqrt(a*sin(b));
real yourfunc( real a, real b ) {
   return a+b*myfunc(a,b);// call "myfunc"
```

The next example shows how a user-defined function can be called from an expression in the Spectre netlist:

```
r1 (1 0) resistor r=myfunc(2.0, 4.5)
```

Predefined Netlist Parameters

There are two predefined netlist parameters:

- temp is the circuit temperature (in degrees Celsius) and can be used in expressions.
- tnom is the measurement (nominal) temperature (in degrees Celsius) and can be used in expressions.

For example:

```
r1 1 0 res r=(temp-tnom)*15+10k
ol options TEMP=55
```

Note: If you change temp or thom using a set statement, alter statement, or simulator options card, all expressions with temp or thom are reevaluated. Hence, you can use the temp parameter for temperature-dependent modeling (this does not include self-heating, however).

Subcircuits

The Spectre simulator helps you simplify netlists by letting you define subcircuits that you can place any number of times in the circuit. You can nest subcircuits, and a subcircuit definition can contain both instances and definitions of other subcircuits. The main applications of subcircuits are to describe the circuit hierarchy and to perform parameterized modeling. In this section, you learn to define subcircuits and to call them into the main circuit.

Parameter Specification and Modeling Features

Formatting Subcircuit Definitions

You format subcircuit definitions as follows:

subckt SubcircuitName [(] node1 ... nodeN [)]

```
[ parameters name1=value1 ... [nameN=valueN]]
    instance, model, ic, or nodeset statements-or
        further subcircuit definitions
ends [SubcircuitName]
                        The keyword subckt (. subckt is used in SPICE mode).
subckt
SubcircuitName
                        The unique name you give to the subcircuit.
(node1...nodeN)
                        The external or connecting nodes of the subcircuit to the main
                        circuit.
parameters name1=value1...nameN=
```

This is an optional parameter specification field. You can specify default values for subcircuit calls that refer to this subcircuit. The field contains the keyword parameters followed by the names

and values of the parameters you want to specify.

component instance statement

The instance statements of your subcircuit, other subcircuit definitions, component statements, analysis statements, or model statements.

ends SubcircuitName

The keyword ends (or . ends in SPICE mode), optionally followed by the subcircuit name.

A Subcircuit Definition Example

The following subcircuit named twisted models a twisted pair. It has four terminals—p1, n1, p2, and n2. The parameter specification field for the subcircuit sets subcircuit call default values for parameters zodd, zeven, veven, vodd, and len. Remember that the specified parameters are defaults for subcircuit calls, not for the instance statements in the subcircuit. For example, if the subcircuit call leaves the zodd parameter unspecified, the value of zodd

Parameter Specification and Modeling Features

in odd is 50. If, however, the subcircuit call sets zodd to 100, the value of zodd in odd is 100.

```
subckt twisted (p1 n1 p2 n2)
   parameters zodd=50 zeven=50 veven=1 vodd=1 len=0
   odd (p1 n1 p2 n2) tline z0=zodd vel=vodd len=len
   tfla (p1 0 e1 c1) transformer t1=2 t2=1
   tflb (n1 0 c1 0) transformer t1=2 t2=1
   even (e1 0 e2 0) tline z0=zeven vel=veven len=len
   tf2a (p2 0 e2 c2) transformer t1=2 t2=1
   tf2b (n2 0 c2 0) transformer t1=2 t2=1
ends twisted
```

Indenting the contents of a subcircuit definition is not required. However, it is recommended to make the subcircuit definition more easily identifiable.

Subcircuit Example

```
GaAs Traveling Wave Amplifier
// GaAs Traveling-wave distributed amplifier (2-26.5GHz)
// Designed by Jerry Orr, MWTD Hewlett-Packard Co.
// 1986 MTT symposium; unpublished material.
global gnd vdd
simulator lang=spectre
// Models
model nGaAs gaas type=n vto=-2 beta=0.012 cgs=.148p cgd=.016p fc=0.5
subckt cell (o g1 g2)
    TT.
         (0
               gnd d
                         gnd) tline len=355u vel=0.36
               g2
    Gt
         (d
                    s)
                               nGaAs
    Ctgd (d
                               capacitor c=0.033p
               s)
    Cqq (q2
               gnd)
                               capacitor c=3p
    Gb
         (s
               g1
                    gnd)
                               nGaAs
    Cbgd (s
               gnd)
                               capacitor c=0.033p
    Rο
       (d
                               resistor r=4k
               C)
    Co
         ( C
               gnd)
                               capacitor c=0.165p
ends cell
subckt stage (i0 o8)
    // Devices
                     i1
    01
            (01
                             b2)
    02
                     i2
                             b2)
                                       cell
            (02
    Q3
            (03
                     i3
                             b2)
                                       cell
            (04
                     i4
    Q4
                             b2)
                                       cell
    Q5
            (05
                     i5
                             b2)
                                       cell
    06
            (06
                     i6
                             b2)
                                       cell
            (07
                     i7
                             b2)
                                       cell
// Transmission lines
    TLi1
           (i0
                  gnd
                          i1
                                 gnd)
                                         tline
                                                 len=185u z0=96 vel=0.36
    TLi2
           (i1
                          i2
                                gnd)
                                         tline len=675u z0=96 vel=0.36
                  gnd
                                         tline len=675u z0=96 vel=0.36
    TLi3
           (i2
                          i3
                  gnd
                                gnd)
                          i4
                                         tline len=675u z0=96 vel=0.36
    TLi4
           (i3
                  gnd
                                gnd)
    TLi5
           (i4
                          i5
                                         tline len=675u z0=96
                 gnd
                                gnd)
                                                                   vel=0.36
                        i6
i7
                 gnd
                                         tline len=675u z0=96
tline len=675u z0=96
tline len=340u z0=96
    TLi6
           (i5
                                gnd)
                                                                   vel=0.36
    TLi7
           (i6
                  gnd
                                gnd)
                                                                   vel=0.36
                         i8
    TLi8
           (i7
                  gnd
                                 gnd)
                                                                   vel=0.36
```

Parameter Specification and Modeling Features

```
len=360u
    TLo1
           (00)
                           01
                                  gnd)
                                          tline
                                                              z0 = 96
                                                                     vel=0.36
                   gnd
    TLo2
           (01
                   gnd
                           02
                                  gnd)
                                          tline
                                                   len=750u
                                                              z0=96
                                                                     vel=0.36
    TLo3
           (02
                           о3
                                  gnd)
                                          tline
                                                   len=750u
                                                              z0=96
                                                                     vel=0.36
                   gnd
    TLo4
           (03
                   gnd
                           04
                                  gnd)
                                          tline
                                                   len=750u
                                                              z0=96
                                                                     vel=0.36
                                                   len=750u
                           05
                                          tline
                                                             z0=96
    TLo5
           (04
                   gnd
                                  gnd)
                                                                     vel=0.36
                           06
    TL06
           (05
                                          tline
                                                   len=750u z0=96
                                  gnd)
                                                                     vel=0.36
                   gnd
    TLo7
           (06
                   gnd
                           о7
                                  gnd)
                                          tline
                                                   len=750u z0=96
                                                                     vel=0.36
    TLo8
           (07
                   gnd
                           08
                                  gnd)
                                          tline
                                                   len=220u z0=96 vel=0.36
    // Bias network
    // drain bias
    Ldd
             (vdd
                      00)
                                inductor
                                                 1=1u
    R1
                                                 r=50
             (00)
                      b1)
                                resistor
                                capacitor
    C1
             (b1
                      gnd)
                                                 c=9p
    // gate 2 bias
    R2
                      b2)
                                                 r = 775
             (b1
                               resistor
    R3
             (b2
                      gnd)
                               resistor
                                                 r = 465
    C2
             (b2
                                capacitor
                      gnd)
                                                 c=21p
    // gate 1 bias
             (i8
    R4
                      b3)
                               resistor
                                                 r=50
    R5
             (b3
                                                 r = 500
                      gnd)
                               resistor
    C3
             (b3
                      gnd)
                                capacitor
                                                 c=12p
ends stage
// Two stage amplifier
                           port
                                      r=50
Р1
        (in
                  gnd)
                                               num=1
                                                       maq=0
Cin
                  in1)
                                               c=1n
        (in
                           capacitor
        (in1
X1
                  out1)
                           stage
Cmid
        (out1
                  in2)
                           capacitor
                                               c=1n
X2
        (in2
                  out2)
                           stage
Cout
        (out2
                  out)
                           capacitor
                                               c=1n
                           port r=50
P2
        (out
                 gn)
                                              num=2
// Power Supply
Vpos vdd gnd vsource dc=5
// Analyses
OpPoint dc
Sparams sp start=100M stop=100G dec=100
```

Rules to Remember

When you use subcircuits,

- You must place the same number of nodes in the same order in subcircuit definitions and their respective subcircuit calls.
- Models and subcircuits defined within a subcircuit definition are accessible only from within that subcircuit. You cannot use the model names in a subcircuit definition in statements from outside the subcircuit. You can, however, use both the model name and the subcircuit definitions in new subcircuits within the original subcircuit. Local models or subcircuits hide nodes or subcircuits with the same names defined outside the subcircuit.


Parameter Specification and Modeling Features

- When you use model statements within subcircuit definitions, where model parameters are expressions of subcircuit parameters definitions, a new model is created for every instance of the subcircuit. These different models are "expanded models," which are derived from the original model statement. Each of the new models has a unique name, and component instances created from the original model statement are instances of the new model created for the subcircuit. The full name of each new model is the flattened name of the subcircuit, followed by a dot (.), followed by the name of the model as given in the model statement. If you request the output of model data, you can see these expanded models in the output.
- Subcircuit parameter names are local only. You cannot access the value of a subcircuit parameter outside of the scope of the subcircuit in which it was declared.
- Parameter names must be lowercase if you want to instantiate components from SPICE mode.

Calling Subcircuits

To call a subcircuit, place an instance statement in your netlist. The nodes for this instance statement are the connections to the subcircuit, and the master field in the subcircuit call contains the name of the subcircuit. You can enter parameters in a subcircuit call to override the parameters in the subcircuit definition for that subcircuit call.

The following example shows a subcircuit call and its corresponding subcircuit definition. cell is the name of the subcircuit being called; Q1 is the unique name of the subcircuit call; and o1, i1, and b2 are the connecting nodes to the subcircuit from the subcircuit call. When you call the subcircuit, the Spectre simulator substitutes these connecting node names in the subcircuit call for the connecting nodes in the subcircuit definition: o1 is substituted for o, i1 is substituted for g1, and b2 is substituted for g2. The length of transmission line TL is changed to 500 μ m for this subcircuit call from its 355 μ m default value in the subcircuit definition.

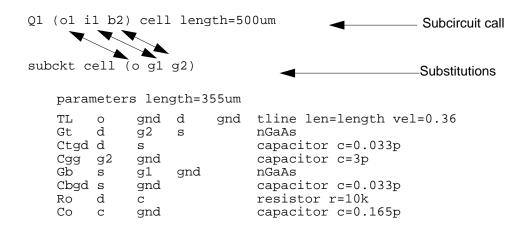

Parameter Specification and Modeling Features

ends cell

Modifying Subcircuit Parameter Values

The following example is a passive Bessel three-pole bandpass filter with default parameter values for bandwidth, termination resistance, and center frequency. The bw, r0, and fc parameters are given default values in the subcircuit, but you can change these values when you call the subcircuit. Changing the value of bw, r0, and fc in a subcircuit call changes the values of many parameters in instance statements that refer to these three parameters.

```
// define passive 3-pole bandpass filter
           Default specifications
                                 subckt filter (n1 n2)
           forbw,r0, andfc
                                 parameters bw=1 r0=1 fc=1
                                             capacitor c=0.3374 / (6.2832 * bw *
                                 C1 (n1 0)
r0)
                  inductor l=(r0 * bw) / (0.3374 * 6.2832 * fc * fc)
   T.1
        (n1 0)
        (n1 n12) capacitor c=bw / (0.9705 * 6.2832 * fc * fc * r0)
       (n12 n2) inductor l=(r0 * 0.9705) / (6.2832 * bw)
                  capacitor c=2.2034 / (6.2832 * bw * r0)
   C3
        (n2 0)
   L3
       (n2 0)
                  inductor l=(r0 * bw)/(2.2034 * 6.2832 * fc * fc)
ends filter
// instantiate 50 Ohm filter with 10.4MHz
                                                                  Parameter
// center frequency and 1MHz bandwidth
                                                                  values
F1 (in out) filter bw=1MHz fc=10.4MHz r0=50
                                                                  changed from
// instantiate 1 Ohm filter with 10Hz
                                                                  defaults
// center frequency and 1Hz bandwidth
                                                                  for these
F2 (n1 n2) filter fc=10
                                                                  subcircuit
                                                                  calls
```

You can use such parameterized subcircuits when the Spectre simulator is reading either Spectre or SPICE syntax. Unlike subcircuit calls in SPICE, the names of Spectre subcircuit calls do not have to start with an x. This is useful if you want to replace individual components in an existing netlist with subcircuits for more detailed modeling.

Checking for Invalid Parameter Values

When you define subcircuits such as the one in "Modifying Subcircuit Parameter Values" on page 98, you might want to put error checking on the subcircuit parameter values. Such error checking prevents you from entering invalid parameter values for a given subcircuit call.

The Spectre paramtest component lets you test parameter values and generate necessary error, warning, and informational messages. For example, in the example of the bandpass filter in "Modifying Subcircuit Parameter Values" on page 98, the center frequency needs to be greater than half the bandwidth.

Parameter Specification and Modeling Features

Here is a version of the previous three-pole filter that issues an error message if the center frequency is less than or equal to half the bandwidth:

```
* define passive 3-pole bandpass filter
subckt filter (n1 n2)
    parameters bw=1 r0=1 fc=1

checkFreqs paramtest errorif=((bw/2-fc)>=0)\

message="center frequency must be greater than half the
    bandwidth"

C1 n1 0 capacitor c=0.3374 / (6.2832 * bw * r0)
L1 n1 0 inductor l=(r0 * bw) / (0.3374 * 6.2832 * fc * fc)
C2 n1 n12 capacitor c=bw / (0.9705 * 6.2832 * fc * fc * r0)
L2 n12 n2 inductor l=(r0 * 0.9705) / (6.2832 * bw)
C3 n2 0 capacitor c=2.2034 / (6.2832 * bw * r0)
L3 n2 0 inductor l=(r0 * bw) / (2.2034 * 6.2832 * fc * fc)
ends filter
```

The paramtest component checkFreqs has no terminals and no effect on the simulation results. It monitors its parameters and issues a message if a given condition is satisfied by evaluating to a nonzero number. In this case, errorif specifies that the Spectre simulator issues an error message and stops the simulation. If you specify printif, the Spectre simulator prints an informational message and continues the simulation. If you specify warnif, the Spectre simulator prints a warning and continues.

For more information about specific parameters available with the paramtest component, see the parameter listings in the Spectre online help (spectre -h).

Inline Subcircuits

An inline subcircuit is a special case where one of the instantiated devices or models within the subcircuit does not get its full hierarchical name but inherits the subcircuit call name. The inline subcircuit is called in the same manner as a regular subcircuit. You format inline subcircuit definitions as follows:

```
inline subckt SubcircuitName [(] node1 ... nodeN [)]
```

Depending on the use model, the body of the inline subcircuit typically contains one of the following:

- Multiple device instances, one of which is the inline component
- Multiple device instances (one of which is the inline component) and one or more parameterized models
- A single inline device instance and a parameterized model to which the device instance refers

Parameter Specification and Modeling Features

Only a single parameterized model

The inline component is denoted by giving it the same name as the inline subcircuit itself. When the subcircuit is flattened, as shown in the following section, the inline component does not acquire a hierarchical name such as X1.M1 but rather acquires the name of the subcircuit call itself, X1. Any noninline components in the subcircuit acquire the regular hierarchical name, just as if the concept of inline subcircuits never existed.

Typically, a modeling engineer writes inline subcircuit definitions for a circuit design engineer to use.

Modeling Parasitics

You can model parasitics by adding parasitics components to a base component using inline subcircuits. The body of the inline subcircuit contains one inline component, the base component, and several regular components, which are taken to represent parasitics.

The following example of an inline subcircuit contains a MOSFET instance and two parasitic capacitances:

```
// "s1" is name of subcircuit
inline subckt s1 (a b)
    parameters l=1u w=2u
    s1 (a b 0 0) mos mod l=1 w=w// "s1" is "inline" component
    cap1 (a 0) capacitor c=1n
    cap2 (b 0) capacitor c=1n
ends s1
The following circuit creates a simple MOS device instance M1 and calls the inline
subcircuit s1 twice (M2 and M3):
M1 (2 1 0 0) mos_mod
M2(5 6) s1 l=6u w=7u
M3(67) s1
This circuit flattens to the following equivalent circuit:
M1 (2 1 0 0) mos mod
M2 (5 6 0 0) mos_mod l=6u w=7u// the "inline" component
                            // inherits call name
M2.cap1 (5 0) capacitor c=ln// a regular hierarchical name
M2.cap2 (6 0) capacitor c=1n
M3 (6 7 0 0) mos mod l=1u w=2u// the "inline" component
                            // inherits call name
M3.cap1 (6 0) capacitor c=1n
M3.cap2 (7 0) capacitor c=1n
```

The final flattened names of each of the three MOSFET instances are M1, M2 and M3. (If s1 was a regular subcircuit, the final flattened names would be M1, M2.s1, and M3.s1.) However, the parasitic capacitors have full hierarchical names.

Parameter Specification and Modeling Features

You can create an instance of the inline subcircuit cell in the same way as creating an instance of the specially tagged inline device. You can use save statements to probe this instance in the same way as a regular device, without having to

- Realize that the instance is actually embedded in a subcircuit
- Know that there are possible additional parasitic devices present
- Figure out the hierarchical name of the device of interest

A modeling engineer can create several of these inline subcircuits and place them in a library for the design engineer to use. The library then includes a symbol cell view for each inline subcircuit. The design engineer then places a symbol cell view on a design, which behaves just as if a primitive were being used. The design engineer can then probe the device for terminal currents and operating-point information.

Probing the Device

The Spectre simulator allows the following list of items to be saved or probed for primitive devices, including devices modeled as the inline components of inline subcircuits:

All terminal currents

```
save m1:currents
```

Specific (index) terminal current

```
save m1:1 //#1=drain
```

Specific (named) terminal current

```
save m1:s //"s"=source
```

■ Save all operating-point information

```
save m1:oppoint
```

Save specific operating-point information

```
save m1:vbe
```

Save all currents and operating-point information

```
save m1
```

Note: If the device is embedded in a regular subcircuit, you have to know that the device is a subcircuit and find out the appropriate hierarchical name of the device in order to save or probe the device. However, with inline components, you can use the subcircuit call name, just as if the device were not in a subcircuit.

Parameter Specification and Modeling Features

Operating-point information for the inline component is reported with respect to the terminals of the inline component itself and not with respect to the enclosing subcircuit terminals. This results in the following cautions.

Caution: Parasitic Elements in Series with Device Terminals

If the parasitic elements are in series with the device terminals, the reported operating-point currents are correct, but reported operating-point voltages might be incorrect. For example, consider the case of an inline MOSFET device with parasitic source and drain resistances:

If an instance M1 is created of this mos_r inline subcircuit and the operating point of M1 is probed, the drain-to-source current ids is reported correctly. However, the reported vds is not the same as V(d) - V(s), the two wires that connect the subcircuit drain and source terminals. Instead, vds is V(dp) - V(sp), which are nodes internal to the inline subcircuit.

Caution: Parasitic Elements in Parallel with Device Terminals

If the parasitic elements are in parallel with the device terminals, the reported voltages are correct, but the reported currents might be incorrect. For example, consider the following case of a MOSFET with source-to-bulk and drain-to-bulk diodes:

Here, the operating-point vds for the inline component is reported correctly because there are no extra nodes introduced by the inline subcircuit model. However, the reported ids for the inline device is not the same as the current flowing into terminal d because some of the current flows into the transistor and some through diode d1.

Parameterized Models

Inline subcircuits can be used in the same way as regular subcircuits to implement parameterized models. When an inline subcircuit contains both a parameterized model and an inline device referencing that model, you can create instances of the device, and each instance automatically gets an appropriately scaled model assigned to it.

Parameter Specification and Modeling Features

For example, the instance parameters of an inline subcircuit can represent emitter width and length of a BJT device. Within that subcircuit, a model statement can be created that is parameterized for emitter width and length and scales accordingly. When you instantiate the subcircuit, you supply the values for the emitter width and length, and the device is instantiated with an appropriate geometrically scaled model. Again, the inline device does not get a hierarchical name and can be probed in the same manner as if it were a simple device and not actually embedded in a subcircuit.

In the following example, a parameterized model is declared within an inline subcircuit for a bipolar transistor. The model parameters are the emitter width, emitter length, emitter area, and the temperature delta (trise) of the device above nominal. Ninety-nine instances of a 4x4 transistor are then placed, and one instance of a transistor with area=50 is placed. Each transistor gets an appropriately scaled model.

```
* declare a subcircuit, which instantiates a transistor with
* a parameterized model. The parameters are emitter width
* and length.
inline subckt bjtmod (c b e s)
   parameters le=1u we=2u area=le*we trise=0
   model mod1 bjt type=npn bf=100+(le+we)/2*(area/1e-12) \
                                     is=1e-12*(le/we)*(area/1e-12)
   bjtmod (c b e s) mod1 trise=trise//"inline" component
ends bitmod
* some instances of this subck
q1 (2 3 1 0) bjtmod le=4u we=4u
                                    / trise defaults to zero
q2 (2 3 2 0) bjtmod le=4u we=4u trise=2
q3 (2 3 3 0) bjtmod le=4u we=4u
q99 (2 3 99 0) bjtmod le=4u we=4u
q100 (2 3 100 0) bjtmod le=1u area=50e-12
```

Since *each* device instance now gets its own unique model, this approach lends itself to statistical modeling of on-chip mismatch distributions, in which each device is taken to be slightly different than all the others on the same chip. The value of bf is the same for the first 99 transistors. For more details, see "Monte Carlo Analysis" on page 164.

Inline Subcircuits Containing Only Inline model Statements

You can create an inline subcircuit that contains only a single model statement (and nothing else), where the model name is identical to the subcircuit name. This syntax is used to generate a parameterized model statement for a given set of parameters, where the model is then exported and can be referenced from one level outside the subcircuit. Instantiating the inline subcircuit in this case merely creates a model statement with the same name as the subcircuit call. The Spectre simulator knows that because the subcircuit definition contains only a model statement and no other instances, the definition is to be used to generate

Parameter Specification and Modeling Features

named models that can be accessed one level outside of the subcircuit. Regular device instances one level outside of the subcircuit can then refer to the generated model.

Because these are now instances of a model rather than of a subcircuit, you can specify device instance parameters with enumerated types such as region=fwd.

This technique is shown in the following example:

```
* declare an inline subcircuit that "exports" a parameterized model
inline subckt bjtmod
    parameters le=1u we=2u area=le*we
    model bjtmod bjt type=npn bf=100+(le+we)/2*(area/1e-12) \
                                     is=1e-12*(le/we)*(area/1e-12)
ends bjtmod
* now create two "instances" of the inline subcircuit, that is,
* create two actual models, called mod1, mod2
mod1 bjtmod le=4u we=4u
mod2 bjtmod le=1u area=50e-12
* 99 instances of mod1 (all share mod1)
* and 1 instance of mod2.
q1 (2 3 1 0) mod1 region=fwd
q2 (2 3 2 0) mod1 trise=2
q99 (2 3 99 0) mod1
q100 (2 3 100 0) mod2
```

Because the syntax of creating an instance of a model is the same as the syntax of creating an instance of a subcircuit in the Spectre netlist, you can easily replace model instances with more detailed subcircuit instances. To do this, replace the model statement itself with a subcircuit definition of the same name.

When you do this in the Spectre Netlist Language, you do not have to change the instance statements. In SPICE, inline subcircuits start with \mathbf{x} , so you need to rename all instance statements to start with \mathbf{x} if you replaced a model with a subcircuit.

Process Modeling Using Inline Subcircuits

Another modeling technique is to specify geometrical parameters, such as widths and lengths, to a device such as a bipolar transistor and then to create a parameterized model based on that geometry. In addition, the geometry can be modified according to certain process equations, allowing you to model nonideal etching effects, for example.

You use inline subcircuits and some include files for process and geometric modeling, as in the following example files. The ProcessSimple.h file defines the process parameters and the bipolar and resistor devices:

Parameter Specification and Modeling Features

```
// File: ProcessSimple.h
simulator lang=spectre
// define process parameters, including mismatch effects
parameters RSHSP=200 RSHPI=5k // sheet resistance, pinched sheet res
    SPDW=0 SNDW=0 // etching variation from ideal
    XISN=1 XBFN=1 XRSP=1 // device "mismatch" (mm)
parameters
    XISNafac=100m XISNbfac=1m // IS scaling factors for mm eqns
    XBFNafac=100m XBFNbfac=1m // BF "
                                 // RS " " " " " // sheet resistance nom. values
    XRSPafac=100m XRSPbfac=1m
   RSHSPnom=200 RSHPInom=5k
                                 // ratio of PI sheet res to nom
   FRSHPI=RSHPI/RSHPInom
// define "simple" bipolar and resistor devices
// a "base" TNSA subckt, that is, a simple "TNSA" bipolar transistor
// subcircuit, with model statement
inline subckt TNSA_B (C B E S)
    parameters MULT=1 IS=1e-15 BF=100
    model modX bjt type=npn is=IS bf=BF
                                        // a model statement
    TNSA_B (C B E S) modX m=MULT
                                          // "inline" device instance
ends TNSA B
// a "base" resistor
// a simple "RPLR" resistor subcircuit
inline subckt RPLR_B (A B)
    parameters R MULT=1
    RPLR B (A B) resistor r=R m=MULT // "inline" device
ends RPLR B
// define process/geometry dependent bipolar and resistor devices
// a "geometrical/process" TNSA subcircuit
// a BJT subcircuit, with process and geometry effects modeled
// bipolar model parameters IS and BF are functions of effective
// emitter area/perimeter taking process factors (for example,
// nonideal etching) into account
inline subckt TNSA_PR (C B E S)
    parameters WE LE MULT=1 dIS=0 dBF=0
             WEA=WE+SNDW
                            // effective or "Actual" emitter width
                            // effective or "Actual" emitter length
             LEA=LE+SNDW
             AE=WEA*LEA
                            // effective emitter area
             IS=1e-18*FRSHPI*AE*(1+(XISNafac/sqrt(AE)+XISNbfac)
                              *(dIS/2+XISN-1)/sqrt(MULT))
             BF=100*FRSHPI*(1+(XBFNafac/sqrt(AE)+XBFNbfac)
                              *(dBF/2+XBFN-1)/sqrt(MULT))
    TNSA_PR (C B E S) TNSA_B IS=IS BF=BF MULT=MULT
                                                          // "inline"
ends TNSA_PR
// a "geometrical/process" RPLR resistor subcircuit
// resistance is function of effective device geometry, taking
// process factors (for example, nonideal etching) into account
inline subckt RPLR_PR (A B)
   parameters Rnom WB MULT=1 dR=0
            LB=Rnom*WB/RSHSPnom
             AB=LB*(WB+SPDW)
```

Parameter Specification and Modeling Features

```
RPLR_PR (A B) RPLR_B R=RSHSP*LB/(WB+SPDW)*
+ (1+(XRSPafac/sqrt(AB)+XRSPbfac)*(dR/2+XRSP-1)/sqrt(MULT))
ends RPLR_PR
```

The following file, Plain.h, provides the designer with a plain device interface without geometrical or process modeling:

The following file, Process.h, provides the designer with the geometrical device interface:

```
// File: Process.h
simulator lang=spectre
// call to the geometrical TNSA model
inline subckt TNSA (C B E S)
    parameters WE=1u LE=1u MULT=1 dIS=0 dBF=0
   TNSA (C B E S) TNSA PR WE=WE LE=LE \
                 MULT=MULT dIS=dIS dBF=dBF
                                               // call TNSA PR
ends TNSA
// call to the geometrical RPLR model
inline subckt RPLR (A B)
   parameters Rnom=1 WB=10u MULT=1 dR=0
    RPLR (A B) RPLR_PR Rnom=Rnom WB=WB \
             MULT=MULT dR=dR
                                                 // call RPLR_PR
ends RPLR
```

The following example is a differential amplifier netlist showing how a design can combine process modeling with process and geometry effects:

```
// a differential amplifier, biased with a 1mA current source
simulator lang=spectre
include "ProcessSimple.h"
include "Process.h"

E1 (1 0) vsource dc=12

// pullup resistors, 4k ohms nominal
R1 (1 2) RPLR Rnom=4k WB=5 // 5 units wide, model will calc length
R2 (1 3) RPLR Rnom=4k WB=10 // 10 units wide, model will calc length
// the input pair
```

Parameter Specification and Modeling Features

```
TNSA1 (2 4 5 0) TNSA WE=10 LE=10
TNSA2 (3 4 5 0) TNSA WE=10 LE=10


// no differential input voltage, both inputs tied to same source
E4 (4 0) vsource dc=5

// current source biasing
J5 (5 0) isource dc=1m
dcop dc
```

Binning

Binning is the process of partitioning a device with different sizes into different models. Before BSIM 3v3, it was very difficult to fit all the devices with a single model statement over very wide ranges of device sizes. To improve fitting accuracy, you might characterize devices into several models with each model valid only for a limited range of device sizes.

For example, suppose you have a device with a length (L) from 0.25 μ m to 100 μ m and a width (W) from 0.25 μ m to 100 μ m. You might want to divide your device as follows (not drawn to scale).

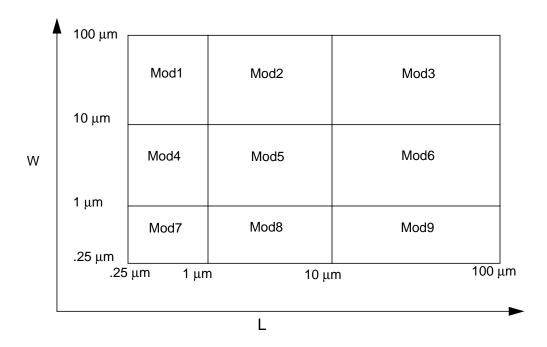

In this example, nine models are used. These devices are divided into *bins*. For devices whose length lies between 1 μ m and 10 μ m and width lies between 10 μ m and 100 μ m, Mod6 is used.

Parameter Specification and Modeling Features

The process of generating these models is called binning. The binning process is usually identical for all simulators because the equations for binning are always the same:

```
P = P0 + PI/Leff + Pw/Weff + Pp/(Leff*Weff)
```

There are two ways to do binning with the Spectre simulator:

Auto model selection

For more information on auto model selection, see the following section.

Conditional instances

For more information on using conditional instances, see <u>"Conditional Instances"</u> on page 109. For more information on using inline subcircuits for model selection, see <u>"Scaling Physical Dimensions of Components"</u> on page 118.

Auto Model Selection

Automatic model selection is a simulator feature that automatically assigns the correct models to devices based on their device sizes without using conditional instantiation.

Binning is usually used together with automatic model selection. Model selection is now automatic for MOSFETs, BSIM1, BSIM2, and BSIM3. Help on any one of these devices (for example, spectre -h mos1) gives you more details.

For the auto model selector program to find a specific model, the models to be searched need to be grouped together within braces. Such a group is called a model group. An opening brace is required at the end of the line defining each model group. Every model in the group is given a name followed by a colon and the list of parameters. Also, you need to specify the device length and width using the four geometric parameters <code>lmax</code>, <code>lmin</code>, <code>wmax</code>, and <code>wmin</code>. The selection criteria to choose a model is as follows:

Then for a given instance

```
M1 1 2 3 4 ModelName w=3 1=1.5
```

Parameter Specification and Modeling Features

the program searches all the models in the model group with the name ModelName and then picks the first model whose geometric range satisfies the selection criteria. In the preceding example, the auto model selector program chooses ModelName. 2.

Conditional Instances

You can specify different conditions that determine which components the Spectre simulator instantiates for a given simulation. The determining conditions are computed from the values of parameters. You specify these conditions with the structural if statement. This statement lets you put if-else statements in the netlist.

You can also use conditional instantiation with inline subcircuits. For more information on using inline subcircuits, see <u>"Scaling Physical Dimensions of Components"</u> on page 118.

Formatting the if Statement

You format the structural if statement as follows:

An if Statement Example

The following example illustrates the use of the if statement. There are additional if statements in the statement1 and statement2 fields.

```
if (rseries == 0) {
    cl (a b) capacitor c=c
    if (gparallel != 0) gpl a b resistor r=1/gparallel
} else {
    r2 (a x) resistor r=rseries
    c2 (x b) capacitor c=c
    if (gparallel != 0) gp2 x b resistor r=1/gparallel
}
```

In this example, the Spectre simulator puts different instance statements into the simulation depending on the values of two parameters, rseries and gparallel.

Parameter Specification and Modeling Features

- If both rseries and gparallel are zero, the Spectre simulator includes the instance statement for capacitor cl.If rseries is zero and gparallel is nonzero, the Spectre simulator includes the instance statements for capacitor cl and resistor gpl.
- If rseries is nonzero and gparallel is zero, the Spectre simulator includes the instance statements for resistor r2 and capacitor c2.
- If neither rseries nor gparallel is zero, the Spectre simulator includes the instance statements for resistor r2, capacitor c2, and resistor gp2.

Rules to Remember

When you use the if statement,

- If the statement1 or statement2 fields contain multiple statements, place these fields within braces ({ }).
- End the statement1 and statement2 fields with newlines.
- Use a continuation character if you want to place a newline between the if and condition statements.
- When the statement1 or statement2 field is a single instance or if statement, an else statement is associated with the closest previous if statement.

Binning by Conditional Instantiation

You can use conditional instantiation to select an appropriate model based on certain ranges of specified parameters (model binning). This technique lets you decide and implement which parameters to bin on and is valid for any device that supports a model.

The Spectre Netlist Language has conditional instantiation. For example:

Based on the value of parameter 1, one of the following is chosen:

- A short-channel model
- A long-channel model

Parameter Specification and Modeling Features

Previously, the transistor instances had to have unique names (such as m1 and m2 in the preceding example), even though only one of them could actually be chosen. Now, you can use the same name for both instances, provided certain conditions are met. The following example shows a powerful modeling approach that combines model binning (based on area) with inline subcircuits for a bipolar device:

```
// general purpose binning and inline models
simulator lang=spectre
parameters VDD=5
vcc (2 0) vsource dc=VDD
vin (1 0) vsource dc=VDD
q1 (1 2 0 0) npn_mod area=350e-12
                                       // gets 20x20 scaled model
q2 (1 3 0 0) npn mod area=25e-12
                                        // gets 10x10 scaled model
q3 (1 3 0 0) npn_mod area=1000e-12
                                         // gets default model
inline subckt npn_mod (c b e s) //generalized binning, based on area
   parameters area=5e-12
    if ( area < 100e-12 )
       npn mod (c b e s) npn10x10
                                   // 10u * 10u, inline device
    } else if ( area < 400e-12 ) {</pre>
       npn_mod (c b e s) npn20x20 // 20u * 20u, inline device
     else {
       npn_mod (c b e s) npn_default
                                       // 5u * 5u, inline device
   model npn_default bjt is=3.2e-16 va=59.8
   model npn10x10 bjt is=3.5e-16 va=61.5
   model npn20x20 bjt is=3.77e-16 va=60.5
ends npn mod
```

The transistors end up having the name that they were called with (q1, q2, and q3), but each has the correct model chosen for its respective area. Model binning can be now achieved based on *any* parameter and for *any* device, such as resistor or bjt.

A Warning about Conditional Instantiation

If you run a sweep analysis on the previous circuit, sweeping the parameter area for device instance q1 from 350 x 10^{-12} to 50 x 10^{-12} , the Spectre simulator issues an error and stops once the value of area exceeds 100×10^{-12} . This is because the condition in if (area < 100e-12) changes from being true to being false, and this can result in a topology change that is not supported. In general, this error is produced for any analysis that changes the value of the conditional expression.

Rules for General-Purpose Model Binning

The following set of rules exists for general-purpose model binning as outlined in the preceding example. Within subcircuit npn_mod, the inline device npn_mod is referenced

Parameter Specification and Modeling Features

three times, each with a different model. Allowing multiple "instances" or "references" to the same-named device is possible only under the following strict topological conditions:

- The reference to the same-named device is possible only in a structural if statement that has both an if part and an else part.
- Both the if part and the else part must be either a simple one-statement block or another structural if statement to which these same rules apply.
- Both the if part and the else part must evaluate to a single device instance, whose instance name, terminal list, and type of primitive are identical.

Multiple references to the same-named device are only possible if there can only ever be one single instance of this device after all expressions have been evaluated, and each instance must be connected to the same nodes and represent the same device.

Examples of Conditional Instances

The following two examples show how to use conditional instances.

Fully Differential CMOS Operational Amplifier

This netlist describes and analyzes a CMOS operational amplifier and demonstrates several sophisticated uses of Spectre features. The example includes top-level netlist parameters, model library/section statements, multiple analyses, and configuring a test circuit with the alter statement.

The first file in the example is the main file for the circuit. This file contains the test circuit and the analyses needed to measure the important characteristics of the amplifier.

The main file is followed by files that describe the amplifier and the various models that can be selected. These additional files are placed in the netlist with include statements.

Voltage-controlled voltage sources transform single-ended signals to differential- and common-mode signals and vice versa. This approach does not generate or dissipate any power. The power dissipation reported by the Spectre simulator is that of the differential amplifier.

```
// Fully Differential Operational Amplifier Test Circuit
#define PROCESS_CORNER TYPICAL
simulator lang=spectre
global gnd vdd vss
parameters VDD=5.0_V GAIN=0.5
include "cmos.mod" section=typical
include "opamp.ckt"
```

Parameter Specification and Modeling Features

```
// power supplies
Vdd
     (vdd
                    vsource dc=VDD
            gnd)
Vss
      (vss
             gnd)
                    vsource dc=-VDD
// compute differential input
                    vsource type=dc dc=0 val0=0 val1=2 width=1u \
Vcm
      (cmin qnd)
        delay=10ns
      (in
            gnd)
                    vsource type=dc dc=0 val0=0 val1=2 width=1u \
        delay=10ns
Ridif (in
            gnd)
                   resistor
            cmin in cmin in
Eicmp (pin
                        gnd)
                                vcvs gain=GAIN
Eicmn (nin
                         gnd)
                                vcvs gain=-GAIN
// feedback amplifier
      (pout nout pvg (pout t1) cap
Α1
                              nvg)
                                      opamp
Cf1
                   capacitor c=8p
Cf2
      (nout t2)
                    capacitor c=8p
Vt1
      (t1
            nvg)
                   vsource
                               mag=0
Vt2
      (t2
                  vsource
            pvq)
Cl1
      (pout gnd)
                 capacitor c=8p
C12
      (out gnd)
                    capacitor c=8p
Ci1
           pvg)
                   capacitor c=2p
      (pin
Ci2
      (nin
            nvq)
                   capacitor c=2p
// compute differential output
                   pout nout) vcvs gain=1
Edif
     (out
            gnd
Rodif (out
             gnd) resistor
      (cmout mid
Ecmp
                   pout gnd) vcvs gain=GAIN
                   nout qnd) vcvs qain=GAIN
     (mid gnd
Rocm (cmout gnd) resistor
//
// Perform measurements
spectre options save=lvlpub nestlvl=1
printParams info what=output where=logfile
// operating point
opPoint dc readns="%C:r.dc" write="%C:r.dc"
printOpPoint info what=oppoint where=logfile
// differential-mode characteristics
      // closed-loop gain, Av = Vdif:p
       // power supply rejection ratio, Vdd PSR = Vdd:p, Vss PSR = Vss:p
      dmXferFunctions xf start=1k stop=1G dec=10 probe=Rodif
dmNoise noise start=1k stop=1G dec=10 \
        oprobe=Edif oportv=1 iprobe=Vdif iportv=1
// step response
dmEnablePulse alter dev=Vdif param=type value=pulse annotate=no
dmStepResponse tran stop=2us errpreset=conservative
dmDisablePulse alter dev=Vdif param=type value=dc annotate=no
// loop gain, Tv = -t1/nvg
// open-loop gain, av = out/(pvg-nvg)
dmEnableTest1 alter dev=Vt1 param=mag value=1 annotate=no
dmEnableTest2 alter dev=Vt2 param=mag value=-1 annotate=no
dmLoopGain ac start=1k stop=1G dec=10
dmDisableTest1 alter dev=Vt1 param=mag value=0 annotate=no
dmDisableTest2 alter dev=Vt2 param=mag value=0 annotate=no
// common-mode characteristics
      // closed-loop gain, Av = Vcm:p
       // power supply rejection ratio, Vdd PSR = Vdd:p, Vss PSR =Vss:p
      cmXferFunctions xf start=1k stop=1G dec=10 probe=Rocm
      cmNoise noise start=1k stop=1G dec=10 \
                oprobe=Rocm oportv=1 iprobe=Vcm iportv=1
// step response
cmEnablePulse alter dev=Vcm param=type value=pulse annotate=no
cmStepResponse tran stop=2us errpreset=conservative
```

Parameter Specification and Modeling Features

```
cmDisablePulse alter dev=Vcm param=type value=dc annotate=no
// loop gain, Tv = -t1/nvg
// open-loop gain, av = 2*cmout/(pvg+nvg)
cmEnableTest1 alter dev=Vt1 param=mag value=1 annotate=no
cmEnableTest2 alter dev=Vt2 param=mag value=1 annotate=no
cmLoopGain ac start=1k stop=1G dec=10
cmDisableTest1 alter dev=Vt1 param=mag value=0 annotate=no
cmDisableTest2 alter dev=Vt2 param=mag value=0 annotate=no
The following file, opamp.ckt, contains the differential amplifier.
// opamp.ckt: Fully Differential CMOS Operational Amplifier
//
// This circuit requires the use of the cmos process models
simulator lang=spectre
// Folded-Cascode Operational Amplifier
subckt opamp (pout nout pin nin)
        // input differential pair
                                    nmos w=402.4u 1=7.6u
        Μ1
             (4
                   pin 1
                             1)
                       1
             (5
                   nin
                             1)
                                    nmos w=402.4u 1=7.6u
             (1
        M18
                  12
                       vss
                            vss)
                                    nmos w=242.4u 1=7.6u
// upper half of folded cascode
        М3
                   11
                        vdd
                             vdd)
                                    pmos w=402.4u\ l=7.6u
             (4
                                    pmos w=402.4u\ l=7.6u
                        vdd
        M4
             (5
                   11
                             vdd)
             (nout 16
        М5
                        4
                                   pmos w=122.4u l=7.6u
                             vdd)
                                   pmos w=122.4u l=7.6u
        Мб
             (pout 16
                        5
                             vdd)
// lower half of folded cascode
        М7
             (nout 13
                        8
                             vss)
                                   nmos w=72.4u l=7.6u
                        9
             (pout 13
                                   nmos w=72.4u 1=7.6u
        M8
                             vss)
                   12
                                   nmos w=122.4u l=7.6u
        М9
             (8
                        vss vss)
        M10
             (9
                   12
                        vss
                             vss)
                                   nmos w=122.4u l=7.6u
// common-mode feedback amplifier
        M11
             (10
                   nout vss
                             vss)
                                   nmos w=12.4u l=62.6u
                                   nmos w=12.4u l=62.6u
                             vss)
        M12
             (10
                   pout vss
                             vss) nmos w=12.4u l=62.6u
        M13a (11
                   and vss
        M13b (11
                   and vss
                             vss) nmos w=12.4u l=62.6u
        M14
             (10
                   10
                        vdd
                            vdd) pmos w=52.4u l=7.6u
        M15
             (11
                   10
                        vdd vdd) pmos w=52.4u l=7.6u
             (nout 11)
        Cc1
                         capacitor c=1p
        Cc2
             (pout 11) capacitor c=1p
// bias network
        M16
             (12)
                   12
                        vss
                             vss)
                                   nmos w=22.4u l=11.6u
                   12
                                   nmos w=22.4u l=11.6u
        M17
             (21
                        VSS
                             vss)
        M19
             (13
                   13
                        14
                             vss)
                                   nmos w=22.4u l=21.6u
        M20
             (13
                   21
                        16
                             vdd) pmos w=52.4u l=7.6u
        M21
             (21
                   16
                        17
                             vdd) pmos w=26.4u l=11.6u
        M22
             (16
                   16
                       17
                             vdd) pmos w=26.4u l=11.6u
             (15
                   vss) dnp area=400n
        D1
        D2
             (14
                   15)
                         dnp area=400n
        D3
             (18
                   17)
                         dnp area=400n
        D4
             (vdd
                   18)
                         dnp area=400n
        Ib
             (gnd
                   12)
                         isource dc=10u
ends opamp
```

The following file, cmos.mod, contains the models and uses the library and section statements to bin models into various process "corners." See "Process File" on page 115 for a more sophisticated example, which also includes automatic model selection.

```
// cmos.mod: Spectre MOSFET model parameters --- CMOS process
//
// Empirical parameters, best, typical, and worst cases.
```

Parameter Specification and Modeling Features

```
//
simulator lang=spectre
library cmos_mod
  section fast // MOSFETS and DIODES for process corner "FAST"
   model nmos mos3 type=n vto=1.04 gamma=1.34 phi=.55 nsub=1e15 \
            cgso=290p cgdo=290p cgbo=250p cj=360u tox=700e-10 \
                   pb=0.914 js=1e-4 xj=1.2u ld=1.2u wd=0.9u uo=793 bvj=14
    model pmos mos3 type=p vto=-0.79 gamma=0.2 phi=.71 nsub=1.7e16\
            cgso=140p cgdo=140p cgbo=250p cj=80u tox=700e-10 \
                    pb=0.605 js=1e-4 xj=0.8u ld=0.9u wd=0.9u uo=245 bvj=14
    model dnp diode is=3.1e-10 n=1.12 cjo=3.1e-8 pb=.914 m=.5 bvj=45 \
            imax=1000
    model dpn diode is=1.3e-10 n=1.05 cjo=9.8e-9 pb=.605 m=.5 bvj=45 \
            imax=1000
  endsection fast
  section typical // MOSFETS and DIODES for process corner "TYPICAL"
   model nmos mos3 type=n vto=1.26 gamma=1.62 phi=.58 nsub=1e15 \
          cgso=370p cgdo=370p cgbo=250p cj=400u tox=750e-10 \
                      pb=0.914 js=1e-4 xj=1u ld=0.8u wd=1.2u uo=717 bvj=14
     model pmos mos3 type=p vto=-1.11 gamma=0.39 phi=.72 nsub=1.7e16 \
          cgso=220p cgdo=220p cgbo=250p cj=100u tox=750e-10 \
                  pb=0.605 js=1e-4 xj=0.65u ld=0.5u wd=1.2u uo=206 bvj=14
    model dnp diode is=3.1e-10 n=1.12 cjo=3.1e-8 pb=.914 m=.5 bvj=45 \
    model dpn diode is=1.3e-10 n=1.05 cjo=9.8e-9 pb=.605 m=.5 bvj=45 \
           imax=1000
  endsection typical
  section slow // MOSFETS and DIODES for process corner "SLOW"
   model nmos mos3 type=n vto=1.48 gamma=1.90 phi=.59 nsub=1e15 \
          cgso=440p cgdo=440p cgbo=250p cj=440u tox=800e-10 \
                  pb=0.914 js=1e-4 xj=0.8u ld=0.38u wd=1.5u uo=641 bvj=14
     model pmos mos3 type=p vto=-1.42 gamma=0.58 phi=.73 nsub=1.7e16 \
          cgso=300p cgdo=300p cgbo=250p cj=120u tox=800e-10 \
                    pb=0.605 js=1e-4 xj=0.5u ld=0.1u wd=1.5u uo=167 bvj=14
    model dnp diode is=3.1e-10 n=1.12 cjo=3.1e-8 pb=.914 m=.5 bvj=45 \
           imax=1000
    model dpn diode is=1.3e-10 n=1.05 cjo=9.8e-9 pb=.605 m=.5 bvj=45 \
           imax=1000
  endsection slow
endlibrary
```

Process File

This example of automatic model selection with the conditional if statement is more sophisticated than the previous example (in <u>"Fully Differential CMOS Operational Amplifier"</u> on page 112). With this example, you ask for an nmos transistor, and the Spectre simulator automatically selects the appropriate model according to the process corner, the circuit temperature, and the device width and length. The selection is done by the parameterized inline subcircuit and the conditional if statement.

The paramtest statements create warnings if the model selection parameters are out of range. Models are assigned to instances depending on the initial values of their parameters

Parameter Specification and Modeling Features

when the circuit is input. Note that the instances are not reassigned to new models if the selection parameters later change. However, the models are updated if the circuit temperature is changed. Notice that even though nmos is defined as a subcircuit, it is called as if it is a MOSFET primitive.

The MOSFET model parameters are deleted to keep this example to a reasonable length, and ordinarily both the N- and P-channel models are in the same file. If you added the model parameters and a pmos model, this file could replace cmos. mod in the previous example.

```
// N-CHANNEL MOS --- lu NMOS PROCESS
//
//
// The following group of models represent N-channel MOSFETs over
// the following ranges:
//
       1u <= 1 <= 00
       1u <= w <= oo
//
      0 <= T <= 55
//
// process corners = {FAST, TYPICAL, SLOW}
// Warnings are issued if these limits are violated.
// This model takes 4 parameters, 1, w, 1s, and 1d. The defaults for
// each of these parameters is 1um.
//
//
//
//
//
        <- ls -> <--- l ---> <- ld ->
//
//
//
//
//
         Source
                    Gate
//
simulator lang=spectre
// Complain if global constants are out-of-range.
TooCold paramtest warnif=(temp < 0) \
       message="The nmos model is not accurate below 0 C."
TooHot paramtest warnif=(temp > 55) \
        message="The nmos model is not accurate above 55 C."
// Define inline subcircuit that implements automatic model selection
// this uses user-supplied parameters 1 and w which represent device
// geometry, and the built-in parameter temp, to perform model binning
// based on both geometry and temperature.
//
inline subckt nmos (d g s b)
        parameters l=1um w=1um ls=1um ld=1um
// Complain if subcircuit parameters are out-of-range.
//
TooShort paramtest warnif=(1 < 1um) \</pre>
       message="Channel length for nmos must be greater than 1u."
TooThin paramtest warnif=(w < 1um) \
        message="Channel width for nmos must be greater than 1u."
```

Parameter Specification and Modeling Features

The following file, models.scs, contains the models, which depend on circuit temperature (temp). Each model parameter can take on one of two values, depending on the value of parameter temp.

```
// Fast models.
//
model fast_1x1 mos3 type=n vto=(temp >= 27_C) ? 0.8 : 0.77
                                                                   // ...etc
model fast_1x3 mos3 type=n vto=(temp >= 27_C) ? 0.9 : 0.78
                                                                   // ...etc
model fast_3x1 mos3 type=n vto=(temp >= 27_C) ? 0.95 : 0.79 // ...etc
model fast_3x3 mos3 type=n vto=(temp >= 27_C) ? 0.98 : 0.81
                                                                  // ...etc
// Typical models.
//
model typ_1x1 mos3 type=n vto=(temp >= 27_C) ? 0.90 : 0.75
                                                                   // ...etc
                                                                   // ...etc
model typ_1x3 mos3 type=n vto=(temp >= 27_C) ? 0.91 : 0.73
model typ_3x1 mos3 type=n vto=(temp >= 27_C) ? 0.97 : 0.77
                                                                  // ...etc
model typ 3x3 \text{ mos} 3 \text{ type=n vto=(temp >= 27 C)} ? 0.99 : 0.84
                                                                   // ...etc
// Slow models.
//
model slow_1x1 mos3 type=n vto=(temp \geq 27_C) ? 0.92 : 0.76
                                                                   // ...etc
model slow_1x3 mos3 type=n vto=(temp >= 27_C) ? 0.93 : 0.74 model slow_3x1 mos3 type=n vto=(temp >= 27_C) ? 0.98 : 0.78
                                                                  // ...etc
                                                                  // ...etc
                                                                  // ...etc
model slow_3x3 mos3 type=n vto=(temp >= 27_C) ? 0.98 : 0.89
```

The following file, <code>select_models.scs</code>, uses the structural <code>if</code> statement to select models based on parameters <code>l</code> and <code>w</code>. Note that for MOS devices, this could also be achieved by using auto model selection (see <code>spectre -h mos3</code>), but this example illustrates model binning and model selection based on the structural <code>if</code> statement, which can be used to bin based on any combination of parameters, (not necessarily predefined device geometry models) and for any device type (that is, not limited to MOS devices only).

```
library select_models
section fast // select models for fast device, based on subckt
//parameters l,w
   if (1 <= 3um) {
        if (w <= 3um) {
            nmos (d g s b) fast_1x1 l=l w=w ls=ls ld=ld
        } else {
            nmos (d g s b) fast_1x3 l=l w=w ls=ls ld=ld
        }
}</pre>
```

Parameter Specification and Modeling Features

```
} else {
        if (w <= 3um) {
             nmos (d g s b) fast_3x1 l=l w=w ls=ls ld=ld
        } else {
             nmos (d g s b) fast_3x3 l=l w=w ls=ls ld=ld
endsection fast
section typical
    if (1 <= 3um) {
        if (w <= 3um) {
             nmos (d q s b) typ 1x1 l=l w=w ls=ls ld=ld
             nmos (d g s b) typ_1x3 l=l w=w ls=ls ld=ld
    } else {
        if (w <= 3um) {
             nmos (d g s b) typ_3x1 l=l w=w ls=ls ld=ld
        } else {
             nmos (d g s b) typ_3x3 l=1 w=w ls=ls ld=ld
endsection typical
section slow
    if (1 <= 3um) {
        if (w <= 3um) {
             nmos (d g s b) slow_1x1 l=l w=w ls=ls ld=ld
        } else {
             nmos (d g s b) slow_1x3 l=l w=w ls=ls ld=ld
    } else
        if (w \le 3um) {
             nmos (d g s b) slow_3x1 l=l w=w ls=ls ld=ld
             nmos (d g s b) slow_3x3 l=l w=w ls=ls ld=ld
endsection slow
endlibrary
```

Scaling Physical Dimensions of Components

Selected components allow their physical dimensions to be scaled with global scale factors. When you want to scale the physical dimensions of these instances and models, you use the scale and scalem parameters in the options statement. Use scale for instances and scalem for models. The default value for both scale and scalem is 1.0. (For more information about the options statement, see "options Statement Format" on page 209 and the documentation for the options statement in Spectre online help spectre -h options.)

You can scale the following devices with scale and scalem:

Capacitors—length (1) or width (w)

Parameter Specification and Modeling Features

- Diodes—length (1) or width (w)
- Resistors—length (1) or width (w)
- Physical resistors (phy_res)—length (1) or width (w)
- MOSFET—length or width

Finding Default Measurement Units

The effects of scale and scalem depend on the default measurement units of the components you scale. To find the default measurement units for a component parameter, look up that parameter in the parameter listings of your Spectre online help (spectre -h). The default for measurement units is in parentheses. For example, the (m) in this entry from the mos8 parameter descriptions in the Spectre online help (spectre -h) tells you that the default measurement unit for channel width is meters.

w (m) Channel width

Effects of scale and scalem with Different Default Units

scale and scalem affect only parameters whose default measurement units are in meters. For example, vmax is affected because its units are *m/sec*, but ucrit is not affected because its units are *V/cm*. Similarly, nsub is not affected because its units are 1/cm³. You can check the effects of scale and scalem by adding an info statement with what=output and look for the effective length (leff) or width (weff) of a device. For more information about the info statement, see "The info Statement" on page 202.

The following table shows you the effects of scale and scalem with different units:

scale or scalem	Units	Scaling action
scale	meters (m)	Multiplied by scale
scalem	meters (m)	Multiplied by scalem
scale	meters ⁿ (m ⁿ) (With n a real number)	Multiplied by scale ⁿ
scalem	meters ⁿ (m ⁿ) (With n a real number)	Multiplied by scalem ⁿ
scale	1/ meters (1/m)	Divided by scale
scalem	1/ meters (1/m)	Divided by scalem

Parameter Specification and Modeling Features

scale or scalem	Units	Scaling action
scale	1/meters ⁿ (1/m ⁿ) (With n a real number)	Divided by scale ⁿ
scalem	1/meters ⁿ (1/m ⁿ) (With n a real number)	Divided by scale ⁿ

String Parameters

You can use quoted character strings as parameter values. String values you might use as Spectre parameter values include filenames and labels. When you use a string as a parameter, enclose the string in quotation marks. In the following example, the value for the parameter named file is the character string Spara.data.

```
model sp_data nport file="Spara.data"
```

N-Ports

When you model N-ports, you must first create a file listing the S, Y, or Z-parameters. Then you complete the modeling by using this file as input for an nport statement. You can create the S, Y, or Z-parameter file listing in two different ways.

- You can run an sp analysis and create a listing of S-parameter estimates automatically.
- If you already know the S-parameter values, you can create an S-parameter listing manually with a text editor such as vi.

The S, Y, or Z-parameter data file describes the characteristics of a linear N-port over a list of frequencies. The format of the data file used by the Spectre simulator is flexible and self documenting. The Spectre simulator native format describes N-ports with an arbitrary number of ports, specifies the reference resistance of each port, mentions the frequency with no hidden scale factors, and allows the S-parameters to be given in several formats. The Spectre circuit simulator can also read the Touchstone and CITIfile format.

N-Port Example

This example demonstrates the use of the nport statement.

```
// Two port test circuit
global gnd
simulator lang=spectre
// Models
```

Parameter Specification and Modeling Features

model sp // Compos		rt file="Sp	eara.data"				
Port1	(i1	gnd)	port	num=1			
TL1	(i1	gnd	o1	gnd)	tline	z0=25	f=1M
Port2	(01	gnd)	port	num=2			
Port3	(i2	gnd)	port	r=50	num=3		
X1	(02	gnd	02	gnd)	sp_data		
Port4	(02	gnd)	port	r=50	num=4		
// Analy: Op_Point Sparams	dc	.3MHz lin=1	.00 ports=[Po	ort1 Port3	3]		

Creating an S-Parameter File Automatically

To create an S-parameter file automatically, run an sp analysis that sweeps frequency and set the output file parameter to file="filename". The parameter filename is the name you select for the S-parameter file. For more information about specifying an sp analysis, see <u>Chapter 6</u>, "Analyses," and the parameter listings for the sp analysis in the Spectre online help (spectre -h sp).

Creating an S, Y, or Z-Parameter File Manually

To create an S, Y, or Z-parameter file manually in a text editor, observe the following guidelines and rules:

- The Spectre simulator accepts the following formats for S, Y, or Z-parameters: real-imag, mag-deg, mag-rad, db-deg, and db-rad. The formats do not have to be the same for each parameter. For clarity, use a comma to separate the two parts of an S, Y, or Z-parameter.
- Begin each file with a semicolon. Semicolons indicate comment lines.
- Use spaces, commas, and newlines as delimiters.
- You can enter the parameters in any order.
- You can specify any number of frequency points. The frequency points do not have to be equally spaced, but the frequency index must be in ascending or descending order.
- You must place the frequency specification before the S-parameters, and you must separate the frequency specification from the S-parameters with a colon.

Parameter Specification and Modeling Features

■ There is no limit to the number of ports. If either port number is greater than nine, place a colon between the two port numbers when you specify the S, Y, or Z-parameter format (S13:15).

Note: The S, Y, or Z-parameters can be given in any order and in any supported format, but the order and format used must be consistent through out the file and must match the order and format specified in the format line.

Reading the S, Y or Z-Parameter File

After you create the S, Y, or Z-parameter file, you must place instructions in the netlist for the Spectre simulator to read it. You can give these instructions with an nport model statement or directly on the instance line. The following example shows how to enter an S-parameter file into a netlist. This model statement reads S-parameters from the file Spara.data.

```
model Sdata nport file="Spara.data" datafmt=spectre|touchstone|citiformat
```

If the S-parameter file is not in the same directory as the Spectre simulator, you can use a path to the S-parameter file as a value for the nport statement file parameter, or you can specify a search path using the -I command line argument.

The Spectre circuit simulator reads the S, Y, or Z-parameter data file in the Spectre, CITIfile, or Touchstone format. If you do not specify the input file format, the Spectre circuit simulator detects it automatically by reading the first line in the input file as follows:

; as Spectre

! as Touchstone

CITI as CITIfile.

The Spectre circuit simulator supports

- two-port noise data and noise correlation matrix data in Spectre format
- two-port noise data in Touchstone format

Spectre Format

An S, Y, or Z-parameter file in the Spectre format must have a header. The header

- must have a comment beginning with a semicolon as the first line
- must define the reference resistance of ports and the S, Y, or Z-parameter formats
- can include any number of comment and blank lines.

Parameter Specification and Modeling Features

When reading the file, the simulator ignores all the lines beginning with semicolons, spaces, commas, and newlines in the header. The simulator reads the numbers immediately after = on the lines after the reference resistance line as impedance data of the ports. The format section is treated as the format definition of S-parameter data entries.

You can enter the S, Y, or Z-parameters in any order, but the frequency must be first and is separated from the parameters with a colon. Each parameter can be expressed as (real,imag), (mag,deg), (mag,rad), (db,deg), or (db,rad). You can use commas to separate the two parts of a parameter.

Any number of frequency points can be presented. They do not need to be equally spaced, but the frequency index must be monotonic, and the frequency data must be given explicitly, with no hidden scale factors. There is no limit to the number of ports. S-parameters use the syntax S13:15 when either port number is greater than 9.

Adding Noise Parameters

An S-parameter file in Spectre format can contain external two-port noise data as well as noise correlation matrix data. The syntax for two-port noise data is:

```
noiseformat freq: Fmin (mag|db) Gamma(real,imag|mag,deg|db,deg) Rn
```

followed by two-port noise parameters.

The syntax for general n-port noise data is:

```
noiseformat freq: CY1:1 CY2:2 CY1:2 CY2:2
```

followed by the noise coefficient matrix.

Example

A Spectre S-parameter file for three ports looks as follows:

```
; S-parameter data file 'port2.data'.
; Generated by spectre from circuit file 'gendata' during analysis swp.
; 12:13:06 PM, Fri May 8, 1998
reference resistance
        port3=137
                          ; is port p3
        port2=137
                         ; is port p2
                         ; is port pl
        port1=137
                 s33(real,imag) s23(real,imag)
s13(real,imag) s32(real,imag)
format freq:
                 s22(real,imag) s12(real,imag)
                 s31(real,imag) s21(real,imag)
                 s11(real,imag)
0.00000000e+00:
                     0.333333,
                                         0
                                                      -0.666667,
                                                                           0
```

Parameter Specification and Modeling Features

	0.666667,	0	-0.666667,	0
	0.333333,	0	0.666667,	0
	0.666667,	0	0.666667,	0
	0.333333,	0		
2.50000000e+07:	0.549736,-0.0	181715	-0.446126,	0.0466097
	0.450264, 0.0	181715	-0.446126,	0.0466097
	0.546593,-0.0)556029	0.446126,-	0.0466097
	0.450264, 0.0	181715	-0.446126,	0.0466097
	0.549736,-0.0	181715		
5.00000000e+07:	0.546094,-0.0	359074	-0.437504,	0.0922889
	0.453906, 0.0	359074	-0.437504,	0.0922889
	0.533673, -0	.10951	0.437504,	0.0922889
	0.453906, 0.0	359074	0.437504,	0.0922889
	0.546094,-0.0	359074	•	

The following is an example of two-port noise data.

noiseformat freq:	Fmin(mag)	<pre>Gamma(real,imag)</pre>	Rn
1.00000000e+09:	340.85	0.348552 .63566e-16	4.88929
2.00000000e+09:	340.85	0.348552 3.63566e-16	4.88929
3.00000000e+09:	340.85	0.348552 3.63566e-16	4.88929
4.00000000e+09:	340.85	0.348552 3.63566e-16	4.88929
5.00000000e+09:	340.85	0.348552 3.63566e-16	4.88929

The following is an example of a noise co-relation matrix:

noiseformat freq:	CY1:1	CY2:1	CY1:2	CY2:2
1.00000000e+09:	0.344025	0.00632498	0.00632498	0.0259336
2.00000000e+09:	0.344025	0.00632498	0.00632498	0.0259336
3.00000000e+09:	0.344025	0.00632498	0.00632498	0.0259336
4.00000000e+09:	0.344025	0.00632498	0.00632498	0.0259336
5 00000000e+09:	0 344025	0 00632498	0 00632498	0 0259336

Touchstone Format

A Touchstone file contains

- A header consisting of a comment line starting with an exclamation mark.
- An option line.
- Data lines.

Parameter Specification and Modeling Features

The syntax for the option line is:

[frequency units] [parameters] [format] R [n]

where

Delimiter.

frequency units The frequency unit.

Valid values: GHz, MHz, KHz, Hz

Default value: GHz

parameter Parameter type.

Valid values: S, Y, Z Default value: S

format of the complex number

Valid values: DB (for db and angle), MA (for magnitude and

angle), RI (for real and imaginary)

Default value: MA

R Reference resistance.

n Number of ohms (the real impedance to which the parameters

are normalized).

Default value: 50.0

The syntax for data lines in MA is as follows.

One port:

Freq Mag Ang $f |S_{II}| \angle S_{II}$

Two ports:

Freq Mag Ang Mag Ang Mag Ang Mag Ang $f = |x11| \angle x11 |x21| \angle x11 |x12| \angle x12 |x22| \angle x22$

Parameter Specification and Modeling Features

Three ports

Freq	Mag	Ang	Mag	Ang	Mag	Ang
f	$ s_{11} $	$\angle s_{11}$	$ s_{12} $	$\angle s_{12}$	$ s_{13} $	∠s ₁₃
f	$ S_{21} $	$\angle s_{21}$	$ S_{22} $	$\angle S_{22}$	$ S_{23} $	$\angle S_{23}$
f	$ s_{31} $	∠s ₃₁	$ S_{32} $	∠s ₃₂	$ S_{33} $	∠S ₃₃

Four ports

Freq	Mag	Ang	Mag	Ang	Mag	Ang	Mag	Ang
f	$ s_{11} $	$\angle s_{11}$	$ s_{12} $	$\angle s_{12}$	$ s_{13} $	∠s ₁₃	$ S_{14} $	∠s ₁₄
f	$ s_{21} $	$\angle S_{21}$	$ S_{22} $	$\angle S_{22}$	$ S_{23} $	$\angle S_{23}$	$ S_{24} $	∠S ₂₄
f	$ s_{31} $	$\angle S_{31}$	$ S_{32} $	∠S ₃₂	$ S_{33} $	∠S ₃₃	$ S_{34} $	∠S ₃₄
f	$ S_{41} $	$\angle S_{41}$	$ S_{42} $	∠S ₄₂	$ S_{43} $	∠S ₄₃	$ S_{44} $	∠S ₄₄

and so on, where the complex number format is specified as MA on the # line. The frequency entry must be first and can include a scale factor. The data entries need to be separated with at least a space. The data entries at the first frequency point specify the number of ports.

Adding Noise Parameters

You can add two-port noise parameters to a Touchstone data file after the S, Y, or Z-parameters. Each line of the two-port noise data has the following five entries

where

x1	Frequency in units
x2	Minimum noise figure in DB.
x3, x4	Source reflection coefficient to realize minimum noise figure in units specified in the option line (MA, DB, or R).
x5	Normalized effective noise resistance.

The frequencies for noise parameters and network parameters need not match. The only requirement is that the lowest noise-parameter frequency be less than or equal to the highest

Parameter Specification and Modeling Features

network-parameter frequency. This allows the simulator to determine where the network parameters end and noise parameters begin.

The source reflection coefficient has the same format as specified for the network parameters.

Example

The following is two-port noise data in Touchstone format with three frequency points.

	IVIDER, 3- MA R 50.					
5.00000	0.24254	136.711	0.68599	-43.3139	0.6859	-43.3139
	0.68599	-43.3139	0.08081	66.1846	0.28009	-59.1165
	0.68599	-43.3139	0.28009	-59.1165	0.08081	66.1846
6.00000	0.20347	127.652	0.69232	-52.3816	0.69232	-52.3816
	0.69232	-52.3816	0.05057	52.0604	0.22159	-65.1817
	0.69232	-52.3816	0.22159	-65.1817	0.69817	-61.6117
7.00000	0.15848	118.436	0.69817	-61.6117	0.69817	-61.6117
	0.69817	-61.6117	0.02804	38.6500	0.16581	-71.2358
	-0.69817	-61.6117	0.16581	-71.2358	0.02804	38.6500

CITIfile Format

CITIfile stands for Common Instrumentation Transfer and Interchange file format. A typical CITIfile package consists of a

- header containing keywords and setup information
- data section containing one or more data arrays

A data array is numeric data arranged with one data element per line. A data array starts after the BEGIN keyword, and the END keyword follows the last data element in an array.

Example

The following example shows the basic structure of a CITIfile package.

```
CITIFILE A.01.00 NAME Momentum.SP
```

Parameter Specification and Modeling Features

```
CONSTANT NBR OF PORTS 2
CONSTANT NORMALIZATION 1
VAR freq MAG 12
DATA S[1,1] RI
DATA S[1,2] RI
VAR LIST BEGIN
1000000000
2000000000
VAR LIST END
BEGIN
0.017216494,
0.040005801,
               0.116494405
END
BEGIN
0.9827835,
0.982/835, 0.944136351, -0.176952631
END
```

In the above example, the VAR_LIST_BEGIN section contains the frequency data points. Each data array block (marked by BEGIN and END keywords) corresponds to an S-parameter and contains the value of that parameter for each frequency point. The first block corresponds to S[1,1], the second block corresponds to S[1,2] and so on.

You can use the SEG_LIST keyword to specify a frequency range. For example,

```
SEG_LIST_BEGIN
SEG 1000000000 4000000000 10
SEG_LIST_END
```

specifies that the frequency range is from 1000000000 to 400000000 with intervals of 10.

S-Parameter File Format Translator

The S-parameter data file format translator (sptr) is a separate program from the Spectre simulator. Since the Spectre circuit simulator now reads the Touchstone and CITIfile formats directly, you need to use the translator only if you have it built into your design flow.

Note: The translator does not support the MHARM, HPMNS, or Linear Neutral Model (LNM) formats any more.

Command Arguments

The following is a synopsis of the command line and arguments used to run the translator.

Parameter Specification and Modeling Features

sptr [-i inputFormat] [-o outputFormat] [-f FreqScale] [-V |-version]
[-format paramFormat] [inputFile] [outputFile]

Option	Description
-i inputFormat	Input file format. Valid values: spectre, touchstone, citifile Default value: spectre
-o outputFormat	Output file format. Valid values: spectre and touchstone Default value: spectre
-f FreqScale	If frequency scale is not explicitly given in the input file, then, TrueFreq = GivenFreq * freqscale Default value: 1.0 for Spectre and CITIfile formats. 1.0e09 for touchstone format.
-V -version	Prints the version information.
-format paramFormat	Parameter data format of the output file. Valid values: RI, MA, and DB Default value: RI
inputFile	Input file name.
outputtFile	Output file name.

Analyses

This chapter discusses the following topics:

- Types of Analyses on page 131
- Analysis Parameters on page 134
- Probes in Analyses on page 135
- Multiple Analyses on page 135
- Multiple Analyses in a Subcircuit on page 138
- DC Analysis on page 139
- AC Analysis on page 140
- <u>Transient Analysis</u> on page 141
- Pole Zero Analysis on page 148
- Other Analyses (sens, fourier, dcmatch, and stb) on page 150
- Advanced Analyses (sweep and montecarlo) on page 159
- Special Analysis (Hot-Electron Degradation) on page 178

Analyses

Types of Analyses

This section gives a brief description of the Spectre[®] circuit simulator analyses you can specify. Spectre analyses frequently let you sweep parameters, estimate or specify the DC solution, specify options that promote convergence, and select annotation options. You can specify sequences of analyses, any number in any order. For a more detailed description of each analysis and its parameters, consult the Spectre online help (spectre -h).

- DC analysis (dc)—Finds the DC operating point or DC transfer curves of the circuit.
- AC/small signal analyses
 - □ AC analysis (ac)—Linearizes the circuit about the DC operating point and computes the steady-state response of the circuit to a given small-signal sinusoidal stimulus. This analysis is useful for obtaining small-signal transfer functions. For more information about the AC analysis, see Chapter 4, "Analysis Statements," of the Spectre Circuit Simulator Reference.
 - Noise analysis (noise)—Linearizes the circuit about the DC operating point and computes the total-noise spectral density at the output. The output can be either a voltage or a current. If you specify an input probe, the Spectre simulator computes the transfer function and the equivalent input-referred noise for a noise-free network. For more information about the noise analysis, see <a href="Chapter 4, "Analysis Statements," of the Spectre Circuit Simulator Reference.
 - □ Transfer function analysis (xf)—Linearizes the circuit about the DC operating point and performs a small-signal analysis. It calculates the transfer function from every source in the circuit to a specified output. The output can be either a voltage or a current. For more information about the transfer function analysis, see Chapter 4, "Analysis Statements," of the Spectre Circuit Simulator Reference.
 - S-parameter analysis (sp)—Linearizes the circuit about the DC operating point and computes S-parameters of the circuit taken as an N-port. You define the ports of the circuit with port statements. You must place at least one port statement in the circuit. The Spectre simulator turns on each port sequentially and performs a linear small-signal analysis. The Spectre simulator converts the response of the circuit at each port into S-parameters. For more information about the S-parameter analysis, see Chapter 4, "Analysis Statements," of the Spectre Circuit Simulator Reference.

Transient analyses

□ Transient analysis (tran)—Computes the transient response of the circuit over a specified time interval. You can specify initial conditions for this analysis. If you do not specify initial conditions, the analysis starts from the DC steady-state solution. You can influence the speed of the simulation by setting parameters that control

Analyses

- accuracy requirements and the number of data points saved. For more information about the transient analysis, see <u>"Transient Analysis"</u> on page 141.
- □ Time-domain reflectometer analysis (tdr)—Linearizes the circuit about the DC operating point and computes the reflection and transmission coefficients versus time. This is the time-domain equivalent of the S-parameter analysis. For more information about time-domain reflectometer analysis, see Chapter 4, "Analysis Statements," of the Spectre Circuit Simulator Reference.
- Pole Zero analysis (pz)— Linearizes the circuit about the DC operating point and computes the poles and zeros of the linearized network.

RF analyses

- Envelope-Following Analysis (envlp)—Computes the envelope response of a circuit. The simulator automatically determines the clock period by looking through all the sources with the specified name. Envelope-following analysis is most efficient for circuits where the modulation bandwidth is orders of magnitude lower than the clock frequency. This is typically the case, for example, in circuits where the clock is the only fast varying signal and other input signals have a spectrum whose frequency range is orders of magnitude lower than the clock frequency. For another example, the down conversion of two closely placed frequencies can also generate a slow-varying modulation envelope. The analysis generates two types of output files, a voltage versus time (td) file, and an amplitude/phase versus time (fd) file for each of specified harmonic of the clock fundamental. For more information about the envelope-following analysis, see SpectreRF Help.
- Periodic AC analysis (pac)—After the periodic steady-state analysis computes a periodic solution, this analysis computes the response of a circuit in periodic steady-state to a small sinusoidal stimulus. The frequency of the sinusoidal stimulus is not constrained by the period of the large-periodic solution. The periodic AC analysis lets you sweep the frequency over a range of values. This analysis is similar to the AC analysis, except that it linearizes the circuit about a periodically varying operating point and accurately models frequency conversion effects. For more information about the periodic AC analysis, see SpectreRF Help.
- Periodic distortion analysis (pdisto)—Models periodic distortion and includes harmonic effects. pdisto computes both a large signal, the periodic steady-state response of the circuit, and also the distortion effects of a specified number of moderate signals, including the distortion effects of the number of harmonics that you choose. For more information about the periodic distortion analysis, see SpectreRF Help.
- Periodic noise analysis (pnoise)—After the periodic steady-state analysis computes a periodic solution, this analysis linearizes the circuit about the periodic steady-state and performs a small-signal analysis. The small-signal analysis

Analyses

computes the total-noise spectral density at the output. If you specify an input probe, the transfer function and the input noise for an equivalent noise-free network are computed. pnoise is like noise except it models frequency conversion effects and the effect of time-varying bias on noise sources. For more information about the periodic noise analysis, see <u>SpectreRF Help</u>.

- Periodic steady-state analysis (pss)—Computes the periodic steady-state response of a circuit at either a given fundamental frequency or the corresponding steady-state analysis period. The pss analysis also determines the circuit's periodic operating point. This operating point is used for periodic time-varying small-signal analyses, such as pac, pxf, and pnoise. For more information about the periodic steady-state analysis, see <u>SpectreRF Help</u>.
- Periodic transfer function analysis (pxf)—After the periodic steady-state analysis computes a periodic solution, this analysis linearizes the circuit about the periodic steady-state and performs a small-signal analysis. The small-signal analysis computes the transfer function from every independent source in the circuit to a designated output. The variable of interest at the output can be voltage or current. The analysis is similar to the transfer function analysis, except that it linearizes the circuit about a periodically varying operating point and accurately models frequency conversion effects. For more information about the periodic transfer function analysis, see SpectreRF Help.

Other analyses

- Sensitivity analysis (sens)—Determines the sensitivity of output variables to input design parameters. The results are expressed as a ratio of the change in an output analysis variable to the change in an input design parameter. The output for the sens command is sent to the rawfile or to an ASCII file. For more information about sensitivity analysis, see <u>"Sensitivity Analysis"</u> on page 151.
- □ Fourier analysis (fourier)—Measures the Fourier coefficients of two different signals at a specified fundamental frequency without loading the circuit. The algorithm used is based on the Fourier integral rather than the discrete Fourier transform and therefore is not subject to aliasing. Even on broad-band signals, it computes a small number of Fourier coefficients accurately and efficiently. Therefore, this Fourier analysis is suitable on clocked sinusoids generated by sigmadelta converters, pulse-width modulators, digital-to-analog converters, sample-and-holds, and switched-capacitor filters as well as on the traditional low-distortion sinusoids produced by amplifiers or filters. For more information about the Fourier analysis, see Chapter 4, "Analysis Statements," of the Spectre Circuit Simulator Reference.
- □ DC Match Analysis (dcmatch)—Computes the statistical deviation in the DC operating point of the circuit caused by device mismatch. For more information about the dcmatch analysis, see DC Match Analysis on page 154

Analyses

□ Stability Analysis (stb)—Linearizes the circuit about the DC operating point and computes loop gain, gain margin, and phase margin for a specific feedback loop or an active device. The stability of the circuit can be determined from the loop gain waveform. The probe parameter must be specified to perform stability analysis. For more information about the stability analysis, see Chapter 4, "Analysis Statements," of the Spectre Circuit Simulator Reference.

Advanced analyses

- □ Sweep analysis (sweep)—Sweeps a parameter executing a list of analyses (or multiple analyses) for each value of the parameter. The sweeps can be linear or logarithmic. Swept parameters return to their original values after the analysis. Sweep statements can be nested. For more information about the sweep analysis, see "Sweep Analysis" on page 159.
- Monte Carlo analysis (montecarlo)—Varies netlist parameters according to specified distributions and correlations, runs nested child analyses, and extracts specified circuit-performance measurements. You can apply both process and device-to-device mismatch variations and tag device instances as correlated or "matched pairs." Use the Cadence analog circuit design environment Calculator expressions to measure the circuit performance. You can use the analog design environment graphics tools to plot scalar performance data, such as slew rates and bandwidths, as a histogram or scattergram. You can also display waveform data as cloud (family) plots. For more information about the Monte Carlo analysis, see "Monte Carlo Analysis" on page 164. For more information about using the Monte Carlo analysis with the analog design environment, see the Advanced Analysis Tools User Guide.
- Hot-electron degradation analysis—Lets you control the age of the circuit when simulating hot-electron degradation. For more information about the hot-electron degradation analysis, see "Special Analysis (Hot-Electron Degradation)" on page 178.

Analysis Parameters

You specify parameter values for analysis and control statements just as you specify those for component and model statements, but many analysis parameters have no assigned default values. You must assign values to these parameters if you want to use them. To assign values to these parameters, simply follow the parameter keyword with an equal sign (=) and your selected value. For example, to set the points per decade (dec) value to 10, you enter dec=10.

Note: Some parameters require text strings, usually filenames, as values. You must enclose these text strings in quotation marks to use them as parameter values.

Analyses

When analysis parameters do have default values, these values are given in the parameter listings for that analysis in the Spectre online help (spectre -h).

A listing like the following tells you that the default value for parameter lin is 50 steps:

lin=50

Emission coefficient parameters

Probes in Analyses

Some Spectre analyses require that you set probes. Remember the following guidelines when you set probes:

- You can name any component instance as a probe.
- If the probe component measures a branch current, you can use it as either a current probe or a voltage probe. Component instances that do not calculate branch currents can be used only as voltage probes.
- If the probe component has more than two terminals, you specify which pair of terminals to use as the probe by specifying a port of the probe. In the following instance statement, port 1 is nodes 5 and 8, and port 2 is nodes 2 and 4.

```
bjt1 5 8 2 4 bmod1
```

■ If the probe component measures more than one branch current, you specify which branch current to use as the probe by specifying a port. In the following instance statement, current port 1 is the branch from node 4 to node 5, and port 2 is the branch from node 8 to node 9.

```
tline2 4 5 8 9 tline
```

Every component has a default probe type and port number.

In the following example, the netlist contains a resistor named Rocm and a voltage source named Vcm. These components are used as probes for the noise analysis statement. The parameters oprobe and iprobe specify the probe components, and the parameters oportv and iportv specify the port numbers.

```
cmNoise noise start=1k stop=1G dec=10 oprobe=Rocm oportv=1 iprobe=Vcm iportv=1
```

Multiple Analyses

This netlist demonstrates the Spectre simulator's ability to run many analyses in the order you prefer. In this example, the Spectre simulator completely characterizes an operational amplifier in one run. In analysis OpPoint, the program computes the DC solution and saves it to a state file whose name is derived from the name of the netlist file. On subsequent runs,

Analyses

the Spectre simulator reads the state information contained in this state file and speeds analysis by using this state information as an initial estimate of the solution.

Analysis Drift computes DC solutions as a function of temperature. The Spectre simulator computes the solution at the initial temperature and saves this solution to a state file to use as an estimate in the next analysis and in subsequent simulations.

Analysis XferVsTemp computes the small-signal characteristics of the amplifier versus temperature. Analysis XferVsTemp starts up quickly because it begins with the initial temperature of the DC solution that was placed in a state file by the previous analysis.

Analysis OpenLoop computes the loop gain of an amplifier in closed-loop configuration. Analysis OpenLoop starts quickly because it begins with the initial temperature of the DC solution that was placed in a state file during analysis OpPoint.

Analysis XferVsFreq computes several small-signal quantities of interest such as closed-loop gain, the rejection ratio of the positive and negative power supply, and output resistance. The analysis again starts quickly because the operating point remains from the previous analysis.

Analysis StepResponse computes the step response that permits the measurement of the slew-rate and settling times. The alter statement please4 then changes the input stimulus from a pulse to a sine wave. Finally, the Spectre simulator computes the response to a sine wave in order to calculate distortion.

```
// ua741 operational amplifier
global and vcc vee
simulator lang=spectre
Spectre options audit=detailed limit=delta maxdeltav=0.3 \
     save=lvlpub nestlvl=1
// ua741 operational amplifier
model NPNdiode diode
                       is=.1f
                                imax=5m
model NPNbjt
               bjt type=npn bf=80 vaf=50 imax=5m \
     cje=3p cjc=2p cjs=2p tf=.3n tr=6n rb=100
model PNPbjt bjt type=pnp bf=10 vaf=50 imax=5m \
     cje=6p cjc=4p tf=1n tr=20n rb=20
subckt ua741 (pIn nIn out)
// Transistors
     Q1 1 pIn 3 vee NPNbjt
     Q2 1 nIn 2 vee NPNbjt
     Q3 5 16 3 vcc PNPbjt
     Q4 4 16 2 vcc PNPbjt
     Q5 5 8 7 vee NPNbjt
     Q6 4 8 6 vee NPNbjt
        vcc 5 8 vee NPNbjt
     09 16 1 vcc vcc PNPbjt
     Q14 vcc 13 15 vee NPNbjt
     Q16 vcc 4 9 vee NPNbjt
     Q17 11 9 10 vee NPNbjt
     Q18 13 12 17 vee NPNbjt
```

Analyses

```
Q20 vee 17 14 vcc PNPbjt
     Q23 vee 11 17 vcc PNPbjt
// Diodes
     Q8 vcc 1 NPNdiode
     019 13 12 NPNdiode
// Resistors
     R1 7 vee resistor r=1k
     R2 6 vee resistor r=1k
     R3 8 vee resistor r=50k
        9 vee resistor r=50k
     R5
         10 vee resistor r=100
     Rб
         12 17 resistor r=40k
        15 out resistor r=27
     R8
     R9
        14 out resistor r=22
// Capacitors
     C1 4 11 capacitor c=30p
// Current Sources
     I1 16 vee isource dc=19u
        vcc 11 isource dc=550u
     I3 vcc 13 isource dc=180u
ends ua741
// Sources
          vcc gnd vsource dc=15
Vpos
Vneg
          vee qnd vsource dc=-15
          pin gnd vsource type=pulse dc=0 \
Vin
          val0=0 val1=10 width=100u period=200u rise=2u\
          fall=2u td1=0 tau1=20u td2=100u tau2=100u \
          freg=10k ampl=10 delay=5u \
          file="sine10" scale=10.0 stretch=200.0e-6
Vfb
          nin out vsource
// Op Amps
       pin nin out ua741
// Resistors
Rload
       out gnd resistor r=10k
// Analyses
// DC operating point
      please1 alter param=temp value=25 annotate=no
      OpPoint dc print=yes readns="%C:r.dc25"
      write="%C:r.dc25"
// Temperature Dependence
     Drift dc start=0 stop=50.0 step=1 param=temp \
          readns="%C:r.dc0" write="%C:r.dc0"
     XferVsTemp xf start=0 stop=50 step=1 probe=Rload \
          param=temp freq=1kHz readns="%C:r.dc0"
     please2 alter dev=Vfb param=mag value=1 annotate=no
     OpenLoop ac start=1 stop=10M dec=10 readns="%C:r.dc25"
     please3 alter dev=Vfb param=mag value=0 annotate=no
     XferVsFreq xf start=1 Hz stop=10M dec=10 probe=Rload
// Transient
     StepResponse tran stop=250u
     please4 alter dev=Vin param=type value=sine
     SineResponse tran stop=150u
```

Analyses

Multiple Analyses in a Subcircuit

You might want to run complex sets of analyses many times during a simulation. To simplify this process, you can group the set of analyses into a subcircuit. Because subcircuit definitions can contain analyses and control statements, you can put the analyses inside a single subcircuit and perform the multiple analyses with one call to the subcircuit. The Spectre simulator performs the analyses in the order you specify them in the subcircuit definition. Generally, you do not mix components and analyses in the same subcircuit definition. For more information about formats for subcircuit definitions and subcircuit calls, see Chapter 6, "Analyses."

Example

The following example illustrates how to create and call subcircuits that contain analyses.

Creating Analysis Subcircuits

This example defines a subcircuit called sweepVcc that contains the following:

■ A list of parameters with default values for start, stop, Ib, omega, and steps
This list of defaults is optional.

These defaults are for the subcircuit call. For example, if you call <code>sweepVcc</code> and do not specify values for the <code>start</code> and <code>stop</code> parameters in the subcircuit call, the sweeps for analyses <code>SwpVccDC</code> and <code>SwpVccAC</code> start at 0 and end at 10, the values specified as defaults. If, however, you specify <code>start=1</code> and <code>stop=5</code> as parameter values in the subcircuit call, the <code>start</code> and <code>stop</code> parameters in <code>SwpVccDC</code> and <code>SwpVccAC</code> take the values 1 and 5, respectively.

- A control statement, setIbb, which alters the dc parameter of the component named Ibb to the numerical value of Ib
- Two analysis statements, SwpVccDC and SwpVccAC, which run a DC analysis followed by an AC analysis

Analyses

Calling Analysis Subcircuits

Each subcircuit call for sweepVcc in the netlist causes all the analyses in the sweepVcc to be performed. Each of the following statements is a subcircuit call to subcircuit sweepVcc:

```
Ibb1uA sweepVcc stop=2 Ib=1u
Ibb3uA sweepVcc stop=2 Ib=3u
Ibb10uA sweepVcc stop=2 Ib=10u
Ibb30uA sweepVcc stop=2 Ib=30u
Ibb100uA sweepVcc stop=2 Ib=100u
```

Note the following important syntax features:

- Each subcircuit call has a unique name.
- Each subcircuit call overrides the default values for the stop and Ib parameters.
- The start, steps, and omega parameters are not defined in the subcircuit calls. They take the default values assigned in the subcircuit.

DC Analysis

The DC analysis finds the DC operating point or DC transfer curves of the circuit. To generate transfer curves, specify a parameter and a sweep range. The swept parameter can be circuit temperature, a device instance parameter, a device model parameter, a netlist parameter, or a subcircuit parameter for a particular subcircuit instance. You can sweep the circuit temperature by giving the parameter name as parameter by giving the parameter name with no dev, mod, or sub parameter. You can sweep a top-level netlist parameter by giving the parameter name with no dev, mod, or sub parameter. You can sweep a subcircuit parameter for a particular subcircuit instance by specifying the subcircuit instance name with the sub parameter and the subcircuit parameter name with the param parameter. After the analysis has completed, the modified parameter returns to its original value.

The syntax is as follows:

```
Name dc parameter=value ...
```

You can specify sweep limits by giving the end points or by providing the center value and the span of the sweep. Steps can be linear or logarithmic, and you can specify the number of steps or the size of each step. You can give a step size parameter (step, lin, log, dec) and determine whether the sweep is linear or logarithmic. If you do not give a step size parameter, the sweep is linear when the ratio of stop to start values is less than 10, and logarithmic when this ratio is 10 or greater. If you specify the oppoint parameter, Spectre computes and outputs the linearized model for each nonlinear component.

Nodesets help find the DC or initial transient solution. You can supply them in the circuit description file with nodeset statements, or in a separate file using the readns parameter.

Analyses

When nodesets are given, Spectre computes an initial guess of the solution by performing a DC analysis while forcing the specified values onto nodes by using a voltage source in series with a resistor whose resistance is rforce. Spectre then removes these voltage sources and resistors and computes the true solution from this initial guess.

Nodesets have two important uses. First, if a circuit has two or more solutions, nodesets can bias the simulator towards computing the desired one. Second, they are a convergence aid. By estimating the solution of the largest possible number of nodes, you might be able to eliminate a convergence problem or dramatically speed convergence.

When you simulate the same circuit many times, we suggest that you use both the write and readns parameters and give the same filename to both parameters. The DC analysis then converges quickly even if the circuit has changed somewhat since the last simulation, and the nodeset file is automatically updated.

You may specify values to force for the DC analysis by setting the parameter force. The values used to force signals are specified by using the force file, the ic statement, or the ic parameter on the capacitors and inductors. The force parameter controls the interaction of various methods of setting the force values. The effects of individual settings are

force=none	Any initial condition specifiers are ignored.
force=node	The ic statements are used, and the ic parameter on the capacitors and inductors are ignored.
force=dev	The ic parameters on the capacitors and inductors are used, and the ic statements are ignored.
force=all	Both the ic statements and the ic parameters are used, with the ic parameters overriding the ic statements.

If you specify a force file with the readforce parameter, force values read from the file are used, and any ic statements are ignored.

Once you specify the force conditions, the Spectre simulator computes the DC analysis with the specified nodes forced to the given value by using a voltage source in series with a resistor whose resistance is rforce (see options).

AC Analysis

The AC analysis linearizes the circuit about the DC operating point and computes the response to all specified small sinusoidal stimulus. For more information on specifying small

Analyses

sinusoidal stimulus, see <u>Chapter 4, Component Statements Part 2,</u> in the Spectre Simulator Reference.

The Spectre simulator can perform the analysis while sweeping a parameter. The parameter can be frequency, temperature, component instance parameter, component model parameter, or netlist parameter. If changing a parameter affects the DC operating point, the operating point is recomputed on each step. You can sweep the circuit temperature by giving the parameter name as temp with no dev or mod parameter. You can sweep a netlist parameter by giving the parameter name with no dev or mod parameter. After the analysis has completed, the modified parameter returns to its original value.

The syntax is as follows:

Name ac parameter=value ...

You can specify sweep limits by giving the end points or by providing the center value and the span of the sweep. Steps can be linear or logarithmic, and you can specify the number of steps or the size of each step. You can give a step size parameter (step, lin, log, dec) to determine whether the sweep is linear or logarithmic. If you do not give a step size parameter, the sweep is linear when the ratio of stop to start values is less than 10, and logarithmic when this ratio is 10 or greater. All frequencies are in Hertz.

The small-signal analysis begins by linearizing the circuit about an operating point. By default, this analysis computes the operating point if it is not known or recomputes it if any significant component or circuit parameter has changed. However, if a previous analysis computed an operating point, you can set prevoppoint=yes to avoid recomputing it. For example, if you use this option when the previous analysis was a transient analysis, the operating point is the state of the circuit on the final time point.

Transient Analysis

You can adjust transient analysis parameters in several useful ways to meet the needs of your simulation. Setting different Spectre parameters that control the error tolerances, the integration method, and the amount of data saved let you choose between maximum speed and greatest accuracy in a simulation. You normally use reltol or errpreset to control accuracy, but you can use additional methods in special situations to improve performance.

This section also tells you about parameters you can set that improve transient analysis convergence.

Analyses

Trading Off Speed and Accuracy with a Single Parameter Setting

You can set transient analysis speed and accuracy parameters individually, or you can set a group of parameters that control transient analysis accuracy with the errpreset parameter. You can set errpreset to three different values:

- liberal
- moderate
- conservative

At liberal, the simulation is fast but less accurate. The liberal setting is suitable for digital circuits or analog circuits that have only short time constants. At moderate, the default setting, simulation accuracy approximates a SPICE2 style simulator. At conservative, the simulation is the most accurate but also slowest. The conservative setting is appropriate for sensitive analog circuits. If you still require more accuracy than that provided by conservative, tighten error tolerance by setting reltol to a smaller value.

Description of errpreset Parameter Settings

The effect of errpreset on other parameters is shown in the following table. In this table, T = stop - start.

errpreset	reltol	relref	method	maxstep	Iteratio
liberal	×10.0	allglobal	gear2	<= <i>T</i> /10	3.5
moderate	×1.0	sigglobal	traponly	<= <i>T</i> /50	3.5
conservative	×0.1	alllocal	gear2only	<=T/100	10.0

The description in the previous table has the following exceptions:

- The errpreset parameter sets the value of reltol as described in the table, except that the value of reltol cannot be larger than 0.01.
- Except for reltol and maxstep, errpreset does not change the value of any parameters you have specified.
- With maxstep, the specified value in the preceding table is an upper bound. You can always specify a smaller maxstep value.

If you need to check the errpreset settings for a simulation, you can find these values in the log file.

Analyses

Uses for errpreset

You adjust errpreset to the speed and accuracy requirements of a particular simulation. For example, you might set errpreset to liberal for your first simulation to see if the circuit works. After debugging the circuit, you might switch to moderate to get more accurate results. If the application requires high accuracy, or if you want to verify that the moderate solution is reasonable, you set errpreset to conservative.

You might also have different errpreset settings for different types of circuits. For logic gate circuits, the liberal setting is probably sufficient. A moderate setting might be better for analog circuits. Circuits that are sensitive to errors or circuits that require exceptional accuracy might require a conservative setting.

Controlling the Accuracy

You can control the accuracy of the solution to the discretized equation by setting the reltol and xabstol (where x is the access quantity, such as v or i) parameters in an options or set statement. These parameters determine how well the circuit conserves charge and how accurately the Spectre simulator computes circuit dynamics and steady-state or equilibrium points.

You can set the integration error or the errors in the computation of the circuit dynamics (such as time constants), relative to reltol and abstol by setting the lteratio parameter.

```
Tolerance<sub>NR</sub> = abstol + reltol*Ref
Tolerance<sub>LTE</sub> = Tolerance<sub>NR</sub> *lteratio
```

The Ref value is determined by your setting for relref, the relative error parameter, as explained in <u>"Adjusting Relative Error Parameters"</u> on page 144.

In the previous equations, Tolerance $_{NR}$ is a convergence criterion that bounds the amount by which Kirchhoff's Current Law is not satisfied as well as the allowable difference in computed values in the last two Newton-Raphson (NR) iterations of the simulation. Tolerance $_{LTE}$ is the allowable difference at any time step between the computed solution and a predicted solution derived from a polynomial extrapolation of the solutions from the previous few time steps. If this difference is greater than Tolerance $_{LTE}$, the Spectre simulator shortens the time step until the difference is acceptable.

From the previous equations, you can see that tightening reltol to create more strict convergence criteria also diminishes the allowable local truncation error (Tolerance_{LTE}). You might not want the truncation error tolerance tightened because this adjustment can increase simulation time. You can prevent the decrease in the time step by increasing the lteratio parameter to compensate for the tightening of reltol.

Analyses

Adjusting Relative Error Parameters

You determine the treatment of the relative error with the relref parameter. The relref parameter determines which values the Spectre simulator uses to compute whether the relative error tolerance (reltol) requirements are satisfied.

You can set relref to the following options:

- The relref=pointlocal setting compares the relative errors in quantities at each node relative to the current value of that node.
- The relref=alllocal setting compares the relative errors in quantities at each node to the largest value of that node for all past time points.
- The relref=sigglobal or relref=allglobal settings compare relative errors in each of the circuit signals to the maximum of all the signals in the circuit.
- In addition, the relref=allglobal setting compares equation residues (the amount by which Kirchhoff's Current Law [also known as Kirchhoff's Flow Law] is not satisfied) for each node to the maximum current floating onto the node at any time in that node's past history.

Setting the Integration Method

The method parameter specifies the integration method. You can set the method parameter to adjust the speed and accuracy of the simulation. The Spectre simulator uses three different integration methods: the backward-Euler method, the trapezoidal rule, and the second-order Gear method. The method parameter has six possible settings that permit different combinations of these three methods to be used. The following table shows the possible settings and what integration methods are allowed with each:

	Backward-Euler	Trapezoidal Rule	Second-Order Gear
euler	•		
traponly		•	
trap	•	•	
gear2only			•
gear2	•		•

Analyses

	Backward-Euler	Trapezoidal Rule	Second-Order Gear
trapgear2	•	•	•

The trapezoidal rule is usually the best setting if you want high accuracy. This method can exhibit point-to-point ringing, but you can control this by tightening the error tolerances. The trapezoidal method is usually not a good choice to run with loose error tolerances because it is sensitive to errors from previous time steps. If you need to use very loose tolerances to get a quick answer, it is better to use second-order Gear.

While second-order Gear is more accurate than backward-Euler, both methods can overestimate a system's stability. This effect is less with second-order Gear. You can also reduce this effect if you request high accuracy.

Artificial numerical damping can reduce accuracy when you simulate low-loss (high-Q) resonators such as oscillators and filters. Second-order Gear shows this damping, and backward-Euler exhibits heavy damping.

Improving Transient Analysis Convergence

If the circuit you simulate can have infinitely fast transitions (for example, a circuit that contains nodes with no capacitance), the Spectre simulator might have convergence problems. To avoid these problems, set cmin, which is the minimum capacitance to ground at each node, to a physically reasonable nonzero value.

You also might want to adjust the time-step parameters, step and maxstep. step is a suggested time step you can enter. Its default value is .001*(stop - start). maxstep is the largest time step permitted.

Controlling the Amount of Output Data

The Spectre simulator normally saves all computed data in the transient analysis. Sometimes you might not need this much data, and you might want to save only selected results. At other times, you might need to decrease the time interval between data points to get a more precise measurement of the activity of the circuit. You can control the number of output data points the Spectre simulator saves for the transient analysis in these ways:

With strobing, which lets you select the time interval between the data points the Spectre simulator saves. The simulator forces a time step on each point it saves, so the data is computed, not interpolated.

Analyses

- With skipping time points, which lets you select how many data points the Spectre simulator saves
- With data compression, which eliminates repetitive recording of signal values that are unchanged
- With the outputstart parameter, which lets you specify the time when the Spectre simulator starts saving data points
- With the infotime parameter, which lets you specify specific times to save operatingpoint data instead of for all time points

Telling the Spectre Simulator to Change the Time Interval between Data Points (Strobing)

Strobing changes the interval between data points. You use strobing to eliminate some unwanted high-frequency signal from the output, just as a strobe light appears to freeze rapidly rotating machinery. With strobing, you can demodulate AM signals or hide the effect of the clock in clocked waveforms. You can also dramatically improve the accuracy of external Fast Fourier Transform (FFT) routines. To perform strobing, you set the following parameters in the transient analysis:

- The strobeperiod parameter, which sets the time interval between the data points that the Spectre simulator saves
- The skipstart parameter (optional), which tells the Spectre simulator when to start strobing
 - This parameter is also used to skip data points.
- The skipstop parameter (optional), which tells the Spectre simulator when to stop strobing
 - This parameter is also used to skip data points.
- The strobedelay parameter (optional), which lets you set a delay between the skipstart time and the first strobe point

Telling the Spectre Simulator How Many Data Points to Save

By telling the Spectre simulator to save only every *Nth* data point, you can reduce the size of the results database generated by the Spectre simulator. You tell the Spectre simulator to save every *Nth* data point with the following parameters:

■ With the skipcount parameter, which you set to N to make the Spectre simulator save every Nth data point

Analyses

■ The skipstart parameter, which tells the Spectre simulator when to start skipping parameters

This parameter is also used in strobing.

■ The skipstop parameter, which tells the Spectre simulator when to stop skipping parameters

This parameter is also used in strobing.

Examples of Strobing and Skipping

In the following example, the Spectre simulator starts skipping data points at Time=10 seconds and continues to skip points until Time=35 seconds. During this 25-second period, the Spectre simulator saves only every third data point.

```
ExSkipSt tran skipstart=10 skipstop=35 skipcount=3
```

In this example, the Spectre simulator starts strobing at Time=5 seconds and continues until Time=20 seconds. During this 15-second period, the Spectre simulator saves data points every .10 seconds.

```
ExStrobe tran skipstart=5 skipstop=20 strobeperiod=.10
```

This example is identical to the previous one except that it sets a delay of 2 seconds between the skipstart time and the first strobe point.

```
ExStrobe2 tran skipstart=5 skipstop=20 strobeperiod=.10 strobedelay=2
```

Data Compression

Some circuits, such as mixed analog and digital designs and circuits with switching power supplies, have substantial amounts of signal latency. If unchanged signal values for these circuits are repetitively written for each time point to a transient analysis output file, this output file can become very large. You can reduce the size of output files for such transient analyses with the Spectre simulator's data compression feature. With data compression, the Spectre simulator writes output data for a signal only when the value of that signal changes.

 
Using data compression is not always appropriate. The Spectre simulator writes fewer signal values when you turn on data compression, but it must write more data for every signal value it records. For circuits with small amounts of signal latency, data compression might actually increase the size of the output file.

You turn on data compression by adding the parameter compression=yes to the transient analysis command line in a Spectre netlist.

```
DoTran_z12 tran start=0 stop=.003 step=0.00015 maxstep=6e-06 compression=yes
```

Analyses

You cannot apply data compression to operating-point parameters, including terminal currents that are calculated internally rather than with current probes. If you want data compression for terminal currents, you must specify that these currents be calculated with current probes. You can specify that all currents be calculated with current probes by placing useprobes=yes in an options statement.



Adding probes to circuits that are sensitive to numerical noise might affect the solution. In such cases, an accurate solution might be obtained by reducing reltol.

Telling Spectre to Save Operating-Point Data at Specific Times

In addition to saving operating-point data in a dc analysis, Spectre allows this data to be saved during a transient analysis. This data is saved as a waveform and can be plotted along with node voltages and other output data. See <u>Chapter 8</u>, "Specifying Output Options," to learn how to select and save this data. Often, all that is needed is the operating data at specific times, which can be achieved by linking an info analysis with the tran analysis.

To control the amount of data produced for operating-point parameters, use the following two transient analysis parameters to specify at which time points you would like to save operating point output for all devices:

```
infotimes=vector of numbers
infoname=analysis name
```

where analysis name points to an info analysis.

For example:

```
mytran tran stop=30n infotimes=[10n 25n] infoname=opinfo opinfo info what=oppoint where=rawfile
```

The opinfo statement is called at 10 and 25 nanoseconds. The data for all devices is reported at these specified time points.

Pole Zero Analysis

The pole zero analysis linearizes the circuit about the DC operating point and computes the poles and zeros of the linearized network. The analysis generates a finite number of poles and zeroes, each being a complex number. If you sweep a parameter, the parameter values corresponding to the current iteration are printed.

Analyses

The pole zero analysis works best on small to medium sized circuits (circuits with less than a thousand equations). If you run a pole zero analysis on a frequency dependent component (element whose AC equivalent varies with frequency, such as transmission line or BJT with excess phases), the Spectre circuit simulator approximates the component as AC equivalent conductance and evaluates conductance at 1Hz.

You can set up and run a pole zero analysis through the Analog Design Environment. For more information, see the *Analog Design Environment User Guide*.

Syntax

```
analysisName pz [(pnode nnode)] ...
```

where

analysisName Name of analysis.

pnode nnode Nodes in the circuit whose difference is the output of the transfer

function for which zeroes are to be calculated.

If you do not specify the input source, the Spectre circuit simulator performs only the pole analysis. For a detailed description of the parameters, see spectre -h pz.

Example 1

myPZ1 pz

Performs pole analysis.

Example 2

```
mypz2 (n1 n2) pz iprobe=VIN
```

Performs pole zero analysis for a circuit whose input is VIN and output is the voltage difference between nodes n1 and n2.

Example 3

```
mypz3 (n1 n2) pz iprobe=I1 param=temp start=25 stop=100 step=25
```

Performs pole zero analysis for a circuit whose input is I1 and output is is the voltage difference between nodes n1 and n2.

Analyses

Output Log File

The output log file contains the following information:

- Complex numbers for poles
- Complex numbers for zeroes
- Gain for zeroes
- Quality factor Q, which can be defined as:

$$Qfactor = (sign)0.5 \left(\left(\frac{im}{re} \right)^2 + 1 \right)^{0.5}$$

where sign is 1 if real < 0 and sign is -1 if real > 0. When real is 0, Qfactor is not defined.

If the output of the pole zero analysis contains positive real part poles indicating an unstable circuit, the label **RHP is appended to those poles. An example is shown below:

	Poles	(Hertz)		
	Real	Imaginary		Qfactor
1	4.5694e+10	0	**RHP	-0.5
2	4.2613e+10	0	**RHP	-0.5
3	1.4969e+10	0	**RHP	-0.5
4	1.4925e+10	0	**RHP	-0.5
5	1.0167e+10	0	**RHP	-0.5
6	1.0165e+10	0	**RHP	-0.5
7	7.3469e+09	0	**RHP	-0.5
8	7.3469e+09	0	**RHP	-0.5
9	-1.0061e+09	0		0.5
10	-1.0061e+09	0		0.5
11	-1.0235e+09	0		0.5

Other Analyses (sens, fourier, dcmatch, and stb)

There are four analyses in this category: sens, fourier, dcmatch, and stb.

Analyses

Sensitivity Analysis

You can supplement the analysis information you automatically receive with the AC and DC analyses by placing sens statements in the netlist. Output for the sens command is sent to the rawfile or to an ASCII file that you can specify with the +sensdata <filename> option of the spectre command.

■ If you set senstype=partial, Spectre calculates partial sensitivity. This determines the sensitivity of output variables to input design parameters. Results are expressed as a ratio of the change in an output analysis variable to the change in an input design parameter. For example, if V is the output value, and P is the input design parameter, sensitivity is computed as follows:

$$S_{V,P} = \frac{dV}{dP}$$

■ If you set senstype=normalized, Spectre calculates normalized sensitivity, which removes the dependence of results on the magnitude of the output variable and input design parameters. Normalized sensitivity is computed as follows:

$$S_{V, P} = \frac{P}{V} \frac{dV}{dP}$$

$$S_{V,P} = P \frac{dV}{dP}$$
 if V=0

$$S_{V, P} = \frac{1}{V} \frac{dV}{dP}$$
 if P=0

When both P and V are zero, partial sensitivity is used.

Formatting the sens Command

You format the sens command as follows

```
sens [ ( output_variables_list ) ] [ to
( design_parameters_list ) ] [ for ( analyses_list ) ]
```

where

```
output\_variables\_list = ovar_1 \ ovar_2 \dots
design\_parameters\_list = dpar_1 \ dpar_2 \dots
analyses\_list = ana_1 \ ana_2 \dots
```

Analyses

The $ovar_i$ are the output variables whose sensitivities are calculated. These are normally node names, deviceInstance:parameter or modelName:parameter specifications. Examples are 5, n1, and Qout:betadc.

The $dpar_j$ are the design parameters to which the output variables are sensitive. You can specify them in a format similar to $ovar_i$. However, they must be input parameters that you can specify (for example, R1:r). If you do not specify a to clause, sensitivities of output variables are calculated with respect to all available instance and model parameters.

Note: The method for specifying design parameters and output variables is described in more detail in the documentation for the save statement in <u>Chapter 8</u>, "Specifying Output Options."

The following table shows you the types of design and output parameters that are normally used for both AC and DC analyses:

	AC Analysis	DC Analysis
Design	Instance parameters	Instance parameters
parameters	Model parameters	Model parameters
Output parameters	Node voltages	Node voltages
	Branch currents	Branch currents
		Instance operating-point parameters

You can also specify device instances or models as design parameters without further specifying parameters, but this approach might result in a number of error messages. The Spectre simulator attempts sensitivity analysis for every device parameter and sends an error message for each parameter that cannot be varied. The Spectre simulator does, however, perform the requested sensitivity analysis for appropriate parameters.

The ana_k are the analyses for which sensitivities are calculated. These can be analysis instance names (for example, opBegin and ac2) or analysis type names (for example, DC and AC).

Examples of the sens Command

The following examples illustrate sens command format:

```
sens (q1:betadc 2 Out) to (vcc:dc nbjt1:rb) for (analDC)
```

This command computes DC sensitivities of the betade operating-point parameter of transistor q1 and of nodes 2 and Out to the de voltage level of voltage source vec and to the

Analyses

model parameter rb of nbjt1. The values are computed for DC analysis analDC. The results are stored in the files analDC.vcc:dc and analDC.nbjt1:rb.

```
sens (1 n2 7) to (q1:area nbjt1:rb) for (analAC)
```

This command computes AC sensitivities of nodes 1, n2, and 7 to the area parameter of transistor q1 and to the model parameter rb of nbjt1. The values are computed for each frequency of the AC analysis analAC. The results are stored in the files analAC.q1:area and analAC.nbjt1:rb.

```
sens (vbb:p q1:int_c q1:gm 7) to (q1:area nbjt1:rb) for (analDC1)
```

This command computes DC sensitivities of the branch current vbb:p, the operating-point parameter gm of transistor q1, the internal collector voltage q1:int_c, and the node 7 voltage to the instance parameter q1:area and the model parameter nbjt:1:rb. The values are computed for analysis analDC1.

```
sens (1 n2 7) for (analAC)
```

This command computes the AC sensitivities of nodes 1, n2, and 7 to all available device and model parameters.

Note: This can result in a lot of information.

Fourier Analysis

The ratiometric Fourier analyzer measures the Fourier coefficients of two different signals at a specified fundamental frequency without loading the circuit. The algorithm used is based on the Fourier integral rather than the discrete Fourier transform and therefore is not subject to aliasing. Even on broad-band signals, it computes a small number of Fourier coefficients accurately and efficiently. Therefore, this Fourier analyzer is suitable on clocked sinusoids generated by sigma-delta converters, pulse-width modulators, digital-to-analog converters, sample-and-holds, and switched-capacitor filters as well as on the traditional low-distortion sinusoids produced by amplifiers or filters.

The analyzer is active only during a transient analysis. For each signal, the analyzer prints the magnitude and phase of the harmonics along with the total harmonic distortion at the end of the transient analysis. The total harmonic distortion is found by summing the power in all of the computed harmonics except DC and the fundamental. Consequently, the distortion is not accurate if you request an insufficient number of harmonics The Fourier analyzer also prints the ratio of the spectrum of the first signal to the fundamental of the second, so you can use the analyzer to compute large signal gains and immittances directly.

If you are concerned about accuracy, perform an additional Fourier transform on a pure sinusoid generated by an independent source. Because both transforms use the same time points, the relative errors measured with the known pure sinusoid are representative of the

Analyses

errors in the other transforms. In practice, this second Fourier transform is performed on the reference signal. To increase the accuracy of the Fourier transform, use the points parameter to increase the number of points. Tightening reltol and setting errpreset=conservative are two other measures to consider.

The accuracy of the magnitude and phase for each harmonic is independent of the number of harmonics computed. Thus, increasing the number of harmonics (while keeping points constant) does not change the magnitude and phase of the low order harmonics, but it does improve the accuracy of the total harmonic distortion computation. However, if you do not specify points, you can increase accuracy by requesting more harmonics, which creates more points.

The large number of points required for accurate results is not a result of aliasing. Many points are needed because a quadratic polynomial interpolates the waveform between the time points. If you use too few time points, the polynomials deviate slightly from the true waveform between time points and all of the computed Fourier coefficients are slightly in error. The algorithm that computes the Fourier integral does accept unevenly spaced time points, but because it uses quadratic interpolation, it is usually more accurate using time steps that are small and nearly evenly spaced.

This device is not supported within altergroup.

Instance Definition

```
Name [p] [n] [pr] [nr] ModelName parameter=value ...

Name [p] [n] [pr] [nr] fourier parameter=value ...
```

The signal between terminals p and n is the test or numerator signal. The signal between terminals pr and nr is the reference or denominator signal. Fourier analysis is performed on terminal currents by specifying the term or refterm parameters. If both term and p or n are specified, then the terminal current becomes the numerator and the node voltages become the denominator. By mixing voltages and currents, it is possible to compute large signal immittances.

Model Definition

```
model modelName fourier parameter=value ...
```

DC Match Analysis

This analysis computes the 3-sigma variance of dc voltages or currents at the specified outputs due to device mismatches. You need to specify the mismatch parameters in the model cards for each device that contributes to the deviation. The analysis uses the device

Analyses

mismatch models to evaluate an equivalent mismatch current source that is placed in parallel to the device. These current sources have zero mean and some variance. The simulation results are displayed in descending order.

For MOSFET devices (bsim3v3), the analysis displays threshold voltage mismatch, current factor mismatch, gate voltage mismatch, and drain current mismatch. For bipolar devices (vbic), it displays base-emitter junction voltage mismatch. For resistors (limited to two terminal resistance), it displays resistor mismatches.

The analysis replaces multiple simulation runs and tedious calculations in the estimation of mismatch performance. It automatically identifies the set of critical matched components during circuit design. For example, when there are matched differential pairs in the circuit, the contribution of two matched transistors will be equal in magnitude and opposite in sign.

Model Definition

```
name [pnode nnode] dcmatch parameter=value ...
```

Examples of the dcmatch command

The following example investigates the 3-sigma dc variation at the output of the current flowing through the device vd, which is a voltage source in the ciruit netlist. dcmm1 is the name of the analysis, dcmatch is a keyword indicating the dc mismatch analysis, and the parameter settings oprobe=vd and porti=1 specify that the output current is measured at the first port of vd. Device mismatch contributions less than 1e-3% of the maximum contribution of all mismatch devices to the output are not reported, as specified by the parameter mth. The mismatch (that is the equivalent mismatch current sources in parallel to all the devices that use model n1) is modeled by the model parameters mvtw1, mvtw12, mvt0, mbew1, and mbe0.

```
dcmm1 dcmatch mth=1e-3 oprobe=vd porti=1
model n1 bsim3v3 type=n ...
+ mvtwl=6.15e-9 mvtwl2=2.5e-12 mvt0=0.0 mbewl=16.5e-9 mbe0=0.0
```

The output of the analysis is displayed on the scree/logfile:

DC Device Matching Analysis 'mismatch1' at vd Local Variation = 3-sigma random device variation

sigmaOut	sigmaVth	sigmaBeta	sigmaVg	sigmalds	
-13.8 uA	2.21 mV	357 m%	2.26 mV	1.71 %	mрб
-6.99 uA	1.63 mV	269 m%	1.68 mV	1.08 %	m01
-2.71 uA	1.11 mV	187 m%	1.16 mV	648 m%	m02
-999 nA	769 uV	131 m%	807 uV	428 m%	$m04x4_4$
-999 nA	769 uV	131 m%	807 uV	428 m%	m04x4_3

Analyses

-999 nA	769 uV	131 m%	807 uV	428 m%	m04x4_2
-999 nA	769 uV	131 m%	807 uV	428 m%	m04x4_1
-999 nA	769 uV	131 m%	807 uV	428 m%	m04
-718 nA	1.09 mV	185 m%	1.15 mV	599 m%	m40x04
-520 nA	1.55 mV	263 m%	1.63 mV	835 m%	m20x04
-378 nA	2.21 mV	376 m%	2.34 mV	1.16 %	m10x04
-363 nA	539 uV	92 m%	567 uV	293 m%	m08
-131 nA	379 uV	64.9 m%	400 uV	203 m%	m16
-46.7 nA	267 uV	45.9 m%	283 uV	142 m%	m32
vd = -3.477	mA +/- 15.91	uA (3-sigma	variation)		

This says that the 3-sigma variation at i(vd) due to the mismatch models is -3.477 mA ± 15.91 μA . The -3.477 mA is the dc operating value of i(vdd), and 15.91 μA is the 3-sigma variation due to the device mismatches. The device mp6 contributes the most to the output variation at -13.8 μA followed by m01 which contributes -6.99 μA . The equivalent 3-sigma Vth variation of mp6 is 2.21 mV. The relative 3-sigma beta (current factor) variation of mp6 is 0.357%. The equivalent 3-sigma gate voltage variation is 2.26 mV. The relative 3-sigma lds variation of mp6 is 1.71%.

The output can also be written in psf, and you can view the table using Analog Design Environment..

The following statement investigates the 3-sigma dc variation on output v(n1,n2). The result of the analysis is printed in a psf file and the cpu statistics of the analysis are generated.

```
dcmm2 n1 n2 dcmatch mth=1e-3 where=rawfile
```

In the following example, the output is the voltage drop across the 1st port of r3.

```
dcmm3 dcmatch mth=1e-3 oprobe=r3 portv=1
```

For the following statement, the output of the analysis is printed to a file *circuitName*.info.what.

```
dcmm4 n3 0 dcmatch mth=1e-3 where=file file="%C:r.info.what"
```

You can use sweep parameters on the dcmatch analysis to perform sweeps of temperature, parameters, model/instance/subcircuit parameters etc.

In the following example, the device parameter w of the device x1.mp2 is swept from 15 μ m to 20 μ m at each increment of 1 μ m.

```
dcmm6 n3 0 dcmatch mth=0.01 dev=x1.mp2 param=w
+ start=15e-6 stop=20e-6 step=1e-6 where=rawfile
```

In the following example, a set of analyses is performed on output v(n3,0) by sweeping the device parameter w of the device mp6 from $80\mu m$ to $90\mu m$ at each increment of $2\mu m$.

```
sweep1 sweep dev=mp6 param=w start=80e-6 stop=90e-6 step=2e-6 {
```

Analyses

```
dcmm5 n3 0 dcmatch mth=1e-3 where=rawfile
}
```

In the following example, temperature is swept from 25°C to 100°C at increment of 25°C.

```
dcmm7 n3 0 dcmatch mth=0.01 param=temp
+ start=25 stop=100 step=25
```

For more information on the dcmatch parameters, see the *Spectre Circuit Simulator Reference*.

If you run the dcmatch analysis in Analog Design Environment, you can access the output through the Results menu and create a table of mismatch contributors.

Stability Analysis

The loop-based and device-based algorithms are available in the Spectre circuit simulator for small-signal stability analysis. Both are based on the calculation of Bode's return ratio. The analysis output are loop gain waveform, gain margin, and phase margin.

Model Definition

```
name stb parameter=value ...
```

Examples of the stb command

```
stbloop stb start=1.0 stop=1e12 dec=10 probe=Iprobe
stbdev stb start=1.0 stop=1e12 dec=10 probe=mos1
```

The analysis parameters are similar to the small-signal ac analysis except for the probe parameter, which must be specified to perform stability analysis. When the probe parameter points to a current probe or voltage source instance, the loop based algorithm will be invoked; when it points to a supported active device instance, the device based algorithm will be invoked.

The gain margin and phase margin are automatically determined from the loop gain waveform by detecting zero-crossing in the gain plot and phase plot. If margins cannot be determined for a particular stability analysis, a log file displays the corresponding reason.

Loop-Based Algorithm

The loop-based algorithm is based on considering the feedback loop as a lumped model with normal and reverse loop transmission. It calculates the true loop gain, which consists of normal loop gain and reverse loop gain. Stability analysis approaches for low-frequency applications assume that signal flows unilaterally through the feedback loop, and they use the

Analyses

normal loop gain to assess the stability of the design. However, the true loop gain provides more accurate stability information for applications involving significant reverse transmission.

You can place a probe component (current probe or zero-DC-valued voltage source) on the feedback loop to identify the loop of interest. The probe component does not change any of the circuit characteristics, and there is no special requirement on the polarity configuration of the probe component.

The loop-based algorithm provides accurate stability information for single-loop circuits and multi-loop circuits in which a probe component can be placed on a critical wire to break all loops. For a multi-loop circuit in which such a wire may not be available, the loop based algorithm can be performed only on individual feedback loops to ensure they are stable. Although the stability of all feedback loops is only a necessary condition for the whole circuit to be stable, the multi-loop circuit tends to be stable if all individual loops are associated with reasonable stability margins.

Device Based Algorithm

The device-based algorithm produces accurate stability information for circuits in which a critical active device can be identified such that nulling the dominant gain source of this device renders the whole network to be passive. Examples are multistage amplifier, single-transistor circuit, and S-parameter characterized microwave component.

This algorithm is often applied to assess the stability of circuit design in which local feedback loops cannot be neglected; the loop-based algorithm cannot be performed for these applications because the local feedback loops are inside the devices and are not accessible from the schematic level or netlist level to insert the probe component.

The supported active device and its dominant gain source are summarized in the table below.

Component	Dominant Controlled Source	Description
b3soipd	gm	Common-source transconductance
bjt	gm	Common-emitter transconductance
bsim1,2,3,3v3	gm	Common-source transconductance
btasoi	gm	Common-source transconductance
cccs	gain	Current gain
ccvs	rm	Transresistance
ekv	gm	Common-source transconductance
gaas	gm	Common-source transconductance

Analyses

Component	Dominant Controlled Source	Description
hbt	dice_dvbe	Intrinsic dlce/dVbe
hvmos	gm	Common-source transconductance
jfet	gm	Common-source transconductance
mos0,1,2,3	gm	Common-source transconductance
tom2	gm	Common-source transconductance
vbic	dic_dvbe	Intrinsic dlc/dVbe
vccs	gm	Transconductance
vcvs	gain	Voltage gain

In general, the stability information produced by the device-based algorithm can be used to assess the stability of that particular device. Most often, a feedback network consists of a global feedback loop and numerous nested local loops around individual transistors. The loop-based algorithm can determine the stability of the whole network as long as all nested loops are stable, while the device-based algorithm can be used to ensure all local loops are stable.

For more information on the stability analysis parameters, see the *Spectre Circuit Simulator Reference*.

Advanced Analyses (sweep and montecarlo)

There are two advanced analyses: sweep and montecarlo.

Sweep Analysis

The sweep analysis sweeps a parameter processing a list of analyses (or multiple analyses) for each value of the parameter.

The sweeps can be linear or logarithmic. Swept parameters return to their original values after the analysis. However, certain other analyses also allow you to sweep a parameter while performing that analysis. For more details, check spectre—h for each of the following

Analyses

analyses. The following table shows you which parameters you can sweep with different analyses.

	Time	TEMP	FREQ	A component instance parameter	A component model parameter	A netlist param-eter
DC analysis (dc)		•		•	•	•
AC analysis (ac)		•	•	•	•	•
Noise analysis (noise)		•	•	•	•	•
S-parameter analysis (sp)		•	•	•	•	•
Transfer function analysis (xf)		•	•	•	•	•
Transient analysis (tran)	•					
Time-domain reflectometer analysis (tdr)	•					
Periodic steady state analysis (pss)	•					
Periodic AC analysis (pac)			•			
Periodic transfer function analysis (pxf)			•			
Periodic noise analysis (pnoise)			•			
Envelope-following analysis (envlp)	•					
Sweep analysis (sweep)		•		•	•	•
DC Match Analysis (dcmatch)		•		•	•	•

Analyses

	Time	TEMP	FREQ	A component instance parameter	A component model parameter	A netlist param-eter
Stability Analysis (stb)		•	•	•	•	•

Note: To generate transfer curves with the DC analysis, specify a parameter and a sweep range. If you specify the oppoint parameter for a DC analysis, the Spectre simulator computes the linearized model for each nonlinear component. If you specify both a DC sweep and an operating point, the operating point information is generated for the last point in the sweep.

Setting Up Parameter Sweeps

To specify a parameter sweep, you must identify the component or circuit parameter you want to sweep and the sweep limits in an analysis statement. A parameter you sweep can be circuit temperature, a device instance parameter, a device model parameter, a netlist parameter, or a subcircuit parameter for a particular subcircuit instance.

Within the sweep analysis only, you specify child analyses statements. These statements must be bound with braces. The opening brace is required at the end of the line defining the sweep.

Specifying the Parameter You Want to Sweep

You specify the components and parameters you want to sweep with the following parameters:

Parameter	Description
dev	The name of an instance whose parameter value you want to sweep
sub	The name of the subcircuit instance whose parameter value you want to sweep
mod	The name of a model whose parameter value you want to sweep
param	The name of the component parameter you want to sweep
freq	For analyses that normally sweep frequency (small-signal analyses such as ac), if you sweep some parameter other than frequency, you must still specify a fixed frequency value for that analysis using the $freq$ parameter

Analyses

Parameter	Description
paramset	For the sweep analysis only; allows sweeping of multiple parameters defined by the paramset statement

For all analyses that support sweeping, to sweep the circuit temperature, use param=temp with no dev, mod, or sub parameter. You can sweep a top-level netlist parameter by giving the parameter name with no dev, mod, or sub parameter. You can sweep a subcircuit parameter for a particular subcircuit instance by specifying the subcircuit instance name with the sub parameter and the subcircuit parameter name with the param parameter. You can do the same thing for a particular device instance by using dev for the device instance name or for a particular model by using mod for the device model name.

Note: If frequency is a sweep option for an analysis, the Spectre simulator sweeps frequency if you leave dev, mod, and param unspecified. That is, frequency is the default swept parameter for that analysis.

Specifying Parameter Sets You Want to Sweep

For the sweep analysis only, the paramset statement allows you to specify a list of parameters and their values. This can be referred by a sweep analysis to sweep the set of parameters over the values specified. For each iteration of the sweep, the netlist parameters are set to the values specified by a row. The values have to be numbers, and the parameters' names have to be defined in the input file (netlist) before they are used. The paramset statement is allowed only in the top level of the input file.

The following is the syntax for the paramset statement:

```
Name paramset {
    list of netlist parameters
    list of values foreach netlist parameter
    list of values foreach netlist parameter ...
}
```

Here is an example of the paramset statement:

```
parameters p1=1 p2=2 p3=3
data paramset {
    p1 p2 p3
    5 5 5
    4 3 2
}
```

Combining the paramset statement with the sweep analysis allows you to sweep multiple parameters simultaneously, for example, power supply voltage and temperature.

Analyses

Setting Sweep Limits

For all analyses that support sweeping, you specify the sweep limits with the parameters in the following table:

Parameter	Value	Comments
start stop	Start of sweep value (Default=0) End of sweep value	start and stop are used together to specify sweep limits.
center span	Center value of sweep Span of sweep (Default=0)	center and span are used together to specify sweep limits.
step lin	Step size for linear sweeps Number of steps for linear sweeps (Default is 50)	step and lin are used to specify linear sweeps.
dec	Number of points per decade for log sweeps Number of steps for logarithmic sweeps (default is 50)	dec and log are used to specify logarithmic sweeps.
values	Array of sweep values	values specifies each sweep value with a vector of values.

If you do not specify the step size, the sweep is linear when the ratio of the stop to the start values is less than 10 and logarithmic when this ratio is 10 or greater. If you specify sweep limits and a values array, the points for both are merged and sorted.

Examples of Parameter Sweep Requests

This sweep statement uses braces to bound the child analyses statements.

This statement specifies a linear sweep of frequencies from 0 to 0.3 MHz with 100 steps.

```
Sparams sp stop=0.3MHz lin=100
```

The previous statement could be written like this and achieve the same result.

```
Sparams sp center=0.15MHz span=0.3MHz lin=100
```

This statement specifies a logarithmic sweep of frequencies from 1 kHz through 1 GHz with 10 steps per decade.

Analyses

```
cmLoopGain ac start=1k stop=1G dec=10
```

This statement is identical to the previous one except that the number of steps is set to 55.

```
cmLoopGain ac start=1k stop=1G log=55
```

This statement specifies a linear sweep of temperatures from 0 to 50 degrees in 1-degree steps. The frequency for the analysis is 1 kHz.

```
XferVsTemp xf start=0 stop=50 step=1 probe=Rload param=temp freq=1kHz
```

This statement uses a vector to specify sweep values for device Vcc. The values specified for the sweep are 0, 2, 6, 7, 8 and 10.

```
SwpVccDC dc dev=Vcc values=[0 2 6 7 8 10]
```

Monte Carlo Analysis

The montecarlo analysis is a swept analysis with associated child analyses similar to the sweep analysis (see spectre -h sweep). The Monte Carlo analysis refers to "statistics blocks" where statistical distributions and correlations of netlist parameters are specified. (Detailed information on statistics blocks is given in "Specifying Parameter Distributions Using Statistics Blocks" on page 173.) For each iteration of the Monte Carlo analysis, new pseudorandom values are generated for the specified netlist parameters (according to their specified distributions) and the list of child analyses are then executed.

The Cadence design environment Monte Carlo option allows for scalar measurements to be linked with the Monte Carlo analysis. Calculator expressions are specified that can be used to measure circuit output or performance values (such as the slew rate of an operational amplifier). During a Monte Carlo analysis, these measurement statement results vary as the netlist parameters vary for each Monte Carlo iteration and are stored in a scalar data file for postprocessing. By varying netlist parameters and evaluating these measurement statements, the Monte Carlo analysis becomes a tool that allows you to examine and predict circuit performance variations that affect yield.

The statistics blocks allow you to specify batch-to-batch (process) and per- instance (mismatch) variations for netlist parameters. These statistically varying netlist parameters can be referenced by models or instances in the main netlist and can represent IC manufacturing process variation or component variations for board-level designs. The following description gives a simplified example of the Monte Carlo analysis flow:

```
perform nominal run if requested
if any errors in nominal run then stop
for each Monte Carlo iteration {
  if process variations specified then
    apply "process" variation to parameters
  if mismatch variations specified then
    for each subcircuit instance {
      apply "mismatch" variation to parameters
```

Analyses

```
for each child analysis {
  run child analysis
     evaluate any export statements and
     store results in a scalar data file
  }
}
```

The following is the syntax for the Monte Carlo analysis:

```
Name montecarlo parameter=value ... {
    analysis statements ...
    export statements ...
}
```

The Monte Carlo analysis

- Refers to the statistics block(s) for how and which netlist parameters to vary
- Generates statistical variation (random numbers according to the specified distributions)
- Runs the specified child analyses (similar to the Spectre nested sweep analysis), where the child analyses are either
 - ☐ Multiple data-producing child analyses (such as DC or AC analyses)
 - A single sweep child analysis, which itself has child analyses
- Calculates the export quantities

Each Monte Carlo run processes export statements that implicitly refer to the result of the child analyses. These statements calculate scalar circuit output values for performance characteristics, such as slew rate.

Organizes the export data appropriately

Scalar data, such as bandwidth or slew rate, is calculated from an export statement and saved to an ASCII file, which can be used later for plotting a histogram or scattergram.

After the Monte Carlo analysis is complete, all parameters are returned to their original values.

Analyses

Monte Carlo Analysis Parameters

You use the following parameters for your Monte Carlo analysis.

Parameter	Description
numruns	This is the number of Monte Carlo runs to perform (not including the nominal run). The default is 100 runs. The Spectre simulator performs a loop, running the specified child analyses numruns times (or numruns+1 times if the donominal parameter is set to yes) and evaluating any export statements numruns times.
seed	This is the optional starting seed for the random number generator. By always specifying the same seed, you can reproduce a previous experiment. If you do not specify a seed, then each time that you run the analysis, you get different results; that is, a different stream of pseudorandom numbers is generated. If you do not specify a seed, the Spectre simulator uses the Spectre process id (PID) as a seed.

Analyses

Parameter	Description
scalarfile	This parameter specifies the name of an ASCII file where scalar data calculated by the export state-ments (the results of export expressions that resolve to scalar values) is saved. For each iteration of each Monte Carlo child analysis, Spectre writes a line to this ASCII file with one scalar expression per column (for example, slew rate or bandwidth). The default name for this file is <code>name.mcdata</code> , where <code>name</code> is the name of the Monte Carlo analysis instance. The file is created in the <code>psf</code> directory by default unless you specify a path in the filename. This file contains only the matrix of numeric values. The analog design environment Monte Carlo tool can read this ASCII file and plot the data in histograms and scattergrams. When you use the analog design environment Monte Carlo tool to generate the Spectre netlist file, Spectre merges the values of the statistically varying process parameters into this file containing the scalar data. The analog design environment statistical plotting tool can later read the data and create scatter plots of the statistically varying process parameters against each other or against the results of the export expressions. You can then see correlations between process parameter variations and circuit performance variations. This data merging takes place whenever the scalarfile and processscalarfile are written in the same directory.
paramfile	This file contains the titles, sweep variable values, and the full expression for each of the columns in scalarfile. The default name for this file is name.mcparam, where name is the name of the Monte Carlo analysis instance. The file is created in the psf directory by default unless you specify some path information in the filename.
saveprocessparams	This specifies (yes or no) whether to save scalar data for statistically varying process parameters that are subject to process variation.

Analyses

Parameter

Description

processscalarfile

If saveprocessparams is set to yes, the process (batch-tobatch) values of all statistically varying parameters are saved to this scalar data file. You can use saveprocessvec to filter out a subset of parameters (in which case the Spectre simulator saves only the parameters specified in saveprocessvec to processscalarfile.) processscalarfile is equivalent to scalarfile, except that the data in scalarfile contains the values of the scalar export statements, whereas the data in processscalarfile contains the corresponding process parameter values. The default name for this file is instname.process.mcdata, where instname is the name of the Monte Carlo analysis instance. This file is created in the psf directory by default unless you specify some path information in the filename. You can load processscalarfile and processparamfile into the analog design statistical postprocessing environment to plot/ verify the process parameter distributions. If you later merge processparamfile with the data in scalarfile, you can then plot export scalar values against the corresponding process parameters by loading this merged file into the analog design statistical postprocessing environment.

processparamfile

This specifies the output file where process parameter scalar data labels are saved. This file contains the titles and sweep variable values for each of the columns in processcalarfile. These titles are the names of the process parameters. processparamfile is equivalent to paramfile, except that paramfile contains the name of the export expressions, whereas processparamfile contains the names of the process parameters. The default name for this file is <code>instname.process.mcparam</code>, where <code>instname</code> is the name of the Monte Carlo analysis instance. This file is created in the psf directory by default unless you specify some path information in the filename.

Analyses

Parameter	Description
saveprocessvec	This specifies an array of statistically varying process parameters (which are subject to process variation) to save as scalar data in processscalarfile. For example, saveprocessvec=[RSHSP TOX]. This acts as a filter so that you do not save all process parameters to the file. If you do not want to filter the list of process parameters, do not specify this parameter.
firstrun	This specifies the run that Monte Carlo begins with. The default is 1. If firstrun is specified as a number n (where n is greater than one), the previous n - 1 iterations are skipped. The Monte Carlo analysis behaves as if the first n - 1 iterations were run without performing the child analyses for those iterations. The subsequent stream of random numbers generated for the remaining iterations is the same as if the first n - 1 iterations were run. By specifying the first iteration number, you can reproduce a particular run or sequence of runs from a previous experiment (for example, to examine an earlier case in more detail).
	Note: To reproduce a run or sequence of runs, you need to specify the same value for the seed parameter.
variations	This parameter specifies the type of statistical variation to apply:
	■ process—batch-to-batch variations only
	■ mismatch—per-instance variations only
	■ all—both process and mismatch variations applied
	The default is process. This assumes that you have specified the appropriate statistical distributions in the statistics block. You cannot request that mismatch variations be applied unless you have specified mismatch statistics in the statistics block; mismatch variations work only on components inside of subcircuits. You cannot request that process variations be applied unless you have specified process statistics in the statistics block. More details on statistics blocks are given in "Specifying Parameter Distributions Using Statistics Blocks" on page 173.

Analyses

Parameter	Description
donominal	This flag determines whether a nominal run of all child analyses is performed (yes or no) before starting the Monte Carlo runs. The default is yes.
	If the flag is set to yes and the Spectre simulator cannot calculate an output expression during the nominal run (for example, convergence problems or incorrect export expressions), the Spectre simulator issues an error message and immediately exits the Monte Carlo analysis.
	If donominal is set to no, the Spectre simulator runs the Monte Carlo iterations without performing a nominal analysis. If there are convergence problems or the output expressions cannot be successfully calculated for the first or any iteration, the Spectre simulator issues a warning and continues with the next iteration of the Monte Carlo loop.
appendsd	This specifies whether to append scalar data to the existing scalarfile (yes) or to overwrite the existing file (no). The default is no. This flag applies to both scalarfile and processscalarfile.

January 2004 170 Product Version 5.0

Analyses

Parameter	Description
savefamilyplots	This flag specifies whether to save the multiple waveform data in parameter storage format (PSF) for family plotting. The default is ${\tt no.}$
	If the flag is set to yes , a separate PSF file is saved for each analysis in each Monte Carlo iteration, in addition to the export scalar results that are saved to the ASCII scalar data file at the end of each iteration. Saving the PSF files between runs allows you to
	 Cloud-plot overlaid waveforms in the analog design environment
	 Define and evaluate new calculator measurements after the simulation has been run using the analog design environment calculator and/or the Analog Waveform Display tool
	Note: This feature can result in many very large data files. You might want to monitor the disk space available after each iteration or perhaps after just the nominal simulation and extrapolate to see if sufficient disk space is available.
	If $\mathtt{savefamilyplots}$ is set to \mathtt{no} , PSF files are overwritten by each Monte Carlo iteration.
annotate	This specifies the degree of annotation, such as percentage done. Possible values are no, title, sweep, or status, similar to the Spectre simulator's nested sweep analysis. Use the maximum value of status to print a summary of which runs did not converge or had problems evaluating export statements and so on. The default is sweep.
title	This specifies the analysis title.

Specifying the First Iteration Number

The advantages of using the firstrun parameter to specify the first iteration number are as follows:

- You can reproduce a particular run from a previous experiment when you know the starting seed and run number but not the corresponding seed.
- If you are a standalone Spectre user, you can run a Monte Carlo analysis of 100 runs, analyze the results, decide they are acceptable, and then decide to do a second analysis

January 2004 171 Product Version 5.0

Analyses

of 100 runs to give a total of 200 runs. By specifying the firstrun=101 for the second analysis, the Spectre simulator retains the data for the first 100 runs and runs only the second 100 runs. This gives the same results and random sequence as if you ran just a single Monte Carlo analysis of 200 runs.

Sample Monte Carlo Analyses

For a Monte Carlo analysis, the Spectre simulator performs a nominal run first, if requested, calculating the specified outputs. If there is any error in the nominal run or in evaluating the export statements after the nominal run, the Monte Carlo analysis stops.

If the nominal run is successful, then, depending on how the variations parameter is set, the Spectre simulator applies process variations to the specified parameters and mismatch variations (if specified) to those parameters for each subcircuit instance. If the export statements are specified, the corresponding performance measurements are saved as a new file or appended to an existing file.

The following Monte Carlo analysis statement specifies (using the default) that a nominal analysis is performed first. The sweep analysis (and all child analyses) are performed, and export statements are evaluated. If the nominal analysis fails, the Spectre simulator gives an error message and will not perform the Monte Carlo analysis. If the nominal analysis succeeds, the Spectre simulator immediately starts the Monte Carlo analysis. The variations parameter specifies that only process variations (variations=process) are applied; this is useful for looking at absolute performance spreads. There is a single child sweep analysis (sw1) so that for each Monte Carlo run, the Spectre simulator sweeps the temperature, performs the dc and transient analyses, and calculates the slew rate. The output of the slew rate calculation is saved in the scalar data file.

The following Monte Carlo analysis statement applies only mismatch variations, which are useful for detecting spreads in differential circuit applications. It does not perform a nominal run.

Note: No temperature sweep is performed.

```
mc2 montecarlo donominal=no variations=mismatch seed=1234 numruns=200 {
    dcop2 dc
    tran2 tran start=0 stop=1u
    export slewrate=oceanEval("slewRate(v(\"vout\"),10n,t,30n,t,10,90 )"
}
```

Analyses

The following Monte Carlo analysis statement applies both process and mismatch variations:

```
mc3 montecarlo saveprocessparams=yes variations=all numruns=200 {
    dcop3 dc
    tran3 tran start=0 stop=1u
    export slewrate=oceanEval("slewRate(v(\"vout\"),10n,t,30n,t,10,90 )"
}
```

Specifying Parameter Distributions Using Statistics Blocks

The statistics blocks are used to specify the input statistical variations for a Monte Carlo analysis. A statistics block can contain one or more process blocks (which represent batch-to-batch type variations) and/or one or more mismatch blocks (which represent on-chip or device mismatch variations), in which the distributions for parameters are specified. Statistics blocks can also contain one or more correlation statements to specify the correlations between specified process parameters and/or to specify correlated device instances (such as matched pairs). Statistics blocks can also contain a truncate statement that can be used for generating truncated distributions.

The statistics block contains the distributions for parameters:

- Distributions specified in the process block are sampled once per Monte Carlo run, are applied at global scope, and are used typically to represent batch-to-batch (process) variations.
- Distributions specified in the mismatch block are applied on a per-subcircuit instance basis, are sampled once per subcircuit instance, and are used typically to represent device-to-device (on chip) mismatch for devices on the same chip.

When the same parameter is subject to both process and mismatch variations, the sampled process value becomes the mean for the mismatch random number generator for that particular parameter.

Note: Statistics blocks can be specified using combinations of the Spectre keywords statistics, process, mismatch, vary, truncate, and correlate. Braces ({}) are used to delimit blocks.

The following example shows some sample statistics blocks, which are discussed after the example along with syntax requirements.

```
// define some netlist parameters to represent process parameters
// such as sheet resistance and mismatch factors
parameters rshsp=200 rshpi=5k rshpi_std=0.4K xisn=1 xisp=1 xxx=20000 uuu=200
// define statistical variations, to be used
// with a MonteCarlo analysis.
statistics {
   process { // process: generate random number once per MC run
        vary rshsp dist=gauss std=12 percent=yes
        vary rshpi dist=gauss std=rshpi_std // rshpi_std is a parameter
```

Analyses

```
vary xxx dist=lnorm std=12
        vary uuu dist=unif N=10 percent=yes
   mismatch { // mismatch: generate a random number per instance
        vary rshsp dist=gauss std=2
        vary xisn dist=gauss std=0.5
        vary xisp dist=gauss std=0.5
    // some process parameters are correlated
   correlate param=[rshsp rshpi] cc=0.6
    // specify a global distribution truncation factor
   truncate tr=6.0
                        // +/- 6 sigma
}
// a separate statistics block to specify correlated (i.e. matched)
//components
// where m1 and m2 are subckt instances.
statistics {
   correlate dev=[m1 m2] param=[xisn xisp] cc=0.8
```

Note: You can specify the same parameter (for example, rshsp) for both process and mismatch variations.

In the process block, the process parameter rshsp is varied with a Gaussian distribution, where the standard deviation is 12 percent of the nominal value (percent=yes). When percent is set to yes, the value for the standard deviation (std) is a percentage of the nominal value. When percent is set to no, the specified standard deviation is an absolute number. This means that parameter rshsp should be varied with a normal distribution, where the standard deviation is 12 percent of the nominal value of rshsp. The nominal or mean value for such a distribution is the current value of the parameter just before the Monte Carlo analysis starts. If the nominal value of the parameter rshsp was 200, the preceding example specifies a process distribution for this parameter with a Gaussian distribution with a mean value of 200 and a standard deviation of 24 (12 percent of 200). The parameter rshpi (sheet resistance) varies about its nominal value with a standard deviation of 0.4 K-ohms/square.

In the mismatch block, the parameter rshsp is then subject to *further* statistical variation on a per-subcircuit instance basis for on-chip variation. Here, it varies a little for each subcircuit instance, this time with a standard deviation of 2. For the first Monte Carlo run, if there are multiple instances of a subcircuit that references parameter rshsp, then (assuming variations=all) it might get a process random value of 210, and then the different instances might get random values of 209.4, 211.2, 210.6, and so on. The parameter xisn also varies on a per-instance basis, with a standard deviation of 0.5. In addition, the parameters rshsp and rshpi are correlated with a correlation coefficient (cc) of 0.6.

Specifying Distributions

Parameter variations are specified using the following syntax:

Analyses

```
vary PAR_NAME dist=type {std=<value> | N=<value>} {percent=yes|no}
```

Three types of parameter distributions are available: Gaussian, log normal, and uniform, corresponding to the type keywords gauss, lnorm, and unif, respectively. For both the gauss and the lnorm distributions, you specify a standard deviation using the std keyword.

The following distributions (and associated parameters) are supported:

■ Gaussian

This distribution is specified using dist=gauss. For the Gaussian distribution, the mean value is taken as the current value of the parameter being varied, giving a distribution denoted by Normal(mean,std). Using the example in "Specifying Parameter Distributions Using Statistics Blocks," parameter rshpi is varied with a distribution of Normal(5k,0.4k). The nominal value for the Gaussian distribution is the value of the parameter before the Monte Carlo analysis is run. The standard deviation can be specified using the std parameter. If you do not specify the percent parameter, the standard deviation you specify is taken as an absolute value. If you specify percent=yes, the standard deviation is calculated from the value of the std parameter multiplied by the nominal value and divided by 100; that is, the value of the std parameter specifies the standard deviation as that percentage of the nominal value.

Log normal

This distribution is specified using dist=lnorm. The log normal distribution is denoted by

```
log(x) = Normal(log(mean), std)
```

where x is the parameter being specified as having a log normal distribution.

Note: log() is the natural logarithm function. For parameter xxx in the example in "Specifying Parameter Distributions Using Statistics Blocks," the process variation is according to

```
log(xxx) = Normal(log(20000), 12)
```

The nominal value for the log normal distribution is the natural log of the value of the parameter before the Monte Carlo analysis is run. If you specify a normal distribution for a parameter P1 whose value is 5000 and you specify a standard deviation of 100, the actual distribution is produced such that

```
log(P) = N(log(5000)100)
```

■ Uniform

This distribution is specified using dist=unif. The uniform distribution for parameter \mathbf{x} is generated according to

```
x = unif(mean-N, mean+N)
```

Analyses

such that the mean value is the nominal value of the parameter x, and the parameter is varied about the mean with a range of \pm N. The standard deviation is not specified for the uniform distribution, but its value can be calculated from the formula td=N/t3). The nominal value for the uniform distribution is the value of the parameter before the Monte Carlo analysis is run. The uniform interval is specified using the parameter td=1. For example, specifying td=11 N=5 for a parameter whose value is 200 results is a uniform distribution in the range td=1200td=13, that is, from 195 to 205. You can also specify td=13, in which case, the range is td=13, that is, from 190 to 210.

Derived parameters that have their default values specified as expressions of other parameters cannot have distributions specified for them. Only parameters that have numeric values specified in their declaration can be subjected to statistical variation.

Parameters that are specified as correlated must have had an appropriate variation specified for them in the statistics block.

For example, if you have the parameters

XISN=XIS+XIB

you cannot specify distribution for XISN or a correlation of this parameter with another.

The percent flag indicates whether the standard deviation std or uniform range N are specified in absolute terms (percent=no) or as a percentage of the mean value (percent=yes). For parameter uuu in the example in "Specifying Parameter Distributions Using Statistics Blocks," the mean value is 200, and the variation is $200 \pm 10\%$ (200), that is, 200 ± 20 . For parameter rshsp, the process variation is given by Normal(200, 12% (200), that is, Normal(200, 24). Cadence recommends that you do not use the percent=yes with the log normal distribution.

Truncation Factor

The default truncation factor for Gaussian distributions (and for the Gaussian distribution underlying the log normal distribution) is 4.0 sigma. Randomly generated values that are outside the range of mean \pm 4.0 sigma are automatically rejected and regenerated until they fall inside the range. You can change the truncation factor using the truncate statement. The following is the syntax:

truncate tr=value

Note: The value of the truncation factor can be a constant or an expression.

Note: Parameter correlations can be affected by using small truncation factors.

Analyses

Multiple Statistics Blocks

You can use multiple statistics blocks, which accumulate or overlay each other. Typically, process variations, mismatch variations, and correlations between process parameters are specified in a single statistics block. This statistics block can be included in a "process" include file, such as the ones shown in the example in "Process Modeling Using Inline Subcircuits" on page 104. A second statistics block can be specified in the main netlist where actual device instance correlations are specified as matched pairs.

The following statistics block can be used to specify the correlations between matched pairs of devices and probably is placed or included into the main netlist by the designer. These statistics are used in addition to those specified in the statistics block in the preceding section so that the statistics blocks "overlay" or "accumulate."

Note: You can use a single statistics block containing both sets of statements; however, it is often more convenient to keep the topology-specific information separate from the process-specific information.

Correlation Statements

There are two types of correlation statements that you can use:

Process parameter correlation statements

The following is the syntax of the process parameter correlation statement:

```
correlate param=[list of parameters] cc=value
```

This allows you to specify a correlation coefficient between multiple process parameters. You can specify multiple process parameter correlation statements in a statistics block to build a matrix of process parameter correlations. During a Monte Carlo analysis, process parameter values are randomly generated according to the specified distributions and correlations.

Instance or mismatch correlation statements (matched devices)

The following is the syntax of the instance or mismatch correlation statement:

```
correlate dev=[list of subckt instances] \{param=[list of parameters]\}\ cc=value
```

where the device or subcircuit instances to be matched are listed in list of subckt instances, and list of parameters specifies exactly which parameters with

Analyses

mismatch variations are to be correlated. Use the instance mismatch correlation statement to specify correlations for particular subcircuit instances. If a subcircuit contains a device, you can effectively use the instance correlation statements to specify that certain devices are correlated (matched) and give the correlation coefficient. You can optionally specify exactly which parameters are to be correlated by giving a list of parameters (each of which must have had distributions specified for it in a mismatch block) or by specifying no parameter list, in which case all parameters with mismatch statistics specified are correlated with the given correlation coefficient. The correlation coefficients are specified in the <value> field and must be between \pm 1.0, not including 1.0 or -1.0.

Note: Correlation coefficients can be constants or expressions, as can std and N when specifying distributions.

Characterization and Modeling

The following statistics blocks can be used with the example in <u>"Process Modeling Using Inline Subcircuits"</u> on page 104 if they are included in the main netlist, anywhere below the main parameters statement. These statistics blocks are meant to be used in conjunction with the modeling and characterization equations in the inline subcircuit example, for a Monte Carlo analysis only.

```
statistics {
    process {
        vary RSHSP dist=gauss std=5
        vary RSHPI dist=lnorm std=0.15
        vary SPDW dist=gauss std=0.25
        vary SNDW dist=gauss std=0.25
    }
    correlate param=[RSHSP RSHPI] cc=0.6
    mismatch {
        vary XISN dist=gauss std=1
        vary XBFN dist=gauss std=1
        vary XRSP dist=gauss std=1
    }
}
statistics {
    correlate dev=[R1 R2] cc=0.75
    correlate dev=[TNSA1 TNSA2] cc=0.75
}
```

Special Analysis (Hot-Electron Degradation)

The Spectre simulator lets you control the age of the circuit when simulating hot-electron degradation. This feature has the following options and restrictions:

Only the transient analysis supports hot-electron calculations.

Analyses

	Hot-	electron calculations are available with the following components:
		MOS—levels 1, 2, and 3
		BSIM—levels 1 and 2
	You	can choose between the following substrate current models for the simulation:
		The Toshiba model
		The BERT model
ana bas	lyses eline	ate the hot-electron degradation of a circuit, you need to run at least two transients. In the first analysis, you establish baseline values for a new circuit. To create this, you set the circuitage parameter to zero (circuitage=0). (circuitage=0 is default value if you leave this parameter unspecified.)
of th	ne ci	subsequent transient analysis, you reset the age of the circuit by changing the value rouitage parameter. You specify circuitage values in years. For example, tage=4.0 specifies a circuit that is 4 years old.
Ho	t-Ele	ectron Degradation Analysis
	•	fy an analysis of hot-electron degradation, you need to provide appropriate er settings:
•	You must be sure the degradation parameter is set to degradation=yes for the instance statement of each component you want to analyze. This parameter takes its default value from the setting in the model statement. (All MOS and BSIM component require model statements as well as instance statements.)	
	You must set all necessary parameters in the model statements of the components you want to analyze. To determine which model parameters you must specify, look at the parameter listings for each component in the Spectre online help (spectre -h). Examine the following subsections:	
		Degradation-related parameters
		The Spectre simulator stress parameters (for Toshiba analysis)
		BERT stress parameters (for BERT analysis)

Analyses



Be careful to set the following parameters correctly: dvthc, dvthe, duoc, and duoe. These are degradation parameters, which are usually obtained from DC stress measurements. Errors in setting these parameters can lead to inaccurate results.

■ You must set the circuitage parameter correctly in the transient analyses. In the following example, the Spectre simulator makes a baseline measurement and then examines changes in circuit behavior after 1, 5, and 10 years.

```
new tran 1n 100n circuitage=0
year1 tran 1n 100n circuitage=1
year5 tran 1n 100n circuitage=5
year10 tran 1n 100n circuitage=10
```

Note: After you establish the baseline value, you can enter subsequent circuitage parameters in any order.

Output Options for Hot-Electron Degradation Analysis

After the transient analyses are completed, the Spectre simulator produces a sorted table of device lifetimes. Two device lifetimes are calculated for each device that receives hot-electron degradation analysis. The first lifetime is based on the threshold voltage, and the second lifetime is based on the low mobility shift.

For each transient analysis in which circuitage is greater than 0, the Spectre simulator generates a second sorted table. This table lists all the degradations of the threshold voltage (V_{th}) , the mobility factor (U_O) , the transconductance (g_m) , and the drain current (I_{ds}) of each device for the period specified in the circuitage parameter.

The degradation of V_{th} is given in absolute values. The degradations of U_o , g_m , and I_{ds} are expressed as a percentage of their original values. All four degradations are compared to failure criteria that you can specify with the model statement parameters <code>crivth</code>, <code>criuo</code>, <code>crigm</code>, and <code>criids</code>. If any degradation is greater than its corresponding failure criterion, the device is listed as having failed.

In the transient analysis, you can also save waveforms of the following quantities for any device:

- Voltage
- Any operating-point parameter
- Stress

Analyses

- Effective device age
- Substrate current

You create these output files with the save statement. You use a waveform display tool, such as the Cadence[®] Analog Waveform Display (AWD) tool, to view the waveforms.

Example of Hot-Electron Degradation

This netlist of an 11-stage ring oscillator demonstrates the statements required to simulate hot-electron degradation in the Spectre simulator. You must properly characterize and extract the degradation parameters dvthe, dvthe, duoc, and duoe. These are usually obtained from DC stress measurements. Because device degradations are power functions of the substrate current, if you do not accurately determine the degradation parameters, the predicted device lifetimes and degradations might lead to false conclusions.

```
* Hot-Electron Degradation Circuit: Spectre degradation model
subckt inv (123)
c1 3 0 0.1p
m1 3 2 1 1 pmen l=1.5u w=30u ad=120p as=75p pd=36u ps=6u
m2 3 2 0 0 nmen l=1.5u w=15u ad=60p as=37.5p pd=23u ps=6u
ends
x1 21 2 3 inv
x2 1 3 4 inv
x3 1 4 5 inv
x4 1 5 6 inv
x5 1 6 7 inv
x6 1 7 8 inv
x7 1 8 9 inv
x8 1 9 10 inv
x9 1 10 11 inv
x10 1 11 12 inv
x11 1 12 2 inv
vdd1 1 0 vsource dc=5.0
vdd 21 0 pulse( 0 5.0 0 0.1m 1n 500n )
.tran 0.1n 10n circuitage=0.0
.tran 0.1n 10n circuitage=4.0
.model nmen nmos level=3 vto=0.6876 gamma=0.5512 kappa=5.0
+kp=0.8675e-4 tox=0.206e-7 nsub=0.197e17 vmax=4e5 theta=0.2
+cbs=10f cbd=10f degramod=spectre degradation=yes
+strc=1.5e-6 sube=1 duoc=0.9 duoe=0.9 wnom=15u lnom=2u
.model pmen pmos level=3 vto=-0.6893 gamma=0.4411 kappa=5.0
+1d = 0.45e-6 \text{ kp} = 0.3269e-4 \text{ tox} = 0.206e-7 \text{ nsub} = 0.197e17 + vmax = 4e5 \text{ theta} = 0.2 \text{ cbs} = 10f
cbd=10f degramod=spectre +degradation=yes strc=3.0e-6 sube=1 duoc=0.9
+duoe=0.9 wnom=30u lnom=2u
save x1.m1:isub x1.m1:stress x1.m1:age
.end
```

Spectre Circuit Simulator User Guide Analyses

The save statement in the previous netlist saves the waveforms of the substrate current, the stress, and the effective device age for transistor $\mathfrak{m}1$ in the $\mathfrak{x}1$ subcircuit. These waveforms are shown in <u>Figure 6-1</u> on page 182, <u>Figure 6-2</u> on page 182, and <u>Figure 6-3</u> on page 183. The ring oscillator output waveform is shown before and after degradation in <u>Figure 6-4</u> on page 183.

Figure 6-1 Transistor m1 Substrate Current

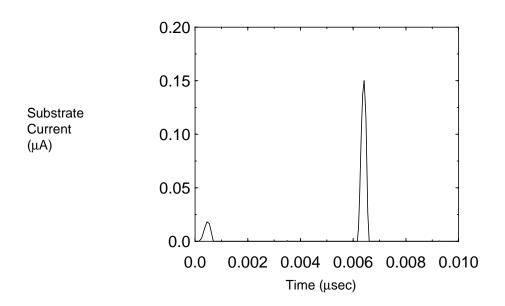


Figure 6-2 Transistor m1 Stress

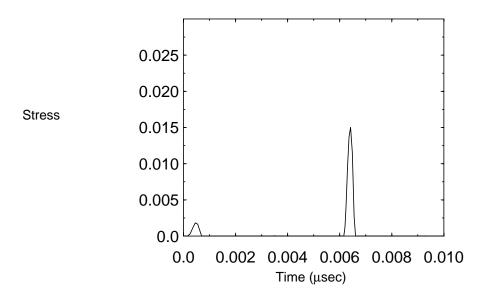


Figure 6-3 Transistor m1 Effective Device Age


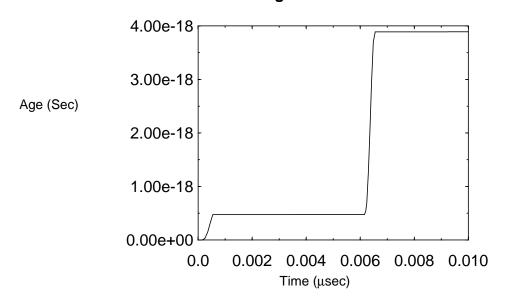


Figure 6-4 Oscillator Output at Two Different Ages

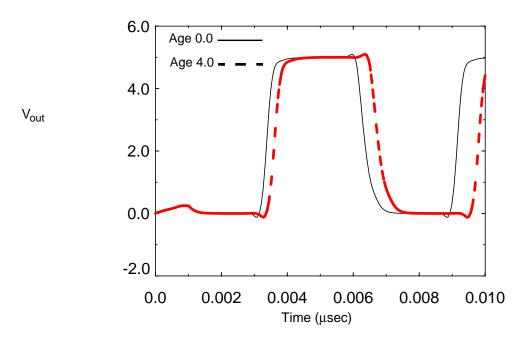

The Spectre simulator also creates two files called $moslev3_dgt_0$ and $moslev3_dgt_4$. 0. These files are the sorted tables that contain the results of hot-electron analysis. The filenames show that the outputs are for level-3 MOSFETs. The numbers 0 and 4.0 in the filenames further specify that the degradations are for circuitage = 0 and

Analyses

circuitage = 4.0, the values requested in the .tran statements. The contents of these two files are shown in the following tables.

Device Lifetime (Years) in Ascending Order

Device	V _{th} -lifetime	U _o -lifetime	Age (sec)
x7.m1	4.5372	3.9493	6.9888e-18
x3.m1	4.563	3.9718	6.9493e-18
x9.m1	4.5865	3.9922	6.9138e-18
x2.m1	4.5935	3.9983	6.9032e-18
x11.m1	4.6045	4.0078	6.8867e-18
x5.m1	4.6269	4.0273	6.8534e-18
x2.m2	5.6758	4.9404	5.5868e-18
x3.m2	6.5803	5.7277	4.8189e-18
x6.m2	6.6639	5.8004	4.7585e-18
x1.m2	6.6998	5.8317	4.733e-18
x10.m2	6.7037	5.8351	4.7302e-18
x4.m2	6.7768	5.8986	4.6792e-18
x8.m2	6.8111	5.9285	4.6556e-18
x4.m1	7.2344	6.297	4.3832e-18
x1.m1	8.1518	7.0956	3.8899e-18
x10.m1	9.0831	7.9062	3.4911e-18
x6.m1	9.0909	7.9129	3.4881e-18
x8.m1	9.3002	8.0952	3.4096e-18
x9.m2	12.981	11.299	2.4428e-18
x5.m2	13.019	11.332	2.4356e-18
x7.m2	13.235	11.52	2.3959e-18
x11.m2	13.291	11.569	2.3858e-18

Spectre Circuit Simulator User Guide Analyses

Device Degradations after Four Years in Descending Order

Device	Delta Vth(V)	Delta Uo(%)	Delta Gm(%)	Delta Id(%)	Status
x7.m1	0.08816	10.115	10.112	10.094	Failed
x3.m1	0.087661	10.064	10.06	10.042	Failed
x9.m1	0.087213	10.018	10.014	9.9962	Failed
x2.m1	0.087079	10.004	10	9.9824	Failed
x11.m1	0.086872	9.9824	9.9789	9.961	Passed
x5.m1	0.086451	9.9389	9.9354	9.9176	Passed
x2.m2	0.070474	8.2693	8.265	8.243	Passed
x3.m2	0.060787	7.2389	7.2351	7.2157	Passed
x6.m2	0.060025	7.1572	7.1534	7.1342	Passed
x1.m2	0.059703	7.1226	7.1189	7.0997	Passed
x10.m2	0.059668	7.1189	7.1151	7.096	Passed
x4.m2	0.059025	7.0498	7.0461	7.0271	Passed
x8.m2	0.058728	7.0178	7.0141	6.9952	Passed
x4.m1	0.055291	6.6471	6.6447	6.6324	Passed
x1.m1	0.049069	5.9699	5.9677	5.9566	Passed
x10.m1	0.044038	5.4161	5.4141	5.4039	Passed
x6.m1	0.044	5.4119	5.41	5.3998	Passed
x8.m1	0.04301	5.3021	5.3002	5.2902	Passed
x9.m2	0.030815	3.9276	3.9255	3.9145	Passed
x5.m2	0.030724	3.9171	3.915	3.9041	Passed
x7.m2	0.030223	3.8597	3.8576	3.8468	Passed
x11.m2	0.030096	3.845	3.8429	3.8322	Passed

7

Control Statements

The Spectre[®] circuit simulator lets you place a sequence of control statements in the netlist. You can use the same control statement more than once. Different Spectre control statements are discussed throughout this manual. The following are control statements:

- The alter and altergroup Statements on page 187
- The assert Statement on page 189
- The check Statement on page 194
- The checklimit Statement on page 195
- The ic and nodeset Statements on page 197
- The info Statement on page 202
- The options Statement on page 208
- The paramset Statement on page 210
- The save Statement on page 211
- The set Statement on page 220
- The shell Statement on page 221
- The statistics Statement on page 221

Control Statements

The alter and altergroup Statements

You modify individual parameters for devices, models, circuit, and subcircuit parameters during a simulation with the alter statement. The modifications apply to all analyses that follow the alter statement in your netlist until you request another parameter modification. You also use the alter statement to change the following options statement temperature parameters and scaling factors:

- temp
- tnom
- scale
- scalem

You can use the altergroup statement to respecify device, model, and circuit parameter statements that you want to change for subsequent analyses. You can also change subcircuits if you do not change the topology.

Changing Parameter Values for Components

To change a parameter value for a component device or model, you specify the device or model name, the parameter name, and the new parameter value in the alter statement. You can modify only one parameter with each alter statement, but you can put any number of alter statements in a netlist. The following example demonstrates alter statement syntax:

SetMag alter dev=Vt1 param=mag value=1

- SetMag is the unique netlist name for this alter statement. (Like many Spectre statements, each alter statement must have a unique name.)
- The keyword alter is the primitive name for the alter statement.
- dev=Vt1 identifies Vt1 as the netlist name for the component statement you want to modify. You identify an instance statement with dev and a model statement with mod. When you use the alter statement to modify a circuit parameter, you leave both dev and mod unspecified.
- param=mag identifies mag as the parameter you are modifying. If you omit this parameter, the Spectre simulator uses the first parameter listed for each component in the Spectre online help as the default.
- value=1 identifies 1 as the new value for the mag parameter. If you leave value unspecified, it is set to the default for the parameter.

Control Statements

Changing Parameter Values for Models

To change a parameter value for model files with the altergroup statement, you list the device, model, and circuit parameter statements as you would in the main netlist. Within an alter group, each model is first defaulted and then the model parameters are updated. You cannot nest alter groups. You cannot change from a model to a model group and vice versa. The following example demonstrates altergroup statement syntax:

```
agl altergroup {
    parameters p1=1
    model myres resistor r1=1e3 af=p1
    model mybsim bsim3v3 lmax=p1 lmin=3.5e-7
}
```

The following example shows the full replacement of models using the altergroup statement:

```
ff_25 altergroup {
    include "./models/corner_ff"
}
```

For each model or device being altered, the parameters are first defaulted and then set to the new values. The parameter dependencies are updated and maintained.

You can include files into the alter group and can use the simulator lang=spice command to switch language mode. For more details on the include command, see the Spectre online help (spectre -h include). A model defined in the netlist has to have the same model name and primitive type (such as bsim2, bsim3, or bjt) in the alter group. For model groups, you can change the number of models in the group. You cannot change from a model to a model group and vice versa. For details on model groups, see the Spectre online help (spectre -h bsim3v3).

Further Examples of Changing Component Parameter Values

This example changes the is parameter of a model named SH3 to the value 1e-15:

```
modify2 alter mod=SH3 param=is value=1e-15
```

The following examples show how to use the param default in an alter statement. The first parameter listed for resistors in the Spectre online help is the default. For resistors, this is the resistance parameter r.

Consequently, if R1 is a resistor, the following two alter statements are equivalent:

```
change1 alter dev=R1 param=r value=50
change1 alter dev=R1 value=50
```

Control Statements

Changing Parameter Values for Circuits

When you change a circuit parameter, you use the same syntax as when you change a device or model parameter except that you do not enter a dev or a mod parameter.

This example changes the ambient temperature to 0°C:

change2 alter param=temp value=0

The following table describes the circuit parameters you can change with the alter statement:

Parameter	Description
temp	Ambient temperature
tnom	Default measurement temperature for component parameters
scalem	Component model scaling factor
scale	Component instance scaling factor

Note: If you change temp or thom using an alter statement, all expressions with temp or thom are reevaluated.

The assert Statement

You can set custom characterization checks to determine the safe operating area of your circuit using the assert statement. You can add these checks to a netlist or model card for transient, DC, and DC sweep analyses. The Spectre circuit simulator notifies you when parameters of instances, models, or expressions fall outside the bounds specified in your check.

You can set checks for any of the following:

- Top-level netlist parameter
- Model parameter
- Instance parameter
- Expressions

The syntax for defining a check is

Control Statements

```
Name assert sub=subcircuit_master
{ dev=instance | mod=model | primitive=primitive }
    { param=parameter_name | modelparam=parameter }
    [ min=value ] [ max=value ]
    [ duration=independentvar_limit ]
    [ message="message"][level= notice | warning | error ]
    [ info= yes | no ]
```

The syntax for defining a check for a netlist parameter is:

```
Name assert { expr=mdl_expr }
    [ min=value ] [ max=value ]
    [ duration=independentvar_limit ]
```

where

Name

Name of the check statement.

sub=subcircuit_master

Subcircuit over which the check is to be applied.

An assert on a subcircuit type applies the check hierarchically to the lowest leaf-level instances. For example, If you define an assert statement with sub and mod, all device instances of the specified model type over all instances of the specified subcircuit type are checked. If the subcircuit type or master instantiates another subcircuit, the devices and models in that instance will be checked as well.

dev=instance

Device or subcircuit instance whose instance parameter is to be checked. A name is first looked up as a subcircuit instance and then as a device instance. If an inline subcircuit and inline device inherits the same hierarchical name, the assert is applied to the subcircuit instance. If, however, the parameter specified is a device instance parameter, the assert is applied to the device instance.

mod=model

Model type whose model or instance parameter is to be checked. If the parameter to be checked is an instance parameter (specified using the param parameter), all instances of the specified model are checked. If the parameter to be checked is a model parameter (specified using the modelparam parameter), only the specified model is checked.

primitive=primitive

Primitive whose model or instance parameter is to be checked. For a complete list of primitives, see spectre -h components.

January 2004 190 Product Version 5.0

Control Statements

param=parameter_name	Device instance or netlist parameter to be checked. It is checked within the scope of the specified sub, dev, mod, or primitive.
modelparam=parameter	Model parameter to be checked.
min=value	Lower limit of the parameter to be checked. The min and max parameters set the limits that border the expected operating region. Default value: - ∞
max=value	Upper limit of the parameter to be checked. The min and max parameters set the limits that border the expected operating region. Default value: $+\infty$
<pre>duration=independent var_limit</pre>	Time period over which the check has to be violated before a warning is displayed. Applicable to transient analyses only.
message="message"]	Message to be printed if the check fails.
<pre>level= notice warning error</pre>	Severity level of the message if the check fails. If the severity level is notice or warning, simulation continues after the message is displayed. If the severity level is error, the Spectre circuit simulator aborts the analysis when the first error-level violation occurs. Default value: warning
info= yes no	When yes, the parameter value is printed and the \min , \max , and $duration$ parameters are ignored. The $info$ parameter is not applicable for expressions. Default: no

The following table displays some ways to use the ${\tt assert}$ parameters.

#	Assert parameters	Description	Applies to
1	dev=device or subckt instance param=paramname	paramname can be an: - Instance parameter - Operating point parameter	The specified instance.
		For subcircuit instances, paramname can be a subcircuit parameter.	

Control Statements

#	Assert parameters	Description	Applies to
2	<pre>mod=mode1 param=paramname</pre>	paramname can be an:Instance parameterOperating point parameter	All instances of the specified model.
3	mod=model modelparam=paramname	paramname must be a model parameter.	The specified model.
4	<pre>primitive=primitive param=paramname</pre>	paramname can be an:Instance parameter.Operating point parameter	All instances of the specified primitive type.
5	<pre>primitive=primitive modelparam=paramname</pre>	paramname must be a model parameter.	All models of the specified primitive type.
6	<pre>sub=subcircuit_master dev=X1 param=paramname</pre>		Device X1 over all instances of the specified subcircuit. Same as row 1.
7	<pre>sub=subcircuit_master mod=model param=paramname</pre>		All instances of the specified model over all instances of the specified subcircuit. Same as row 2.
8	<pre>sub=subcircuit_master mod=mode1 modelparam=paramname</pre>		The specified model over all instances of the specified subcircuit. Same as row 3.
9	<pre>sub=subcircuit_master primitive=primitive param=paramname</pre>		All instances of the specified primitive over all instances of the specified subcircuit Same as row 4.
10	<pre>sub=subcircuit_master primitive=primitive modelparam=paramname</pre>		All models of the specified primitive type over all instances of the specified subcircuit. Same as row 5.

Control Statements

#	Assert parameters	Description	Applies to
11	<pre>sub=subcircuit_master param=paramname</pre>	paramname is a subcircuit parameter.	All instances of the subcircuit.
12	expr=expr	Valid conditional expression or combination of operating points.	Expression-specific instances, node voltages etc.
13	expr=mdl_expr min=value max=value	The expression is evaluated and compared against the min and max values.	,

If you define an assert statement within a subcircuit block without the sub parameter, the check is applied to that block only. If you use the sub parameter, the specified subcircuit master must be defined within the block.

All assert statement violations are written to the Spectre log file (stdout) irrespective of the maxwarnstologfile and maxnotestologfile parameter settings. You can use the checklimitfile option to write the violations to a dedicated file. A message during simulation indicates where the violations are being written. For more information, see spectre -h options.

You can enable or disable checks or groups of checks by the checklimit statement.

Example 1

```
vgs_check assert primitive=bsim3 param=Vgs min=0.0 max=2.5
message="Vgs exceeds bound" level=warning
```

Checks for Vgs over all device instances of the primitive type BSIM3 and prints a warning Vgs exceeds bound if the value of Vgs is less than 0 and higher than 2.5.

Example 2

```
mlvgs_check assert sub=inv dev=ml param=Vgs min=0.0 max=2.5
   message="Vgs exceeds bound" level=notice
```

Checks for Vgs in the device m1 over all instances of the subcircuit type inv in the netlist and prints a notice Vgs exceeds bound if the value of Vgs is less than 0 and higher than 2.5.

Control Statements

Example 3

Netlist:

```
subckt mysubckt a b c
parameters adNum=0.0
.....//contents of the subcircuit
ends mysubckt
```

Check defined for the above netlist:

```
adNum_check assert dev=X1 param=adNum min=0.0 max=5.0 message="Drain parasitic resistor is too high" level=warning
```

Checks the parameter adNum in the subcircuit instance X1 and prints a warning Drain parasitic resistor is too high if the value of adNum is higher than 5.0.

Example 4

```
M1_powercheck assert expr=(max(m1:ids*m1:vds)) max=(max(vin:dc*I(r1))) message="power of M1 exceeds expected load power"
```

Checks that (max(m1:ids*m1:vds)) is less than (max(vin:dc*I(r1))), otherwise prints the warning power of M1 exceeds expected load power.

The check Statement

You can perform a check analysis at any point in a simulation to be sure that the values of component parameters are reasonable. You can perform checks on input, output, or operating-point parameters. The Spectre simulator checks parameter values against parameter soft limits. To use the check analysis, you must also enter the +param command line argument with the spectre command to specify a file that contains the soft limits.

The following example illustrates the syntax of the check statement. It tells the Spectre simulator to check the parameter values for instance statements.

ParamChk check what=inst

- ParamChk is your unique name for this check statement.
- The keyword check is the component keyword for the statement.
- The what parameter tells the Spectre simulator which parameters to check.

Control Statements

The what parameter of the check statement gives you the following options:

Option	Action
none	Disables parameter checking
models	Checks input parameters for all models only
inst	Checks input parameters for all instances only
input	Checks input parameters for all models and all instances
output	Checks output parameters for all models and all instances
all	Checks input and output parameters for all models and all instances
oppoint	Checks operating-point parameters for all models and all instances

The checklimit Statement

You can enable or disable an assert or a group of asserts with the <code>checklimit</code> statement. You can define one or more <code>checklimit</code> statements in the netlist, each enabling or disabling individual asserts. The statement is applied to subsequent transient, DC, and DC sweep analyses until the next <code>checklimit</code> statement appears.

By default, all asserts are enabled. The first <code>checklimit</code> statement that specifically enables asserts also disables the remaining asserts. The <code>checklimit</code> statements are cumulative in effect except when the <code>checkallasserts</code> parameter is specified. When the <code>checkallasserts</code> parameter is specified, all asserts in the netlist are enabled.

When multiple checklimit statements refer to the same assert, the last checklimit statement overrides the previous statements.

The syntax for a checklimit statement is

```
Name checklimit [ enable=["check1" "check2" ... "checkn" ]]
   [ disable=["check1" "check2" ... "checkn" ]]
   [ start=value ][ stop=value ]
   [ severity={none | notice | warning | error} ]
   [ checkallasserts={yes | no} ]
```

Control Statements

where

```
Name
                              Name of the checklimit statement.
enable=[ "check1" "check2" ... "checkn" ]]
                              Specifies the checks to be enabled.
disable=[ "check1" "check2" ... "checkn" ]]
                              Specifies the checks to be disabled.
start=value
                              The beginning time at which the specified check is to be
                              enabled or disabled for transient analyses.
                              The end time at which the specified check is to be enabled
stop=value
                              or disabled for transient analyses.
severity=none | notice | warning | error ]
                              Severity level of the message if the check fails. This
                              overrides the error levels specified for individual checks. If
                              you set the severity to none, the severity level depends on
                              the assert settings.
                              Default: none
                             Enables or disables all the checks in the netlist.
checkallasserts=yes | no
```

For information on defining checks, see "The assert Statement" on page 189.

Examples

This section displays the cumulative effect of the checklimit statements. By default, all asserts are enabled.

```
//assert1, assert2, assert3, assert4, and
//Mychecklimit1 appear in include file "model1"
//assert5, assert6, and assert7, and Mychecklimit2
//appear in include file "model2"
//Mychecklimit3 and Mychecklimit4 appear in the netlist containing
//include files "model1" and "model2"

Mychecklimit1 checklimit disable=["assert2" "assert5"]
```

disables assert2 and assert5 and keeps assert1, assert3, assert4, assert6, and assert7 enabled. This condition remains in effect until the next checklimit statement is encountered.

```
Mychecklimit2 checklimit enable=["assert2" "assert6"] disable=["assert7"]
start=1ns stop=5ns severity=warning
```

Control Statements

specifically enables assert2 and assert6 thereby disabling all the other asserts. assert2 and assert6 are run within 1ns and 5ns, and a warning is displayed if the asserts are violated.

Mychecklimit3 checklimit disable =["assert2"] start=5ns stop=10ns severity=none

Nowassert6 is checked within 5ns and 10ns. The severity level is disabled in this checklimit statement, so assert6 determines the severity level if this check is violated. dcOpdc

runs the DC analysis and checks only assert6. Since this is a DC analysis, the start and stop parameters are ignored.

Mychecklimit4 checklimit checkallasserts=yes disable =["assert1"] start=1ns stop=10ns tran1 tran 10ns

enables all asserts except assert1 and checks them within 1ns and 10ns.

The ic and nodeset Statements

The Spectre simulator lets you provide state information to the DC and transient analyses. You can specify two kinds of state information:

Initial conditions

The ic statement lets you specify values for the starting point of a transient analysis. The values you can specify are voltages on nodes and capacitors, and currents on inductors.

Nodesets

Nodesets are estimates of the solution you provide for the DC or transient analyses. Unlike initial conditions, their values have no effect on the final results. Nodesets usually act only as aids in speeding convergence, but if a circuit has more than one solution, as with a latch, nodesets can bias the solution to the one closest to the nodeset values.

Setting Initial Conditions for All Transient Analyses

You can specify initial conditions that apply to all transient analyses in a simulation or to a single transient analysis. The ic statement and the ic parameter described in this section set initial conditions for all transient analyses in the netlist. In general, you use the ic parameter of individual components to specify initial conditions for those components, and you use the ic statement to specify initial conditions for nodes. You can specify initial conditions for inductors with either method. Specifying cmin for a transient analysis does not satisfy the condition that a node has a capacitive path to ground.

Control Statements

Note: Do not confuse the ic parameter for individual components with the ic parameter of the transient analysis. The latter lets you select from among different initial conditions specifications for a given transient analysis.

Specifying Initial Conditions for Components

You can specify initial conditions in the instance statements of capacitors, inductors, and windings for magnetic cores. The ic parameter specifies initial voltage values for capacitors and current values for inductors and windings. In the following example, the initial condition voltage on capacitor Cap13 is set to two volts:

Cap13 11 9 capacitor c=10n ic=2

Specifying Initial Conditions for Nodes

You use the ic statement to specify initial conditions for nodes or initial currents for inductors. The nodes can be inside a subcircuit or internal nodes to a component.

The following is the format for the ic statement:

```
ic signalName=value ...
```

The format for specifying signals with the ic statement is similar to that used by the save statement. This method is described in detail in <u>"Saving Main Circuit Signals"</u> on page 224. Consult this discussion if you need further clarification about the following example.

```
ic Voff=0 X3.7=2.5 M1:int_d=3.5 L1:1=1u
```

This example sets the following initial conditions:

- The voltage of node Voff is set to 0.
- Node 7 of subcircuit X3 is set to 2.5 V.
- The internal drain node of component M1 is set to 3.5 V. (See the following table for more information about specifying internal nodes.)
- The current for inductor L1 is set to 1µ.

Specifying initial node voltages requires some additional discussion. The following table tells you the internal voltages you can specify with different components.

Component	Internal Node Specifications
BJT	int_c, int_b, int_e
BSIM	int_d, int_s

Control Statements

Component	Internal Node Specifications
MOSFET	int_d, int_s
GaAs MESFET	int_d, int_s, int_g
JFET	int_d, int_s, int_g, int_b
Winding for Magnetic Core	int_Rw
Magnetic Core with Hysteresis	flux

Supplying Solution Estimates to Increase Speed

You use the nodeset statement to supply estimates of solutions that aid convergence or bias the simulation towards a given solution. You can use nodesets for all DC and initial transient analysis solutions in the netlist. The nodeset statement has the following format:

```
nodeset signalName=value ...
```

Values you can supply with the nodeset statement include voltages on topological nodes, including internal nodes, and currents through voltage sources, inductors, switches, transformers, N-ports, and transmission lines.

The format for specifying signals with the nodeset statement is similar to that used by the save statement. This method is described in detail in "Saving Main Circuit Signals" on page 224. Consult this discussion if you need further clarification about the following example.

```
nodeset Voff=0 X3.7=2.5 M1:int_d=3.5 L1:1=1u
```

This example sets the following solution estimates:

- The voltage of node Voff is set to 0.
- Node 7 of subcircuit X3 is set to 2.5 V.
- The internal drain node of component M1 is set to 3.5 V. (See the table in the <u>ic</u> <u>statements</u> section of this chapter for more information about specifying internal nodes.)
- The current for inductor L1 is set to 1μ.

Specifying State Information for Individual Analyses

You can specify state information for individual analyses in two ways:

Control Statements

- You can use the ic parameter of the transient analysis to choose which previous specifications are used.
- You can create a state file that is read by an individual analysis.

Choosing Which Initial Conditions Specifications Are Used for a Transient Analysis

The ic parameter in the transient analysis lets you select among several options for which initial conditions to use. You can choose the following settings:

Parameter Setting	Action Taken
dc	Initial conditions specifiers are ignored, and the existing DC solution is used.
node	The ic statements are used, and the ic parameter settings on the capacitors and inductors are ignored.
dev	The ic parameter settings on the capacitors and inductors are used, and the ic statements are ignored.
all	Both the ic statements and the ic parameters are used. If specifications conflict, ic parameters override ic statements.

Specifying State Information with State Files

You can also specify initial conditions and estimate solutions by creating a state file that is read by the appropriate analysis. You can create a state file in two ways:

- You can instruct the Spectre simulator to create a state file in a previous analysis for future use.
- You can create a state file manually in a text editor.

Telling the Spectre Simulator to Create a State File

You can instruct the Spectre simulator to create a state file from either the initial point or the final point in an analysis. To write a state file from the initial point in an analysis, use the write parameter. To write a state file from the final point, use the writefinal parameter. Each of the following two examples writes a state file named ua741.dc. The first example writes the state file from the initial point in the DC sweep, and the second example writes the state file from the final point in the DC sweep.

Drift dc param=temp start=0 stop=50.0 step=1 readns="ua741.dc" write="ua741.dc"

Control Statements

```
Drift dc param=temp start=0 stop=50.0 step=1 readns="ua741.dc" writefinal="ua741.dc"
```

Creating a State File Manually

The syntax for creating a state file in a text editor is simple. Each line contains a signal name and a signal value. Anything after a pound sign (#) is ignored as a comment. The following is an example of a simple state file:

Reading State Files

To read a state file as an initial condition, use the read transient analysis parameter. To read a state file as a nodeset, use the readns parameter. This example reads the file intCond as initial conditions:

```
DoTran_z12 tran start=0 stop=0.003 \
    step=0.00015 maxstep=6e-06 read="intCond"
```

This second example reads the file soluEst as a nodeset.

```
DoTran_z12 tran start=0 stop=0.003 \
step=0.00015 maxstep=6e-06 readns="soluEst"
```

Special Uses for State Files

State files can be useful for the following reasons:

- You can save state files and use them in later simulations. For example, you can save the solution at the final point of a transient analysis and then continue the analysis in a later simulation by using the state file as the starting point for another transient analysis.
- You can use state files to create automatic updates of initial conditions and nodesets.

The following example demonstrates the usefulness of state files:

```
altTemp alter param=temp value=0
Drift dc param=temp start=0 stop=50.0 step=1 readns="ua741.dc0" write="ua741.dc0"
XferVsTemp xf param=temp start=0 stop=50psobp=Rl\addredad freq=1kHz
readns="ua741.dc0"
```

The first analysis computes the DC solution at T=0C, saves it to a file called ua741.dc0, and then sweeps the temperature to T=50C. The transfer function analysis (xf) resets the

Control Statements

temperature to zero. Because of the temperature change, the DC solution must be recomputed. Without the use of state files, this computation might slow the simulation because the only available estimate of the DC solution would be that computed at T=50C, the final point in the DC sweep. However, by using a state file to preserve the initial DC solution at T=0C, you can enable the Spectre simulator to compute the new DC solution quickly. The computation is fast because the Spectre simulator can use the DC solution computed at T=0C to estimate the new solution. You can also make future simulations of this circuit start quickly by using the state file to estimate the DC solution. Even if you have altered a circuit, it is usually faster to start the DC analysis from a previous solution than to start from the beginning.

The info Statement

You can generate lists of component parameter values with the info statement. With this statement, you can access the values of input, output, and operating-point parameters and print the node capacitance table. These parameter types are defined as follows:

Input parameters

Input parameters are those you specify in the netlist, such as the given length of a MOSFET or the saturation current of a bipolar resistor.

Output parameters

Output parameters are those the simulator computes, such as temperature-dependent parameters and the effective length of a MOSFET after scaling.

Operating-point parameters

Operating-point parameters are those that depend on the operating point.

Node Capacitance Table

The node capacitance table displays the capacitance between the nodes of a circuit.

You can also list the minimum and maximum values for the input, output, and operating-point parameters, along with the names of the components that have those values.

Parameter Setting	Action Taken
what=oppoint	Prints the oppoint parameters. Other possible values are none, inst, input, output, nodes, all, terminals, oppoint, models, and captab.

Control Statements

Parameter Setting	Action Taken
where=logfile	Prints the parameters to the logfile. Other possible values are nowhere, screen, file, and rawfile.
file="%C:r.info.what"	File name when where=file.
save=all	Saves all signals to output. Other possible values are lvl , allpub, $lvlpub$, $selected$, and none.
nestlvl	Specifies levels of subcircuits to report. The default value is infinity.
extremes=yes	Prints minimum and maximum values. Other possible values are no and only.
title=test	Prints test as the title of the analysis in the output file.

Specifying the Parameters You Want to Save

You specify parameters you want to save with the info statement what parameter. You can give this parameter the following settings:

Setting	Action
none	Lists no parameters
inst	Lists input parameters for instances of all components
models	Lists input parameters for models of all components
input	Lists input parameters for instances and models of all components
output	Lists effective and temperature-dependent parameter values
all	Lists input and output parameter values
oppoint	Lists operating-point parameters
terminals	The output is a node-to-terminal map
nodes	The output is a terminal-to-node map
captab	Prints node-to-node capacitance.

The info statement gives you some additional options. You can use the save parameter of the info statement to specify groups of signals whose values you want to list. For more information about save parameter options, consult <u>"Saving Groups of Signals"</u> on page 229.

Control Statements

Finally, you can generate a summary of maximum and minimum parameter values with the extremes option.

Specifying the Output Destination

You can choose among several output destination options for the parameters you list with the info statement. With the info statement where parameter, you can

- Display the parameters on a screen
- Send the parameters to a log file, to the raw file, or to a file you create

When the info analysis is called from a transient analysis or used inside of a sweep, the name of the info analysis is prepended by the parent analysis. If the file option is used to save the results, use the %A percent code (described in "Description of Spectre Predefined Percent Codes" on page 270) in the filename to prevent the file from being overwritten.

For example, the following info statement

```
tempSweep sweep param=temp start=27 stop=127 step=10 {dc1 dc dcInfo info
what=oppoint where=file file="infodata.%A"}
```

produces

```
infodata.tempSweep-000_dcInfo
infodata.tempSweep-001_dcInfo
infodata.tempSweep-002_dcInfo
infodata.tempSweep-003_dcInfo
```

and so on...

Examples of the info Statement

You format the info statement as follows:

```
StatementName info parameter=value
```

The following example tells the Spectre simulator to send the maximum and minimum input parameters for all models to a log file:

```
Inparams info what=models where=logfile extremes=only
```

For a complete description of the parameters available with the info statement, consult the lists of analysis and control statement parameters in the Spectre online help (spectre -h).

Control Statements

Printing the Node Capacitance Table

The Spectre simulator allows you to print node capacitance to an output file. This can help you in identifying possible causes of circuit performance problems due to capacitive loading.

The capacitance between nodes x and y is defined as

$$C_{xy} = - \frac{\partial q_x}{\partial v_y}$$

where q_x is the sum of all charges in the terminal connected to node x, and v_y is the voltage at node y.

The total capacitance at node X is defined as

$$C_{XX} = \frac{\partial q_X}{\partial v_X}$$

where charge $q_{\rm X}$ and voltage $v_{\rm X}$ are at the same node x.

Use the captab analysis to display the capacitance between the nodes in your circuit. This is an option in the info statement. Here is an example of the info settings you would set to perform a captab analysis:

Parameter Setting	Action Taken
what=captab	Performs captab analysis. The default value is oppoint.
where=logfile	Prints the parameters to a logfile. Other possible values are nowhere, screen, and file. The value rawfile is not supported for node capacitance.
title=captab	Prints captab as the title of the analysis in the output file.
threshold=0	Specifies the threshold capacitance value. The nodes for which the total node capacitance is below the threshold value will not be printed in the output table.
detail=node	Displays the total node capacitances. Other possible values are nodetoground and nodetonode.
sort=value	Sorts the captab output according to value. The other possible value is name.

Control Statements

For a complete list of captab parameters and values, consult the Spectre online help (spectre -h).

Use the infotimes option of the transient analysis when you bind the captab analysis to a transient analysis. This runs the captab analysis at specified time intervals. The syntax for the infotimes option is

```
infotimes=[x1, x2...]
```

where x1 and x2 are time points for which the info analysis should be performed. The following is an example of binding a captab analysis to a transient analysis.


```
tran1 tran stop=1\mu infotimes=[0.1\mu 0.5\mu]infoname=capInfo capInfo info what=captab where=file file='capNodes'detail=nodetonode
```

Output Table

The output for the captab analysis is printed in the following format:

- The first column displays the names of the two nodes (From_node:To_Node).
- The second column displays the fixed (linear) capacitance between the two nodes.
- The third column is the variable (non-linear) capacitance between the two nodes.
- The last column displays the total capacitance between the nodes.

Table 7-1 displays the output for the circuit below when detail=nodetonode:

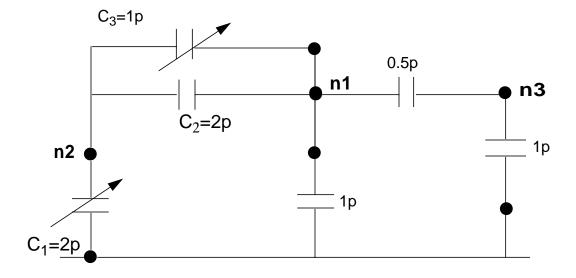

Control Statements

In this circuit, the total capacitance at node 2 (n2:n2 in the table) is

 $C_1 + C_2 + C_3 = 5p$

The total capacitance between node 2 and node 1 (n2:n1) is

 $C_2(Linear) + C_3(Non-Linear) = 3p$

Table 7-1 Node Capacitance Table Sorted by Value

n2:n2	Fixed=2p	Variable=3p	Sum=5p
n2:n1	Fixed=2p	Variable=1p	Sum=3p
n1:n1	Fixed=3.5p	Variable=1p	Sum=4.5p
n1:0	Fixed=1p	Variable=0	Sum=1p
n1:n2	Fixed=2p	Variable=1p	Sum=3p
n1:n3	Fixed=0.5p	Variable=0	Sum=0.5p
n3:n3	Fixed=1.5p	Variable=0	Sum=1.5p
n3:0	Fixed=1p	Variable=0	Sum=1p
n3:n1	Fixed=0.5p	Variable=0	Sum=0.5p

The total node capacitance at nodes 1, 2, and 3 is represented by the rows n1:n1, n2:n2, and n3:n3 respectively.

There is no entry for n3:n2, which means there is no capacitance between these two nodes.

Table 7-1 is sorted by value. The rows are first grouped according to node names – the rows with the same From_Node are kept in a group. The row depicting the total capacitance at each node is always displayed first in the group, and the row displaying the node-to-ground capacitance is second. The remaining rows within each group are sorted in descending order of the Sum value.

Note: If the threshold is set to 2p (thresh=2p), the row n1:n3 will not be printed because the capacitance between the nodes is less than the threshold. The row n1:0 will be printed since the node-to-ground capacitance is always printed. The group n3:n3, n3:0, and n3:n1 will not be printed because the total node capacitance at node 3 (n3:n3) is less than the threshold.

If you sort the table by name (sort=name), it would look as follows:

Control Statements

Table 7-2 Node Capacitance Table Sorted by Name

n1:n1	Fixed=3.5p	Variable=1p	Sum=4.5p
n1:0	Fixed=1p	Variable=0	Sum=1p
n1:n2	Fixed=2p	Variable=1p	Sum=3p
n1:n3	Fixed=0.5p	Variable=0	Sum=0.5p
n2:n2	Fixed=2p	Variable=3p	Sum=5p
n2:0	Fixed=0	Variable=2p	Sum=2p
n2:n1	Fixed=2p	Variable=1p	Sum=3p
n3:n3	Fixed=1.5p	Variable=0	Sum=1.5p
n3:n0	Fixed=1p	Variable=0	Sum=1p
n3:n1	Fixed=0.5p	Variable=0	Sum=0.5p

In this case, the From_Node:To_Node column is sorted alpha-numerically. However, the row depicting the total capacitance at each node is always displayed first in the group, and the row displaying the node-to-ground capacitance is second.

The options Statement

To enter initial parameters for your simulation that you do not specify in your environment variables or on your command line, you use the options statement. You can control parameters in a number of areas with the options statement:

- Parameters that specify tolerances for accuracy
- Parameters that control temperature
- Parameters that select output data
- Parameters that help solve convergence difficulties
- Parameters that control error handling and annotation

For a complete list of the parameters you can set with the options statement, consult the Spectre online help (spectre -h).

Control Statements

options Statement Format

The options statement format is

Name options parameter=value ...

where

Name The unique name you give to the options statement. The

Spectre simulator uses this name to identify this statement in

error or annotation messages

options Primitive name for this control statement.

Parameter=value Value you choose for the parameter. You can enter any number

of parameter specifications with a single options statement.

options Statement Example

Examp options rawfmt=psfbin audit=brief temp=30 \
 save=lvlpub nestlvl=3 rawfile=%C:r.raw useprobes=no

The example sets the rawfmt, audit, temp, save, nestlvl, rawfile, and useprobes parameters for an options statement named Examp. The backslash (\) at the end of the first line is a line continuation character. Nonnumerical parameter values are chosen from the possible values listed in the Spectre online help (spectre -h).

Setting Tolerances

You need to set tolerances if the Spectre simulator's default settings do not suit your needs. This section tells you how to make the needed adjustments. If you need to examine default tolerances for any Spectre parameters, you can find them in the Spectre online help (spectre -h).

Setting Tolerances with the options Statement

The following options statement parameters control error tolerances:

reltol One of the Spectre simulator's convergence criteria is that the

difference between solutions in the last two iterations for a given time must be sufficiently small. With reltol, you set the maximum relative tolerance for values computed in the last two

iterations. The default for reltol is 0.001.

Control Statements

iabstol and vabstol

These parameters set absolute, as opposed to relative, tolerances for differences in the computed values of voltages and currents in the last two iterations. These parameter values are added to the tolerances specified by reltol. They let the Spectre simulator converge when the differences accepted by reltol approach zero. You can also set these values with the quantity statement.

Additional options Statement Settings You Might Need to Adjust

This section provides some explanation of commonly used options statement parameters. It is not a complete listing of options statement parameters. For a complete list, consult the Spectre online help (spectre -h).

tempeffects

This parameter defines how temperature affects the built-in primitive components. It takes the following three values:

vt-Only the thermal voltage $V_t = \frac{kT}{q}$ is allowed to vary with temperature.

tc-The component temperature coefficient parameters (parameters that start with tc, such as tc1, and tc2) are active as well as the thermal voltage. You use this setting when you want to disable the temperature effects for nonlinear devices.

all-All built-in temperature models are enabled.

compatible

This parameter changes some of the device models to be more consistent with the models in other simulators. See <u>Chapter 3</u>, <u>"Component Statements,"</u> of the <u>Spectre Circuit Simulator Reference</u> manual and the <u>options</u> statement parameter listings in the Spectre online help (<u>spectre -h</u>) for more information.

The paramset Statement

For the sweep analysis only, the paramset statement allows you to specify a list of parameters and their values. This can be referred by a sweep analysis to sweep the set of parameters over the values specified. For each iteration of the sweep, the netlist parameters are set to the values specified by a row. The values have to be numbers, and the parameters' names have to be defined in the input file (netlist) before they are used. The paramset statement is allowed only in the top level of the input file.

January 2004 210 Product Version 5.0

Control Statements

The syntax is

```
Name paramset {
    list of netlist parameters
    list of values foreach netlist parameter
    list of values foreach netlist parameter
    list of values foreach netlist parameter ...
}
```

Here is an example of the paramset statement:

```
parameters p1=1 p2=2 p3=3
data paramset {
    p1 p2 p3
    5     5
    4     3     2
}
```

Combining the paramset statement with the sweep analysis allows you to sweep multiple parameters simultaneously; for example, power supply voltage and temperature.

The save Statement

You can save signals for individual nodes and components or save groups of signals.

Saving Signals for Individual Nodes and Components

You can include signals for individual nodes and components in the save list by placing save statements (not to be confused with the save parameter) in your netlist. When you specify signals in a save statement, the Spectre simulator sends these signals to the output raw file, as long as the nestlvl setting does not filter them. In this section, you will learn the following:

- How to save voltages for individual nodes
- How to save all signals for an individual component
- How to save selected signals for an individual component

The syntax for the save statement varies slightly, depending on whether the requested data is from the main circuit or a subcircuit.

Saving Main Circuit Signals

The save statement general syntax has the following arguments. You can specify more than one argument with a single save statement, and you can mix the types of arguments in a single statement.

Control Statements

save signalName...
save compName:modifier...
save subcircuitName:terminalIndex ...

- signalName is generally the netlist name of a node whose voltage you want to save. If the specified node name is not unique (an instance in the netlist has the same name), the Spectre circuit simulator saves the node.
- compName is the netlist name of a component whose signals you want to save.
- modifier specifies signals you want to save for a particular component. It can have the following types of values:
 - A terminal name

Terminal names for components are the names for nodes in component instance definitions. You can find instance definitions for each component in the component parameter listings in the Spectre online help (spectre -h). For example, the following is the instance definition of a microstrip line. The terminal names are t1, b1, t2, and b2.

Name t1 b1 t2 b2 msline parameter=value...

□ A terminal index

The terminal index is a number that indicates where a terminal is in the instance definition. You give the first terminal a terminal index of 1, the second a terminal index of 2, and so on. In this example, the terminal indexes are 1 for sink and 2 for src.

Name sink src isource parameter=value...

- A name of an operating-point parameter (from the lists of parameters for each component in the Spectre online help)
- □ The name of a SpectreHDL/Verilog[©]-An internal variable
- One of the following keywords

currents To save all currents of the device

static To save resistive currents of the device

displacement To save capacitive currents of the device

dynamic To save charge or flux of the device

oppoint To save the operating points of the device

probe To measure current of the device with a probe

Control Statements

pwr	To save power dissipated on a circuit, subcircuit, or device
all	To save all signals of the device

subcircuitName is the instance name of a subcircuit call. Saving terminal currents for subcircuit calls is the same as saving terminal currents for other instance statements except that you must identify individual terminal currents you want to save by the terminal index.

Note: To save all terminal currents for subcircuit calls, you use a save statement or specify the subcktprobelvl parameter in an options statement. The currents=all option of the options statement saves currents only for devices.

Saving Subcircuit Signals

To save a subcircuit,

Give a full path to the subcircuit name. Start with the highest level subcircuit and identify the signals you want to save at the end of the path. Separate each name with a period.

Examples of the save Statement

The following table shows you examples of save statement syntax. When you specify node names, the Spectre simulator saves node voltages. Currents are identified by the terminal node name or the index number.

Exception: Currents through probes take the name of the probe.

save Statement	Action
save 7	Saves voltage for a node named 7.
save Q4:currents	Saves all terminal currents associated with component Q4.
save Q4:static	Saves resistive terminal currents associated with component Q4.
save D8:cap	Saves the junction capacitance for component D8. (Assumes D8 is a diode, and, therefore, cap is an operating-point parameter.)

Control Statements

save Statement	Action
save Q5 D9:oppoint	Saves all signal information for component Q5 and the operating-point parameters for component D9.
save Q1:c	Saves the collector current for component $Q1$. (Example assumes $Q1$ is a BJT, and, therefore, c is a terminal name.)
save Q1:1	Same effect as the previous statement. Saves the collector current for component Q1. Identifies the terminal with its terminal index instead of its terminal name.
save M2:d:displacement	Saves capacitive current associated with the drain terminal of component $M2$. (Example assumes $M2$ is a MOSFET, so d is a terminal name.)
save Q3:currents M1:all	Saves all currents for component $Q3$ and all signals for component $M1$.
save F4.S1.BJT3:oppoint	Saves operating-point parameters for terminal BJT3. BJT3 is in subcircuit S1. Subcircuit S1 is nested within subcircuit F4.

Saving Individual Currents with Current Probes

A current probe is a component that measures the current passing between two nodes. Its effect is like placing an amp meter on two points of a circuit. It creates a new branch in the circuit between the two nodes, forces the voltages on the two nodes to be equal, and then measures the flow of current.


When to Use Current Probes

Use a probe instead of a save statement under the following circumstances:

- If you want increased flexibility for giving currents descriptive names
 - With a current probe, you can name the current anything you want. With a save statement, the name of the current must have a : name suffix.
- If you are saving measurements for current-controlled components
- If you are saving currents for an AC analysis
- If you are saving measurements for a current that passes between two parts of a circuit but not through a terminal

Control Statements

The following example inserts a current probe to measure the current flowing between A and B. Because there is no component between A and B, there is no other way to measure this current except to insert a current probe that has an identical current to the one you want to measure.

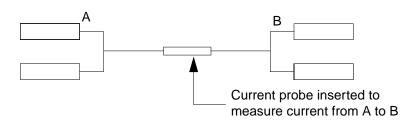

Example

Name in out iprobe

Name The unique netlist name for the current probe component. The

measured current also receives this name.

in Input node of the probe.

out Output node of the probe.

iprobe Primitive name of the component.

In the following example, the current probe measures the current between nodes src and in, names the measured current Iin, and saves Iin to the raw file.

Iin src in iprobe

Note: You can also direct the Spectre simulator to save currents with probes with a save statement option. For further information, see the description of <u>save statement keywords</u> in this chapter.

Saving Power

To save power dissipated on a circuit, subcircuit, or device, you use the pwr parameter. Power is calculated only during DC and transient analyses. The results are saved as a waveform, representing the instantaneous power dissipated in the circuit, subcircuit, or device.

Formatting the pwr Parameter

The syntax for the pwr parameter is illustrated by the following examples.

Control Statements

To save the power dissipated on a device or instance of a subcircuit, the syntax is

save instance_name:pwr

To save the total power, the syntax is

save :pwr

You can explicitly save particular power variables. For example:

save :pwr x1:pwr x1.x2.m1:pwr

This statement saves three power signals:

- total power dissipated (:pwr)
- power dissipated in the x1 subcircuit instance (x1:pwr)
- power dissipated in the x1.x2.m1 MOSFET

Power Options

The pwr parameter in the options statement can also be used to save power. The following table shows the five possible settings for the pwr option:

Setting	Action
all	The total power, the power dissipated in each subcircuit, and the power dissipated in each device is saved.
subckts	The total power and the power dissipated in each subcircuit is saved.
devices	The total power and the power dissipated in each device is saved.
total	The total power dissipated in the circuit is calculated and saved.
none	No power variable is calculated or saved. This is the default setting.

For example:

opts options pwr=total
save x1:pwr

This creates two power signals, :pwr (generated by the options statement) and x1:pwr (generated by the save statement).

Control Statements

Saving Groups of Signals

To save groups of signals as results, use the <code>save</code> and <code>nestlvl</code> parameters. Specify which signals you want to save with the <code>save</code> parameter. Use the <code>nestlvl</code> parameter when you save signals in subcircuits. The <code>nestlvl</code> parameter specifies how many levels deep into the subcircuit hierarchy you want to save signals.

You can set these parameters as follows:

- In options statements or set statements
 - If you set the save and nestlyl parameters with an options or a set statement, the setting applies to signal data from all analyses that follow that statement in the netlist.
- In most analysis statements

If you set the save and nestlvl parameters with an analysis statement, the setting applies to that analysis only. It overrides any previous save or nestlvl settings.

Formatting the save and nestlyl Parameters

The syntax for both the save and nestlyl parameters is illustrated by the following options statement:

setting1 options save=lvlpub nestlvl=2

The save Parameter Options

The following table shows the possible settings for the save parameter:

Setting	Action
none	Does not save any data (currently does save one node chosen at random).
selected	Saves only signals specified with save statements. This is the default setting.
lvlpub	Saves all signals that are normally useful up to nestlvl deep in the subcircuit hierarchy. This option is equivalent to allpub for subcircuits. Normally useful signals include shared node voltages and currents through voltage sources and iprobes.
lvl	Saves all signals up to $nestlvl$ deep in the subcircuit hierarchy. This option is relevant for subcircuits.

Control Statements

Setting	Action
allpub	Saves only signals that are normally useful. Normally useful signals include shared node voltages and currents through voltage sources and iprobes.
all	Saves all signals.

Use lvl or all (instead of lvlpub or allpub) to include internal node voltages and currents through other components that compute current.

Use lvlpub or allpub to exclude signals at internal nodes on devices (the internal collector, base, emitter on a BJT, the internal drain and source on a FET, etc). lvlpub and allpub also exclude the currents through inductors, controlled sources, transmission lines, transformers, etc.

Note: Setting the save parameter value to selected without any save statements in the netlist is not equivalent to specifying no output. Currently, the Spectre simulator saves all circuit nodes and branch currents with this combination of settings. This might change in future releases of the Spectre simulator.

Saving Subcircuit Signals

To save groups of signals for subcircuits, you must adjust two parameter settings:

- Set the save parameter to either lvl or lvlpub.
- Set the nestlvl parameter to the number of levels in the hierarchy you want to save. The default setting for nestlvl is infinity, which saves all levels.

Saving Groups of Currents

The currents parameter of the options statement computes and saves terminal currents. You use it to create settings for currents that apply to all terminals in the netlist.

For two-terminal components, the Spectre simulator saves only the first terminal (entering) currents. You must use a save statement or use the global redundant_currents parameter of the options statement to save data for the second terminal of a two-terminal component. For more information about the save statement, see "Saving Signals for Individual Nodes and Components" on page 211.

Control Statements

Setting the currents Parameter

The currents parameter has the following options:

Setting	Action
selected	Saves only currents that you specifically request with save statements or save parameters. Also saves naturally computed "branch" currents (currents through current probes, voltage sources, and inductors). This is the default setting.
nonlinear	Saves all terminal currents for nonlinear devices, naturally computed "branch" currents (currents through current probes, voltage sources, and inductors), and currents you specify with save statements. Can significantly increase simulation time.
all	Saves all terminal currents and currents available from selected settings to the raw file. Can significantly increase simulation time.

Note: Currently, if you set the currents parameter value to nonlinear or all and do not specify a save parameter value in an options statement, the Spectre simulator saves circuit nodes as well as the currents you requested. This might change in future releases of the Spectre simulator.

Examples of the currents Parameter

You use the following syntax for the currents parameter in the options statement. For more information about the options statement, see the parameter listings in the Spectre online help (spectre -h).

■ The Spectre simulator saves all terminal currents for nonlinear components, currents specified with the save statement, and routinely computed currents.

opt1 options currents=nonlinear

The Spectre simulator saves all terminal currents.

opt2 options currents=all

Setting Multiple Current Probes

Sometimes you might need to set a large number of current probes. This could happen, for example, if you need to save a number of ACs. (Current probes can find such small signal currents when they are not normally computed.) You can specify that all currents be calculated with current probes by placing useprobes=yes in an options statement.

Control Statements

Setting multiple current probes can greatly increase the DC and transient analysis simulation times. Consequently, this method is typically used only for small circuits and AC analysis.



Adding probes to circuits that are sensitive to numerical noise might affect the solution. In such cases, an accurate solution might be obtained by reducing reltol.

Saving Subcircuit Terminal Currents

You use the <code>subcktprobelvl</code> parameter to control the calculation of terminal currents for subcircuits. Current probes are added to the terminals of each subcircuit, up to <code>subcktprobelvl</code> deep. You can then save these terminal currents by setting the <code>save</code> parameter. The <code>nestlvl</code> parameter controls how many levels are returned.

The set Statement

Except for temperature parameters and scaling factors, you use the set statement to modify any options statement parameters you set at the beginning of the netlist. The new settings apply to all analyses that follow the set statement in the netlist.

You can change the initial settings for the state of the simulator by placing a set statement in the netlist. The set statement is similar to the options statement that sets the state of the simulator, but it is queued with the analysis statements in the order you place them in the netlist.

You use the set statement to change previous options or set statement specifications. The modifications apply to all analyses that follow the set statement in the netlist until you request another parameter modification. The set and options statements have many identical parameters, but the set statement cannot modify all options statement parameters. The parameter listings in the Spectre online help tell you which parameters you can reset with the set statement.

The following example demonstrates the set statement syntax. This example turns off several annotation parameters.

Quiet set narrate=no error=no info=no

- Quiet is the unique name you give to the set statement.
- The keyword set is the primitive name for the set statement.
- narrate, error, and info are the parameters you are changing.

Control Statements

Note: If you want to change temp or thom, use the alter statement.

The shell Statement

The shell analysis passes a command to the operating system command interpreter given in the SHELL environment variable. The command behaves as if it were typed into the Command Interpreter Window, except that any %x codes in the command are expanded first.

The default action of the shell analysis is to terminate the simulation.

The following is the syntax for the shell statement:

Name shell parameter=value ...

The statistics Statement

The statistics blocks allow you to specify batch-to-batch (process) and per- instance (mismatch) variations for netlist parameters. These statistically varying netlist parameters can be referenced by models or instances in the main netlist and can represent IC manufacturing process variation or component variations for board-level designs. For more information about the statistics statement, see "Specifying Parameter Distributions Using Statistics Blocks" on page 173.

8

Specifying Output Options

This chapter discusses the following topics:

- Signals as Output on page 223
- Saving Signals for Individual Nodes and Components on page 223
- Saving Groups of Signals on page 229
- <u>Listing Parameter Values as Output</u> on page 232
- Preparing Output for Viewing on page 234
- Accessing Output Files on page 235

Specifying Output Options

Signals as Output

Signals are quantities that the simulator must determine to solve the network equations formulated to represent the circuit. The signals must be known before other output data can be computed.

Signals are mainly the physically meaningful quantities of interest to the user, such as the voltages on the topological nodes and naturally computed branch currents (such as those for inductors and voltage sources).

Other examples of signals are the voltages at the internal nodes of components and the terminal currents computed by using current probes at device or subcircuit terminals.

Note: If there are more than four terminals on a device (such as vbic, hbt, or bta_soi), the fifth and higher terminals do not return actual currents but return 0.0.

You can save signals and include them as simulation results. Signals you can save include the following:

- Voltages at topological nodes
- All currents
- Other quantities the Spectre[®] circuit simulator computes to determine the operating point and other analysis data

Saving Signals for Individual Nodes and Components

You can include signals for individual nodes and components in the save list by placing save statements (not to be confused with the save parameter) in your netlist. When you specify signals in a save statement, Spectre sends these signals to the output raw file, as long as the nestlvl setting does not filter them. In this section, you will learn the following:

- How to save voltages for individual nodes
- How to save all signals for an individual component
- How to save selected signals for an individual component

The syntax for the save statement varies slightly, depending on whether the requested data is from the main circuit or a subcircuit. You will learn about the syntax for main circuit statements first, and then you will learn how to modify the save statement to store signals from subcircuits.

Specifying Output Options

Saving Main Circuit Signals

The save statement general syntax has the following arguments. You can specify more than one argument with a single save statement, and you can mix the types of arguments in a single statement.

```
save signalName...
save compName:modifier...
save subcircuitName:terminalIndex ...
```

- \blacksquare signalName is generally the netlist name of a node whose voltage you want to save.
- compName is the netlist name of a component whose signals you want to save.
- modifier specifies signals you want to save for a particular component. It can have the following types of values:
 - A terminal name

Terminal names for components are the names for nodes in component instance definitions. You can find instance definitions for each component in the component parameter listings in the Spectre online help (spectre -h). For example, the following is the instance definition of a microstrip line. The terminal names are t1, b1, t2, and b2.

Name t1 b1 t2 b2 msline parameter=value...

A terminal index

The terminal index is a number that indicates where a terminal is in the instance definition. You give the first terminal a terminal index of 1, the second a terminal index of 2, and so on. In this example, the terminal indexes are 1 for sink and 2 for src.

Name sink src isource parameter=value...

- □ A name of an operating-point parameter (from the lists of parameters for each component in the Spectre online help)
- ☐ The name of a SpectreHDL/Verilog©-A internal variable
- One of the following keywords:

currents	To save all currents of the device
static	To save resistive currents of the device
displacement	To save capacitive currents of the device

Specifying Output Options

dynamic	To save charge or flux of the device
oppoint	To save the operating points of the device
probe	To measure current of the device with a probe
pwr	To save power dissipated on a circuit, subcircuit, or device
all	To save all signals of the device

subcircuitName is the instance name of a subcircuit call. Saving terminal currents for subcircuit calls is the same as saving terminal currents for other instance statements except that you must identify individual terminal currents you want to save by the terminal index.

Note: To save all terminal currents for subcircuit calls, you use a save statement or specify the subcktprobelvl parameter in an options statement. The currents=all option of the options statement saves currents only for devices.

Saving Subcircuit Signals

To save a subcircuit signal with the save statement, modify the main circuit syntax as follows:

Give a full path to the subcircuit name. Start with the highest level subcircuit and identify the signals you want to save at the end of the path. Separate each name with a period.

Examples of the save Statement

The following table shows you examples of save statement syntax. When you specify node names, the Spectre simulator saves node voltages. Currents are identified by the terminal node name or the index number.

Exception: Currents through probes take the name of the probe.

save Statement	Action
save 7	Saves voltage for a node named 7.
save Q4:currents	Saves all terminal currents associated with component Q4.
save Q4:c:static	Saves resistive terminal currents associated with component Q4.

Specifying Output Options

save Statement	Action
save D8:cap	Saves the junction capacitance for component D8. (Assumes D8 is a diode, and, therefore, cap is an operating-point parameter.)
save Q5 D9:oppoint	Saves all signal information for component Q5 and the operating-point parameters for component D9.
save Q1:c	Saves the collector current for component $Q1$. (Example assumes $Q1$ is a BJT, and, therefore, c is a terminal name.)
save Q1:1	Same effect as the previous statement. Saves the collector current for component Q1. Identifies the terminal with its terminal index instead of its terminal name.
save M2:d:displacement	Saves capacitive current associated with the drain terminal of component $M2$. (Example assumes $M2$ is a MOSFET, so d is a terminal name.)
<pre>save Q3:currents M1:all</pre>	Saves all currents for component Q3 and all signals for component M1.
save F4.S1.BJT3:oppoint	Saves operating-point parameters for terminal BJT3. BJT3 is in subcircuit S1. Subcircuit S1 is nested within subcircuit F4.

Saving Individual Currents with Current Probes

A current probe is a component that measures the current passing between two nodes. Its effect is like placing an amp meter on two points of a circuit. It creates a new branch in the circuit between the two nodes, forces the voltages on the two nodes to be equal, and then measures the flow of current.



Adding probes to circuits that are sensitive to numerical noise might affect the solution. In such cases, an accurate solution might be obtained by reducing reltol.

When to Use Current Probes

Sometimes it is preferable or necessary to use a current probe rather than a save statement. You use a probe instead of a save statement under the following circumstances:

 
Specifying Output Options

If you want increased flexibility for giving currents descriptive names

With a current probe, you can name the current anything you want. With a save statement, the name of the current must have a : name suffix.

- If you are saving measurements for current-controlled components
- If you are saving currents for an AC analysis
- If you are saving measurements for a current that passes between two parts of a circuit but not through a terminal

In the following example, you insert a current probe to measure the current flowing between A and B. Because there is no component between A and B, there is no other way to measure this current except to insert a current probe that has an identical current to the one you want to measure.



Probe Statement Example

To specify a current probe, place a statement with the following syntax in your netlist:

Name in out iprobe

- *Name* is the unique netlist name for the current probe component. The measured current also receives this name.
- in is the name you choose for the input node of the probe.
- out is the name you choose for the output node of the probe.
- The keyword iprobe is the primitive name of the component.

In the following example, the current probe measures the current between nodes src and in, names the measured current Iin, and saves Iin to the raw file.

Iin src in iprobe

Note: You can also direct the Spectre simulator to save currents with probes with a save statement option. For further information, see the description of <u>save statement keywords</u> in this chapter.

Specifying Output Options

Saving Power

To save power dissipated on a circuit, subcircuit, or device, you use the pwr parameter. Power is calculated only during DC and transient analyses. The results are saved as a waveform, representing the instantaneous power dissipated in the circuit, subcircuit, or device.

Formatting the pwr Parameter

The syntax for the pwr parameter is illustrated by the following examples.

To save the power dissipated on a device or instance of a subcircuit, the syntax is

```
save instance_name:pwr
```

To save the total power, the syntax is

```
save :pwr
```

You can explicitly save particular power variables. For example:

```
save :pwr x1:pwr x1.x2.m1:pwr
```

This statement saves three power signals:

- The total power dissipated (:pwr)
- The power dissipated in the x1 subcircuit instance (x1:pwr)
- The power dissipated in the x1.x2.m1 MOSFET

Power Options

The pwr parameter in the options statement can also be used to save power. The following table shows the five possible settings for the pwr option:

Setting	Action
all	The total power, the power dissipated in each subcircuit, and the power dissipated in each device is saved.
subckts	The total power and the power dissipated in each subcircuit is saved.
devices	The total power and the power dissipated in each device is saved.
total	The total power dissipated in the circuit is calculated and saved.
none	No power variable is calculated or saved. This is the default setting.

Specifying Output Options

For example:

```
opts options pwr=total save x1:pwr
```

This creates two power signals, :pwr (generated by the options statement) and x1:pwr (generated by the save statement).

Saving Groups of Signals

To save groups of signals as results, you use the <code>save</code> and <code>nestlvl</code> parameters. You specify which signals you want to save with the <code>save</code> parameter. You use the <code>nestlvl</code> parameter when you save signals in subcircuits. The <code>nestlvl</code> parameter specifies how many levels deep into the subcircuit hierarchy you want to save signals.

You can set these parameters as follows:

- In options statements or set statements
 - If you set the save and nestlyl parameters with an options or a set statement, the setting applies to signal data from all analyses that follow that statement in the netlist.
- In most analysis statements

If you set the save and nestlvl parameters with an analysis statement, the setting applies to that analysis only. It overrides any previous save or nestlvl settings.

Formatting the save and nestlyl Parameters

The syntax for both the save and nestlvl parameters is illustrated by the following options statement:

setting1 options save=lvlpub nestlvl=2

The save Parameter Options

The following table shows the possible settings for the save parameter:

Setting	Action
none	Does not save any data (currently does save one node chosen at random).

Specifying Output Options

Setting	Action
selected	Saves only signals specified with save statements. This is the default setting.
lvlpub	Saves all signals that are normally useful up to nestlv1 deep in the subcircuit hierarchy. This option is equivalent to allpub for subcircuits. Normally useful signals include shared node voltages and currents through voltage sources and iprobes.
lvl	Saves all signals up to ${\tt nestlvl}$ deep in the subcircuit hierarchy. This option is relevant for subcircuits.
allpub	Saves only signals that are normally useful. Normally useful signals include shared node voltages and currents through voltage sources and iprobes.
all	Saves all signals.

Use lvl or all (instead of lvlpub or allpub) to include internal node voltages and currents through other components that compute current.

Use 1v1pub or all pub to exclude signals at internal nodes on devices (the internal collector, base, emitter on a BJT, the internal drain and source on a FET, etc). Ivlpub and all pub also exclude the currents through inductors, controlled sources, transmission lines, transformers, etc.

Note: Setting the save parameter value to selected without any save statements in the netlist is not equivalent to specifying no output. Currently, the Spectre simulator saves all circuit nodes and branch currents with this combination of settings. This might change in future releases of the Spectre simulator.

Saving Subcircuit Signals

To save groups of signals for subcircuits, you must adjust two parameter settings:

- Set the save parameter to either lvl or lvlpub.
- Set the nestlvl parameter to the number of levels in the hierarchy you want to save. The default setting for nestlvl is infinity, which saves all levels.

Saving Groups of Currents

The currents parameter of the options statement computes and saves terminal currents. You use it to create settings for currents that apply to all terminals in the netlist.

Specifying Output Options

For two-terminal components, the Spectre simulator saves only the first terminal (entering) currents. You must use a save statement or use the global redundant_currents parameter of the options statement to save data for the second terminal of a two-terminal component. For more information about the save statement, see "Saving Signals for Individual Nodes and Components" on page 223.

Setting the currents Parameter

The currents parameter has the following options:

Setting	Action
selected	Saves only currents that you specifically request with save statements or save parameters. Also saves naturally computed "branch" currents (currents through current probes, voltage sources, and inductors). This is the default setting.
nonlinear	Saves all terminal currents for nonlinear devices, naturally computed "branch" currents (currents through current probes, voltage sources, and inductors), and currents you specify with save statements. Can significantly increase simulation time.
all	Saves all terminal currents and currents available from selected settings to the raw file. Can significantly increase simulation time.

Note: Currently, if you set the currents parameter value to nonlinear or all and do not specify a save parameter value in an options statement, the Spectre simulator saves circuit nodes as well as the currents you requested. This might change in future releases of the Spectre simulator.

Examples of the currents Parameter

You use the following syntax for the currents parameter in the options statement. For more information about the options statement, see the parameter listings in the Spectre online help (spectre -h).

- The Spectre simulator saves all terminal currents for nonlinear components, currents specified with the save statement, and routinely computed currents.
 - opt1 options currents=nonlinear
- The Spectre simulator saves all terminal currents.

 
opt2 options currents=all

Specifying Output Options

Setting Multiple Current Probes

Sometimes you might need to set a large number of current probes. This could happen, for example, if you need to save a number of ACs. (Current probes can find such small signal currents when they are not normally computed.) You can specify that all currents be calculated with current probes by placing useprobes=yes in an options statement.

Setting multiple current probes can greatly increase the DC and transient analysis simulation times. Consequently, this method is typically used only for small circuits and AC analysis.



Adding probes to circuits that are sensitive to numerical noise might affect the solution. In such cases, an accurate solution might be obtained by reducing reltol.

Saving Subcircuit Terminal Currents

You use the <code>subcktprobelvl</code> parameter to control the calculation of terminal currents for subcircuits. Current probes are added to the terminals of each subcircuit, up to <code>subcktprobelvl</code> deep. You can then save these terminal currents by setting the <code>save</code> parameter. The <code>nestlvl</code> parameter controls how many levels are returned.

Saving All AHDL Variables

If you want to save all the ahdl variables belonging to all the ahdl instances in the design, set the saveahdlvars option to all using a Spectre options command. For example:

Saveahdl options saveahdlvars=all

Listing Parameter Values as Output

You can generate lists of component parameter values with the info statement. With this statement, you can access the values of input, output, and operating-point parameters. These parameter types are defined as follows:

Input parameters

Input parameters are those you specify in the netlist, such as the given length of a MOSFET or the saturation current of a bipolar resistor.

Output parameters

Specifying Output Options

Output parameters are those the simulator computes, such as temperature-dependent parameters and the effective length of a MOSFET after scaling.

Operating-point parameters

Operating-point parameters are those that depend on the operating point.

You can also list the minimum and maximum values for the input, output, and operating-point parameters, along with the names of the components that have those values.

Specifying the Parameters You Want to Save

You specify parameters you want to save with the info statement what parameter. You can give this parameter the following settings:

Setting	Action
none	Lists no parameters.
inst	Lists input parameters for instances of all components.
models	Lists input parameters for models of all components.
input	Lists input parameters for instances and models of all components.
output	Lists effective and temperature-dependent parameter values.
all	Lists input and output parameter values.
oppoint	Lists operating-point parameters.
terminals	The output is a node-to-terminal map.
nodes	The output is a terminal-to-node map.

The info statement gives you some additional options. You can use the save parameter of the info statement to specify groups of signals whose values you want to list. For more information about save parameter options, consult "Saving Groups of Signals" on page 229. Finally, you can generate a summary of maximum and minimum parameter values with the extremes option.

Specifying the Output Destination

You can choose among several output destination options for the parameters you list with the info statement. With the info statement where parameter, you can

Specifying Output Options

- Display the parameters on a screen
- Send the parameters to a log file, to the raw file, or to a file you create

Examples of the info Statement

You format the info statement as follows:

StatementName info parameter=value...

The following example tells the Spectre simulator to send the maximum and minimum input parameters for all models to a log file:

Inparams info what=models where=logfile extremes=only

For a complete description of the parameters available with the info statement, consult the lists of analysis and control statement parameters in the Spectre online help (spectre -h).

Preparing Output for Viewing

In this section, you will learn how to format output data files so you can view them with a postprocessor.

Output Formats Supported by the Spectre Simulator

You can choose from among seven format settings for output data files or directories. The default setting is psfbin.

Option	Format
wsfbin	Cadence [®] waveform storage format (WSF)-binary
wsfascii	Cadence waveform storage format (WSF)-ASCII
psfbin	Cadence parameter storage format (PSF)-binary
psfascii	Cadence parameter storage format (PSF)-ASCII
nutbin	Nutmeg-binary (SPICE3 standard output)
nutascii	Nutmeg-ASCII (SPICE3 standard output)
sst2	Cadence Signal Scan format

Specifying Output Options

In the Nutmeg format, the Spectre simulator writes output data to a raw file. For further information about the Nutmeg format, consult the *Nutmeg Users' Manual* (available from the University of California, Berkeley). In the other formats, the Spectre simulator creates and writes output to a directory of files. The Spectre simulator overwrites existing files and directories. If the Spectre simulator cannot open files or create the necessary directories, it stops.

Defining Output File Formats

You can redefine the output file format in two ways:

- With a spectre command you type from the command line or place in an environment variable
- With an options statement you put in the netlist

You use the options statement in the netlist to override an environment default setting, and you use the spectre command at run time to override any settings in the netlist. The parameter values you enter are the same for either method.

Example Using the spectre Command

The following example shows you how to set format options with the spectre command. This statement, which you type at the command line or place in an environment variable, directs the Spectre simulator to run a simulation on a circuit named circuitfile and format the results in binary Nutmeg.

spectre -format nutbin circuitfile

Example Using the options Statement

You set format options with the rawfmt parameter of the options statement as shown in the following example. This statement, which you place in the netlist, instructs the Spectre simulator to create an output file in binary Nutmeg. For more information about the options statement, see the parameter listings in the Spectre online help (spectre -h).

Settings options rawfmt=nutbin

Accessing Output Files

After you run a simulation, you will want access to results of the various analyses you specified. To access these results, you need to know the names of the files and directories where the Spectre simulator stores these results. In this section, you will learn how the

Specifying Output Options

Spectre simulator names its output directories and files and how you can change these naming conventions to fit your needs. The information in this section applies to psf and wsf formats.

How the Spectre Simulator Creates Names for Output Directories and Files

When you create a netlist, you give the netlist a filename. When you simulate the circuit, the Spectre simulator adds the suffix .raw to this filename to create the name of the output directory for the simulation. For example, results from the simulation of a file named test are stored in a directory named test.raw.

In the output directory, results from each analysis you specify are stored in separate files. The root of each filename is the name you gave the analysis in the netlist, and the suffix for each filename is the type of analysis you specified. For example, if you run the following analysis, the Spectre simulator stores the results in a file named Sparams.sp:

```
Sparams sp start=100M stop=100G dec=100
```

For the sweep and montecarlo analyses, the names of the filenames are a concatenation of the parent analysis name, the iteration number, and the child analysis name. For example,


```
sweep1 sweep param=temp values=[-25 50]{
          dcOp dc
}

creates sweep1_000_dcOp.dc and sweep1_001_dcOp.dc.
```

The following example contains a number of analysis statements from a netlist. It shows the name of the output file the Spectre simulator creates for each analysis. In some cases, the Spectre simulator creates more than one output file for an analysis. This is because the

Specifying Output Options

analysis statement contains a parameter that specifies that certain output information be sent to a file.

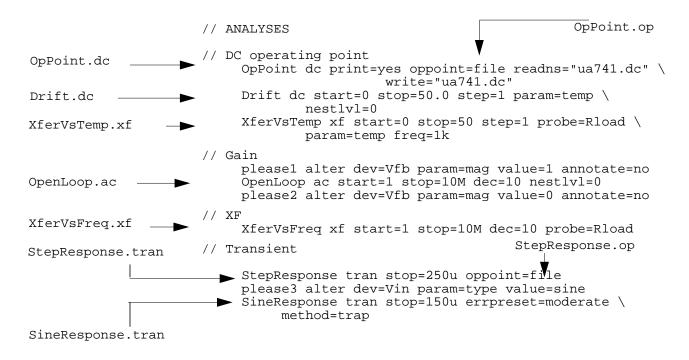

Results File	Description
logFile	Log file (identifies output file format)
OpPoint.op	Nonlinear device DC operating-point file
OpPoint.dc	Node voltages at the operating point
Drift.dc	DC sweep
XferVsTemp.xf	Transfer function versus temperature
OpenLoop.ac	AC analysis
XferVsFreq.xf	Transfer function versus frequency
StepResponse.tran	Transient analysis
StepResponse.op	Operating-point information for transient analysis
SineResponse.tran	Transient analysis

Specifying Output Options

Filenames for SPICE Input Files

If you specify analyses with standard SPICE syntax, the name of the output file for the first instance of each type of analysis is the same as the name shown in the following table:

SPICE Analysis	Output Filename
.OP	opBegin.dc
.AC	frequencySweep.ac
.DC	srcSweep.dc
.TRAN	timeSweep.tran

Note: These names have special significance to the Cadence analog design environment.

If you request multiple unnamed analyses using SPICE syntax, the names are constructed by appending a sequence integer to the name of the analysis type and further adding the dot extension that is appropriate for the analysis. For example, multiple AC analyses would generate this sequence of files: frequencySweep.ac, ac2.ac, ac3.ac, ac4.ac, and so on.

Specifying Your Own Names for Directories

You might want to specify a name for an output directory that is different from the name of your netlist. (For example, if you use the same netlist in more than one simulation, you probably want different names for the output files.) You can specify names in two ways:

- You can specify your directory name from the command line or in an environment variable with the spectre command -raw option. For example, if you want your output directory to be named test.circuit.raw, you start your simulation as follows:

 spectre -raw test.circuit inputFilename
- You can set the rawfile parameter of the options statement. For example, the following options statement creates an output directory named test.circuit.raw:

 Setup options rawfile="test.circuit"

Note: The Spectre simulator has some additional features that help you manage data by letting you systematically specify or modify filenames. For more information about these features, see Chapter 12, "Managing Files."

9

Running a Simulation

This chapter discusses the following topics:

- Starting Simulations on page 240
- Checking Simulation Status on page 241
- Interrupting a Simulation on page 242
- Recovering from Transient Analysis Terminations on page 242
- Controlling Command Line Defaults on page 244

Running a Simulation

Starting Simulations

To start a simulation, you type the spectre command at the command line with the following syntax:

```
spectre options inputfile
```

The spectre command starts a simulation of *inputfile*. The simulation includes any options you request. For a given simulation, the spectre command options override any settings in default environment variables or options statement specifications.

The simplest example is to simulate a circuit with no run options. The following example starts a simulation of the input file test1.

```
spectre test1
```

Specifying Simulation Options

Many simulation runs require more complicated instructions than the previous example. Spectre[®] circuit-simulator-run options can be specified in two ways. Which method you use depends on the run option.

■ You specify some Spectre options by typing a minus (-) in front of the option. The (-V) in the following example specifies that version information be printed for the simulation of circuit test1.

```
spectre -V test1
```

You activate some Spectre options by typing a plus (+) before the option. You deactivate these options by typing a minus (-) before the option. For example, the following spectre command starts a simulation run for circuit test1. In this simulation, the Spectre simulator sets checkpoints but does not print error messages:

```
spectre +checkpoint -error test1
```

Some Spectre options have abbreviations. You can find these abbreviations in <u>Chapter 2</u>, <u>"Spectre Command Options,"</u> of the <u>Spectre Circuit Simulator Reference</u> manual. For example, you can type the previous command as follows:

```
spectre +cp -error test1
```

Specific spectre command options are discussed throughout this guide. For a complete <u>list</u> of options and formats, consult the *Spectre Circuit Simulator Reference* manual.

Running a Simulation

Using License Queuing

You can turn on license queuing by using the lqtimeout parameter. If a license is not available when you begin a simulation job, the Spectre circuit simulator waits in queue for a license for the specified time. If you specify the value 0 for this parameter, the Spectre circuit simulator waits indefinitely for a license. The lqtimeout parameter has no default value for the standalone Spectre circuit simulator. If you invoke Spectre through the Analog Design Environment, the default value for the lqtimeout parameter is 900 seconds.

You can use the lqsleep parameter to specify the interval (in seconds) at which the Spectre circuit simulator should check for license availability. The default value for the lqsleep parameter is 30 seconds. For more information, see spectre -h options.

Determining Whether a Simulation Was Successful

When the Spectre simulator finishes a simulation, it sets the shell status variable to one of the following values:

- 0 If the Spectre simulator completed the simulation normally
- 1 If the Spectre simulator stopped any analysis because of an error
- 2 If the Spectre simulator stopped the simulation early because of a Spectre error condition
- 3 If a Spectre simulation was stopped by you or by the operating system

Checking Simulation Status

If you want to check the status of a simulation during a run, type the following UNIX command:

```
% kill -USR1 PID
```

PID is the Spectre process identification number, which you can find by activating the UNIX ps utility.

The Spectre simulator displays the status information on the screen or sends it to standard output if it cannot write to the screen. If you check the status from a remote terminal, the Spectre simulator also writes the status to the SpectreStatus file in the directory from which the Spectre simulator was called. The Spectre simulator deletes this file at termination of the run.

Running a Simulation

Note: You can also give Spectre netlist instructions to display some status information. For more information, consult the Spectre online help about the sweep and steps options for the annotate parameter. You can set the annotate parameter for most Spectre analyses.

Interrupting a Simulation

If you want to stop the Spectre simulator while a simulation is running, do one of the following:

- Send an INT signal with your interrupt character.
 - The interrupt character is usually Control-c. You can get information about the interrupt character for your system with the UNIX stty utility.
- Send the INT signal with a kill(1) command.

When you use either of these commands, the Spectre simulator prepares the incomplete output data file for reading by the postprocessor and then stops the simulation.



Do not stop the Spectre simulator with a kill -9 command. This command stops the simulation before the Spectre simulator can prepare the output files for reading by the postprocessor.

Recovering from Transient Analysis Terminations

If a transient analysis ends before a successful conclusion, you can recover the work that is completed and restart the analysis. The Spectre simulator needs checkpoint files to perform this recovery. This section tells you about the following ways to create checkpoint files:

- Automatically, with defaults and options statement settings
- From the command line during a simulation
- For specific analyses with netlist instructions

This section also tells you how to restart a simulation after a transient analysis termination.

Customizing Automatic Recovery

By default, the Spectre simulator creates checkpoint files every 30 minutes during a transient analysis. The Spectre simulator deletes these checkpoint files when the simulation ends successfully.

Running a Simulation

Reactivating Automatic Recovery for a Single Simulation

If you have deactivated the default setting (by putting the -checkpoint setting in an environment variable), you can reactivate the default value for a given simulation run with the following procedure:

➤ Type +checkpoint as a command line argument to the spectre command that starts the simulation.

Determining How Often the Spectre Simulator Creates Recovery Files

If you want to change how often the Spectre simulator creates checkpoint files for a particular simulation, or if you want your checkpoint files saved after a successful completion, you should set the <code>ckptclock</code> parameter of the <code>options</code> statement. For more information about the <code>options</code> statement, consult the parameter listings in the Spectre online help (<code>spectre-h</code>).

The following options statement tells the Spectre simulator to create checkpoint files every 3 1/2 minutes for all transient analyses in a simulation. (You indicate parameters for ckptclock in seconds.)

SetCkptInterval options ckptclock=210

Creating Recovery Files from the Command Line

You can create a checkpoint file when a transient analysis is running with a UNIX interrupt signal from the command line.

➤ To create a checkpoint file from the command line, send a USR2 signal with a UNIX kill command.

```
kill -USR2 PID
```

(You find the necessary process identification number by running the UNIX ps utility.)

The Spectre simulator also attempts to write a checkpoint file after QUIT, TERM, INT, or HUP interrupts. After other interrupt signals, the Spectre simulator might be unable to write a checkpoint file.

Setting Recovery File Specifications for a Single Analysis

When you specify a transient analysis, you can also create periodic checkpoint files for that analysis.

Running a Simulation

➤ To create periodic checkpoint files for a transient analysis, set the ckptperiod parameter in the transient analysis statement.

The following example creates a checkpoint every 20 seconds during the transient analysis SineResponse:

SineResponse tran stop=150u ckptperiod=20

Restarting a Transient Analysis

To restart a transient analysis from the last checkpoint file, start the simulation again with the spectre command. Make sure to enter the +recover command line argument.

Controlling Command Line Defaults

There are many run options you can specify with either the spectre command or the options statement. The Spectre simulator provides defaults for many of these options, so you can avoid the inconvenience of specifying many options for each simulation. Spectre defaults are satisfactory for most situations, but, if you have specialized needs, you can also set your own defaults. Spectre command line defaults control the following general areas:

- Messages from the Spectre simulator
- Destination and format of results
- Default values for the C preprocessor
- Default values for percent codes
- Creating checkpoints and initiating recoveries
- Screen display
- Name of the simulator
- Simulation environment (such as opus, edge, and so on)

Examining the Spectre Simulator Defaults

You can identify the various Spectre defaults by consulting the detailed description of spectre command options in the <u>Spectre Circuit Simulator Reference</u> manual.

Running a Simulation

Setting Your Own Defaults

You can set your own defaults by setting the UNIX environment variables <code>%S_DEFAULTS</code> or <code>SPECTRE_DEFAULTS</code>. In <code>%S_DEFAULTS</code>, <code>%S</code> is replaced by the name of the simulator, so this variable is typically <code>SPECTRE_DEFAULTS</code>. However, the name created by the <code>%S</code> substitution is different if you move the executable to a file with a different name or if you call the program with a symbolic or hard link with a different name. Consequently, you can create multiple sets of defaults, which you identify with different <code>%S</code> substitutions. Initially, the Spectre simulator looks for defaults settings in <code>%S_DEFAULTS</code>. If this variable does not exist, it looks for default settings in <code>SPECTRE_DEFAULTS</code>.

To set these environment variables, use the following procedure.

➤ In an appropriate file, such as .cshrc or .login, use the appropriate UNIX command to create settings for the environment variables %S_DEFAULTS or SPECTRE_DEFAULTS. Format the new default settings like spectre command line arguments and place them in quotation marks.

The following example changes the default output format from psfbin to wsfbin. It also sets an option that is normally deactivated. It sends all messages from the Spectre simulator to a %C:r.log file.

```
For csh:
```

```
setenv SPECTRE_DEFAULTS " -format wsfbin +log %C:r.log "
For sh or ksh:
SPECTRE_DEFAULTS=" -format wsfbin +log %C:r.log "
EXPORT SPECTRE_DEFAULTS
```

This second example, a typical use of the SPECTRE_DEFAULTS environment variable, tells the Spectre simulator to do the following:

- Write a log file named cktfile.out, where cktfile is the name of the input file minus any dot extension.
- Use the parameter soft limits file in the Cadence[®] software hierarchy.

```
setenv SPECTRE_DEFAULTS "+log %C:r.out +param /cds/etc/spectre/range.lmts"
```

You can use the default settings to specify alternative conditions for running the Spectre simulator. Suppose you create the following environment variables:

```
setenv SPECTRE_DEFAULTS "+param range.lmts +log %C:r.o -E"
setenv SPECSIM_DEFAULTS "+param corner.lmts =log %C:r.log
    -f psfbin"
```

Running a Simulation

If spectre and specsim are both links to the Spectre executable, and you run the executable as spectre, the Spectre simulator does the following:

- Reads the file range.lmts for the parameter limits
- Directs all messages to the screen *and* to a log file named after the circuit file with .o appended (see <u>Chapter 12</u>, "<u>Managing Files</u>," for more information about specifying filenames)
- Runs the C preprocessor

Running the executable as specsim causes the Spectre simulator to select a different set of defaults and to do the following:

- Read the range limits from the file corner.lmts
- Direct log messages to a file named after the circuit file with .log appended (the =log specification suppresses the log output to the screen)
- Format output files in binary parameter storage format (PSF)

References for Additional Information about Specific Defaults

In some cases, you need to consult other sections of this book before you can set defaults.

- If you want to set default limits for warning messages about parameter values, consult Chapter 13, "Identifying Problems and Troubleshooting." to find information about installing Cadence defaults or creating your own range limits file if you need to customize defaults.
- You can find additional information about percent code defaults in <u>"Description of Spectre Predefined Percent Codes"</u> on page 270.

Overriding Defaults

You can override defaults in the UNIX environment variables for a given simulation with either spectre command line arguments or options statement specifications. The spectre command line arguments also override options statement specifications.

10

Encryption

Encryption allows you to protect your proprietary parameters, subcircuits, models, and netlists, and release your libraries to your customers without revealing sensitive information. Your customers can run simulations in the Spectre circuit simulator with the encrypted netlists – the Spectre circuit simulator does not print any data inside the encrypted blocks. Messages about the encrypted portions of your circuit are suppressed.

You can encrypt netlists that are in the Spectre and Berkeley SPICE formats. To encrypt other SPICE netlists, you must first convert them to Spectre format by using SPP. For more information on coverting netlists, see Chapter 3, "SPICE Compatibility."

You cannot use encryption if you are using the Spectre Compiled-Model Interface (CMI).

This chapter covers the following topics:

- <u>"Encrypting a Netlist"</u> on page 248.
- "Encrypted Information During Simulation" on page 254.

Encryption

Encrypting a Netlist

To encrypt a netlist,

1. Open the netlist you want to encrypt in a text editor.

Note: Make sure your netlist is clean before encrypting it. The Spectre circuit simulator does not support encryption of netlists containing analysis statements.

2. Type protect above the data you want to protect.

keywords.

- **3.** Type unprotect after the last line of the data you want to protect. You must use the protect and unprotect keywords in pairs.
- 4. Save the netlist.
- 5. In a terminal window, type

```
spectre_encrypt [-i input_file] [-o output_file] [-all]
where
```

input_file	The path and name of the netlist to be encrypted. If you do not specify the input file, the netlist from standard input is encrypted.
output_file	The path and name of a file to hold the encrypted netlist. The extension that you use for output_file must be the same extension used on input_file. If you do not specify the output file, the encrypted netlist is displayed as standard output in the terminal window.
-all	Encrypts the entire netlist, ignoring of the protect and unprotect

The Spectre circuit simulator uses the RSA BSAFE library to encrypt your netlist.

The protect and unprotect keywords are replaced with pragma statements in the output netlist. The pragma statements contain important information about encryption such as the method used, the key name, and the beginning and end of the encrypted block. The Spectre circuit simulator uses this information while decrypting the netlist. Hence it is important that you do not modify any pragma statement or the encrypted text between the pragma statements in the output file.

Encryption

What You can Encrypt

You can encrypt signals, netlist and subcircuit parameters, files, devices, and model cards. You can use multiple pairs of protect, unprotect to encrypt different portions of your netlist. The content inside the protect, unprotect block is encrypted and the content outside this block remains the same as the original netlist.

Encrypting a File

You can encrypt a file by adding protect at the beginning and unprotect at the end of the file.

Encrypting Subcircuits

As described in the following sections, you can encrypt an entire subcircuit, part of a subcircuit, or multiple subcircuit blocks.

Encrypting an Entire Subcircuit

To encrypt an entire subcircuit, place protect before the subckt and unprotect after the ends statement. This encrypts the subcircuit name as well as the I/O pins. Since the interfaces are not readable after encryption, Cadence recommends that you add some information on how the interface works outside the protected block so that your users can create Composer symbols for simulation.

All flattened primitive devices expanded from a protected subcircuit are also protected.

Encryption

Example

Original Netlist

```
* subckt name :inv, I/O pins:2
* parameters wi, le
protect
subckt inv out in
parameters wi=1u le=3u
mp1 mid in vd vd pmos w=wi l=le
mn1 mid in 0 0 nmos w=wi l=le
rl mid out resistor r=2k
model pmos bsim3v3 type=p tnom=27.0
tox=2.9e-09
model nmos bsim3v3 type=n tnom=27.0
tox=2.8e-09
ends
unprotect
* open latch module
subckt latch q qbar clk d
```

Encrypted Netlist

```
* subckt name :inv, I/O pins:2
* parameters wi, le
//pragma protect begin_protected
//pragma protect data_method
                               = RC5
//pragma protect data_keyowner = Cadence
Design Systems.
//pragma protect data_keyname = CDS_KEY
//pragma protect data_block
fajdfejwrADFASDfdhfjadfahd
QERWfdjau77r42jagadfhjkuer
jdfejwrADFASDfdhfjad
jdfejwrADFASDfdhfjad
//pragma protect end_protected
* open latch module
subckt latch q qbar clk d
```

Encrypting a Subcircuit without Interfaces

To encrypt the contents of a subcircuit leaving its name and I/O pins public, place protect after subckt and unprotect before ends.

Encryption

Example

Original Netlist

```
subckt inv out in protect
parameters wi=lu le=3u
mp1 mid in vd vd pmos w=wi l=le
mn1 mid in 0 0 nmos w=wi l=le
r1 mid out resistor r=2k
model pmos bsim3v3 type=p tnom=27.0
tox=2.9e-09
model nmos bsim3v3 type=n tnom=27.0
tox=2.8e-09
unprotect
ends
* open latch module
subckt latch q qbar clk d
...
```

Encrypted Netlist

```
subckt inv out in
//pragma protect begin_protected
//pragma protect data_method = RC5
//pragma protect data_keyowner = Cadence
   Design Systems.
//pragma protect data_keyname = CDS_KEY
//pragma protect data_block
fajdfejwrADFASDfdhfjadfahd
QERWfdjau77r42jagadfhjkuer
//pragma protect end_protected
ends
* open latch module
subckt latch q qbar clk d
```

Encrypting Portions of a Subcircuit or Multiple Subcircuits

You can use multiple pairs of protect and unprotect in a subcircuit to protect portions of it. See the example below.

Encryption

Example

Original Netlist

```
subckt inv out in
parameters wi=1u le=3u
protect
mp1 mid in vd vd pmos w=wi l=le
mn1 mid in 0 0 nmos w=wi l=le
unprotect
r1 mid out resistor r=2k
protect
model pmos bsim3v3 type=p tnom=27.0
tox=2.9e-09
model nmos bsim3v3 type=n tnom=27.0
tox=2.8e-09
unprotect
ends inv
...
```

Encrypted Netlist

```
subckt inv out
parameters wi=1u le=3u
global vd
//pragma protect begin_protected
//pragma protect data_method
//pragma protect data_keyowner= Cadence Design
Systems.
//pragma protect data_keyname = CDS_KEY
//pragma protect data_block
QERWfdjau77r42jagadfhjkuer
//pragma protect end_protected
rl mid out 2k
//pragma protect begin_protected
etu45j6jqfly5po765t8tnji5j5i76k
// pragma protect end_protected
ends inv
. . .
```

If you have multiple subcircuits in your netlist, you can encrypt them by using multiple pairs of protect and unprotect as shown in the example above.

Encrypting a Model Card

You can encrypt one or more model cards with a pair of protect and unprotect keywords. The keywords do not have to be within or outside the model card. Even if you encrypt only a portion of the model card, the entire model card is protected during simulation. In case there are no parameters within a protected block, the Spectre circuit simulator displays a warning message, but still encrypts the model card.

Example 1

Encryption

In the following example, the encryption keywords are around the model card definition. The model name and all parameters are encrypted.

Original Netlist

Encrypted Netlist

```
* The 1st model name is pmos, type is p * The 1st model name is pmos, type is p
* The 2nd model name is nmos, type is n * The 2nd model name is nmos, type is n
subckt inv out in
                                        subckt inv out in
paramemters wi=lu le=3u
                                        paramemters wi=lu le=3u
mp1 mid in vd vd pmos w=wi l-le
                                        mp1 mid in vd vd pmos w=wi l-le
mn1 mid in 0 0 nmos w=wi l=le
                                        mn1 mid in 0 0 nmos w=wi l=le
ends inv
                                        ends inv
protect
                                        //pragma protect begin_protected
model pmos bsim3v3 type=p tnom=27.0
                                        //pragma protect data_method
tox=2.9e-09
                                        //pragma protect data_keyowner = Cadence
model nmos bsim3v3 type=n tnom=27.0
                                          Design Systems.
tox=2.8e-09
                                        //pragma protect data_keyname = CDS_KEY
unprotect
                                        //pragma protect data_block
                                        QERWfdjau77r42jagadfhjkuer
                                        //pragma protect end_protected
```

Example 2

In the following example, the protect keyword is within the model card definition, leaving a number of parameters outside the protection block. The model name and parameters outside the protection block remain public, but the whole model is protected for message and parameter output during simulation.

Original Netlist

```
model pmos bsim3v3 type=p tnom=27.0 tox=2.9e-09 protect
Nch=2.498E+17 Tox=27.0 tox=2.9e-09 Xj=1.00000E-07 +Lint=9.36e-8 Wint=1.47e-7 +Vth0=.6322 K1=.756 K2=-3.83e-2 +Dvt2=-9.17e-2 Nlx=3.52291E-08 Dwg=-6.0E-09 Dwb=-3.56E-09 +Cit=1.622527E-04 Cdsc=-2.147181E-05 unprotect
```

Encrypted Netlist

```
model pmos bsim3v3 type=p tnom=27.0
tox=2.9e-09
//pragma protect begin_protected
//pragma protect data_method = RC5
//pragma protect data_keyowner = Cadence
Design Systems.
//pragma protect data_keyname = CDS_KEY
//pragma protect data_block
fajdfejwrADFASDfdhfjadfahd
QERWfdjau77r42jagadfhjkuer
//pragma protect end_protected
```

Encryption

Encrypting an Include File

If there is an include file in the encrypted portion of your netlist, you must encrypt it separately.

Encrypted Information During Simulation

When you simulate an encrypted netlist, all warnings, error messages, and info statements about the encrypted portions of your netlist are suppressed. The following sections describe how the Spectre circuit simulator handles the encrypted portions of your netlist.

Protected Device

A device is encrypted if any of the following conditions are met:

- It is a primitive and inside a protected block.
- It is an instance of a subcircuit. The instance is not in a protected block, but the subcircuit is protected. Here is an example:

```
X1 in out INV subckt INV (in out) protect mpl vdd in vdd pmos W=1.0e-6 L=1.0e-6 mnl out in 0 0 nmos W=1.0e-6 L=1.0e-6 unprotect ends INV
```

In the flattened netlist, devices X1/mp1 and X1/mn1 are protected.

■ It is an instance of a subcircuit, and the instance is in a protected block. Whether the subcircuit is protected or not, all the flattened primitive devices from that hierarchical level are protected. An example is given below.

```
protect
X1 in out INV
unprotect
subckt INV (in out)
mp1 vdd in vdd pmos W=1.0e-6 L=1.0e-6
mn1 out in 0 0 nmos W=1.0e-6 L=1.0e-6
ends INV
```

In the flattened netlist, devices X1/mp1 and X1/mn1 are protected.

Encryption

For a device meeting any of the above criteria, its name and instance parameters are protected. The instance parameters of a protected device cannot be modified through an alter statement, but the protected device can be replaced through an altergroup statement. Information about a protected device is filtered out in all analyses outputs.

Encrypted devices are not included in the circuit inventory.

Protected Node

A node contained exclusively within a protected block is protected, and its name and value is not displayed in the output file. If you request an ic file or restart a simulation, protected nodes are displayed in encrypted format in the ic, checking point, and restart output files.

Protected Global and Netlist Parameters

Global and netlist parameters defined inside a protected block are encrypted. However, you can alter or sweep a protected parameter. All device instance and model parameters dependent on the altered parameter are updated even if the device or model is protected.

Protected Subcircuit Parameters

Subcircuit parameters are protected if they appear exclusively within a protected block. All devices or model cards that refer to encrypted parameters must be in a protected block to protect the parameter values. If protected parameters are referred to by an unprotected device or model card, the parameter values are printed in the info statements for this device or model card.

You can alter or sweep a protected subcircuit parameter. All device instance and model parameters dependent on the altered parameter are updated even if the device or model is protected.

Protected Model Parameters

For a model card inside a protected block (where the protect keyword appears before the model statement), the model card and all model parameters are encrypted. If you place protect after the model definition and leave some parameters outside a protection block, only parameters inside the protection block are encrypted. During simulation, all parameters inside the model card are encrypted since encryption is done on the basis of the model card, not individual parameters. Warning messages and *info* statements for all model parameters and values of a protected model card are suppressed.

Encryption

Even if the model name is protected, you can instantiate primitives using that model. You cannot alter or sweep protected model parameters, but you can replace a protected model through an altergroup statement.

Multiple Name Spaces

Names of parameters, subcicuits, models, and devices that appear exclusively within protected blocks are encrypted. However, identical names appearing outside the protected blocks are bound to their encrypted counterparts. Hence, Cadence recommends that you give unique names to the parameters, subcircuits, models, and devices you want to protect.

11

Time-Saving Techniques

In this chapter, you will learn about different methods to reduce simulation time. This chapter discusses the following topics:

- Specifying Efficient Starting Points on page 258
- Reducing the Number of Simulation Runs on page 258
- Adjusting Speed and Accuracy on page 258
- Saving Time by Starting Analyses from Previous Solutions on page 258
- Saving Time by Specifying State Information on page 259
- Saving Time by Modifying Parameters during a Simulation on page 264
- Saving Time by Selecting a Continuation Method on page 267

Time-Saving Techniques

Specifying Efficient Starting Points

The Spectre[®] circuit simulator arrives at a solution for a simulation by calculating successively more accurate estimates of the final result. You can increase simulation speed by providing information that the Spectre simulator uses to increase the accuracy of the initial solution estimate. There are three ways to provide a good starting point for a simulation:

- Start analyses from previous solutions
- Specify initial conditions for components and nodes
- Specify solution estimates with nodesets

Reducing the Number of Simulation Runs

With the Spectre simulator, you can run many analyses (including analyses of the same type) in a single simulation. With other SPICE-like simulators, you might require multiple simulations to complete the same tasks. In a single simulation run, you can run a set of Spectre analyses; modify the component, temperature, or options parameters; and then run additional analyses with the new parameters.

Adjusting Speed and Accuracy

You can use the errpreset parameter to increase the speed of transient analyses, but this speed increase requires some sacrifice of accuracy.

Saving Time by Starting Analyses from Previous Solutions

A solution for one analysis can be an appropriate starting point for the next analysis. For example, if a DC analysis precedes a transient analysis, you can use the DC solution as the first guess for the initial point in the transient analysis solution. There are two Spectre analysis parameters that let you start analyses from previous solutions. They are available for most Spectre analyses.

- The restart parameter
 - If you set this parameter to restart=no in an analysis statement, the Spectre simulator uses the DC solution of the previous analysis as an initial guess for the following analysis.
- The prevoppoint parameter

Time-Saving Techniques

If you set this parameter to prevoppoint=yes in an analysis statement, the Spectre simulator does not compute or recompute the operating point. Instead, it uses the operating point computed by the previous analysis.

Saving Time by Specifying State Information

The Spectre simulator lets you provide state information (the current or last-known status or condition of a process, transaction, or setting) to the DC and transient analyses. You can specify two kinds of state information:

Initial conditions

The ic statement lets you specify values for the starting point of a transient analysis. The values you can specify are voltages on nodes and capacitors, and currents on inductors.

Nodesets

Nodesets are estimates of the solution you provide for the DC or transient analyses. Unlike initial conditions, their values have no effect on the final results. Nodesets usually act only as aids in speeding convergence, but if a circuit has more than one solution, as with a latch, nodesets can bias the solution to the one closest to the nodeset values.

Setting Initial Conditions for All Transient Analyses

You can specify initial conditions that apply to all transient analyses in a simulation or to a single transient analysis. The ic statement and the ic parameter described in this section set initial conditions for all transient analyses in the netlist. In general, you use the ic parameter of individual components to specify initial conditions for those components, and you use the ic statement to specify initial conditions for nodes. You can specify initial conditions for inductors with either method. Specifying cmin for a transient analysis does not satisfy the condition that a node has a capacitive path to ground.

Note: Do not confuse the ic parameter for individual components with the ic parameter of the transient analysis. The latter lets you select from among different initial conditions specifications for a given transient analysis.

Specifying Initial Conditions for Components

You can specify initial conditions in the instance statements of capacitors, inductors, and windings for magnetic cores. The ic parameter specifies initial voltage values for capacitors and current values for inductors and windings. In the following example, the initial condition voltage on capacitor Cap13 is set to two volts:

Time-Saving Techniques

Cap13 11 9 capacitor c=10n ic=2

Specifying Initial Conditions for Nodes

You use the ic statement to specify initial conditions for nodes or initial currents for inductors. The nodes can be inside a subcircuit or internal nodes to a component.

The following is the format for the ic statement:

ic signalName=value ...

The format for specifying signals with the ic statement is similar to that used by the save statement. This method is described in detail in "Saving Main Circuit Signals" on page 224. Consult this discussion if you need further clarification about the following example.

This example sets the following initial conditions:

- The voltage of node Voff is set to 0.
- Node 7 of subcircuit X3 is set to 2.5 V.
- The internal drain node of component M1 is set to 3.5 V. (See the following table for more information about specifying internal nodes.)
- The current for inductor L1 is set to 1µ.

Specifying initial node voltages requires some additional discussion. The following table tells you the internal voltages you can specify with different components.

Component	Internal Node Specifications
BJT	int_c, int_b, int_e
BSIM	int_d, int_s
MOSFET	int_d, int_s
GaAs MESFET	int_d, int_s, int_g
JFET	int_d, int_s, int_g, int_b
Winding for Magnetic Core	int_Rw
Magnetic Core with Hysteresis	flux

Time-Saving Techniques

Supplying Solution Estimates to Increase Speed

You use the nodeset statement to supply estimates of solutions that aid convergence or bias the simulation towards a given solution. You can use nodesets for all DC and initial transient analysis solutions in the netlist. The nodeset statement has the following format:

```
nodeset signalName=value...
```

Values you can supply with the nodeset statement include voltages on topological nodes, including internal nodes, and currents through voltage sources, inductors, switches, transformers, N-ports, and transmission lines.

The format for specifying signals with the nodeset statement is similar to that used by the save statement. This method is described in detail in "Saving Main Circuit Signals" on page 224. Consult this discussion if you need further clarification about the following example.

```
nodeset Voff=0 X3.7=2.5 M1:int_d=3.5 L1:1=1u
```

This example sets the following solution estimates:

- The voltage of node Voff is set to 0.
- Node 7 of subcircuit X3 is set to 2.5 V.
- The internal drain node of component M1 is set to 3.5 V. (See the table in the <u>ic</u> <u>statements</u> section of this chapter for more information about specifying internal nodes.)
- The current for inductor L1 is set to 1µ.

Specifying State Information for Individual Analyses

You can specify state information for individual analyses in two ways:

- You can use the ic parameter of the transient analysis to choose which previous specifications are used.
- You can create a state file that is read by an individual analysis.

Time-Saving Techniques

Choosing Which Initial Conditions Specifications Are Used for a Transient Analysis

The ic parameter in the transient analysis lets you select among several options for which initial conditions to use. You can choose the following settings:

Parameter Setting	Action Taken	
dc	Initial conditions specifiers are ignored, and the existing DC solution is used.	
node	The ic statements are used, and the ic parameter settings on the capacitors and inductors are ignored.	
dev	The ic parameter settings on the capacitors and inductors are used, and the ic statements are ignored.	
all	Both the ic statements and the ic parameters are used. If specifications conflict, ic parameters override ic statements.	

Specifying State Information with State Files

You can also specify initial conditions and estimate solutions by creating a state file that is read by the appropriate analysis. You can create a state file in two ways:

- You can instruct the Spectre simulator to create a state file in a previous analysis for future use.
- You can create a state file manually in a text editor.

Telling the Spectre Simulator to Create a State File

You can instruct the Spectre simulator to create a state file from either the initial point or the final point in an analysis. To write a state file from the initial point in an analysis, use the write parameter. To write a state file from the final point, use the writefinal parameter. Each of the following two examples writes a state file named ua741.dc. The first example writes the state file from the initial point in the DC sweep, and the second example writes the state file from the final point in the DC sweep.

```
Drift dc param=temp start=0 stop=50.0 step=1 readns="ua741.dc" write="ua741.dc" Drift dc param=temp start=0 stop=50.0 step=1 readns="ua741.dc" writefinal="ua741.dc"
```

Time-Saving Techniques

Creating a State File Manually

The syntax for creating a state file in a text editor is simple. Each line contains a signal name and a signal value. Anything after a pound sign (#) is ignored as a comment. The following is an example of a simple state file:

```
# State file generated by Spectre from circuit file 'wilson'
# during 'stepresponse' at 5:39:38 PM, jan 21, 1992.

1     .588793510612534
2     1.17406247989272
3     14.9900516233357
pwr    15
vcc:p -9.9483766642647e-06
```

Reading State Files

To read a state file as an initial condition, use the readic transient analysis parameter. To read a state file as a nodeset, use the readns parameter. This example reads the file intCond as initial conditions:

```
DoTran_z12 tran start=0 stop=0.003 \
  step=0.00015 maxstep=6e-06 read="intCond"
```

This second example reads the file soluEst as a nodeset.

```
DoTran_z12 tran start=0 stop=0.003 \
  step=0.00015 maxstep=6e-06 readns="soluEst"
```

Special Uses for State Files

State files can be useful for the following reasons:

- You can save state files and use them in later simulations. For example, you can save the solution at the final point of a transient analysis and then continue the analysis in a later simulation by using the state file as the starting point for another transient analysis.
- You can use state files to create automatic updates of initial conditions and nodesets.

The following example demonstrates the usefulness of state files:

The first analysis computes the DC solution at T=0C, saves it to a file called ua741.dc0, and then sweeps the temperature to T=50C. The transfer function analysis (xf) resets the temperature to zero. Because of the temperature change, the DC solution must be recomputed. Without the use of state files, this computation might slow the simulation because the only available estimate of the DC solution would be that computed at T=50C, the

Time-Saving Techniques

final point in the DC sweep. However, by using a state file to preserve the initial DC solution at T=0C, you can enable the Spectre simulator to compute the new DC solution quickly. The computation is fast because the Spectre simulator can use the DC solution computed at T=0C to estimate the new solution. You can also make future simulations of this circuit start quickly by using the state file to estimate the DC solution. Even if you have altered a circuit, it is usually faster to start the DC analysis from a previous solution than to start from the beginning.

Saving Time by Modifying Parameters during a Simulation

The Spectre simulator lets you place specifications in the netlist to modify parameters and then resimulate. This lets you accomplish tasks with a single Spectre run that might require multiple runs with another simulator. To change parameter settings during a run, you use the following Spectre control statements:

■ The alter statement

You use this statement to change the parameters of circuits, subcircuits, and individual models or components. You also use it to change the following options statement temperature parameters and scaling factors:

temp	
tnom	
scale	
scalem	

You can use the altergroup statement to specify device, model, and netlist parameter statements that you want to change the values of with analyses.

■ The set statement

Except for temperature parameters and scaling factors, you use the set statement to modify any options statement parameters you set at the beginning of the netlist. The new settings apply to all analyses that follow the set statement in the netlist.

The alter and set statements are queued up with analysis statements and are processed in order.

Time-Saving Techniques

Changing Circuit or Component Parameter Values

You modify parameters for devices, models, circuit, and subcircuit parameters during a simulation with the alter statement. The modifications apply to all analyses that follow the alter statement in your netlist until you request another parameter modification.

Changing Parameter Values for Components

To change a parameter value for a component device or model, you specify the device or model name, the parameter name, and the new parameter value in the alter statement. You can modify only one parameter with each alter statement, but you can put any number of alter statements in a netlist. The following example demonstrates alter statement syntax:

```
SetMag alter dev=Vt1 param=mag value=1
```

- SetMag is the unique netlist name for this alter statement. (Like many Spectre statements, each alter statement must have a unique name.)
- The keyword alter is the primitive name for the alter statement.
- dev=Vt1 identifies Vt1 as the netlist name for the component statement you want to modify. You identify an instance statement with dev and a model statement with mod. When you use the alter statement to modify a circuit parameter, you leave both dev and mod unspecified.
- param=mag identifies mag as the parameter you are modifying. If you omit this parameter, the Spectre simulator uses the first parameter listed for each component in the Spectre online help as the default.
- value=1 identifies 1 as the new value for the mag parameter. If you leave value unspecified, it is set to the default for the parameter.

Changing Parameter Values for Models

To change a parameter value for model files with the altergroup statement, you list the device, model, and circuit parameter statements as you do in the main netlist. Within an alter group, each model is first defaulted and then the model parameters are updated. You cannot nest alter groups. You cannot change from a model to a model group and vice versa. The following example demonstrates altergroup statement syntax:

```
ag1 altergroup {
    parameters p1=1
    model myres resistor r1=1e3 af=p1
    model mybsim bsim3v3 lmax=p1 lmin=3.5e-7
}
```

Time-Saving Techniques

Further Examples of Changing Component Parameter Values

This example changes the is parameter of a model named SH3 to the value 1e-15:

```
modify2 alter mod=SH3 param=is value=1e-15
```

The following examples show how to use the param default in an alter statement. The first parameter listed for resistors in the Spectre online help (spectre -h) is the default. For resistors, this is the resistance parameter r.

Consequently, if R1 is a resistor, the following two alter statements are equivalent:

```
change1 alter dev=R1 param=r value=50
change1 alter dev=R1 value=50
```

Changing Parameter Values for Circuits

When you change a circuit parameter, you use the same syntax as when you change a device or model parameter except that you do not enter a dev or a mod parameter.

This example changes the ambient temperature to 0°C:

```
change2 alter param=temp value=0
```

The following table describes the circuit parameters you can change with the alter statement:

Parameter	Description
temp	Ambient temperature
tnom	Default measurement temperature for component parameters
scalem	Component model scaling factor
scale	Component instance scaling factor

Note: If you change temp or thom using an alter statement, all expressions with temp or thom are reevaluated.

Modifying Initial Settings of the State of the Simulator

You can change the initial settings for the state of the simulator by placing a set statement in the netlist. The set statement is similar to the options statement that sets the state of

Time-Saving Techniques

the simulator, but it is queued with the analysis statements in the order you place them in the netlist.

You use the set statement to change previous options or set statement specifications. The modifications apply to all analyses that follow the set statement in the netlist until you request another parameter modification. The set and options statements have many identical parameters, but the set statement cannot modify all options statement parameters. The parameter listings in the Spectre online help (spectre -h) tell you which parameters you can reset with the set statement.

Formatting the set Statement

The following example demonstrates the set statement syntax. This example turns off several annotation parameters.

Quiet set narrate=no error=no info=no

- Quiet is the unique name you give to the set statement.
- The keyword set is the primitive name for the set statement.
- narrate, error, and info are the parameters you are changing.

Note: If you want to change temp or thom, use the alter statement.

Saving Time by Selecting a Continuation Method

The Spectre simulator normally starts with an initial estimate and then tries to find the solution for a circuit using the Newton-Raphson method. If this attempt fails, the Spectre simulator automatically tries several continuation methods to find a solution and tells you which method was successful. Continuation methods modify the circuit so that the solution is easy to compute and then gradually change the circuit back to its original form. Continuation methods are robust, but they are slower than the Newton-Raphson method.

If you need to modify and resimulate a circuit that was solved with a continuation method, you probably want to save simulation time by directly selecting the continuation method you know was previously successful.

You select the continuation method with the homotopy parameter of the set or options statements. In addition to the default setting, all, five settings are possible for this parameter: gmin stepping (gmin), source stepping (source), the pseudotransient method (ptran), and the damped pseudotransient method (dptran). You can also prevent the use of continuation methods by setting the homotopy parameter to none.

12

Managing Files

This chapter discusses the following topics:

- About Spectre Filename Specification on page 269
- Creating Filenames That Help You Manage Data on page 269

Managing Files

About Spectre Filename Specification

Many analysis statements require a filename as a parameter value for the input or output of data. It is often easier to keep track of output files if these filename parameter values are related to some other filename, typically the input filename.

The Spectre[®] circuit simulator's filename specification features help you manage your data by letting you systematically specify or modify filenames. With the Spectre simulator, you can easily identify data from multiple simulation runs or from single runs containing repeated similar analyses. You can modify input filenames so that you can easily identify the output file from a specific simulation or analysis. You can also construct output filenames in ways that prevent accidental overwriting of data.

Creating Filenames That Help You Manage Data

The Spectre simulator helps you keep track of simulation data by letting you create filenames that are variants of input filenames. For example, with Spectre, you can

- Identify simulation data by date, time, process ID, or other defining characteristics in the results filenames
- Keep multiple circuits in a single directory without having subsequent simulations overwrite previous results
 - To do this, you set environment variables so that output filenames are automatically different variants of input filenames.
- Construct filenames at run time

This is convenient if your input data comes from several files. For example, you can use an include statement to insert several different circuit files into main input files that each contain analyses. Each circuit file can also be used with several stimulus files. To prevent confusion, you can create filenames at run time for the stimulus files that associate them with the appropriate main input files.

In this section, you will learn how to use the various Spectre features for creating filenames.

Creating Filenames by Modifying Input Filenames

The Spectre simulator gives you predefined percent codes you can put in your filenames. These predefined codes let you construct filenames that add defining characteristics, such as date or time, to input filenames. You specify predefined percent codes with a percent character (%) followed by an uppercase letter. The uppercase letter tells the Spectre simulator

Managing Files

how to construct the filename. You can use percent codes in environment variables, in spectre command parameters, or in your netlist—wherever you need to specify filenames for simulation results.

For example, %C is the predefined percent code for the name of the input circuit file. If your circuit file is named <code>opamp1</code> and you place the following <code>-raw</code> setting for your UNIX environment variable

```
setenv SPECTRE_DEFAULTS "-raw %C.raw"
```

the Spectre simulator sends simulation results to a file named opamp1.raw.

Description of Spectre Predefined Percent Codes

These are the percent code options that can help you organize your simulation data:

- **%A %A** is replaced by the name of the current analysis that is running.
 - If it is specified in a device statement, it is expanded to a blank string because there is no current analysis.
- %C is replaced by the input circuit filename, as it is used in the command line. If the circuit filename is opamp1, the specification %C.raw generates a file named opamp1.raw.
 - When the Spectre simulator does not know the name of the input file, as when the circuit is read from the standard input (from a pipe or from a redirected file), the Spectre simulator substitutes the name stdin for %C.
- %D is replaced by the date when the program started. For example, the specification %D.opamp1 might generate a file named 94-09-19.opamp1.
 - The date is in year-month-day format. All leading zeros are included. This format generates filenames that you can sort alphabetically into chronological order.
- %H is replaced by the host name (network name) of the system on which the Spectre simulator is running.
- %M s replaced by the current CMIVersion.
- %₽ %P is replaced by the process ID.

The process ID is a unique integer assigned to the Spectre process by the operating system.

Managing Files

- %S is replaced by the simulator name. For example, the specification %S.opamp1 might generate a file named spectre.opamp1.
 - If you use a different name or a symbolic link with a different name to access a copy of the executable program, the new name becomes the program name.
- %T is replaced by the time when the program started. For example, the specification %T.opamp1 might generate a file named 14:44:07.opamp1.
 - Time is in 24-hour format, and all leading zeros are included. This format generates filenames that sort alphabetically into chronological order.
- %V is replaced by the simulator version string. For example, the specification out_%V.raw might generate a file named out_1.0.2.raw.
- This specifies the % character by itself.

This option lets you use percent characters in filenames. Two percent characters (%%) in a filename specification produce a single percent character in the filename, which is not interpreted as a percent code indicator.

The predefined percent codes feature does not perform recursive substitutions. For example, if you have an input file named A%SD.xyz and you create an output file with the percent code designation %C.raw, the Spectre simulator creates the output file A%SDxyz.raw. The Spectre simulator does not substitute the simulator name for %S in this case.

Customizing Percent Codes

You can define your own percent codes or redefine existing codes with the +%<X> option of the spectre command. Names of customized percent codes can be any single uppercase or lowercase letter. You can define percent codes in two ways:

- You can define percent codes for a single simulation by typing this option into the command line with the spectre command at the start of the simulation.
- You can specify the customized percent code as a default by typing the spectre command into the SPECTRE_DEFAULTS environment variables.

For example, if you type in the following instruction at the command line

```
spectre +%E opamp1 test3
```

the Spectre simulator runs a simulation for circuit test3. During this simulation, the Spectre simulator substitutes the name opamp1 for any %E it finds in results filename specifications.

You undefine customized percent codes with the -%<X> spectre command option. For example, if you customize percent codes with the SPECTRE_DEFAULTS environment

Managing Files

variable, you might want to undefine them for a given simulation run. To do this, you include the -%<X> command line option in the spectre command that starts the simulation. Undefined percent codes return to predefined values. If an undefined percent code has no predefined value, it is treated like an empty string.

Enabling the Spectre Simulator to Recognize the Input Names of Piped or Redirected Files

One practical application for customized percent codes is to enable the Spectre simulator to recognize the input filenames of piped or redirected files. If the Spectre simulator reads the circuit from standard input, as it does when it reads from a pipe, the Spectre simulator cannot determine the name of the original input file. If you want the results filename to be a variant of the input filename, you can enable the Spectre simulator to recognize the input filename by redefining the Spectre simulator's predefined percent codes.

In the following two examples, the circuit file is passed through <code>sed(1)</code>. The resulting file, <code>cktfile</code>, is then piped to the Spectre simulator as input. The first example shows the problem created if you want the results filename to be a modification of the input filename, and the second example shows how you can correct this difficulty.

In the first example, the Spectre simulator cannot identify the name <code>cktfile</code> of the file that is piped to the <code>spectre</code> command. As a default action, it puts the output simulation data in the directory <code>stdin.raw</code>.

```
setenv SPECTRE_DEFAULTS "-raw %C.raw"
sed -e 's/\$/\\$/g' cktfile | spectre
```

In the second example, redefining the %C percent code causes the Spectre simulator to base the output filename on the input filename. The spectre command in the environment variable redefines the normal predefined %C code. The Spectre simulator substitutes the name cktfile for all %C specifications and puts the output simulation data in the directory cktfile.raw.

```
setenv SPECTRE_DEFAULTS "-raw %C.raw"
sed -e 's/\$/\\$/g' cktfile | spectre +%C cktfile
```

Note: For more information about Spectre defaults, see <u>"Selecting Limits for Parameter Value Warning Messages"</u> on page 284 and the <u>Spectre Circuit Simulator Reference</u> manual.

Creating Filenames from Parts of Input Filenames

Colon modifiers (:x) create filenames from parts of input filenames. You can use colon modifiers with all percent codes except the %% code.

Managing Files

For example, if you apply %C:r.raw to the input filename opamp.ckt

%C is the input filename (opamp.ckt)

:r is the root of the input filename (opamp)

.raw is the new filename extension

The result is the output filename opamp.raw. In this example, (:r) is the colon modifier.

Definitions of Colon Modifiers

The Spectre simulator recognizes the following colon modifiers:

Modifier	Description
:r	Signifies the root (base name) of the given path for the file
: e	Signifies the extension for the given path of the file
:h	Signifies the head of the given path for any portion of the file before the last
:t	Signifies the tail of the given path for any portion of the file after the last /
::	Signifies the (:) character itself; use two consecutive colons (::) to place a single colon in an output filename that is not read as a percent code modifier

Any character except a modifier after a colon (:) signals the end of modifications. The Spectre simulator appends both the character and the colon to the filename.

The Spectre simulator applies a chain of colon modifiers in the sequence you specify them. For example, if you apply %C:e.%C:r:t to the input filename /circuits/opamp.ckt

```
%C:e is the extension (ckt) of the input filename
```

%C:r is the root (opamp.ckt) of the input filename

:t is the tail of the input filename after the last / (opamp)

The result is the output filename ckt.opamp.

Note: If the input filename does not contain a slash and a period, the modifiers :t and :r return the whole filename, and the modifier :h returns a period.

Managing Files

Examples of Colon Modifier Use

The following table shows the various filenames you can generate from an input filename (%C) of /users/maxwell/circuits/opamp.ckt:

Colon Modifier	Comments	Output Filename Result
%C	Input filename	/users/maxwell/circuits/ opamp.ckt
%C:r	Root of the input filename	/users/maxwell/circuits/opamp
%C:e	Extension of the input filename	ckt
%C:h	Head of the input filename	/users/maxwell/circuits
%C:t	Tail of the input filename	opamp.ckt
%C::	Second colon is appended to the input filename and the end of the modification	<pre>/users/maxwell/circuits/ opamp.ckt:</pre>
%C:h:h	The head of %C:h (such a recursive use of :h might be useful if you want to direct your output to a different directory from that of the input file)	/users/maxwell
%C:t:r	The root of %C:t	opamp
%C:r:t	The tail of %C:r	opamp
/tmp%C:t:r.raw	The suffix .raw is appended to the root of %C:t, and the full path is altered to put opamp.raw in the /tmp file.	/tmp/opamp.raw
%C:e.%C:r:t	Extension of %C followed by the tail of %C:r	ckt.opamp

13

Identifying Problems and Troubleshooting

This chapter discusses the following topics:

- Error Conditions on page 275
- Spectre Warning Messages on page 278
- Customizing Error and Warning Messages on page 284
- Controlling Program-Generated Messages on page 294
- Correcting Convergence Problems on page 295
- Correcting Accuracy Problems on page 298

Error Conditions

Error conditions terminate a Spectre run. If you receive any of the messages described in this section, you must fix the problem and rerun the simulation.

Invalid Parameter Values That Terminate the Program

If you enter a parameter that causes the Spectre simulator to stop or puts a model in an invalid region, such as giving z0=0 to a transmission line, the Spectre simulator sends you a message like this one and exits.

```
Error from spectre during hierarchy flattening.
tll: Value of 'z0' should be nonzero.
spectre terminated prematurely due to fatal error.
```

To run the simulation, you must change the parameter to an acceptable value.

Identifying Problems and Troubleshooting

Singular Matrices


If you receive an error message that says a matrix is singular, your netlist contains either a floating node which is causing the problem or a loop of zero resistance branches, for example, a loop of voltage sources or inductors. The following procedures might help you find the problem:

- Check the options statement in your netlist to ensure that topcheck=yes in at least one statement. The topology checker normally helps you identify singular matrix problems, but it cannot do so if it is disabled.
- If the error message appears only for particular components or circuit parameters or only for particular voltages or currents, try one of the following procedures:
 - □ Set gmin=1e-12 (the default value).
 - ☐ If you are working with simplified semiconductor models, try using more complex models.

A CMOS (complementary metal oxide semiconductor) inverter whose model parameters have infinite output impedance in saturation demonstrates the usefulness of these techniques. When either the N- or P-type device is in the ohmic region, the solution is unique. However, when both devices are saturated, there is a range of output voltages that all satisfy Kirchhoff's Current Law. In this situation, the Newton-Raphson method forms a linearized circuit that is singular for that iteration.

■ Check ideal transformers, N-ports, or transmission lines for floating nodes or loops of zero-resistance branches and modify the circuit to eliminate them.

For example, consider this center-tapped transformer:

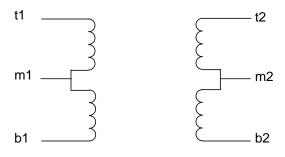


```
subckt ct_xfmr (t1 b1 t2 m2 b2)
Tt t1 m1 t2 m2 transformer n1=2
Tb m1 b1 m2 b2 transformer n1=2
end ct xfmr
```

Identifying Problems and Troubleshooting

If you use this transformer and leave the center-tap terminal (m2) floating, the Spectre simulator notifies you of a singular matrix. Because both m1 and m2 are floating, the DC solution is not unique.

If you choose a different topology for the transformer, like the one in the following example, you can avoid the problem.

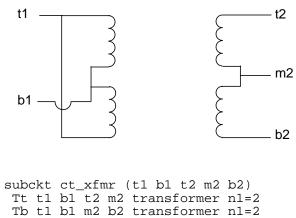

Circuits that contain ideal transformers, N-ports, or transmission lines can have floating nodes or loops of zero-resistance branches because the topology checker cannot adequately verify these components. Finding these currents is difficult because all these components act like ideal transformers at DC. When you look into one port of a transformer, you can see either a short or an open circuit, depending on what you see looking out of the other port.

Internal Error Messages

end ct_xfmr

If the Spectre simulator detects an internal error, it displays a message like one of the following:

```
Internal error detected by spectre. Please see http://sourcelink.cadence.com/supportcontacts.html for Customer Support contact information.

Error detected in file 'file.c' at line 101.

Internal error detected by spectre. Please see http://sourcelink.cadence.com/supportcontacts.html for Customer Support contact information.

Arithmetic exception.
```

Cadence can help you find solutions to these problems. If you get one of these messages, call Cadence Customer Support or contact a Cadence application engineer.

Identifying Problems and Troubleshooting

Time Is Not Strictly Increasing

PWL takes a wave parameter that accepts time/value pairs. If the time value does not increase, the Spectre simulator displays the following message:

```
Error found in spectre during initial setup. v10:time is not strictly increasing in waveform.
```

Check the PWL component to fix this error.

Spectre Warning Messages

Warning messages tell you about conditions that might cause invalid results. Unlike error messages, warnings do not stop a simulation. When you receive a warning message, you must decide whether the particular condition creates a problem for your simulation. This section describes some common Spectre warning messages. It also tells you how to modify parameters to correct conditions that might produce invalid simulation results.

The Spectre simulator often prints warnings and notices that are eventually determined to be "uninteresting," and there is a natural tendency after a while to ignore them. We recommend that you carefully study them the first few times you simulate a particular circuit and whenever the simulator gives you unexpected results.

P-N Junction Warning Messages

Almost every semiconductor device includes at least one p-n junction. Normally, these p-n junctions are biased in a particular operating region. Three types of warning messages are available for each p-n junction, one for exceeding a maximum current, one for exceeding a melting current, and one for exceeding a breakdown voltage.

Explosion Region Warnings

```
Warning from spectre at dc = 191 mA during DC analysis 'srcSweep'.
mos_mod: The bulk-drain junction current exceeds `imelt'.
The results computed by Spectre are now incorrect because the junction current model has been linearized.
```

Or

```
xram.d3247: The junction is melting (increase imax)
```

The Spectre simulator provides two parameters, imax and imelt, that limit the current across a PN junction. These parameters aid convergence and prevent numerical overflow.

Identifying Problems and Troubleshooting

The junction characteristics of the device are assumed to be accurately modeled for current up to imax. If imax is exceeded during iterations, the linear model is substituted until the current drops below imax or until convergence is achieved. If convergence is achieved with the current exceeding imax, the results are inaccurate, and Spectre prints a warning similar to the first one above.

The imelt parameter is used as a limit warning for the junction current. This parameter can be set to the maximum current rating of the device. By default it is set to the value of imax. When any component of the junction current exceeds imelt, Spectre issues a warning and again the results become inaccurate. The junction current is linearized above the value of imelt to prevent arithmetic exceptions.

Both these parameters have current density counterparts, jmax and jmelt, that you can specify if you want the absolute current values to depend on the device area. For more information, see *Spectre Circuit Simulator Known Problems and Solutions*.

Melting Current Warnings

A separate model parameter, imelt, is used as a limit warning for the junction current. This parameter can be set to the maximum current rating of the device. When any component of the junction current exceeds imelt, Spectre issues a warning and the results become inaccurate. The junction current is linearized above the value of imelt to prevent arithmetic exception, with the exponential term replaced by a linear equation at imelt.

Breakdown Region Warnings

Messages like the following are breakdown region warnings:

```
D2: Breakdown voltage exceeded.
```

Q1: The collector-substrate voltage exceeded breakdown voltage.

The warning message identifies the relevant component name (D2 and Q1) and the affected junction.

The Spectre simulator issues breakdown region warnings only when you specify conditions for them. For information on setting parameters to identify a breakdown region, see "Customizing Error and Warning Messages" on page 284.

Missing Diode Would Be Forward-Biased

Warning from spectre at time = 501.778 ns during transient analysis tran_to_1u. i1.q0: Missing collector-substrate diode would be forward biased.

Notice from spectre at time = 510.1688 ns during transient analysis tran_to_1u.

Identifying Problems and Troubleshooting

```
i1.q0: Missing collector-substrate diode returns to normal bias condition.
```

Most p-n junctions in semiconductor models include both a resistive (the diode) and a capacitive (the junction capacitance) model. If the diode reverse saturation current is set to zero, the resistive part of the junction is turned off, and the Spectre simulator assumes that the resistive portion of the junction does not exist (but the junction capacitance may still be present). In this case, if the voltage across the missing diode is larger than 10 * Vt (where Vt is the thermal voltage), Spectre will issue a warning message telling you that the junction, which is missing, will be forward biased. A follow-up notice is issued if, and when, the device returns to a normal bias condition.

Tolerances Might Be Set Too Tight

When you simulate high-voltage or high-current circuits, the default tolerances might be tight enough to make convergence difficult or impossible. If you get a "Tolerances might be set too tight" message, try relaxing tolerances by increasing the value of reltol, iabstol, and vabstol.

Parameter Is Unusually Large or Small

The Spectre simulator checks the parameter values to see if they are within a normal range of expected values. This check can catch data entry errors or identify situations that can cause the Spectre simulator to have difficulties simulating the circuit.

The "Parameter is unusually large or small" message issues a notice about a parameter value. The message looks like one of the following:

```
NPNbjt: 'rb' has the unusually small value of 1mOhms.
PNPbjt: 'tf' has the unusually large value of 1Gs.
OA1.Q16 of ua741: 'region' has the unusual value of rev.
```

If you receive such a message, check the parameter. If the unusual parameter value is correct, you can ignore this message.

The limits settings that generate these warning messages are soft limits, as opposed to hard limits settings. Hard limits stop a simulation if they are violated, the Spectre simulator has automatic soft limits on a few parameter values. However, you can override these limits or specify your own limits for parameters that do not have automatic limits. For more information, see "Customizing Error and Warning Messages" on page 284.

gmin Is Large Enough to Noticeably Affect the DC Solution

Warning detected by spectre during DC analysis oppoint.

Identifying Problems and Troubleshooting

Gmin=1pS is large enough to noticeably affect the DC solution.

By default, the Spectre simulator (and SPICE) adds a very small conductance of 10⁻¹² siemens called <code>gmin</code> across nonlinear devices. This conductance prevents nodes from floating if the nonlinear devices are turned off. By default, <code>GMIN=1e-12 Siemens</code>. The <code>gmin</code> parameter usually has a minimal effect on circuit behavior. However, some circuits, such as charge storage circuits are very sensitive to the small currents that flow through <code>gmin</code>.

You see a message such as the one given above if the current flowing through the gmin conductors, when treated as an error current, does not meet the gmin criteria. That is, the message is displayed if the current that enters any node from all attached gmin conductors is larger than either iabstol or reltol multiplied by the sum of the absolute value of the individual currents that enter the node.

If your circuit is not sensitive to small leakage currents, you can ignore this message. If your circuit is sensitive to these currents, reduce the gmin value or set it to zero.

Minimum Timestep Used

If this problem occurs, the analysis continues, and a warning message is displayed at each time point that does not meet the convergence criteria. In the Spectre simulator, this is very rare, but it does occur. Occasionally, this needs to be remedied to get the correct solution.

- 1. Make sure devices have junction and overlap capacitance specified.
- **2.** Increase maxiters, but do not go higher than 200.
- **3.** Change to the gear 2 or gear 2 only method of integration.
- **4.** Reduce other occurrences of the local truncation error cutting the timestep. Increase lteratio and increase the absolute error tolerances vabstol and iabstol. Do not go too high with any of these.
- **5.** Combine 2, 3, and 4 and set cmin to prevent instantaneous change at every node in the circuit.
- **6.** Relax reltol in combination with 5.

Syntax Errors

Warning from spectre in indab_7 during circuit read-in: na300.scs" 27: `c11': Encountered statement in Spectre format while in Spice language mode. This will not be supported in a future release.

The Spectre parser is dual mode and accepts both the Spectre native language and documented Spice2G6. The default for the Spectre simulator is SPICE. If you include a file

Identifying Problems and Troubleshooting

written in Spectre native syntax, you must either specify simulator lang=spectre or name the file with a .scs suffix. After Spectre processes the file, it reverts to the default mode. It is illegal to include Spectre syntax in the SPICE mode or vice versa.

For the MOS instance line given below:

```
M1 1 2 0 0 NCH W= 10u L= 2u
```

Spectre displays the following warning:

m1: Encountered statement in Spectre format while in SPICE language mode. This will not be supported in a future release.

Since the instance statement is valid in both languages, you can ignore this warning.

Topology Messages

```
Notice from spectre during topology check.

Only one connection to the following node:

4

No DC path from node `4' to ground, Gmin installed to provide path.
```

The Spectre topology checker identifies floating nodes and automatically inserts a gmin resistor (1e12 Ohms) to prevent a non-isolated solution. The Spectre simulator then displays a message telling you what it did.

Model Parameter Values Clamped

```
Warning from spectre during initial setup. 
n: The value of vj(pb) at T = 25 C is 50e-03 V, which is too small. Clamped to 0.1 V. 
n: The value of vj(pb) at T = 27 C is 41.7617e-03 V, which is too small. Clamped to 0.1 V.
```

The Spectre simulator clamps model parameter values to prevent numerical difficulties during simulation. When clamping is completed, Spectre displays a message indicating that it is using clamped values. There is no way to disable these clamps.

Invalid Parameter Warnings

```
Warning from spectre during circuit read-in.

'pchmod': `tox' is not a valid parameter for `bsim4' models.

'pchmod': `nch' is not a valid parameter for `bsim4' models.
```

Identifying Problems and Troubleshooting

This type of warning is issued any time you specify an invalid parameter in a model definition. The models included with Spectre have predefined model parameters. For more information, see spectre -h.

Only these predefined parameters can be used within a model definition. The Spectre circuit simulator issues similar warnings for invalid instance and subcircuit parameters.

Redefine Primitives Messages

```
Warning from spectre in `q2' during circuit read-in.
"redefPrim.scs" 6: `q2.resistor' redefines the primitive named `resistor
```

Spectre displays this message if you define a model or subcircuit with the same name as a built-in primitive device.

The following message tells you that the local definition will override the built-in definition:

```
model resistor bjt
q1 1 2 3 resistor
```

q1 is considered a bit device rather than a resistor.

Initial Condition Messages

```
Notice from spectre during IC analysis, during transient analysis 'tran1'. Initial condition computed for node 2 is in error by 755.152 uV. To reduce error in computed initial conditions, decrease `rforce'. However, setting rforce too small may result in convergence difficulties or in the matrix becoming singular.
```

The Spectre simulator sets initial conditions on a node by attaching a voltage source through a resistor. The default value of this resistor is 1, but you can control the value through the options parameter rforce. This notice indicates that the initial condition calculated for this node is about 755uV from the value specified in the netlist. You can lower the value of rforce to bring the voltage values into agreement in one of the following ways:

- Through the Analog Options window in the Analog Design Environment.
- Inserting an options statement in the netlist. An example is given below:

```
myOptions options rforce=1m
```

Output Messages

```
Notice from spectre during transient analysis 'tran1'.

No outputs found. Loosening output filter criterion to 'lvlpub'.
```

Identifying Problems and Troubleshooting

If you set save=selected, the Spectre simulator saves the voltages in the save statement. If the save statement does not contain any voltage values, Spectre issues the above warning and changes the save option default to lvlpub. This saves all node voltages.

Customizing Error and Warning Messages

You can customize the Spectre error and warning messages to some extent to fit the needs of a simulation. This section tells you about these customization options.

Selecting Limits for Parameter Value Warning Messages

You can accept Cadence default soft limits that determine when you receive warning messages about parameter values, or you can enter your own limits. You can also control which parameters the Spectre simulator checks. This section gives you instructions for all.

Accepting Cadence Range Limits Defaults

The most convenient option for deciding which warning messages you receive is to accept Cadence Range Limits Defaults. The Cadence defaults are located in your_install_dir/tools/dfII/etc/spectre/range.lmts, and you can examine them to see if they meet your needs. You can enter Cadence defaults with the SPECTRE_DEFAULTS environment variable in your shell initialization file (such as .profile or .cshrc). The entry in your shell initialization file looks like the following:

With this entry in the shell initialization file, the Spectre simulator reads parameter limits from your_install_dir/tools/dfII/etc/spectre/range.lmts.

You can override a SPECTRE_DEFAULTS setting with the param option of the spectre command. Specifying +param as a command line argument overrides +param in SPECTRE_DEFAULTS and tells the Spectre simulator to read range limits from the file you specify. Specifying -param tells the Spectre simulator to ignore the +param given in SPECTRE_DEFAULTS without giving the Spectre simulator a new location to find range limits.

Note: For more information about Spectre defaults, see the <u>Spectre Circuit Simulator</u> <u>Reference</u> manual and <u>"Customizing Percent Codes"</u> on page 271.

Identifying Problems and Troubleshooting

Creating a Parameter Range Limits File

In some circumstances, you might want to set your own parameter limits for warning messages. This might be the case, for example, if you are maintaining your own sets of model libraries. If you want to choose your own parameter limits for warnings, you must use a text editor to create a parameter range limits file.

A parameter range limits file requires the following syntax. Fields enclosed by single brackets ([]) are optional.

```
[ComponentKeyword] [model] [LowerLimit <[=]]
[|]Param[|] <[=] UpperLimit]</pre>
```

Observe the following syntax rules for a parameter limits file:

- You can specify limits for input, output, or operating-point parameters for either component instances or models. You can also specify limits for analysis parameters.
- You must specify the limits for each parameter on a single line.
- You can specify open bounds using angle brackets (<) or closed bounds using an angle bracket with an equal sign (<=). If you specify closed bounds, there can be no space between < and =.
- You can specify inclusive or exclusive ranges. If you specify exclusive ranges, the upper limit must be smaller than the lower limit.

The diagram on the following pages shows you the proper formats for range specifications.

Identifying Problems and Troubleshooting

Examples of Range Limits Specifications


Single boundary



Inclusive boundaries


$$1$$

Exclusive boundaries

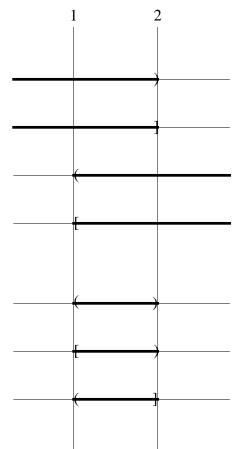

Identifying Problems and Troubleshooting

Examples of Range Limits Specifications (continued)

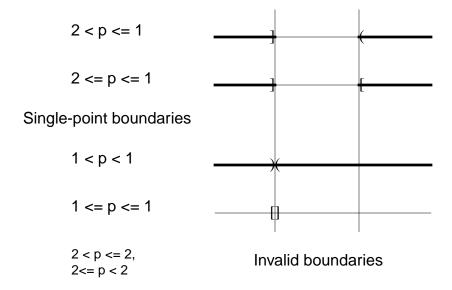

- The component keyword must be a Spectre name, not a name used for SPICE compatibility. For example, use mos3 rather than mos.
- If you specify more than one parameter limit for a component, you need to specify the component keyword only once. The Spectre simulator assumes the keyword is unchanged from the previous parameter unless you specify a new component keyword.
- If you give a parameter limit more than once, your last instructions override previous limits.
- If you mention a parameter but give it no limits, all limits are disabled for that parameter.
- You can specify limits for integer, real, or enumerated parameters. Enumerated parameters are those that take only predefined values (such as yes or no and all or none).

To specify limits on enumerated parameters, use the index of the enumeration in the limits declaration for that parameter. To find the index of a parameter of component name, see the parameter listings for the component name in the Spectre online help (spectre -h) and count the enumerations in the limits declaration starting from zero.

For example, to specify that the BJT operating-point parameter region should not be rev (reversed), look for the region parameter in the parameter listings for the BJT component. The region parameter is described as follows:

Identifying Problems and Troubleshooting

region=fwd

Estimated operating region. Possible values are off, fwd, rev, or sat.

For this parameter, off has index 0, fwd has index 1, rev has index 2, and sat has index 3. To specify a limit that notifies you if any BJT is reversed, use either of the following specifications:

```
2 < region < 2
or
3 <= region <= 1</pre>
```

- You must give the keyword model when you place limits on model parameters. If you do not give the keyword model, the limits are applied to instance parameters.
- You can indicate upper or lower limits for the absolute value of a parameter with the vertical line character(|vto|).

For example,

```
resistor 0.1 < |r| < 1M
```

specifies that the absolute value of \mathbf{r} should be greater than 0.1 ohm and less than 1 megohm. There can be no spaces between the absolute value symbols and the parameter name.

- You currently cannot place limits on vector parameters.
- You can write parameter limits using Spectre native-mode scale factors. For example, you can write the limit

```
f <= 1.0e6
as
f <= 1M</pre>
```

Example of a Parameter Range Limits File

This example shows a parameter limits file with correct syntax.

You can find the parameter names (1, w, as, ad, vto) and component keywords (mos3) in the parameter listings in the Spectre online help (spectre -h). This example instructs the Spectre simulator to accept without warnings mos3 components for these conditions:

Identifying Problems and Troubleshooting

- If channel length is more than or equal to 0.5 μm, or less than or equal to 100 μm
- If channel width is greater than or equal to 0. 5 μm
- If the area of source diffusion is greater than 0, or less or equal to 1e-8 m²
- If the area of drain diffusion is greater than 0, or less or equal to 1e-8 m²
- If the mos3 model parameter vto (the threshold voltage at zero body bias) has an absolute value less than or equal to 3

Entering a Parameter Range Limits File

You can enter a parameter range limits file in two ways:

Type the +param <filename> option of the spectre command from the command line or place it in an environment variable. <filename> is the name of the parameter range limits file. In the following example, limits3 is the range limits file for this simulation of test.circuit.

```
spectre +param limits3 test.circuit
```

■ Read the parameter limits file from within another file by putting an include statement with a syntax like the following example in your netlist.

```
include "filename"
```

filename is the name you give to the range limits file.

You can nest include statements. The only limit on depth is that imposed by the operating system on the number of files that can be open simultaneously in the Spectre simulator.

Paths you specify in filenames refer to the directory that contains the current file, not to the directory in which the Spectre simulator was started. For example, suppose your directory tree is set up as follows

```
design1/ckt1
design1/param.lmts
design1/resistor.lmts
design2/ckt2
design2/param.lmts
design2/resistor.lmts
```

and you run the Spectre simulator in design1 with the following spectre command:

```
spectre +param ../design2/param.lmts ckt1
```

If the file design1/param.lmts contains the line

```
include "resistor.lmts"
```

Identifying Problems and Troubleshooting

the Spectre simulator reads in the design2/resistor.lmts file, but not the design1/resistor.lmts file.

Requesting Breakdown Region Warnings for Transistors

If you want warning messages about the breakdown regions of transistors, you must set the appropriate parameters for each component when you identify the component with an instance or model statement. For most transistors, you set the bvj parameter.

For BJTs, you must set three parameters: bvbe, bvbc, and bvsub. These are breakdown parameters for the base-emitter, the base-collector, and the substrate junctions.

Diodes are also exceptions because you can set both the bvj and bv parameters. You need two different parameters for the diode breakdown voltage because of the Zener breakdown model in the diode. When you use the diode as a Zener diode, it is purposely biased in the breakdown region, and you do not want to be warned about the Zener breakdown. By specifying the bv parameter, you tell the Spectre simulator to implement the Zener diode model at bv.

Telling Spectre to Perform Additional Checks of Parameter Values

You can perform a check analysis at any point in a simulation to be sure that the values of component parameters are reasonable. You can perform checks on input, output, or operating-point parameters. The Spectre simulator checks parameter values against parameter soft limits. To use the check analysis, you must also enter the +param command line argument with the spectre command to specify a file that contains the soft limits.

The following example illustrates the syntax of the check statement. It tells the Spectre simulator to check the parameter values for instance statements.

ParamChk check what=inst

- ParamChk is your unique name for this check statement.
- The keyword check is the component keyword for the statement.
- The what parameter tells the Spectre simulator which parameters to check.

The what parameter of the check statement gives you the following options:

Option	Action	
none	Disables parameter checking.	
models	Checks input parameters for all models only.	

Identifying Problems and Troubleshooting

Option	Action	
inst	Checks input parameters for all instances only.	
input	Checks input parameters for all models and all instances.	
output	Checks output parameters for all models and all instances.	
all	Checks input and output parameters for all models and all instances.	
oppoint	Checks operating-point parameters for all models and all instances.	

Selecting Limits for Operating Region Warnings

The Spectre simulator lets you specify forbidden operating regions for transistors. If a transistor operates in a forbidden operating region, the Spectre simulator sends you a warning message. This feature is available for BJTs, MOSFETs, JFETs, and GaAs MESFETs.

Specifying Forbidden Operating Regions for Transistors

You specify a forbidden operating region in a transistor with the alarm parameter. The alarm parameter gives you the following options:

Option	Description
none	The default condition with no warnings issued.
off	Warns if the transistor is turned off.
triode	Warns if the transistor operates in the triode region (available for MOSFETs).
sat	Warns if the transistor operates in the saturation region.
subth	Warns if the transistor operates in the subthreshold region (available for MOSFETs).
fwd	Warns if the transistor is forward-biased (available for BJTs).
rev	Warns if the transistor is reverse-biased.

For example, to be sure that a group of MOSFETs always operates in the saturation region, you enter this model statement:

Identifying Problems and Troubleshooting

Each of the three alarm parameters in this example identifies a forbidden operating condition. Operating the device anywhere except in the saturation region triggers a warning. The warning looks like the following:

Warning detected by spectre during transient analysis 'timesweep'. M1: Device operated in the triode region.

Defining BJT Operating Regions

The Spectre simulator provides two parameters, <code>vbefwd</code> and <code>vbcfwd</code>, that let you specify the boundaries between BJT operating regions. The default value for each parameter is 0.2 volts.

The following table shows you the criteria the Spectre simulator uses to determine BJT operating regions.

Region	Bias Conditions	
off	$V_{be} <= { m vbefwd}$ and $V_{bc} <= { m vbcfwd}$	
saturation	V_{be} > vbefwd and V_{bc} > vbcfwd	
forward	V_{be} > vbefwd and V_{bc} <= vbcfwd	
reverse	$V_{be} <= { m vbefwd}$ and $V_{bc} > { m vbcfwd}$	

Range Checking on Subcircuit Parameters

You can test the value of subcircuit parameters with the paramtest component. If the parameters meet your testing criteria, you can print an informational message, print a warning, or print an error message and terminate the program.

Formatting the paramtest Component

The paramtest component has the following format:

Name paramtest parameter=value...

- Name is your unique name for this paramtest component.
- The keyword paramtest is the component keyword for the component.
- The parameters specify the tests that are applied to the parameters, the action taken if parameters satisfy the test conditions, and the text of the message that is printed when parameters satisfy the test conditions.

Identifying Problems and Troubleshooting

Rules and Guidelines to Remember

- If you specify more than one test, the conditional action is taken if any test passes.
- If you use the paramtest component without specifying test conditions, the specified actions are taken, and the message is printed unconditionally. This option is useful for using the paramtest component with the if statement. The paramtest instruction can be followed whenever a given if statement option is executed.

The paramtest Options

The following table explains the possible paramtest options.

Parameter	Instruction
printif	Informational message is printed if test condition is satisfied.
warnif	Warning is printed if test condition is satisfied.
errorif	Program quits and error message is printed if testing condition is satisfied.
message	Parameter value is the message text.
severity	You set this parameter when you use paramtest without a test condition. It specifies the type of message printed and the action to be taken, if any. The possible values are debug, status, warning, error, and fatal. If you specify error, the current analysis quits with an error message. If you specify fatal, the whole simulation stops.

A paramtest Example

This example uses three consecutive paramtest statements to check the values of four parameters—1, w, 1s, and 1d. If a parameter value satisfies a test condition, one of three different warning messages is printed:

```
TooShort paramtest warnif=(l < lum) \ message="Channel length for nmos must be greater than lu." TooThin paramtest warnif=(w < lum) \ message="Channel width for nmos must be greater than lu." TooNarrow paramtest warnif=(ls < lum) warnif=(ld < lum) \ message="Strip width for nmos must be greater than lu."
```

Identifying Problems and Troubleshooting

Controlling Program-Generated Messages

The Spectre simulator normally sends error, warning, and informational messages to the screen. To prevent confusion, the Spectre simulator limits the amount of material it sends to the screen. You can, however, get a more complete printout of messages if you send the messages to a log file that you can generate with the spectre command or in a SPECTRE_DEFAULTS environment variable.

Specifying Log File Options

You can choose from among the following command line options:

+log <file></file>	The Spectre simulator sends all messages to a log file as well as printing to the screen. You specify the name for the file. You can use +1 as an abbreviation of +log.
=log <file></file>	The Spectre simulator sends all messages to a log file but does not print to the screen. You specify the name for the file. You can use $=1$ as an abbreviation of $=log$.
-log	The Spectre simulator does not create a log file. You can use -1 as an abbreviation of -log. This is the default option.

Command Line Example

The following entry on the command line runs a simulation for circuit smps.circuit and sends all messages to a log file named smps.logfile:

```
spectre = log smps.logfile smps.circuit
```

Setting Environment Variables

If you specify log file options in a SPECTRE_DEFAULTS environment variable, you might want to name log files according to some system that helps you keep track of log files from different simulations. Spectre predefined percent codes are useful for this. The following example uses the predefined percent code %C to create log filenames based on the input filename. If you run a simulation for smps.circuit, the Spectre simulator creates a log file named smps.circuit.logfile. You place the SPECTRE_DEFAULTS environment variable in the .cshrc or .profile files.

setenv SPECTRE DEFAULTS "=log %C.logfile"

Identifying Problems and Troubleshooting

For more information about predefined percent codes and the SPECTRE_DEFAULTS environment variable, see <u>Chapter 12</u>, "Managing Files."

Suppressing Messages

There are also spectre command options that let you print or suppress error, warning, or informational messages:

Prints error messages
 Does not print error messages
 Prints warning messages
 Warning Does not print warning messages
 Prints informational messages
 Does not print informational messages

As a default, the Spectre simulator prints all these messages.

Correcting Convergence Problems

In this section, you will learn about procedures that can help you if a simulation does not converge.

Correcting DC Convergence Problems

If you have DC convergence problems, these suggestions might help you. Simple solutions generally precede more radical or complex measures in the list.

- Evaluate and resolve any warning or error messages.
- Check for circuit connection errors. Check to see that the polarity and value are correct for independent sources. Check to see if the polarity and multiplier are correct for controlled sources.
- Try all of the homotopy methods (gmin, source, ptran, and dptran). These are tried by default.
- Check for an incorrect estimated operating region. The default estimated operating region in the Spectre simulator is on in the forward region for all devices. If there are a

Identifying Problems and Troubleshooting

reasonable number of devices that are really off, set them off in the schematic. For a large number of devices, this might not be practical.

■ Check for extremely high gain circuits with nonlinearities and feedback. The convergence criteria are applied to all nodes in the circuit. The output of the gain block meets Kirchhoff's Current Law and delta (reltol*V) about 1 part in 10³ by default. Because of the gain, the input must move by this value divided by the gain. If the gain is high (for example, 10³), the input must move less than 1 part in 10¹¹. This is an extremely small motion from iteration to iteration that might not be achievable. If the gain is even higher, the numerical resolution of the machine might be approached. About 15 digits of resolution is available in a 64-bit floating-point number. In this case, the gain needs to be reduced.

Note: In this case, one node (the output) controls convergence, and all the other nodes are more accurate than the convergence criteria by itself would predict. This is typical for most circuits.

- Enable the topology checker (set topcheck=full on the options statement) and pay attention to any warnings.
- Increase maxiters for the DC analysis.
- If you have convergence problems during a DC sweep, reduce the step size.
- Check for unusual parameter values using the parameter range checker (add +param param-limits-file to the spectre command line arguments) and pay attention to any warnings.
 - Print out the minimum and maximum parameter values by placing an info statement in the netlist. Make sure that the values for the instance, model, output, temperature-dependent, and (if possible) operating-point parameters are reasonable.
- Avoid using very small floating resistors, particularly small parasitic resistors in semiconductors. Use voltage sources or iprobes to measure currents instead. Small floating resistors connected to high impedance nodes can cause convergence difficulties. rbm in the bipolar model is especially troublesome.
- If the minr model parameter is set, make certain it is set to 1 mOhm or larger.
- Use realistic device models. Make sure that all component parameters are reasonable, particularly nonlinear device model parameters.
- Increase the value of gmin with the options statement.
- Loosen tolerances, particularly absolute tolerances such as iabstol (on the options statement).

Identifying Problems and Troubleshooting

- Simplify the nonlinear component models. Try to avoid regions in the model that might cause convergence problems.
- When you have a solution, write it to a nodeset file using the write parameter. When you run the simulation again, read the solution back in using the readns parameter in the dc statement.
- If this is not the first analysis, the solution from the previous analysis might be an inadequate solution estimate because it differs too much from the solution for the current analysis. If this is so, set restart=yes.
- If you have an estimate of the solution, use nodeset statements or a nodeset file to set as many nodes as possible.
- If using nodesets or initial conditions causes convergence difficulties, try increasing rforce with the options statement.
- If you are simulating a bipolar analog circuit, make sure the region parameters on all transistors and diodes are set correctly.
- If the analysis fails at an extreme temperature but succeeds at room temperature, try adding a DC analysis that sweeps temperature. Start at room temperature, sweep to the extreme temperature, and write the last solution to a nodeset file.
- Use numeric pivoting in the sparse matrix factorization. Set pivotdc=yes with the options statement. Sometimes you must also increase the pivot threshold to between 0.1 to 0.5 by resetting the pivrel parameter with the options statement.
- Divide the circuit into pieces and simulate them individually. Make sure that results for a part alone are close to results for that part combined with the rest of the circuit. Use the results to create nodesets for the whole circuit.
- Try replacing the DC analysis with a transient analysis. Modify all the independent sources to start at zero and ramp to the independent source DC values. Run the transient analysis well beyond the time when all the sources have reached their final values. Write the final point to a nodeset file.

You can make this transient analysis more efficient with one of the following procedures:

	Set the integration method to backward-Euler (method=euler).	
--	--	--

	Loosen the	local	truncation	error cr	iteria b	y increasing 1	lteratio	to 50	or more.
--	------------	-------	------------	----------	----------	----------------	----------	-------	----------

Occasionally, an oscillator in the circuit causes the transient analysis to terminate or work very slowly.

Identifying Problems and Troubleshooting

Correcting Transient Analysis Convergence Problems

You can use two approaches to eliminate transient analysis convergence problems. The first strategy is to reduce the effect of discontinuities in nonlinear capacitors. The second method is to eliminate discontinuous jumps in the solution. Try the following suggestions if you have difficulty with transient analysis convergence:

- Use a complete set of parasitic capacitors on nonlinear devices to avoid jumps in the solution waveforms. Specify nonzero source and drain areas on MOS models.
- Use the cmin parameter to install a small capacitor from every node in the circuit to ground. This usually eliminates any jumps in the solution.
- If you can identify a nonlinear capacitance that might have a discontinuity, simplify the nonlinear capacitor model. If you cannot actually simplify the model, modifying it might help convergence.
- As a last resort, relax the tolerance values for the lteratio or reltol parameters and widen transitions in the stimulus waveforms.

Correcting Accuracy Problems

If you need greater accuracy from a Spectre simulation, the most common solution is to tighten the reltol parameter of the options or set statements. In addition, be sure that the absolute tolerance parameters, vabstol and iabstol, are set to appropriate values. If tightening reltol does not help or if it greatly slows the simulation, try the additional suggestions in the following sections.

Suggestions for Improving DC Analysis Accuracy

- Be sure there are no errors in the circuit. Use the computed DC solution and the operating point to debug the circuit. Check the topology, the component parameters, the models, and the power supplies.
- Be sure you are using appropriate models and that the model parameters are consistent and correct.
- If the circuit might have more than one solution, use nodeset statements to influence the Spectre simulator to compute the solution you want.
- Be sure that gmin is not influencing the solution. If possible, set gmin to 0 (in an options or set statement).

Identifying Problems and Troubleshooting

Suggestions for Improving Transient Analysis Accuracy

- Verify that the circuit biased up properly. If it did not, there might be a problem in the topology, the models, or the power supplies.
- Be sure you are using appropriate models and that the model parameters are consistent and correct. Check the operating point of each device.
- Set the transient analysis parameter errpreset to conservative.
- If there is a charge conservation problem, use only charge-conserving models if you are not already doing so. Then tighten reltol to increase accuracy. (With the Spectre simulator, only customer-installed models might not be charge conserving.)
- Be sure that gmin is not influencing the solution. If possible, set gmin to 0 (in an options or set statement).
- If a solution exhibits point-to-point ringing, set the integration method in the transient analysis to Gear's second-order backward-difference formula (method=gear2only).
- If a low-loss resonator exhibits too much loss, set the integration method in the transient analysis to the trapezoidal rule (method=traponly).
- If the initial conditions used by the Spectre simulator are not the same as the ones you specified, decrease the rforce parameter in the options or set statements until the initial conditions are correct.
- If the Spectre simulator does not accurately follow the turn-on transient of an oscillator, set the maxstep parameter of the transient analysis to one-tenth the size of the expected period of oscillation or less.

A

Example Circuits

This appendix contains example netlists for testing the BSIM3v3 standard model.

- Notes on the BSIM3v3 Model on page 301
- Spectre Syntax on page 301
- SPICE BSIM 3v3 Model on page 301
- Spectre BSIM 3v3 Model on page 302
- Ring Oscillator Spectre Deck for Inverter Ring with No Fanouts (inverter ring.sp) on page 302
- Ring Oscillator Spectre Deck for Two-Input NAND Ring with No Fanouts (nand2_ring.sp) on page 304
- Ring Oscillator Spectre Deck for Three-Input NAND Ring with No Fanouts (nand3 ring.sp) on page 305
- Ring Oscillator Spectre Deck for Two-Input NOR Ring with No Fanouts (nor2_ring.sp) on page 307
- Ring Oscillator Spectre Deck for Three-Input NOR Ring with No Fanouts (nor3_ring.sp) on page 308
- Opamp Circuit (opamp.cir) on page 310
- Opamp Circuit 2 (opamp1.cir) on page 310
- Original Open-Loop Opamp (openloop.sp) on page 310
- Modified Open-Loop Opamp (openloop1.sp) on page 311
- Example Model Directory (q35d4h5.modsp) on page 311

Notes on the BSIM3v3 Model

The Spectre[®] circuit simulator supports the standard BSIM 3v3 MOS model (both BSIM 3v3.1 and BSIM 3v3.2) as published by the University of California at Berkeley. Further information about this model can be obtained by using Spectre's online help by typing spectre -h bsim3v3 at the command line or by consulting the BSIM3 home page at www-device.eecs.berkeley.edu/~bsim3/index.html

Spectre does not add proprietary parameters to its implementation of the standard model.

Spectre Syntax

Notes explaining Spectre syntax are included as comments throughout the example netlists.

The Spectre circuit simulator reads Spice2G6 input along with its own native format. The model card can therefore be specified in either format. Below is an example of each. Note that the valid parameter list does not change, only the primitive name, level designation, and version/type parameters.

Beginning with the 4.4.3 release, the Spectre simulator is compatible with SPICE input language beyond documented SPICE2G6. Contact your local Cadence representative for more details.

SPICE BSIM 3v3 Model

```
*model = bsim3v3
*Berkeley Spice Compatibility
*Lmin= .35 Lmax= 20 Wmin= .6 Wmax= 20
.model N1 NMOS
+Level=11
+Tnom=27.0
+Nch=2.498E+17 Tox=9E-09 Xj=1.00000E-07
+Lint=9.36e-8 Wint=1.47e-7
+Vth0=.6322 K1=.756 K2=-3.83e-2 K3=-2.612
+Dvt0=2.812 Dvt1=0.462 Dvt2=-9.17e-2
+Nlx=3.52291E-08 W0= 1.163e-6 K3b= 2.233
+Vsat=86301.58 Ua=6.47e-9 Ub=4.23e-18 Uc=-4.706281E-11
+Rdsw=650 U0=388.3203 wr=1
+A0=.3496967 Ags=.1
+B0=0.546 B1= 1
+Dwg=-6.0E-09 Dwb=-3.56E-09 Prwb=-.213
+Keta=-3.605872E-02 A1=2.778747E-02 A2=.9
+Voff=-6.735529E-02 NFactor=1.139926 Cit=1.622527E-04
+Cdsc=-2.147181E-05 Cdscb= 0
+Dvt0w=0 Dvt1w=0 Dvt2w=0
+Cdscd=0 Prwq=0
+Eta0=1.0281729E-02 Etab=-5.042203E-03
+Dsub=.31871233
```

Example Circuits

```
+Pclm=1.114846 Pdiblc1=2.45357E-03 Pdiblc2=6.406289E-03

+Drout=.31871233 Pscbe1=5000000 Pscbe2=5E-09 Pdiblcb=-.234

+Pvag=0 delta=0.01

+Wl=0 Ww=-1.420242E-09 Wwl = 0

+Wln=0 Wwn=.2613948 Ll=1.300902E-10

+Lw=0 Lwl=0 Lln=.316394 Lwn=0

+kt1=-.3 kt2=-.051

+At=22400

+Ute=-1.48

+Ual=3.31E-10 Ubl=2.61E-19 Ucl=-3.42e-10

+Kt1l=0 Prt=764.3
```

Spectre BSIM 3v3 Model

```
*Berkeley Spice Compatibility
*Lmin= .35 Lmax= 20 Wmin= .6 Wmax= 20
simulator lang=spectre
model nch bsim3v3
+version=3.1
+type=n
+tnom=27.0
+nch=2.498E+17 tox=9E-09 xj=1.00000E-07
+lint=9.36e-8 wint=1.47e-7
+vth0=.6322 k1=.756 k2=-3.83e-2 k3=-2.612
+dvt0=2.812 dvt1=0.462 dvt2=-9.17e-2
+nlx=3.52291E-08 w0= 1.163e-6 k3b= 2.233
+vsat=86301.58 ua=6.47e-9 ub=4.23e-18 uc=-4.706281e-11
+rdsw=650 u0=388.3203 wr=1
+a0=.3496967 ags=.1
+b0=0.546 b1= 1
+dwg=-6.0e-09 dwb=-3.56e-09 prwb=-.213
+keta=-3.605872e-02 a1=2.778747e-02 a2=.9
+voff=-6.735529e-02 nfactor=1.139926 cit=1.622527e-04
+cdsc=-2.147181e-05 cdscb= 0
+dvt0w=0 dvt1w=0 dvt2w=0
+cdscd=0 prwg=0
+eta0=1.0281729e-02 etab=-5.042203e-03
+dsub=.31871233
+pclm=1.114846 pdiblc1=2.45357e-03 pdiblc2=6.406289e-03
+drout=.31871233 pscbe1=5000000 pscbe2=5e-09 pdiblcb=-.234
+pvag=0 delta=0.01
+wl=0 ww=-1.420242e-09 wwl=0
+wln=0 wwn=.2613948 ll=1.300902e-10
+lw=0 lwl=0 lln=.316394 lwn=0
+kt1=-.3 kt2=-.051
+at=22400
+ute=-1.48
+ua1=3.31e-10 ub1=2.61e-19 uc1=-3.42e-10
+kt11=0 prt=764.3
```

Ring Oscillator Spectre Deck for Inverter Ring with No Fanouts (inverter_ring.sp)

This example uses Spectre syntax.

Example Circuits

```
// Ring oscillator Spectre deck for INVERTER ring with no fanouts.
simulator lang=spectre
global 0 gnd vdd vss
aliasGnd (gnd 0) vsource type=dc dc=0
 // Spectre options to be used
SetOption1 options iabstol=1.00n audit=full temp=25
MyAcctl info what=inst extremes=yes
MyAcct2 info what=models extremes=yes
MyAcct3 info what=input extremes=yes
MyAcct5 info what=terminals extremes=yes
MyAcct6 info what=oppoint extremes=yes
// Next section is the subckt for inv
subckt inv ( ng a )
m1 ( nq \ a \ vdd \ vdd ) p l=0.35u \ w=2.60u \ ad=1.90p \ pd=6.66u \ as=1.90p \ ps=6.66u
m2 ( vss a nq vss ) n l=0.35u w=1.10u ad=0.80p pd=3.66u as=0.80p ps=3.66u
// Interconnect Caps for inv
c0 ( a vdd ) capacitor c=1.0824323e-15
c1 ( a nq ) capacitor c=3.0044e-16
c2 ( nq vss ) capacitor c=5.00186e-16
c3 ( ng vdd ) capacitor c=6.913993e-16
c4 ( a vss ) capacitor c=8.5372566e-16
ends
// Begin top level circuit definition
xinv1 ( 1 90 ) inv
xinv2 ( 2 1 ) inv
xinv3 ( 3 2 ) inv
xinv4 ( 4 3 ) inv
xinv5 ( 5 4 ) inv
xinv6 ( 6 5 ) inv
xinv7 ( 7 6 ) inv
xinv8 ( 8 7 ) inv
xinv9 ( 9 8 ) inv
xinv10 ( 10 9 ) inv
xinv11 ( 11 10 ) inv
xinv12 ( 12 11 ) inv
xinv13 ( 13 12 ) inv
xinv14 ( 14 13 ) inv
xinv15 ( 15 14 ) inv
xinv16 ( 16 15 ) inv
xinv17 ( 90 16 ) inv
// Next couple of lines sets variables for vdd and vss.
parameters vdd_S1=3.3
parameters vss S1=0.0
vdd_I1 ( vdd gnd ) vsource dc=vdd_S1
vss_I1 ( vss gnd ) vsource dc=vss_S1
// Set initial conditions:
ic 2=0 4=0 6=0 8=0 10=0
// Next line makes the call to the model
command line option if they are using Spectre 4.43 or greater.

// There is also a Spectre native symtom for the command of the symtom for the command of th
// NOTE: The user may utilize the '.lib' syntax with Spectre's +spp
// functionality. It is shown in q35d4h5.modsp.
include "q35d4h5.modsp" section=tt
```

Example Circuits

```
// Analysis Statement
tempOption options temp=25
typ_tran tran step=0.010n stop=35n
alter_ss altergroup {
  include "q35d4h5.modsp" section=ss
  parameters vdd_S1=3.0
}
alterTempTo100 alter param=temp value=100
ss_tran tran step=0.010n stop=35n
alter_ff altergroup {
  include "q35d4h5.modsp" section=ff
  parameters vdd_S1=3.3
}
alterTempTo0 alter param=temp value=0
ff tran tran step=0.010n stop=35n
```

Ring Oscillator Spectre Deck for Two-Input NAND Ring with No Fanouts (nand2_ring.sp)

This example uses Spectre syntax.

```
// Ring oscillator Spectre deck for 2-Input NAND ring with no fanouts.
simulator lang=spectre
global 0 gnd vdd vss
aliasGnd (gnd 0) vsource type=dc dc=0
// Spectre options to be used
SetOption1 options iabstol=1.00n audit=full
MyAcctl info what=inst extremes=yes
MyAcct2 info what=models extremes=yes
MyAcct3 info what=input extremes=yes
MyAcct5 info what=terminals extremes=yes
MyAcct6 info what=oppoint extremes=yes
// Next section is the subckt for na2
subckt na2 ( nq a )
m1 ( nq a vdd vdd ) p 1=0.35u w=2.70u ad=1.03p pd=3.46u as=1.98p ps=6.86u
m2 ( nq vdd vdd vdd ) p 1=0.35u w=2.70u ad=1.03p pd=3.46u as=1.98p ps=6.86u
m3 ( vss a 6 vss ) n 1=0.35u w=1.70<math>u ad=1.25p pd=4.86<math>u as=0.18p ps=1.91<math>u
m4 ( nq vdd 6 vss ) n 1=0.35u w=1.70u ad=1.25p pd=4.86u as=0.18p ps=1.91u
c0 ( a vdd ) capacitor c=1.0512057e-15
c1 (a nq) capacitor c=7.308e-17
c2 ( vdd vss ) capacitor c=6.12359e-16
c3 ( nq vss ) capacitor c=5.175377e-16
c4 ( nq vdd ) capacitor c=1.1668172e-15
c5 ( a vss ) capacitor c=9.530671e-16
// Begin top-level circuit definition
xna21 ( 1 90 ) na2
xna22 ( 2 1 ) na2
xna23 ( 3 2 ) na2
xna24 ( 4 3 ) na2
xna25 ( 5 4 ) na2
```

```
xna26 ( 6 5 ) na2
xna27 ( 7 6 ) na2
xna28 ( 8 7 ) na2
xna29 ( 9 8 ) na2
xna210 ( 10 9 ) na2
xna211 ( 11 10 ) na2
xna212 ( 12 11 ) na2
xna213 ( 13 12 ) na2
xna214 ( 14 13 ) na2
xna215 ( 15 14 ) na2
xna216 ( 16 15 ) na2
xna217 ( 90 16 ) na2
// Next couple of lines sets variables for vdd and vss.
parameters vdd_S1=3.3
parameters vss_S1=0.0
vdd_I1 ( vdd gnd ) vsource dc=vdd_S1
vss I1 ( vss gnd ) vsource dc=vss S1
    Next line initializes nodes within ring
ic 2=0 4=0 6=0 8=0 10=0
include "q35d4h5.modsp" section=tt
// Next line defines transient steps and total simulation time
tempOption options temp=25
tt_tran tran step=0.010n stop=35n
alter_ss altergroup {
include "q35d4h5.modsp" section=ss
parameters vdd_S1=3.0
alterTempTo100 alter param=temp value=100
ss_tran tran step=0.010n stop=35n
alter ff altergroup {
include "q35d4h5.modsp" section=ss
parameters vdd_S1=3.3
alterTempTo0 alter param=temp value=0
ff_tran tran step=0.010n stop=35n
```

Ring Oscillator Spectre Deck for Three-Input NAND Ring with No Fanouts (nand3_ring.sp)

This example uses Spectre syntax.

```
// Ring oscillator Spectre deck for 3-Input NAND ring with no fanouts.
simulator lang=spectre
global 0 gnd vdd vss
aliasGnd ( gnd 0 ) vsource type=dc dc=0
// Simulator options to use
SetOption1 options iabstol=1.00n audit=full
MyAcct1 info what=inst extremes=yes
MyAcct2 info what=models extremes=yes
```

Example Circuits

```
MyAcct3 info what=input extremes=yes
MyAcct5 info what=terminals extremes=yes
MyAcct6 info what=oppoint extremes=yes
// Next section is the subckt for na3p1
subckt na3p1 ( nq a )
m1 ( nq a vdd vdd ) p 1=0.35u w=2.90u ad=1.10p pd=3.66u as=2.12p ps=7.26u
m2 ( nq vdd vdd vdd ) p 1=0.35u w=2.90u ad=1.10p pd=3.66u as=1.10p ps=3.66u
m3 ( nq vdd vdd vdd ) p 1=0.35u w=2.90u ad=2.12p pd=7.26u as=1.10p ps=3.66u
m4 ( vss a 7 vss ) n l=0.35u w=2.40u ad=1.75p pd=6.26u as=0.25p ps=2.61u
{\tt m5} ( 7 vdd 8 vss ) n 1=0.35u w=2.40u ad=0.25p pd=2.61u as=0.25p ps=2.61u
m6 ( nq vdd 8 vss ) n 1=0.35u w=2.40u ad=1.75p pd=6.26u as=0.25p ps=2.61u
c0 ( 8 vdd ) capacitor c=1.341e-17
c1 ( vdd vss ) capacitor c=9.9445302e-16
c2 ( nq vss ) capacitor c=6.287e-16
c3 ( nq vdd ) capacitor c=2.0719818e-15
c4 ( a vss ) capacitor c=5.3760487e-16
c5 ( a vdd ) capacitor c=1.2446956e-15
c6 (a nq) capacitor c=7.308e-17
c7 ( 7 vdd ) capacitor c=2.0115e-17
ends
// Begin top level circuit definition
xna3p11 ( 1 90 ) na3p1
xna3p12 ( 2 1 ) na3p1
xna3p13 ( 3 2 ) na3p1
xna3p14 ( 4 3 ) na3p1
xna3p15 ( 5 4 ) na3p1
xna3p16 ( 6 5 ) na3p1
xna3p17 ( 7 6 ) na3p1
xna3p18 ( 8 7 ) na3p1
xna3p19 ( 9 8 ) na3p1
xna3p110 ( 10 9 ) na3p1
xna3p111 ( 11 10 ) na3p1
xna3p112 ( 12 11 ) na3p1
xna3p113 ( 13 12 ) na3p1
xna3p114 ( 14 13 ) na3p1
xna3p115 ( 15 14 ) na3p1
xna3p116 ( 16 15 ) na3p1
xna3p117 ( 90 16 ) na3p1
// Next couple of lines sets variables for vdd and vss.
parameters vdd_S1=3.3
parameters vss S1=0.0
vdd_I1 ( vdd gnd ) vsource dc=vdd_S1
vss_I1 ( vss gnd ) vsource dc=vss_S1
    Next line initializes nodes within ring
ic 2=0 4=0 6=0 8=0 10=0
include "q35d4h5.modsp" section=tt
// Transient analysis card
tempOption options temp=25
typ tran tran step=0.010n stop=35n
alter ss altergroup {
include "q35d4h5.modsp" section=ss
parameters vdd_S1=3.0
```

Example Circuits

```
alterTempTo100 alter param=temp value=100
ss_tran tran step=0.010n stop=35n
myAlter2 altergroup {
include "q35d4h5.modsp" section=ff
parameters vdd_S1=3.3
}
alterTempTo0 alter param=temp value=0
ff_tran tran step=0.010n stop=35n
```

Ring Oscillator Spectre Deck for Two-Input NOR Ring with No Fanouts (nor2_ring.sp)

This example uses Spectre syntax.

```
// Ring oscillator Spectre deck for 2-Input NOR ring with no fanouts.
simulator lang=spectre
global 0 gnd vdd vss
aliasGnd ( gnd 0 ) vsource type=dc dc=0
// Spectre options
SetOption1 options iabstol=1.00n audit=full
MyAcctl info what=inst extremes=yes
MyAcct2 info what=models extremes=yes
MyAcct3 info what=input extremes=yes
MyAcct5 info what=terminals extremes=yes
MyAcct6 info what=oppoint extremes=yes
// Next section is the subckt for no2
subckt no2 ( nq a )
m1 ( vdd a 6 vdd ) p l=0.35u w=4.80u ad=3.50p pd=11.06u as=0.50p ps=5.01u
m2 ( nq vss 6 vdd ) p 1=0.35u w=4.80u ad=3.50p pd=11.06u as=0.50p ps=5.01u
m3 ( vss a nq vss ) n 1=0.35u w=1.20u ad=0.88p pd=3.86u as=0.46p ps=1.96u
m4 ( vss vss nq vss ) n 1=0.35u w=1.20u ad=0.88p pd=3.86u as=0.46p ps=1.96u
c0 ( a vdd ) capacitor c=6.3676066e-16
c1 ( a ng ) capacitor c=5.3592e-17
c2 ( vdd vss ) capacitor c=5.39538e-16
c3 ( nq vss ) capacitor c=8.780327e-16
c4 ( nq vdd ) capacitor c=5.577428e-16
c5 ( a vss ) capacitor c=1.1100392e-15
ends
// begin top level circuit definition
xno21 ( 1 90 ) no2
xno22 ( 2 1 ) no2
xno23 ( 3 2 ) no2
xno24 ( 4 3 ) no2
xno25 ( 5 4 ) no2
xno26 ( 6 5 ) no2
xno27 ( 7 6 ) no2
xno28 ( 8 7 ) no2
xno29 ( 9 8 ) no2
xno210 ( 10 9 ) no2
xno211 ( 11 10 ) no2
xno212 ( 12 11 ) no2
xno213 (
         13 12 ) no2
xno214 ( 14 13 ) no2
```

Example Circuits

```
xno215 ( 15 14 ) no2
xno216 ( 16 15 ) no2
xno217 ( 90 16 ) no2
// Next couple of lines sets variables for vdd and vss.
parameters vdd_S1=3.3
parameters vss S1=0.0
vdd_I1 ( vdd gnd ) vsource dc=vdd_S1
vss_I1 ( vss gnd ) vsource dc=vss_S1
// Next line initializes nodes within ring.
   2=0 4=0 6=0 8=0 10=0
include "q35d4h5.modsp" section=tt
// Analysis
tempOption options temp=25
tt_tran tran step=0.010n stop=35n
ss_alter altergroup {
include "q35d4h5.modsp" section=ss
parameters vdd_S1=3.0
alterTempTo100 alter param=temp value=100
ss tran tran step=0.010n stop=35n
ff_alter altergroup {
include "q35d4h5.modsp" section=ff
parameters vdd_S1=3.3
alterTempTo0 alter param=temp value=0
ff tran tran step=0.010n stop=35n
```

Ring Oscillator Spectre Deck for Three-Input NOR Ring with No Fanouts (nor3_ring.sp)

This example uses Spectre syntax.

```
// Ring oscillator spectre deck for 3-Input NOR ring with no fanouts.
simulator lang=spectre
global 0 gnd vdd vss
aliasGnd (gnd 0) vsource type=dc dc=0
// Spectre options
SetOption1 options
                    iabstol=1.00n audit=full rforce=1 temp=25
MyAcctl info what=inst extremes=yes
MyAcct2 info what=models extremes=yes
MyAcct3 info what=input extremes=yes
MyAcct5 info what=terminals extremes=yes
MyAcct6 info what=oppoint extremes=yes
// Next section is the subckt for no3
subckt no3 ( ng a )
m1 ( vdd a 7 vdd ) p 1=0.35u w=3.60u ad=2.63p pd=8.66u as=0.38p ps=3.81u
m2 ( 7 vss 8 vdd ) p 1=0.35u w=3.60u ad=0.38p pd=3.81u as=0.38p ps=3.81u
m3 ( nq vss 8 vdd ) p 1=0.35u w=3.60u ad=1.37p pd=4.36u as=0.38p ps=3.81u
m4 ( nq \ vss \ 9 \ vdd ) p 1=0.35u \ w=3.60u \ ad=1.37p \ pd=4.36u \ as=0.38p \ ps=3.81u
m5 ( 9 vss 10 vdd ) p 1=0.35u w=3.60u ad=0.38p pd=3.81u as=0.38p ps=3.81u
m6 ( vdd a 10 vdd ) p 1=0.35u w=3.60u ad=2.63p pd=8.66u as=0.38p ps=3.81u
```

Example Circuits

```
m7 ( vss a nq vss ) n l=0.35u w=1.40u ad=1.02p pd=4.26u as=0.53p ps=2.16u
m8 ( vss vss nq vss ) n l=0.35u w=1.40u ad=0.53\bar{p} pd=2.16u as=0.53\bar{p} ps=2.16u
m9 ( vss vss nq vss ) n 1=0.35u w=1.40u ad=0.53p pd=2.16u as=1.02p ps=4.26u
c1 ( 9 nq ) capacitor c=3.7995e-17
c2 ( vdd vss ) capacitor c=1.3996057e-15
c3 ( ng vss ) capacitor c=3.1546797e-15
c4 ( ng vdd ) capacitor c=5.5551875e-16
c5 ( a vss ) capacitor c=1.2907233e-15
c6 ( a vdd ) capacitor c=2.1779808e-15
c7 ( 10 nq ) capacitor c=2.0115e-17
c8 ( a nq ) capacitor c=5.233362e-16
ends
// Begin top-level circuit definition
xno31 ( 1 90 ) no3
xno32 ( 2 1 ) no3
xno33 ( 3 2 ) no3
xno34 ( 4 3 ) no3
xno35 ( 5 4 ) no3
xno36 ( 6 5 ) no3
xno37 ( 7 6 ) no3
xno38 ( 8 7 ) no3
xno39 ( 9 8 ) no3
xno310 ( 10 9 ) no3
xno311 ( 11 10 ) no3
xno312 ( 12 11 ) no3
xno313 ( 13 12 ) no3
xno314 ( 14 13 ) no3
xno315 ( 15 14 ) no3
xno316 ( 16 15 ) no3
xno317 ( 90 16 ) no3
// Next couple of lines sets variables for vdd and vss.
parameters vdd_S1=3.3
parameters vss S1=0.0
vdd_I1 ( vdd gnd ) vsource dc=vdd_S1
vss_I1 ( vss gnd ) vsource dc=vss_S1
// Next line initializes nodes within ring
ic 2=0 4=0 6=0 8=0 10=0
include "q35d4h5.modsp" section=tt
// Analysis
tempOption options temp=25
typ_tran tran step=0.010n stop=35n
alter ss altergroup {
include "q35d4h5.modsp" section=ss
parameters vdd_S1=3.0
alterTempTo100 alter param=temp value=100
ss tran tran step=0.010n stop=35n
alter_ff altergroup {
include "q35d4h5.modsp" section=ff
parameters vdd_S1=3.3
alterTempTo0 alter param=temp value=0
ff_tran tran step=0.010n stop=35n
```

Example Circuits

Opamp Circuit (opamp.cir)

This example uses Spectre's SPICE syntax.

```
.subckt opamp 1 2 6 8 9
m1 4 2 3 3 nch w=43u l=10u ad=0.3n as=0.3n pd=50u ps=50u
m2 5 1 3 3 nch w=43u l=10u ad=0.3n as=0.3n pd=50u ps=50u
m3 4 4 8 8 pch w=10u l=10u ad=0.3n as=0.3n pd=20u ps=20u
m4 5 4 8 8 pch w=10u l=10u ad=0.3n as=0.3n pd=20u ps=20u
m5 3 7 9 9 nch w=38u l=10u ad=0.3n as=0.3n pd=40u ps=40u
m6 6 5 8 8 pch w=344u l=10u ad=1.3n as=1.3n pd=350u ps=350u
m7 6 7 9 9 nch w=652u l=10u ad=2.3n as=2.3n pd=660u ps=660u
m8 7 7 9 9 nch w=38u l=10u ad=0.3n as=0.3n pd=40u ps=40u
cc 5 6 4.4p
ibias 8 7 8.8u
.ends opamp
```

Opamp Circuit 2 (opamp1.cir)

This example uses Spectre's SPICE syntax.

```
.subckt opamp 1 2 6 8 9
m1 4 2 3 3 nch w=20u l=0.5u ad=0.3n as=0.3n pd=50u ps=50u
m2 5 1 3 3 nch w=20u l=0.5u ad=0.3n as=0.3n pd=50u ps=50u
m3 4 4 8 8 pch w=20u l=0.5u ad=0.3n as=0.3n pd=20u ps=20u
m4 5 4 8 8 pch w=20u l=0.5u ad=0.3n as=0.3n pd=20u ps=20u
m5 3 7 9 9 nch w=20u l=0.5u ad=0.3n as=0.3n pd=40u ps=40u
m6 6 5 8 8 pch w=20u l=0.5u ad=1.3n as=1.3n pd=350u ps=350u
m7 6 7 9 9 nch w=20u l=0.5u ad=2.3n as=2.3n pd=660u ps=660u
m8 7 7 9 9 nch w=20u l=0.5u ad=0.3n as=0.3n pd=40u ps=40u
cc 5 6 4.4p
ibias 8 7 8.8u
.ends opamp
```

Original Open-Loop Opamp (openloop.sp)

```
* Allen & Holmberg, p. 438 - Original Open Loop OpAmp Configuration
vinp 1 0 dc 0 ac 1.0
vdd 4 0 dc 5.0
vss 0 5 dc 5.0
vinm 2 0 dc 0
cl 3 0 20p
x1 1 2 3 4 5 opamp
** Bring in opamp subcircuit
include "opamp.cir"
** Bring in models here
.model nch bsim3v3
.model pch bsim3v3 type=p
go.
simulator lang = spectre
tf (3 0) xf save=lvlpub nestlvl=1 start=1 stop=1K dec=20
simulator lang = spice
.dc vinp -0.005 0.005 100u
.print dc v(3)
```

Example Circuits

```
.ac dec 10 1 10MEG
.print ac vdb(3) vp(3
.end
```

Modified Open-Loop Opamp (openloop1.sp)

```
* Allen & Holmberg, p. 438 - Modified Open Loop OpAmp Configuration
vinp 1 0 dc 0 ac 1.0
vdd 4 0 dc 5.0
vss 0 5 dc 5.0
vinm 2 0 dc 0
cl 3 0 20p
x1 1 2 3 4 5 opamp
** Bring in opamp subcircuit
include "opamp1.cir"
** Bring in models here
.model nch bsim3v3
.model pch bsim3v3 type=p
simulator lang = spectre
tf (3 0) xf save=lvlpub nestlvl=1 start=1 stop=1K dec=20
simulator lang = spice
.dc vinp -0.10 0.10 10u
.print dc v(3)
.ac dec 10 1 10MEG
.print ac vdb(3) vp(3)
.end
```

Example Model Directory (q35d4h5.modsp)

```
//example model directory
simulator lang = spectre
library mosmodels
section tt
model n bsim3v3 tox=1.194e-08
model p bsim3v3 type=p tox=7.4e-09
endsection
section ss
model n bsim3v3 tox=1.242e-08
model p bsim3v3 type=p tox=7.724e-09
endsection
section ff
model n bsim3v3 tox=1.1544e-08
model p bsim3v3 type=p tox=7.148e-09
endsection
endlibrary
```

B

Dynamic Loading

The Spectre[®] circuit simulator supports dynamic loading of device models. This feature allows you to dynamically load device primitives (stored in shared objects) at run time. This is useful for developing and distributing models.

Configuration File

The Spectre circuit simulator can be configured to load a specific set of shared objects based on the content of a set of configuration files. The default CMI (compiled-model interface) configuration file is shown below.

```
; The default search path is
; $CDS_ROOT/tools/spectre/lib/cmi/%M
; This file is automatically generated.
; Any changes made to it will not be saved.
load libnortel.so
load libphilips.so
load libsiemens.so
load libstmodels.so
```

The CMI file allows legal UNIX file paths and Spectre predefined percent codes. For more information on predefined percent codes, see <u>"Description of Spectre Predefined Percent Codes"</u> on page 270.

Configuration File Format

The following commands can be used in the configuration file:

Command	Action	
setpath	Specifies the search path.	
prepend	Adds a path before the current search path.	
append	Adds a path after the current search path.	

Dynamic Loading

Command	Action	
load	Adds a shared object to the list of shared objects to load.	
unload	Removes a shared object from the list of shared objects to load.	

The following examples show the syntax for these commands.

To specify a search path:

setpath path [path2 ...path N]

Example 1:

setpath \$HOME/cds/4.4.6/tools.\$CDS_SYSNAME/spectre/lib/cmi/%M

Example 2:

setpath (\$HOME/myLib/cmi/%M \$HOME/cds/4.4.6/tools.\$CDS_SYSNAME/spectre/lib/cmi/
%M)

To prepend a path:

prepend path [path 2 ... path N]

Example 1:

prepend \$HOME/myLib/cmi/%M

Example 2:

prepend (\$HOME/myLib/cmi/%M \$HOME/cds/4.4.6/tools.\$CDS_SYSNAME/spectre/lib/cmi/%M)

To append a path:

append path [path2 ... path N]

Example 1:

append \$HOME/myLib/cmi/%M

Example 2:

append (\$HOME/myLib/cmi/%M \$HOME/expLib/cmi/%M)

The default search path is the path to the directory that contains Spectre shared objects: \$CDS_ROOT/tools/spectre/lib/cmi/CMIVersion.

Dynamic Loading

To load a shared object:

load [path/] soname.ext

Example 1:

load libnortel.so

Example 2:

load \$HOME/myLib/cmi/%M/libmydevice.so

To unload a shared object:

```
unload [path/] soname.ext.version
```

Example 1:

unload libsiemens.so.1

Example 2:

unload \$HOME/myLib/cmi/%M/libmydevice.so

The name of the shared object file includes an extension and can also have a version number. The path to the shared object is optional. If you do not specify the path, the Spectre simulator uses the search path from the current configuration file.

A line that begins with a semicolon is a comment and is ignored. Empty lines are allowed and are ignored.


Precedence for the CMI Configuration File

The Spectre simulator reads configuration files in the following order:

- The default Cadence CMI configuration file
- The configuration file specified by the value of the \$CMI_CONFIG environment variable
- The file \$HOME/.cmiconfig, if it exists
- The CMI configuration file specified in the -cmiconfig argument

Dynamic Loading

Each configuration file modifies the previous configuration.

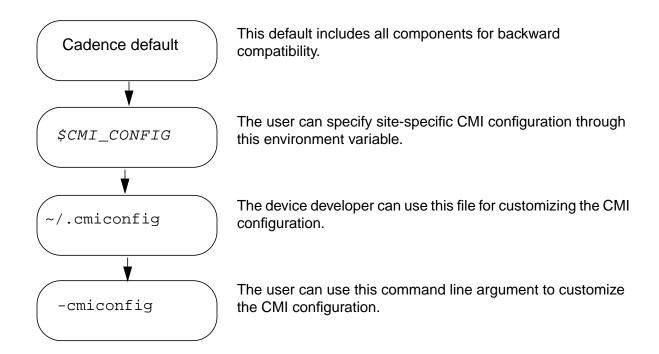

Configuration File Example

This section contains examples that show how configuration files can be used to customize the list of shared objects that the Spectre circuit simulator loads at run time. The default configuration file includes libnortel.so, libstmodels.so, libphilips.so, and libsiemens.so.

If you need only the ST models, you can create a configuration file called site_cmi_config that loads only libstmodels.so by unloading the other three shared objects:

```
;default search path is $CDS_ROOT/tools/spectre/lib/cmi/%M
    ;only libstmodels for this site
    ;this file is called site_cmi_config
    unload libnortel.so
unload libphilips.so
unload libsiemens.so
```

When the environment variable \$CMI_CONFIG is set to site_cmi_config, only libstmodels.so is loaded.

A model developer can create a file \$HOME/myLib/libmybjt.so consisting of the BJT model under development. To check the results of the BJT under development in

Dynamic Loading

libmybjt.so with the BJT503 models in libphilips.so, the developer can create a CMI configuration file in the home directory as follows:

```
;this is $HOME/.cmiconfig file
   ;I want to include libphilips.so released by Cadence so that
;I can check my BJT with BJT503.
   load libphilips.so
;I also want to include my BJT model from libmybjt.so
   append $HOME/myLib
   load libmybjt.so
```

CMI Versioning

The version format for CMI is major.minor. The value of major is increased when there are major changes that require CMI developers to recompile their components.

Type spectre -cmiversion to display the current CMI version.

The Spectre circuit simulator checks for CMI version compatibility for each shared object as well as for each primitive. This ensures that

- A shared object is compiled with the latest version of CMI
- The source code for each device primitive is up to date

Note: A primitive can be installed only once. Different versions of the same primitive cannot be used.

Index

Symbols	altergroup statement changing parameter values with 188,
% codes 244 predefined 269 %% predefined percent code 271 in syntax 15 //, in Spectre syntax 59 :: colon modifier 273 [] in syntax 14 [] in vectors 80 in Spectre syntax 59 {} in syntax 15 in syntax 14	using 70 Analog Artist case sensitivity of scale factors 84 use in mixed-signal simulation 23 use of with Spectre 20 Analog Waveform Display (AWD) brief description of 14, 20 using 34 analog workbench design system, use of with Spectre 23 analyses
A	AC <u>140</u> basic rules <u>68</u> brief description of types <u>131</u>
%A predefined percent code 270 absolute error tolerance 143 abstol parameter 76, 143 AC analysis 140 AC analysis, brief description of 131 accuracy correcting problems 298 improving 18 user control of tolerances 18 AHDL variables, saving 232 AHDL, definition 21 alarm parameter 291 algebraic functions 88 all as homotopy parameter option 267 as info statement parameter 203, 233 as pwr option 216, 228	envelope following 23, 132 example of analysis statement 32 formatting 66, 67 fourier 153 handling of prerequisite 68 Monte Carlo, performing 164 no default analysis 68 order performed 68 parameter sweep examples 163 parameter value defaults 135 rules for naming 68 sens 151 setting probes 135 specifying 32, 66, 134 statistical 164 subcircuits composed of
as save parameter option 218, 230 allglobal (relative error parameter) 142, 144	calling <u>139</u> formatting example <u>138</u> analysis order, netlist example of effective
alllocal (relative error parameter) 142, 144 allpub, as save parameter option 218, 230 alter statement 69, 189, 266 changing parameter values with example 187, 265 formatting 187, 265 use with circuit parameters 189, 266 example of use in netlist 112	use 135 analysis statement 66 examples 32, 67 formatting 66 annotate parameter in Monte Carlo analysis 171 in Spectre analyses 242 append path 313 appendsd parameter, Monte Carlo

customizing 242 WD (Analog Waveform Display) using 34 B backslash (\), in Spectre syntax 59 backward Euler integration method behavioral expressions 90 benchmark suite, MCNC 19 BERT model (for hot-electron degradation simulation) 179 stress parameters 179 binning 107 auto model selection 108 by conditional instantiation 210 conditional instances 109 rules 111 BJT operating regions, determining 292 blowup parameter 76 brackets in syntax 15 brackets in syntax 16 brackets in syntax 16 C C C (WSF) 234 A-Z 51 dot 51 title 51 center parameter 163 check statement controlling checks on parameter values 194, 290 formatting 194, 290 checking simulation status 241 checklimit statement 195 examples 196 syntax 195 checkpoint, spectre command diption 243 specifications for a single analysis 243 checkpoint, spectre command option 243 checkpoint, spectre command o	analysis 170 assert statement 189 examples 193 syntax 190 associated reference direction 58 automated testing 19 automatic model selection 108 examples in netlist 115 automatic recovery in transient analyses,	defaults 244 using the include statement with 72 Cadence Customer Support, contacting 20, 277 Cadence parameter storage format (PSF) 234, 246 Cadence range limits defaults 284 Cadence Signal Scan output format Cadence waveform storage format
backslash ()), in Spectre syntax 59 backward Euler integration method behavioral expressions 90 benchmark suite, MCNC 19 BERT model (for hot-electron degradation simulation) 179 stress parameters 179 binning 107 auto model selection 108 by conditional instances 109 rules 111 BJT operating regions, determining 292 blowup parameter 76 brackets in syntax 15 brackets in syntax 16 brackets in syntax 17 built-in constants 91 bvbc parameter, and breakdown region warnings 290 bvj parameter, and breakdown region warnings 290 bvsub parameter, and breakdown region warni	customizing <u>242</u> AWD (Analog Waveform Display)	(WSF) <u>234</u> cards A-Z <u>51</u> dot <u>51</u>
backslash (), in Spectre syntax 59 backward Euler integration method 144 behavioral expressions 90 benchmark suite, MCNC 19 BERT model (for hot-electron degradation simulation) 179 stress parameters 179 binning 107 auto model selection 108 by conditional instantiation 110 conditional instances 109 rules 111 BJT operating regions, determining 292 blowup parameter 76 braces in syntax 15 brackets in syntax 15 brackets in syntax 14 breakdown region warnings example of messages 279 requesting for transistors 290 BSIM 3v3, brief description 17 built-in constants 91 bvbc parameter, and breakdown region warnings 290 bvj parameter, and breakdown region warnings 290 bvsub parameter, and breakdown region warnings 290 bvsu	В	
%C predefined percent code 270 formatting 274	backward Euler integration method 144 behavioral expressions 90 benchmark suite, MCNC 19 BERT model (for hot-electron degradation simulation) 179 stress parameters 179 binning 107 auto model selection 108 by conditional instantiation 110 conditional instances 109 rules 111 BJT operating regions, determining 292 blowup parameter 76 braces in syntax 15 brackets in syntax 14 breakdown region warnings example of messages 279 requesting for transistors 290 BSIM 3v3, brief description 17 built-in constants 91 bvbc parameter, and breakdown region warnings 290 bvbe parameter, and breakdown region warnings 290 bvj parameter, and breakdown region warnings 290 bvsub parameter, and breakdown region warnings 290	check statement controlling checks on parameter values 194, 290 example 194, 290 formatting 194, 290 what parameter 195, 290, 291 checking simulation status 241 checklimit statement 195 examples 196 syntax 195 checkpoint files automatic creation after interrupts 243 creating automatically 242 creating from the command line 243 specifications for a single analysis 243 +checkpoint, spectre command option 243 checks on parameter values, controlling the number of 290 choosing output file formats 234 circuit age, controlling for 178 example 181 circuit parameters 84, 85 ckptperiod parameter, in transient analysis 244 closed loop gain, in netlist example of measuring 136 CMI (compiled model interface), description 20 CMI versioning 316 colon modifiers : (colon character) 273 chaining 273 :e (extension) 273
C. DIEDIOCESSOI (CPP)	%C predefined percent code 270 C preprocessor (CPP)	

of input filenames 272	maxiters parameter 296
:r (root) <u>273</u>	nodesets to correct 297
:t (tail) <u>273</u>	nonlinear component models,
colons (:), in Spectre syntax 59	simplifying <u>297</u>
comments, formatting for 59	numeric pivoting in the sparse matrix
compatible parameter 210	factorization 297
compiled model interface (CMI),	options statement settings to
description <u>20</u>	prevent <u>296</u>
components	oscillators causing 297
naming <u>30, 60</u>	pivotdc parameter, settings to
rules for names 60	correct 297
specifying initial conditions for 198, 259	pivrel parameter, resetting to
Composer-to-Spectre direct simulation	correct 297
environment <u>20</u>	realistic device models needed 296
conditional if statements	reduced in Spectre 19
example of use in netlist 115	region parameter settings in bipolar
formatting example 109	analog circuits causing 297
conditional instantiation <u>110</u>	region parameters of transistors and
specifying <u>109</u>	diodes <u>297</u>
warning <u>111</u>	replacing DC analysis with transient
configuration file	analysis to correct 2 <u>97</u>
default <u>312</u>	restarts to correct 297
example <u>315</u>	rforce parameter, increasing with
format <u>312</u>	nodesets <u>297</u>
precedence <u>314</u>	step size 296
connections, inherited <u>78</u>	system messages helpful 295
constants, built-in, table of 91	temperature sweeps to correct 297
continuation characters 50, 52	topcheck parameter enabling 296
continuation methods 267	transient analysis 298
control statements <u>68</u> , <u>69</u>	unusual parameter values, checking
definition 31	for <u>296</u>
formatting <u>69</u>	corners, example 114
paramset <u>210</u>	correlation coefficients 178
statistics <u>221</u>	correlation statements 177
use of in instance statement 31	CPP (C preprocessor)
controls, specifying <u>68</u>	defaults 244
conventions, typographic and syntax 14	using the include statement with 72
convergence problems 295	crigm parameter <u>180</u> criids parameter <u>180</u>
backward Euler integration method to correct 297	criuo parameter 180
correcting with current probes 296	crivth parameter 180
correcting with DC sweeps 297	.cshrc file
dividing the circuit into parts to	and environment defaults 245
correct 297	Cadence range limits 284
floating resistors causing 296	current probes
gmin parameter, increasing 296	correcting convergence problems
loosening iabstol parameter to	with <u>296</u>
correct 296	probe statement <u>215, 227</u>
loosening truncation error criteria to	saving individual currents with 214, 226
correct 297	setting multiple 219, 232
Iteratio parameter 297	setting with the save statement 215,
	

227	spectre command 244
when to use 214, 226	changing <u>245</u>
currents parameter	examining <u>244</u>
example <u>219</u> , <u>231</u>	defining a library 75
formatting 219, 231	degradation parameters (for hot-electron
not used in subcircuit calls 213, 225	degradation simulation) 180, 181
options statement 219, 231	Design Framework II, use of with
customer service, contacting 20, 277	Spectre 23
customizing	. · · · · · · · · · · · · · · · · · · ·
error and warning messages 284	dev parameter 161
percent codes 271	devices
	as pwr option 216, 228
D	diagnosis mode, use of <u>20</u>
U	differential amplifier, example of input
0/5 1 " 1 070	file <u>112</u>
%D predefined percent code 270	direction, associated reference <u>58</u>
damped pseudotransient method 267	directory names
data_compression <u>147</u>	generating 236
dataDir command line option 34	specifying your own 238
DC analysis 139	displaying a waveform with awd 35
brief description of 131	donominal parameter, Monte Carlo
correcting accuracy problems 298	analysis <u>170</u>
maxiters parameter, and convergence	double slash (//), in Spectre syntax 59
problems <u>296</u>	dptran, as homotopy parameter option 267
oppoint parameter <u>161</u>	Dracula, use of with Spectre 23
transfer curves 161	duoc parameter <u>180, 181</u>
DC convergence problems, correcting 295	duoe parameter 180, 181
dec parameter 163	dvthc parameter 180, 181
defaults	dvthe parameter 180, 181
analyses <u>68</u>	avine parameter <u>100, 101</u>
analysis parameters 135	
C preprocessor (CPP) 244	E
Cadence range limits for warnings 284	—
	:e colon modifier 273
+checkpoint spectre command	
option <u>242</u>	electrical current in Amperes 76
command line 244	electrical potential in Volts 76
controlling destination and format of	encrypt
Spectre results 244	file <u>249</u>
controlling system-generated	how to 248
messages 244	model card <u>252</u>
creating checkpoints and initiating	overview 247
recovery 244	Spectre netlist 247
measurement units of parameters 119	SPICE netlist <u>247</u>
name of the simulator 244	subcircuit <u>249</u>
overriding in UNIX environment	syntax <u>248</u>
variables <u>246</u>	.end <u>50</u>
percent codes 244	end <u>50</u>
screen display 244	enumerations, setting parameter limits
setting for environment with	with <u>81</u>
SPECTRE_DEFAULTS <u>284</u>	envelope following analysis 23, 132
simulation environment 244	environment variables, changing defaults

in <u>245</u>	(percent codes) 269
environments in which Spectre can be	creating from parts of input filenames
used <u>23</u>	(colon modifiers) 272
envlp <u>23, 132</u>	generation <u>236</u>
equal sign (=), in Spectre syntax 59	files
error conditions (terminate simulation)	state, reading <u>201</u> , <u>263</u>
internal errors 277	firstrun parameter, Monte Carlo
invalid parameter values 275	analysis <u>169</u>
singular Jacobian or matrix 276	using <u>171</u>
error messages <u>19</u>	floating resistors, and convergence
caused by invalid parameters in	problems <u>296</u>
subcircuit calls <u>98</u>	forbidden operating regions for transistors,
customizing <u>284</u>	specifying <u>291</u>
specifying conditions for in subcircuit	formatting
calls <u>98</u>	alarm parameter 291
error options of spectre command 295	analyses, composed of subcircuits 138
error tolerances	analysis parameters <u>134</u>
abstol parameter (error tolerance	analysis statements 66
parameter) 143	check statement 194, 290
errpreset parameter 142	colon modifiers 274
Iteratio (error tolerance parameter) 143	comment lines <u>59</u>
relref (error tolerance parameter) 143	conditional if statement 109
reltol parameter (error tolerance	control statements 69
parameter) <u>143</u>	currents parameter 219, 231
errpreset parameter <u>142,</u> <u>143</u> escaping special characters <u>62</u>	customized percent codes 271
estimating solutions with the nodeset	ic statement 198, 260 identical components in parallel 65, 74
statement 199, 261	identical subcircuits in parallel 65
euler (integration method parameter) 144	include statements 72
example in netlist	info statement 204, 234
conditional if statement 115	instance statements 62
parameterized inline subcircuit 115	line extension 59
paramtest statement 115	model statements 71
specifying N-ports 120	models for multiple components 64
exit codes, Spectre 241	nestlvl parameter 217, 229
explosion region warnings 278	nodeset statement 199, 261
expressions 86	options statement 209
as model parameters 72	parameter range limits file 285
in subcircuit parameters 97	parameter sweeps <u>159, 163</u>
extending statements beyond a single line,	paramtest specification 292
formatting for <u>59</u>	probe statement 215, 227
	pwr parameter <u>215,</u> <u>228</u>
_	rules for names 60
F	save parameter <u>215, 217, 228, 229</u>
	save statement <u>211</u> , <u>224</u>
failure criteria parameters (for hot-electron	scaling parameter values 83
degradation simulation) 180	scaling physical dimensions 118
field separators (input language syntax) 59	sens command 151
file formats, defining output 235	set statement 220, 267
filenames	S-parameter files 121
creating by modifying input filenames	specifying parameter values <u>84</u>

spectre command 240 starting a simulation 240 state files 201, 263 write parameter 200, 262 writefinal parameter 201, 262 subcircuit calls 97	hot-electron degradation, simulating 178 circuitage parameter 179 degradation parameters 179, 180 example 181 failure criteria parameters 180 options and restrictions 178
subcircuit definitions 94	results files 180
fourier	specifying the analysis 179
component	huge parameter <u>76</u>
synopsis <u>154</u>	hyperbolic functions <u>88</u>
model	
definition <u>154</u>	1
Fourier analysis	1
improvements in <u>17</u>	I 76
fourier analysis <u>153</u> frog parameter <u>161</u>	76
freq parameter <u>161</u> functions	iabstol parameter <u>210</u> convergence problems and <u>296</u>
algebraic <u>88</u>	setting to correct accuracy
hyperbolic <u>88</u>	problems 298
trigonometric <u>88</u>	ic parameter, in transient analyses 197,
functions, user-defined 92	259
<u> </u>	ic statement
	example <u>198,</u> <u>260</u>
G	formatting <u>198, 260</u>
	specifying initial conditions 197, 259
GaAs traveling wave amplifier, sample input	if statements 109
file <u>95</u>	imelt <u>279</u>
gauss parameter <u>175</u>	#include statements
Gaussian distribution 175	examples <u>72, 74</u>
gear2 (integration method parameter) <u>142,</u> 144	formatting <u>72</u> include statements <u>72</u>
gear2only (integration method	examples 74
parameter) <u>142, 144</u>	formatting 72
gmin parameter	of use in netlist 112
increasing value with convergence	rules for using 73
problems <u>296</u>	individual components, specifying 30, 62
resetting to correct error conditions 276	info (+/-), spectre command option 295
setting to correct accuracy	info statement 202, 232
problems <u>298, 299</u>	choosing the output destination 204,
warning about size of 281	233
gmin stepping 267	example <u>204,</u> <u>234</u>
gmin, as homotopy parameter option 267	formatting <u>204, 234</u>
ground, definition of <u>59</u>	options 203, 233
	informational messages, specifying conditions for in subcircuit calls 98
Н	conditions for in subcircuit calls <u>98</u> infotime 146
• •	inheritance 78
:h colon modifier 273	inherited connections 78
%H predefined percent code 270	initial conditions, specifying 197, 259
hard limit, definition 81	examples <u>198, 259, 260</u>
homotopy parameter 267	individual analyses 200, 262

transient analyses 197, 259 initial settings of the state of the simulator, modifying 189, 266 inline model statements, inside of inline subcircuits 103 inline subcircuits containing inline model statements 103 modeling parasitics 100 parameterized models 102 probing 101	kill -9, warning about use of 242 kill(1), as interrupt method 242 -USR1 option example 241 -USR2 option example 243 Kirchhoff's Current Law (KCL) 18, 59, 144 Kirchhoff's Flow Law (KFL) 18, 59, 144
process modeling 104 using 99 input data, reading from multiple files 72 input files, examples differential amplifier 112 GaAs traveling wave amplifier 95 process file 115 two port test circuit 120 uA741 operational amplifier 135 input language mixing SPICE and Spectre 54 input parameters, listing 202, 232 input, as info statement parameter 203, 233 inst, as info statement parameter 203, 233 instance correlation statement 177 instance scaling factor, changing with alter statement 189, 266 instance statements 62 annotated example 30 control statements 31 examples 64 formatting 62 model statements 31 parameter values 31 rules for using 64 use of in example 30 INT signal 242 interrupting a simulation 242 introductory netlist, how to use 26 invalid parameter values 275 iprobes, and convergence problems 296 italics in syntax 14	lang=spectre command 84 lang=spice command 84 language title line 51 language modes 59 library definition 75 library reference 75 library statements, using 75 limits, selecting for operating region warnings 291 lin parameter 163 line extension, formatting 59 listing parameter values 202, 232 literal characters 14 lnorm parameter 175 LO, definition of 22 load shared object 314 local truncation error 143 +log 294 -log 294 -log 294 log files, specifying options 294 log normal distribution 175 log parameter 163 login file, and environment defaults 245 loop gain, example of measuring in netlist 112 lteratio parameter 142, 143 convergence problems and 297 lvl, as save parameter option 217, 230 lvlpub, as save parameter option 217, 230
K	m factor 65
keywords <u>14</u> for save statement <u>212, 224</u> Spectre <u>60</u> kill command, UNIX	%M predefined percend code 270 magnetic flux in Webers 77 magnetomotive force in Amperes 76 main circuit signals, saving. See save statement 211, 224

master names 31 definition 30	inline <u>103</u> using <u>70</u>
model statements 31	modeling
maxdelta parameter 76	identical components in parallel 65, 74
maximum and minimum parameter values,	identical subcircuits in parallel 65
listing <u>202</u> , <u>233</u>	multidisciplinary <u>76</u>
maxiters parameter 296	N-ports <u>120</u>
maxstep parameter <u>142</u> , <u>145</u>	parasitics, in inline subcircuits 100
setting to correct accuracy	process, using inline subcircuits 104
problems <u>299</u>	models
MCNC benchmark suite 19	as info statement parameter 203, 233
measuring	charge conservation of 17
differential signals, example in	formatting for multiple components 64
netlist 112	
	selecting automatically 108
loop gain, example in netlist 112, 135	use of expressions in <u>72</u>
output resistance, netlist example	Monte Carlo analysis
discussed <u>136</u>	brief description of 134
power supply rejection, netlist example	characterization <u>178</u>
discussed <u>136</u>	examples 172
melting current warnings 279	modeling <u>178</u>
message control	parameters, table of 166
specifying the destination of 294	performing 164
suppressing 295	specifying statistics 177
	appointing statistics <u>177</u>
method parameter 142	specifying the first iteration number 171
euler setting 144	MOS models, advantages of Spectre
gear2 setting 144	version <u>17</u>
gear2only setting 144	MOS0 model, brief description <u>17</u>
setting to correct accuracy	multidisciplinary modeling 76
problems <u>299</u>	multiple analyses, example in netlist 112
trap setting 144	multiple components, creating models
trapgear2 (integration method	for 70
parameter) 145	multiplication factor 65
traponly setting 144	
minimum timestep used, fixing	N
warning <u>281</u>	IN
mismatch block 173	
mismatch correlation statement 177	n terminals (formatting in analysis
missing diode would be forward-biased	statements) <u>67</u>
(warning message) <u>279</u>	names, rules for
mixed-signal simulation 23	components 60
MMF 76	nodes 60
mod parameter <u>161</u>	old netlists 62
model	nestlvl parameter 217, 229
definition	netlist
(fourier) <u>154</u>	conventions <u>58</u>
model binning rules 111	definition <u>28</u>
model scaling factor, changing with alter	elements of 29
statement <u>189,</u> <u>266</u>	introduction to 29
model statement $\frac{31}{1}$	Spectre example 28
examples <u>32, 71</u>	netlist parameters, predefined 93
formatting 71	netlist statements 58

use of in example 30 newlink keywords 212, 224 newlink save statement 211, 224 Newton-Raphson iteration 267, 276 node capacitance table printing 205 nodes	transistors <u>291</u> operating-point parameters listing <u>202</u> , <u>233</u> saving with save statement <u>212</u> , <u>224</u> operational amplifier, example of characterization in one simulation run <u>135</u>
as info statement parameter 203, 233 definition of 59 naming 60 rules for names 60 specifying initial conditions with 198, 260	oppoint as DC analysis parameter 161 as info statement parameter 203, 233 options statement ckptclock option example 243 correcting convergence problems 296
nodeset statement 199, 261 nodesets 197, 259 convergence problems and 297 specifying for individual analyses 200,	defining output file formats 235 example 209 formatting 209 generating output directory names 238 overriding environment defaults 246
node-to-terminal map 203, 233 noise analysis, brief description of 131 none as homotopy parameter option 267 as info statement parameter 203, 233	parameters compatible <u>210</u> iabstol <u>210</u> rawfile <u>238</u> rawfmt 235
as pwr option 216, 228 as save parameter option 217, 229 nonlinear component models, and convergence problems 297	reltol <u>209</u> tempeffects <u>210</u> topcheck <u>276, 296</u> vabstol <u>210</u>
notifications, responding to 33 nport component, and S-parameter files 122 nport statement, example in netlist 120 N-ports	resetting options 267 setting tolerances with 209 OR-bars in syntax 14 order of analyses, netlist example of effective use 135
example <u>120</u> modeling <u>120</u> numerical error, improved control of <u>17</u> numruns parameter, Monte Carlo	output as info statement parameter 203, 233 data, controlling the amount of outputstart parameter 145
analysis <u>166</u> nutascii (output format) <u>234</u> nutbin (output format) <u>234</u> Nutmeg format <u>234</u>	skipping <u>145</u> strobing <u>145</u> directory names how Spectre generates <u>236</u> specifying your own <u>238</u>
0	file format options 234, 235 filenames, how Spectre generates 236 parameters, listing 202, 232
online help <u>20</u> open loop gain, in netlist example of	viewing 34 output resistance, netlist example of
measuring 136 operating regions determining for BJTs 292 selecting limits for warnings about 291 specifying forbidden regions for	measurement discussed <u>136</u> outputstart parameter <u>146</u> overriding defaults <u>246</u>

P	general rules for specifying 84 in instance statements 31
%P predefined percent code 270 p terminals (formatting in analysis statements) 67	invalid <u>275</u> listing <u>202, 232</u> permissible types <u>80</u>
pac analysis, brief description of 132	scaling <u>83</u>
param parameter 161	testing <u>292</u>
+param, spectre command option 284	vector <u>80</u>
parameter checking, stopping 195, 290	with arithmetic operators <u>86</u>
parameter range checker	with Boolean operators <u>86</u>
convergence problems 296	with built-in constants : 91
parameter range limits file	with user-defined functions 92
creating <u>285</u>	parameterized inline subcircuits
absolute value specifications 288	example of use in netlist 115
exclusive boundaries in 285	parameterized models, using inline
inclusive boundaries in 285	subcircuits <u>102</u>
model specifications 288	parameters 84
entering <u>289</u>	circuit <u>84, 85</u>
example 288	Monte Carlo analysis, table of 166
parameter storage format (PSF) 234	predefined netlist 93
formatting output files 246	subcircuit 84, 85
parameter sweep's	parameters statement 84
dev parameter <u>161, 162, 210</u>	paramfile parameter, Monte Carlo
examples	analysis <u>167</u>
linear sweep <u>163</u>	paramset 162
logarithmic sweep <u>163</u>	paramset statement 210
sweeping temperature 164	paramset statement, using 162, 210
with vector of values 163	paramtest statement
formatting <u>163</u>	checking subcircuit parameter values
freq parameter <u>161, 162, 210</u>	with <u>98</u>
mod parameter <u>161, 162, 210</u>	checking values of subcircuit
param parameter <u>161, 162, 210</u>	parameters 292
setting sweep limits 163	errorif option <u>293</u> example <u>293</u>
specifying <u>159</u>	example 233 example of use in netlist 115
temp parameter 162	formatting 292
with vector of values 164	message option 293
parameter values	printif option 293
changing for components 187, 265	severity option 293
changing for models 188, 265	warnif option 293
checking 195, 291	parasitic elements
all parameter values 195, 291	in parallel with device terminals 102
in instance statements 195, 291	in series with device terminals 102
in model statements <u>195,</u> <u>290</u> in subcircuit calls <u>98</u>	parasitics, modeling in inline
	subcircuits 100
operating-point parameters <u>195,</u>	parentheses (()), in Spectre syntax 59
<u>291</u> stopping <u>195, 290</u>	pdisto analysis, brief description of <u>22</u> , <u>132</u>
controlling the number of checks	percent codes 244
on 290	customizing <u>271</u>
example of altering in netlist 112	example <u>271</u>
oxample of altering in fields: 112	formatting 271

removing customized settings 271	date <u>270</u>
predefined <u>269</u> %% <u>271</u>	described <u>269</u> host name (network name) <u>270</u>
%A <u>270</u>	input circuit file name 270
$%C = \frac{270}{270}$	process ID 270
%D 270	program starting time 271
%H 270	simulator name 271
%M <u>270</u>	substitution in 271
%P <u>270</u>	version string 271
%S <u>271</u>	predefined quantities 76
substitution in 271	prepend path 313
%T <u>271</u> %V 271	previous solutions, starting analyses from 258
redirected files 272	prevoppoint parameter, in analyses 258
use with piped files 272	printout to screen, example 33
percent parameter, Monte Carlo	probe statement 215, 227
analysis <u>174, 176</u>	probes, setting in analyses 135
periodic AĆ analysis (pac), brief description	process block 173
of <u>132</u>	process corners, example 114
periodic distortion analysis (pdisto), brief	process file, sample input file 115
description of 132	process identification number (PID) 241
periodic noise analysis (pnoise), brief	use of 166
description of <u>132</u> periodic small-signal analyses,	process modeling, using inline subcircuits 104
description <u>22</u>	process parameter correlation
periodic steady-state analysis (pss), brief	statement 177
description of 21, 133	processparamfile parameter, Monte Carlo
periodic transfer function analysis (pxf), brief	analysis <u>168</u>
description of 133	processscalarfile parameter, Monte Carlo
ohysical dimensions of components,	analysis 168
scaling 118	profile file, and Cadence range limits 284
PID (process identification number) 241 use of 166	ps utility, UNIX 241
piecewise linear (PWL) vector values,	pseudotransient method <u>267</u> PSF (parameter storage format) <u>234</u>
reading 74	formatting output files 246
piped files, and percent codes 272	psfascii (output format) 234
P-N junction warnings <u>278</u>	psfbin (output format) 234
breakdown region 279	pss analysis, brief description of 133
explosion region 278	ptran, as homotopy parameter option <u>267</u>
missing diode would be forward-	punctuation characters, in Spectre
biased <u>279</u>	syntax <u>59</u>
onoise analysis, brief description of 132 oointlocal (relative error parameter) 144	PWL, definition <u>74</u> Pwr 77
power in Watts 77	pwr <u>213, 215, 225, 228</u>
power supply rejection, netlist example of	pwr parameter <u>215, 228</u>
measurement discussed 136	pxf analysis, brief description of 133
power, saving <u>215,</u> <u>228</u>	•
predefined netlist parameters <u>93</u>	0
predefined percent code	Q
% character <u>271</u>	quantity statement 70
CMIVersion <u>270</u>	quantity statement 76

abstol parameter <u>76</u> blowup parameter <u>76</u> example <u>77</u> huge parameter <u>76</u> maxdelta parameter <u>76</u>	running a simulation, introductory example 32
predefined quantities 76	3
R	%S predefined percent code 271 %S_DEFAULTS 245
:r colon modifier 273	sample input file differential amplifier 112
range checking for subcircuit	GaAs traveling wave amplifier 95
parameters 292	process file 115
reading state files 201, 263	two port test circuit 120
+recover, spectre command option 244	uA741 operational amplifier 135
recovering from transient analysis	save parameter
terminations	example <u>215, 217, 228, 229</u>
automatic recovery, customizing 242,	formatting <u>217, 229</u>
243 restarting a transient analysis 244	options <u>217</u> , <u>229</u>
setting recovery (checkpoint) file	setting with an analysis statement 217, 229
specifications for a single	setting with the options statement 217,
analysis <u>243</u>	229
recursive inclusion $\overline{73}$	save statement 211
redirected files, and percent codes 272	examples <u>213,</u> <u>225</u>
reducing simulation time with previous	formatting <u>211</u> , <u>224</u>
solutions 258	keywords <u>212, 213, 224, 225</u>
reference direction, associated <u>58</u>	operating-point parameters of individual
reference to a library <u>75</u> relative error tolerance <u>143</u>	components, saving 212, 224 saving signals
relref parameter 142, 143	by keywords <u>212, 224</u>
allglobal setting 144	by terminal index 212, 224
allocal setting 144	by terminal name <u>212, 224</u>
pointlocal setting <u>144</u>	of individual components 212, 224
sigglobal setting <u>144</u>	of individual nodes 212, 224
reltol parameter <u>142, 143, 209</u>	of individual subcircuits 213, 225
setting to correct accuracy	voltages of individual nodes,
problems 298	saving <u>212, 224</u>
reserved words, Spectre 60 restart parameter, in analyses 258	saveahdlvars <u>232</u> savefamilyplots parameter, Monte Carlo
results	analysis 171
controlling destination and format	saveprocessparams parameter, Monte
of <u>244</u>	Carlo analysis <u>167</u>
displaying 34	saveprocessvec parameter, Monte Carlo
Results Browser <u>35</u>	analysis <u>169</u>
RF capabilities <u>21</u>	saving
rforce parameter	all ahdl variables 232
and convergence problems 297	currents for AC analysis 214, 227
setting to correct accuracy problems 299	groups of currents
run terminations. See terminations of	with the currents parameter 218, 230
. a.r. tarrimiadorior oco torrimiadorio or	

with the save and nestlyl	settings <u>267</u>
parameters <u>217,</u> <u>229</u>	setting tolerances
groups of signals	with the quantity statement 76
in main circuits with the save	shell initialization file, and Cadence range
parameter <u>217, 229</u>	limits 284
in subcircuits 218, 230	shell status variable 241
in subcircuits with the nestlyl	sigglobal (relative error parameter) 142,
parameter <u>217, 229</u>	144
individual currents	Signal Scan output format 234
with current probes 214, 226	signals, defined 223
with the save statement 211, 224	simulation
individual signals of subcircuits 213,	checking status 241
225	following the progress of 33
main circuit signals. See save	improved accuracy <u>18</u>
statement <u>211, 224</u>	interrupting 242
measurements for current-controlled	introductory Spectre run 32
components <u>214, 227</u>	sample narration of progress 33
parameter values 202, 232	specifying options 240
signals from subcircuit calls 213, 225	starting 240
saving power <u>215, 228</u>	termination. See terminations of
scalarfile parameter, Monte Carlo	Spectre 241
analysis <u>167</u>	viewing output 34
scale factors 83	simulation language, use of in example
scale parameter	netlist 30
devices scaled by 118	simulator lang command
how affected by default units of	default <u>54</u>
components <u>119</u>	singular Jacobian or matrix (error
in alter statement <u>189,</u> <u>266</u>	message) <u>276</u>
scalem parameter	skipping data points
devices scaled by 118	skipcount parameter <u>146</u>
how affected by default units of	skipstart parameter <u>147</u>
component <u>119</u>	skipstop parameter <u>147</u>
in alter statement <u>189,</u> <u>266</u>	skipping time points
scaling	example <u>147</u>
parameter values	explanation <u>146</u>
in Spectre 83	soft limits
in SPICE 83	definition <u>81</u>
physical dimensions of	use of <u>20</u>
components <u>118</u>	source stepping 267
schematic <u>26</u>	source, as homotopy parameter
screen printout, example 33	option <u>267</u>
second-order Gear integration method 144	span parameter 163
seed parameter, Monte Carlo analysis 166	S-parameter analysis (sp), brief description
selected, as save parameter option <u>217</u> ,	of 131
<u>230</u>	S-parameter file format translator 128
sens analysis 151	S-parameter files
sens command	creating manually 121
example 152	db-deg <u>121</u>
formatting 151	db-rad <u>121</u>
sensitivity analysis 151	formatting 121
set statement, to modify options statement	generated by Spectre 121

mag-deg <u>121</u>	defaults
mag-rad <u>121</u>	changing <u>245</u>
reading	examining <u>244</u>
example of nport statement 122	error options 295
format of nport statement 122	info options 295
real-imag <u>121</u>	introduction to 32
special characters, escaping <u>62</u>	options
specify search path 313	-format <u>235</u>
specifying	-raw <u>238</u>
analyses <u>32</u>	restarting transient analysis
control statements <u>69</u>	(+recover) <u>244</u>
individual components 30	specifying simulation options 240
models for multiple components 31	starting a simulation 240
percent codes <u>271</u>	using to override environment
Spectre	defaults <u>246</u>
accuracy improvements 17	using to specify output directory
annotated netlist example 28	names 238
capacity improvements <u>17</u>	using to specify output file format 235
case sensitivity <u>59</u>	warning options 295
coupling with Verilog 23	Spectre input mode
customer service 20	combining with SPICE input mode 54
differences from SPICE <u>16, 26, 58,</u>	Spectre Netlist Language, syntax rules 59
186, 301	SPECTRE_DEFAULTS environment
environments <u>23</u>	variable <u>245, 284</u>
exit codes <u>241</u>	overriding with param option of spectre
improvements <u>17</u> introduction to netlists <u>29</u>	command 284 SpectroHDL definition 13 21
keywords 60	SpectreHDL, definition 13, 21 SpectreRF
language	brief description 13
title line 51	description of 21
model improvements 20	SpectreStatus file 241
netlist, elements of 29	SPICE
reliability improvements 19	and Spectre input languages,
RF capabilities 21	mixing <u>54</u>
run terminations 241	differences from Spectre 16, 26, 58,
schematic example 26	<u>186, 301</u>
speed improvements 18	input language
SPICE compatibility	case sensitivity <u>59</u>
reasons for incompatibilities <u>55</u>	case sensitivity of scale factors 84
scope <u>51</u>	combining with Spectre mode 54
stress parameters <u>179</u>	reading <u>50</u>
syntax <u>59</u>	language
tutorial <u>25</u>	title line <u>51</u>
usability features 20	sptr command 129
Spectre and SPICE input languages	sst2 output format 234
reading <u>50</u>	start parameter <u>163</u>
Spectre and SPICE input languages,	starting
mixing <u>54</u>	a simulation 240
spectre command	analyses from previous solutions 258
+checkpoint option in transient analysis	state files
recovery <u>243</u>	analysis efficiency with, netlist example

discussed 136	names unrestricted 98
and writefinal parameter 200, 262	saving signals 213, 225
creating manually 201, 263	subcircuit parameters 84
reading <u>201, 263</u>	subcircuits
special uses for 201, 263	calling <u>93, 97</u>
using to specify initial conditions and	composed of analyses
estimate solutions 200, 262	calling 139
write parameter 200, 262	example <u>138</u>
state information, specifying	formatting 138
initial conditions 197, 259	defining 93
nodesets <u>197, 259</u>	example <u>94, 95</u>
state of the simulator, modifying initial	formatting 94
settings <u>189</u> , <u>266</u>	expressions within <u>97</u>
statements	inline 99
analysis <u>66</u>	multiplication factor in 65
formatting <u>66, 67</u>	parameters <u>85</u>
control <u>68</u>	range checking for parameter
instance <u>62</u>	values 292
library <u>75</u>	saving groups of signals 218, 230
model 70	saving individual signals $\frac{213}{225}$
examples 71	subckts
formatting 71	as pwr option 216, 228
netlist <u>58</u>	suppressing messages 295
paramset 210	sweep limits, setting 163
save <u>211</u>	sweeping parameters. See parameter
statistics 221	sweeps <u>159</u>
statistical analysis, performing 164	swept periodic steady-state (SPSS)
statistics blocks 164	analysis, brief description of <u>21</u>
multiple, Monte Carlo analysis 177	synopsis
specifying parameter distributions 173	´ (fourier) <u>154</u>
statistics statement 221	syntax conventions 59
status, checking simulation 241	system-generated messages,
step parameter 145, 163	controlling 244
step size for DC sweep, and convergence	° —
problems <u>296</u>	_
stop parameter <u>163</u>	T
stopping a simulation 242	
string parameters, specifying 120	:t colon modifier 273
strobing <u>145</u>	%T predefined percent code 271
example <u>147</u>	tdr analysis, brief description of 132
skipstart parameter <u>146</u>	Temp <u>77</u>
skipstop parameter <u>146</u>	temp parameter 93, 162
strobedelay parameter <u>146</u>	in alter statement <u>189</u> , <u>266</u>
strobeperiod parameter <u>146</u>	tempeffects parameter 210
stty utility, UNIX 242	temperature
sub parameter <u>161</u>	changing with alter statement 189, 266
subcircuit calls	in Celsius <u>77</u>
checking for invalid parameter values	terminal index
in <u>98</u>	subcircuit calls 213, 225
example <u>97</u>	use in save statement 212, 224
formatting <u>97</u>	terminal name, use in save statement 212,

224	restarting 244
terminals, as info statement	specifying initial conditions in 197, 259
parameter <u>203, 233</u>	speed <u>144</u>
terminal-to-node map 203, 233	terminations, recovering from <u>242</u>
terminations of Spectre	transistors
because of a Spectre error	requesting breakdown region warnings
condition 241	for 290
by the operating system 241	specifying forbidden operating regions
manual <u>242</u>	for 291
normal <u>241</u>	trap (integration method parameter) 144
recovering from transient analysis 242	trapezoidal rule integration method 144
with an error in an analysis 241	traponly (integration method
testing values of subcircuit parameters 292	parameter) 142, 144
time not increasing, error message 278	trigonometric functions 88
time-domain reflectometer (tdr) analysis,	truncate statement 176
brief description of 132	truncation factor 176
time-step adjustment 145	tutorial for using Spectre 25
time-step control algorithm, advantages	two-port test circuit, sample input file 120
of <u>18</u>	typographical conventions 14
timestep used, minimum <u>281</u>	
title card 29	11
title line <u>29, 51</u>	U
title parameter, in Monte Carlo	
analysis <u>171</u>	U <u>77</u>
tnom parameter <u>93</u>	uA741 operational amplifier, sample input
in alter statement <u>189,</u> <u>266</u>	file <u>135</u>
tolerance warnings <u>280</u>	unif parameter 175
tolerances, setting, with the options	uniform distribution 175
statement <u>209</u>	unitless <u>77</u>
Toshiba model (for hot-electron degradation	UNIX commands, and environment
simulation) <u>179</u>	defaults <u>245</u>
total	unload shared object 314
as pwr option <u>216, 228</u>	unusual parameter size warnings 280
tran analysis, brief description of 131	usability features 20
transfer curves <u>161</u>	user-defined functions 92
transfer function analysis (xf), brief	
description of 131	\ /
transient analysis	V
accuracy <u>144</u>	
brief description of 131	V <u>76</u>
ckptperiod parameter example 244	%V predefined percent code 271
convergence problems <u>298</u>	vabstol parameter 210
correcting accuracy problems 299	setting to correct accuracy
error tolerances. See error	problems <u>298</u>
tolerances <u>143</u>	values parameter <u>163</u>
ic parameter <u>197</u> , <u>259</u>	variations parameter, Monte Carlo
improving convergence <u>145</u>	analysis <u>169</u>
integration method 144	vbcfwd parameter, and determining
read parameter for state files 201, 263	operating regions for BJTs 292
readns parameter for state files 201,	vbefwd parameter, and determining
	operating regions for BJTs <u>292</u>

VCO, definition of 22 vector parameter values 80 vector values, piecewice linear 74 Verilog, coupling with Spectre 23 Verilog-A 13 vertical bars in syntax 14 viewing output 34

W

warning messages 19 about size of gmin 280 caused by invalid parameters in subcircuit calls 98 customizing 284 generating about transistor operating regions 291 options of spectre command 295 parameter is unusually large or small 280 P-N junction warnings 278 requesting breakdown region warnings for transistors 290 responding to 33 selecting limits operating region warnings 291 parameter values 284 specifying conditions for in subcircuit calls 98 tolerances might be set too tight 280 warnings melting current 279 waveform display 35 waveform storage format (WSF) 234 Wb what parameter, of check statement 195, 290 write parameter, and creating state files 200, 262 writefinal parameter, and creating state files 200, 262 WSF (waveform storage format) 234 wsfascii (output format) 234 wsfbin (output format) 234

X

xf analysis, brief description of 131