

insight

User Manual
and Getting Started Guide

Insight
User Manual: Third Edition
For Insight software version 3.0.0.11
March 30 , 2006

© Copyright 2004-2005
Inner Range Pty. Ltd.

Text and Layout
Tim Morris

Proofing
Andy Lam
Georgia King-Siem

A colour version of this guide
is available in electronic form.
See page 8.

Disclaimer:

1. The manufacturer and/or its agents take no responsibility for any damage, financial loss or injury caused to any equipment, property or persons resulting from the correct or incorrect use of the Inner Range system and its peripherals. The purchaser assumes all responsibility in the use of the Inner Range system and its peripherals.
2. Whilst every effort has been made to ensure the accuracy of this manual, Inner Range Pty Ltd assumes no responsibility or liability for any errors or omissions. Due to ongoing development the contents of this manual are subject to change without notice.

(This page has been intentionally left blank.)

Contents

Quick Start	7
You Will Need	7
Step 1: Install Insight Lite	7
Step 1: Install Insight Professional	7
Step 2 (Option 1): Enrolling a Version 4 Panel	7
Step 2 (Option 2): Enrolling a Version 5 Panel	8
Step 3: Connecting the Panel.....	8
Step 4: Make Programming Changes	8
Step 5: Examine Review	8
Step 6: Further Reading	8
Introducing Insight	9
Product Highlights	10
Registering Insight Professional.....	10
Insight Professional (Demo Edition)	10
Launch Pad	11
Starting Launch Pad.....	11
Launching a Module.....	12
Logging In	12
Changing Launch Pad Preferences.....	12
Changing Client Settings.....	13
The Insight Toolbar	15
Working With Sites.....	16
Working With Panels	19
Enrolling Panels	19
Creating Panels From Templates.....	23
Duplicating Panels	24
Moving Panels.....	24
Panel Connections	25
Permanent Connections.....	26
Panel Initiated Connections.....	27
Understanding Connection Status.....	27
Manual Connections	28
Modem Blocking.....	29
Panel Properties.....	29
Remote Control Field Hardware	31
Insight Edit	33
Using the Browser.....	34
Understanding Item Status.....	35
Using Filters	36
Editing Items	37
Online and Offline Edit	38
PIN Discovered	39
Write-Locking Panels	39
Detecting Keypad Edits	39
Comparing Insight With A Panel.....	39
Long Names, Notes, Name Lock Slider, Item Picker, Quick Navigation	40
Searching Panels	41
Cross-Referencing Items.....	43
Insight Edit Reports.....	43
Employees	44
Importing Extended User Information.....	44
User Photographs	46
Panel Memory Configurations	47
Virtuality	51
Virtual Users Explained	52
Virtual Links Explained	54
Virtuality In Practice	55
Icon	55
Creating Virtual Panels.....	56
Example	56

Example	57
Insight Review	61
Underlying Concepts	62
Insight Audit Events	62
Review Windows	63
Filtering Review	64
Moving The Review Pointer	66
Basic Reports	66
Custom Reports	67
Time On Site Report	68
Alarms	69
Acknowledging Alarms	69
Working With Alarm Responses	70
Working With Help Responses	72
Working With Operator Responses	73
Insight Archiver (SQL Edition).....	75
Insight Licence Manager.....	77
Registering Insight Professional	77
Licensed Modules	78
Panel Licensing	78
Workstation Licensing	78
About Fixed Workstation Licenses	78
Insight Operators	79
Working With Operators	80
Working With Operator Types	81
Working With Permissions	82
Working With Module Permissions	83
Working With Workstations	83
Working With Tenants	85
Insight Schematic	89
Working With Maps	90
Adding Labels	91
Adding Alarm Groups	91
Working With Surveillance Items	91
Adding Surveillance Items	91
Understanding Surveillance Item Status	93
Adding Cameras	94
Adding Camera Presets	94
Creating Drill-Downs	95
Working In Surveillance Mode	95
Alarm Processing	95
Insight Server Tool.....	97
Starting and Stopping Insight Server	97
Viewing Client Connections	98
Configuring Your Modem Pool	98
Insight Photo ID	99
Underlying Concepts	100
Working With Card Templates	100
Designing Card Templates	101
Editing Card Templates	103
Insight DVR Integration.....	105
About Insight DVR Integration	106
Enrolling A New DVR	106
Working With Video Windows	107
Working With The DVR Control Bar	108
Controlling PTZ Cameras	108
Working With The Video Timeline	109
Working With Layouts	110
Sending Commands To A DVR Or Camera	111
Integration With Review	111
Integration With Schematic	111
Appendix A: Comms Task Configuration	113

Quick Start

This section gives you the minimum information needed to get Insight running quickly. For more information, refer to the rest of the Guide. Whilst using Insight, pressing the F1 key will open electronic help.

You Will Need

1. A workstation with **Windows 2000** or **Windows XP** installed and satisfying the minimum hardware requirements (1GHz processor, 512 MB RAM, CDROM and 300 MB of free hard disk space). **Note:** by default, Insight uses the MSDE database engine, which limits the database to 2 GB of data. SQL Server is required where the review data exceeds 4-5 million events per year. Contact the manufacturer for hardware specifications when the recommended number of review events will be exceeded.
2. A spare USB port on the Insight Server computer (not needed for Insight Lite).
3. **Version 5 firmware upgrade kits for all version 4 panels** you intend to manage with Insight.

1

Step 1: Install Insight Lite

- or -

Step 1: Install Insight Professional


1. Locate the Insight Lite install program and open it.
 2. Follow the on-screen prompts.
 3. Click Finish.
 4. Restart your computer if you are asked to do so.
1. **DO NOT** plug in the USB hardware lock until you are instructed to do so.
 2. Locate the Insight Professional install program and open it.
 3. Follow the on-screen prompts. Only choose "Client and Server" on the computer that will be the Insight Server. For all other workstations, choose "Client Only". Be patient, installation might seem to pause for up to 5 minutes.
 4. Click Finish.
 5. Plug in the hardware key (server only).
 6. Restart your computer if prompted.

2

Step 2 (Option 1): Enrolling a Version 4 Panel

If your panel is already version 5, skip to option 2 "enrolling a version 5 panel". If you do not want to save any data in the panel, then upgrade the panel (steps 6-7) then go to option 2 "enrolling a version 5 panel". Otherwise:

1. Configure a PCDirect comms task in the panel.
2. Start Insight Launch Pad (page 11), then click the Enrol Panel icon.
3. Log in as **installer / installer** (you can also use **admin / admin**).
4. Enter the details of your panel (page 21). Make sure you set the protocol to PCDirect.
5. Click Enrol Now.
6. Upgrade your panel to version 5 firmware. Detailed instructions are available from Inner Range (document part number 635101; this document is included in the Insight Professional box). **Important: ensure jumpers LK8 and LK9 are set correctly as per the diagram.** Don't forget to jumper LK2 according to your RAM size (top two pins for 128k and 512k, bottom two pins for 32k).
7. **Default the panel** from a terminal (menu 7-5-2). Use the memory configuration that was uploaded in step 2.
8. Use Insight Launch Pad to start Insight Edit (page 12).
9. Locate the panel in the Insight Toolbar (page 15).
10. Right-click the panel and choose "Properties" in the menu that appears.
11. Tick the box that says "I have upgraded my panel to Version 5", then click OK.
12. If you are using a direct serial connection, and you used a

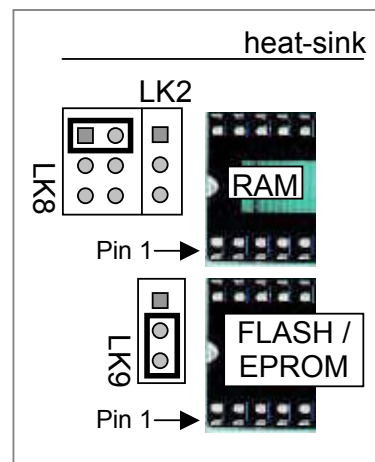

baud rate other than 9600 for PCDirect, right-click the panel and choose “Properties” in the menu that appears. Click Ports. Click Serial. Set the baud rate back to “9600” and click OK.

13. Right-click the panel, choose “Entire Panel” in the menu that appears, then choose “Mark For Download”. The panel turns red, indicating there are records waiting to be written to the panel.
14. Go to “Step 3: Connecting the Panel”.

Step 2 (Option 2): Enrolling a Version 5 Panel

1. Configure an Insight comms task in the panel (page 113). It must be comms task 1.
2. Start Insight Launch Pad (page 11), then click the Enrol Panels icon.
3. Log in as **installer / installer** (you can also use **admin / admin**).
4. Enter the details of your panel (page 20). Make sure the protocol is set to Insight.
5. Click Enrol Now.

3

Step 3: Connecting the Panel

1. Make sure comms task 1 in the panel is configured as Insight (page 113).
2. Use Insight Launch Pad to start Insight Edit (page 11).
3. Locate the panel in the Insight Toolbar (page 15).
4. Right-click the panel and choose “auto connect” (page 28). The panel icon turns green. (If you upgraded from version 4 firmware, then the panel turns blue while Insight writes all records to the panel). If you cannot connect, refer to troubleshooting on page 22.
5. Set the panel date and time (page 30).

4

Step 4: Make Programming Changes

1. You can make programming changes with Insight Edit (page 33). You select the item you want to program using the browser (page 34) and editing windows (page 37).
2. If you make edits while the panel is not connected, the panel turns red in the Insight Toolbar (page 38). Changes will be sent to the panel when it is next connected (page 28).

5

Step 5: Examine Review

1. Review is automatically downloaded whenever a panel is connected (page 25), but you will not be able to see the review unless you use Insight Review (page 51).
2. To see review, open a new review window (page 63) and click the Go button (page 63).
3. The default filter shows review events that were generated in the last 24 hours. If you forgot to set the panel date and time, no review will be visible. If you want to see all review, change the filter to “All Review” (page 64), or select filters that suit your requirements (page 64).

6

Step 6: Further Reading

This concludes the Quick Start section of this Guide. Refer to the following chapters to unlock the power of Insight in more detail. Don't forget - pressing F1 will open context sensitive help at any time within Insight. Thank you for using Insight!











Tip

A colour version of this manual is available in electronic form. Click Start→All Programs→Inner Range→Insight→ Insight User Guide (requires free Adobe® Reader software: <http://www.adobe.com>).

Introducing Insight

Insight consists of eight **modules**. Each module is a separate program that helps you manage an aspect of your Inner Range installation. The eight modules are (in the order you will probably use them):

Icon	Module	Description
	Launch Pad	Launch Pad is a central springboard that lets you quickly navigate to the other Insight modules.
	Insight Edit	Insight Edit lets you inspect and modify the programming of your Inner Range system, including virtual panels.
	Insight Review	Insight Review lets you examine live and archived panel review, generate reports and manage alarms.
	Insight Archiver	Insight Archiver provides a one-click backup solution for your Insight security database.
	Licence Manager	Licence Manager activates paid features.
	Insight Photo ID	Insight Photo ID lets you design and print personnel ID badges.
	Insight Operators	Insight Operators lets you manage access rights and privileges of personnel who can logon to the Insight front-end.
	Insight Schematic	Insight Schematic allows operators to monitor the status of an installation via an intuitive interface based around graphical floor plans and site maps.

Warning

Insight is compatible with version 5 panel firmware. You can determine the firmware of your panel by pressing MENU-2 on any Elite Terminal. The only operation that can be performed on version 4 panels is enrolment. You cannot change programming, control devices or read review from version 4 panels. After enrolling a version 4 panel, upgrade the firmware to version 5 so it can be managed with Insight.

Paid Feature

Licence Manager, Insight Operators, Insight Schematic and Insight Photo ID are part of Insight Professional.

Paid Feature

Insight Photo ID is a separately licensed module.

Product Highlights

Connectivity

- ✓ Insight is a true multi-panel, multi-workstation system.
- ✓ Insight uses Octane™ compression for fast upload/download, even over slow links.
- ✓ Supports direct serial, Ethernet and internal modem connections. Future releases will add support for external modems.
- ✓ Supports multiple paths with automatic switching to redundant paths on link failure.

Editing

- ✓ Changes to module programming take effect immediately, without a LAN secure.
- ✓ The LAN status of modules, zones and auxiliaries is displayed.
- ✓ Selectively show or hide items based on:
 - Name
 - LAN status (secured, missing, unexpected, not installed)
 - Programming status (blank, programmed, queued for upload/download)
- ✓ You can have multiple forms open at the same time.
- ✓ Single-click hyper-linking between forms ("help-9 / help-0" functionality).
- ✓ On-line data comparison between the front-end database and any panel.
- ✓ Automatic detection of edits made at any Elite Terminal.

Virtuality

- ✓ Virtual users and virtual panels lets you share common users easily between multiple panels.

Management

- ✓ Perform full or partial uploads and downloads.
- ✓ Upload individual records.
- ✓ Full support for offline editing.

Control

- ✓ Remotely control areas, area lists, auxiliaries, auxiliary lists, doors, door lists, floors, floor lists, home auxiliaries and zone inputs.

DVR Integration

- ✓ Control DVRs and cameras including live digital video feeds and remote camera control.

Online Help

- ✓ Comprehensive context sensitive help. Press F1 for help on any screen!
- ✓ Helpful tips are shown when each module starts. These can be turned off if required.

Registering Insight Professional

Insight Professional must be registered within 30 days of installation. See page 77 for more information.

Insight Professional (Demo Edition)

Insight Professional is available in a demonstration edition. This version is identical to Insight Professional, with five exceptions:


- ❖ Operator passwords are bypassed.
- ❖ Only the first five items of each type are visible (doors, areas, users, maps etc.)
- ❖ You are logged off every two hours.
- ❖ A different type of hardware lock is used.
- ❖ Licence Manager is not available.



Launch Pad

Launch Pad is the “command centre” of Insight. It is a module that lets you quickly navigate to all other modules. When you close Launch Pad, it moves to the system tray for easy access (next to your clock in the Windows task bar).

Launch pad also lets you specify key Insight settings such as when Operators need to log on.

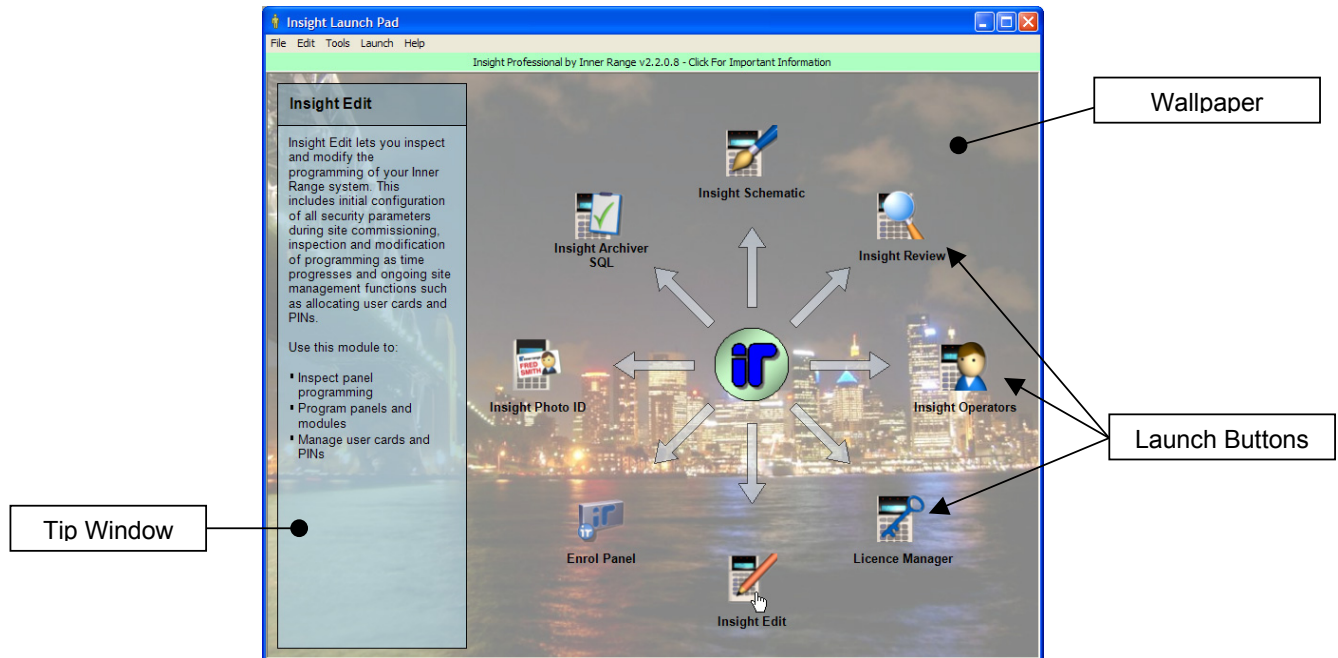

- The **launch buttons** let you launch other modules with one button click.
- The **tip window** provides information about each module. Point your mouse over a launch button for a description of that module.
- The **wallpaper** improves the aesthetics of Launch Pad. You can select from a library of default wallpapers, or choose your own.

Starting Launch Pad

You can start launch pad in two different ways:

1. Click the **start** button and choose Programs → Inner Range → Insight → Insight Launch Pad
2. When you start your computer, Launch Pad appears automatically in the system tray (next to your computer clock). Click the icon.



Tip

If Launch Pad is running, you can access it from the system tray. Click the Insight icon to open it. (On Windows XP, you may need to click the  button to display all icons.)



Launching a Module

You can start a module in one of four ways. Choose the one that is most convenient for you.

1. Click the module icon with the mouse.
2. Right-click the launch pad icon in the system tray, and in the pop-up menu that appears click the name of the module you want to launch.
3. Click the *Launch* menu, and then click the module you want.
4. Hold down the control key, and then click the number key that corresponds to that module. (See the *Launch* menu for the number assignment of each module.)



You may need to **log in** to the module with an operator name and password.


Tip

You can run multiple different modules simultaneously - you don't have to quit a module before starting another module. If a module is already open, then attempting to launch another copy activates the open module instead.

Logging In

You have to log on as an operator before you can use any module. When you start a module, you are prompted to enter your operator name and password.

1. Enter **admin** as the operator name.
2. Enter **admin** as the password.
3. Click **Log On**.

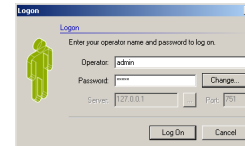


Tip

Insight ships with two default operators: **admin** and **installer**. You can edit these operators with the Operators module (professional version only).

Changing Launch Pad Preferences

You can customise aspects of Launch Pad.

1. On the *Edit* menu, click *Preferences*.
2. Make your changes.
3. Click *Save* or *Apply*.

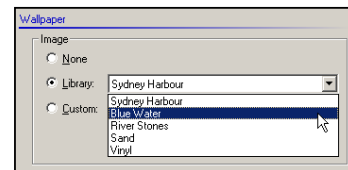

The settings are:

- **Play Sounds:** clear this check box if you do not want to hear a beep as the mouse moves over a launch button.
- **Wallpaper:** change the appearance of Launch Pad. Choose from a library of built-in wallpapers, or choose your own. You can also fade the wallpaper to make it less obtrusive.

Tip

Settings are saved *per operator*. If you log on to launch pad, your previously saved settings are restored. When launch pad starts, no operator is logged in. You can still change preferences, which will be restored the next time launch pad is started.


Changing Client Settings

You can change Insight settings for your workstation. These settings apply universally to all modules on the workstation.

1. On the *Tools* menu, click *Insight Client Settings*
2. Make your changes.
3. Click *Save* or *Apply*.

The settings are:

- **Server**
 - **Server Address** (not available in Lite): specifies which computer is running the Insight Database Server. If Insight is installed on a single computer, or if this computer is the server in a multi-computer installation, then select “This Computer”. If this computer is not the server in a multi-computer installation, click “another computer” and enter the name or IP address of the server computer.
- **Logging**
 - Specifies diagnostic logging options. Do not modify these settings unless instructed by an Inner Range technician.
- **Client**
 - **Client Options:** tick this option if you want Launch Pad to appear whenever an Insight module is closed.
 - **Password Caching:** specifies when Operators must enter their password. If caching is enabled, then Operators do not need to enter their name and password until they *quit* a module, at which point the cache is cleared. If caching is disabled, then Operators must enter their password every time a module is started.

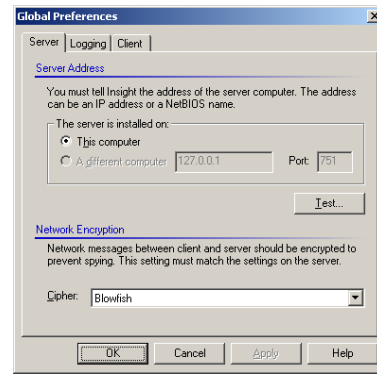

(This page has been intentionally left blank.)




The Insight Toolbar

The Insight Toolbar is the management centre of Insight. The toolbar is where you create and manage sites, enrol panels, control field devices and perform panel programming and maintenance. The Insight Toolbar is available in all modules.

Use the Insight Toolbar to:

- Enrol panels
- Connect and disconnect panels
- Create master sites and sub-sites
- Copy or move panels between sites
- Import, export and duplicate panels
- Perform selective upload and download
- Remotely control hardware and modules

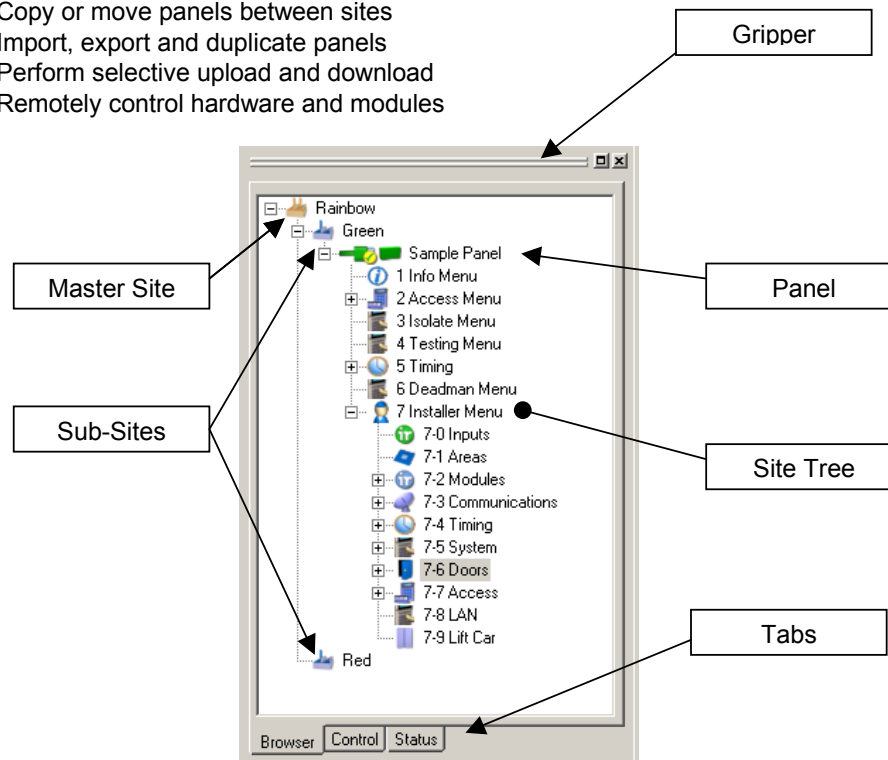

- The **Site Tree** displays all the sites and panels being managed by Insight.
- The **gripper** lets you undock (float) the toolbar, move it around, or dock (anchor) it.
- Use the **tabs** to select different modes of the Insight Toolbar (page 30).

Working With Sites

When using Insight, you organise your panels into collections called **sites**. A site is a “container” for adding panels, virtual panels and DVRs. When you create a site, you specify a name and some contact details.



Tip

Sites don't have to correspond to actual, physical sites. You may wish to have a new site per customer, or you may want to group your panels by geographic area, or you may choose to store all of your panels in one site.



Tip

When Insight is installed, it creates a single site called “Default Site”.




Previous Software

In PCDirect and WinDirect, sites are called clients. Sites are more powerful, because:

- One site can hold more than one panel.
- Sites can be contained within other sites, forming a ‘hierarchy’.

Master Sites and Sub-Sites

If a site is contained within another site, it is called a **sub-site**. Sites that are not contained by other sites are called **master sites**.

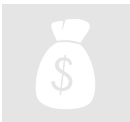

Paid Feature

You cannot create sub-sites in Insight Lite.

To Create A New Master Site

1. Right click the blank white area below the bottom of the Sites Tree, and choose “New Master Site...” in the menu that appears. (Tip: you may have to scroll to the bottom of the Site Tree to find the blank area.)
2. Enter a unique name for the site.
3. Click OK.

To Create A New Sub-Site (licensed versions)

1. Right click an existing site and choose “New Sub-Site...” in the menu that appears.
2. Enter a unique name for the site.
3. Click OK.



Operator Permissions

To create a new master site, you must have the **create** permission for sites. To create a new sub-site, you must have the **create** permission for sites and the **change** permission on the parent site.

Site Properties

Customer Details

Customer Name: Bendrix Pharmaceuticals
Street Address: 45 Pattenoster Row
Suburb: Dempsey
Post Code: 3955
State: Victoria
Country: Australia
Phone No.: +61 3 9000 840
Fax No.: +61 3 9000 841

Notes

Miscellaneous notes may be entered here.

Ok Cancel

To Edit Or Rename An Existing Site

1. Right click the site and choose "Properties..." in the menu that appears.
2. Edit the details of the site.
3. Click OK.



Operator Permissions

To edit or rename a site, you must have the **change** permission on that site.

To Move A Sub-Site (paid versions)

1. Click the site you want to move, and keep the mouse button down.
2. Drag the site into its new location.
3. Release the mouse button

Panels are moved with the site.



Operator Permissions

To move a sub-site, you must have **delete** permission on the site being moved and **change** permission on both the old and new parent sites.

(This page has been intentionally left blank.)



Working With Panels

You cannot work with a panel until it has been created in Insight. There are three methods of creating panels:

1. **Enrolling:** this is the normal method. The panel is physically connected, and is fully uploaded into Insight.
2. **Importing:** with this method, the operator specifies a template file that is loaded into Insight. The panel is connected later on for full or partial download from the template.
3. **Copying:** the programming of an existing panel can be duplicated, creating a new panel. The programming of the new panel can then be fully or partially downloaded later on.




Tip

Insight ships with a number of “empty panel” templates, including Standard, Enlarged, Access, Access 2, Alarms, Apartments, Extra Door and Special. You can use these templates as a basis for panel programming without enrolling an empty panel.



Note

Panel connections are always made through Insight Server. For direct serial connections, the panel must be connected to the server computer. For dial-up connections, the PC modem must be connected to the server computer.

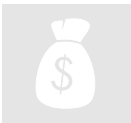

Paid Feature

By default, you can only manage one panel with Insight Professional . If you want to manage multiple panels with Insight Professional, you must purchase a multi-panel licence.

Enrolling Panels

Enrolling a panel makes the panel available in Insight, and also uploads (reads) all of the existing programming and users from the panel. To upload a panel:


- The panel must be powered on.
- Insight must be able to communicate with the panel (via direct serial, dial-up or TCP/IP).
- A comms task must be configured in the appropriate format. For PCDirect, consult your programming manual. For Insight, see page 113.

To enrol a panel:

1. In the Insight Toolbar, decide which site will contain the panel. If necessary, create a new master site or sub-site.
2. Right click on the site that will contain the panel, and choose “Enrol Panel...” in the menu that appears.
3. The Enrol Panel window appears. Enter the correct information for the panel being enrolled (see following pages).
4. Click the **Enrol Now** button. A new window appears, showing enrolment progress.



Note

Some of the settings on the enrolment screen *must match* the equivalent settings in Insight, or enrolment will fail. For your convenience, these fields are marked with a small Control Module icon () in Insight. Double-check that these settings match the settings in the panel.



Note

You can only enrol panels from the Insight Server computer. You cannot enrol panels from an Insight Client computer.



Operator Permissions

To enrol a panel, you must have the **create** permission for panels and the **change** permission on the containing site. The permissions for the new panel are copied from the *defaults* tab of each Operator Type.



Previous Software

Uploading a panel in WinDirect and PCDirect was a very time consuming task. Insight uses Octane™ compression to upload the panel many times faster. Depending on panel contents and transfer conditions, Insight can upload up to 1000% faster than PCDirect / WinDirect.

If you are enrolling a version 5 panel:

- Name: Enter a name for the panel.
- Panel ID: Enter the 8 digit panel identification number. This number **must match** the panel ID specified in the Insight comms task.
- Serial Number: Enter the panel serial number (press MENU-2 on any terminal). You must enter the number exactly as it appears, including leading zeros.
- IP Door Controller: Tick this box if you are enrolling an IP Door Controller (UK).
- Add To Site: Shows the site that will contain the newly enrolled panel.
- Encryption Key: Enter the encryption key for this panel (exactly 32 digits). This number **must match** the Insight A & Insight B fields specified in the Insight comms task. Leaving this field blank is equivalent to selecting all zeros.
- Connection: Specify the connection method you will use to enrol the panel.
- Ethernet→Panel Ethernet UART: select this option if you wish to use your computer's TCP/IP network and/or the Internet, and the panel is fitted with a TCP/IP Ethernet UART board.
 - Serial Port→Panel UART: select this option if you are using a direct serial connection between Insight Server and the panel, or if you are using a serial to TCP/IP protocol converter (e.g. Lantronix).
 - PC Modem→Panel External Modem: choose this option if you wish to use a modem on the Insight Server computer to dial an external modem on the panel.
 - PC Modem→Panel Internal Modem: choose this option if you wish to use a modem on the Insight Server computer to dial the internal modem on the panel.
- Settings: Specify any additional connection parameters here. Settings such as baud rate and IP address must match those of the panel.
- Panel Server: Do not change this setting from 'LOCAL'.
- Protocol: Set this to Insight. Make sure comms task 1 is configured

as Insight (page 113).

Installer PIN: This field is disabled when you select the Insight protocol.

If you are enrolling a version 4 panel:

- Name: Enter a name for the panel.
- Panel ID: Enter a unique, non-zero number in this field. The first two digits should be 00. Later on, when the panel is upgraded to version 5, you must configure the Insight comms task with this value.
- Serial Number: Enter the panel serial number (press MENU-2 on any terminal). You must enter the number exactly as it appears, including leading zeros.
- IP Door Controller: Leave this field un-ticked.
- Add To Site: Shows the site that will contain the newly enrolled panel.
- Encryption Key: Enter the encryption key for this panel (exactly 32 digits). Later on, when the panel is upgraded to version 5, you must configure the Insight comms task with this value. Leaving this field blank is equivalent to selecting all zeros.
- Connection: Specify the connection method you will use to enrol the panel.
- Ethernet→Panel Ethernet UART: you cannot select this option when enrolling a version 4 panel.
 - Serial Port→Panel UART: select this option if you are using a direct serial connection between Insight Server and the panel, or if you are using a serial to TCP/IP protocol converter (e.g. Lantronix).
 - PC Modem→Panel External Modem: choose this option if you wish to use a modem on the Insight Server computer to dial an external modem on the panel.
 - PC Modem→Panel Internal Modem: choose this option if you wish to use a modem on the Insight Server computer to dial an internal modem on the panel.
- Settings: Specify any additional connection parameters here. Settings such as baud rate must match those of the panel.
- Panel Server: Do not change this setting from 'LOCAL'.
- Protocol: Set this to PCDirect. Make sure there is a PCDirect comms task configured in the panel.
- Installer PIN: The PIN number of User 1 in the panel.



Warning

Although you can enrol version 4 panels, you cannot manage them with Insight until they are upgraded to version 5. See page 7.



Troubleshooting

If you receive a message to say that the upload failed, review the following checklists.

If you are using the Insight protocol to enrol the panel:

- If you upgraded the panel from version 4:
 - Was your firmware upgrade successful? (Press MENU-2 on any Elite Terminal, and confirm that the version is 5.xx)
 - Did you remember to default the panel?
- The Insight comms task *must* be Comms Task 1.
- Check the configuration of your Insight comms task matches with the Insight software:
 - Panel ID (which must be unique and non-zero)
 - Connection method and parameters (including baud rate etc.)
- Check you have entered the panel serial number correctly (including leading zeros)
- If you are enrolling an IP Door Controller, make sure you ticked the IP Door Controller option. If you are enrolling a regular Control Module, leave the option cleared.
- If you are using Serial Port → Panel UART, make sure you have specified the correct serial port on your PC, and that no other programs are using this port.
- If you are using Serial Port → Panel UART, and you are using a USB serial port, try using a legacy (physical) serial port, if possible.
- Make sure you have given Insight the correct protocol information. In particular, check that:
 - The protocol is set to 'Insight'.
- Make sure the other Insight options are correct (page 113).
- Try stopping and starting the Insight comms task.
- Try restarting your computer.

If you are using the PCDirect protocol to enrol the panel:


- Make sure your panel ID is unique. Even though PCDirect doesn't use it, Insight still checks this number because it will be used later on.
- Make sure you have given Insight the correct protocol information. In particular, check that:
 - The protocol is set to 'PCDirect'.
 - You have entered the correct installer PIN.
- Check the configuration of your PCDirect comms task matches with the Insight software:
 - Connection method and parameters (including baud rate etc.)
- If you are using Serial Port → Panel UART, make sure you have specified the correct serial port on your PC, and that no other programs are using this port.
- If you are using Serial Port → Panel UART, and you are using a USB serial port, try using a legacy (physical) serial port, if possible.
- Try stopping and starting the PCDirect comms task.
- Try restarting your computer.

Creating Panels From Templates

You can create a panel from a template. Templates can be blank panel configurations from Inner Range, or any panel that you've exported previously. Once you've created the new panel you can download it into a physical panel at a later date.

To create a panel from a template:

1. In the Insight Toolbar, decide which site will contain the panel. If necessary, create a new master site or sub-site.
2. Right click on the site that will contain the panel, and choose "New Panel From Template..." in the menu that appears.
3. The Create New Panel window appears. Enter the correct information for the panel being created.
4. Click OK.

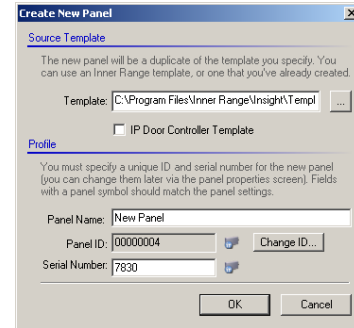

A progress window appears while the panel is being imported.



Note

The new panel will be created with the name, ID and serial number you specify. After creating the panel, you must manually set up protocol parameters and connection paths. In the Insight Toolbar, right click the new panel and select "Properties..." from the menu that appears, then click the *Protocol* and *Ports* tabs.



Tip

Insight ships with a number of "empty panel" templates, including Standard, Enlarged, Access, Access 2, Alarms, Apartments, Extra Door and Special. You can use these templates as a basis for panel programming without enrolling an empty panel.



Operator Permissions

To import a panel, you must have the **create** permission for panels and the **change** permission on the containing site. The permissions for the new panel are copied from the *defaults* tab of each Operator Type.

Field Descriptions:


- File Name:** Click the ... button and navigate to the template file you wish to import.
- IP Door Controller:** Tick this option if you will be connecting to an IP Door Controller instead of a regular Control Module.
- Panel Name:** Enter a name for the new panel.
- Panel ID:** Enter the panel identification number. This number **must match** the panel ID specified in the Insight comms task. If you do not know the panel ID (for example, the panel has not yet been delivered), enter any unique number here, and change it later on.
- Serial Number:** Enter the panel serial number (press MENU-2 on any terminal). You must enter the number exactly as it appears, including leading zeros. If you do not know the panel serial number, enter any number here, then change it later on.

Duplicating Panels

You can duplicate a panel that you have already enrolled, and then download the duplicate panel into a physical panel at a later date.

To duplicate a panel:

1. In the Insight Toolbar, decide which site will contain the duplicate panel. If necessary, create a new master site or sub-site.
2. Hold down the Control key on the keyboard.
3. Click on the panel you want to duplicate, but do not release the mouse button.
4. Drag the panel onto the site that will contain the duplicate. A plus sign appears.
5. Release the mouse button. (You can release the Control key as well.)
6. The Copy Panel window appears. Enter the correct information for the panel being created.
7. Click OK.

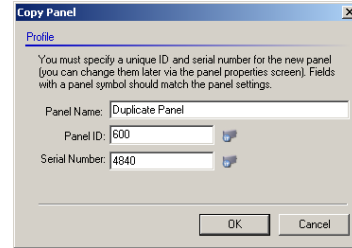

The new panel is created.



Note

The new panel will be created with the name, ID and serial number you specify. After creating the panel, you must manually set up protocol parameters and connection paths. In the Insight Toolbar, right click the new panel and select “Properties...” from the menu that appears, then click the Protocol and Ports tabs.



Operator Permissions

To duplicate a panel, you must have the **create** permission for panels, the **inspect** permission on the panel being copied, and the **change** permission on the site that will contain the copy.

Field Descriptions:

Panel Name: Enter a name for the duplicate panel.

Panel ID: Enter the panel identification number. This number **must match** the panel ID specified in the Insight comms task. If you do not know the panel ID (for example, the panel has not yet been delivered), enter any unique number here, and change it later on.

Serial Number: Enter the panel serial number (press MENU-2 on any terminal). You must enter the number exactly as it appears, including leading zeros. If you do not know the panel serial number, enter any number here, then change it later on.

Moving Panels

You can move a panel from one site to another site.

To move a panel:

1. In the Insight Toolbar, decide which site you want to move the panel to. If necessary, create a new site.
2. Click on the panel you want to move, but do not release the mouse button.
3. Drag the panel onto the site you want to move it into. A special icon appears.
4. Release the mouse button. The panel is moved.

Panel Connections

For communications to occur between a panel and Insight, it must be **connected**. Connections occur over a configured **connection path**. Insight supports a number of different connection paths. The following table is ranked in order of reliability and least cost, best option first.

Path	Panel	Insight	Suitable For
Ethernet	Panel Ethernet UART	TCP/IP	Permanent connections
Serial	Panel UART	Serial port	Permanent connections
Serial ¹	Panel UART→protocol converter ² →Ethernet	TCP/IP	Permanent connections
Dial-up	External modem	Modem	Non-permanent
Dial-up	Internal modem	Modem	Non-permanent
GSM	Panel UART→FE3000	TCP/IP	Non-permanent

¹ Part of the link is Ethernet, however the end-to-end protocol is serial. ² e.g. Lantronix

When a panel is not connected, you can do the following:


- Make offline edits to panel programming with Insight Edit, which will be downloaded to the panel later.
- View archived review data with Insight Review
- Generate reports on archived data with Insight Review (professional edition)
- Backup your entire Insight database with Insight Archiver SQL (professional edition) or Insight Archiver (lite edition)
- Create and manage operators with Insight Operators (professional edition)

When a panel is connected, you can perform the following additional actions:

- Transmit changes to panel programming (including user cards and PINs)
- Control field equipment (such as doors, zone inputs and auxiliaries)
- View live security logs (review) from the panel
- Receive alarms (professional edition)
- Monitor field equipment status with Insight Schematic (professional edition)



Tip

A summary of panel connections is shown in the status bar at the bottom right of most Insight modules. If no panels are connected, a blinking red square is shown.  0 Panel(s) online
Yellow means some panels are connected, and green means all panels are connected.

To configure an Ethernet connection:

1. In the panel, configure CT001 as Insight (page 113). Ensure Ethernet options are configured including Insight IP, Panel IP, Router IP and Subnet Mask. Ensure Ethernet options are set to ACE.
2. In Insight, right click the panel in the Insight Toolbar and choose “Properties...” in the menu that appears.
3. Click Ports.
4. On the Ports tab, tick the TCP/IP option.
5. Click OK.



Note

This information applies to a panel with an Ethernet UART. If you are using a protocol converter (such as Lantronix), configure a serial connection, then consult the documentation that came with your converter.

To configure a serial connection:

1. In the panel, configure CT001 as Insight (page 113). Ensure serial options are configured including panel UART port and baud rate. Ensure serial options are set to ACE.
2. In Insight, right click the panel in the Insight Toolbar and choose “Properties...” in the menu that appears.
3. Click Ports.
4. On the Ports tab, tick the Direct Serial option.
5. On the Serial tab, set the PC serial port and baud rate. The baud rate must match the baud rate you programmed in step 1.
6. Click OK.

To configure a dial-up connection:

1. In the panel, configure CT001 as Insight (page 113). Ensure serial options are configured including panel UART port and baud rate. Ensure internal modem options are set to ACE.
2. In the panel, configure CT002 as I-modem (page 114).
3. In Insight, right click the panel in the Insight Toolbar and choose “Properties...” in the menu that appears.
4. Click Ports.
5. On the Ports tab, tick the Internal Modem option.
6. On the Internal Modem tab, set the dial-up number.
7. If you are using fax bypass, tick the fax bypass option.
8. Click OK.



Tip

In timed fax bypass mode, Insight calls the panel, hangs up after 2 rings, then re-dials the panel 60 seconds later. You must activate the timed fax bypass mode in the panel – see the callout box on page 114.

Permanent Connections

If your panel is wired for Ethernet or direct serial connections, then you will generally want to leave it permanently connected. Insight can be configured to always keep a connection open on one of these paths – this is known as a **permanent** panel connection. On the other hand, for dial-up connections, you generally want to choose when the panel is connected manually. This is called a **non-permanent** connection.

To set up a panel to be permanently connected:

1. In the Insight comms task for the panel, ensure that Ethernet and/or direct serial paths are configured and enabled.
2. In Insight, ensure that Ethernet and/or direct serial paths are configured and enabled (pp. 25-26).
3. Right click the panel in the Insight Toolbar, and choose “Properties...” in the menu that appears.
4. Click Protocol.
5. Select the Connection tab.
6. Select the Permanent Connection radio button.
7. Click OK. Insight will attempt to keep the panel connected via Ethernet or direct serial. (Insight will not attempt to dial the panel if these paths are unavailable.)

To set up a panel so that connections are managed manually by operators:

1. Right click the panel in the Insight Toolbar, and choose “Properties...” in the menu that appears.
2. Click Protocol.
3. Select the Connection tab.
4. Select the Non-Permanent Connection radio button.
5. Click OK.




Panel Initiated Connections

You can configure your panel to automatically connect to Insight Server via dial-up if an alarm occurs. The panel will connect in these circumstances:

1. An XMIT event occurs.
2. There is an IMODEM comms task configured in the panel with outgoing connections enabled (page 114).
3. There is at least one Insight modem configured to receive incoming calls (page **Error! Bookmark not defined.**).


Understanding Connection Status

The status of the panel is displayed graphically in the Insight Toolbar. Refer to the following table:

Icon	Path	Status	Description
	TCP/IP Serial Ext. modem Int. modem	Disconnected	The panel is not connected. Programming changes will be queued. Status information and live review is not available. Hardware cannot be controlled.
	TCP/IP Serial Ext. modem Int. modem	Connected	The panel is connected. Live and queued programming changes will be transmitted (provided the panel isn't locked – see page 39). Review and status information is available. Hardware can be controlled.
	TCP/IP Serial Ext. modem Int. modem	Connection error	The connection could not be established, or has been lost. See 'troubleshooting' on page 22.



Tip

Connections can take up to twenty seconds to establish. While Insight is negotiating the connection, the panel icon changes to .



Note

When a panel becomes connected, the following operations are performed automatically: refresh LAN status (page 35), check for terminal edits (page 39), check memory configuration (page 47), download review (page 62).



Tip

You can get more information about the current connection status of a panel. Right click the panel and choose “properties” in the menu that appears, then click the “status” icon.



Tip


To get a quick overview of the status of all panels in an installation, click the **status** tab of the Insight Toolbar. It lists all panels in a flat hierarchy, with all sub-sites removed from the tree.

Manual Connections

You can manually connect a panel in Insight. Use this option to connect to a dial-up panel, or if you have configured a panel to be non-permanently connected.

To connect a panel:

1. Right-click the panel in the Insight Toolbar, and choose “Auto Connect” in the menu that appears.

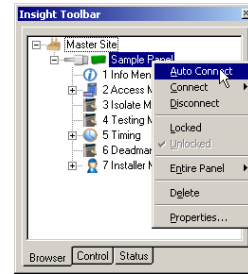

Insight establishes a connection with the panel. The connection icon turns green with a tick upon success, or red with a cross if the connection could not be established.



Note

The connection will remain active, even if you close all Insight modules. The connection will only be broken if you choose to disconnect, or if the Insight Server is stopped.



Tip

If the panel is configured with multiple connection types (for example, direct serial and dial-up), Insight tries the ‘best’ path first. Insight always tries to connect in this order: TCP/IP, direct serial, dial-up to external panel modem, dial-up to internal panel modem, GSM. Only configured paths are tried – see page 30.



Tip

If you don’t want to use “auto connect” you can manually specify a connection method. After right-clicking the panel, choose “connect” in the menu that appears, then specify the connection method to try. You can only select paths that have been configured for that panel.



Operator Permissions

To connect to a panel, you must have the **control** permission for the panel.

To disconnect a panel:

1. Right-click the panel in the Insight Toolbar, and choose “Disconnect”.



Note

If you disconnect a panel and it is configured for permanent connection, Insight will immediately attempt to reconnect with the panel. You should configure the panel with a non-permanent connection first. See page 27.




Operator Permissions


To disconnect a panel, you must have the **control** permission for the panel.

Modem Blocking

If you have multiple modems, you can choose which modems can be used by Insight.

To prevent Insight from using a modem:

1. On the Insight Server computer, right click the Insight Server tool in the system tray, and choose “Settings→Modems...” in the menu that appears. (On Windows XP, you may need to click the  button to display all icons.)
2. Select the modem you want to block.
3. Click the Disable button. Insight will not make or receive calls using that modem.

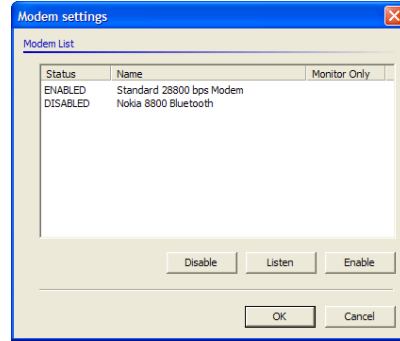

To allow Insight to use a modem for outgoing calls only:

1. On the Insight Server computer, right click the Insight Server tool in the system tray, and choose “Settings→Modems...” in the menu that appears.
2. Select the modem you want to make available for outgoing calls.
3. Click the Enable button. Insight will use the modem for outgoing calls. Insight will not receive calls using the modem.

To allow Insight to use a modem for receiving incoming calls only:

1. On the Insight Server computer, right click the Insight Server tool in the system tray, and choose “Settings→Modems...” in the menu that appears.
2. Select the modem you want to make available for incoming calls.
3. Click the Listen button. Insight will receive incoming calls using the modem. Insight will not use the modem for outgoing calls.

Note

You cannot configure a single modem for both incoming *and* outgoing calls. If you want to make and receive calls, you will need two different modems.




Panel Properties

You can find out further information about your panel by opening the panel properties window. From here you can rename the panel, change Insight protocol settings, configure communications ports, set the panel date and time, perform directory maintenance and inspect other panel properties such as firmware version and PCB revision.

To open panel properties:

1. Right-click the panel in the Insight Toolbar, and choose “Properties...” in the window that appears.

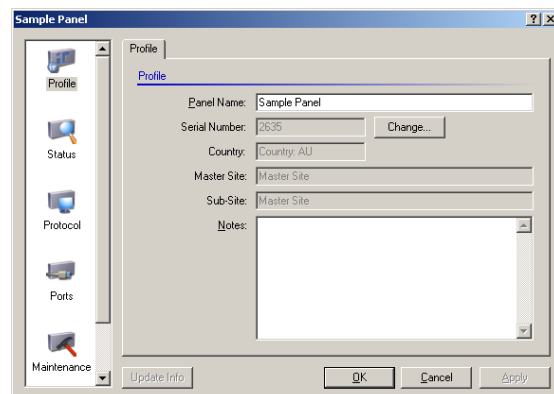

To change protocol settings:

1. Open panel properties and click the “Protocol” icon.
2. Fields marked with a Control Module icon *must match* the corresponding settings in the Insight comms task.
3. Click OK.



Tip

You can configure Insight to connect panels automatically under certain conditions. Open panel properties, click the “Protocol” icon then click the Connection tab.

To change port settings:

1. Open panel properties and click the “Ports” icon.
2. Fields marked with a Control Module icon *must match* the corresponding settings in the Insight comms task.
3. Click OK.



Tip

You can configure multiple paths (such as direct serial and dial-up) so that if one path fails, additional paths can be tried.

To set the panel date and time:

1. Open panel properties and click the “Maintenance” icon.
2. Click the Date/Time button.
3. To synchronise the panel time with the time on the workstation you are using, click the “PC Time” button. To set the date and time manually, highlight each digit and click the up and down buttons.
4. Click OK.



Note

The panel must be connected before you can set the date or time. If the panel is not connected, the button is disabled.



Warning


Changing the panel date and time causes all time zones, diaries and holidays to be re-evaluated, which in turn could alter the state of auxiliaries, calculated auxiliaries and other system entities.

Remote Control Field Hardware

You can control your Inner Range security system remotely using Insight. You can control areas, area lists, auxiliaries, auxiliary lists, doors, door lists, floors, floor lists, home auxiliaries and inputs.

To control items remotely:

1. Click the Control tab of the Insight Toolbar.
2. Click the item type you want to control
3. A window appears containing the items of that type, and after a moment the current state is displayed.
4. Highlight the item(s) you want to control.
5. Click the appropriate control button to control the item.

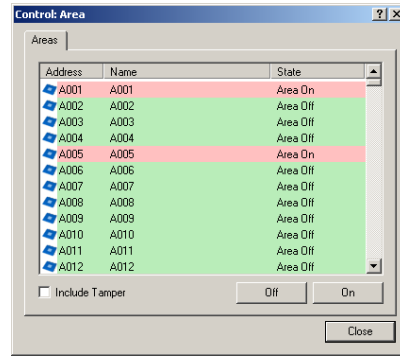

Tip

You can select multiple items by holding down the SHIFT or CONTROL keys whilst clicking.



Tip

If an item changes state, the change will be reflected in the control window within five seconds.



Tip

The Insight Toolbar doesn't have a Control tab in Insight Schematic. To control items in Schematic, right click the item directly on the map and choose from the menu that appears.



Tip

You can control DVRs and cameras using Insight. See page 105.



Operator Permissions

To control an item you must have the **control** permission for that item.

(This page has been intentionally left blank.)




Insight Edit

Insight Edit lets you inspect and modify the programming of your Inner Range security system. This includes initial configuration of all security parameters during site commissioning, inspection and modification of programming as time progresses and ongoing site management functions such as allocating user cards and PINs.

Use Insight Edit to:

- Inspect panel programming
- Program panels and modules
- Manage user cards and PINs
- Import extended user programming
- Program virtual panels and virtual users

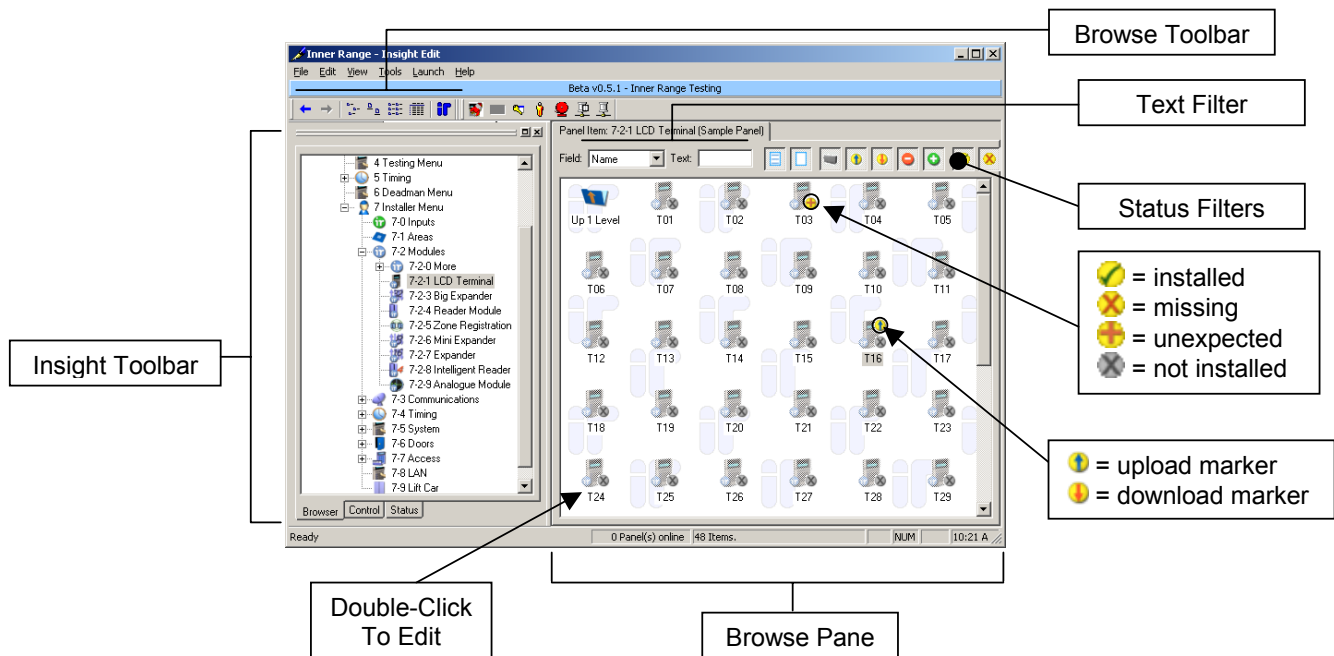

- The **Insight Toolbar** lets you manage your sites and panels (page 15).
- The **browse pane** displays items you can program (page 34).




Note

The following sections deal with panel programming. You can only program panels that have been **enrolled** into Insight. To learn how to enrol panels, see 'enrolling panels' on page 19.

Using the Browser

The most important part of Insight Edit is the browser pane. Once you have mastered the use of this pane you can quickly and easily make programming changes to your panels.

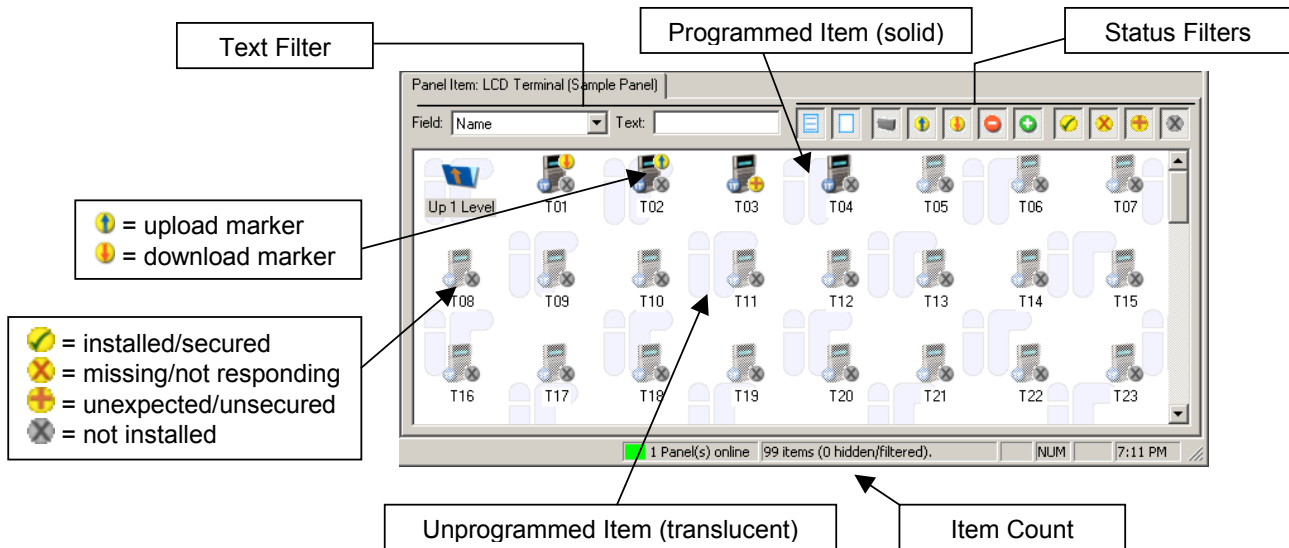

Navigation

The browser pane is driven from the Insight Toolbar. To program a particular item:

1. In the Insight Toolbar, click the **browse** tab.
2. Expand the tree for the panel you wish to program.
3. Click on the programming item you want.



 
Tip

You can change the layout of the Insight Toolbar by selecting "Preferences..." on the Edit menu, then clicking the *Interface* tab. Installers who are used to the terminal menu will probably want to use the "installer" layout.













Tip

By default, the browser pane is set to large icon view (pictured). You can select different views with the Browse Toolbar. In particular, 'detail' view allows you to sort the information by clicking on the column headings.



Understanding Item Status

Various graphics and symbols are used in the browser to reflect the status of each programming item.

Symbol	Applies To	Meaning	Description
	All items	Programmed	Items that are 'solid' have been programmed.
	All items	Blank	Items that are translucent are blank / have not been programmed.
	All items	Upload	This item has been marked for upload. The next time the panel is connected, the item will be read from the panel.
	All items	Download	This item has been queued for download. The next time the panel is connected, the item will be written to the panel.
	Hardware items	Secured	The module is present on the LAN and secured.
	Hardware items	Unexpected	The module is present on the LAN, but not secured.
	Hardware items	Missing	The module should be on the LAN but isn't.
	Hardware items	Uninstalled	The module isn't on the LAN.
	All items	Shadow	This record has been created because the panel memory configuration has changed, and there are more items of this type than before.
	All items	Surplus	The panel memory configuration has changed, and this record no longer fits into the new configuration.

Tip

The status of hardware modules (secured, missing etc.) is updated each time you connect with a panel. You can also update this status manually. Right-click the panel in the Insight Toolbar and choose "Entire Panel" in the menu that appears, then choose "refresh LAN status".














Using Filters

You can filter the browser so that only key items are displayed. There are a number of different filtering methods available.



Using Filter Buttons

You can quickly show and hide items with the filter buttons.

-  Click **show programmed** to hide or show programmed items
-  Click **show blank** to hide or show blank / unprogrammed items
-  Click **show normal** to hide or show records that aren't surplus, shadow or marked
-  Click **show upload** to hide or show items marked for upload from the panel
-  Click **show download** to hide or show items marked for download to the panel
-  Click **show surplus** to hide or show surplus records
-  Click **show shadow** to hide or show shadow records
-  Click **installed** to hide or show secured hardware
-  Click **missing** to hide or show missing hardware
-  Click **unexpected** to hide or show unexpected hardware
-  Click **not installed** to hide or show uninstalled hardware

To use the filter buttons:

1. Click the appropriate filter button. If the button is active (pressed in), then items matching that type will be displayed.

Note

Filters are saved for each different item type, even when you exit Insight Edit. Always check the item count (bottom right corner) to see if there are any items hidden in the current view.



Using Filter Text

You can filter based on text that you specify. Text filtering can be applied to the name, address or notes field of regular items, and also the site code and user type of users.

To use filter text:

1. Select the *field* you want to filter on. "Name in panel" is the short name of the item. "Name" is the full-length Insight name. "Address" is the notated address (such as DL015 for door list 15). 'Notes' is the notes field kept by Insight for each item.
2. Enter the text you want to filter by.
3. Press enter. Your filter is applied.

Using Wildcards

You can use special symbols called "wild cards" in your text filters. The ? symbol matches **one** letter. The * symbol matches **any number** of letters.


Here are some example filters to get you started.

- ❖ Name = "PIR" → only show items whose name includes the word "PIR"
- ❖ Notes = "delay" → only show items whose notes includes the word "delay"
- ❖ Address = "C01" → only show control module items
- ❖ Address = "T03:Z05" → show the fifth zone input on the third LCD module
- ❖ Address = "T03:Z*" → show all zone inputs on the third LCD module
- ❖ Address = "T*:Z*" → show all zone inputs on all LCD modules
- ❖ Address = "*:Z*" → show all zone inputs on all modules

- ❖ Address = "?01:Z10" → show the tenth zone input on the first module of each type
- ❖ Address = "*:S?5" → shows all system inputs ending in "5" on every module
- ❖ Name = "k*" → shows all names starting with the letter K
- ❖ Name = "*s" → shows all names ending in the letter S

Editing Items

To edit an item, double click the item in the browser. This opens an **edit window** for that item.

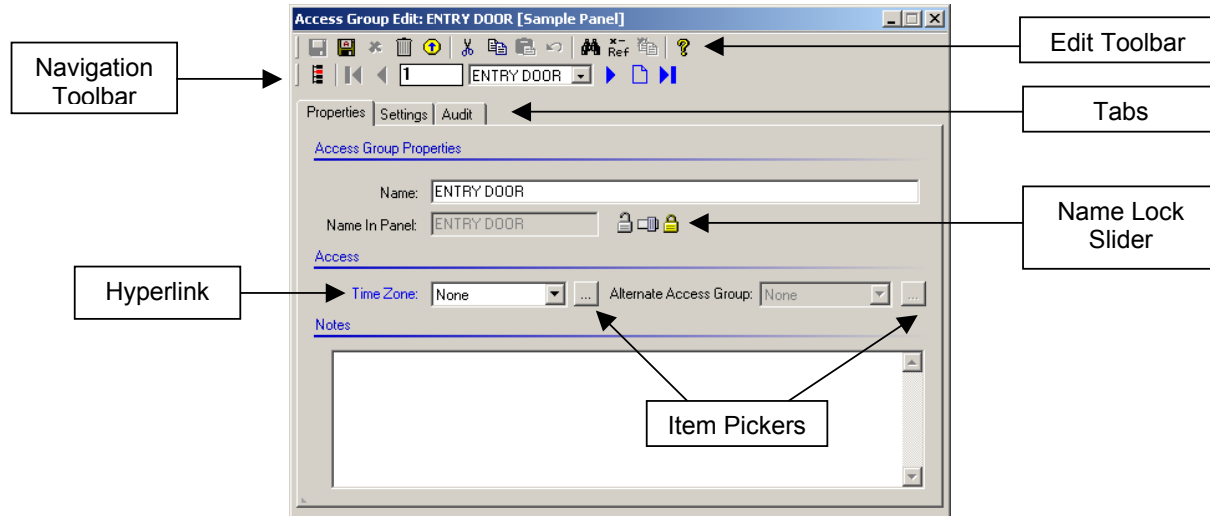

Using the Navigation Toolbar

Locate this item in the Insight Toolbar **tree**.

Go to the **first** record.

Go to the **previous** record.

Displays the current record number. You can enter a different number to jump to that number.

Displays the name of the current record. Click on the arrow to select a different record to jump to.

Go to the **next** record.

Go to the next **blank** / unprogrammed record.

Go to the **last** record.







 

Using the Edit Toolbar

Save changes to the current record. If the panel is offline, mark the record for download the next time a connection is available.

Turn **autosave** on or off. With autosave enabled, changes to a record are saved automatically as soon as the record is closed or you use the navigation buttons.

Discard changes you've made to this record without saving them. The record reverts to the last saved version.

Erase the programming of this record. The record becomes blank / unprogrammed.

-  **Upload** the current record from the panel. If the panel isn't connected, the record is marked for upload the next time a connection is available.
-  Places the current record into the Windows clipboard. When you select paste, the original record is then made blank / unprogrammed.
-  **Copies** the current record into the Windows clipboard.
-  **Pastes** from the Windows clipboard over the current record.
-  **Undo** the last action. You can repeat this command to undo all changes made since the record was opened.
-  Opens the **find** window.
-  Opens the **cross-reference** window for this item.
-  Opens context-sensitive **help** for this item.



Tip

If you are editing a lot of records, you should probably turn **autosave** on. As you finish each record, using the navigation buttons save your changes automatically.



Operator Permissions




To open an item, you must have the **inspect** permission for the item. To save changes to an item, you must have the **change** permission for the item.

Online and Offline Edit

If you save programming changes while the panel is connected, the changes are sent to the panel immediately. This is called "online edit". If you make changes while the panel is disconnected, then the changes are queued to be written later on. This is called "offline edit".

Insight uses different colours so you can quickly see if there are edits waiting to be sent to the panel.

Icon	Colour	Meaning
	Green	Panel synchronised
	Blue	Panel synchronising
	Red	Panel unsynchronised

	Green	Panel synchronised	There are no edits waiting to be sent to the panel.
	Blue	Panel synchronising	Programming changes are being exchanged with the panel. The number in brackets next to the panel name indicates how many changes are remaining to be sent / received.
	Red	Panel unsynchronised	Offline edits have been made. There are programming changes waiting to be written to the panel.



Tip

You can configure Insight to automatically connect to a panel when you make programming changes. Go to Panel Properties→Protocol→Connection, and tick the boxes that say "Automatically connect this panel" and "when programming changes are made".



Tip

If your panel is red (unsynchronised), you can find all records that are queued for upload or download by opening a new search, clicking the "only match records marked for upload or download" and clicking "Find Now" (without entering any search text).

PIN Discovered

Two user's cannot have the same PIN in the same panel. Insight Edit will prevent you from setting a duplicate PIN. In addition, the user whose PIN was discovered will be asked to change their PIN the next time they use an Elite Terminal in the field.



Note

If the panel is offline, then the PIN discovered flag won't be set until the panel is next connected.

Write-Locking Panels

Sometimes you may wish to make offline edits, but you want the panel to be online (e.g. so that alarms can be received). In this case, the panel can be **write-locked**. This means that the panel is online, but any edits are not sent to the panel until it is **unlocked**.

To write-lock a panel:

1. Right-click the panel in the Insight Toolbar, and choose "locked" in the menu that appears.
2. A padlock appears next to the panel, indicating that it is write-locked. Changes will not be sent to the panel.

To unlock a write-locked panel:

1. Right-click the locked panel in the Insight Toolbar, and choose "unlocked" in the menu that appears.
2. If the panel is online, then any changes will be immediately written to the panel.

Detecting Keypad Edits

The Concept security system allows programming changes to be made by authorised users at any Elite Terminal "in the field". These edits are not automatically uploaded by Insight, but you will be warned that changes have been made at a terminal the next time you **connect** to the panel. You can then use the compare records feature (below) to determine what type of item was edited.



Tip

If you leave Insight permanently connected to your panels, then you can manually check for programming changes. Right click the panel, and choose "Entire Panel→Compare Records" in the menu that appears.

Comparing Insight With A Panel

If you suspect that edits have been made at an Elite Terminal in the field, or if you just want to satisfy yourself that Insight is correctly synchronised with a panel, you can perform a comparison between Insight and the panel. You can choose to compare the entire panel, or only a particular type of item such as doors or areas.

To compare a panel with Insight:

1. If the panel is offline, connect to the panel.
2. Right click the panel you wish to compare and choose "Entire Panel→Compare Records" in the menu that appears.
3. A message is displayed indicating if any records are different.



Note

It can take up to 30 seconds to compare a 512k panel. You will receive a message when the comparison is complete.



Note

Insight will not tell you which specific records are different, only that there are differences. For example, the message “areas are different” could mean that 1, 2 or all areas are different between Insight and the panel.



Tip

If you have established that there are differences and you want to synchronise (remove) them, then you should mark the different items for upload (if you want to preserve what is in the panel) or download (to preserve what is in Insight).

To compare part of a panel with Insight:

1. If the panel is offline, connect to the panel.
2. Expand the panel tree and locate the item type you want to compare.
3. Right click the item in the tree, and choose “Compare Records” in the menu that appears.
4. A message is displayed indicating if any records are different.

Long Names, Notes, Name Lock Slider, Item Picker, Quick Navigation

Long Name and Notes

Insight lets you enter long names for all items, and a notes field for recording miscellaneous details.

Name Lock Slider

Although Insight allows for long names on all items, the Control Module only has limited space for names. To spare operators from the chore of entering both long and short names, Insight automatically links them together. If the name is too long to fit into the panel, a tilde (~) symbol is used.



Names are locked (default behaviour).




Names are unlocked and may be edited separately.



Tip

If you enter a very long name with numbers at the end, Insight will preserve the numbers and remove excess characters from the middle of the name instead of the end.

Item Picker

Wherever you see a button like this () you can click it to open the **item picker**. This is a window that lets you choose from a list of items.

Quick Navigation (Hyperlinks)

Hyperlinks are blue text labels that let you quickly navigate between related items, without using the Insight Toolbar to manually locate them. To follow a hyperlink, click on it with the mouse button.



Tip

You can click as many nested hyperlinks as you like. When you close the windows that have popped up, you will return to the original record you were editing.



Tip

If you click a hyperlink on a field that is set to “none”, Insight changes the browser to view all of the items that can be selected for that field.



Previous Software


In WinDirect, quick navigation was performed with the F9 and F10 keys. On panel terminals, quick navigation is performed with the HELP-9 / HELP-0 key combinations.

Searching Panels

Insight Edit includes an extremely fast search tool. You can choose between **simple** searches, which look for matching text in the locations that you specify, and **advanced** searches, which let you specify complicated searches such as “find everything with the word *door* but not the word *office*”.

To perform a simple search:

1. On the Edit menu, choose “Power Search...” (or press CTRL+F).
2. Enter the text you wish to search for.
3. Choose which panels and item types you wish to search by clicking the “Look In” field (optional).
4. Clear **match case** if you want *GREEN* to match with *Green*.
5. Clear **whole words** if you want *am* to match with *hammer*.
6. Enter any settings you want on the “Modified” tab (optional).
7. Click “Find Now”, or press ENTER.

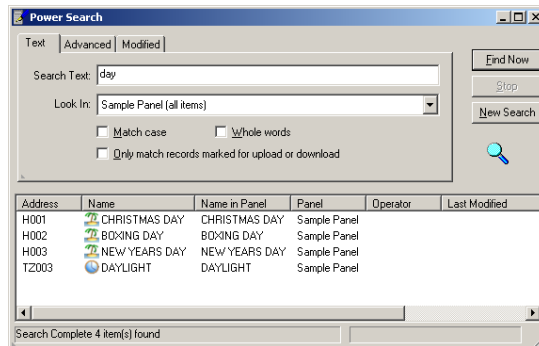

Items matching the search text are displayed.



Note

In simple searches, the ‘name’, ‘name in panel’ and ‘notes’ fields are searched.



Tip

If your panel is red (unsynchronised), you can find all records that are queued for upload or download by opening a new search, clicking the “only match records marked for upload or download” and clicking “Find Now” (without entering any search text).



Tip

You can open any matching item by double-clicking it with the mouse.

To perform an advanced search:

1. On the Edit menu, choose “Power Search...” (or press CTRL+F).
2. Click the “Advanced” tab.
3. Enter your search criterion (see below).
4. Choose the fields you wish to search (optional).
5. Enter any settings you want on the “Modified” tab (optional).
6. Click “Find Now”, or press ENTER.

You specify advanced criteria by entering text (enclosed in single or double quotes) separated by special commands **and**, **or**, **not** and **xor** (“exclusive or”). Placing a text item in **double quotes** means the text will match both upper and lower case. Placing a text item in **single quotes** means the text will only match if the case is the same. Brackets are used like they are in arithmetic.

Examples

“door”

→ matches all items with *door* (including *trapdoor*, *doorstop*, *DOORMOUSE* etc.)

‘DOOR’

→ matches all items with *DOOR* (including *TRAPDOOR* but not *trapdoor*)

exact(“door”)

→ matches all items with the whole word *door* (including *DOOR* but not *trapdoor*)

exact(‘door’)

→ matches all items with the whole word *door* (but not *DOOR* or *trapdoor*)

“door” or “window”

→ matches all items with either *door* or *window* or both, regardless of capitalisation

“door” and “window”

→ matches all items with both *door* and *window*

“door” and not “window”

→ matches all items with *door*, unless the item also has *window*

“door” or not “window”

→ matches all items with *door*, and also matches all items without the word *window*

not “door”

→ *matches* anything that doesn’t have the word *door*

“exit” and (“door” or “window” or “corridor”)

→ matches anything that has either *door*, *window* or *corridor* so long as it also has the word *exit*

“exit” or (“door” and “window” and “corridor”)

→ matches anything that has both *door*, *window* and *corridor* or it has *exit*

“door” xor “window”

→ matches everything with either *door* or *window*, but not both



Tip

If you have difficulty understanding advanced searches, try entering some of the examples listed above, then modifying them to what you want.



Operator Permissions


You must have the **see** permission on an item for it to appear in the output window.

Cross-Referencing Items

The cross-reference window is a very useful and powerful tool for trouble-shooting an Inner Range installation. When an item is cross-referenced, *all* programming relationships between that item and the rest of the system are displayed. For example, cross-referencing a calculated auxiliary show any auxiliaries, inputs, areas, lift cars, floor lists and counters that might be influenced by the calculated auxiliary.

To cross-reference an item:

1. Select the item in the browser window, or open the item for editing.
2. From the Edit menu, choose “cross-reference”; or press F2; or click the “x-ref” toolbar button (editing window only).

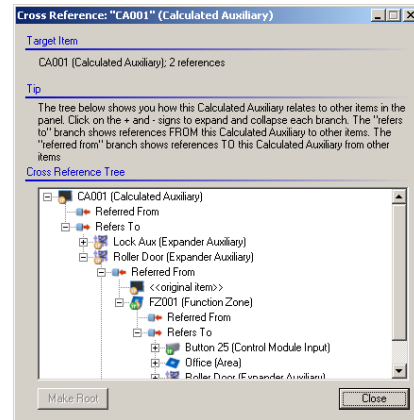

The cross-reference window appears.

- ❖ Any items that this item refers to are shown in the **refers to** section.
- ❖ If this item appears in the programming of a completely different item, then this relationship is shown in the **referred from** section.



Tip

You can open an item from the cross-reference window by right-clicking and choosing “Edit” in the menu that appears.



Warning

The cross-reference window will not show an item if you do not have the **see** permission for that item. In this case, the cross-reference tree will be incomplete.

Insight Edit Reports

You can generate a range of useful reports in Insight Edit. These reports summarise key areas of panel programming including users, user types, areas and doors. Reports can be displayed on-screen or sent directly to a printer.

I want to...

- View or print all user programming
- View or print all user type programming
- View or print a list of users for each user type
- View or print a list of inputs in each area
- View or print a list of users with access to each door

This is achieved by...

- Reports→Programming→Users
- Reports→Programming→User Types
- Reports→References→User Types - Users
- Reports→References→Area - Inputs
- Reports→References→Doors - Users Accessing

To generate a report:

1. Select your desired report on the Reports menu.
2. To print the report, choose Print in the sub-menu that appears. To view the report, choose View in the sub-menu that appears.

Employees

Each panel contains information about users that have access privileges for that panel. Depending on the memory configuration in the panel, a name might also be stored for some or all users.

It is often useful to store extended information about each user such as full name, age, home and work contact details, gender and even a photograph for identity verification.

Insight calls this additional data **extended user information**. Users with this additional information are referred to as **employees**.



Insight Versions

Extended user information and user photographs are not available in Insight Lite.

To add extended information to a user:

1. In Insight edit, double-click the user in the browser pane. Or, right-click the user and choose "Properties..." in the menu that appears.
2. Click the Employee tab.
3. Enter the person's title, full name, birth date and gender.
4. Click the Profile tab.
5. Enter the person's business profile and personal profile.
6. Click the Save Changes button to save your changes.



Note

If you edit the first name or surname field on the Employee tab, the Name field on the Access tab becomes locked for editing. All future name edits must be carried out on the Employee tab.

Importing Extended User Information

You can import extended user information (such as age and contact details) from an external file. The file must be in "Comma Separated Values" format (CSV), which means:

- Each field is separated by a comma
- All 22 fields must be present for each user (it is legal to enter back-to-back commas to represent a blank value)
- A carriage return appears at the end of the 22nd field, indicating the end of that user and the start of the next user.



Tip

CSV is a common file format that can be exported by most software. Check the documentation that came with your software.

The field order and format that Insight expects in the CSV file is shown overleaf.

Num	Field	Data
1	First Name	(any text)
2	Second Name	(any text)
3	Title	One of the following values: Mr, Mrs, Ms, Miss, Dr, Professor, Sir, Lord, Lady
4	Gender	One of the following values: M, m, 0, F, f, 1
5	Date of birth	A date format matching the locale of this computer (go to Control Panel→Regional & Language Options for Windows® XP, or Control Panel→Regional Options for Windows® 2000). e.g. for Australia, the format is normally dd/mm/yyyy. You should specify a 4 digit year value for correct processing.
6	Street	(any text)
7	Suburb	(any text)
8	City	(any text)
9	State	(any text)
10	Country	(any text)
11	Post Code	(any text)
12	Phone Number (Work)	(any text)
13	Phone Number (Home)	(any text)
14	Phone Number (Home Mobile)	(any text)
15	Phone Number (Work Mobile)	(any text)
16	Fax Number (Home)	(any text)
17	Fax Number (Work)	(any text)
18	Email (Home)	(any text)
19	Email (Work)	(any text)
20	Position	(any text)
21	Department	(any text)
22	Card Number	(any site code number)



Note

Card Number is for site codes only and will set the user to site code and place the number into the card number field. If it is left blank then it will not change what is currently programmed.



Tip

You can omit a field that you wish to leave blank. You must still include the comma after the blank field, for example: John,Smith,,M (gender is blank)

Sample CSV File: (line breaks added to fit onto the printed page; text should all be on one line)

Line 1: Joe,Bloggs,Mr,M,10/05/1960,1 Millenium Court,Knoxfield,Melbourne,Victoria,Australia,3180,555-WORK,555-HOME, 0400-HOME,0400-WORK,FAX-HOME,FAX_WORK, Joe.Bloggs@Australia.com,Joe.Bloggs@innerrange.com,Technician,R&D,0

Line 2: Fred,Smith,Mr,M,10/05/1955,1 Millenium Court,Knoxfield,Melbourne,Victoria,Australia,3180,555-WORK,554-HOME,0401-HOME,0400-WORK,FAX2-HOME, FAX_WORK, Fred.Smith@Australia.com,Fred.Smith@innerrange.com, Manager,R&D,0

To import extended user information:

1. Right-click the panel that contains the users you want to import information for, and choose "Import→Extended Employee Data" in the menu that appears.
2. Navigate to the CSV file that contains your extended information and click Open. The Input Range dialog appears.
3. Specify the *index* of the first user you are importing data for. Installer is index 0, master is index 1, U00003 is index 2, and so forth.
4. Specify how many users you are importing from the CSV file. If you enter 0, all records will be imported.
5. Click OK.




Tip

It's a good idea to write-lock the panel (page 39), so that changes won't be written to the panel until the import is complete.



Operator Permissions

To import extended information, you must have the **change** permission on each user being imported. If you do not have the **change** permission on a user, the user is skipped and the next available record is used.

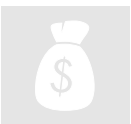


Insight Versions


Insight Lite will only import First Name, Second Name and Card Number. Although ignored, the other fields must still exist or be empty (no text between the commas).

User Photographs


You can attach a photograph to a user, either from an existing picture file on your computer or by acquiring a picture from a device like a scanner or digital camera. You can configure Insight to automatically display the photograph when the user badges at a door.

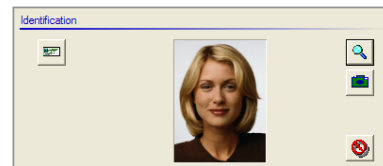

To attach an image from your hard disk to a user:

1. Open the user for editing.
2. Click the Employee tab.
3. Click the Attach Image button ()
4. Browse to the image file you want to attach.
5. Click OK.
6. Click the Save Changes toolbar button to save your changes.

To acquire a new photograph and attach it to a user:

1. Open the user for editing.
2. Click the Employee tab.
3. Click the Acquire Photo button ()
4. Select the device you will be acquiring the image from (e.g. camera, scanner)
5. Follow the on-screen directions which will vary depending on the device.
6. Click the Save Changes toolbar button to save your changes.




Note


Direct image acquisition is available for devices that support the Windows Image Acquisition (WIA) interface in Windows® XP. For other devices and operating systems, capture the image to your hard disk first, then attach the image.

To pop-up the photo automatically when the user badges their card:

See “working with alarm responses” on page 70.

To print an ID badge without starting Photo ID:


1. Open the user for editing.
2. Click the Employee tab.
3. Click the Print Badge button ()
4. If more than one card template is defined, you will be asked to choose a template.
5. In the print dialog that appears, click Print.

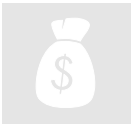

Paid Feature

To print ID badges you must have a licence for Insight Photo ID.

To remove a photograph from a user:

1. Open the user for editing.
2. Click the Employee tab.
3. Click the Remove Photo button ()
4. Click the Save Changes toolbar button to save your changes.

Panel Memory Configurations

Each Inner Range panel has a database for storing users and programming information. The size of the database is determined by the size of the memory chip on the panel (32, 128 or 512 kilobytes). For each memory size, there are a number of **memory configurations** (such as Standard, Alarms and Special) that determines how many items of each type are stored by the panel. This count of items is known as the **directory** of the panel. For example, the 512k Standard directory has 128 doors, 250 areas, 64 time zones and so on.

When you connect to a panel, Insight automatically checks the panel’s directory. Under normal circumstances, the directory of the panel and the directory stored by Insight is the same. Under certain circumstances, they can be different.

1. You have used a terminal to ‘default’ (change) the panel configuration since it was enrolled; or
2. You created the panel in Insight from a template or by duplicating another panel, and are now connecting to a panel with a different memory configuration.

Both situations cause a conflict in Insight, because the panel contains a different number of records than you can see in Insight. Insight automatically resolves the conflict by creating *surplus* and *shadow* items.




Surplus items are records that no longer fit in the new panel memory configuration. You can edit them, but they cannot be saved to the panel unless the panel configuration is changed to something else. If you know you will never do this, then the surplus records can be *trimmed*, which deletes them permanently from Insight.



Shadow items are records that exist in the new panel configuration, but not in Insight. They are like a ‘place holder’, telling you that the records exist in the panel but have not been uploaded yet. If you know you will be sticking with the new memory configuration, then these records should be *expanded*, which converts them into ‘real’ records by uploading them from the panel.

Below are some examples of surplus and shadow records and how they are created.


Example 1

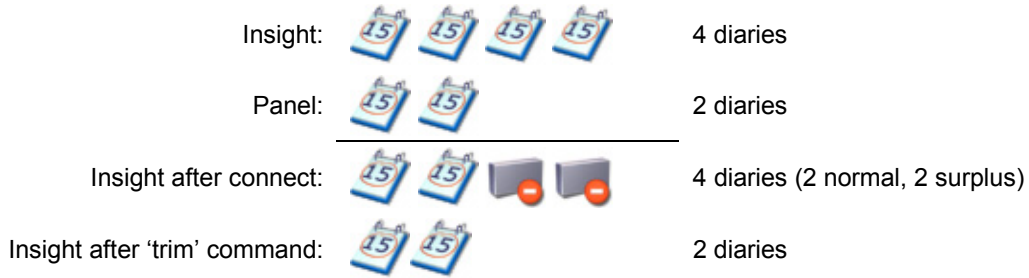

Note

If you edit a surplus record and click save, your panel will be permanently unsynchronised (since Insight can never save your changes to the panel). To rectify this, you should trim the surplus records.

Example 2

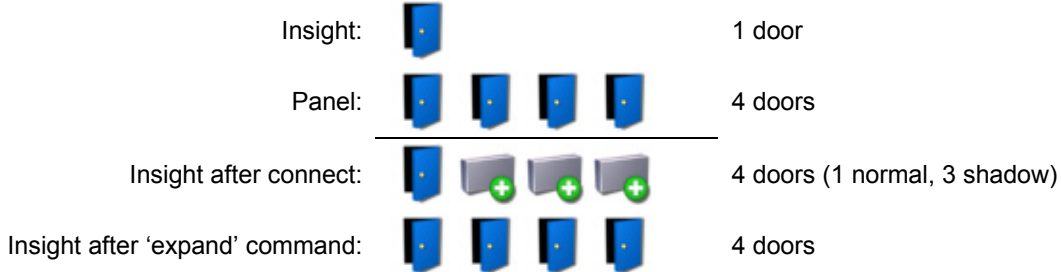

Tip


If you make changes to a shadow record, it is automatically converted to a normal item and queued for download to the panel.

Trimming and Expanding Records

Under normal circumstances, you should always trim (delete) surplus records, and expand (upload) shadow records. Insight doesn't do this automatically, because you might want to copy the information out of surplus records before trimming, and because expanding shadow records can be time consuming (they have to be uploaded into Insight).

To trim or expand records:

1. Right click on the panel in the Insight Toolbar, and choose "Properties..." from the menu that appears.
2. Click the "Maintenance" icon.
3. Click the "Directory" tab.
4. Click "Compare". The *panel* column shows how many items are in the current panel memory configuration. The *Insight* column shows how many items are being displayed by Insight.
5. Select the items you want to expand or trim, or click "select all" to work on the entire panel.
6. Click "Expand Insight" to convert shadow records into normal records. If you are connected to the panel, the records are uploaded immediately; otherwise, they are

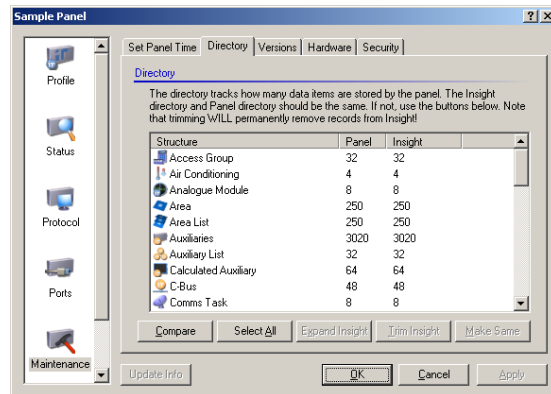

queued for upload the next time it is connected. Click “Trim Insight” to delete surplus records from Insight. Click “Expand+Trim” to automatically expand or trim, depending on which operation is appropriate.



Warning

You cannot undo the trim command - the surplus records are permanently deleted.



Note

Trimming and expanding has no effect at all on the panel. It only effects surplus and shadow records in Insight.



Note

You cannot change the panel memory configuration with Insight. This can only be performed at a panel terminal.



Tip

You can trim or expand a particular item type by right-clicking the item in the Insight Toolbar, then choosing “Trim Surplus Records” or “Expand Shadow Records” in the menu that appears.



Tip

You can quickly trim or expand the entire panel by right-clicking the panel in the Insight Toolbar, then choosing “Entire Panel → Trim Surplus Records” or “Entire Panel → Expand Shadow Records” in the menu that appears.



Operator Permissions

To trim records, you must have the **change** permission on the containing panel.

(This page has been intentionally left blank.)

Virtuality

Virtuality lets you program several physical panels as if they are a single “virtual” panel. In other words, you program the information once and it is automatically saved to each panel.

Virtuality was introduced in Insight version 2. In its current implementation, virtuality is supported for users. In other words, you program a user’s information once, and it is saved to multiple panels. Future versions of Insight may extend virtuality to other item types.

A **virtual panel** is a collection of two or more physical panels. You create a virtual panel with Insight Edit using a wizard. Creating a virtual panel is straightforward - you just select which physical panels to include, and specify how you want to create your virtual users.

When a panel is added to a virtual panel, it is called a **member panel**.

A **virtual user** is like a regular user, except the user exists in all of the member panels and is programmed from a single location.


Insight makes virtuality as simple as possible, by allowing you to edit users in a single location. You can program all the fields you can normally program for a user such as name, PIN number, user type, expiry and fob options. When you save your changes, they are sent to each member panel in the virtual panel.

Although you may think of virtual users as existing in one place, in reality Insight has to convert your changes into real users in real panels, and this introduces some complexity. For example, the member panels may have different memory configurations. You may also want a user’s access rights to be different in each member panel. Member panels will be connected to different field hardware, and items such as “extra area” cannot be programmed from a single location, since the extra area will almost certainly be different in each member panel.


Insight solves these problems using *virtual links*. Virtuality and virtual links will be explained in more detail in the following pages.

Virtual Users Explained

To understand virtual users, imagine you have two panels with the following programming. (For simplicity, we are ignoring the fact that user 1 is normally INSTALLER and user 2 is normally MASTER.)

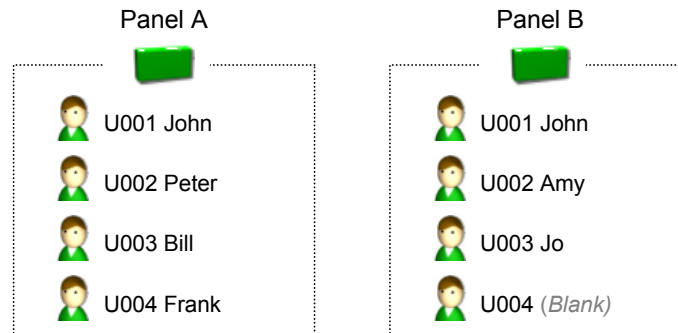


Looking at the diagram, we can see that John exists in both panels, whereas the other users do not. From now on, we want to program John in one place instead of two. To do this, we make a new **virtual panel** and make John a **virtual user** in the virtual panel.

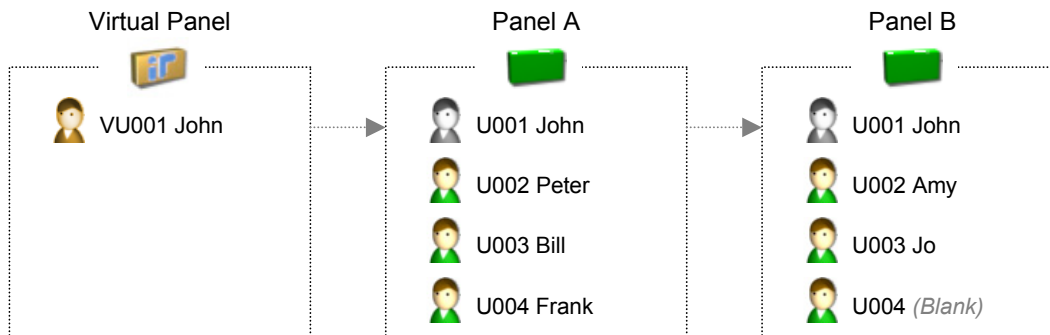

Now that a virtual panel has been created, the following rules apply:

- ❖ **John** is now VU001 in the virtual panel. This is represented by a gold user icon (👤).
- ❖ Any programming changes made to VU001 will be saved to U001 in Panel A and U001 in Panel B.
- ❖ John **cannot** be edited in Panel A and Panel B, because he is now a virtual user. This is represented by a grey user icon (👤) in those panels.

You will note that the user numbers “line up” in each panel – VU001 is the same user as U001 in Panel A and U001 in Panel B. Now imagine that Peter has been granted access to Panel B. He becomes U004 in that panel. How is this represented in the virtual panel?

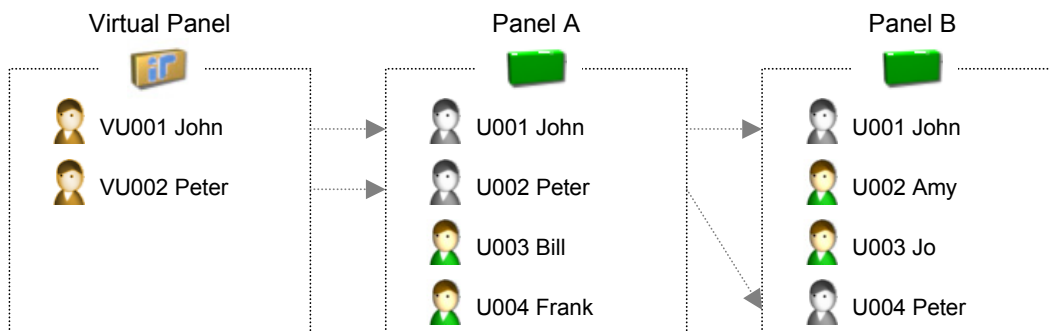


As you can see, the user numbers do not need to “line up”. Virtual user 10 might be physical user 25 in Panel A and physical user 70 in Panel B.

You can control which physical user in each panel is linked to the virtual user in the virtual panel.

To see or change which physical users are linked to a virtual user:

1. Open the virtual user.
2. Click the Physical Panel Items tab. The Panel Item column shows which physical user is linked for each panel.
3. If you want to change the physical user in a panel, click the entry with the mouse. A drop-box appears, allowing you to set a new physical user.
4. Save your changes.

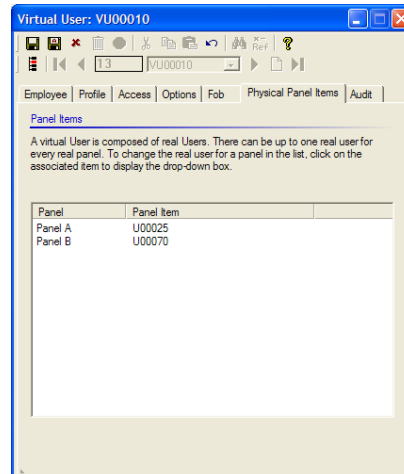

Tip

You can jump directly to a physical user from this screen. Right click the physical user, and choose “Edit” in the menu that appears.




Note

If you change the physical user, the newly selected user will be erased and replaced with the virtual user. The previous user will be unlinked, but retains all programming. You should erase this programming to avoid user duplication.


Virtual Links Explained

To understand virtual links, imagine you have two panels with the following programming. (For simplicity, we are ignoring the normal default items INSTALLER, MASTER and OWNER.)

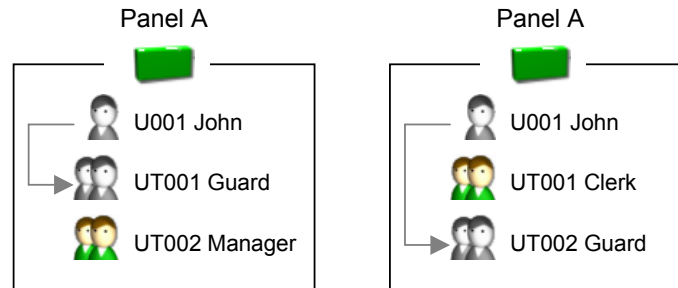

As can be seen from the diagram, John exists in both panels and has User Type “Guard” in both panels. Note that Guard is User Type 1 in the first panel and User Type 2 in the second panel.

When set up as a virtual panel, the diagram looks like this:

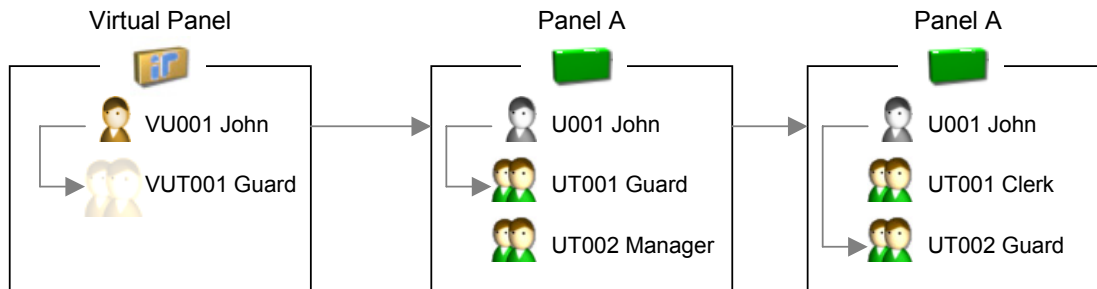

In the virtual panel:

- ❖ **John** is a virtual user.
- ❖ **Guard** is a virtual user type link. **Guard is only a link – it cannot be edited in the virtual panel.**

In the physical panels:

- ❖ **John** is a copy from the virtual panel and cannot be edited except in the virtual panel.
- ❖ **Guard** is the user type that already existed in the panel. **Guard is not copied from the virtual panel.**

Essentially, the “link” (VUT001) tells Insight which user type to use for John in each physical panel. In Panel A, John is UT001 (Guard). In Panel B, John is UT002 (Guard). Editing VUT001 in Insight shows this information, but not the regular User Type programming fields. These must be set up in each member panel.

Links apply to the following items: user types, areas, area lists, doors, door lists, inputs and auxiliaries.

Virtuality In Practice

The previous explanations may have made virtuality seem complicated. If you set up your physical panels correctly, then it becomes much easier.

To set up virtuality in a new system:

1. Work out how many users will exist in every panel. This may equal the capacity of your panels, or be a smaller number. Any leftover users can be programmed specifically on that panel. Make sure to leave some “headroom” for future use – for example, if your system currently has 100 users, you may wish to assign 200 virtual users.
2. Program all of the users into consecutive slots in one of the panels.
3. Set up the user types for the users you have created. Again, use consecutive slots.
4. Make sure that the corresponding slots in the other panels do not contain important information. They will be erased in the creation process, so copy records to safe locations if necessary.
5. Create the virtual panel using the “Master Panel” method.

Master panel: select the panel you set up in steps 2 and 3.

Starting record: select **one less** than the first user you set up in step 2. So if you started programming your users at U0010, enter 9 here.




of records: enter the number you decided in step 1.

If you create your virtual panel using this method, then the virtual users and virtual user type links will all be created for you by Insight. All you need to do is edit the virtual users as required.



Tip


Insight uses colours to differentiate between virtual and non-virtual items. Refer to the table below.

Icon	Colour	Item	Description
	Gold	Virtual Item	This is a virtual item. Programming changes will automatically be saved to all member panels.
	Grey	Member Item	This is a virtual item in a member panel. You cannot edit this item directly – edit the item in the virtual panel instead.
	Regular	Normal item	This is a normal item in a panel. When you edit this item, changes will be saved only to the panel containing the item.

Creating Virtual Panels

You create virtual panels in Insight Edit with the virtual panel wizard. Ideally, you should create or enrol the physical panels first, although this isn't strictly necessary since you can add member panels later on. When you create a virtual panel, you will normally want Insight to create virtual users at the same time. You can choose between four methods for this task.

For the following illustrations, imagine you start with two physical panels, A and B, with some users programmed as shown.

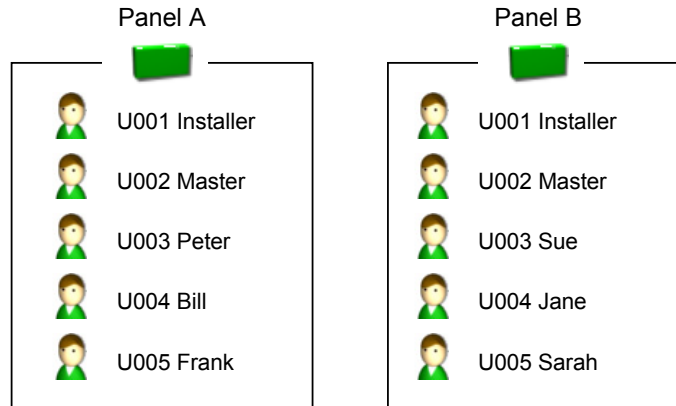


Method 1: Panel With Default Users

With this method, you specify a starting record and the number of users, and Insight creates the requested number of blank virtual users. Any existing users in the range specified are erased in each member panel.

Example

Starting record: 1, number of blank users: 3.

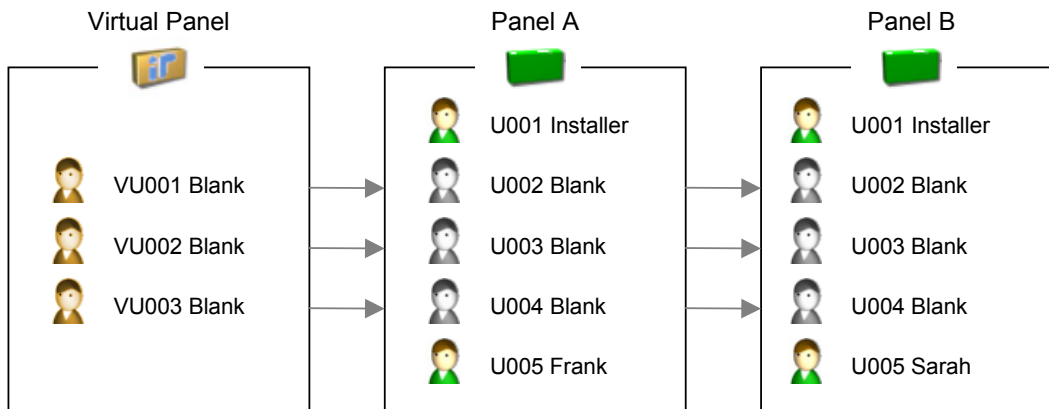

Note

Insight considers the first user to be starting record 0, whereas the panel starts number users with "U00001". Hence, entering a starting record of 1 corresponds to U00002 in the panel.




Method 2: Master Panel

With this method, you specify a starting record and the number of users, and Insight creates the requested number of virtual users by reading them from a dominant panel. Any existing users in the range specified are overwritten in the other panels.

Example

Dominant panel: Panel A, starting record: 2, number of users: 2.

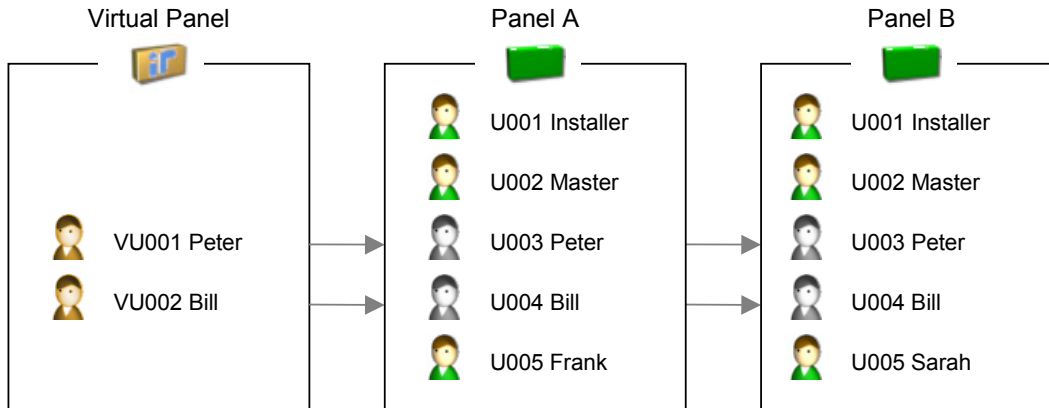


Note

Insight considers the first user to be starting record 0, whereas the panel starts number users with "U00001". Hence, entering a starting record of 2 corresponds to U00003 in the panel.

Method 3: Empty Panel

With this method, the virtual panel doesn't contain any virtual users initially. You must add them later. Any existing users in member panels are unaffected.

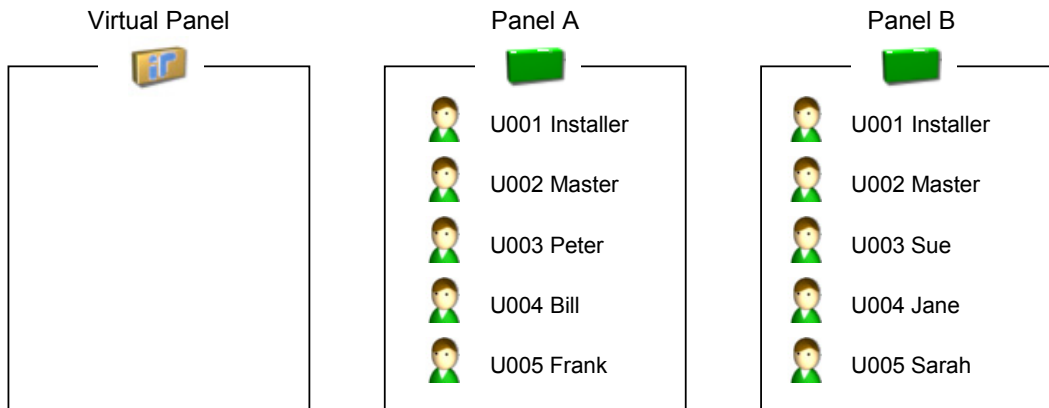

Method 4: Generate From Like Records


This method will be implemented in a future version of Insight.

Tip


You can create any number of virtual panels, however each physical panel can only belong in one virtual panel.

To create a new virtual panel:


1. Enrol or create the panels that will be in the member panel. You must start with at least one panel, you can add more later if required.
2. Right click the site that will contain the virtual panel, and choose “New Virtual Panel” in the menu that appears.

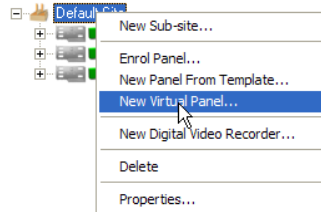

The virtual panel wizard appears.

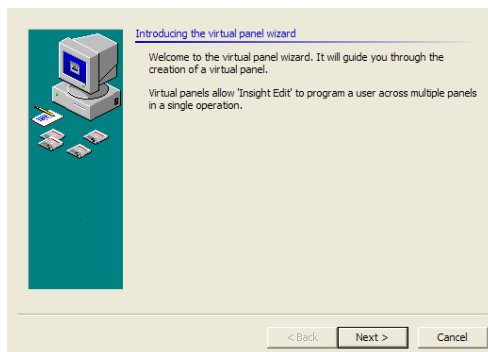

3. Click Next.
4. Enter a name for the virtual panel.
5. Tick the panels you want to add to the virtual panel. You can add panels from any site or sub-site, provided they aren't already a member of a virtual panel.

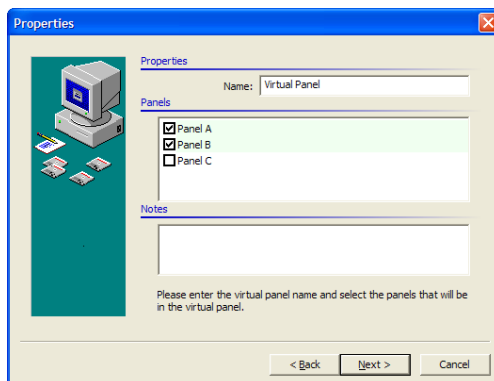

6. Click Next.
7. Choose a creation method for your virtual users (see previous pages).
8. Click Next.
9. Depending on the chosen creation method, you may be asked to specify a starting record and number of virtual users to create. Fill in the required fields, consulting pages 56-57 if necessary. **Users in the range specified will become virtual in your member panels. If you specified “default users” as your creation method, they will be erased. If you specified “master panel” as your creation method, they will be copied from the designated panel into the other panels.**
10. Click Finish. Your virtual panel is created.

**Note**

If you selected a method that creates virtual users, then the virtual users will be written to the member panels immediately. If any member panels are offline, they will turn red, indicating there are pending programming changes in those panels.

**Note**

Virtual users are always created starting with VU00001, even when you specify a starting record greater than one. See the previous examples for an illustration.

To add a panel to an existing virtual panel:

1. In the Insight Toolbar, right click the virtual panel and choose “Properties...” in the menu that appears.
2. Tick the panels you wish to add to the virtual panel.
3. Click OK.

**Note**

Users in the virtual panel will **not** be linked to the newly added panel(s). You must link the users manually. See pages 56 and 57 for examples.

To delete a virtual panel:

1. In the Insight Toolbar, right click the virtual panel you wish to delete and choose “Delete” in the menu that appears.
2. Click Yes. The virtual panel is deleted.

**Warning**

Deleting a virtual panel cannot be undone, except by creating a new virtual panel and setting it up again. Think carefully before deleting a virtual panel.

**Tip**

Deleting a virtual panel doesn't delete the member panels, and their programming remains unchanged. Future programming changes can only be made on the individual panels, unless you create a new virtual panel.

(This page has been intentionally left blank.)




Insight Review

Insight Review lets you search, filter and print security events from your Inner Range security system. The Professional Edition also includes advanced alarm handling and report generation.

Use Insight Review to:

- View live and archived review
- Search and filter review data
- Specify advanced alarm rules (professional edition)
- Acknowledge alarms (professional edition)
- Generate reports (professional edition)

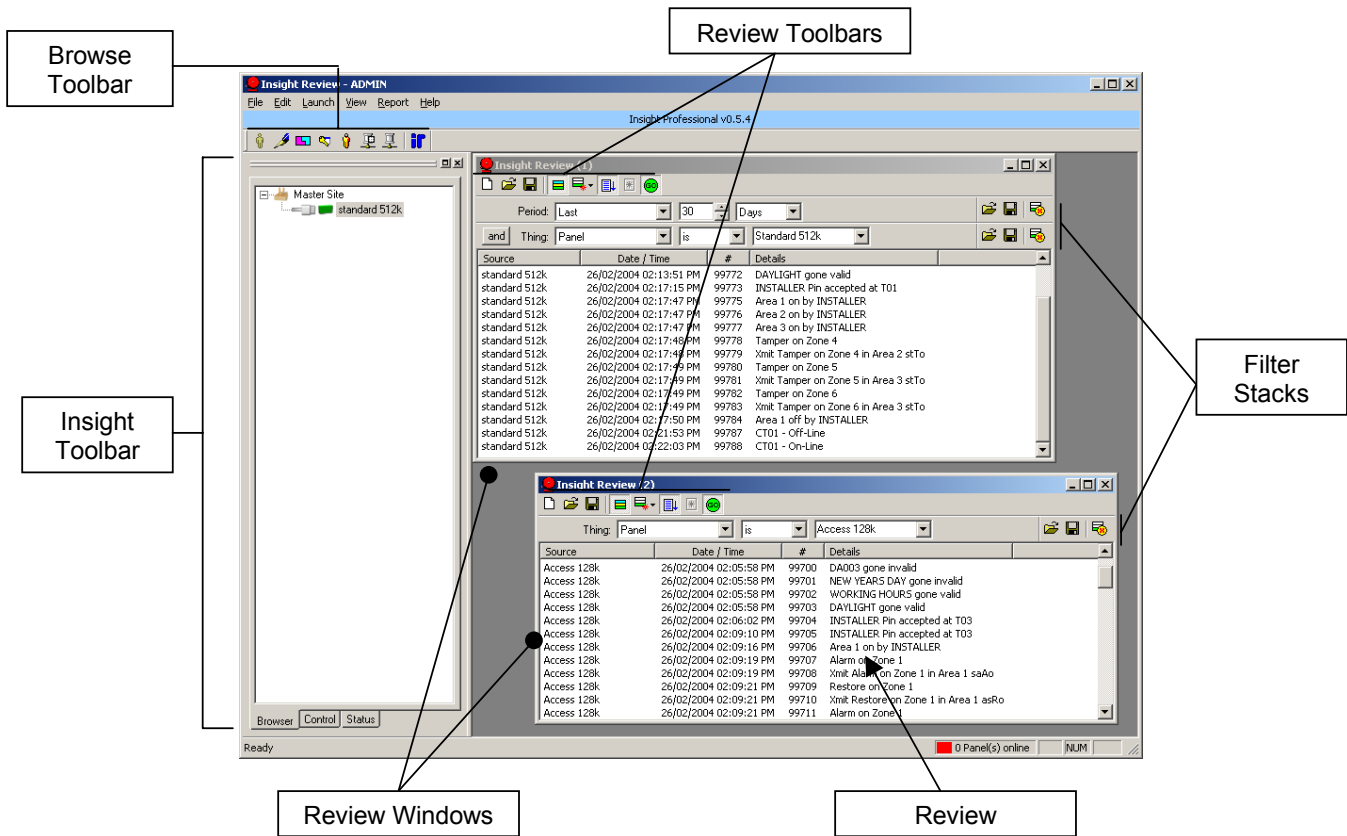

- The **Insight Toolbar** lets you manage your sites and panels (page 15).
- **Review Windows** let you search, filter and display review (page 63).

Underlying Concepts

Inner Range panels maintain an audit trail of access control and alarm events known as **review**. Depending on the size and configuration of the panel, this can be up to 6500 entries. Once the review log is full, it slowly begins overwriting itself.

Insight uploads review from panels whenever it is connected, and stores it in a permanent archive. The archive can be examined in real time (as new events are added by panel activity) or historically. Because Insight keeps a permanent archive, it does not matter when the panel review log overwrites itself.



Warning

Insight only receives review from panels while they are connected. If events occur when a panel is disconnected, it is queued and received by Insight the next time a connection occurs. The number of events that can be queued varies depending on panel size, but is guaranteed to be at least 300 events and will be at most 6,500 events.



Warning

Insight tracks review via the Insight comms task (menu 7-3-1 at any terminal). If this comms task is stopped and started (manually or via the Control Module being reset) then Insight cannot determine which review events are 'unseen'. In this case, you must move the review pointer manually. See page 66.



Previous Software

In PCDirect and WinDirect, review was received automatically during online edit mode. Because Insight is a multi-panel multi-workstation system, panel connectivity is controlled via the Insight Toolbar.



Tip

Insight uploads review from panels whenever they are connected, even if the Review module is not running.

Insight Audit Events

Insight generates its own review entries called audit events. Audit events are generated when operators log on and log off, when alarms are acknowledged and when items are edited in Insight Edit.




Tip

You can filter specifically for audit events. Open a review window, add a new Thing filter, and set the thing to "Insight Audit".

Review Windows

Review is examined in a window called the review window. You can have as many review windows open at a time as you like, each with its own set of filters. To open a new review window, select “New...” from the File menu, or press CTRL+N.

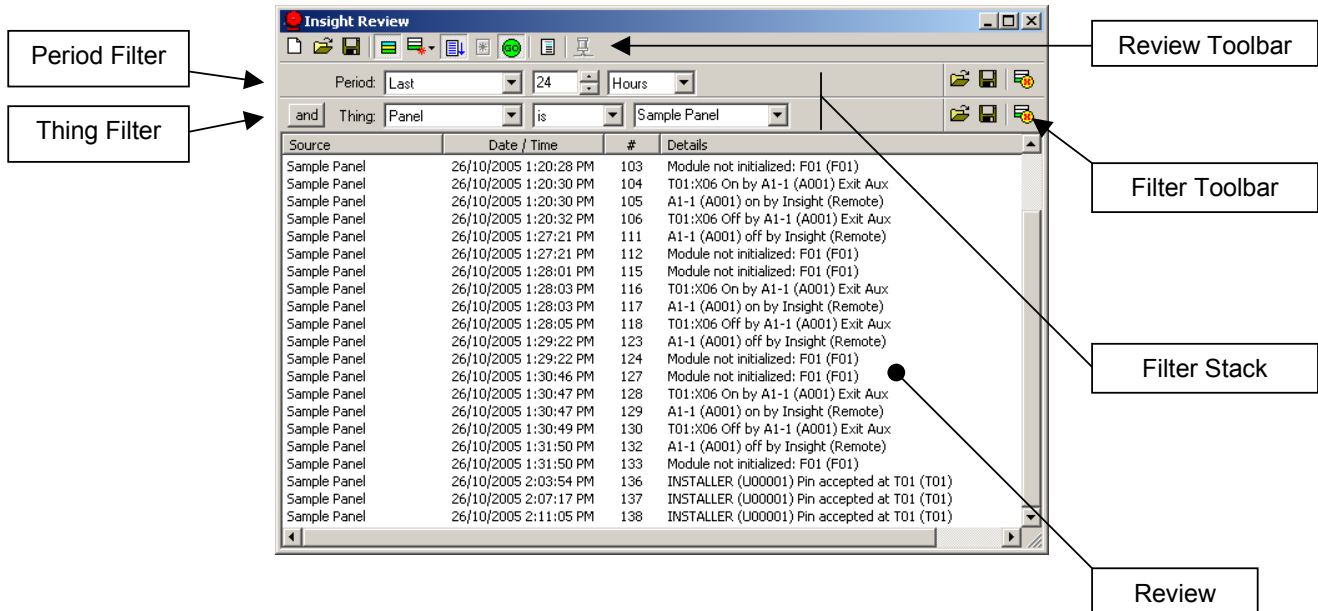

Using the Review Toolbar

- Open a **new** review window.
- Open** a saved filter stack.
- Save** the current filter stack.
- 33** **Show** or **hide** the filter stack.
- Add** a new filter to the filter stack (and stops review processing).
- Turn **auto-scroll** on or off.
- Clear** the current window. Disabled if review processing is enabled.
- Starts and stops **review processing** for this window.
- Create a **filtered report**.
- Select review **archive**.

Using the Filter Toolbar

- Open** a saved filter.
- Save** the filter for use later.
- Remove** the filter from the filter stack.
- Toggle **and/or** logic. If **and** is selected, review must match this filter as well as previous filters. If **or** is selected, review only has to match this filter plus any subsequent **and** filters.

To Examine Review:

1. Open a new review window (CTRL+N)
2. Load or modify the filter stack to suit your requirements
3. If your filter stack includes the “all review”, “live review” or “last...” filters, and you want review to appear as it happens at the panel, make sure the panel is connected in the Insight Toolbar.
4. Click the “GO” button.

Filtering Review

Since Insight saves every single review event ever received, the number of events can grow to a large number. Usually, you will only be interested in examining review from a particular time period or from a specific panel. You can quickly isolate review of interest by applying filters.

About Filter Stacks

Each review window has a **filter stack** applied to it. A filter stack is a collection of one or more filters which are “stacked” between the window title and the window contents. When you modify the filter stack, you change what review events are displayed in the window.



Tip

You can hide the filter stack by clicking the show/hide filter stack button. The filters still apply even when hidden.

Time Filters

Time filters let you filter for review that occurred at a certain time. There are five types of time filters.

- On:** Lets you specify a particular day. You can also specify a time interval on the specified day, for example 18:30 to 19:15.
- From / To:** Lets you specify an interval that spans more than one day. For example, midday on March 15 until 8pm on April 3rd.
- Last:** Lets you specify review that occurred within a certain range of the current time. For example, the last 45 minutes or the last 2 weeks. As time passes, entries will disappear with this filter type.
- Live Review:** This special filter type matches any review that is received live from a connected panel.
- All Review:** This special filter type matches ALL review unconditionally, including live review from connected panels.

Thing Filters

Thing filters let you filter for review that concerns a particular item. Refer to the table below.

<u>I want to...</u>	<u>This is achieved by...</u>
See review from a specific panel.	Select the panel thing filter.
Exclude review from a specific panel.	Select the panel thing filter, then set the matching option box to “isn’t”.
See review that contains certain text.	Select the text compare thing filter.
Exclude review that contains certain text.	Select the text compare thing filter, then set the matching option box to “isn’t”.
See review for a particular user, door, area, time zone, function zone, calculated auxiliary, diary, input or module.	Select the user, door, area, time zone, function zone, calculated auxiliary, diary or module thing filter.

I want to...

This is achieved by...

Exclude review for a particular user, door, area, time zone, function zone, calculated auxiliary, diary, input or module.

Select the **user, door, area, time zone, function zone, calculated auxiliary, diary or module** thing filter, then set the matching option box to "isn't".

See review that is a particular type (e.g. area on/off, system messages, user access etc.)

Select the **review type** thing filter.

Exclude review that is a particular type.

Select the **review type** thing filter, then set the matching option box to "isn't".

See XMIT entries.

Select the **XMIT** thing filter. (XMIT entries are review messages flagged as 'important' by the panel).

Select review for a particular XMIT message type.

Select a thing filter that starts with an asterisk.

See all Insight audit events.

Select the **Insight audit** thing filter.

See edits made to panel programming, Insight programming or Insight permissions.


Select the **audit panel items, audit insight items** or **audit permissions** thing filter.

See operator log-ons and log-offs.

Select the **audit operator log** thing filter.

See panel enrolments.

Select the **audit sync panel** thing filter.

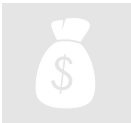



Paid Feature

Not all of these thing filters are available in Insight Lite.

You can combine any number of time and thing filters to create more complex rules. For example, by adding three filters you could show only review from "Panel A" that occurred in the last hour and contains the word "granted" in the message.

To add a filter to the filter stack:

1. Click the **add filters** button in the toolbar () and choose the appropriate type.
2. Modify the filter according to your requirements.
3. If this isn't the only filter in the stack, click the **and/or** button to determine how this filter interacts with the other filters in the stack.
4. Click the **go** button () to activate review processing for the window.



Tip

You can search for items in the review window. Choose "Find..." from the Edit menu, or press CTRL+F.

To copy review to the clipboard:

1. Select the item(s) you want to copy.
2. Choose "Copy" from the Edit menu, or press CTRL+C.



Tip

You can select multiple rows by holding down the Shift or Control keys whilst clicking in the review window.

To save review to a text file:

1. (Optional) select the entries you want to save.
2. Choose "Save As..." from the File menu.
3. To save all events, click the All Entries radio button. To save the events you selected in step 1, click the Selected Events radio button.
4. (Optional) enter a name for your file.
5. Click Save.

Moving The Review Pointer

If the Insight comms task is reset, then Insight cannot determine which review entries have not been processed. In this case, it is possible to move the review pointer manually.

To move the review pointer:

1. Right click the panel in the Insight Toolbar and choose "Review" in the menu that appears, then choose "Move Back...".
2. Enter how far back you want to move the review pointer.
3. Click Close.



Warning

Moving the review pointer may cause duplicate review entries to be recorded. This feature is recommended for experts only.

Basic Reports

Insight includes report templates for most common reporting activities, including user access, door access and alarm reports. Refer to the table below.

I want to...

Create a report showing all review events.
Create a report showing all comms task triggers.
Create a report showing all XMIT events.
Create a report showing user activity.
Create a report showing door activity.
Create a report showing lift activity.
Create a time on site report.
Create a report showing events matching a complex filter.

This is achieved by...

Use the **all events** report.
Use the **all alarms** report.
Use the **XMIT alarms** report.
Use the **user access** report.
Use the **door access** report.
Use the **lift access** report.
Use the **time on site** report.
Create a **filter stack** report.

To generate a basic report:

1. Select the desired report from the Reports menu.
2. Specify the criteria for your report.
3. Click OK. Insight generates the report.



Tip

You can copy all or part of the report into the Windows clipboard. Select the portion you want to copy, then choose "Copy" from the Edit menu, or press CTRL+C. Formatting will be preserved if you paste the report into a compatible application such as Microsoft® Word.

To print a report:

1. Choose “Print...” from the edit menu.



Tip

If your report doesn't paginate correctly, then regenerate the report and change the “records per page” value to something else.

To save the report to disk:

1. Choose “Save As...” from the File menu, or press CTRL+S.



Tip

The report is saved in HTML format and can be opened by any web browser.

To find text in a report:

1. Choose “Find...” from the Edit menu, or press CTRL+F.

Custom Reports

You can generate a report based on complex rules and filters. Creating custom reports is a two-step process. First, a filter stack is created that specifies the criteria for the report. Then, the report is generated.

To create a custom report:

1. If necessary, create a new review window (select “New...” from the File menu, or press CTRL+N).
2. Add time filters and thing filters to your review window until it is filtering for the data you want (see page 64).
3. Test your filter stack by pressing the Go button in the toolbar (🔍).
4. Click the Filtered Report button in the toolbar (📄). A report is generated matching the criteria in the filter stack.



Tip


If you save the filter stack with the Save Filter Stack button (📄), then you can quickly access the report by choosing “Filter Stack” from the Reports menu, then selecting your saved filter stack. Make sure you are saving the Filter Stack, and not an individual filter - the Save Filter Stack button is next to the Hide Filter Stack button (📄) at the top of each review window.

Time On Site Report

With Insight you can generate a Time On Site report. The key features of the Time On Site report are:

1. Fully customisable report criteria including flexible start and end times, multiple shift times, cardholders, doors
2. Selectable reporting fields
3. Choice of detailed or exception reporting modes
4. Customisable shift tolerance
5. Provision for worker breaks of customisable duration
6. Option to export to CSV (Comma Separated Values) file readable by Excel and other software
7. Option to export to MYOB file
8. Six 'report inaccuracy' validation triggers
9. Ability to load and save all report settings

Shift	Shift Start	Shift End	
1	12:00:00 AM	11:59:59 PM	

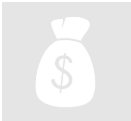

Paid Feature

Time On Site reporting is licensed separately and requires Insight Professional to operate.

To generate a Time On Site report:

1. Choose "Time On Site" from the Reports menu.
2. On the Time/Date tab, specify the starting and ending date and time for the report.
3. Define one or more shifts for the report.
4. On the Panels/Users/Doors tab, select at least one cardholder and door. Any number of additional doors and cardholders can be specified, across multiple Control Modules if required.
5. On the Fields tab, tick the fields you want included on the report.
6. On the Detailed/Exception tab, choose between a detailed report (which includes all time on site information) and an exception report (which only includes entries that match specified exception criteria, such as minimum or maximum hours per day / week / month).
7. If you want to export the data in addition to generating the report, tick the Generate Export File box on the Export tab, and choose your export settings.
8. Choose which review archive to run the report on. The default is "current", which contains review that hasn't been archived.
9. If you want to save the report settings, click the Save Settings button.
10. Click OK to generate the report.



Note

Insight will automatically flag users whose report data may include inaccuracies. Users are flagged who trigger any of the following events:

1. Two or more consecutive 'Door Out' events without an intervening 'Door In' event.
2. Two or more consecutive 'Door In' events without an intervening 'Door Out' event.
3. First event in shift is 'Door Out'.
4. Last event in shift is 'Door In'.
5. No 'Door Out' events in shift.
6. No User/Door Access review entries.



Tip

You can specify a shift tolerance when generating a time on site report. In and Out events occurring within the specified tolerance will be included in the report.



Tip

You can specify customisable worker breaks. Time off site will be ignored if it is less than the specified interval.

To generate a report using saved settings:

1. Choose "Time On Site" from the Reports menu.
2. Click the Load Settings button.
3. Navigate to your saved settings file.
4. Click Open.
5. (Optional) make any desired settings changes prior to running the report.
6. Click OK to run the report.

Alarms

Insight provides advanced, customisable alarm recognition and response. The key features of Insight alarm handling are:

- ❖ Four alarm levels: low, medium, high and critical.
- ❖ Define any number of customisable alarm events with complex filters.
- ❖ Customisable alarm reaction including sound effects and opening schematic maps.
- ❖ Automatic user photograph pop-up.
- ❖ Customisable help response messages.
- ❖ Customisable operator responses.


What is an alarm?

For clarity, we define two different types of alarm. **Panel alarms** (also called XMIT entries) are security conditions detected in the field by a Control Module and flagged as an alarm. Usually, you will want these alarms to be handled as an alarm condition in Insight.

Insight alarms are defined by Operators. They may or may not be based on an XMIT entry. Insight Alarms are much more flexible than panel alarms, because you can choose exactly what conditions must be satisfied for the alarm to be raised.

The way Insight reacts to an alarm is controlled by an **alarm response**. When Insight is first installed, it has a single alarm response set up that handles all panel alarms. You can modify or remove this alarm response, and you can add any number of additional alarm responses.

Alarms are displayed in the **alarms window**, and must be acknowledged. In any module, the number of outstanding alarms is displayed in the lower right hand corner of the screen.

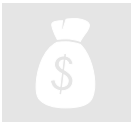

Paid Feature


Alarm handling is not available in Insight Lite.

Acknowledging Alarms


When an alarm occurs, a number of things will happen, depending on the rules specified in the corresponding alarm response. Typically, an alert sound is played and the alarm count starts flashing.

To open the alarm handler window:

1. In any module, click the alarm count in the status bar (bottom right).

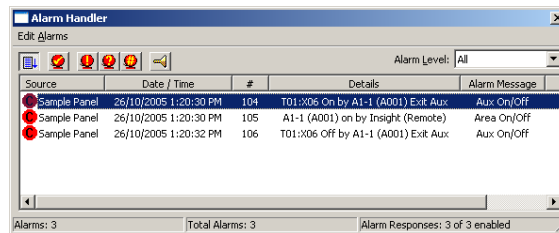

To acknowledge an alarm:

1. Open the alarm handler window.
2. Select the alarm you wish to acknowledge. (You can select multiple alarms with the shift and control keys).
3. Click the Acknowledge Alarm button (). Depending on the alarm response options the Alarm Acknowledge screen appears.
4. If the alarm requires an acknowledgement message, then enter your acknowledgement text. You can select from pre-defined operator responses by clicking the down-arrow at the right edge of the field.
5. Click OK. The alarm is removed from the alarm handler window.




Working With Alarm Responses

An **alarm response** defines what rules constitute an alarm and also specifies how Insight reacts when it occurs. Alarms are defined using a filter stack. When incoming review matches the filter stack, the alarm is triggered. A triggered alarm can be configured to attract the Operator's attention in a variety of ways. Triggered alarms are added to the alarms window and must be acknowledged.


To create a new alarm response:



1. In any module, click the alarm counter (bottom right corner). The Alarm Handler window opens.
2. On the Edit Alarms menu, choose "New Alarm Response" and navigate to the type of review event you want to base the alarm response on. A new filter stack is created matching your criteria, and the Alarm Response window is displayed.
3. Enter the settings for this alarm response (see below).
4. Click OK.

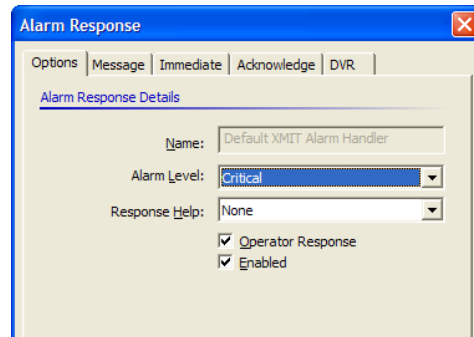

Item	Description
Alarm Level	Specifies the urgency of the alarm. In practice, this dictates the icon shown next to the alarm and whether the alarm is shown or hidden in the alarm handler window.
Response Help	Specifies the help text that should be displayed when the alarm is acknowledged.
Operator Response	If ticked, the operator must enter a text message when acknowledging the alarm. If cleared, no text message is required.
Enabled	If ticked, alarm processing occurs normally for this alarm response. If cleared, the alarm response is ignored.
Alarm Response Message	A description of the alarm. This text is displayed next to the alarm in the alarm handler window.
Text Colour	When the alarm occurs, the text will be this colour in the alarm handler window.
Background Colour	When the alarm occurs, this colour will be behind the alarm in the alarm handler window.


Beep PC's Speaker	When the alarm occurs, the internal PC speaker is beeped.
Play a Sound File	When the alarm occurs, the specified sound file is played. To choose a custom sound, press the Custom radio button, then browse to the sound file (must be in WAV format). Press the Test button to hear the alarm sound.
Repeat Count	Indicates how many times to play the alarm sound. If set to continuous, the sound repeats until the alarm is acknowledged or the mute sounds button is pressed in the toolbar ().
Maximize	If Insight Review is running, then it will be maximised (in other words, the window will be expanded to take up the entire screen). If Insight Review isn't running, this option is ignored.
Flash In Taskbar	If Insight Review is running, then it will start flashing in the Windows task bar. If Insight Review isn't running, this option is ignored.
Message Box	If this option is ticked, then double-clicking an alarm opens the alarm acknowledgement window. If this option isn't ticked <i>and</i> response help is set to none <i>and</i> operator response isn't ticked, then double-clicking an alarm silently removes it without showing the alarm acknowledgement window.
User Information	If the review entry that generated the event has a user associated with it, then the User Information Window is displayed when the alarm is acknowledged, unless the Auto Pop-Up option is ticked.
Auto Pop-Up	If the review entry that generated the event has a user associated with it, then the User Information Window is displayed when the alarm occurs. The User Information option must also be ticked.
Control Item	This option isn't implemented.
Start Insight Review	Launches the Insight Review module (may require operator log-on).
Open Filter Stack	In Insight Review, opens the filter stack that triggered the alarm.
Start Insight Schematic	Launches Insight Schematic.
Map	In Insight Schematic, specifies which map to display when the alarm occurs.
Show DVR Camera Live Video	Opens a new video window displaying live video from the specified camera.
Run	You can specify the path, name and command line options of a 3 rd -party software component.
Execute DVR Command	Sends the specified command to the selected camera or DVR.

Note


Custom alarm sounds are not backed up by Insight Archiver. If you delete or rename the custom sounds, then they will not be played by Insight.



To customise which events trigger an existing alarm response:


1. Open the Alarm Handler window by clicking the alarm count.
2. Click the Alarm Responses button in the toolbar ()
3. Select the alarm response you wish to modify, then click Edit. The alarm response filter stack is displayed, then the alarm response window is opened.
4. Click Cancel to close the alarm response window. You will be left with the alarm response filter stack.
5. Modify the filter stack to suit your requirements (page 64). Remember, any review messages that satisfy your filter stack will generate an alarm.
6. Close the filter stack. Changes take effect immediately.

To modify how Insight reacts to an existing alarm response:

1. Open the Alarm Handler window by clicking the alarm count.
2. Click the Alarm Responses button in the toolbar ()
3. Select the alarm response you wish to modify, then click Edit. The alarm response filter stack is displayed, then the alarm response window is opened.
4. Make any changes to the alarm response.
5. Click OK.




Tip


If the filter stack for the alarm response is open, then you can modify the alarm response simply by clicking the Alarm Response button on the toolbar ()

Working With Help Responses


Help responses are displayed as part of the alarm acknowledgement window. You can create different help responses for different alarms. You must first **create** the help response using the help response editor. You can then attach the help response to an alarm so it will be displayed during the acknowledgement procedure.

To create a new help response:

1. Open the Alarm Handler window by clicking the alarm count (bottom right corner).
2. Click the Help Responses button in the toolbar ()
3. Click New.
4. Enter the name and text of the help response. You can use the formatting tools at the bottom of the window to control text colour, size and formatting.
5. Click OK.

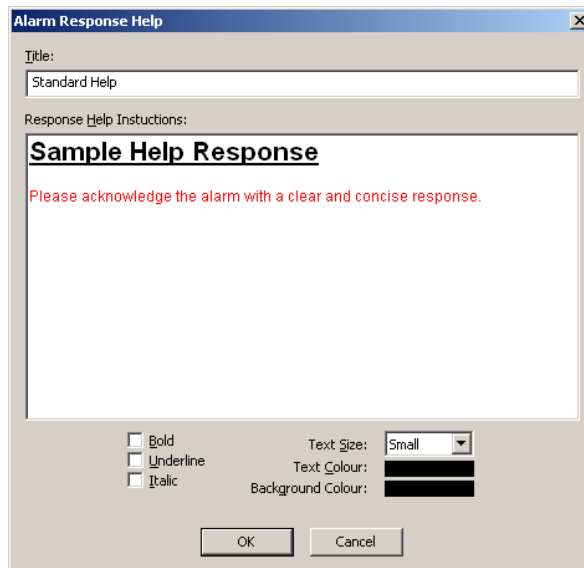


To modify an existing help response:

1. Open the Alarm Handler window by clicking the alarm count.
2. Click the Help Responses button in the toolbar ()
3. Select the help response you wish to modify.
4. Click Edit.
5. Make any changes you require.
6. Click OK. The next time you acknowledge an alarm with this help response attached,

you will be shown the updated text.


To attach help response to an alarm:

1. Open the Alarm Handler window by clicking the alarm count.
2. Click the Alarm Responses button in the toolbar ()
3. Select the alarm response you wish to modify, then click Edit. The alarm response filter stack is displayed, then the alarm response window is opened.
4. Select the Options tab.
5. Click the Response Help field, and select the help response you want displayed.
6. Click OK. When operator's acknowledge this type of alarm, the help text will be displayed in the acknowledge window.


Working With Operator Responses

Operators usually need to enter text when acknowledging alarms. Instead of entering free text, you can provide “templates” dealing with common responses that the operator can quickly select.

To create a new operator response:

1. Open the Alarm Handler window by clicking the alarm count.
2. Click the Operator Responses button in the toolbar ()
3. Click New.
4. Enter the name and text of the operator response.
5. Click OK.

To modify an existing operator response:

1. Open the Alarm Handler window by clicking the alarm count.
2. Click the Operator Responses button in the toolbar ()
3. Select the operator response you wish to modify.
4. Click Edit.
5. Make any changes you require.
6. Click OK.

To apply an operator response when acknowledging an alarm:

1. Double-click the alarm to open the alarm acknowledgement screen
2. In the Operator Acknowledgement field, click the pull-down arrow and choose the appropriate response. You can optionally modify the text if required.
3. Click OK.

(This page has been intentionally left blank.)





Insight Archiver (SQL Edition)

Insight Archiver provides a one-click backup solution for your Insight security database. All database components (including review and panel programming) are archived into a single file for convenient storage. Insight Archiver can also archive review to a separate file. Backups can be scheduled to occur automatically or run manually.


Use Insight Archiver (SQL Edition) to:

- Backup your database
- Restore a previous backup
- Move review to an archive
- Schedule automatic backups

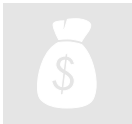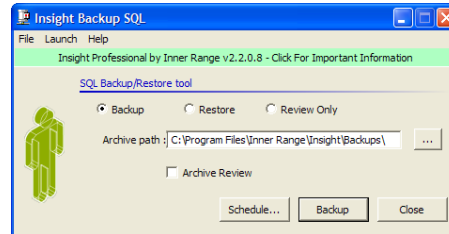

Insight Versions

Insight Archiver SQL is part of Insight Professional.

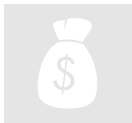

Insight Versions

A simpler version of Insight Archiver is part of Insight Lite. Insight Archiver Lite can back up your entire database to a single file, but cannot schedule automatic backups or move review to a separate archive.

Backing Up vs. Archiving

You can **back up** your Insight Database to a file. This creates a *copy* of all your data, which can later be *restored* from the backup file. Your existing database isn't modified when you make a backup, and is completely replaced when you restore from a backup.

You can **archive** Insight Review to an archive file. This *moves* review that occurred prior to a date you specify, and places it in an archive file. If you choose to archive review, Insight Archiver will create a new archive file for each calendar year. Archiving review periodically is necessary to prevent the database growing too large.



Tip

You can create review filters that extract review from a yearly archive. Open a review window, and click the Select Review Archive button () in the toolbar.



Note

You cannot create a filter stack in Insight Review that can display review from multiple archives simultaneously.

To manually create a backup:

1. Ensure the "Backup" radio button is selected.
2. Specify a location for the backup file to be saved. You can navigate to a different folder easily by clicking the ellipsis (...) button.
3. Click Backup.
4. Your Insight database is archived to a file called "InsightBackup *year month day time*.ibu". For example: InsightBackup 2005 Oct 07 190133.ibu.

To schedule an automatic database backup:

1. Click Schedule...
2. In the screen that appears, tick the “perform scheduled database backup” box.
3. If necessary, specify the location of the backup by clicking the ellipsis (...) button.
4. Specify how often to run the backup, and on which days and at what time to perform the backup.
5. Click OK.
6. A new Insight database backup will be created each time the criteria you entered is triggered.



Note

Insight Server must be running at the appointed time for a scheduled backup to be performed.

To schedule automatic review archiving:

1. Click Schedule...
2. In the screen that appears, specify the location of the backup by clicking the ellipsis (...) button. Note that archived review and Insight database backups always occur to the same directory.
3. Select the “review archive schedule” tab.
4. Tick the “perform scheduled database archive” box.
5. Specify how often to perform the archive, what review should be archived, and on which days to perform the archive.
6. Click OK.
7. Review will be moved from the “live” database to the appropriate yearly review archive each time the criteria you entered is triggered.



Note

Insight Server must be running at the appointed time for a scheduled archive to be performed.

To manually restore from a backup:

1. Ensure the “Restore” radio button is selected.
2. Specify the backup file you want to restore from. You can navigate to the file easily by clicking the ellipses (...) button.
3. Click Restore.
4. If Insight Server is running, you will be asked to wait while the Server is stopped.
5. Your Insight database is replaced with the backup.



Warning

When you restore from a backup, the existing Insight database is deleted and replaced with the backup.



Note

Insight Archiver must be run on the Insight Server computer.




Insight Licence Manager


Insight Professional requires licence keys to function. These licence keys are stored in the USB hardware lock that was shipped with Insight Professional.

Use Insight Licence Manager to:

- View installed licence keys
- Install and remove licence keys

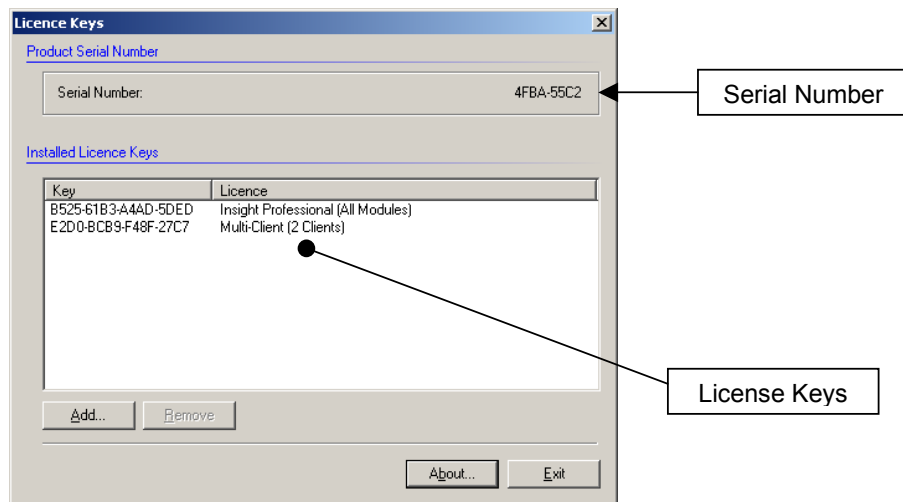

- The **serial number** identifies your Insight installation.
- The **licence keys** determine which features of Insight are available.

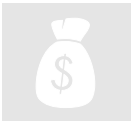

Paid Feature

Insight Licence Manager is part of Insight Professional.

Registering Insight Professional

Insight Professional will operate in Professional mode for thirty days from the initial installation date. During this time, you must contact Inner Range for a permanent Professional licence key.

To register Insight Professional:

1. Choose “About...” from the Help menu of any module.
2. Click the hyperlink that says [Click to Register](#). A new window appears.
3. Click the hyperlink that says [Click here for registration form](#).



Warning

If you fail to register in the 30-day period, Insight will revert to Lite operation. As soon as your permanent Professional key is entered, Insight will return to Professional operation.



Tip

The Insight serial number is stored inside the hardware key. You can quickly check the serial number by opening the About box in any module.



Licensed Modules

Your Insight Professional licence provides unlimited access to the core Insight Professional modules such as Insight Operators and Insight Schematic. The following features or functions are licensed separately:

- ❖ Insight Photo ID
- ❖ Insight Time On Site Reporting
- ❖ DVR Integration

Panel Licensing

Insight Professional includes a license to enrol one panel. To enrol additional panels, additional licenses are required. Contact your Inner Range distributor.

Workstation Licensing

Insight Professional includes a license to log in from one workstation. To enrol additional workstations, additional licenses are required. Contact your Inner Range distributor.

About Fixed Workstation Licenses

When you purchase workstation licenses, they are initially “floating”. As soon as an operator logs on from a new non-server workstation, the license becomes locked to that workstation. You can manually “unlock” a licence at the rate of one workstation per week.

To unlock a workstation license:

1. In License Manager, select the workstation whose licence you want to release.
2. Click Remove.

To unlock all workstation licenses without waiting one week per license:

1. Contact Inner Range, who can issue a special key to release all workstation licenses. The key will function for 48 hours from the time of generation.




Insight Operators


Insight Operators lets you manage who is allowed to login to Insight, and what privileges they have within the Insight system.

Use Insight Operators to:

- Create operators
- Delete operators
- Modify operator privileges
- Create “locked down” workstations with reduced privileges
- Manage tenancies in multi-tenant systems

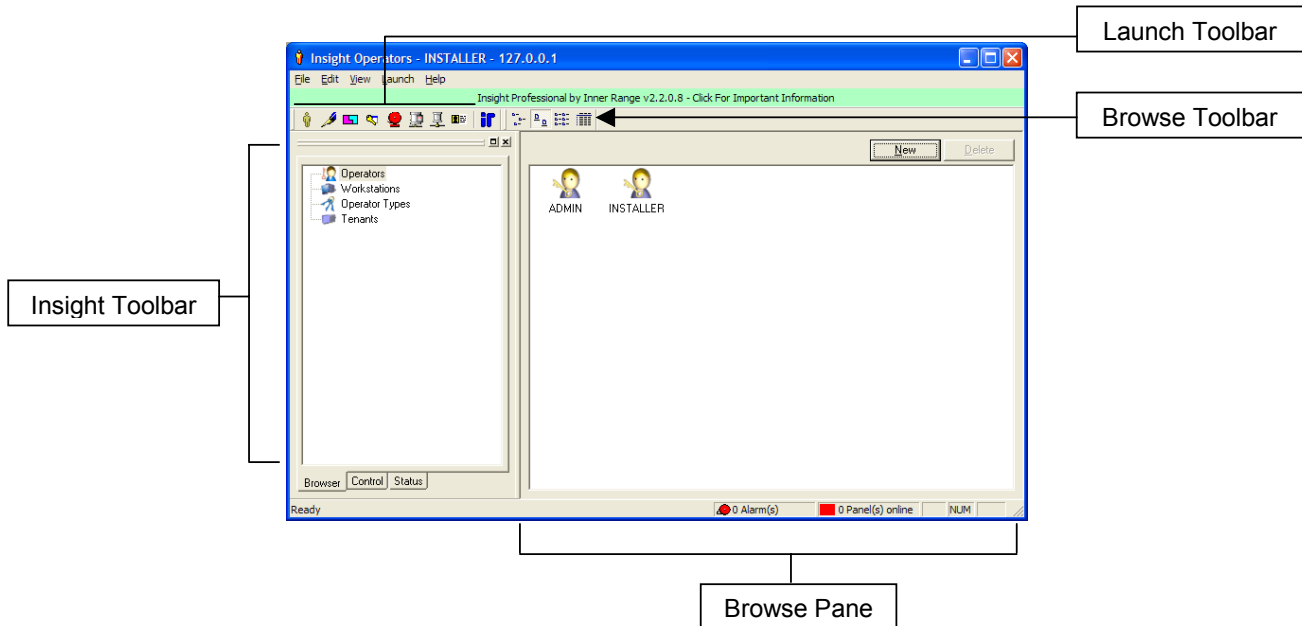


- The **Insight Toolbar** lets you select between operators, workstations, operator types and tenants.
- The **browse pane** displays items you can modify.

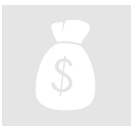

Paid Feature

Insight Operators is part of Insight Professional.

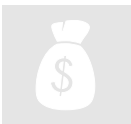

Demo Edition


Operator passwords are bypassed in the demonstration version of Insight.

Working With Operators

Access to Insight modules is restricted to authorised personnel called **operators**. Operators have their own user name and password. Operators can be assigned different levels of privilege, which determine what operations they can perform.

Administrators

Special operators can be created called **administrators**. Administrators are like normal operators, but with permanently elevated privileges.

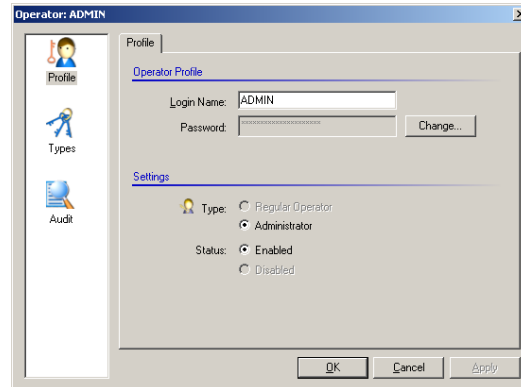

Installer

There is only one installer operator in any Insight installation. The installer has all the privileges of an administrator, plus the ability to create and delete tenants.

To create an Operator:

1. Click the Operators tab in the Insight Toolbar.
2. Click the “New” button; or press the Insert key; or right click the browser pane and select “New Operator...” from the menu that appears.
3. Enter a unique name for the Operator.
4. Specify a password for the Operator.
5. Click the “Types” icon, and allocate Operator Types to the Operator.
6. Click OK to save the new Operator.

To delete an Operator:

1. Click the Operators tab in the Insight Toolbar.
2. Right click the Operator and choose “Delete” in the menu that appears; or click the Operator with the left mouse button, then press the Delete key.
3. Click Yes when asked if you really want to delete the Operator.



Tip

You cannot delete yourself.



Operator Permissions

To create an Operator you need **create** permissions on operators. To delete an operator you need **delete** permission on the operator.

To suspend an Operator:

You can suspend an operator without deleting them.

1. Open the Operator you wish to suspend.
2. Click the “Disabled” radio button.
3. Click OK. The Operator will not be able to login to any modules.



Tip

You cannot suspend yourself.




Operator Permissions

To suspend an Operator you must have the **change** permission on the Operator.

Working With Operator Types

Operator Types let you control which items Operators can see, create, delete, control and modify.

Once an Operator Type has been created, you can assign it to Operators.

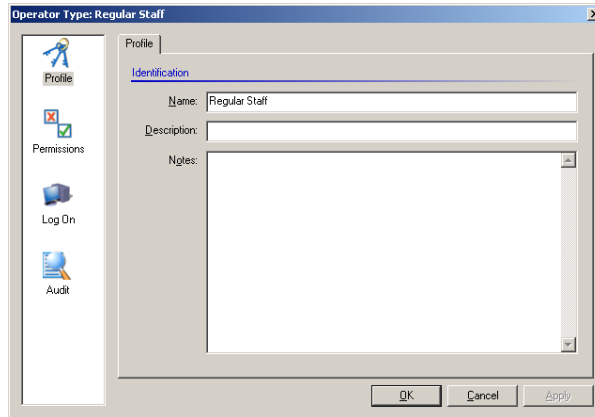

To create an Operator Type:

1. Click the Operator Types tab in the Insight Toolbar.
2. Click the "New" button; or press the Insert key; or right click the browser pane and select "New Operator Type..." from the menu that appears.
3. Enter a unique name for the Operator Type.
4. Click the "Permissions" icon, and allocate privileges to the Operator Type.
5. Click the "Log On" icon, and specify which workstations Operators of this type are permitted to log on from.
6. Click OK to save the new Operator Type.

To delete an Operator Type:

1. Click the Operator Types tab in the Insight Toolbar.
2. Right click the Operator Type and choose "Delete" in the menu that appears; or click the Operator Type with the left mouse button, then press the Delete key.
3. Click Yes when asked if you really want to delete the Operator Type.



Note

Deleting an Operator Type might prevent Operators from logging in, since an Operator with no Type cannot login to Insight modules.



Tip

Operators who are Administrators automatically receive all privileges. You do not have to assign them any Operator Types.




Operator Permissions

To create a new Operator Type, you must have the **create** permission for Operator Types. To delete an Operator Type you must have the **delete** permission on the Operator Type.

Working With Permissions

Permissions are at the heart of Operator Types. With permissions, you can precisely control what an Operator can do in Insight.

There are three pages of permissions in each Operator Type: **sites and panels** shows permissions for all sites, panels, panel programming and maps. **Security** shows permissions for Operators, Operator Types and Workstations (in other words, the items manipulated by the Insight Operators module itself). **Defaults** shows what permissions will apply to new items that are created in the future.

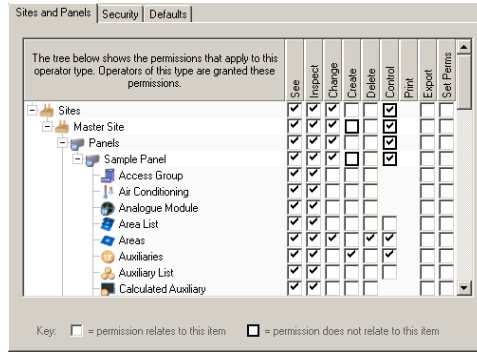

Insight lets you define what an Operator can do via nine permissions.

Permission	Description
See	The see permission means you can see the item in lists and browser panes.
Inspect	The inspect permission means you can open the item and see how it is configured.
Change	The change permission means you can modify the item and save your changes.
Create	The create permission means you can create new items of that type. Permissions on the new item will be copied from the Defaults page.
Delete	The delete permission means you can delete the item. For panel items like doors and user types, this permission lets you reset the record to the unprogrammed state.
Control	The control permission means you can control the item via the Insight Toolbar.
Print	The print permission is not currently implemented.
Export	The export permission is not currently implemented.
Set Perms	The set perms permission is not currently implemented.

Setting Permissions

You grant or deny permissions on a particular item by ticking or clearing the corresponding checkbox for that item.

The privileges windows are deliberately organised in a tree structure. When you tick an item at the top of the tree, the tick “ripples” down through the branches of the tree. Thus, ticking “see” at the top-most site level grants the “see” privilege to all items in the site including sub-sites, panels, programming items and maps.



Tip

If you don’t want a tick to “ripple” down the tree, hold down the Control key when you click the checkbox. The tick will not ripple more than one level down.



Tip

Sometimes, you may want to “ripple” a setting that only makes sense at the lower branches of the permission tree. For example, you can **control** doors but not sites. In this case, Insight provides a special check box with a black border. The purpose of this check box is to provide a convenient means of turning the permission on and off at a lower level in the tree.



Operator Permissions

To set permissions on an item, you must have the **set perms** permission on that item. To set some items, you must also be an administrator.

Working With Module Permissions

With Insight, you can grant or deny Operators access to Insight modules, and you can also control what actions can be performed within modules. Module permissions are set at the Operator Type level.

<u>I want to...</u>	<u>Use this permission in the tree (see below)...</u>
Control which alarms an operator type can acknowledge	Alarm Handler→Alarm Acknowledgement→(Critical/High/Medium/Low)
Specify whether an operator type can create, edit and remove Alarm Responses	Alarm Handler→Alarm Responses→(Create/Edit/Remove)
Specify whether an operator type can create, edit and remove Help Responses	Alarm Handler→Help Responses→(Create/Edit/Remove)
Specify which Insight modules are available to an Operator Type	Run Modules→(module name)

To change the permissions for an Operator Type:

1. Double-click the Operator Type you wish to modify.
2. Click Modules.
3. Expand the tree on the right hand pane to locate the item you wish to modify. Ticking an item grants the permission to all Operators with this Operator Type.
4. Click OK.



Tip

Operators with multiple Operator Types receive the combined permissions of each Operator Type.


Working With Workstations

Insight lets you use workstations in two ways.

1. You can specify that certain Operator Types must log on from designated workstations.
2. By applying an Operator Type to a workstation, you can limit the permissions that are available from that workstation.

To create a workstation:

1. Click the workstation tab in the Insight Toolbar.
2. Click the “New” button; or press the Insert key; or right click the browser pane and select “New Workstation...” from the menu that appears.
3. Enter the name of the workstation, or click the Browse button and select the workstation from the network.
4. Click OK to save the new workstation.

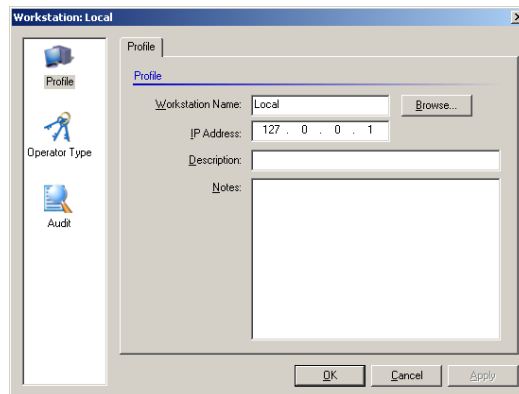

To delete a workstation:

1. Click the workstation tab in the Insight Toolbar.
2. Right click the workstation and choose “Delete” in the menu that appears; or click the workstation with the left mouse button, then press the Delete key.
3. Click Yes when asked if you really want to delete the workstation.

To create a “locked down” workstation:

1. Create an Operator Type, and set up the maximum permissions that will be permitted from your locked-down workstation.
2. Right-click the workstation and choose “Properties...” from the menu that appears.
3. Click the “Operator Type” icon.
4. Click the radio button labelled “Restrict permissions to this operator type”.
5. Select the Operator Type you created.
6. Click OK to save your changes.

Any permission that **isn’t** granted in the Operator Type will **never** be allowed on the locked-down workstation. Any permission that **is** granted in the Operator Type **may** be allowed on the locked-down workstation, depending on the Operator’s normal permissions.



Note

You cannot create or edit Operator Types from workstations that have been locked down.



Warning

It is possible to lock yourself out of Insight completely with this feature. Use it carefully, and make sure you never lock down your system in such a way that you (the administrator) cannot change permissions from any workstation.




Operator Permissions

To create a new workstation, you must have the **create** permission for workstations. To delete a workstation, you must have the **delete** permission for that workstation.

Working With Tenants

Tenants let you 'divide' your panel into multiple groups, so that only parts of the panel are visible to each group. For example, a shopping centre might have ten retailers. Rather than installing one panel per retailer, a single panel can be used. To prevent retailer A from tampering with retailer B's security configuration, tenants are created so that each retailer can only 'see' their own users, doors, areas and review.

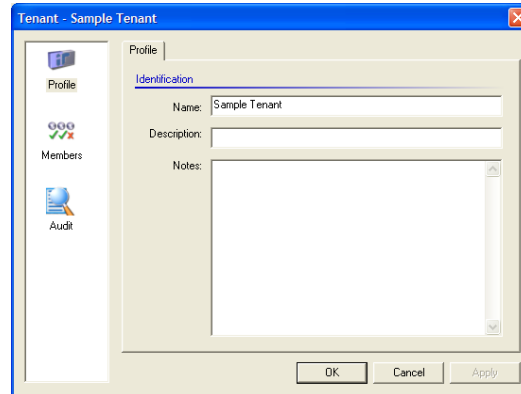

Tenancy Rules Explained


- Tenancy rules can be switched on or off. If tenancy rules are off, then all operators can see all items, *subject to the permission rules defined for each operator type* (see page 81).
- Only the **installer** operator can turn tenancy rules on or off.
- Turning tenancy rules off erases any existing tenancies. All items and operators become 'untenanted'.
- Only the **installer** operator can create or delete tenancies.
- Only the **installer** and **administrators** can modify existing tenancies.
- **If an item (like a door or an area) isn't placed in a tenancy, it is visible to all tenants** (subject to the permission rules for each operator type).
- Once an item is assigned to a tenancy, it is only visible to **installer**, all **administrators** and any operators in that tenancy.
- An item can belong to more than one tenancy.
- Operators can belong to multiple tenancies. Operators can 'see' any item that belongs to any of their tenancies - provided, of course, that the operator has the appropriate permissions (see page 81).
- Operators cannot see review entries if any part of the review message is out of their tenancy.

How Tenancy Affects Review

- Review messages are visible to the tenants that are common to all items in the review message. In other words, only operators who can see all of the items in a message can see the message.
- Changing an items tenancy after a review message has been created has no effect on the review message.

To enable Insight tenancy rules:

1. You must log in to Insight Operators as **installer**.
2. Click **tenants**.
3. Click the "turn tenancy on" button (above the browser pane).
4. Click 'Yes' on the warning screen that appears.
5. Restart the server by logging on to any Insight module.

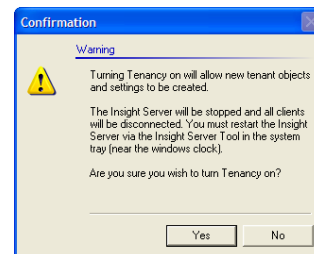

Warning

Turning on tenancy rules stops the Insight server. All operators will be disconnected.

To disable Insight tenancy rules:

1. You must log in to Insight Operators as **installer**.
2. Click **tenants**.
3. Click the “turn tenancy off” button.
4. Click ‘Yes’ on the warning screen that appears.
5. Restart the server by logging on to any Insight module.



Warning

Turning off tenancy will remove all items from any tenancies, then delete the tenants. Turning tenancy rules back on will not restore the deleted tenants.



Warning

Turning off tenancy rules stops the Insight server. All operators will be disconnected.

To create a new tenancy:

1. You must log in to Insight Operators as **installer**.
2. Click **tenants**.
3. Click the “New” button.
4. Enter a name for the new tenant.
5. Click OK.

To delete an existing tenancy:

1. You must log in to Insight Operators as **installer**.
2. Click **tenants**.
3. Select the tenant you want to delete.
4. Click the “Delete” button.
5. Click “Yes” on the warning screen that appears.



Note

When a tenant is deleted, any items belonging to that tenancy are removed from the tenancy. If an item belonged only to that tenancy, then it becomes visible to all remaining tenants.

To add an operator to a tenancy:

1. You must log in to Insight Operators as **installer** or an administrator.
2. Click **operators**.
3. Double-click the operator you wish to modify.
4. Click **tenancies**.
5. Tick the tenancies you want the operator to be a member of.

To remove an operator from a tenancy:

1. You must log in to Insight Operators as **installer** or an administrator.
2. Click **operators**.
3. Double-click the operator you wish to modify.
4. Click **tenancies**.
6. Uncheck the tenancies you want to remove the operator from.

To assign an item to one or more tenancies:

1. You must log in to Insight Operators as **installer** or an administrator.
2. Click **tenant**.
3. Double-click any tenancy in the browser pane. (If there aren't any tenancies defined, you will need to create one first.)
4. Click **members**.
5. Locate the item in the items tree. Panel items are in the **sites** branch. Review filters are in the **review** branch. Operators and workstations are in the **security** branch.
6. Right-click the item, and choose "see all tenancies..." in the menu that appears.
7. Tick the tenancy or tenancies that the item should belong to.
8. Click OK. The item will become invisible except to operators sharing one or more common tenancy.

To make an item visible to all tenancies:

1. You must log in to Insight Operators as **installer** or an administrator.
2. Click **tenant**.
3. Double-click any tenancy in the browser pane. (If there aren't any tenancies defined, then the item is already visible to all tenants, subject to Operator Type permissions.)
4. Click **members**.
5. Locate the item in the items tree. Panel items are in the **sites** branch. Review filters are in the **review** branch. Operators and workstations are in the **security** branch.
6. Right-click the item, and choose "see all tenancies..." in the menu that appears.
7. Uncheck all the boxes in the "belongs to" window.
8. Click OK.



Note

This method always works if you are logged on as **installer**. It will work for administrators, provided the administrator can 'see' all the tenancies that the item has. If there are additional tenancies that the administrator cannot see, then the item will remain in those tenancies and hence won't become visible.



Tip

Items are visible to all tenancies by default. You only need follow this procedure to remove an item from all tenancies if you had previously assigned it to one.

To see which items belong to a tenancy:

1. You must log in to Insight Operators as **installer** or an administrator.
2. Click **tenant**.
3. Double-click the tenancy in the browser pane.
4. Click **members**.
5. Items that are ticked in the tree belong to that tenancy.



Tip

The tenancy count shows how many tenancies an item belongs to. If the tenancy count is zero, the item is visible to all tenancies.

(This page has been intentionally left blank.)




Insight Schematic

Insight Schematic allows operators to monitor the status of an installation via an intuitive interface based around graphical floor plans and site maps. Special icons can be placed on each map that show the status of hardware items (such as inputs, areas and auxiliaries) in real time.

Use Insight Schematic to:

- Import site plans
- Browse drill-downs
- Add areas, auxiliaries, inputs, doors, lifts and modules to plans
- Monitor site activity in real time
- View and acknowledge alarms
- Control your Inner Range security system

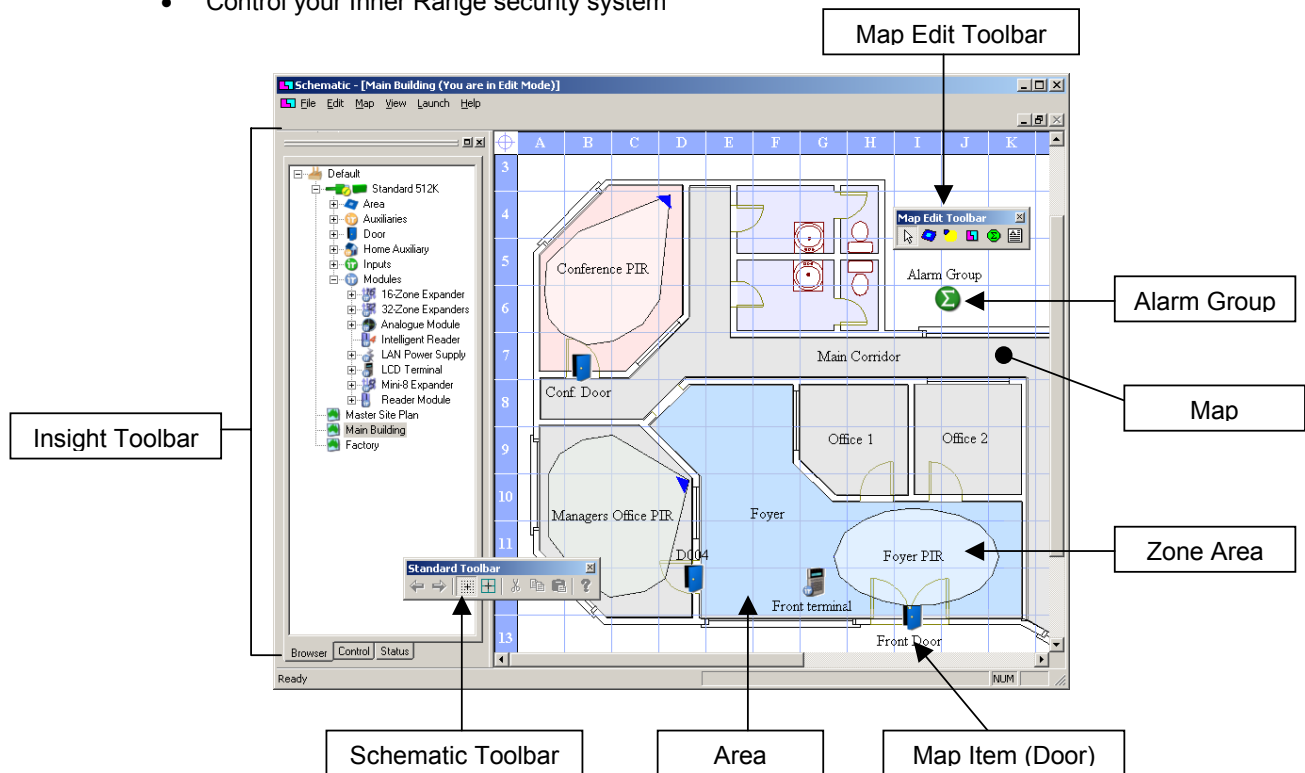

- The **Insight Toolbar** lets you manage your sites and panels (page 15).
- The **map** lets you add elements to your map, and to monitor these elements in real time (page 91).

Working With Maps

To use Insight Schematic, you must first import a **map** of your site or buildings.




Note

You cannot create maps with Insight Edit. You must create or scan your map with other software, then import the image file into Schematic.

To import a map:

1. In the Insight Toolbar, click on the site that will contain the new map. If necessary, create a new master site or sub-site.
2. Choose “Import Graphic...” from the Map menu.
3. Navigate to the image file you wish to import
4. Click Open.

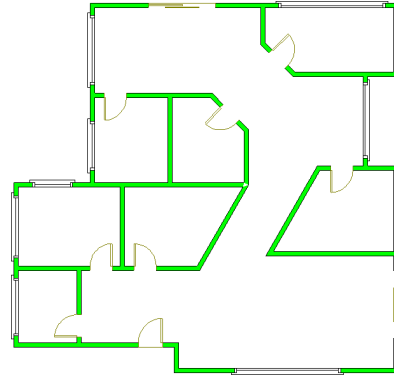

The map is added to the selected site.



Tip

Several sample maps are installed with Insight. Navigate to the location where you installed Insight, then look in the “Sample Maps” directory.



Tip

You can change the scale of a map that you have imported. Select “Zoom...” from the Map menu.



Tip

Once a graphic is imported, you can delete or move the original file. Schematic stores its own copy of the image.



Tip

Schematic can open files in the following formats: BMP (Bitmap), JPEG (Joint Photographic Expert Group), PNG (Portable Network Graphics) and TIF (Tagged Image Format). Pictures in other formats (including AutoCAD DWG files) must be converted into one of these formats prior to importing.

To rename a map:

1. In the Insight Toolbar, right-click the map you wish to rename and choose “Properties...” in the menu that appears.
2. Enter the new map name.
3. Click OK.




Operator Permissions

To import a map, you must have the **create** permission for maps. To delete a map, you must have the **delete** permission for that map. To rename a map, you must have the **change** permission for that map.

Adding Labels


You can add text labels to your maps. To add labels:

1. Ensure you are in Edit Mode (select “Edit Mode” from the File menu).
2. In the Insight Toolbar, click the map you want to add the Alarm Group to.
3. Select the Label tool (.
4. Click on the map where you want to place the label.
5. Enter the text of your label.

Adding Alarm Groups

Alarm Groups let you monitor alarms from many sources and display them at a single point on your map.

To add an Alarm Group to your map:

1. Ensure you are in Edit Mode (select “Edit Mode” from the File menu).
2. In the Insight Toolbar, click the map you want to add the Alarm Group to.
3. Select the Alarm Group tool (.
4. Click the map where you want to place the Alarm Group.
5. In the Alarm Group properties window, enter a name for the Alarm Group.
6. In the Site Tree, tick the inputs that you want to add to the Alarm Group.
7. Click OK.

Working With Surveillance Items

Surveillance items correspond to hardware detectors and devices in your Inner Range system, and fall into one of two categories.

- ❖ **Point** items occupy a single point on the map. These items are usually doors, auxiliaries, reed switches and the like.
- ❖ **Area** items occupy shaped regions on the map. These items are usually Inner Range areas, or sensor devices such as motion detectors or perimeter beams.



Adding Surveillance Items

You can monitor the status of your installation by adding surveillance items to your maps.

To add *point* surveillance items:

1. Ensure you are in Edit Mode (select “Edit Mode” from the File menu).
2. In the Insight Toolbar, expand the Site Tree until you reach the item you wish to monitor.
3. Click the item with the left mouse button, but do not release the button.
4. With the button held down, drag the item onto your map and release the button.
5. If necessary, fine-tune the placement of the item.

To add *area* surveillance items:

1. Ensure you are in Edit Mode (select “Edit Mode” from the File menu).
2. If you are placing an area, select the Area tool (). If you are placing a zone input, select the Zone Area tool (.
3. Draw the area by clicking on the map. Hold the CTRL key down if you wish to draw angled lines.
4. To finish the shape, either double-click the mouse button, or click on the first point of the shape.

6. In the Insight Toolbar, expand the Site Tree until you reach the area or zone input you wish to monitor.
7. Click the item with the left mouse button, but do not release the button.
8. With the button held down, drag the item onto the shape you just created and release the button.

**Tip**

You can place the same item more than once, either on the same map or different maps.

**Tip**

You can see which items have been placed on maps via the Map Items window. Select “Map Items Window” from the View menu.

**Tip**

You can jump straight to a placed item on any map. Choose “Go To” from the Edit menu.

**Tip**

You can choose between two icon sizes. In the Insight Toolbar, right-click the map and choose “Properties...” from the menu that appears. Click the Appearance tab, then choose the icon size you prefer.

**Tip**

When an item is placed, a text caption appears under the item. You can change the position of the caption, or hide it completely. Right-click the item and choose “Position Caption” from the menu that appears.

**Tip**

You can hide captions on all maps, or change their font. Select “Preferences...” from the Edit menu, then click the Captions tab.

**Tip**

When you place items, they are aligned to a “snap” grid. You can change the size of the snap grid - choose “Preferences...” from the Edit menu. You can disable grid snap - uncheck “Snap To Grid” in the Edit Menu. You can hide the snap grid - click the “show/hide snap grid” button in the Schematic Toolbar.

**Operator Permissions**

To add, move or delete surveillance items from maps, you must have the **change** permission on that map.

Understanding Surveillance Item Status

Insight conveys the status of surveillance items through the use of colour.

Sample	Type	Colour	Meaning	Description
	Input	Green	Sealed	The input is in a sealed state.
	Input	Red	Alarm	The input is in an alarm state.
	Input	Orange	Tamper	The input is in a tamper state.
	Auxiliary	Blue	On	The auxiliary is on.
	Auxiliary	Grey	Off	The auxiliary is off.

The following symbols may be drawn on top of surveillance items to convey additional information.

Sample	Type	Meaning	Description
	Input	Isolated	The input is isolated.
	Auxiliary	Override	The auxiliary is in an override state, and cannot be turned on or off until the override is ended.
	Auxiliary	Not Present	The module containing the auxiliary is not present on the LAN.

The status of **areas** and **zone areas** is displayed using different colours.

Areas		Zone Areas	
Edit Mode	Assigned	Assigned	
	Unassigned	Unassigned	
Surveillance Mode	Panel Offline	Panel Offline	
	Subscription Error	Subscription Error	
	On	Sealed	
	Off	In Alarm	(fast flash)
	Alarm	In Tamper	(fast flash)
	Tamper	Had Alarm/Tamper	(slow flash)



Tip

By default, Insight uses a slightly translucent colour when drawing shapes. If your computer performs sluggishly you can disable this behaviour. From the Edit menu choose "Preferences...", click the General tab, then select the "shapes are solid" radio button.

Adding Cameras

You can drag a DVR camera onto your map.

To add a camera to a map:

1. Locate the camera in the Insight Toolbar by expanding the associated DVR.
2. Drag and drop the camera onto your floor plan.

Once a camera is placed on a map, you can view live video from the camera in schematic.

To view live video from a camera in schematic:

1. Switch to surveillance mode
2. Right-click the camera and choose "Show Video" in the menu that appears.



Tip

If the camera is a PTZ-enabled model, a PTZ toolbar will be incorporated into the video window.



Note

You can only view live video in schematic. To view historical footage, you must use Insight Review. See page 109.

Adding Camera Presets


You can drag camera presets for PTZ cameras onto your map.

To add a PTZ camera preset to your map:

1. Locate the PTZ camera preset in the Insight Toolbar by expanding the associated camera.
2. Drag and drop the preset onto your map. A link is shown to the associated camera.

To activate a preset on your map:

1. Double-click the preset. The PTZ camera will adjust its pan, tilt, zoom and iris to match the preset.

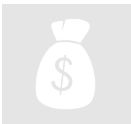


Paid Feature

Adding cameras and camera presets requires a DVR integration license. Contact your Inner Range distributor for more information.

Creating Drill-Downs

With drill downs, you can create maps that link to other maps. For example, a site diagram could have clickable buildings that open more detailed interior schematics, or clicking a stairwell could jump to the next floor in an office building. You can create drill-downs quickly and easily in Insight Schematic.

To create a drill-down:

1. Ensure you are in Edit Mode (select “Edit Mode” from the File menu).
2. If you will be drilling to a different map, ensure that the map has already been imported into Schematic.
3. Select the Map Link tool ()
4. Trace the outline of your drill-down by clicking on the map. The shape you draw will be the shape that triggers the drill-down. Hold the CTRL key down if you wish to draw angled lines.
5. To finish the shape, either double-click the mouse button, or click on the first point of the shape.
6. Right-click the new shape, and choose “Target...” from the menu that appears. The mouse cursor changes to “link”.
7. If you are drilling to a different map, click the map in the Insight Toolbar.
8. Click the map where you want to drill to. The cursor changes back to a regular arrow.



Tip

In Surveillance Mode, you can follow a drill-down by clicking twice. In Edit Mode, you can follow a drill-down by right-clicking and choosing “Follow Link” in the menu that appears.

Working In Surveillance Mode

Insight Schematic starts monitoring the status of all surveillance items when you activate Surveillance Mode.

To activate surveillance mode:

1. Select “Surveillance Mode” from the File menu.

In a few moments, the state of all surveillance items is updated. site or buildings.



Note

Insight Schematic cannot monitor the status of panels that are not connected. Schematic places a cross over all *point* surveillance items that belong to offline panels, and draws all *area* surveillance items a dim grey colour.

Alarm Processing

Schematic has a simple alarm reporting and clearing mechanism. Items that go into an alarm or tamper state flash and change colour.

- ❖ Point surveillance items go red for alarm and orange for tamper; in addition, the text “in alarm” flashes while the alarm is active, and “had alarm” if the alarm condition has passed.
- ❖ Area surveillance items go red when in alarm, and orange when in tamper; in addition, the flashing speed halves when the alarm condition has passed.

Alarms will continue to flash, even after the condition that caused the alarm ends. You must clear alarms from Insight Schematic manually.

To clear alarms:

1. Right click the item that is in alarm and choose “Clear” from the menu that appears.

The alarm is cleared.



Note

If Schematic is open on more than one workstation then the alarms must be cleared on each workstation.



Note

Clearing alarms in Insight Schematic does not acknowledge the alarms at the panel. You must still acknowledge alarms from a Terminal.



Note

Insight Schematic alarms are not related to advanced alarm management in Insight Review. Clearing alarms in Insight Schematic does not acknowledge alarms in Insight Review.



Note

Insight Schematic must be running when Area alarm events occur, or they will not appear in Schematic. All other alarm events will be displayed even if they occurred before Insight Schematic was opened, provided the alarms are still active.




Insight Server Tool

The Insight Server Tool lets you perform advanced server tasks.

Use the Insight Server Tool to:

- Manually start or stop Insight Server
- See who is connected to Insight Server
- Disconnect clients who are connected
- Configure your modem pool

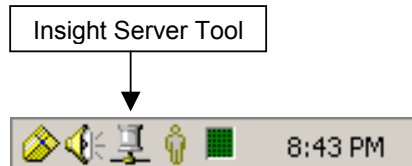

Starting and Stopping Insight Server

Insight Server normally starts automatically. **Insight Lite** starts its own internal server when the operator logs on. **Insight Professional** starts the server as soon as Windows has loaded (but before anyone has logged in).



Insight Server is running and accepting client connections.

Insight Server is running, but no connections will be accepted.

Insight Server is stopped. The server will start again if an operator tries to log on.

To stop Insight Server:

1. Right click the Insight Server Tool and choose “Stop Database” in the menu that appears.



Note

Stopping the server can take up to one minute.



Warning

If you stop Insight Server, all operators will be forcibly disconnected. All panels will also be disconnected, and review and alarms will not be received until the panels are reconnected.

To start Insight Server:

1. Right-click the Insight Server Tool and choose “Start Database” in the menu that appears.



Note

Starting the server can take up to one minute.



Note


To start the Insight Professional server, the red lamp must be illuminating on the hardware lock, which must be plugged into a USB port on the server computer.

Viewing Client Connections

You can see which operators are connected to Insight Server. You can also block connections, so operators can no longer log on.

To view client connections:

1. Right-click the Insight Server Tool, and choose “Client Connections...” in the menu that appears.

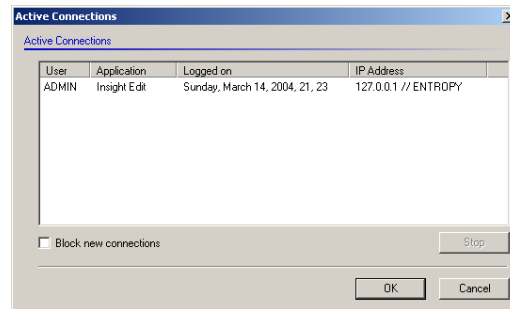

To disconnect an operator:

1. Right-click the Insight Server Tool, and choose “Client Connections...” in the menu that appears.
2. Select the session that you wish to disconnect.
3. Click Stop.
4. In the Module Shutdown window, enter a message that will be displayed on the Operator’s workstation and also specify how long the message will appear before the session is terminated.
5. Click OK.

To block new connections:

1. Right-click the Insight Server Tool, and choose “Client Connections...” in the menu that appears.
2. Tick the “Block new connections” checkbox.

New connections will not be accepted. Note that sessions that have already been established are not affected.

Configuring Your Modem Pool

You can choose which modems on the server computer are available for incoming and outgoing Insight connections. See Modem Blocking on page 29.




Insight Photo ID


Insight Photo ID lets you design and print employee identification tags and badges.

Use Insight Photo ID to:

- Design one or more ID badge layouts for your organization
- Print employee ID badges

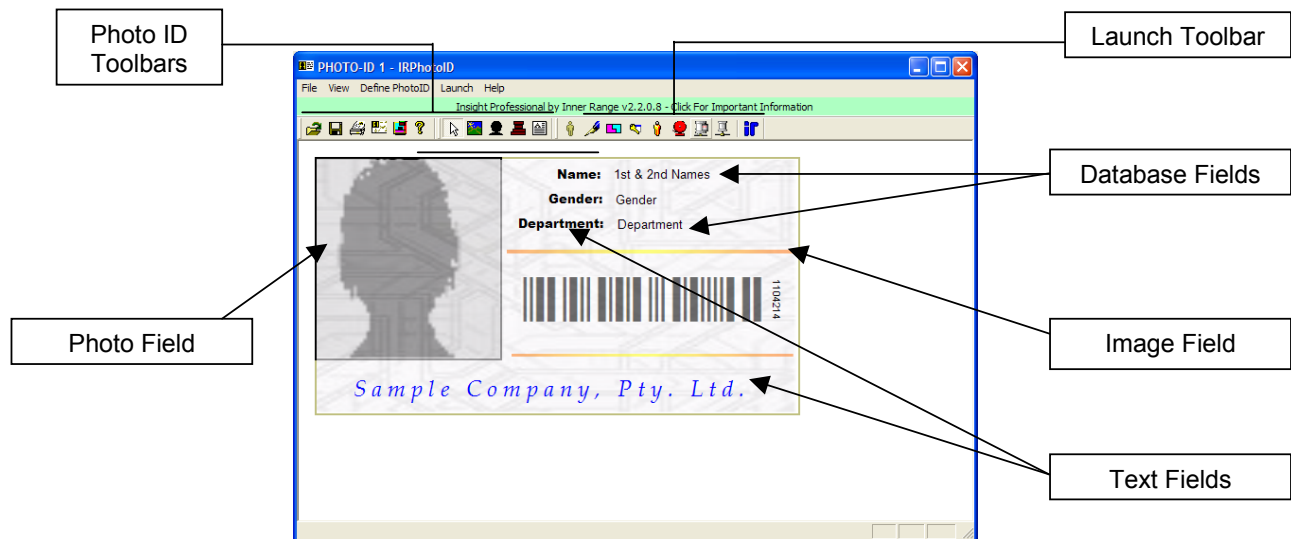



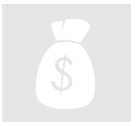








- The **Photo ID Toolbars** let you quickly customise and print ID badges.
- The **field** elements define how your ID badge looks and prints.



Paid Feature

Photo ID is a separately licensed add-on to Insight Professional.

Using the Photo ID Toolbar

-  Open the **template management** window.
-  **Save** the current card template.
-  **Print** one or more ID badges based on the current template.
-  Open the **template properties** window.
-  Open the **field management** window.
-  Open the **about** window.
-  **Selection** tool.
-  Add an **image field**.
-  Add a **photograph field**.
-  Add a **database field**.
-  Add a **text field**.

Underlying Concepts


Printing ID badges is a two step process. First, you must design a *card template*. The card template lets you choose how the ID badge will look, including any graphics and text that will appear on the card, and what fonts and colours will be used. You can create as many different card templates as you like, each with a different layout.


Once a template has been created, it can be used to print a batch of ID cards. To print cards, you first select the users who will be issued with badges, then issue the print command.

Working With Card Templates

With Insight Photo ID you can add, remove and modify card templates. A card template stores the layout of an ID card including any text, images or watermarks that appear on the card.

To create a new a card template:


1. Choose “Open...” from the File menu, or press CTRL+O, or press the Open button on the Photo ID toolbar ().
2. Click the “Add New” button.
3. Specify a name for the template, and specify the size of the card.
4. Edit and save the template.

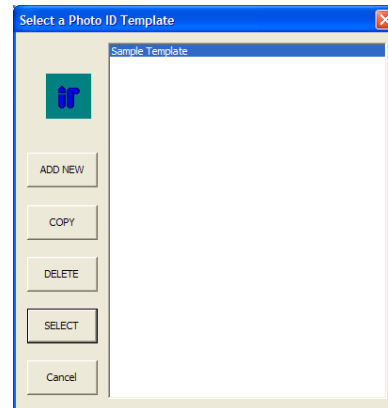

Tip

To create a new template based on an existing card layout, select the existing template and click “Copy” instead of “Add New”.

To delete a card template:

1. Choose “Open...” from the File menu, or press CTRL+O, or press the Open button on the Photo ID toolbar ().
2. Select the template you wish to delete.
3. Click “Delete”.


Warning

Deleting a template is permanent. You cannot restore a deleted template.



Tip

Deleting a template does not delete the employees that are using that ID badge.

To modify an existing template:

1. Choose “Open...” from the File menu, or press CTRL+O, or press the Open button on the Photo ID toolbar ().
2. Select the template you wish to modify.
3. Click “Select”. You can now modify the template.

To print ID badges based on a template:

1. Choose “Open...” from the File menu, or press CTRL+O, or press the Open button () on the Photo ID toolbar.
2. Select the template you wish to modify.
3. Click “Select”.
4. Choose “Print Cards” from the File menu, or press the Print button () on the Photo ID toolbar.
5. Select the employees you want to print.
6. Click the print button.




Tip

To select a range of adjacent employees, click the first employee, hold down the shift key, then click the second employee. To select non-adjacent employees, hold down the Ctrl key, then click the employees you want.

Designing Card Templates

Card templates are made up of text, images, database fields and user photographs. **Text** and **images** are the same on every card in a batch. They form the “layout” of the card. **Database fields** and **photographs** are different for each employee. They form the “information” on the card.

To add text to a template:

1. Select the template you want to work with, or create a new template.
2. Click the “Add Text Field” button in the toolbar ()
3. Click and drag the mouse in a rectangle shape where you want the text to appear.
4. In the window that appears, enter the text that you want to place on your card.
5. Click the “Font” button, and specify a font (typeface), size and colour for the text.
6. Specify any other attributes for your text, such as alignment and orientation.
7. Click OK. When cards are printed, the text you entered will appear on every card.

 


Note

You must specify a font every time you add text to a card.



Tip

If the text is “chopped off”, then you need to increase the size of the text rectangle. With the selection tool () click the text on your card layout and drag the selection handles to make the rectangle bigger.



Tip


 
To change the text, font or colour, double click the text with the selection tool ()



Tip

To create vertical text, tick the “Rotate text 90?” box in the text properties window.

To add images to a template:

1. Select the template you want to work with, or create a new template.
2. Click the “Add Image Field” button in the toolbar .
3. Click and drag the mouse in a rectangle shape where you want the image to appear. You can resize the image later if you want.
4. In the window that appears, click the browse button () and navigate to the image.
5. Click OK. When cards are printed, the image you placed will appear on every card.



Tip


To change the size of an image, click on it once, then drag one of the selection handles that appear around the image.



Tip

To rotate an image, tick the “Rotate Image 90?” box in the image properties window.

To add database fields to a template:

1. Select the template you want to work with, or create a new template.
2. Click the “Add Database Field” button in the toolbar .
3. Click and drag the mouse in a rectangle shape where you want the text to appear.
4. In the window that appears, choose the database field that you want.
5. Click the “Font” button, and specify a font (typeface), size and colour for the text.
6. Specify any other attributes for your text, such as alignment and orientation.
7. Click OK. When cards are printed, the information for each employee will replace the field.



Note

You must specify a font every time you add a database field to a card.



Tip

To change the font or colour, double click the database field with the selection tool .



Tip


To create vertical text, tick the “Rotate text 90?” box in the text properties window.



Tip

To place a barcode on your ID card, use a barcode font such as “3of9.ttf”. Remember that barcode readers expect an asterisk as the first and last character in a barcode.

To add employee photographs to a template:

1. Select the template you want to work with, or create a new template.
2. Click the “Add Photograph Field” button in the toolbar .
3. Click and drag the mouse in a rectangle shape where you want the photograph to

- appear. You can resize the photograph later if you want.
4. If you want a border around the image, tick the “border around photograph” box.
 5. If you want to rotate the photograph 90 degrees clockwise, tick the “rotate photograph 90” box.
 6. Click OK. When the card is printed, the employee photograph will appear on the card.




Note

You must assign a photograph to an employee with Insight Edit before it will print on their ID card. See page 46.




Tip

To quickly add text, images or database fields to a card layout, select “Manage Fields” from the Define Photo ID menu, or click the field management button () in the toolbar.

Editing Card Templates

You can make changes to existing card templates with Insight Photo ID.

To move text, images, database fields or photos:

1. Select the template you want to work with, or create a new template.
2. Make sure the selection tool () is selected by clicking it in the toolbar.
3. Click the text, field or image you wish to move. Selection handles appear on the item.
4. Click the item again and drag it to a new location.



Tip

 
If you can't select an item because it is 'underneath' another item, then move the top item out of the way, or right click the top item and choose “make last” in the menu that appears.




Tip

You can make fine adjustments to the location of an item by tapping the arrow keys on your keyboard while the item is selected.

To resize text, images, database fields or photos:

1. Select the template you want to work with, or create a new template.
2. Make sure the selection tool () is selected by clicking it in the toolbar.
3. Click the text, field or image you wish to resize. Selection handles appear around the item.
4. Click one of the selection handles and drag it to a new location.

To edit the properties of an item:

1. Select the template you want to work with, or create a new template.
2. Make sure the selection tool () is selected by clicking it in the toolbar.
3. Double-click the text field or image you wish to edit.


(This page has been intentionally left blank.)

Insight DVR Integration


Insight DVR Integration allows operators to control Digital Video Recorders and cameras within Insight, including the ability to view live and historical video feeds.

Use Insight DVR Integration to:

- Attach DVRs and cameras to Insight
- View live and historical video feeds directly in the Insight workspace
- Remotely control PTZ cameras
- Access recorded video information based on review events
- Switch cameras and video feeds based on custom real-time triggers

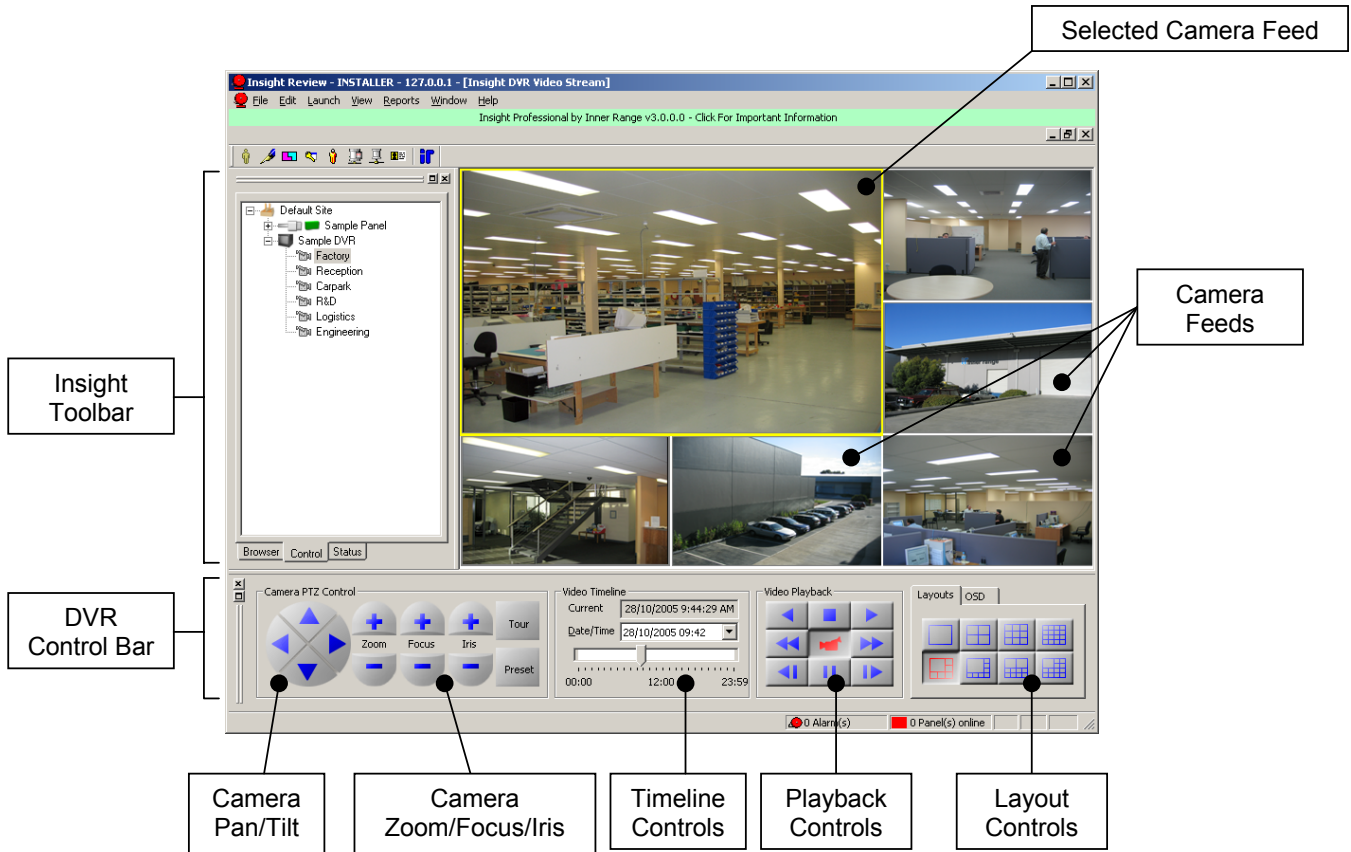

- The **Insight Toolbar** lets you open video feeds and send control commands
- The **camera pan/tilt** and **zoom/focus/iris** controls let you control PTZ cameras
- The **timeline controls** let you locate previously recorded footage
- The **playback controls** let you switch between live view and recorded playback modes
- The **layout controls** let you arrange your video feeds and OSD (on-screen display)

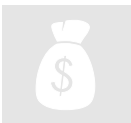

Paid Feature

Insight DVR integration must be licensed separately. Insight DVR integration requires Insight Professional.

About Insight DVR Integration

Insight provides true integration with a range of Digital Video Recorders. You can choose to view live and recorded camera images directly within Insight. You can control PTZ cameras including pan, tilt, zoom and iris. You can also issue commands directly to cameras and DVRs.

To add a DVR (quick guide):

1. Check the list of supported DVRs on the Inner Range web page to make sure your model is supported.
2. Set up the DVR and cameras according to the documentation that came with your DVR.
3. Enrol the DVR into Insight (page 106).
4. If you are using Insight Schematic, you can drag cameras and camera presets onto your building floor plans (page 94).
5. If you are using Insight to manage alarms, you can customise your alarm responses to display camera footage (page 71).
6. If you are using a dedicated monitor or hardware multiplexer, you can use Insight to remotely control the DVR whilst watching video feeds on your monitor (page 111).
7. You can view video feeds and remotely control cameras directly in Insight (page 107).

Enrolling A New DVR

You must enrol a new DVR into Insight before you can control cameras or view video feeds.

To enrol a new DVR:

1. Start any Insight module that uses the Insight Toolbar (Edit, Review or Schematic).
2. In the Insight Toolbar, make sure the Browser tab is selected.
3. Decide which site you want to attach the DVR to, or create a new site if necessary. (The decision of which site is unimportant, since it has no affect on DVR integration.)
4. Right click the site that will contain the DVR, and choose "New Digital Video Recorder..." in the menu that appears. (Note: requires a license.) The DVR wizard appears.
5. Follow the on-screen prompts. The enrolment procedure varies slightly between brands and models. This is because there is no industry standard governing DVR design and manufacture. You will probably need to refer to the documentation that came with your DVR.

Note: the **MCI interface** is the interface used to issue commands to the DVR. The **video streaming interface** is the interface used to view camera feeds in Insight. You can choose not to configure the video streaming interface, but the MCI interface is necessary to interface with the DVR.

6. On the Cameras page, specify the type and number of cameras connected to the DVR. (For some models, this is populated automatically.)
 - The **name** can be any name that meaningfully identifies the camera.
 - To set the **camera type**, click the entry twice.
 - The **camera number** should match the camera number assigned by the DVR software.
 - The **area** can be assigned to an area in a panel. Right-clicking a review event in Insight Review that contains the area allows you to jump directly to live footage from this camera.

To un-enrol a DVR:

1. Start any Insight module that uses the Insight Toolbar (Edit, Review or Schematic).
2. In the Insight Toolbar, make sure the Browser tab is selected.

3. Right click the DVR, and choose “Delete” in the menu that appears.

To edit DVR settings including configured cameras:

1. Start any Insight module that uses the Insight Toolbar (Edit, Review or Schematic).
2. In the Insight Toolbar, make sure the Browser tab is selected.
3. Right click the DVR, and choose “Properties...” in the menu that appears.



Note

If you add, remove or reassign cameras with your DVR software, you must update the DVR properties in Insight.


Working With Video Windows

To see camera footage, you have to open a **video window** (also called a **software video multiplexer**). When video windows are created, they show the footage from one camera (either live or historical). You can change the **layout** of a video window to show more than one camera. Regardless of how many cameras are being displayed, the **time line** of the video window is always **synchronised**. This means that the view from each camera will always show images from the same time period. If you rewind to a particular date and time, then the video window will show what each camera recorded at that time. If you switch to live footage, then each camera in the video window will show live footage.

You can open multiple video windows. Each video window can have multiple cameras. Each video window has its own time line, so you can (for example) show live camera feeds in one window and historical feeds (of the same or different cameras) in another window.

To open a new video window:

1. In Insight Review, select the Control tab of the Insight Toolbar.
2. Right click a video camera in the tree, and choose “Show Video” in the menu that appears.

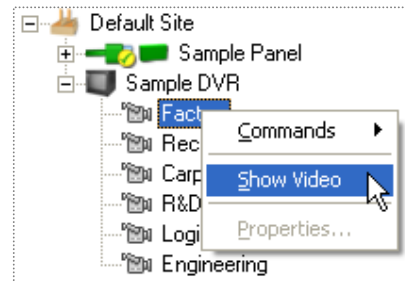

A new video window is opened.



Tip

You can add additional cameras to the window. See **working with layouts** on page 110.



Tip


You can switch to a different camera without creating a new video window. Simply drag the new camera from the Insight Toolbar and drop it onto the video window.

To assign cameras to a video window:

1. Click the video window you want to add cameras to, and make sure the layout contains the number of cameras you want to add (page 110).
2. In the Insight Toolbar, make sure the Control tab is selected.
3. Drag cameras from the Insight Toolbar and drop them onto the appropriate panels in the video window. Video feeds are added and synchronised to the time line of the video window.

Working With The DVR Control Bar


The DVR Control Bar lets you manage your cameras. You can switch between live and archival footage, change the time code of the video window and change the number of cameras displayed. For PTZ cameras you can pan, tilt, zoom, iris and focus the camera by remote control or activate a camera preset.

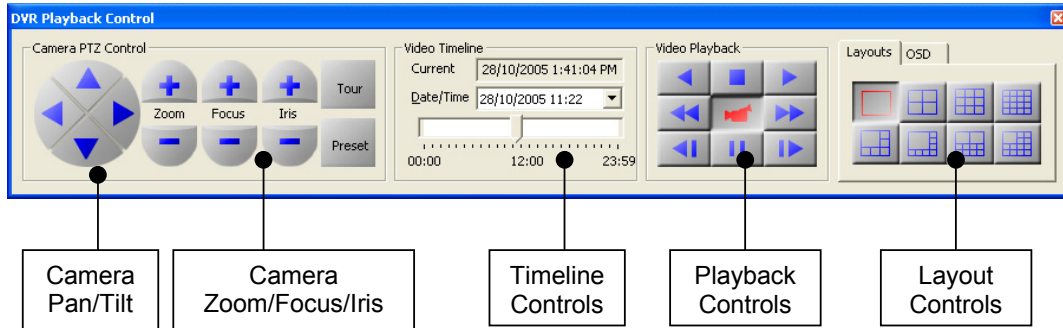






Controlling PTZ Cameras

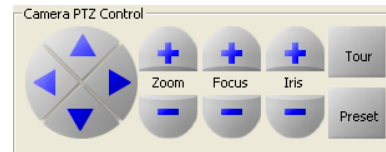You can remotely control compatible PTZ cameras from the DVR Control Bar.



To control a PTZ camera:



1. In the video window, click the camera you want to control. The selected camera is enclosed by a yellow rectangle.
2. Make sure the DVR Control Bar is visible (View→DVR Control Bar)
3. Make sure the video window is in live video mode (click )
4. To **pan** the camera, click the left and right arrow controls ( and .
5. To **tilt** the camera, click the up and down arrow controls ( and .
6. To **zoom** the camera, click the **zoom +** and **zoom –** buttons.
7. To **focus** the camera, click the **focus +** and **focus –** buttons.
8. To adjust the **iris** of the camera, click the **iris +** and **iris –** buttons.

Some PTZ cameras support a “tour” mode, where the camera automatically tracks over a preset path.

To put a PTZ camera into tour mode:

1. Click the video window containing the camera you want to control.
2. Make sure the DVR Control Bar is visible (View→DVR Control Bar)
3. Make sure the video window is in live video mode (click )
4. Click the tour button (). The camera enters tour mode.


 
Tip

To exit tour mode, click the tour button a second time, or click one of the pan/tilt/zoom/focus/iris buttons.

Some cameras can be programmed with presets. Activating a preset sets the zoom, focus, iris, tilt and zoom to a known position. Use your DVR software to program your camera presets.

To activate a PTZ camera preset:

1. Click the video window containing the camera you want to control.
2. Make sure the DVR Control Bar is visible (View→DVR Control Bar)

3. Make sure the video window is in live video mode (click )
4. Click the preset button () . The preset controls appear.
5. Enter the preset number you wish to activate.
6. Click Go. The camera moves to the selected preset.




Tip

You can also activate camera presets in Insight Schematic. See page 94.


Working With The Video Timeline

Each video window maintains a video timeline. The timeline applies to all cameras in the window. For example, if you add 5 cameras to a video window, then set the time line to March 15 at 10am, then each camera will show archival footage from March 15 at 10am.

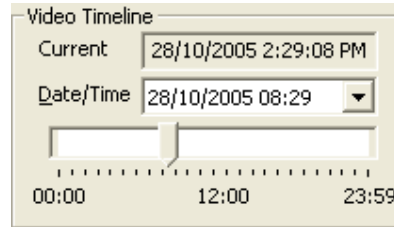

The time line is ignored if the video window is showing live footage.

To view live footage:

1. Click the video window containing the cameras you want to switch to live feed.
2. Make sure the DVR Control Bar is visible (View→DVR Control Bar)
3. Click the live video button ()

The live video button turns red, indicating you are watching live video.




Tip

This only applies to cameras in the active video window. Other video windows are unaffected.

To view archival footage:

1. Click the video window containing the cameras you want to see archival footage for.
2. Make sure the DVR Control Bar is visible (View→DVR Control Bar)
3. In the Video Timeline box, enter the date and time in the Date/Time box, or click the calendar button and select a date, then drag the slider control to set the time.

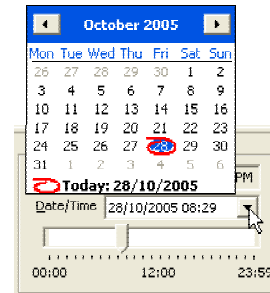

The live video button turns blue, indicating you are watching archival video.


To set the time code to a review event:

1. Make sure the video window containing the cameras you want to see is open. If necessary, create a new video window and assign cameras to it.
2. Open the review window containing the review message. Make sure the video window isn't completely obscured by the review window.
3. Drag the review event and drop it onto the video window. The time code is changed to match the date and time of the review event.

To control playback of archival footage:

1. Enter playback mode (see “to view archival footage”, above).
2. Use the video playback controls described below.

- ▶ Play forward (normal speed)
- ◀ Play backwards (normal speed)
- Freeze current frame
- ▶▶ Play forward (high speed)
- ◀◀ Play backwards (high speed)
- ▶| Advance forward one frame
- ◀| Advance backwards one frame
- || Freeze current frame

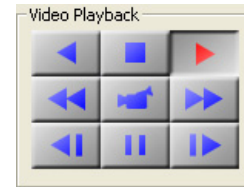


Working With Layouts

You can show up to sixteen cameras in a single video window. Each camera is synchronised with the time controls for the video window.

To change the layout of a video window:

1. Click the video window you want to change.
2. Make sure the DVR Control Bar is visible (View→DVR Control Bar)
3. Make sure the Layouts tab is selected.
4. Click a new layout.
5. Drag cameras from the Insight Toolbar onto the new layout.

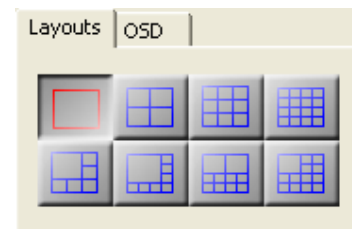


Note

If you switch to a layout with fewer cameras than the current layout then Insight will discard any leftover cameras. You can always add the cameras again by dragging them from the Insight Toolbar and dropping them on the layout.

Insight can superimpose an On-Screen Display (OSD) for each camera in a video window. The OSD shows the name of the camera.

To activate the OSD for a video window:

1. Click the video window you want to change.
2. Make sure the DVR Control Bar is visible (View→DVR Control Bar)
3. Make sure the OSD tab is selected.
4. Tick or clear the Show Camera Name box.

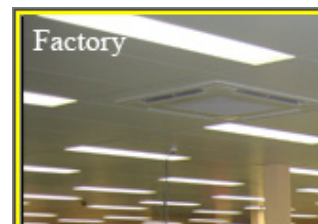

Tip

Turning on the OSD effects all cameras in the current video window.

Sending Commands To A DVR Or Camera

You can send a model-specific command to a DVR or camera. Right-click the DVR or camera, and choose “Commands” in the menu that appears.



Note

The commands available will be specific to the make and model of your DVR and/or camera. Consult the documentation that came with your equipment for more information.

Integration With Review

You can set the time code of a video window to the time and date of a review event. In other words, if a particular review entry occurs on February 28 at 3pm, you can quickly see camera footage from this date and time. See page 109.

You can associate cameras with areas. Right-clicking on a review event that contains the area enables you to see live video from the associated camera.

Integration With Schematic

You can place cameras and camera presets directly onto your floor plans in Insight Schematic. See page 94.

(This page has been intentionally left blank.)

Appendix A: Comms Task Configuration

Insight communicates with panels via an Insight comms task. This comms task must be CT001 in the panel.

To configure the Insight comms task:

1. Using an elite terminal, log in with the Installer PIN and go to menu 7-3-1 (comms tasks).
2. If your panel is using factory settings (or the panel has been defaulted) then CT001 will be set to Insight. In this case, you will only need to adjust the settings in **red**.
3. Press help > 9, and change the panel ID to a unique, non-zero value. The first two digits should be 00. The value you enter here must match the number assigned in the Insight front-end software (see pages 20 and 30).
4. Leave all other settings on their defaults, which are listed below:

Panel ID = 00xxxxx¹ (*)

Port: 1

Baud: 9600 (*)

Opts NUIP =nnn

Ethernet =ACE

For direct serial connections: if you are using a DTR/DSR comms cable, you can set opts to nYnn. This stops phantom mouse detection on older PC's. Most cables do not have DTR/DSR connected, and will not work with this option.

For Ethernet UART only. If you don't intend to use an Ethernet UART, set these flags to nnn.

RS232 =ACE

FE3000 =ACE

Ext. Mod =nnn²

Int. Mod =nnn

Insight IP: *see below*

Insight Key1: 0

Insight Key2: 0

IPFast IP: 0.0.0.0

IPFast Key1: 0

IPFast Key2: 0

Panel IP: *see below*

Router IP: *see below*

Subnet Msk: *see below*

CT001 Announce Port: 17185

Max Attempts: 0

If you don't intend to use this connection type, set these flags to nnn.

If you are using the internal modem, set these flags toACE and configure an I-modem task.

To secure your installation, set these to random values. They must match the settings on page 21.

(*) Insight requires these settings to enrol the panel. Note them down.

Insight IP is the static IP address of the Insight Server computer. If you aren't using the Ethernet or FE3000 connection paths, leave this as zero.

Panel IP is the static IP address of the panel. If you aren't using the Ethernet or FE3000 connection paths, or if you want the panel to obtain an IP address from a DHCP server, leave this as zero.

Router IP is the static IP address of the local router or gateway. If you aren't using the Ethernet or FE3000 connection paths, leave this as zero.

Subnet Mask is the TCP/IP subnet mask for the local network. If you aren't using the Ethernet or FE3000 connection paths, leave this as zero.

¹ Pick a random or sequential number for each panel. The number must be unique for all panels in your Insight installation.

² The current Control Module firmware doesn't support an external modem connection with Insight. This will be added in a future release.

5. Make CT001 idle then active.

To configure the I-modem comms task:

1. Change **CT002** from active to idle
2. Change CT002 to I-modem
3. Press help > 9, and make sure the following settings are selected:

Rings to answer = 15

Ans. Options = nnnnnn..

Line Test Time = 0

Insight # = None

IPFast # = None

ISP Acct =

ISP Passwd =

Dial = nnnnnnnn

PABX No. = None

Back No. = None

Cust No. = None

Seize Aux =

Single DTMF Tone =

Line Test Count = 0

For timed fax bypass, set these options to nnnYnnn..

If you want the panel to dial Insight when there is an alarm, set this to the phone number of the Insight Server computer.

4. Make CT002 active.
5. In CT001, make sure Int. Mod =ACE and restart CT001.

