

Haier

AFL631

CFE633

CFE629



Congelador
Manual de Instrucciones

Thanks for purchasing a Haier Product

Please read these instructions carefully before using this appliance. The instructions contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance.


Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the appliance.

If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and safety warnings.

Accessories

Check the accessories and literature in accordance with this list:

1x User Manual

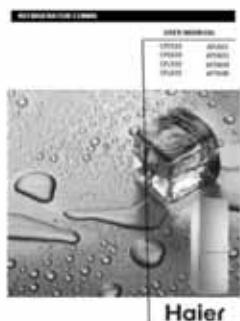

Cautions.....	3
Before Use	7
Functions	11
Maintenance	19
Trouble-Shooting.....	22
After-Sale Service	24

Legend



Yes



No



Attention



Caution

Disposal

The presence of this symbol on the product, accessories or materials that goes with this information indicates that at the end of its useful life the product or its electronic accessories (ex. charger, headset, USB cable) should be disposed with other household waste.

To prevent possible damage to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them. This will promote the sustainable reuse of material resources.



Household users should contact either the retailer where they purchased the product or the relevant local authorities to find out how they can take this item for environmentally safe recycling and safe.


Business users should contact their supplier and check the conditions of the purchase. This product and its electronic accessories should be mixed with other commercial waste.



Before using the appliance for the first time

Things to do...


- ✓ Make sure that the plug is not trapped under the refrigerator.
- ✓ Take care not to roll over the power cord or damage it when moving the refrigerator away from the wall.
- ✓ Take care that the plug isn't damaged, in the contrary case, unplug it and consult and authorized service agent for replacement.
- ✓ Make sure that there is no coal gas or other inflammable gas leaking in the vicinity of the refrigerator. In the case of happening turn off the valve of leaking gas; open doors and windows but do not plug or unplug the power cords of the refrigerator or any other appliance.
- ✓ Unplug the refrigerator for cleaning or maintenance or because of lamp replacement.
- ✓ When unplugging the refrigerator allow at least 5 minutes before restarting, as frequent starting be damage the compressor.
- ✓ Leave the ventilation openings free of obstruction.

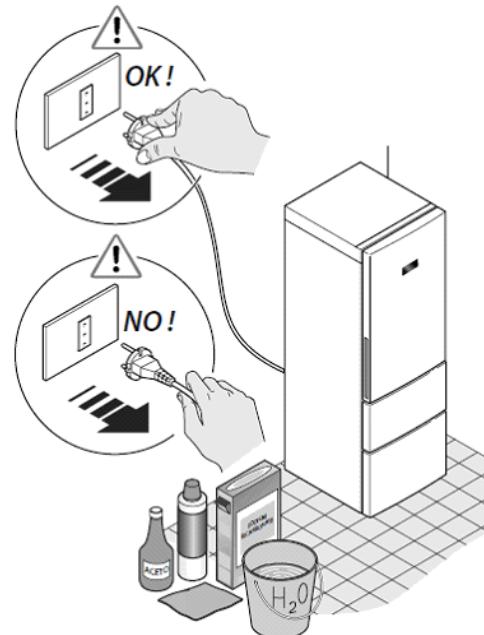

Things not to do...

- ✗ Plug the refrigerator to abnormal voltage, fluctuation may cause the refrigerator to fail to start, or damage to the temperature control or the compressor or there may be abnormal noise when the compressor is operating. In such a case, an automatic regulator should be mounted.
- ✗ A dedicate socket with reliable grounding must be provided for the refrigerator. The refrigerator's power cable is fitted with 3-cord (grounding) plug that fits a standard 3-cord (grounded) socket. Never cut off or dismount the third pin (grounding). After the refrigerator is installed, the plug should be accessible.
- ✗ Never store inflammables, explosives or corrosive materials in the refrigerator.
- ✗ Do not store medicines, bacteria or chemical agents in the refrigerator. This refrigerator is a household appliance. It is not recommended to place materials that require strict temperatures.

- ✖ Do not store or use gasoline or other inflammable materials in the vicinity of the refrigerator to avoid a fire.
- ✖ Do not place unstable articles (heavy objects , containers filled with water) on the top of the refrigerator, to avoid personal injury caused by falling or electric shock caused by contact with water.
- ✖ Do not swing from the bottle racks on the door. The door may be pulled slant, the bottle rack, may be pulled away, or the refrigerator may topple.
- Do not step on the freezer storage compartment door or cabinet when putting in or taking out food.
- ✖ Do not touch the inside surface of the freezer storage compartment when in operation, especially with wet hands as your hands may freeze onto the surface.
- ✖ To ensure the refrigerator's electrical insulation, do not spray or flush the refrigerator when cleaning, nor place the refrigerator in a damp area or a location where it may be splashed with water.
- ✖ Disassembly and alteration of the refrigerator must be authorized. Any agitated movement of the refrigerator may damage the cooling pipes. Property loss or personal injury may result. Repair of the refrigerator must be performed by professional personnel.
- ✖ Never store bottled beer or beverages in the freezer, as these will burst during freezing.
- ✖ Do not place the refrigerator under the direct sunlight or in a place where it is exposed to heat from stoves, heaters or other appliances
- ✖ Do not leave refrigerator's doors open without the presence of an adult and not let children get in the refrigerator.
- ✖ Do not let infants or children to climb into the freezer drawer
- ✖ Do not use electrical appliances inside the refrigerator, unless you are the type recommended by the manufacturer.
- ✖ Do not use a hair dryer to dry the inside of the refrigerator. Do not place lighted candles in the refrigerator to remove odors.
- ✖ Do not spray volatile materials such as insecticide on the surface of the appliance.

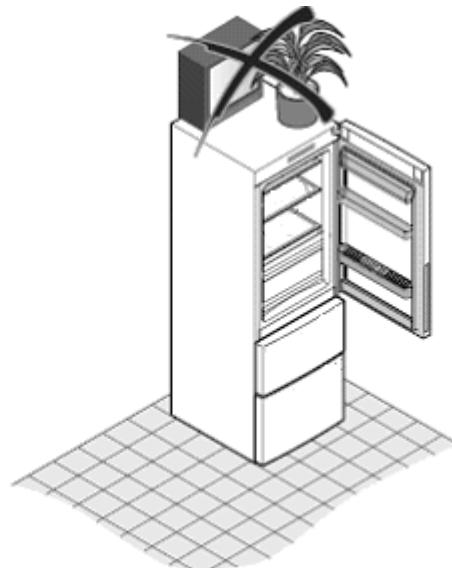

Regarding the fridge storage

- !
 - Hot foods must be cooled to room temperature before storing in the refrigerator.
 - Clean the food and dry any droplets on it before placing in the refrigerator.
 - Food to be stored should be properly sealed. This will prevent moisture in the food from evaporating and prevent them from spoiling.
 - Sorted storage of food. Food to be stored should be sorted according to their category. Food consumed daily should be placed on the front part of the shelves. This can avoid unnecessary delays in door opening as well as expiration of the storage period because you forgot to eat it.
 - Do not store excess quantities of food. Food should be stored with spaces in between them. This allows cold air to flow smoothly and therefore obtain better storage results.
 - Do not place the food too near to the inner walls. Do not store foods with high moisture content clinging to the inner walls. Otherwise they may freeze to the walls. Place food a little away from the inner walls.



- !
 - Avoiding food (especially oil food) contact with the inner liner directly, as oil can erode the inner liner. So it's better to clean the oily dirt whenever it is found.
 - For turnip radish and other similar vegetables, please cut off their leaves before storage so as to prevent the nutrition from being absorbed by the leaves.
 - Defreeze frozen food in the fridge storage compartment. In this way you can use the frozen food to decrease the temperature in the compartment and save energy.
 - Some vegetables, for example, onion, garlic, ginger, water chestnut, and other rhizomatic foods, can be stored for long periods at normal temperature. There is no need to store them in the refrigerator.
 - The metabolism of vegetable marrow, melons, pawpaw, banana, pineapple can be quickened in the refrigerator, so it is not suitable to store them in the fridge storage compartment. But storing green fruits in the refrigerator for certain periods can promote its maturing.
 - Hot food should not be stored in the refrigerator until it has cooled down to room temperature
 - Food cut into small portions will freeze faster and be easier to defrost and cook. The recommended weight for each portion is less than 2.5kg.

- ! It's better to pack food before putting it in the freezer. The outside of the packing must be dry to avoid bags sticking together. Packing materials should be odor-free, airtight, non-poisonous and nontoxic.
- ! In order to avoid expiration of storage period, please note the freezing date, time limit and name of the food on the packing according to the storage periods of different foods.
- ! Only take the required amount of food from the freezer. Defrosted food cannot be re-frozen unless it is first cooked; otherwise it may be less edible.
- ! Do not load excessive quantities of fresh food in the freezer. It is better to refer to the cooling capacity of the refrigerator. (See "Technical data".)


Energy Saving Tips

- ! Install the appliance in a cool, dry room with adequate ventilation.
- ! Never block any vents or grilles on the appliance.
- ! Allow warm food to cool down before placing it in the appliance.
- ! Put frozen food in the refrigerator to thaw. You can then use the low temperatures of the frozen products to cool food in the refrigerator.
- ! Do not keep the door of the appliance open for too long when putting food in or taking food out. The shorter time, for which the door is open, the less ice will form in the freezer.
- ! Clean the rear of the refrigerator regularly. Dust increases energy consumption.
- ! Do not set temperature colder than necessary.
- ! Ensure sufficient air exhaust at the refrigerator base and at the back wall of the refrigerator.
- ! Do not cover air vent openings.
- ! Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.


Description

This diagram may be slightly different from the layout of the refrigerator you have just purchased.


CFE633CWE/CFE633CSE

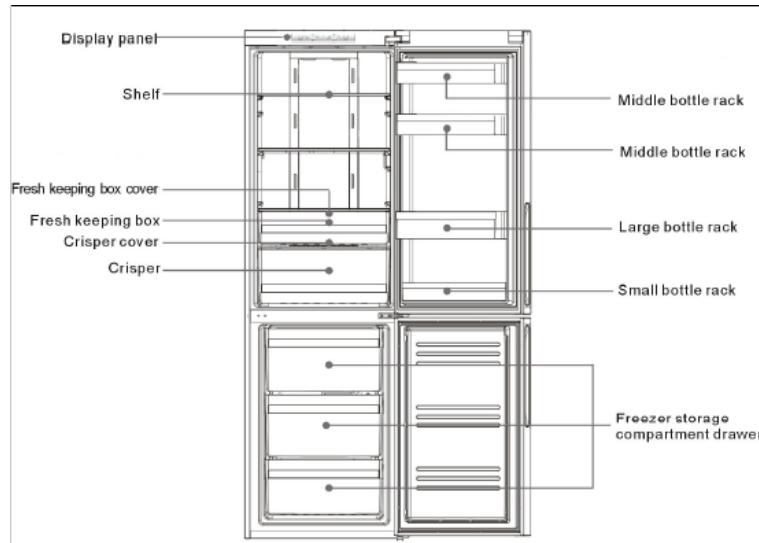


AFL631CWE/ AFL631CSE

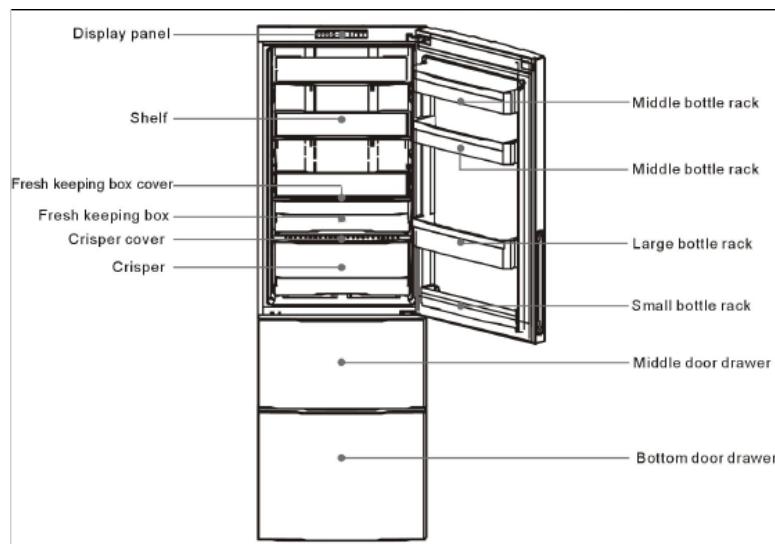

CFE629CWE/CFE629CSE

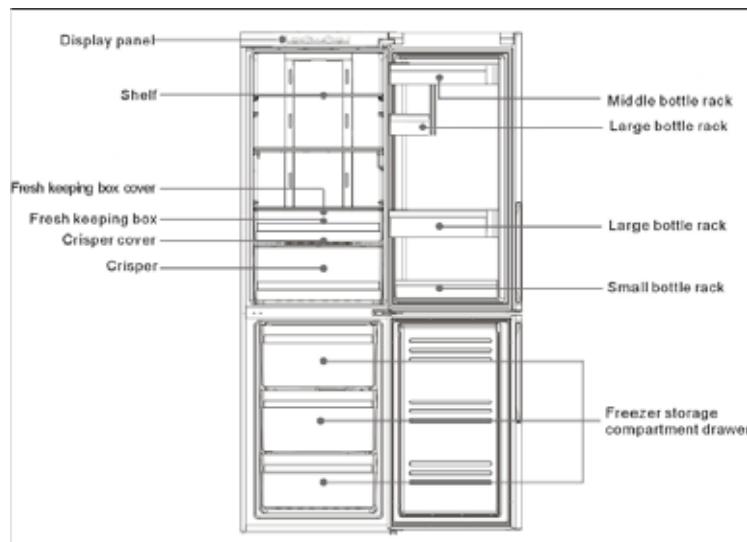

Placing Environment

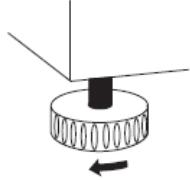- ① Leveling the cabinet. The refrigerator should be placed on a flat and solid surface. If the refrigerator is placed on a pedestal, flat strong and fire-resistant materials must be used. Never use the foam packing material as a pedestal. If the refrigerator is slightly unstable, you can prolong or shorten the adjustable foots of the refrigerator by turning them clockwise or counterclockwise.
- ② Never place the refrigerator in a damp area or location where it may be splashed with water. Clean and dry any water splashes and stains with soft cloth.
- ③ Do not store too much food in the freezer storage compartment to avoid long operation time of the compressor of falling food. It is recommended not to exceed the load line of the drawers. The total weight of the food should not exceed 30kg. To prevent the food from falling on the ground, do not pull open the freezer drawer too strong or slanted.
- ④ The refrigerator should be placed in a well-ventilated place not far from a drink water source. A space of at least 20cm. and 10cm. ,must be kept above and around the refrigerator,
- ⚠ Keep ventilation openings, in the appliance enclosure or in built-in structure, clear of obstruction.

Preparation prior to use

Remove all package parts

Please also remove the foam base and the adhesive tape fixing accessories.

Check accompanying accessories and documents

Check the items inside the package box against the Packing List. Please inquire with the purchase shop if there is any discrepancy.

Move the refrigerator into a proper location

See section "Placing Environment"

It is advisable to clean the cabinet before use

Please clean the inside and outside of the refrigerator with water before putting into any food on it.

Idle Standing

 After the appliance has been leveled and cleaned, let it remain idle for at least 6h before switching it on so as to ensure its normal running.

Connection to power supply

When the refrigerator is connected to power supply, the fridge temperature and the freezer temperature are automatically set to 5°C and -18°C respectively.


Operation modes of the refrigerator

Manual adjustment mode: can set temperature by pressing the temperature setup key (see "Function Description" hereafter)

Loading the refrigerator with food

Load the refrigerator with food after it has been operating for a period and the inside is cool enough.

Control Panel (For CFE633CWE / CFE633CSE / CFE629CWE / CFE629CSE)

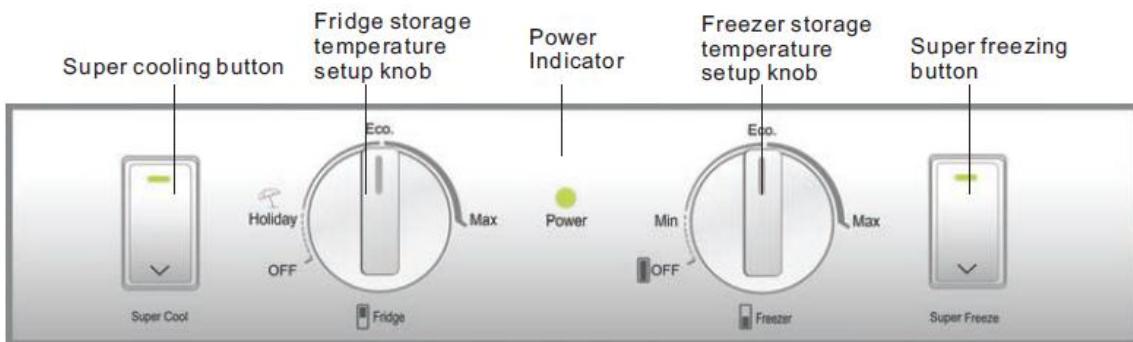

Initial powering on

Upon initial powering on, the power indicator will illuminate. There will be alarm due to high temperature in the freezer storage compartment. You can cancel the alarm by pressing any key.

Fridge storage temperature setup

The temperature in the fridge storage compartment can be set by turning the fridge storage temperature setup knob. There are three temperature positions for refrigerating: Holiday, Moderate and Super Cool.

Freezer storage temperature setup

The temperature in the freezer storage compartment can be set by turning the freezer storage temperature setup knob. There are three temperature positions for freezing: Weak, Moderate and Super Freeze.

Super cooling

Select this function after you have put fresh food in the fridger storage compartment. Press the super cooling button, the refrigerator activates this function and corresponding indicator illuminates. This function will automatically deactivate when the temperature decreases to the required level. You can also deactivate it by pressing the super cooling button again.

When the temperature in the refrigerator storage compartment is too low, the super-cooling function may not work. That is, when you press the "super-Cooling" button once, the buzzer will beep once and the indicator will not blink, meaning the temperature in the refrigerator storage compartment is too low and the super-cooling function doesn't need to be activated.

Super Freezing

Select this function before putting large amount of food in the freezer storage compartment. Press the super freezing button, the refrigerator activates this function and corresponding indicator illuminates. This function must be activated 24 hours before its need. You can also deactivate it by pressing the super freezing button again.

Holiday Function

Turning the fridge storage temperature setup knob to “Holiday” will activate the holiday function of the fridge storage compartment. It will operate at a relatively high temperature. (Please remove any fresh food from the fridge storage compartment and close the door before activating this function)

Display Control

The display screen will turn off automatically 1 minute after an operation is finished. It will be lit up by opening the door or pressing any key. (Alarm does not light up the display screen)

Door Opening Alarm

When the refrigerator door is open for more than 3 minutes, the super cooling indicator will flash and the buzzer will sound 3 beeps every 30 seconds. The buzzer can be silenced by closing the door or pressing any key.

Over Temperature Alarm

When the temperature in the freezer storage compartment rises to a certain value, the Super Freeze indicator will flash and the buzzer will sound 1 beep every second. The buzzer may be silenced when the temperature in the freezer storage compartment drops to a specified level or by pressing any key.


Turning off the Fridge Storage Compartment

Set the fridge storage temperature to OFF. The fridge storage compartment will be turned off while the freezer storage compartment operates normally.

Turning off the Refrigerator

Set the freezer storage temperature to OFF. The refrigerator will stop operating. This function is not equivalent to turning off the power.

Control Panel (For AFL631CWE/AFL631CSE)

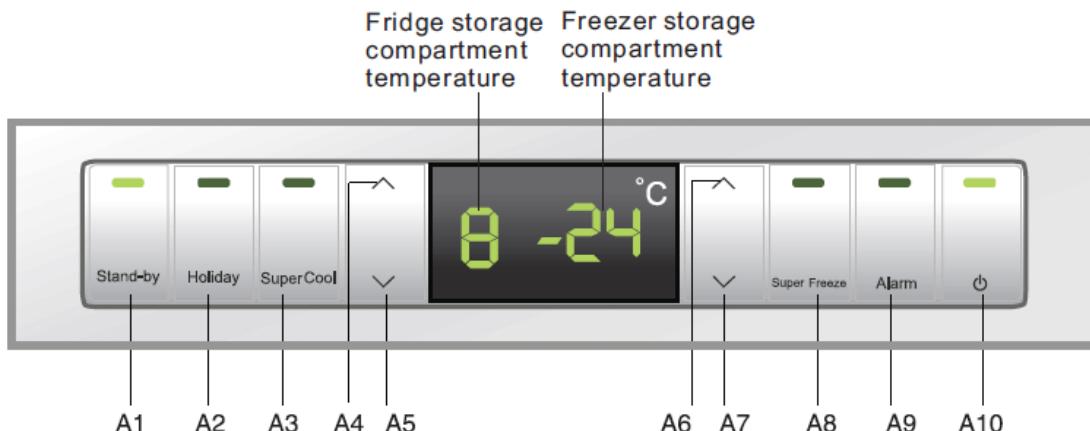

- A1 Switch on/off the fridge storage compartment
- A3 Super cool
- A5 Fridge temperature down
- A7 Freezer temperature down
- A9 Over-temperature/door open alarm

- A2 Holiday function
- A4 Fridge temperature up
- A6 Freezer temperature up
- A8 Super freeze
- A10 Power ON/OFF

Initial Powering On

When the refrigerator is powered on for the first time, the power indicator and the fridge storage compartment indicator will light. The fridge storage temperature will be displayed as “-” due to the high temperature inside. The freezer storage temperature will be displayed as “- -” due to high temperature inside. The buzzer will beep. Press key A9, and the buzzer will be silenced. After the temperature decreases to certain level, the displayed temperatures of the fridge storage compartment and the freezer storage compartment will become the ex-factory settings “5” and “-18” respectively.

Fridge storage temperature setup

Press key A4 or A5 to set the fridge storage temperature. The fridge storage temperature cycles from 2 to 8. The setting is confirmed automatically 5 seconds after the operation is finished or by pressing any other key.

Freezing storage temperature setup

Press key A6 or A7 to set the freezer storage temperature. The freezer storage temperature cycles from -16 to -24. It will be confirmed automatically 5 seconds after the operation is finished or by pressing any other key.

Super cooling

Select this function before putting large amount of food in the freezer storage compartment. Press key A3, and this function is activated and the corresponding indicator illuminates. This function will automatically deactivate when the temperature decreases to the required level. You can also deactivate it by pressing key A3 again.

When the temperature in the refrigerator storage compartment is too low, the super-cooling function may not work. That is, when you press the “super-Cooling” button once, the buzzer will beep once and the indicator will not blink, meaning the temperature in the refrigerator storage compartment is too low and the super-cooling function doesn't need to be activated.

Super freezing

Select this function after you have put large amount of food in the freezer storage compartment. Press key A8, this function is activated and the corresponding indicator illuminates. This function will become inactive automatically after 24 hours. You can also deactivate it by pressing key A8 again.

Holiday function

Press key A2, corresponding indicator illuminates and the holiday function of the fridge storage compartment is activated. It will operate at a relatively high temperature in Holiday mode. The fridge storage temperature will be indicated as “-” (Please take out the fresh food in the refrigerator and close the door before activating this function). Press key A2 again, and the corresponding indicator goes off and the refrigerator comes into normal control.

Display control

The display screen will turn off automatically 1 minute after an operation is finished. It can be lit up by opening the door or pressing any key. (Alarm does not light up the display screen)

Door open alarming

When the refrigerator door is open for more than 3 minutes, the alarm indicator will flash and the buzzer will sound 3 beeps every 30 seconds. The buzzer can be silenced by closing the door or pressing key A9.

Over temperature alarm

When the temperature in the freezer storage compartment rises to a certain value, the alarm indicator will illuminate solid and the buzzer will sound 1 beep every second. The buzzer can be silenced when the temperature in the freezer storage compartment drops to a specified level or key A9 is pressed.

Turning off the fridge storage compartment

Press and hold key A1 for 3 seconds, and the corresponding indicator will turn off and the fridge storage compartment will be turned off while the freezer storage compartment operates normally. The fridge storage temperature indication icon will also go off. Press and hold key A1 for 3 seconds again, the corresponding indicator will illuminate, the fridge storage compartment will be turned on, and the fridge storage temperature indication icon will recover.

Turning off the refrigerator

Press and hold key A10 for 3 seconds, corresponding indicator will go off, the display panel will go off and the refrigerator will stop operating.

Press and hold key A10 for 3 seconds again, corresponding indicator will light up, the display panel will light up, and the refrigerator will start operating normally.

This function is not equivalent to turning off the power.

Fault indication

When E or F is displayed due to fault, the refrigerator can still refrigerate. Please contact professional after-sales service personnel as soon as possible.

About the fridge storage compartment

Please put the food to be stored for short period or for daily consumption in the fridge storage compartment.

Although the average temperature in most areas in the fridge storage compartment can be regulated between 0°C and 10 °C, extended period of food storage is not recommended. The fridge storage compartment should only be used for short-term storage.



Adjusting shelf height

The shelf can be relocated to accommodate food size or height. To adjust the height of a shelf, remove it first in this way: uplift its front edge and then pull it out.

To install the shelf, put the dogs on both sides of the shelf on the supporting ribs and push it to the most inward end.

Fruit and vegetable box

The refrigerator has a crisper. You can adjust the humidity inside it according to the properties of the foods.

Turning the humidity control button rightward enables the crisper to keep in a higher humidity suitable for cucumbers, grapes, Chinese gooseberries, persimmons, etc.

Turning the humidity control button leftward enables the crisper to keep in a lower humidity suitable for strawberries, oranges, beans, garlic, watermelon, plums, tomatoes, etc.

Fresh Control Box

The temperature in this box is kept at approx. 0°C; it may be slightly changed due to the different ambient temperature or refrigerator working style. It is suitable to store fresh fish, meat and cooked food in 1-2 days.


Disassemble of the bottle guard

To take out a bottle guard, uplift the bottle guards in direction and grip both sides and pull it out in direction. After cleaning, install it with the operation in the reversed direction

Recommended storage for various food

As cold air circulates inside the refrigerator, there is temperature difference inside the fridge storage compartment. Different foods should be placed in different areas according to their properties.

1. Eggs, butter, cheese and etc.
2. Drinks, canned food and etc.
3. Seasonings and pickled food
4. Beverages, canned food, cake, etc.
5. Milk, cheese, etc.
6. Cooked meat, fresh fish and meat, etc.
7. Fruit, vegetables, salad, etc.

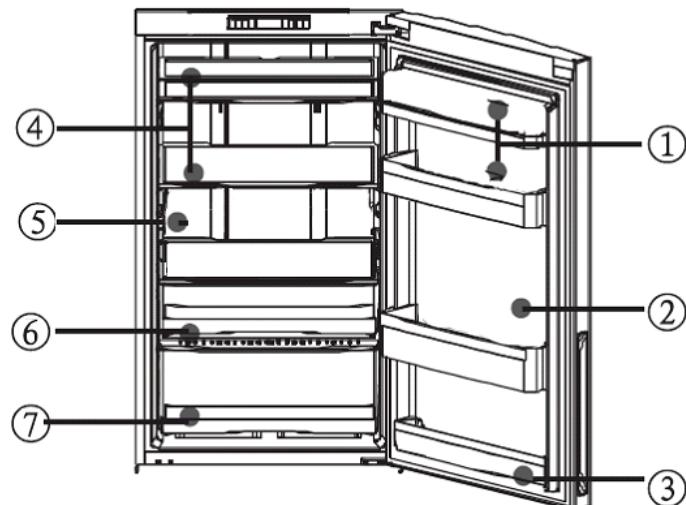

Lamp in the fridge storage compartment and its replacement

Parameters of the lamp: 12V, max 5W (the power depends on the model). The lamp adopts LED as its light source, featuring low energy consumption and long service life. If there is any abnormality, please contact the after-sales service personnel.

The “OK” Sticker

The “OK” temperature monitor can be used to determine temperatures below +4°C.

Gradually reduce the temperature if the sticker

does not indicate “OK”.



Note: When the appliance is switched on, it may take 12h until the temperature is reached.

Correct setting

Temperature too high, reduce temperature

Defrosting and cleaning

Defrosting the freezer

The freezer defrosts automatically. No manual operation is needed.

Cleaning

The refrigerator should be cleaned regularly to prevent bad stored food odors.

For safety, unplug the power cord before cleaning the refrigerator

Clean the refrigerator with a soft cloth or sponge with warm water (can be added with mild detergent)

Dry water droplets on the refrigerator surfaces with a dry cloth

Always keep the door gasket clean.

Use of the cleaning filter (on some models)

The design service life is from 5 to 6 years. But as the kind and concentration of odors in each refrigerator is uncertain due to different operation condition and environment, we recommend you to set the replacement cycle within 3 years.

After prolonged use, you can put it under sunshine for 30 minutes to recover the deodorization effect. To clean, please use slow water flow.

 The refrigerator is very heavy. When you are moving it for cleaning or repairs, take care not to damage the floor. Keep the refrigerator upright during moving. Do not move the refrigerator by rocking it to avoid damage to the floor.

 Do not spray or flush the refrigerator with water to avoid impact on its electrical insulation property.

 Do not clean with hard brush, wire brush, detergent powder, gasoline, amyl acetate, acetone and similar organic solutions, warm water or acid or alkaline solutions. Please clean with special refrigerator detergent to avoid damage.

 Do not touch the cold iron parts with wet hands; otherwise your skin may stick on the cold iron parts.

 When cleaning, do not clean the cold glass shelves with warm water. Otherwise the glass may break due to sudden temperature change and cause personal injury or property loss.

Measures on power interruption

Even in summer, food may be stored in the refrigerator for a few hours after a power interruption. If a power interruption occurs, please call the power company to ask about the interruption duration.

Do not put additional food into the refrigerator during a power interruption and try to open the door as few times as possible.

If prior notice of a power interruption is given and the interruption duration is over 24hrs, make some ice and put it in a container in the top of the fridge storage compartment.

 As temperature in the refrigerator will rise during a power interruption or other failures, the storage period and edible quality of food will be reduced.

Stopping use

If the refrigerator will not be used for an extended period, please unplug the power cord, disconnect the water source, and clean it with the method described above.

Keep the refrigerator door open to prevent any food remaining in the compartment from producing bad odors.

 To ensure the service life of the refrigerator, it is recommended that the refrigerator not be turned off unless it is necessary.

Before leaving for vacation

If leaving on an extended vacation, please disconnect the power and water source. Remove any food; wait for the frost to melt. Afterwards, clean and dry the interior, and keep the door open to prevent any food remaining in the compartment from producing bad odors. If the room temperature is expected drop below 0 °C, please ask a qualified service person to drain the water in the water supply system. Otherwise serious property loss may be caused due to overflow of water if the water pipe or joint breaks.

Moving the refrigerator

Unplug the refrigerator.

Remove all food.

Secure the shelves and crisper in the fridge storage compartment as well as the shelves and other movable parts in the freezer with adhesive tape.

Close the door and secure with adhesive tape.

Do not tilt the refrigerator more than 45 degrees (angle to vertical) to avoid damaging the refrigerating system.

 Never place the refrigerating horizontally down.

Before calling for service, please read the following troubleshooting table first. This can save both your time and money. The table contains common problems except those caused by defects in workmanship or material of the refrigerator.

<i>Problem</i>	<i>Cause</i>	<i>Solution</i>
Refrigerator Operation		
The compressor does not work	<ul style="list-style-type: none"> ✗ The refrigerator is in the defrosting cycle. ✗ The refrigerator is not plugged into a power outlet. ✗ The refrigerator is turned OFF. 	<ul style="list-style-type: none"> ✓ This is normal for an automatic defrosting refrigerator. ✓ Verify the plug is plugged in the socket firmly. ✓ Press the "Power" button for 3 seconds or more to restart the refrigerator or turn the knob from OFF to temperature selection position.
The refrigerator runs frequently or runs for too long period	<ul style="list-style-type: none"> ✗ The indoor or outdoor temperature is high. ✗ The refrigerator has been powered off for a period of time. ✗ The automatic icemaker is operating. ✗ The door is opened too frequently or for long period. ✗ The door of the fridge/freezer storage compartment is not tightly closed. ✗ The temperature setting for the freezer storage compartment is too low. ✗ The door gasket of the fridge/freezer storage compartment is dirty, worn, cracked or mismatched. ✗ The condenser is dirty. 	<ul style="list-style-type: none"> ✓ In this case, it is normal for the refrigerator to run longer. ✓ Normally, it takes 8 to 12 hours for the refrigerator to totally cool down. ✓ Ice-making process makes the refrigerator to run longer. ✓ Warm air enters the refrigerator and causes it to start frequently. Please do not open the door too frequently. ✓ Ensure the refrigerator is located on a level ground and there is no food or container jarring the door. See "door/drawer opening/closing" in section "Problem" ✓ Set the temperature higher until a satisfactory refrigerator temperature is obtained. It takes 24 hours for the refrigerator temperature to become stable. ✓ Clean or replace the door gasket. A leakage gap of door gasket can cause a longer running time of the refrigerator in order to maintain desired temperature. ✓ Clean the condenser.

Too High Temperature		
Too high temperature in the fridge /freezer storage compartment	<ul style="list-style-type: none"> ✗ The door is opened too frequently or for too long each time. ✗ Temperature is set too high. ✗ The door is not closed tightly. ✗ The condenser is dirty. 	<ul style="list-style-type: none"> ✓ Warm air will enter the refrigerator whenever the door is opened. Try to open the door as less frequently as possible. ✓ Reset the temperature. ✓ See "Door/drawer opening/closing in section "Problem". ✓ Clean the condenser.
The temperature in the freezer is too high while the temperature in the fridge storage compartment is OK	<ul style="list-style-type: none"> ✗ The freezer temperature is set too high. 	<ul style="list-style-type: none"> ✓ Set the freezer temperature lower. It takes 24 hours for the temperature of the refrigerator to become stable.
Water/moisture/frost on outside surface of the refrigerator		
Moisture accumulates on the refrigerator's outside surface or between two doors	<ul style="list-style-type: none"> ✗ Damp climate. ✗ The refrigerator door is not closed tightly. This causes condensation of the cold air in the refrigerator and the warm air outside it. 	<ul style="list-style-type: none"> ✓ This is normal in damp climate. The moisture will decrease when the humidity drops. ✓ See "Door/drawer opening/closing" in section "Problem".
Bad odors in the refrigerator		
The inside of the refrigerator is dirty	<ul style="list-style-type: none"> ✗ The inside of the refrigerator needs cleaning ✗ Food of strong odor is stored in the refrigerator 	<ul style="list-style-type: none"> ✓ Clean the internal of the refrigerator. ✓ Wrap the food tightly.
If you hear		
Beeps	<ul style="list-style-type: none"> ✗ The fridge storage compartment door is open. ✗ The temperature in the freezer is too high. 	<ul style="list-style-type: none"> ✓ Close the door or silence the alarm manually. ✓ The alarm is normal when it is first started due to relatively higher temperature. You can silence the alarm manually.
Abnormal sound	<ul style="list-style-type: none"> ✗ The refrigerator is not located on a level place. ✗ The refrigerator touches some object around it. 	<ul style="list-style-type: none"> ✓ Adjust the feet to level the refrigerator. ✓ Remove objects around it.
Slight sound similar to that of flowing water	<ul style="list-style-type: none"> ✗ This is the sound of the refrigerating system 	<ul style="list-style-type: none"> ✓ Normal
Heating of cabinet	<ul style="list-style-type: none"> ✗ The de-condensation system is working refrigerating system. 	<ul style="list-style-type: none"> ✓ This prevents condensation and is normal.

If after checking the trouble-shooting part, the problem is not solved. Please check the Warranty Card included in the product.

Identification and serial number plate

If the appliance is faulty or does not operate, consult the "Troubleshooting" chap. at the back of this handbook. If the problem is not resolved, call the Assistance Centre, specifying the data on the Identification and serial No. plate: it is located inside the refrigeration compartment glued low down on the left side (see paragraph "Description of the appliance").

 The identification and Serial No. plate provides important information about the appliance and must not be tampered with or removed.

A: Type and quantity of refrigerant

B: Serial number

C: Product code

D: Model

E: Electrical characteristics

F: Climate class

G: Freezing capacity (in kilograms of foods frozen in 24 hours)

H: Net capacity of freezer

L: Net capacity of refrigerator compartment

M: Gross capacity



Useful Information

Haier Italy

✓ AS Phone number; 199-100912

Haier Spain

✓ AS Phone number (ES & PT) ; 902 50 91 23

Haier Germany

✓ AS Phone number (DE/ AT) ; 0180 5 39 39 99 / 0820 00 12 05

Haier UK

✓ AS Phone number; 0845 077 7750

Technical Data

Haier

Model		CFE629	CFE633	AFL631
1	Basic specifications			
	Energy efficiency class		A+	A+
	Climate class		SN/T	SN/T
	Voltage / frequency	V/Hz	220-240~/ 50	220-240~/ 50
	Kind of coolant (R134a/R600a)		R600a/ 52g	R600a/ 58g
	Max storage time at breakdown Freezer	h	16	16
2	Essential specifications			
	Number of compressors	n°	1	1
	Defrosting of refrigerator/freezer(M=Manual / A=Automatic)		A/A	A/A
	Control system(E=Electronic / M=Mechanical)		M	M
	NO FROST (Refrigerator/Freezer)		yes/yes	yes/yes
3	Temperature and refrigeration capacity			
	Temperature setting interval	°C		
	Refrigerator		2-8°C	2-8°C
	Chiller / Meat Crisper		-2 - +3	-2 - +3
	Vegetable Crisper		0-10°C	0-10°C
	Freezer		-16 ~-24°C	-16 ~-24°C
	Refrigerator net volume	l	210	230
	Freezer net volume	l	80	80
	Freezing capacity	kg	11	11
4	Control panel			
	Commands and temperature indications		Internal	Internal
	Type of display		-	-
	Super cooling(Refrigerator)		yes	yes
	Super freezing(Freezer)		yes	yes
	Over-temperature alarm		yes	yes
	Adjustable thermostat		yes	yes
	Indicator lights		yellow/green	yellow/green
5	Dimensions of appliance			
	Dimensions (height x width x depth)	cm	188x60x67	188x60x67
	Depth with door open	cm	1188	1188
6	Accessories			
	Ice maker (M=Manual / A=Automatic)		M	M
	Internal light		yes	yes
	Power cable length	cm	200	200
7	Dimensions,packing and weight			
	Packing dimensions (height x width x depth)	cm	194.7/66.4/73	194.7/66.4/73
	Net weight	kg	75	82
				82

