 


# TOUCH CONTROL CLIPPER

## QUICK START GUIDE

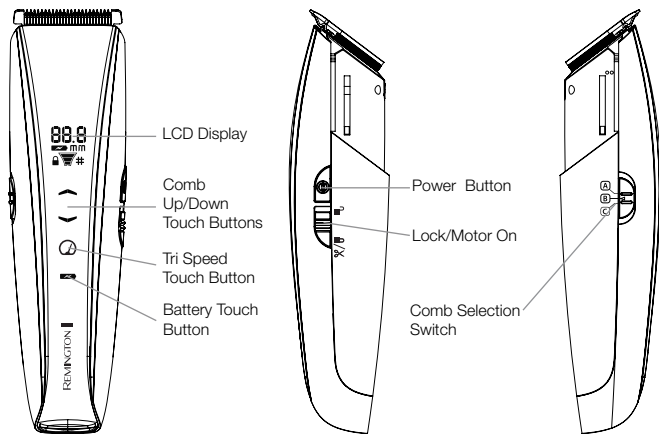

### STEP 1

#### Out of the Box

1. Remove plastic pull tab to activate the batteries
2. Press power button to begin. Your screen should show
3. Press the screen will show or and the clipper is ready to use.

 
1

### STEP 2

#### Achieving Your Desired Length


##### Length comb guards

1. Select comb and set the selection switch to A, B, or C to correspond with desired setting.
2. Install comb: Line up comb rails with the slot on each side of the clipper. Press down until comb clicks into place.

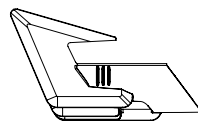

**Long Adjustable**  
22-42mm (#6.5-#13)



**(A)**  $\frac{1}{2}$ -0.5

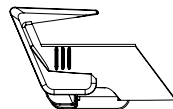

**Short Adjustable**  
3-23mm (#1.0-#7)


**(B)**  $\frac{1}{2}$ -0.5

  **(C)**  $\frac{1}{2}$ -0.1



**Stubble fixed 1.5mm (#0)**

 **Note:** does not use switch or LCD

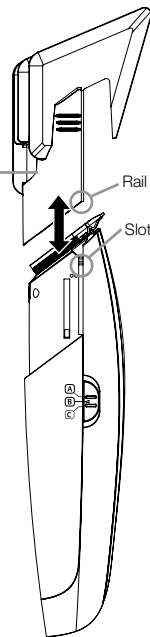

3. To adjust height, set lock switch to
4. Use buttons to reach desired length



(example)

2

# TOUCH CONTROL CLIPPER


## QUICK START GUIDE

### Select Tri Speed Levels

1. Set lock switch to 
2. Select tri speed level by using 



### Check Battery Level




1. Press  at any time
2. Battery level remaining displays



## STEP 3

### Cutting Hair







#### Ready to Begin Cutting

 
1. When ready to cut hair, slide the lock switch from  to 
2.  turns on the cutting motor and prevents comb movement during use

### Helpful Hints

1. Charge for 12 to 18 hours before first use
2. Put 1 to 2 drops of oil on blade before first use, and every 1 to 2 uses thereafter
3. To switch between “mm” and “barber shop” # mode, press and hold power button for 2 seconds until screen blinks
4. To turn off clipper let the product sit for 10 seconds with motor off

## Troubleshooting

1. Clipper will not turn on
  - a. Slide lock switch from  to 
  - b. Ensure pull tab is removed
  - c. Charge for 12 to 18 hours
2. Display shows wrong length
  - a. 3-23mm and 22-42mm combs:  
Ensure switch matches letter printed on comb.
  - b. 1.5mm comb:  
Note display not designed to update 1.5mm comb
3. Comb does not move when pressing up/down
  - a. Slide lock switch to 
  - b. If comb adjustment still does not work, follow system reset procedure found in user manual
4. Up/Down, turbo, or battery buttons activate without touching them
  - a. Slide lock switch from  to 
  - b. Then slide lock switch back to 
  - c. If buttons still activate by themselves, follow system reset procedure found in user manual



# SAVE THESE INSTRUCTIONS