

Wireless Presentation System

User's Manual

(WPS005)

Table of Contents

1. Overview.....	3
2. Quick Start.....	4
3. Client Utility.....	8
3.1 Starting Program.....	7
3.2 Login.....	8
3.3 Buttons Description.....	9
3.4 Start/Stop Presentation.....	9
3.5 Open Admin Web Page.....	9
3.6 Searching Server.....	10
3.7 Make PnS Token.....	16
3.8 System Information.....	15
3.9 PDA Model.....	14
3.10 Exit Program.....	13
4. Web Management.....	7
4.1 Home Page.....	6
4.2 Download Software.....	5
4.3 Conference Control.....	7
4.4 Login Web Admin.....	7
4.5 System Status.....	7
4.6 Network Setup.....	7
4.7 Projection Setup.....	7
4.8 Change Passwords.....	7
4.9 Reset to Default.....	7
4.10 Firmware Upgrade.....	7
4.11 Reboot System.....	7
4.12 Logout.....	25

1. Overview

WPS005 is a must-have device for your meeting room! It turns your existing "wired" projector into a "high-end wireless" projector. With the revolutionary Plug-and-Show, 4-to-1 split screen and PDA wireless projection features, WPS005 makes every of your presentation and meeting efficient and successful.

- Plug & Show

With the accompanied Plug & Show USB Token, wireless presentation becomes easy! Just link your PC/Laptop to WPS005 (through WLAN or Ethernet), plug the token into a USB port, and in seconds, your screen will be wireless projected to the connected projector!

- 4-to-1 Split Screen Projection

With this 4-to-1 split screen feature, up to four PC screens can be projected to one projector in the same time. Thus you can easily do side-by-side comparison from four PC / PDAs to increase meeting productivity!

- PDA wireless Projection

You don't have to bring the laptop for business presentation anymore. Just connect your PDA phone to WPS005 through WiFi, and start your professional and stylish presentation right away!

- Conference control

 
WPS005 supports Conference Control function for easily moderating the conference. The conference moderator can control projection from connected PCs through a web-based control page. So you can streamline your meeting/presentation to be more fluent and in order.

➤ Features

- Support Windows Vista, XP, 2000 and Mobile 5/6
- Plug and Show! No installation required ... just plug in the accompanied token to a USB port, and hassle free presentation can be started in seconds.
- 4-to-1 split screen projection! Turn one projector into four, increase meeting productivity right away.
- PDA wireless projection! PC-less stylish presentation becomes possible!
- Conference control! Allows moderators to streamline grand meetings.
- Provide session security login, wireless WEP key and Gatekeeper function to protect presentation contents and keep good security to office networks.

2.Quick Start

- 1) Connect projector VGA cable to WPS005 box VGA connector and turn on projector power.

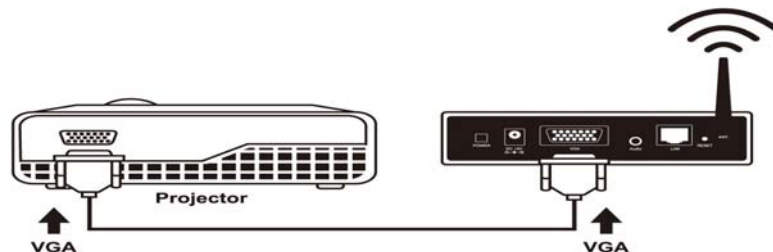

- 2) Turn on WPS005 box.
 - ◆ When Projector shows the default menu on the screen as below, it indicates the WPS005 box is ready now.

LOGIN CODE : 1234

Wireless Presentation System

Quick Guide

1. Make sure your WLAN is enabled, and connect to Wireless Presentation System.
2. Open your browser, or enter the IP address (refer to below server IP address)
3. Click on "Download", and execute the installation program.
4. Make sure your personal firewall allows WPS software to pass through!
5. Enter the LOGIN CODE to start projection!

SSID : WPS
Server IP : 192.168.100.10
Channel : 4
WEP : Disable
Resolution : 1024 x 768
Version : 2.6.2.0

- 3) Make sure your PC WLAN is enabled already, and connect your PC with WPS005 box.
- 4) Open your browser and it will redirect to WPS005 main page automatically, or you can enter the IP address to access the WPS005 web home page.
 - ◆ The default IP address of WPS005 is **192.168.100.10** or refers to the IP address shown on the left corner of projector screen.



Wireless Presentation System

Wireless Presentation System English

Download
Conference Control
Admin

Copyright © 2008. All rights reserved.

- 5) Download the client software. Please select the " Windows Vista / XP / 2000" or "Windows Mobile 5.0" and execute the installation program.
- ◆ After install the program, WPS005 shortcut will come out on the PC screen.



- 6) Make sure your personal firewall allows WPS005 software to pass through.
- 7) Enter the **LOGIN CODE** and
- ◆ You can see the login code on the projector screen



8) Click the **“Play”** button to start projection!



3. Client Utility

3.1 Starting Program

After you download WPS005 Windows program via web page successfully, then follow below steps to start.

1) Click WPS005 icon to execute the program.



2) Program start to search for WPS005 box automatically,

3) If WPS005 box founded then **“Login Code”** dialog box will be pop up on the PC screen.

- **Searching for WPS005 box**



- **WPS005 box is founded and enter login code to start.**



Current Server: WPS

i Server IP:

User Name:

Login Code:

OK Cancel

3.2 Login

- 1) After "Login Code" dialog box shown, enter login code to start presentation.
- 2) You can see the login code shown on the projector screen.

Current Server: WPS

i Server IP:

User Name:

Login Code:

OK Cancel

3.3 Buttons Description

1) After login successfully, you will see main UI of WPS005 application.



2) Click following buttons to manipulate WPS005 Application.



Project desktop screen to Full screen or split screen



Full Screen projection



Project to Split #1



Project to Split #2



Project to Split #3



Project to Split #4



Pause projecting



Stop projecting



Refresh projecting screen



Server Login Code



While projecting in progress, this icon is blinking



Function menu




Minimize the program




Exit the program

3.4 Start/Stop Presentation


Click  to project desktop (Full screen or split screen)

Click  to stop presentation..

 
Click  to pause presentation, which will hide any activities of your PC screen.



3.5 Open Admin Web Page

Click  to open function menu and select "**Web Admin**" management web page. The web page detailed functions will be described on next chapter.



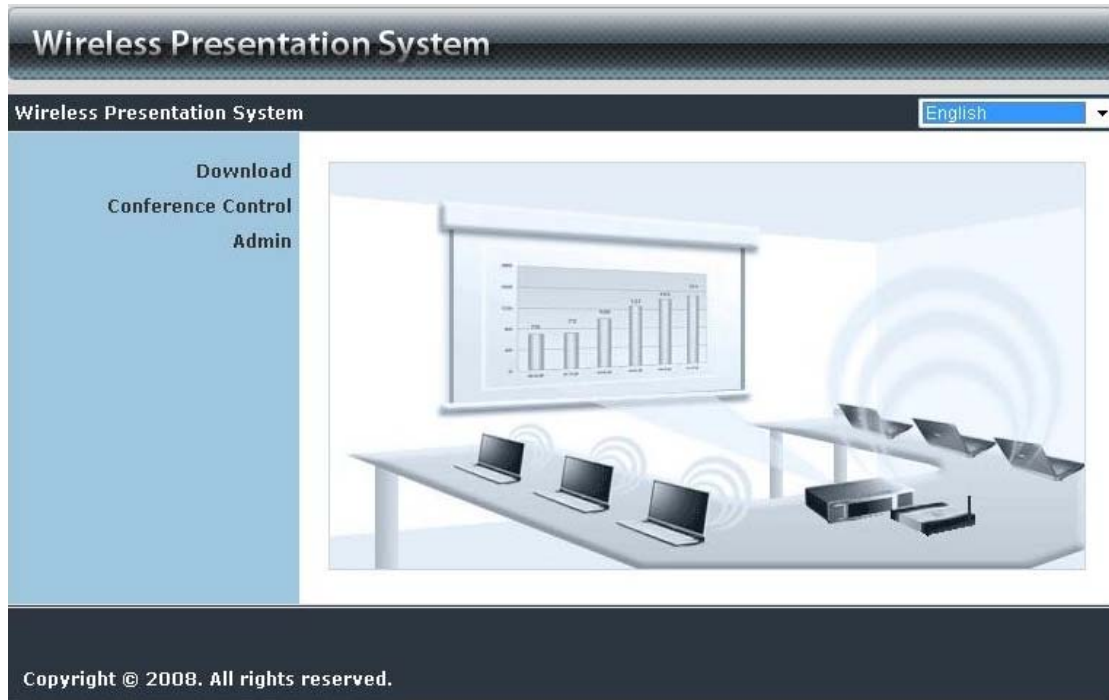


3.6 Searching Server


Click "**Search Server**" to search for WPS005 box.



3.7 Make PnS Token

  Click "Make PnS Token" to make a USB WP005 Token, please follow the steps with the wizard:

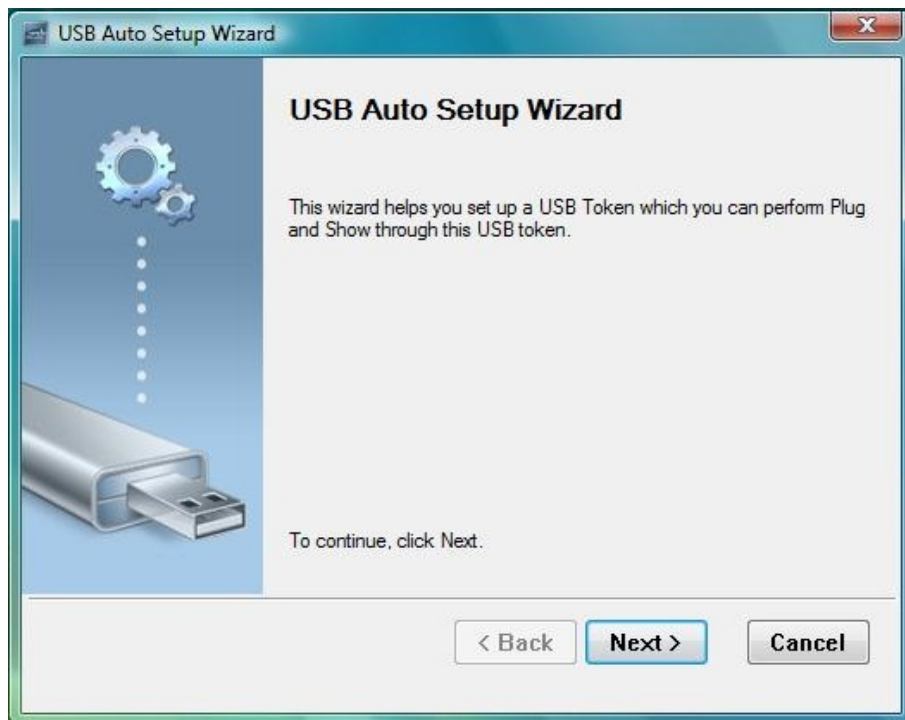

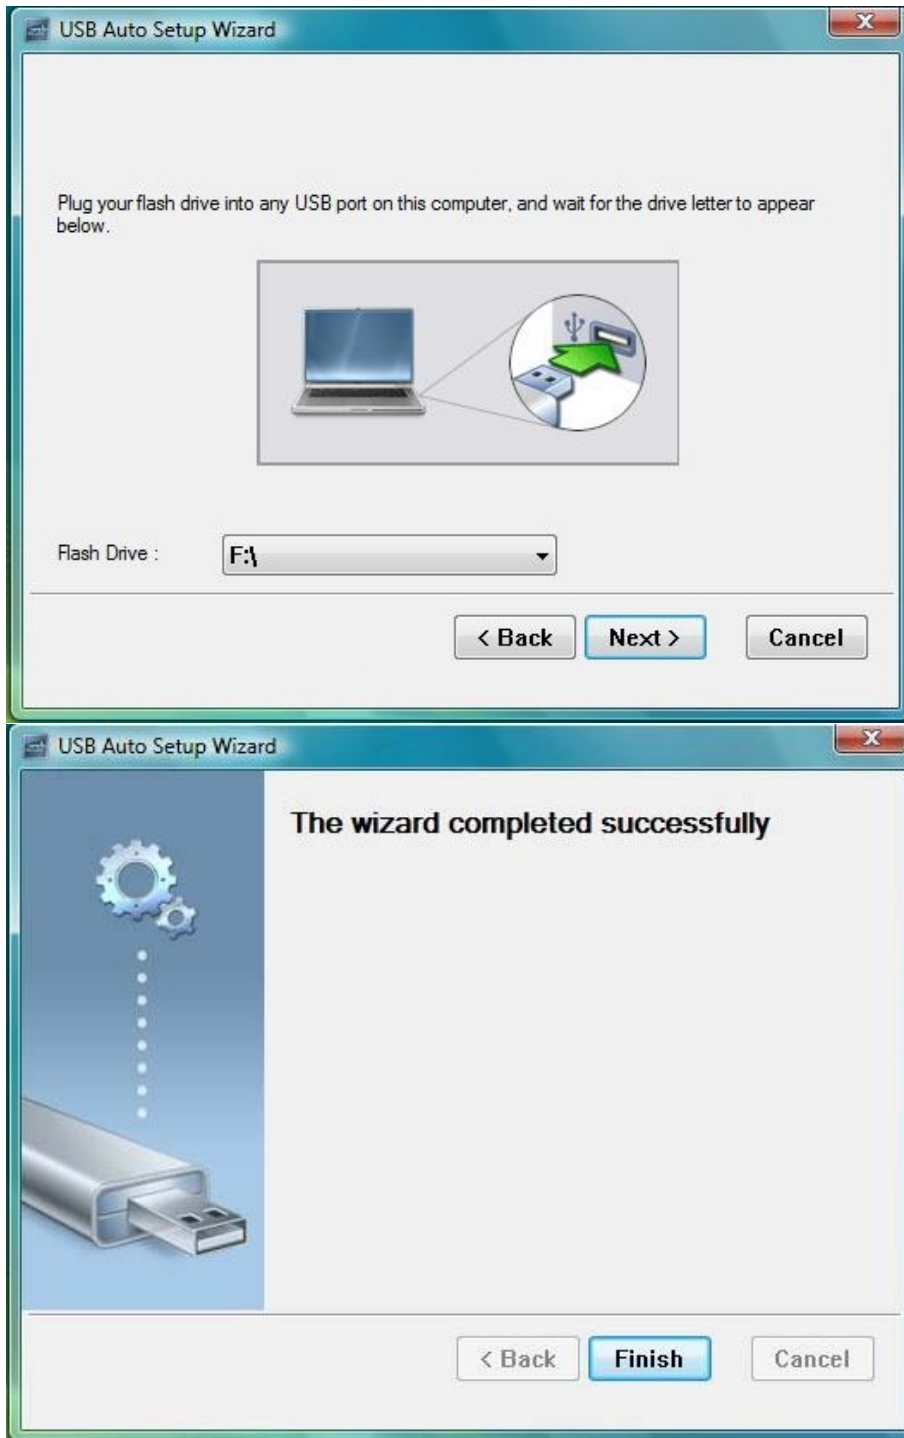


3.8 System Information

Click **Info** to show system information. It includes product model name, IP address and other information.




3.9 WPS005 for PDA

To project your PDA screen with WPS005, please follow the steps:

- 1) Enable your WiFi and connect to WPS005
- 2) Open the browser and enter Server IP address to download WPS005 client software for PDA version.
- 3) Install WPS005 client software.
- 4) Launch WPS005 software and enter the login code.
- 5) Start  Projection.



 
3.10 Exit Program

Click  to exit this program.

4. Web Management

4.1 Home Page


5. Make sure your PC connect to WPS005 box successfully.
6. Open your browser, it will enter WPS005 home page automatically.
7. If not, enter your IP address on the browser, you can see the IP on the projector screen.
8. The default IP is 192.168.100.10

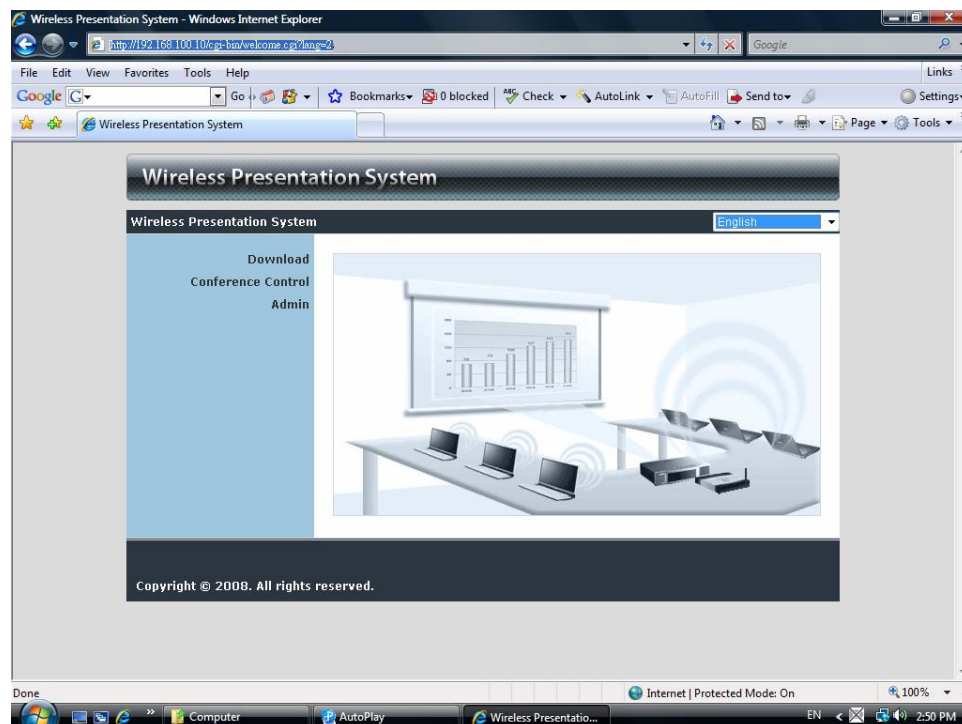

4.2 Download Software

 1. Select "Download software" function.
2. Please select the "Windows Vista / XP / 2000" or "Windows Mobile 5.0" and



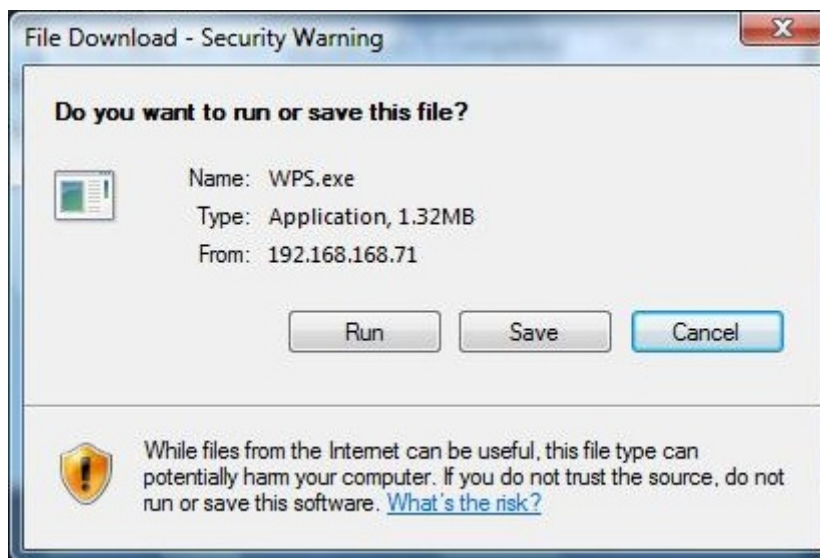



- execute the installation program.
3. Follow Installation Wizard instructions to proceed till the installation process complete.
 4. If pop up "**Windows Security Alert**" because Windows firewall block this program. You just press "**Unblock**" button to continue installation.
 5. Once installation complete, a utility shortcut come out on the screen.



4.3 Conference Control

- 1) This function allows you to host a meeting smoothly without projector cable swapping and each participant can show their presentation easily.
- 2) Select "**Conference Control**" function.
- 3) Enter password, the default value is "trainer", and then press [Login].



- 4) After login, you can see a User List on the screen which indicates all of users connected to WEPRESENT box.
- 5) There are three columns, "**Computer Name**", "**Play Control**" and "**IP Address**".
- 6) Play Control › There are six buttons, including Play(Full) , Play Split #1 , Play Split #2 , Play Split #3 , Play Split #4  and Stop .
- 7) User List



4.4 Login Web Admin

The screenshot shows the 'Wireless Presentation System' Admin interface. The breadcrumb trail is 'Wireless Presentation System > Admin'. On the left sidebar, there are links for 'Download', 'Conference Control', and 'Admin'. The 'Admin' link is highlighted. The main content area contains a login form with the following fields:

- User Name: **admin**
- Password:
- Login button

At the bottom of the page, there is a copyright notice: 'Copyright © 2008. All rights reserved.'

1. Click [**Admin**] and then enter password to login web page.
2. The password default value is "admin".

4.5 System Status

The screenshot shows the 'Wireless Presentation System' Admin interface for the 'System Status' page. The breadcrumb trail is 'Wireless Presentation System > Admin > System Status'. There is a 'Logout' link in the top right corner. On the left sidebar, there are links for 'System Status', 'Network Setup', 'Projection Setup', 'Change Passwords', 'Reset to Default', 'Firmware Upgrade', and 'Reboot System'. The 'System Status' link is highlighted. The main content area displays the following system status information:

System Status	
Model Name	WPS-Pro
Versions	
Firmware Version	2.6.2.0
Network Status	
IP Address	192.168.168.71
Subnet Mask	255.255.255.0
Default Gateway	192.168.168.251
Wireless MAC Address	00:16:44:99:61:08
Wire MAC Address	00:12:5F:F1:24:58
Connection Status	
Projecting Status	Projecting
Total Users	1

At the bottom of the page, there is a copyright notice: 'Copyright © 2008. All rights reserved.'

Click [**System Status**], shows current system status.

Model Name: Product model name

Versions:

1. **Firmware version no.:** Product firmware version number.

Network Status:

1. **IP address** : IP address of WPS005 device.
2. **Subnet Mask** : subnet mask
3. **Default Gateway** : default gateway
4. **Wireless MAC address** : wireless MAC address
5. **Wire MAC address** : wire MAC address

Connection Status:

1. **Projecting status:** which is "Waiting for projecting" or "Projecting"
2. **Total Users:** It shows how many users login into WPS005 box.

4.6 Network Setup

There are many kinds of operating configurations as below.

The screenshot shows the 'Network Setup' page of the Wireless Presentation System. The page is divided into several sections: IP Setup, DHCP Server Setup, Wireless Setup, and GateKeeper. The IP Setup section has radio buttons for 'Obtain an IP address automatically' (selected) and 'Use the following IP address:'. The IP address is set to 192.168.100.10, Subnet Mask to 255.255.255.0, and Default Gateway to 192.168.100.10. The DHCP Server Setup section has radio buttons for 'Auto' (selected) and 'Disable'. The Start IP is 192.168.100.11 and the End IP is 192.168.100.254. The Wireless Setup section has radio buttons for 'Enable' (selected) and 'Disable'. The Region is set to 'WORLDWIDE', SSID is 'WPS', SSID Broadcast is 'Enable', Channel is 'Auto', WEP is 'Disable', and Key is empty. The GateKeeper section has radio buttons for 'All Pass', 'All Block' (selected), and 'Internet Only(port 80 & 443)'. There are 'Apply' and 'Cancel' buttons at the bottom right. The footer contains the text 'Copyright © 2008. All rights reserved.'

< Auto-Configuration Network Setup >

The default setting of the WPS005 box is DHCP client. When the WPS005 box is

connected to a LAN that already has a DHCP server present, the WPS005 box takes an IP address assigned to it by the server. When the WPS005 box is connected to a LAN that does not have a DHCP server, the WPS005 box becomes the DHCP server in the network.

< IP Setup >

- ◆ You can select "obtain IP address automatically" or "Use the following IP address"
- ◆ IP Address: The default value is 192.168.100.10.
- ◆ Subnet Mask: The default value is 255.255.255.0
- ◆ Default Gateway: The default value is 192.168.100.10

<DHCP Server Setup >

- ◆ You can select "auto(Enable/Disable DHCP Server" or "Disable")
- ◆ Start IP: The start IP address of DHCP Server.
- ◆ End IP: The end IP address of DHCP Server.

< Wireless Setup >

- ◆ Region: default value is "Worldwide".
- ◆ SSID: SSID string, max. Length is 32 bytes.
- ◆ Channel: to set fixed channel or Auto. The "Auto" means after power on WPS005, it will scan all of wireless channel and select clear one channel automatically.
- ◆ WEP: you can Disable WEP key or select one of 64bit or 128bit in ASCII or HEX string.
- ◆ Key: If WEP is enabled, you have to set key value according to WEP mode you selected.

< Gatekeeper >

Gatekeeper is designed for ensuring the enterprise network security within WPS005 box

- ◆ All Block can block Guest Users(through wireless) to access all office network(LAN),
- ◆ All Allow can pass Guest Users(through wireless) to access all office network
- ◆ Internet Only can block Guest Users (through wireless) from office network (LAN) but still reserve internet connection capability.

<Apply >: press button to select this mode

<Cancel >: press button to abort action.

<Back >: Back to Operating mode main menu

4.7 Projection Setup

The screenshot shows the 'Wireless Presentation System' administration interface. The breadcrumb trail is 'Wireless Presentation System > Admin > Projection Setup'. A 'Logout' link is visible in the top right. On the left, a navigation menu includes 'System Status', 'Network Setup', 'Projection Setup' (highlighted), 'Change Passwords', 'Reset to Default', 'Firmware Upgrade', and 'Reboot System'. The main content area is titled 'Projection Setup' and contains the following settings:


Resolution	XGA (1024x768)
Color Depth	Normal (16 bit)
Screen Refresh Rate	60 Hz
Login Code	<input type="radio"/> Disable <input checked="" type="radio"/> Random <input type="radio"/> Use the following code <input type="text"/>

At the bottom right of the settings area are 'Apply' and 'Cancel' buttons. The footer of the interface reads 'Copyright © 2008. All rights reserved.'

Click [**Projection Setup**] button

- ◆ **<Resolution>**: 1024*768, 1280x768 and 800*600.
- ◆ **<Color Depth>**: provide WPS005 output with 16bit or 32 bit color depth. It depends on your PC settings.
- ◆ **<Screen Refresh Rate>**: This is VGA output refresh rate, provides 60 Hz and 75Hz to suit for different kinds of projectors.
- ◆ **<Login Code>**: You can select "Disable", "Random", or "Use the following code" to set a specified 4-characters Number.
- ◆ **<Apply>** : Confirmation and Save modifications
- ◆ **<Cancel>**: Cancel all the modifications

 
4.8 Change Passwords

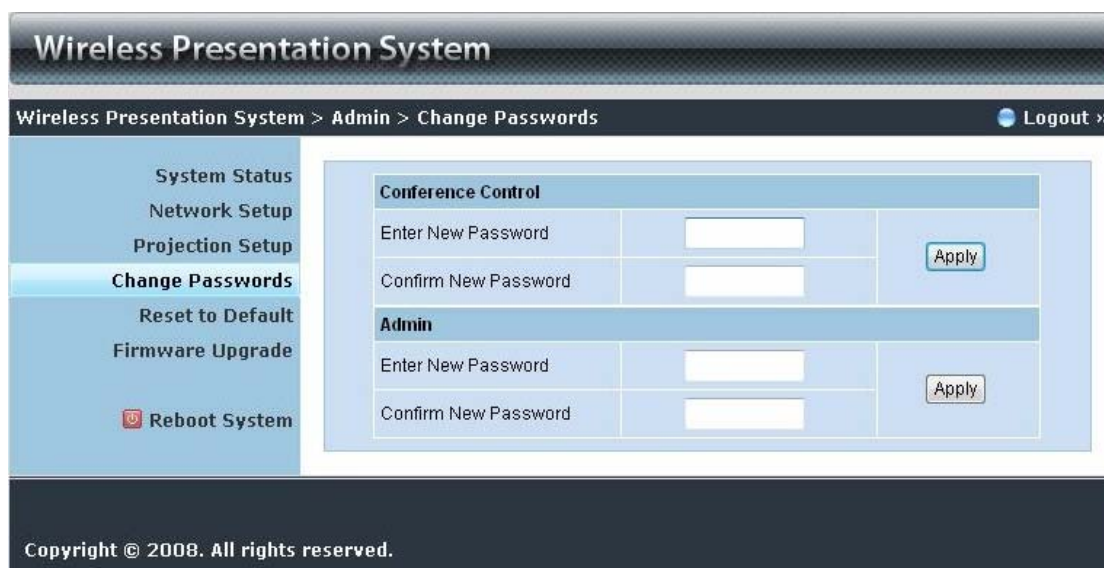

Click [**Change Password**] button, to change password value.

- ◆ **<Enter New Password>**: enter new password you want to change for each category.
- ◆ **<Confirm New Password>**: double confirm new password.
- ◆ **<Apply>**: Confirmation and Save modifications.

 4.9 Reset to Default

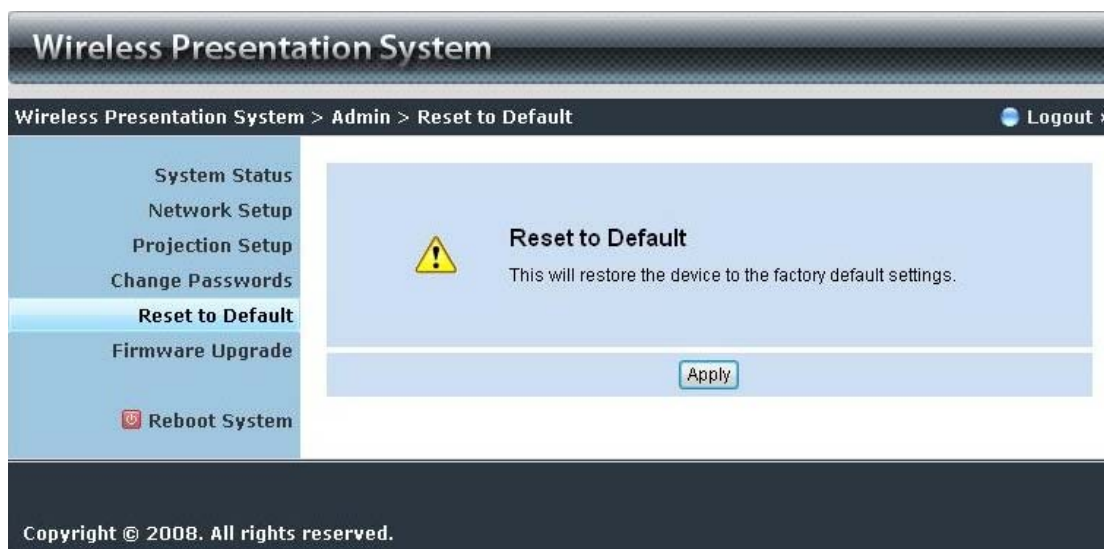


Click [**Reset to Default**] button to restore factory default settings.

<Apply>: Confirmation and action.

***** Another way to restore Factory Default Settings, Follow below procedures.**

 1. Press [**Reset**] button and **Hold**.
2. Turn on WPS005 box.
3. Wait for over 10 seconds and relief [**Reset**] button.
4. It will take effect to restore factory default settings.

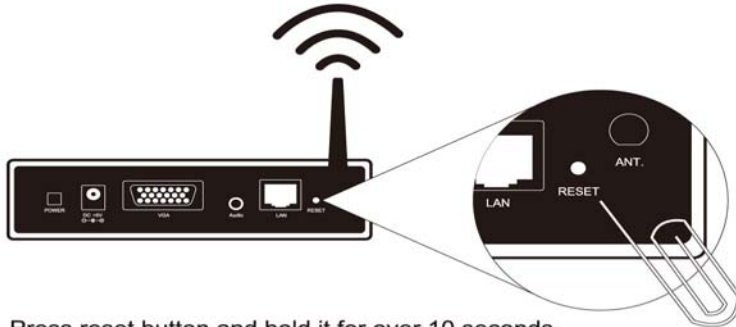

Press reset button and hold it for over 10 seconds.


4.10 Firmware Upgrade


A screenshot of the 'Wireless Presentation System' admin interface. The breadcrumb trail is 'Wireless Presentation System > Admin > Firmware Upgrade'. The left sidebar contains menu items: System Status, Network Setup, Projection Setup, Change Passwords, Reset to Default, Firmware Upgrade (highlighted), and Reboot System. The main content area shows a table with 'Firmware Version' (2.6.2.0) and 'Release Date' (20080407). Below the table is a warning message: 'After you apply "Upgrade" button, projecting function will be terminated. Warning: Once you've upgraded to the new version of firmware, you will not be able to roll back to the previous version!'. There is a 'File Name' input field with a 'Browse...' button and an 'Upgrade' button. The footer contains 'Copyright © 2008. All rights reserved.'

Click [**Firmware Upgrade**] button to upgrade firmware.


1. Firstly, you have to get latest firmware image file from your vendor.
2. Click **<Browse>** to specify file name you want to upgrade.
3. Click **<Upgrade>** to start.
4. A warning message shown and count down counter on the screen.
5. After a few minutes, a complete message shown on the screen.

 6. Restart WPS005 box to take effect.

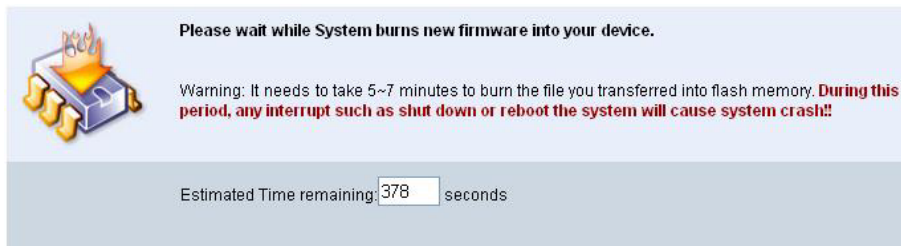

 **Warning:** Don't power off WPS005 while firmware upgrade in progress, otherwise will cause your Box doesn't work and have to return device to your vendor for fixing.

 4.11 Reboot System

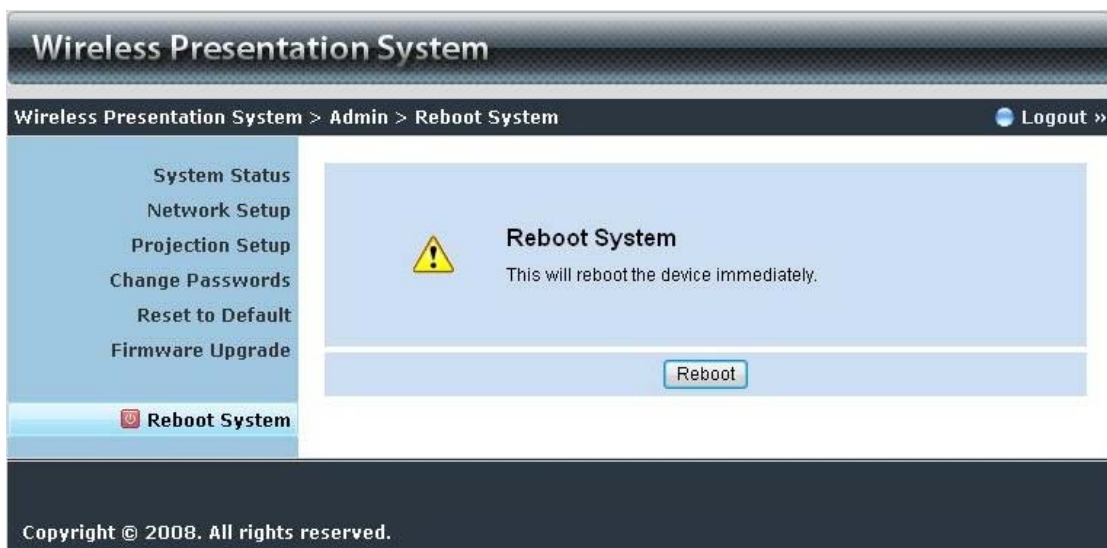


Click [**Reboot System**] button, to restart system

- ◆ **<Reboot>**: reboot system automatically.

4.12 Logout

Wireless Presentation System

Wireless Presentation System > Admin > System Status [Logout >>](#)

System Status	Model Name	WPS-Pro
Network Setup	Versions	
Projection Setup	Firmware Version	2.6.2.0
Change Passwords	Network Status	
Reset to Default	IP Address	192.168.168.71
Firmware Upgrade	Subnet Mask	255.255.255.0
 Reboot System	Default Gateway	192.168.168.251
	Wireless MAC Address	00:16:44:99:61:08
	Wire MAC Address	00:12:5F:F1:24:58
	Connection Status	
	Projecting Status	Projecting
	Total Users	1

Copyright © 2008. All rights reserved.