

LEAHUA 广州丽华舞台灯光音响有限公司 GZ LEAHUA LIGHT LIMITED

This manual contains important information. Please read before operating fixture.

Add: A1 Building The Sixth Industrial Zone Zhu Gang Road Hongxing Shijing Town Baiyun District Guangzhou China. Tel: +86 020-66292177 Fax: +86 020-66292177

1 SECURITY TIPS


WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:

- non-professionals, not to disassemble the light arbitrarily and lighting accessories inside.
- rated voltage range: AC110V-120V/60Hz or AC200V-240V / 50HZ (to be selected).
- not beam irradiate the flammable materials, flammable materials and the lamp should be maintained at least 1M over the distance.
- lamps used in ambient temperature: -15 $^{\circ}$ C -40 $^{\circ}$ C, the highest temperature of the surface of the lamp: 60 $^{\circ}$ C.
- to keep away from the liquid substance and humid environment.
- before using the lights must ensure the good grounding, can not install charging and remove any parts.
- the installation of lamps, must be fixed screw fasteners with additional security cable and regular inspection.
- lamps consecutive working hours is not recommended more than 10 hours.
- should stop using the lights in time when happens unusual conditions during the process
- lamp parts of the rotation, external accessories and paste parts should be regular inspected, such as the emergence of loose and rock, should be reinforced in a timely manner to prevent the accident.
- lamps adopt strong winds to refrigerate, it is easy to accumulate the dust, so you have to clean it weekly especially the cooling air opening, otherwise the dust will plug leading to poor light

2 TECHNOLOGY REFERENCE

Voltage: AC100-260V Frequency: 50Hz/60Hz Consumption: 50W (120W) Lamp: 1W/3W*36pcs LED lamp (R12、G12、B12) Channel: 7CH Mode of control: DMX512, automatic, voice active. Function: Can make magic, color mixed, charming effect Carton size: 540*540*420mm(4pcs) G.W.: 13.5kg Carton size: 820*550*420mm(6pcs) G.W.:20kg

3 Board Instruction

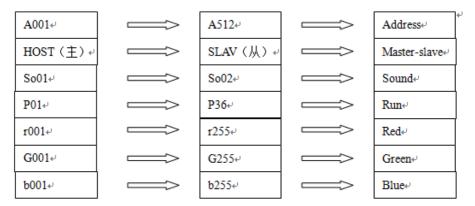

Sound and run process Description:

Sound: So01 - ----- Seven color jumped change So02 -- ---- Seven color strobe transition
Run: P01~P0----- Seven color P08~P10 --- Three color jumped change P11~P13---- Seven color jumped change P14~P20---- Seven kinds of color gradient P21~P27 --- Seven kinds of color gradient strobe P28~P30 --- Three color gradient P31~P33 --- Seven color gradient P34~P36 --- RGB Chase

4 DMX CHANNEL SHEET

Channel	Channel Value	Function	
1channel	0255	R G B Trun ON/OFF	
2channel	0255	Red (0%100%) Green lasting lighted, From dark to bright	
3channel	0255	Green (0%100%) Green lasting lighted, From dark to bright	
4channel	0255	Blue (0%100%) Green lasting lighted, From dark to bright	
5channel	0255	slow to fast	
6channel	05	On CH1-CH5	
	655	Three color jumped change	
	56105	Seven color jumped change	
	106155	Three color gradient	
	156205	Seven color gradient	
	206249	RGB Chase	
	250255	Sound ON	
7channel	0255	Speed(slow to fast)	

 
5 FIXED EQUIPMENT

Please fasten the fixture clamp before hanging. The clamp can be fasten by the little hole in the middle of the bracket, then tie with a safety belt. The loading capacity of the safety belt should be 10 times than the weight of the fixture itself.


6 CONNECTION OF DMX-512 AND CONNETION WITH THE LIGHT EQUIPMENT

Please connect XLR-XLR control wire with every light from the output of DMX.

XLR connection :



ATTENTION: Please do remember to connect one circle circuit plug on the output signal of last equipment. And this circle circuit plug was connected a 1200hm resistance between terminals 2 and 3 of the CANON plug, connect this circle circuit plug can avoid the signal flash phenomena of signal DMX512 during the transmission.

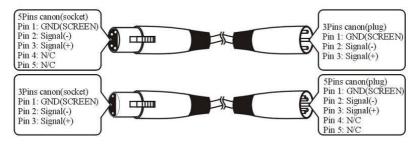


7 Maintenance

Problems	Check list	Trouble Shooting
The fixture do	1. If your power as same as the input	1. Make sure the voltage.
not work	of the machine.	2. Replace the same fuse.
	2. If the fuse was broken.	
LED dimmed	If your power us same as the input	Make sure the voltage
	of the machine	input.
No DMX input	1. If the polarity is opposited in the	1. Correct the DMX
	DMX controller.	polarity.
	2. If it is in DMX mode.	2. Change to the DMX
	3. If there are 2 Master in a loop.	mode.
		3. Set one piece into
		Slave mode.
Par Light Set	1. Check if the serial is correct on	1. Set the right serial No
works	the Par Light display	on the single Par
abnormality		Light

8 AFTER SERVICE

- 1. Our company offer technical consultation to customers for ever.
- 2. If the machine is wrong and need repairmen, please truthfully fill in the related content and feedback us the problems timely, as well as we have to improve the product.
- In addition to the lamp, also matching accessories are as follows:accessories: Power line 1 piece Optional parts: (customers)

Warranty Card

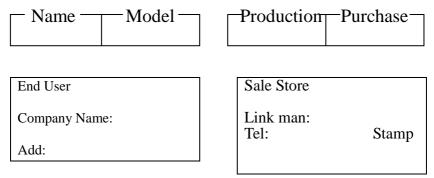

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1 If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.

- 2. The following will be the implementation of paid service:
- (1)Without the effective warranty card
- (2)There's blank, alter and no point-of-sale name
- (3)Fail caused by unresistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7)Fail caused by using the unauthorized control system

Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change any more. Company retains its right to change specifications related when product is improved. Thanks for your understanding.