

# **IHD7210 VDP User's Manual**

V.1.00

## Table of Contents

Caution 3

|  |    |
|--|----|
| Chapter 1 General Introduction.....                            | 3  |
| 1.1 Product Appearance .....                                   | 3  |
| 1.2 Buttons .....  | 4  |
| 1.3 Indicator.....   | 4  |
| Chapter 2 Basic Function Introduction .....                    | 5  |
| 2.1 Main Menu.....   | 5  |
| 2.2 Video Bidirectional Talk Function.....                     | 5  |
| 2.2.1 Bidirectional Talk Function with Management Center ..... | 5  |
| 2.2.2 Video Bidirectional Talk with Door Station.....          | 5  |
| 2.2.3 Bidirectional Talk with VDP .....                        | 5  |
| 2.2.4 Monitoring Function .....                                | 5  |
| 2.2.5 Call Record Function .....                               | 6  |
| 2.2.6 Contacts .....   | 6  |
| 2.3 Alarm Function .....                                       | 6  |
| 2.3.1 Protection Zone Status Function.....                     | 6  |
| 2.3.2 Alarm Recording Function .....                           | 6  |
| 2.3.3 Mode Setup .....   | 7  |
| 2.4 Info Search Function.....                                  | 7  |
| 2.5 System Setup Function.....                                 | 7  |
| 2.5.1 User Setup.....  | 7  |
| 2.5.2 Project Setup .....                                      | 8  |
| 2.5.3 Product Introduction.....                                | 8  |
| 2.6 Unlock Function .....                                      | 8  |
| 2.7 Arm/Disarm Function .....                                  | 8  |
| 2.8 Screen Calibration Function.....                           | 8  |
| Chapter 3 Technical Specifications.....                        | 9  |
| Chapter 4 Device Interface Instruction.....                    | 9  |
| Chapter 5 Device Installation Guide.....                       | 11 |
| Chapter 6 FAQ .....  | 11 |

# Caution

- All installation and operation here should conform to your local electrical safety codes.
- We assume no liability or responsibility for all fires or electrical shock caused by improper handling or installation.
- We are not liable for any problems caused by unauthorized modifications or attempted repair.
- The device should be installed in a cool, dry place away from direct sunlight, inflammable, explosive substances, etc.

## 1 General Introduction

### 1.1 Product Appearance

The product shown is based on this manual. See figure 1-5.

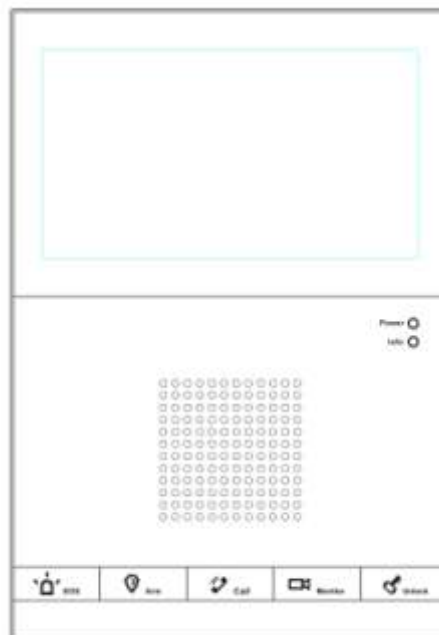


Figure 1- 1 IHD7210

### 1.2 Buttons



Figure 1- 2

The buttons are illustrated in Figure 1- 2. Their descriptions are shown in Chart 1- 1. Button locations may vary, but the function of the buttons with same label is identical.

| No. | Name        | Description   |
|-----|-------------|---|
| 1   | SOS         | Emergency calling management center   |
| 2   | Arm or Menu | Press the button to enter arm/disarm interface or return to main menu.  |
| 3   | Call        | Press the button when being called, you can answer the call; press the button during a call, you can hang it up.    |
| 4   | Monitor     | Monitor door station video streams.   |
| 5   | Unlock      | Press this button during incoming calls, outbound calls, and monitoring. You can unlock corresponding door station. |

Chart 1- 1

### 1.3 Indicator

The indicators are illustrated in Figure 1-7.

 


Figure 1- 7 IHD7210

Some 7” digital VDP only have power and info indicators, and their shapes vary among different models. Please see Chart 1- 2.

| No. | Name  | Description  |
|-----|-------|--|
| 6   | Power | Power works as usual, light on;  |
| 7   | Info  | When there is unread call events, alarm info or announcements, light turns on; otherwise light is off; |
|     |       |  |
|     |       |  |

Chart 1- 2

# Chapter 2 Basic Function Introduction

## 2 Basic Function Introduction

### 2.1 Main Menu

This product main menu consists of four menus, as video bidirectional talk, alarm, info search, system setup: in main menu, upper-left corner is network connection, main door station connection, DND setup and other status info, middle portion is current time(month, day, week and time), lower-right corner is arm/disarm button which allows selection between arm and disarm.

### 2.2 Video Talk Bidirectional Talk Function

#### 2.2.1 Bidirectional Talk Function with Management Center

Under all interfaces, press SOS button or “call management center” icon, VDP will switch to “calling management center” status, and a message will say “You are calling management center” with corresponding beep. When call is answered, bidirectional talk begins. You may end call by pressing SOS button again and VDP will return to standby interface.

When management center calls VDP, VDP will ring. You may press call button or “answer” icon to answer call. You may end call by pressing call button again, and VDP will return to standby interface.

#### 2.2.2 Video Bidirectional Talk with Door Station

When door station calls VDP, VDP will ring and display video from door station. You may press call button or “answer” icon to answer call and achieve bidirectional talk with the door station. While VDP is displaying video from door station, you may end call and video by pressing call button or “end” icon and VDP will return to standby interface.

#### 2.2.3 Bidirectional Talk with VDP

Click to enter “video bidirectional talk”→ “call resident”, input the resident’s room number (i.e. Room 101, Unit 1, Building 1, and input 1-1-101. For VDP in current unit, only room NO. is required), click “call” icon (handset icon). The device will be in status of calling corresponding VDP, and the page displays “You are calling XX-X-XXXX” with beeps. When the residents answer, bidirectional talk is enabled. You may end call and video by pressing call button or “end” icon. VDP will return to standby interface.

#### 2.2.4 Monitoring Function

Under standby interface, press monitor button or under “video bidirectional talk” status press “monitor”, and VDP will displays video from door station. Under monitoring interface, you

may switch to next video from door station since the device support 8-ch videos at the same time with 1 large window and 7 small windows.

You may turn it off by pressing monitor button again and VDP will return to standby interface.

### **2.2.5 Call Record Function**

Under “video bidirectional talk” status click “call record”, you will see missed calls, received calls, and dialed calls, which include information of caller and time. You may go to different pages of records. You also may call, save, delete or delete all callers.

### **2.2.6 Contacts**

Under “video bidirectional talk” status click “call resident”, you may enter contacts by clicking contacts icon (on the right of call box). The interface includes information of saved VDP info which allows direct operation to call, add, edit, delete and delete all. You may add by clicking blank or add button to add resident info. You may edit resident info by selecting saved info and click edit button.

## **2.3 Alarm Function**

This product can be connected to up to 8 channels alarm with 1st channel as SOS button, 2nd channel as gas alarm, 3rd channel as smoke alarm while the remaining 5 channels can be flexibly set.

Under sub-menu there is information of protection zone status, alarm records and mode setup.

### **2.3.1 Protection Zone Status Function**

This device mainly displays information of protection zone type, current status, and delay time for the 8 protection zones. Users may enter setup interface of protection zone by clicking setup button (password required), and can set contents such as protection zone type, NO/NC, alarm type, enter delay, exit delay. For 1<sup>st</sup> to 3<sup>rd</sup> channels therein, users can only set NO/NC type; for the remaining 5 channels, users can set all, while protection zone types consist of IR, gas, smoke, SOS, door sensor, theft alarm, tripwire. Enter and exit time can be set to 0s, 10s, 30s, 60s, 90s and 120s. Delay is available only with delay alarm setup.

Users can make bypass and delete each protection zone, or make the selected protection zone invalid once or for longer period.

### **2.3.2 Alarm Recording Function**

Alarm recording mainly records information of the time alarm happens, protection zone NO., alarm processed or not. The alarm info will be updated to management platform synchronously.

When alarm happens in any protection zone, there will be a 15s beep locally with alarm interface pops up.

### **2.3.3 Mode Setup**

Alarm of this product consists of away mode, in mode, sleep mode, and user mode. You may set each mode to on/off separately for each protection zone. Default setup are as follows:

Away mode: 1-8 channels all on;

In mode: 1-3 channels on, others off;

Sleep mode: 1-5 channels on, others off;

User mode: all off.

## **2.4 Info Search Function**

After VDP receives messages (announcement) sent from platform, light turns on. Under “info search” click “announcement”, you may view announcements ranked by title and time. If you select one announcement and click search, you may view details of the selected announcement.

## **2.5 System Setup Function**

System setup function includes user setup, project setup, and product introduction.

### **2.5.1 User Setup**

User setup includes password setup, display setup, bidirectional talk setup, DND setup, restore default settings, a touch screen sound button plus touch screen clean button setup.

1. Password setup: includes passwords for user, arm, disarm with default 123456 and anti-attack password with default 654321.

2. Display setup: includes brightness (1-9), screensaver waiting time (from 30s to 1800s with every 30s as an interval).

3. Ring setup: ring selection for incoming call (.pcm format), alarm ring selection (.pcm format), volume (0-10).

4. Bidirectional talk setup:

Door station ring duration (15s, 30s, 45s, 60s, 90s, 120s, adjustable);

VDP ring duration (15s, 30s, 45s, 60s, 90s, 120s, adjustable);

Door station call duration (15s, 30s, 45s, 60s, 90s, 120s, adjustable);

VDP call duration (5min, 10 min, 15 min, 30 min, 45 min, 60 min, adjustable);

Monitoring duration (15s, 30s, 60s, 90s, 120s, 180s, 300s, adjustable);

5. DND setup: select from 0 hour (0H), 1 hour (1H), 2 hours (2H), 4 hours (4H), 8 hours (8H) and 24 hours (24H) to block out local ring.

6. Restore default settings: restore all user settings to default.

7. Touch screen sound button: may select to have sound or not when you touch screen.

8. Touch screen clean button: after you turn on this option, the screen will be off in 45s which allow you to clean it up with a piece of dry cloth. 45s later, the screen will resume to

normal status. You may exit anytime during the 45s by pressing unlock button.

### **2.5.2 Project Setup**

This setup includes device info, network terminal, restore default settings.

1. Device info: includes room number, IP address, subnet mask, default gateway, MAC address, and version info.
2. Network terminal: includes door station name, device type, door station ID (manufacture use only), door station IP address, network port number, working status. You may edit each item by clicking it (a numeric keyboard pops up). After you complete setup, click the OK button on numeric keyboard.
3. Restore default settings: restore all project settings to default.

### **2.5.3 Product Introduction**

This section mainly introduces product function and problems you may encounter during usage.

## **2.6 Unlock Function**

Under incoming call from door station, call with door station and VDP monitoring door station, press unlock button to remotely unlock door.

## **2.7 Arm/Disarm Function**

Under arm/disarm status, click arm button at the lower right corner of main menu, and then select 1 from the 4 modes available (away, in, sleep and user mode). The password box pops up, and you need to input password for arming. System will enter arming status after delay ends. If you select instant arming, system will enter arming right after sound stops.

Under arm status, click disarm button at the lower right corner of main menu and password box pops up. You need to input password for disarming. If you input correct password, the system will disarm; if you input incorrect password, you will see a message saying "incorrect password, please try again".

## **2.8 Screen Calibration Function**

This product screen was calibrated before shipped out. If you cannot activate icons on screen when you touch it, please press unlock + arm/menu, and the product will enter screen calibration interface. Following the cursor, click on the 5 cursors in sequence to complete screen calibration. Once you have done, system will say screen calibration succeeds.



# Chapter 3 Technical Specifications

## 3 Technical Specifications

Technical specifications are as follows; please see Chart 3- 1.

| Model                      | IHD7210   |
|----------------------------|---|
| <b>System</b>              |   |
| Main Processor             | Built-in microcontroller  |
| Operating System           | Built-in LINUX system   |
| <b>Video</b>               |   |
| Video Compression Standard | H.264   |
| Video Resolution           | 800x480   |
| <b>Audio</b>               |   |
| Input                      | All-direction microphone  |
| Output                     | Embedded loudspeaker  |
| Bidirectional Talk         | Support bidirectional talk  |
| <b>Display</b>             |   |
| Screen Dimension           | 7 inch TFT full real color  |
| <b>Operating Mode</b>      |   |
| Input                      | Mechanical button (SOS, arm/menu, call, monitor, unlock), touch screen technology |
| <b>Alarm</b>               |   |
| Alarm Input                | Support 8 channels alarm input  |
| <b>Network</b>             |   |
| Ethernet                   | 10M/100Mbps auto adapt  |
| Networking Protocol        | TCP/IP  |
| <b>Specifications</b>      |   |
| Power                      | DC 10~15V or IHS1030 (switch)   |
| Power Consumption          | Standby ≤1.5W ; Working ≤7W   |
| Working Environment        | -10℃~+60℃   |
|                            | 10~90%RH  |
| Dimensions                 | 261mm*92mm*25mm (L*W*H)   |
| Weight                     | 1.0 kg  |

Chart 3- 1

# 4 Device Interface Instruction

The device interface is shown as follows, please see Figure 4- 1.

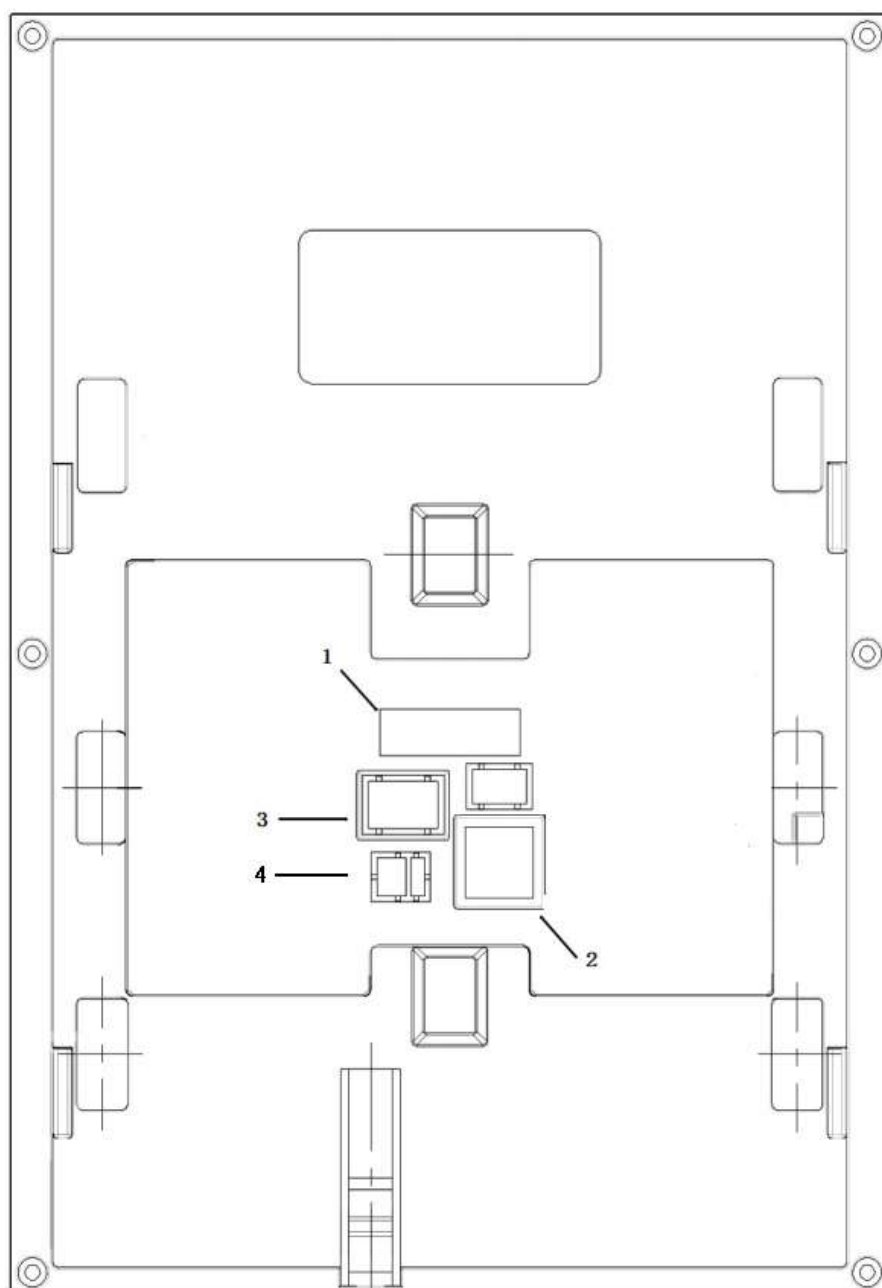


Figure 4- 1

Please see Chart 4- 1.

| No. | Name               | Description   |
|-----|--------------------|---|
| 1   | Alarm Interface    | 8-ch alarm, please see tag for details                          |
| 2   | Communication Port | May directly connect to network cable or via corridor exchanger |
| 3   | Handset Interface  | Only models with earphone have this interface.                  |
| 4   | Power Interface    | Connect to 2-pin with 3.81 mm interface, 12V power              |

Chart 4- 1

# 5

## Device Installation Guide

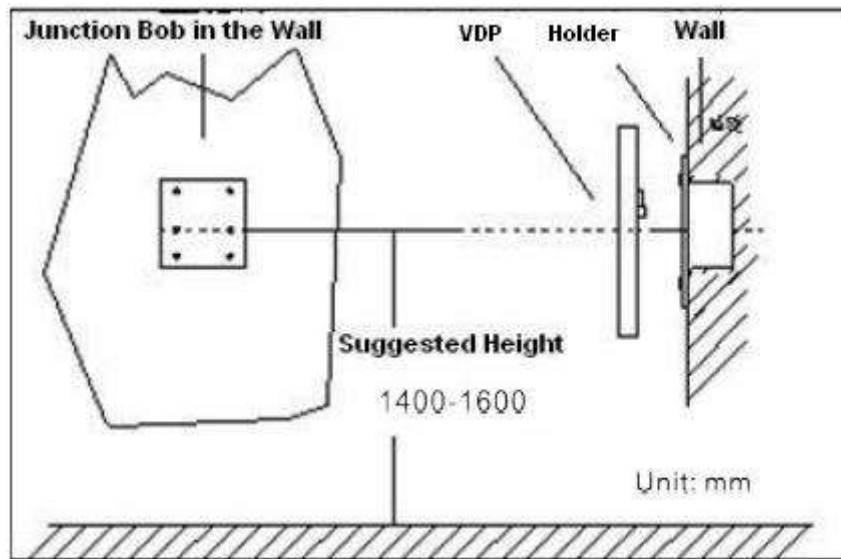


Figure 5- 1

- (1) Try to avoid exposing the VDP to harsh environments, such as condensation, high temperature, grease, dust, corrosion, direct sunlight, etc.
- (2) If there is abnormality after you plug in, you should unplug it immediately and unplug the device from power supply. You may plug in the device to power supply after troubleshooting.
- (3) Device installation and test must be done by professional staff. If there is any malfunction or failure, please do not try to dismount or fix it by yourself, and please contact after-sales support department for assistance.

Please refer to Figure 5- 1 as a guide.

# 6

## FAQ

- Q: The screen on VDP is black, and the indicator remains off, what should I do?  
A: Check the connection for power. Assure power source is correct.
- Q: I cannot call or monitor via the VDP, what should I do?  
A: Check the connection of network cable, and confirm if the corresponding door station is working as properly.
- Q: When there is a incoming call from door station, the ringer is not working. Why?  
A: Confirm that DND (Do Not Disturb) is not enabled.
- Q: I have other problems, what should I do?  
A: Please contact our technical staff for further assistance.

**Note:**

- **This manual is for reference only. Slight difference may be found in user interface.**
- **All the designs and software here are subject to change without prior written notice.**
- **All trademarks and registered trademarks are the properties of their respective owners.**
- **If there is any uncertainty or controversy, please refer to the final explanation of us.**
- **Please visit our website or contact your local service engineer for more information.**