



Let Us Help You!

# Azure Control Panel User's Manual

Newport Controls, LLC  
2201 Alton Parkway  
Irvine, CA 92606

Revision Date: 03.27.2012      Page 1 of 41

technicalsupport@newportcontrols.com      949-442-4260      www.newportcontrols.com

© 2012 Newport Controls, LLC. All Rights Reserved.      7909-0001      Revision: C




## Table Of Contents

Quick Start Guide .....	Page 3
Shortcut Mode System Control .....	Page 3
Navigation Mode System Control .....	Page 4
Setting Up Your Spa Control System .....	Page 5
Invert The Screen .....	Page 5
Set The Heating Mode .....	Page 6
Set The Filter Cycles .....	Page 7
Turn On The Information Slideshow .....	Page 9
Set Fahrenheit Or Celsius .....	Page 10
Set Reminder Messages .....	Page 10
Set The Language .....	Page 11
Lock The Control Panel .....	Page 12
Lock The Water Temperature .....	Page 13
Set Over Temperature .....	Page 14
Set Time And Date .....	Page 15
Read the Event Log .....	Page 18
Change Shortcut Mode Screens .....	Page 18
Set Water Temperature .....	Page 19
Help With Messages And Maintenance .....	Page 21
Control Your LED Spa Light (Optional Equipment) .....	Page 23
Control Your Audio Volume (Optional Equipment) .....	Page 24
Set Your Moods (Azure i600 Panel Only) .....	Page 25
Set Your Wellness Timers (Azure i600 Panel Only) .....	Page 28
Your Entertainment, Games and Photos .....	Page 33
Play Your Music (Azure i400 & i600 Panels Only) .....	Page 33
Watch Your TV (Azure i400 & i600 Panels Only) .....	Page 34
Play Your Games (Azure i600 Panel Only) .....	Page 37
View Your Photos (Azure i600 Panel Only) .....	Page 38
IMPORTANT SAFETY INSTRUCTIONS .....	Page 41



Welcome To A New Dimension In Spa Control Systems.

### Quick Start Guide - You can use your Smart Control two ways:




(1) Single Button Touch in the **Shortcut Mode** to turn a function On or Off, like a Pump, Blower, or Light, without any navigation or additional steps. (2) **Navigation Mode** where you utilize the full opportunities on the Full Color Screen. In the Navigation Mode, you can immediately return to the Shortcut Mode by Touching the **Back**  Button, or automatically return to Shortcut Mode if you don't touch a button for 15 seconds.

This Section of the **Control Panel User's Manual** is intended to be a **Quick Start Guide** to get you started in Navigating the Newport Controls Control Panel Menu System. Although this Guide illustrates the **Azure i400** Control Panel, the principles are the same for the **Azure i600** and **Azure i200** Control Panels.

### Shortcut Mode System Control

The Key to the **Button Functions** is on Screen.








When the Shortcut Button Icons with the Button Functions are displayed on screen, the System is in **Shortcut Mode**, and All of the buttons Except the **Select**  Button and the **Back**  Button can be used to Directly Control the System equipment and other functions. A Yellow Icon  on the Screen indicates that the Function is turned On.

The  Button is the Jet **Pump 1** Control Button.

The  Button is the Spa **Light** Control Button.


The  Button is the Water **Temperature** Control Button.

The  Button is the **Invert** Display Screen Button.

The  ,  ,  , and  Buttons are the Option 2, 3, 4, and 5 Control Buttons as defined on the Screen, which may be the Air **Blower**, Jet **Pump 2**, Jet **Pump 3**, another **Light**, or other Option. The **Azure i600** Control Panel also has an Option  Button for additional Control Options.

The  Button is the **Select** Button, and it is used to Change from the Shortcut Mode to the Navigation Mode.

The  Button is the **Back** Button, and it is not used in the Shortcut Mode.

In the Navigation Mode, the **Back**  Button can be used to immediately return to the Shortcut Mode. If you're not at the Home Screen, use the **Back** Button to navigate back to it, and then Touch **Back** again to return to the Shortcut Mode.

## Navigation Mode System Control

The **Settings** Icon on the Home Screen is **Highlighted**.



When the Navigation Icons and the Company Logo are on screen with **Highlighting**, the System is in the **Navigation Mode**, and All of the Buttons Except the Option , , , and  Buttons can be used to Navigate and Select from the Menu System.


The  Button is the Move **Left** Navigation Button.

The  Button is the Move **Right** Navigation Button.



The  Button is the Scroll **Down** or Move **Down** Navigation Button.

The  Button is the Scroll **Up** or Move **Up** Navigation Button.

The  Button is the **Select** Button, and it is used to Select a Menu Item, or turn a Menu Item On or Off.



The  Button is the **Back** Button, and it is used to go back one level in the Menu System. From the Navigation Mode Home Screen, the Back Button is also used to immediately Change to Shortcut Mode.

The , , , and  Buttons continue to operate as the Option 2, 3, 4, and 5 Control Buttons in the Navigation Mode. The **Azure i600** Control Panel also has a  Button which is another Option Button in the Navigation Mode.

When Navigating the Menus, if the Yellow Highlighted Menu Bar you are on has an Arrow at the Right End of the Menu Bar, use the **Right**  Button to Navigate to the Next Menu, and use the **Back**  Button to Return to the Previous Menu.



Use the **Up**  Button to Scroll Up to the next Menu Bar Above, or use the **Down**  Button to Scroll Down to the next Menu Bar Below.

If the Blue Area at the Bottom of the Menu says **More** and has Arrows pointing Down and/or Up, as indicated, use the **Down**  Button to Scroll from the Bottom Menu Bar to the Next Menu, or the **Up**  Button to Scroll from the Top Menu Bar to the Previous Menu.



## Setting Up Your Spa Control System

This Section of the **Control Panel User's Manual** provides more Detailed Instructions for properly Setting Up and Configuring your Spa Control System. Although this Guide illustrates the **Azure i400** Control Panel, the principles are the same for the **Azure i600** and **Azure i200** Control Panels.

All of the initial Spa Control System Options and Settings, like Time and Date, Filter Cycles, Heating Mode, and Language, are located in the **Settings** Menu.


The **Settings** Icon on the Home Screen is **Highlighted**.



In the **Navigation Mode**, with the Navigation Icons on Screen and **Settings** **Highlighted**, Touch the **Select**  Button to open the **Settings** Menu.

The **Invert Screen** Menu Bar is **Highlighted**.



**Invert the Screen** - To Invert the Screen in **Navigation Mode**, Touch **Select**  when the **Invert Screen** Menu Bar is **Highlighted**. When the Screen is Inverted, the Navigation Buttons are also Inverted, so that the **Up** and **Down** Buttons are switched with each other and the **Left** and **Right** Buttons are switched with each other. The **Back** Button does not change position. The Screen and Navigation Buttons are Uninverted the same way as they are Inverted.

Invert (Continued)

The Screen and Buttons are **Inverted**.



**Set the Heating Mode** - The Heating Mode determines when the Heater will heat and how the Water Temperature will be maintained. The Details are on the Set Menu.

The Heating Mode Menu Bar is **Highlighted**.



From the **Heating Mode** Menu Bar, Move **Right**  to the **Heating Mode** Menu.

The **Economy** Menu Bar is **Highlighted**.



The Default Heating Mode is the **Standard** Mode. To change Heating Modes, from the **Heating Mode** Menu Bar, Move **Right**  to the **Heating Mode** Set Menu.

The **Economy** Heating Mode is turned On.



To change to this Heating Mode, Touch **Select** , or to Exit back, Touch **Back** .

**Set the Filter Cycles** - The Filter Cycles determine when the Filter Pump will turn On to Filter the Water. The Default is two 2 hour Filter Cycles every day of the week, 12 hours apart. You can Set up to four Filter Cycles on any days of the week, and with any Start Time and End Time you want.

The Filter Cycle Days and Time also determine when the Heating will take place in the **Economy** and **Vacation** Heating Modes. In these Modes, the Heater will only operate during the Filter Cycle Filtration times, and will not operate between Filter Cycles.


The **Filter Cycles** Menu Bar is **Highlighted**.



From the **Filter Cycles** Menu Bar, Move **Right**  to the **Set Filter Cycles** Menu.


The **Filter Cycle 1** Menu Bar is **Highlighted**.



By Default, **Filter Cycle 1** is On and Preset. To Change the Days and Time for **Filter Cycle 1** or to Set or Modify other Filter Cycles, scroll to **Highlight** the Filter Cycle, then Move **Right**  to the **Filter Cycles Set** Menu.

The **Filter Cycle 1** Menu Bar is **Highlighted**.



To turn On (Enable) or turn Off (Disable) a Filter Cycle, with **Filter Cycle 1** **Highlighted**, Touch **Select** . If the Filter Cycle is Set to Off, the System ignores the Days and Times Set, and the Filter Cycle is Disabled.

Filter Cycles (Continued)

The  
**Timer Days**  
Menu Bar  
is **Highlighted**.



To Set the Days for the Filter Timer to Operate, from the **Timer Days** Menu Bar, Move **Right**  to the **Timer Days** Menu.

The **S** For  
**Sunday** is  
**Highlighted**.



By Default, all days of the week are turned On. To turn a day Off or On, Move **Left**  or **Right**  to that day and Touch **Select** . Touch **Back**  to Exit back to the previous Menu.

The  
**Start Time**  
Menu Bar  
is **Highlighted**.



To Set the Filter Timer Start Time, from the **Start Time** Menu Bar, Move **Right**  to the **Start Time** Menu.

The **Hour**  
is **Highlighted**.



To change the Filter Timer Start Time, Move **Left**  or **Right**  to Hours or Minutes, and then Touch **Up**  or **Down**  to change the Time. Touch **Back**  to Exit back to the previous Menu.



## Filter Cycles (Continued)

The **End Time** Menu Bar is **Highlighted**.




To Set the Filter Timer **End Time**, from the **End** Menu Bar, Move **Right**  to the **End Time** Menu.

The **Hour** is **Highlighted**.



To change the Filter Timer **End Time**, Move **Left**  or **Right**  to Hours or Minutes, and then Touch **Up**  or **Down**  to change the Time. To Exit back, Touch **Back** .

**Turn On The Information Slideshow** - The Information Slideshow can be turned On to display a Slideshow that has been provided by the Spa Manufacturer or Dealer. If the Information Slideshow is turned On, it will stay On until the **Back**  Button is Touched or until the Display turns Off.

The **Info Slideshow** Menu Bar is **Highlighted**.



To turn the **Information Slideshow** On, from the **Info Slideshow** Menu Bar, Touch **Select** . The **Information Slideshow** will Start.

Info Slideshow (Continued)

The **Info Slideshow** is Displayed on the Screen.




Touch **Back**  to End the **Information Slideshow** and Exit back to the previous Menu.

**Set Fahrenheit or Celsius** - Your Water Temperature can be Set to display in either Degrees Fahrenheit or Degrees Celsius. The Default is Degrees Fahrenheit.

The **°F/°C** Menu Bar is **Highlighted**.



To toggle back and forth between **°F** and **°C** Temperature display, from the **°F/°C** Menu Bar, Touch **Select** . Fahrenheit will be displayed in one degree increments, and Celsius will be displayed in one half degree increments.

**Set Reminder Messages** - The Reminder Messages Pop-Up periodically to Remind you to perform the Normal Maintenance required for your Spa. They are all set to Pop-Up at various intervals from 7 Days to 1 Year, but you can change any of them.

The **Reminders** Menu Bar is **Highlighted**.



From the **Reminders** Menu Bar, Move **Right**  to the **Set Reminders** Menu.

Reminders (Continued)



The **Check pH** Menu Bar is **Highlighted**.



To Set a Reminder Message, Scroll to the desired Message you want to change or turn off, then Move **Right**  to the **Set Reminders** Menu.

The **7 Days** Menu Bar is **Highlighted**.



To turn the Pop-Up Reminder Message interval Off or On, Touch **Select** . To change to a different interval, scroll to the desired interval and Touch **Select**  to turn it On. If there are no intervals Set to On, the Message will never Pop-Up.

When a Pop-Up Reminder Message appears on your Screen, you can Touch any Button to return to the previous Screen.

**Set the Language** - The Default Language is English, but you may have other Languages available on your Spa. If your desired Language is not Listed on the Language Menu, it may be available from your Spa Manufacturer.

The **Language** Menu Bar is **Highlighted**.




To Set your desired Language, from the **Language** Menu Bar, Move **Right**  to the **Language** Menu. All Installed Languages will be shown on the **Language** Menu.

Language (Continued)

The **English** Menu Bar is **Highlighted**.



Scroll down through the **Language** Menu to see which Languages are available on your Spa. To change to a different **Language**, Scroll to the desired Language, then Touch **Select**  to turn it On.

The **Change Language** Message is on the Screen.



To Change to the new **Language**, turn Off the Power to the Spa, and then turn the Power back On. After the Software is loaded, the new **Language** will be displayed for all Text on the Screen.

**Lock the Control Panel** - You can Lock the Control Panel so that none of the Panel Buttons operate. When the Panel is Locked, the only User Input the System will recognise is the Unlock Code Sequence.

The **Panel Lock** Menu Bar is **Highlighted**.



To Lock the Control Panel, From the **Panel Lock** Menu Bar, Touch **Select** .

Panel Lock (Continued)

**Panel Lock**  
Message is  
on the Screen.



The **Panel Lock** Message appears on the Screen for a few seconds after the Panel is Locked, and then it goes back to the Home Screen. To Unlock the Control Panel, you Must Touch **Select - Select - Up** (Select icon) (Select icon) (Up icon) while the **Panel Lock** Message is Displayed on the Screen. Touch a **Shortcut Button** to Display the Message again.

**Lock the Water Temperature** - You can Lock the Temperature Adjustment so that the Water Set Temperature cannot be changed. When the Temperature is Locked, you cannot change the Temperature with the **Temp** (Temp icon) Button, and you cannot change the Temperature on the Water Temperature Screen in Navigation Mode.

The **Temp Lock**  
Menu Bar  
is **Highlighted**.



To Lock the Water Temperature, From the **Temp Lock** Menu Bar, Touch **Select** (Select icon).

**Temp Lock**  
Message is  
on the Screen.



The **Temp Lock** Message appears on the Screen after the Temperature is Locked. To Exit the Message, Touch **Back** (Back icon) or **Select** (Select icon). To Unlock the Control Panel, you Must Return to the **Temp Lock** Menu Bar, and Touch **Select** (Select icon) to turn it Off.

**Set Over Temperature** - If you want a temporary Water Set Temperature higher than 104°F, you Must Set it in the Over Temp Menu. Underwriters Laboratory requires this type of Control because the Consumer Product Safety Commission has determined that soaking in Water Temperatures above 104°F can sometimes be Dangerous.


The **Over Temp** Menu Bar is **Highlighted**.



To Increase the Water Set Temperature to 105°F or 106°F, From the **Over Temp** Menu Bar, Move **Right**  to the **Over Temp** Menu.


The **Over Temp WARNING** Message is on the Screen.



You must confirm your intention to temporarily Set a Water Temperature higher than 104°F. Touch **Select**  to continue to the **Over Temp** Menu to raise the Water Temperature above 104°F.

The **Set Temp 105°F** Menu Bar is **Highlighted**.




Scroll to the desired Water Set Temperature and Touch **Select**  to Set that Water Temperature. The Water will be Heated to the selected Set Temperature one time. You will have to come back to the **Over Temp** Menu to raise it above 104°F again.

Over Temp (Continued)


The **Heating To 105°F WARNING** Message is on the Screen.



You must confirm your intention to temporarily Set the Water Temperature to 105°F or 106°F. Touch **Select**  to continue to raise the Water Temperature to 105°F or 106°F.

The **Over Temp Is Turned On WARNING** Message is on the Screen.



You must confirm that you understand that the Water is being Heated to a Temperature higher than 104°F. Touch **Select**  to turn Off the Warning Message.

**Set Time and Date** - Once you Set the Current Time of Day, Day of the Week, and Calendar Date, it will be maintained in System Memory, and it should not have to be Set again except for Daylight Savings Time changes. The Calendar Date is only used for the **Event Log** which is maintained in the **Service** Menu. Only the Time of Day and Day of the Week are used for Setting Filter Cycles and other Timers.

You also have a choice of regular 12 Hour Time Display with AM and PM, or 24 Hour Military Time.

The **Set Time & Date** Menu Bar is **Highlighted**.



From the **Set Time & Date** Menu Bar, Move **Right**  to the **Set Time & Date** Menu.

Time & Date (Continued)

The **Set Time** Menu Bar is **Highlighted**.



To Set the Time of Day, from the **Set Time** Menu Bar, Move **Right** to the **Set Time** Menu.

The **Hour** is **Highlighted**.



To change the Time of Day, Move **Left** or **Right** to Hours or Minutes, and then Touch **Up** or **Down** to change the Time. To Exit back, Touch **Back**.

The **Set Day** Menu Bar is **Highlighted**.



To Set the Day of the Week, from the **Set Day** Menu Bar, Move **Right** to the **Set Day** Menu.

The **S** For **Sunday** is **Highlighted**.



To change the Current Day of the Week to a different Day, Move **Left** or **Right** to that day and Touch **Select**. Touch **Back** to Exit back and Set the **Date**.



Time & Date (Continued)

The **Set Date** Menu Bar is **Highlighted**.




To Set the Calendar Date, from the **Set Date** Menu Bar, Move **Right**  to the **Set Date** Menu.



To Set the Calendar Date, Move **Left**  or **Right**  to Month, Day, or Year, and then Touch **Up**  or **Down**  to Set the Date. To Exit back, Touch **Back** .

The **24 Hour** Menu Bar is **Highlighted**.



To turn **24 Hour** Clock Time Display On or Off, from the **24 Hour** Menu Bar, Touch **Select** . When 24 Hour Clock Display is turned On, the Clock will read 1 - 24 Hours rather than 1 - 12 Hours with AM and PM.

**Read the Event Log** - The Spa **Event Log** has a List of any significant incidents the Spa has experienced, along with the Month, Day, and Hour the incident occurred.

The **Event Log** Menu Bar is **Highlighted**.



From the **Event Log** Menu Bar, Move **Right**  to the **Event Log** Menu.

Two **Events** are Listed on the Screen.



Scroll **Up**  or **Down**  to the other **Event Log** Pages to View other Spa Events. Then Touch **Back**  to Exit back to the **Settings** Menu.

**Change Shortcut Mode Screens** - There two different **Shortcut Mode Screens** available. The first Screen is the **Button Legend** Screen which is a full Display with Time, Water Temperature, Information Icons, and a Legend to identify the Function of all of the Shortcut Buttons, and to show if the Spa Equipment is turned On or Off. The Second Screen is the **Time & Temp** Screen which is a simplified Display that only displays a Large Time and Water Temperature.

The **Shortcut Screen** Menu Bar is **Highlighted**.



From the **Shortcut Screen** Menu Bar, Move **Right**  to the **Shortcut Screen** Menu.

Shortcut Screens (Continued)

The **Button Legend** Menu Bar is **Highlighted**.



Scroll to the desired **Shortcut Screen** and Touch **Select** (right arrow) to turn On that Shortcut Mode Screen. Then Touch **Back** (back arrow) a couple of times to Exit back to the new Shortcut Mode Screen.

**Set Water Temperature** - The Water Set Temperature is the Water Temperature that the Spa Heater will maintain in your Spa. It can be Set in either **Shortcut Mode**, directly with a Button Touch, or in the **Navigation Mode** from the **Controls** Menu.

**Shortcut Mode** - Set by using the **Temperature Control** (temperature icon) Button.

The Key to the **Button Functions** is on screen.



In the **Shortcut Mode**, with the Key to the Button Functions on Screen, Touch the **Temperature Control** (temperature icon) Button to open the **Set Temperature** Menu.

The **Water Temperature** is now Set to **100°F**.



On the **Set Temperature** Menu, Touch the **Up** (left arrow) and **Down** (right arrow) Buttons to Raise or Lower the Water Set Temperature 1°F. Touch **Left** (fan icon) to go to the Lowest Set Temp of 70°F, or Touch **Right** (lightbulb icon) to go to the Highest Set Temp of 104°F. Then Touch **Back** (back arrow) to Exit. To Set a Temperature higher than 104°F, see “**Set Over Temperature**”.

**Navigation Mode** - Set by Navigating to the **Controls** Menu.

The **Controls** Icon on the Home Screen is **Highlighted**.



In the **Navigation Mode**, with the Navigation Icons on Screen and **Controls** **Highlighted**, Touch the **Select**  Button to open the **Controls** Menu.

The **Exit** Icon is **Highlighted**.



To Set the Water Temperature, Move **Left**  and **Up**  to the **Temp** Icon.

The **Temp** Icon is **Highlighted**.



With the **Temp** Icon **Highlighted**, Touch **Select**  to open the **Set Temperature** Menu.

The **Water Temperature** is now Set to **100°F**.



Touch the **Up** , **Down** , **Left** , and **Right**  Buttons to Raise or Lower the Water Set Temperature. Then Touch **Back**  to Exit.

**Help with Messages and Maintenance** - Help is available for various Pop-Up Messages you may see on the Screen, and for day to day Spa Maintenance.

The **Help** Icon on the Home Screen is **Highlighted**.



With the Navigation Icons on Screen and **Help Highlighted**, Touch **Select**  to open the **Help** Menu.

The **Messages** Menu Bar is **Highlighted**.



For Help with the **Messages**, from the **Messages** Menu Bar, Move **Right**  to the **Messages** Menu.

The **Heater May Be Dry** Menu Bar is **Highlighted**.



From the desired **Messages** Menu Bar, Move **Right**  to View that Pop-Up Message.

The **Heater May Be Dry** Help is on the Screen.



For **More Help** on that Message, Move **Right** , or Touch **Back**  to Exit Back.

Message Help (Continued)

More **Heater May Be Dry** Help is on the Screen.



Touch **Back**  to Exit Back to the Previous Menus.

The **Maintenance** Menu Bar is **Highlighted**.



For Help with **Maintenance**, from the **Maintenance** Menu Bar, Move **Right**  to the **How To** Menu.

The **Check pH Level** Menu Bar is **Highlighted**.



From the desired **How To** Menu Bar, Move **Right**  to View that **How To** Message.

**Check pH Level** Help is on the Screen.




Touch **Back**  to Exit Back to the Previous Menus.

**Control Your LED Spa Light (Optional Equipment)** - If you have an Optional LED Spa Light that is Controllable, then you can select from five different LED Light Colors or three different LED Light Shows. Whatever Light Color or Light Show you have selected last will be turned On the next time you turn On the LED Spa Light.

The Key to the **Button Functions** is on Screen.



In **Spa Shortcut Mode** with the Shortcut Button Icons and the Button Functions on the Screen, Touch the **Light**  Button to turn On the LED Spa Light and open the **LED Light Control** Menu.

The **White** **Light** Color Menu Bar is Highlighted.



The Default LED Spa Light selection is **White Light** the first time it is turned On after the Spa has been Powered On, and the **White Light** Menu Bar is Highlighted. Scroll **Up**  to Move to and select a different LED Light Color.

The **Green** **Light** Color Menu Bar is Highlighted.



For example, with the **Green Light** Menu Bar Highlighted, you can Touch **Select**  to change to the **Green Light** Color.

LED Light (Continued)

The **Slow Color Show** Menu Bar is Highlighted.



Scroll **Down** (down arrow icon) to Move to and select one of the three LED Light Shows. For example, with the **Slow Color** Light Show Menu Bar Highlighted, you can Touch **Select** (right arrow icon) to change to the **Slow Color** Show. Touch **Back** (left arrow icon) to Exit Back to the **Spa Shortcut Mode** Screen, or the **LED Light Control** Menu will Auto Exit in a few seconds.

**Control Your Audio Volume (Optional Equipment)** - If you have an Optional Entertainment Audio **Volume Control**, then you can Raise or Lower your Entertainment Audio Volume. Whatever Volume Level you selected last will be selected the next time you Open the Audio **Volume** Control Menu.

The Key to the **Button Functions** is on Screen.



In **Spa Shortcut Mode** with the Shortcut Button Icons and the Button Functions on the Screen, Touch the Audio **Volume** (speaker icon) Button to open the **Volume** Control Menu.

The Audio **Volume Level** Bars are in the **Green** area.



The Audio **Volume** Level Menu is Open, indicating the Volume Level. The **Green** Volume Level Bars indicate a **Medium** Audio Volume Level.



Volume (Continued)



The Audio **Volume Level** Bars are in the **Red** area.



Touch the **Up**  Button to Raise the Audio Volume Level. The Red Volume Level Bars indicate a **High** Audio Volume Level.

The Audio **Volume Level** Bars are in the **Yellow** area.



Touch the **Down**  Button to Lower the Audio Volume Level. The Yellow Volume Level Bars indicate a **Low** Audio Volume Level. Touch **Back**  to Exit Back to the **Spa Shortcut Mode** Screen, or Audio **Volume** Control Menu will Auto Exit in a few seconds.

**Set Your Moods (Azure i600 Panel Only)** - Unique preset Moods can be Modified any way you want them. You can preset Pumps and Speeds, Lights and Levels, and which Device you want playing Music in the Various Moods. Most Spas will have a Single Button assigned to Instantly turn On the Preset Mood.

The **Moods** Icon on the Home Screen is **Highlighted**.



In **Navigation Mode**, from the **Highlighted Settings** Icon, Touch **Left**  and **Up**  to **Highlight** the **Moods** Icon. Then Touch **Select**  to enter the **Moods** Menu.

Moods Setup (Continued)

The **Relax Setup** Menu Bar is **Highlighted**.



To Setup the **Relax** Mood, from the **Relax Setup** Menu Bar, Move **Right**  to the **Relax Setup** Menu.

The **Relax Mood** Menu Bar is **Highlighted**.



To assign **Relax** to the **Mood** Button, on the **Relax Mood** Menu Bar, Touch **Select** .

The **Select Devices** Menu Bar is **Highlighted**.



To Setup the **Devices**, Speeds, and Levels you want to operate in the **Relax Mood**, from the **Select Devices** Menu Bar, Move **Right**  to the **Mood Devices** Menu.

Moods Setup (Continued)

The **Pump 1** Menu Bar is **Highlighted**.



Scroll through the several pages of available **Devices**, and turn them On or Off, set the Pump and Blower Speeds, set the Spa Light Level, and set the Music Player for the **Relax Mood** by Touching the **Select** button as required for each **Device**. Touch the **Back** button to go back to the previous Menu.

The **Set Time Duration** Menu Bar is **Highlighted**.



To change the **Duration** of the **Relax Mood** before it turns Off, from the **Set Time Duration** Menu Bar, Move **Right** to the **Time Duration** Menu.

The **Time Duration Hours** is **Highlighted**.





To Set the **Time Duration** of the Mood, Move **Left** or **Right** to Hours or Minutes, and then Touch **Up** or **Down** to change the Time. Touch **Back** to Exit Back to the Previous Menu.

**Set Your Wellness Timers (Azure i600 Panel Only)** - The **Timers** Feature has three different functions. There's a **Timer** that starts at 0:00 and counts up, three **Countdown Timers** that count down to 0:00, and an **Alarm** that Flashes the Spa Light at the Set time.

The **Timers** Icon on the Home Screen is **Highlighted**.



In **Navigation Mode**, from the **Highlighted Settings** Icon, Touch **Right**  and **Up**  to **Highlight** the **Timers** Icon. Then Touch **Select**  to enter the **Wellness Timers** Menu.

The **Timer** Menu Bar is **Highlighted**.



To Set the **Timer**, from the **Timer** Menu Bar, Move **Right**  to the **Timer** Set Menu.

The **Start** Icon is **Highlighted**.



To Start or Reset the **Timer**, Move **Right**  or **Left**  to the **Start** and **Reset** Icons, and Touch **Select** . Touch **Back**  to Exit Back to the Previous Menu.

Timers Setup (Continued)

The **Countdown** Menu Bar is **Highlighted**.



To Set the **Countdown** Timers, from the **Countdown** Menu Bar, Move **Right**  to the **Set Countdown** Menu.


The **Start Countdown** Menu Bar is **Highlighted**.



To Start all three **Countdown** Timers, from the **Start Countdown** Menu Bar, Touch the **Select**  Button to turn them On.

The **Sound Alarm** Menu Bar is **Highlighted**.



At the end of the **Countdown**, you can Sound an Alarm (Flash the Spa Light), turn Off all the Pumps that are running, and/or turn Off everything that is On except the Spa Light. To Set the **Countdown** Time, from any of the three **Countdown** Timer Menu Bars, **Sound Alarm** for example, Move **Right**  to the **Sound Alarm** Set Menu.

Timers Setup (Continued)

The **Hour** is **Highlighted**.



To Set the **Sound Alarm** Countdown Time, Move **Left** (fan icon) or **Right** (globe icon) to Hours or Minutes, and then Touch **Up** (up arrow icon) or **Down** (down arrow icon) to change the Time. Touch **Back** (back arrow icon) to Exit Back and Set another Countdown Timer.

The **Countdown Timer** Message is on the Screen.



The **Countdown Timer** Message appears on the Screen at the end of the **Countdown Alarm** time. To Exit the Message, Touch the **Back** (back arrow icon) Button to return to the previous Screen.

The **Alarm** Menu Bar is **Highlighted**.



To Set the **Alarm**, from the **Alarm** Menu Bar, Move **Right** (globe icon) to the **Set Alarm** Menu.

Timers Setup (Continued)

The **Alarm** Menu Bar is **Highlighted**.



To Set the **Alarm** to On or Off, from the **Alarm** Menu Bar, Touch the **Select**  Button.

The **Alarm Time** Menu Bar is **Highlighted**.



To Set the **Alarm Time**, from the **Alarm Time** Menu Bar, Move **Right**  to the **Alarm Time** Set Menu.

The **Hour** is **Highlighted**.



To Change the **Alarm Time**, Move **Left**  or **Right**  to Hours or Minutes, and then Touch **Up**  or **Down**  to change the Time. Touch **Back**  to Exit Back and Set the **Alarm Days**.

Timers Setup (Continued)

The **Alarm Days** Menu Bar is **Highlighted**.



To Set the **Alarm Days**, from the **Alarm Days** Menu Bar, Move **Right**  to the **Alarm Days** Set Menu.



The **S** for **Sunday** is **Highlighted**.



By Default, all days of the week are turned On. To turn an **Alarm Day** Off or On, Move **Left**  or **Right**  to that day and Touch **Select** . To Exit back to the previous Menus, Touch **Back** .

The **Alarm Time** Message is on the Screen.



The **Alarm Time** Message appears on the Screen at the **Alarm Set Time** on the **Alarm Days**. To Exit the Message, Touch the **Back**  Button to return to the previous Screen. The Spa Light will Flash until the **Back**  Button is Touched.




## Your Entertainment, Games and Photos

**Play Your Music (Azure i400 & Azure i600 Panels Only)** - The Entertainment Feature will give you Control of all the Music Equipment installed in your Spa.

The **Entertainment** Icon on the Home Screen is **Highlighted**.



In **Navigation Mode**, from the **Highlighted Settings** Icon, Touch **Right**  and **Up**  to **Highlight** the **Entertainment** Icon. Then Touch **Select**  to enter the **Entertainment** Menu.

The **Tuner/CD** Menu Bar is **Highlighted**.



To Control the **Tuner** and any Tuner Options or Functions, from the **Tuner/CD** Menu Bar, Move **Right**  to the **Tuner/CD** Control Menu.

The **Standby** Icon is **Highlighted**.









To turn the **Tuner** On or Off, from the **Standby** Icon, Touch the **Select**  Button.

Play Music (Continued)

The **Source** Icon is **Highlighted**.




To Control all the options on the **Tuner/CD** Control Menu, Move **Left** , **Right** , **Up** , or **Down**  to the desired option, and then Touch **Select**  to activate that option. When using the **Source** Icon to change Sources or the **Mode** Icon to change Modes, it may be necessary to check the **Tuner** display to see if the correct **Source** or **Mode** has been Selected. Touch **Back**  to Exit Back to the **Music** Menu.

**Watch Your TV (Azure i400 & Azure i600 Panel Only)** - The **Entertainment** Feature will give you Control of all the Video Equipment installed in your Spa. If your Spa has a **TV** with **DVD** playing capabilities, and the **DVD** Player is in the **Tuner**, the Tuner, located in the **Entertainment** Menu, will need to be turned On and controlled also.

The **Entertainment** Icon on the Home Screen is **Highlighted**.



In **Navigation Mode**, from the **Highlighted Settings** Icon, Touch **Left** , and **Up**  to **Highlight** the **Entertainment** Icon. Then Touch **Select**  to enter the **Entertainment** Menu.

Watch TV (Continued)

The **TV** Menu Bar is **Highlighted**.



To Control the **TV** and any TV Options or Functions, from the **TV** Menu Bar, Move **Right**  to the **TV** Control Menu.







The **Power** Icon is **Highlighted**.



To turn the **TV** On or Off, from the **Power** Icon, Touch the **Select**  Button.

The **TV Lift** Icon is **Highlighted**.




To Control all the options on the **TV** Control Menu, Move **Left** , **Right** , **Up** , or **Down**  to the desired option, and then Touch **Select**  to activate that option. When using the **Input** Icon to change Inputs or the **Channel** Icon to change Channels, it may be necessary to check the **TV** screen to see if the correct **Input** or **Channel** has been Selected. Touch **Back**  to Exit Back to the **TV** Menu.

Watch TV (Continued)

The **DVD**  
Menu Bar  
is **Highlighted**.



To Control the **DVD** Player and any DVD Options or Functions, from the **DVD** Menu Bar, Move **Right**  to the **DVD** Control Menu.







The **Power**  
Icon is  
**Highlighted**.



To turn the **DVD** Player On or Off, from the **Power** Icon, Touch the **Select**  Button.

The **Volume**  
Icon is  
**Highlighted**.



To Control all the options on the **DVD** Player Control Menu, Move **Left** , **Right** , **Up** , or **Down**  to the desired option, and then Touch **Select**  to activate that option. When using the **DVD** On Screen Menu Navigation Arrow Icons to Select DVD options, it will be necessary to observe the DVD Menu on the **TV** screen for DVD option selection. Touch **Back**  to Exit Back to the **TV** Menu.

**Play Your Games (Azure i600 Panel Only)** - The **Games** Feature will allow you to Play several different Games on your Control Panel using the Navigation Buttons.

The **Games** Icon on the Home Screen is **Highlighted**.



In **Navigation Mode**, from the **Highlighted Settings** Icon, Touch **Left** and **Up** to **Highlight** the **Games** Icon. Then Touch **Select** to enter the **Games** Menu.

The **Mole** Game Menu Bar is **Highlighted**.



To Play the **Mole** Game, from the **Mole** Game Menu Bar, Move **Right** to the **Mole** Game Screen.

The **Mole** pops out of various holes for a short period of time.



To Play the **Mole** Game, Move **Left**, **Right**, **Up**, or **Down** to Hit the Mole when he pops out of the hole. You get Points for hitting the Mole before he goes back down the hole. Touch **Back** to Exit Back to the **Games** Menu.

**View Your Photos (Azure i600 Panel Only)** - The **Photos** Feature will allow you to View your Photos on the Control Panel Screen. Note: You must have the Personal Photo Option installed in your Spa to View Personal Photos.

The **Photos** Icon on the Home Screen is **Highlighted**.



In **Navigation Mode**, from the **Highlighted Settings** Icon, Touch **Up**  to **Highlight** the **Photos** Icon. Then Touch **Select**  to enter the **Photos** Menu.



The **Slideshow** Menu Bar is **Highlighted**.



To View the **Slideshow**, from the **Slideshow** Menu Bar, Touch **Select**  to start the **Slideshow**. All of your Photos will be displayed one at a time on the Screen.

The **Slideshow** is changing from the Rose Photo to the Tropical Island Photo.




To Select a Photo for the **Single Photo** Mode, Touch **Select**  when the desired Photo is displayed on the Screen. Touch **Back**  to Exit Back to the **Photos** Menu.

View Photos (Continued)



The  
**Scroll Rate**  
Menu Bar is  
Highlighted.



To Set the **Scroll Rate** for your **Slideshow**, from the **Scroll Rate** Menu Bar, Move **Right**  to the **Scroll Rate** Set Menu.


The  
**10 Seconds**  
Menu Bar is  
Highlighted.



On the Menu Bar of the **Scroll Rate** you want to Select, Touch **Select**  to turn that **Scroll Rate** On for the next **Slideshow**. Touch **Back**  to Exit back to the **Photos** Menu.

The **Single Photo**  
Menu Bar is  
Highlighted.



To View the **Single Photo** you selected from the **Slideshow**, from the **Single Photo** Menu Bar, Touch **Select**  to view the **Single Photo** on your Screen. Only the Selected **Single Photo** will be displayed.

View Photos (Continued)

The **Single Photo** is displayed continuously on the Screen.



To turn the **Single Photo** display Off and return to the **Photos** Menu, Touch the **Back**  Button.

The **Single Photo** Menu Bar is **Highlighted**.



From the **Photos** Menu, Touch **Back**  to Exit back to the **Navigation Mode** Home Screen.


The **Photos** Icon on the Home Screen is **Highlighted**.





From here you can Move to another **Function Icon**, or Touch **Back**  to return to the **Shortcut Mode** Screen for Single Button Control of all your Spa Equipment.





## **SAVE THESE INSTRUCTIONS**

 **WARNING** – Risk of Accidental Drowning. Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use a spa or hot tub unless they are closely supervised at all times.

 **DANGER** – To reduce the risk of drowning from hair and body entrapment, install a suction fitting(s) with a marked flow rate that equals or exceeds the flow rate marked on the equipment assembly.

 **DANGER** – To reduce the risk of injury, do not remove the suction fittings. Never operate a spa or hot tub if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the equipment assembly.

 **DANGER** – Risk of Electric Shock. Do not permit any electric appliance, such as a light, telephone, radio, or television, within 5 feet (1.5 m) of a spa or hot tub.

 **WARNING** – Risk of Electric Shock. Install at least 5 feet (1.5 m) from the inside wall of spa or hot tub using nonmetallic plumbing.

 **WARNING** – **To reduce the risk of injury:**

The water in a spa should never exceed 40°C (104°F). Water temperatures between 38°C (100°F) and 40°C (104°F) are considered safe for a healthy adult. Lower water temperatures are recommended for young children and when spa use exceeds 10 minutes.

Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperatures to 38°C (100°F).

Before entering a spa or hot tub, the user should measure the water temperature since the tolerance of water temperature-regulating devices varies.

The use of alcohol, drugs, or medication before or during spa or hot tub use may lead to unconsciousness with the possibility of drowning.

Obese persons and persons with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a spa.

Persons using medication should consult a physician before using a spa or hot tub since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.

## **SAVE THESE INSTRUCTIONS**