

DTR **1500**



Digital Terrestrial Receiver
Reception of Free-to-Air programs



Let's make things better.



PHILIPS

Welcome to digital television

Congratulations on choosing the Philips' DTR 1500 digital terrestrial receiver. The DTR 1500 will allow you to enjoy access to Freeview digital terrestrial television, radio and interactive channels.

CONTENTS

1	Safety instructions	3	6	Quick start up / First installation / Channel scan	12
2	Unpacking / Putting the receiver in your existing set up	4	6.1	Quick start	12
2.1	Unpacking	4	6.2	Scanning has failed / check installation / check signal from aerial	12
2.2	Putting the receiver in your existing set up	4	6.3	Scanning has failed again	13
3	Product description	5	7	Day to day operation	14
3.1	Front view	5	7.1	Switch ON / Switch OFF your receiver (low power, standby)	14
3.2	Rear view	6	7.2	Select TV / Radio mode	14
4	Preparing your remote control	7	7.3	Change channel	14
4.1	Installing the batteries	7	7.4	Zap banner / More programme info	15
4.2	Using the remote control	8	7.5	Volume control - Vol+ / Vol- / Mute	16
5	Connecting your Digital receiver	9	7.6	Select a favourite list	16
5.1	Connecting to a TV fitted with one SCART socket	9	7.7	Temporarily change the Subtitle selection (circular toggle)	16
5.2	Connecting to a TV and a VCR both fitted with one SCART socket	10	7.8	Temporarily change the Audio language selection (circular toggle)	16
5.3	Connecting to your HiFi / Audio receiver equipment (Analogue / Digital)	11	7.9	Electronic channel guide	16
5.4	Connection of a Video projector to your receiver to watch Digital TV programmes on a video projector	11	7.10	Set Timer / Set Reminder from Guide or Zap list / Zap banner - Delete a timer	17
			7.11	TEXT – MHEG interactive television	17

7.12	Alarm Notification/ Recording – Reminder – New services – Software download _____	17
7.12.1	Recording / Timer _____	18
7.12.2	Recording Failure _____	18
7.12.3	Reminder _____	18
7.12.4	List of New channels _____	18
7.12.5	Software download _____	18
7.13	Using the TV / STB button _____	18
7.14	Watching locked channels _____	18
7.15	On screen indication of Radio mode _____	19
7.16	On screen indication of Loss of signal _____	19
7.17	If your receiver is in “Standby” or “Low power” mode and the right-hand, red LED is blinking... _____	19
7.18	How do I reset my receiver if it “freezes”? _____	19
<hr/>		
8	Changing the settings on your receiver _____	20
8.1	Menu navigation / item selection / change settings / store changes _____	20
8.2	Change the installation settings _____	21
8.2.1	Receiver settings _____	21
8.2.2	Channel installation _____	22
8.2.3	Check signal quality / check your aerial _____	23
8.2.4	Software _____	24
8.2.5	Timers (schedule, delete, edit, conflict...) _____	24
8.2.6	Edit a timer _____	25
8.2.7	Remove a timer via the MENU _____	25
8.2.8	Disable Recording (Manage conflicts) _____	25
8.3	Favourite list editing _____	26
8.4	Parental control / pin Code - lock Programme - Parental timer _____	28
8.4.1	Change PIN _____	28
8.4.2	Parental control _____	28
8.4.3	Maturity level _____	28
8.4.4	Lock TV or Radio channel _____	28
8.4.5	Edit a parental timer _____	29
8.4.6	Del. parental timer _____	29
8.5	Preferences / language - timer - banner _____	29
<hr/>		
9	Menu tree _____	30
<hr/>		
10	Advanced settings _____	31
10.1	Restore virgin mode _____	31
10.2	Change remote control settings _____	31
10.3	You forgot your PIN code / Master PIN code _____	32
10.4	More about Recording / Easy Recording – VCR control _____	32
<hr/>		
11	Trouble shooting guide _____	34
<hr/>		
12	Technical specification _____	36

I Safety instructions

All the safety and operating Instructions should be read and understood before the receiver is operated.

For best results, position your receiver away from radiators or other heat sources. Leave a space of at least 3 cm around the receiver for ventilation making sure that the ventilation holes are not obstructed.

This receiver is intended for use in a domestic environment only and should never be operated or stored in excessively hot, humid or damp conditions.

Make sure no objects or fluids enter the housing through the ventilation slots. Should this happen, disconnect your receiver from the mains and consult your retailer.

For cleaning, use a damp chamois leather. Never use any abrasive cloth, sponge or cleaner.

When connecting or disconnecting cables to the receiver always ensure the receiver is disconnected from the mains.

Please wait before connecting your receiver - read on.

Do not disassemble the equipment. There are no user serviceable parts.

Mains connection

Before connecting the receiver to the mains, check that the mains supply voltage corresponds to the voltage printed on the rear of the receiver. If the mains voltage is different, consult your dealer.

Important:

*This apparatus is fitted with an approved moulded **BSI363** plug.*

To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fit new 3A fuse that should be a BSI362 ASTA approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and the appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 3A.

If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

Note: The severed plug must be destroyed to avoid a possible shock hazard, should it be inserted into an appropriate socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured in accordance with the following code:

- BLUE - "NEUTRAL" ("N")
- BROWN - "LIVE" ("L")

- 1 The BLUE wire must be connected to the terminal, which is marked with the letter "N" or coloured BLACK.
- 2 The BROWN wire must be connected to the terminal, which is marked with the letter "L" or coloured RED.
- 3 Do not connect either wires to the earth terminal in the plug that is marked by the letter "E" or by the safety earth symbol or coloured green or green-and-yellow. Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Please wait before connecting your receiver - read on.

2 Unpacking / Putting the receiver in your

existing set up

2.1 Unpacking

Start by unpacking your receiver. You will find the following cables and accessories:

- The digital terrestrial receiver
- The remote control and batteries (2 x LR6 AA 1,5 V)
- One SCART lead
- One RF coaxial lead
- A mains cord
- A user manual
- A Guarantee card
- A stand for using the receiver in the upright position.

Note: As advised in chapter 5 make use of the Scart lead provided. It has been selected to get the best picture quality and performance out of your digital receiver.


Plastic bags can be dangerous. To avoid suffocation keep the bag away from babies and children.

The Symbol  on the packaging means that material is recyclable.

If the receiver will not be used for a long time, unplug the mains cord from the wall socket.

2.2 Putting the receiver in your existing set up

- Your receiver can be integrated in different ways within your existing Audio-Video set up. The receiver can be used in the horizontal or vertical position. If you decide to use your receiver in the upright position, follow the instructions below. Unpack the stand, place it on a horizontal surface with click fit side on the left and lug side on the right.
- Take the receiver as shown below (rear panel on the left side / coaxial connectors on the bottom side).

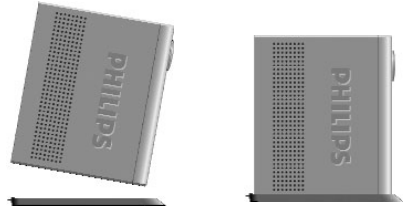


- Insert the stand lug in the slot located on the front of the receiver, close to the Philips badge.
- Rock the receiver to insert the stand lug fully in the slot until it is locked by the click fit.
- From now on, your receiver can be used in the upright position.

Note: Removing the stand can be done by first unlocking the click fit at the rear side of the stand, rocking and pulling back the receiver to extract it from the stand lug.

3 Product description

3.1 Front view

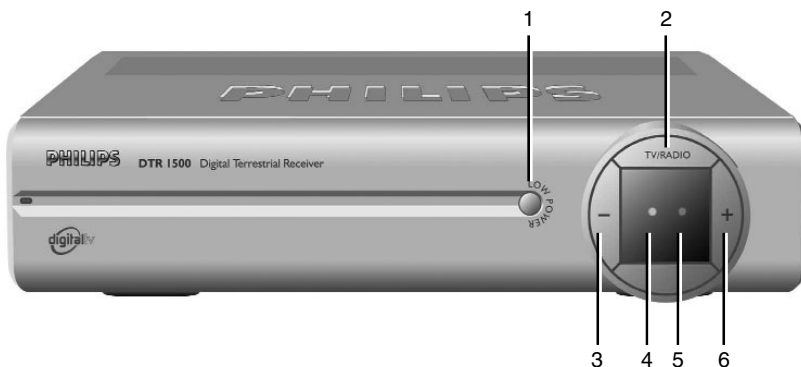


- | | |
|---------------------------------------|---|
| 1 LOW POWER button: | Switch receiver ON or into low power mode |
| 2 TV/RADIO button: | Toggle between TV and Radio mode. |
| 3 “-” button: | Channel down |
| 4 Three colours LED indicator: | Display receiver status (see status indicator table) |
| 5 Red LED indicator: | Display receiver status (see status indicator table)
Blink at remote control command reception |
| 6 “+” button: | Channel up |

	Status indicator table						
Mode LED	Receiver off mains	Low power mode	Standby mode	TV mode	Radio mode	Software update	Timer running
4 Left hand LED (3 colour)	Off	Off	Orange	Green	Blinking Green - Orange	Off	Green or Orange (in standby mode)
5 Right hand LED (Red)	Off	Red	Off	Off	Off	Blinking red	Red (blinking if

Note: To cancel a running timer; press button sequence: TIMER + 0.

3.2 Rear view

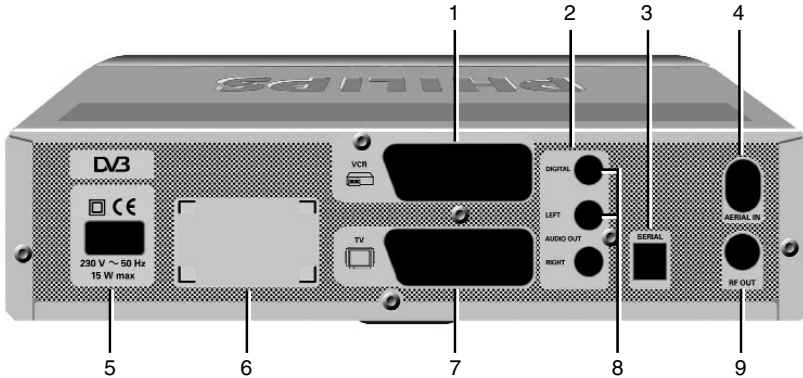

- | | |
|---|---|
| 1 VCR (SELV): | SCART (1) socket to connect your video recorder |
| 2 Digital audio output (SELV): | Coaxial Digital audio output to connect your HIFI / Audio receiver system |
| 3 Serial (SELV): | RJ 9 socket for serial data transfer during servicing |
| 4 AERIAL IN (SELV): | Input to connect your UHF aerial |
| 5 230 V ~ 50 Hz 15W max (HV): | Socket to connect the Mains cord |
| 6 Label showing the type and serial number of the receiver | |
| 7 TV (SELV): | SCART (1) socket to connect to your TV set or a video projector (2) |
| 8 L/R Audio out (SELV): | Left/Right audio-cinch outputs to connect your HIFI / Audio receiver system |
| 9 RF out (SELV): | RF output to be connected to the aerial input of your Video Recorder or TV set, refer to chapter 5 for recommended connection diagrams. |

(1) SCART is also called Euroconnector or Peritel.

(2) To connect a video projector to the TV SCART socket refer to chapter 5.4


SELV : Safety Extra Low Voltage.

HV : Hazardous Voltage.

4 Preparing your remote control

4.1 Installing the batteries

- Remove the back cover.
- Insert two batteries (type R06G/AA - 1.5 V) supplied.
- Place them in the remote control battery compartment as shown in the diagram.

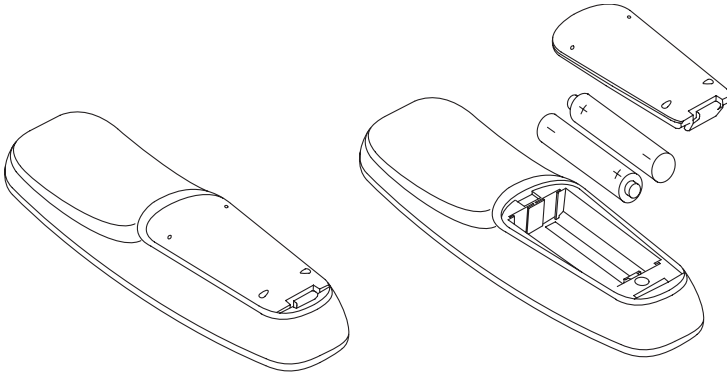


- Replace the cover.
- Your remote is now ready to control your digital terrestrial receiver.

The Philips batteries supplied with your receiver's remote do not contain heavy metals such as Mercury or Lead Cadmium. Nevertheless, in many countries exhausted batteries may not be disposed of with your household waste. Please ensure you dispose of empty batteries according to local regulations.




4.2 Using the remote control

Mute 
Audio mute.



RED, GREEN, YELLOW, BLUE:
used by interactive television applications.

FAV
- Short key press selects the next favourite list
- Long key press displays all available lists.


SUBTITLE 
- Temporarily starts or stops Audio Subtitling.

I-II
- Temporary update of audio language.


MENU
- Open menu (in digital TV mode).
- Close menu (in digital TV mode).

Cursor  /  The four cursor keys are used to move within the menus and lists.

OK key
- Select / call up programme list / zap.

Volume  +/-
Volume Up / Down.

TV / STB
Toggle between Digital TV and Analogue transmission from your TV.

Standby 
Standby.

^ (blue) resp. v (white)
- Scrolls one Page Up or one Page Down in guide or favourites list.
TEXT / WHITE key
Launches Digital Teletext when available.

GUIDE
- Open Now & Next Guide.

INFO
- Open info banner.
- Show extended program information.
- Close banner.

TIMER
- Set a timer (recording or reminder) when in program banner, Guide and Zap List.

The "**TIMER, 0**" sequence keystroke deletes the current running timer.

BACK (see 7.3.3)
- Selects the previously watched digital TV channel.
- In menu mode bring selection one level back.

P+ / P-
Selection of Next / Previous channel.

TV / RADIO
Toggle TV / Radio mode.

0-9
Channel selection in digital TV mode.



5 Connecting your Digital receiver


There are several ways you can connect and incorporate your digital receiver into your existing audio / video equipment set up.

Warning before starting to connect:

- Unplug all equipment (TV set as well as VCR and / or DVD if required) from the mains.
- Do not connect your digital receiver to mains supply now.
- Check your current wiring because you might keep existing connections of your current Audio / Video set up.
- Choose the relevant connecting method for incorporating your digital receiver into your existing Audio / Video set up. Please read chapters 5.1 and 5.2.

5.1 Connecting to a TV fitted with one SCART socket

Incorporate your receiver in your existing installation as shown below:

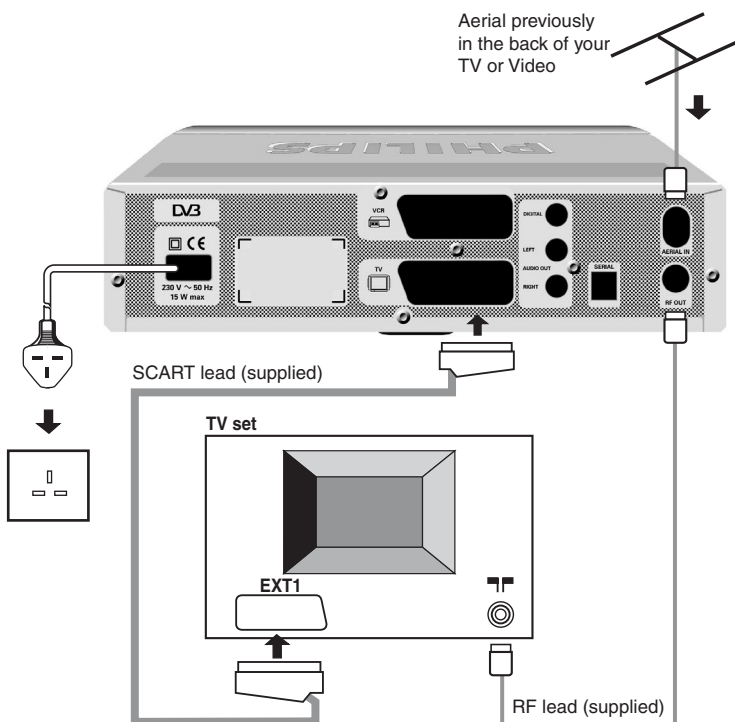

- Plug your aerial lead plug into the “AERIAL IN” socket of your digital receiver.
- Connect the “RF OUT” socket of your digital receiver to the “Aerial input” socket of your TV by means of the RF coaxial lead supplied with your digital receiver.
- Connect the “TV” SCART socket of your digital receiver to the “EXT1” SCART socket of your TV set by means of the SCART lead supplied with your digital receiver.
- Plug all your equipment, excluding your digital receiver, into the mains.
- Switch on your TV and select a channel.

- Plug your digital receiver into the mains. Your digital receiver will display the WELCOME screen (the left-hand LED will be illuminated green).
- Go to chapter 6 to proceed with the channel scan of your digital receiver.

If the WELCOME screen is not displayed, press two times the TV/STB button to get the screen displayed.


Note:

With this connection set up you can:

- Watch digital terrestrial TV by means of your Digital receiver.
- Continue watching analogue TV by means of your TV.

5.2 Connecting to a TV and a VCR both fitted with one SCART socket

Incorporate your receiver in your existing installation as shown below:

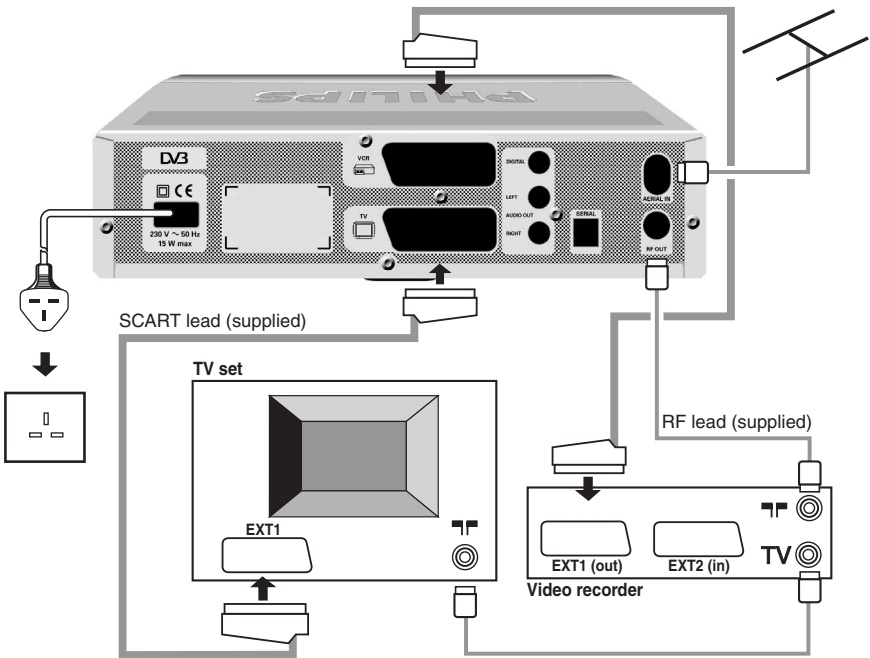

- Plug your aerial lead plug into the “AERIAL IN” socket of your digital receiver.
- Connect the “RF OUT” socket of your digital receiver to the “Aerial input” socket of your VCR by means of the RF coaxial lead supplied with your digital receiver.
- Connect the “RF OUT” socket of your VCR to the “Aerial input” socket of your TV by means of a RF coaxial lead.
- Connect the “TV” SCART socket of your digital receiver to the “EXT1” SCART socket of your TV by means of the SCART lead supplied with your digital receiver.
- Connect the “VCR” SCART socket of your digital receiver to the “EXT1” SCART socket of your VCR (so called OUT) by means of a SCART lead.

- Plug all your equipment, excluding your digital receiver, into the mains.
- Switch on your TV and select a channel.
- Plug your digital receiver into the mains. Your digital receiver will display the WELCOME screen (the left-hand LED will be illuminated green).
- Go to chapter 6 to proceed with the channel scan of your digital receiver.

If the WELCOME screen is not displayed, press two times the TV/STB button to get the screen displayed.

Note:

- 1 This connection also applies if your VCR has two SCART sockets.
- 2 If you have a S-Video VCR refer to chapter 8.2.1.1 for further settings and consult the user manual of your VCR.
- 3 With this connection set up you can:
 - Watch digital TV while you record analogue TV.
 - Watch analogue TV while you record digital TV.
 - Record the digital TV channel you are watching.
 - Watch Play Back from your VCR / DVD recorder.

5.3 Connecting to your HiFi / Audio receiver equipment (Analogue / Digital)

Depending on your HiFi / Audio receiver equipment, you might have several options to connect your digital receiver.

- Analogue connection

Connect the L/R audio output sockets to the relevant L/R audio input sockets of your audio equipment by means of a double CINCH cable (not supplied). Consult the user manual of your HiFi/Audio receiver equipment to choose the proper analogue audio inputs.

Note: With this connection set up you can control the audio volume up/down and mute with the remote control of your digital receiver, and alternatively with your HiFi's remote control.

- Digital connection

Connect the audio "DIGITAL" output socket to the relevant digital audio input socket of your audio equipment by means of a single CINCH cable (not supplied). Consult the user manual of your HiFi/Audio receiver equipment to choose the proper digital audio input.

Note: With this connection set up you can only control the audio volume up/down and mute with your HiFi / Audio Receiver remote control, refer to the relevant user manual.


5.4 Connection of a Video projector to your receiver to watch Digital TV programmes on a video projector

Connect the "TV" SCART socket of your digital receiver, to your Video projector.


Often a video projector is fed with S-Video format video signals, if this is the case with your projector, follow the instructions below for connection and installation:







- Connect a SCART to the S Video adapter between the TV SCART of your digital receiver and the S VIDEO input of your video projector.
- Installation: Refer to chapters 8.2, 8.2.1 and 8.2.1.1 to change the "TV/VCR output" setting of your digital receiver to SVIDEO/PAL-CVBS.

6 Quick start up / First installation / Channel scan

WELCOME	First installation
Install 	Congratulation for buying this Philips receiver. Please ensure your receiver is correctly connected before starting the installation
	Start
OK Select	Press OK to start the installation





6.1 Quick start

- You already have an aerial.
 - Your aerial is correctly pointed at the terrestrial transmitter corresponding to your area (1).
 - Your digital receiver connection is according to the diagram depicted in chapter 5.1 or 5.2.
 - Your digital receiver is ON and the WELCOME screen (shown here) pops up.
 - The selection is on “Install”. Press the  button to start scanning for channels.
- The receiver scans the UHF band and reports scanning progress and found channels.
 - When scanning is completed:
 - Either scanning ended successfully, found channels are displayed and the digital receiver tunes the first channel in the list. If so proceed to chapter 7.
 - Or scanning failed and stopped while the “Check signal” screen pops up. If so proceed with chapter 6.2.

INSTALLATION	Check Signal
Sound <input type="radio"/>	On
RF Channel 	UHF 67
Install <input type="radio"/>	Restart
Signal strength 	
Signal quality 	
Channels scanned	BBC ONE  BBC TWO  BBC THREE 
OK Select	Select RF channel to check. Point antenna to get best quality level

6.2 Scanning has failed / check installation / check signal from aerial

 Scanning failed therefore before making a new scanning check:

- Aerial cable.
 - Check the aerial connection to your digital receiver. Refer to the connection diagram of chapter 5.1 or 5.2
 - Check channel(s) available in the region corresponding to your area (1).
 - Check signal quality, by means of the “Check signal” menu beside.
- Press the  button to select the “RF channel” option.
 - Press the  button and scroll with the  or  button to select the wanted RF channel number, in the CH 21-69 range, corresponding to your area.
 - Check signal strength and quality on bar meters.

- Either signal is good enough (orange or green bar meters) then choose the “Install” option and select the “Re-start” option to scan channels one more time. When scanning ends successfully, channels found are displayed and the digital receiver tunes the first channel in the list. If so proceed to chapter 7.
- Or signal is bad or no signal is available (red bar meter or no bar at all). Then refer to chapter 6.3.

(1) To check whether you can receive digital Television in your region consult the following web site WWW.FREEVIEW.CO.UK, type in your postcode and click on “GO” to immediately get the answer

6.3 Scanning has failed again

You could not scan the channels and this was repeated after checking the signal quality delivered by your aerial.

Either your aerial is not pointing properly at the digital TV transmitter, or your aerial installation needs to be upgraded or you are not in the coverage area to correctly receive digital Television.

For a proper diagnosis, call your electrical retailer.

7 Day to day operation

7.1 Switch ON / Switch OFF your receiver (low power, standby)

THE RED RIGHT-HAND LED IS ON

Your receiver is in “Low power” mode

- Press the “Low power” button, on the front of your receiver, to put your receiver in Standby.
- You have 5 minutes to wake your receiver up by pressing:
 - Either P+, P-, BACK or a number button on your remote. Alternatively you can press the “+” or “-” button on the front panel of your receiver.

Note: your remote does not control the receiver if it is in Low Power mode.

THE ORANGE LEFT-HAND LED IS ON

Your receiver is in “Standby” mode

- To Wake Up Your Receiver:
 - Either Press One Of The Following Remote Buttons: P+, P-, BACK or a number button.
- Or press “+” or “-” button on the front panel.
- To put your receiver in Low power mode (< 1W consumption):
 - Press the front panel’s “LOW POWER” button.

THE GREEN LEFT-HAND LED IS ON (TV MODE) / GREEN+ORANGE LED IS ON (RADIO MODE)

You are in TV mode / Radio Mode

- To put your receiver in standby:
 - Press the remote standby button.
- To put your receiver in Low power mode (< 1W consumption):
 - Press the front panel’s “LOW POWER” button.

7.2 Select TV / Radio mode

- If your receiver is in TV mode
 - Press the TV/RADIO button to switch to RADIO mode.
- If your receiver is in Radio mode:
 - Press the TV/RADIO button to switch to TV mode.

Note: The TV/Radio button on the Front Panel and on the Remote Control have the same function.

7.3 Change channel

7.3.1 Using number buttons

While watching digital TV or listening to Digital Radio.

Press the number button(s) to select the desired channel number.

7.3.2 P+/P-

You are watching digital TV or listening to a digital radio programme:

- Press P+ to select the next channel in the list
- Press P- to select the previous channel in the list

Note: The “-” and “+” buttons on the Front Panel have the same function as P- and P+ buttons on the remote control.

7.3.3 Use of the Back key

7.3.3.1 In viewing mode

While watching digital TV or listening to a digital radio programme.


press the BACK button to select the previously watched / listened to programme.

7.3.3.2 In menu mode

Please note the BACK key has more than one function when navigating through the menus.

Depending on where you are within the menu the back key will

- either go back one level and cancel the change you have made,
- or go back one level,
- or exit the menu. The prompt at the bottom of the screen indicates which function will be carried out.

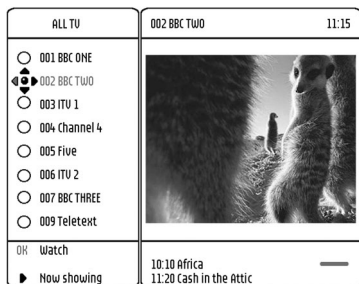

7.3.4 Zap list (so called index list)

While you are watching digital TV or listening to Digital Radio:

- Press the **OK** button to open the channel list
- Press the **▲** or **▼** button to select the desired channel.
- Press **OK** to preview the selected channel.
- By Pressing **OK** again you will view / listen to the selected channel in full screen.

Alternative:

- Press the **OK** button to open the channel list.
- Press **P+ / P-** to get a direct preview of the next or previous channel.
- If desired press **OK** to view/listen to the selected channel in full screen.

7.4 Zap banner / More programme info


Each time you select a new channel, a banner appears at the bottom of the screen to show:

- Channel name and number.
- Now programme name and Next programme names.
- Channel status: locked, available.
- Start time of the current program.
- Start time of the next program.
- Current time.
- The orange bar below the current time, indicates the progress of the current programme.

Getting more info once the banner is ON:

- Press the **►** button to get more info about the current programme, a second key press will show more info about the next channel.
- Press the **BACK** button to close the Zap Banner.

Note: Pressing the INFO button three times access to the banner, more info for the current channel and more info for the next channel. A fourth keypress on INFO returns to watching digital TV.

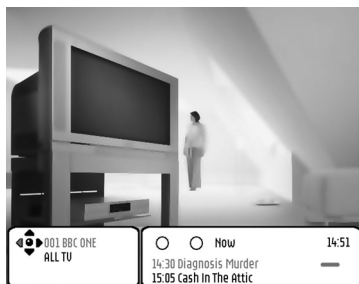



7.5 Volume control - Vol+ / Vol- / Mute

While watching digital TV:

- Press Vol- to decrease volume.
- Press Vol+ to increase volume.
- Press MUTE to mute the sound, press MUTE again to de-mute.

Note: Change of volume is signalled with a bar graph, while audio mute is signalled with an icon on the top right corner of the screen.

7.6 Select a favourite list

While watching digital TV / or listening to Digital Radio:

- Press the FAV button for more than two seconds to display all the favourites lists.
- Press the ▼ or ▲ to select a list. Press the **OK** button to make a list active.
- Press FAV again to add or remove

Note: empty favourite list(s) can not be opened.

7.7 Temporarily change the Subtitle selection (circular toggle)

Press the SUBTITLE button:

- Either select from the available subtitle languages.
- Or switch subtitles Off.

7.8 Temporarily change the Audio language selection (circular toggle)

Press the I/II button:

- select from the audio languages available.

ALL TV SERVICE	Now Next	11:15
◀ 001 BBC ONE	11:05 Diagnosis Murder	▶
○ 002 BBC TWO	08:20 The Whole Wide World	—
○ 003 ITU 1	08:40 Tonight With Trevor Mc Do	—
○ 004 Channel 4	09:40 Salvage Squad	—
○ 005 Five	09:45 TOWNIES	—
○ 006 ITU 2		
○ 007 BBC THREE	10:10 This Is BBC THREE	—
○ 009 Teletext		
OK Watch INFO Programme info ▶ Next programme	001 BBC ONE Diagnosis Murder 11:05 to 11:40	Entertainment 35 min

7.9 Electronic channel guide

While watching digital TV or listening to digital radio:

- Press the GUIDE button to open the channel guide.

Current view is current programme list so called "Now":

- Press the ▶ button to consult the "Next" programme list.
- Press the ◀ button to return to the "Now" programme list.

The next view screen includes a round icon to signal programmes which are about to start within 20 minutes:

- Press the ▼ or ▲ to selected the wanted channel.
- Press the **OK** button to watch / listen to the selected channel.

7.10 Set Timer / Set Reminder from Guide or Zap list / Zap banner - Delete a timer

SET A TIMER FROM THE BANNER

- Either press INFO, ►, TIMER sequence to record the “Now” programme on the current channel.
- Or press INFO, ►, ►, TIMER sequence to record “Next” programme on current channel.

SET A TIMER FROM THE ZAP LIST

- Either press **OK**, ►, TIMER sequence to record the “Now” programme on the selected channel.
- Or press **OK**, ►, ►, TIMER sequence to record “Next” programme on the selected channel.

SET A TIMER FROM THE GUIDE

- Either press GUIDE, ►, TIMER sequence to record the “Now” programme on the selected channel.
- Or press GUIDE, ►, ►, TIMER sequence to record “Next” programme on the selected channel.

Notes:

- Press two times *TIMER* on “Next” programme to set a *REMINDER*.
- Press three times *TIMER* to cancel the *REMINDER*.
- The *TIMER/REMINDER* will be signalled by an icon.

DELETE A RUNNING TIMER WHILE THE RECEIVER IS ON

- A timer is running and you are watching what you are recording:
 - The recording is signalled by two front LED's, the right hand one is blinking red while the left hand one is green.

- Press the key sequence “TIMER, 0” to delete the running timer.

DELETE A RUNNING TIMER WHILE THE RECEIVER IS IN STANDBY

- The recording is signalled by two front LED's, the right hand one is blinking red while the left hand one is orange.
- Press the key sequence “TIMER, 0” to delete the running timer.

7.11 TEXT – MHEG interactive television

Press either the TEXT - WHITE button to start digital teletext, or the RED button depending on the application. Note that not all channels transmit interactive television applications at all times.

Note: Programmes carrying interactive elements are signalled by “MHEG” Icon in the Banner.

7.12 Alarm Notification/ Recording – Reminder – New services – Software download

A generic alarm mechanism provides you important on screen messages. In order not to disturb your current programme, an animated icon in the top right corner is first shown indicating you the presence of an alarm. You have then to press the INFO button to read the alarm message.

RECORD STARTING
 Recording BBC ONE from 21:35 TO 22:45
 The recording is going to start
 Press **TIMER** then **D** to cancel

TIMER+D Cancel
BACK Return

RECORD FAILURE
 Recording of BBC ONE on 07/05 from 11:45
 to 13:20.
 Power failure during recording

BACK Return

REMINDER
 11:45 on BBC ONE
 The programme is going to start

OK Watch
BACK Cancel

NEW CHANNELS INSTALLED
 3 new TV channels installed.
 5 new radio channels installed.
 Press **OK** to select new channels list

OK Select
D Refuse
BACK Return

NEW SOFTWARE AVAILABLE
 If you accept, the new software shall
 be installed as soon as you switch
 the receiver into standby

OK Accept
D Refuse
BACK Return

NEW SOFTWARE INSTALLED
 Please consult Menu Software
 if you want more information

BACK Return

7.12.1 Recording / Timer

When you are watching a programme and a Timer is about to start you will be informed. The alarm can be earlier than the timer start. This can be configured in the Timer Preference Menu.

7.12.2 Recording Failure

In case of a failure during a recording, you will be informed with a message.

7.12.3 Reminder

For programmes you do not want to miss, you can create Reminders. The following alarm will then be generated. The alarm will be earlier than the reminder start time. This can be configured in the Timer Preference Menu.

7.12.4 List of New channels

When the receiver is in standby, it will check for the presence of new channels for you. The following alarm will be generated informing you about their availability in the New Favourite programme list.

7.12.5 Software download

When the receiver is in standby, it will check for the presence of new software in the broadcast. An alarm will be generated after detection of new software and after its successful update.

7.13 Using the TV / STB button

This button is used to switch between watching digital channels via your digital receiver and standard analogue channels on your TV.


- You are watching digital TV or listening to digital radio:
- Press the TV/STB button to switch to analogue TV.
 - Press again to revert to digital TV.

7.14 Watching locked channels

If you have selected a locked channel, you must unlock the channel to watch it:

- You are prompted by a lock icon and a field in the banner to enter a 4 digit PIN code (default 0000).
- Enter you PIN code to unlock and watch the selected channel.



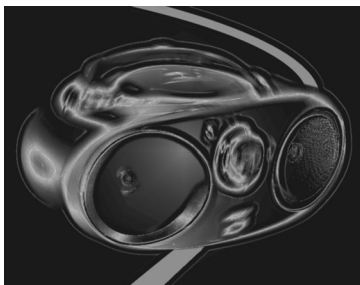

7.15 On screen indication of Radio mode

The still picture shown opposite signals the radio mode.



7.16 On screen indication of Loss of signal

The still picture shown opposite indicates a Loss of signal at receivers aerial input.

7.17 If your receiver is in “Standby” or “Low power” mode and the right-hand, red LED is blinking...

...This indicates that a free over-the-air upgrade of your receiver is taking place. Do not interrupt this operation. Wait until the blinking LED stops and the left hand LED is either orange or red (signalling either standby mode or low power mode). You can then continue with normal operation.

7.18 How do I reset my receiver if it “freezes”?

In the unlikely event that your receiver “freezes” (i.e. you can no longer control it with the remote control), simply proceed with the steps described below:

- Press the “LOW POWER” button, on the receiver front panel for at least 5 seconds. After releasing the button wait for a stable front display indication (i.e. the left LED is either orange for standby mode or green for TV mode). You can now continue with normal operation.

8 Changing the settings on your receiver

You can change the receiver settings to adapt the receiver to your aerial conditions, Audio / Video set up or other preferences.

MAIN MENU	09:35
Timers <input type="radio"/> Favourites <input type="radio"/> Parental control <input type="radio"/> Preferences <input type="radio"/> Installation <input checked="" type="radio"/>	Receiver settings Channels Antenna positioning Software
0...9 Code BACK Exit	[Lock Icon] _____ Enter PIN code to change settings

8.1 Menu navigation / item selection / change settings / store changes

Basics about Menu navigation:

- Being in the normal viewing mode, press MENU button to turn Main Menu on. The orange selection button appears on the first menu item in the window.
- Press the ▼ or ▲ button to scroll up down to bring the orange selection on the wanted menu item.

Change setting:

- Use the ► button to activate the sub-items in the menu window. Repeat this step, as many time as necessary to navigate to the required feature.
- Press the ▼ or ▲ button to select the desired option value.

Cancel - Store changes:

- Either press the BACK button to cancel changes or press the ◀ button to store the change.

In both cases the selection is brought one level up in the menu.

- If the Menu is on, press the MENU button to turn menu off.

Notes:

- Opening a menu item signalled by a lock icon requires the PIN code entry.
- To avoid burning your TV screen, messages/menus are automatically set off after 30 min.



PARENTAL CONTROL	09:35
PIN code <input type="radio"/> Parental control <input type="radio"/> Maturity level <input type="radio"/> Lock TV channels <input type="radio"/> Lock Radio channels <input type="radio"/> Edit parental timer <input checked="" type="radio"/> Remove parental <input type="radio"/>	Change Enabled, PIN code valid until stand by Disabled ▲ Free parental timer ► Every day 18:00 19:00 Every week 21:00 22:35 ▼
OK Select BACK Cancel	Edit parental timer to define periods the children are authorised to watch TV

The Puck element, is always present when menu is displayed. The puck contains 5 elements:

- The ball indicates the position of the selection.
- The ▲, ▼, ◀ and ► cursors indicate which navigation direction is possible. A grey coloured cursor means un-authorized navigation in the relevant cursor direction.

Note:

- The puck is always as shown besides the left menu window.

MAIN MENU	09:35
Timers <input type="radio"/> Favourites <input type="radio"/> Parental control <input type="radio"/> Preferences <input type="radio"/> Installation <input checked="" type="radio"/>	Receiver settings Channels Antenna positioning Software
0...9 Code BACK EXIT	Enter PIN code to change settings

INSTALLATION	Receiver settings	09:35
TU/VCR output <input type="radio"/> TU format <input checked="" type="radio"/> TU audio <input type="radio"/> Default volume <input type="radio"/> UCR audio <input type="radio"/> VCR control <input type="radio"/>	RGB / PAL CVBS 4/3 Letter box Stereo Mono Easy recording / prepare record	
Edit Return	Set the TU format	

8.2 Change the installation settings

- Press MENU button to open the main menu.
- Press ▼ button 4 times to bring the selection onto “Installation”.

Note: If the Parental control is active, you need to enter your PIN code to access the relevant items of the selected menu option.

- Press the ► button to access the “Installation” sub options.

The selection is now on “Receiver settings” in the new “Installation” menu.

8.2.1 Receiver settings

From the “Installation” menu, you selected “Receiver settings” and pressed ► button.

A new menu is displayed showing the following adjustments:

- TV/VCR signal output.
- TV video format.
- TV sound format.
- Default volume of TV sound.
- VCR sound format.
- VCR control for recording.

The selection is now on “TV/VCR output”.

- You can scroll down or up with the ▼ or ▲ button to choose the wanted option.

For each option, you can press on ► button to access its sub options.

8.2.1.1 TV/VCR output allows you to select the signal format of the TV and VCR SCART sockets from the list below:

- RGB/PAL-CVBS
- RGB/SVHS
- PAL-CVBS/PAL-CVBS
- PAL-CVBS/SVHS
- SVIDEO/PAL-CVBS
- SVIDEO/SVHS

Note: First word before “/” is dedicated to TV SCART. Second word after “/” is dedicated to VCR SCART.

Note: We advise to use “RGB/PAL-CVBS” setting to get the best quality of the video at the TV screen. If a Video Projector is used instead of a TV set, the SVIDEO/PAL-CVBS setting is advised (refer to chapter 5.4 for connection and installation).

Note: If you have a S-Video VCR Recorder you might use the RGB/SVHS setting, consult the user manual of your VCR / Recorder.

8.2.1.2 For TV format, select from the list below the one that best suits your TV

- 16/9
- 4/3 - Letterbox
- 4/3 – Pan & Scan

8.2.1.3 For TV Sound, select either Mono or Stereo depending on the capability of your TV

- Mono
- Stereo

8.2.1.4 Default volume, adjusts the sound level so that it matches your normal analogue TV Sound level

Use the ▼ or ▲ button to choose desired default volume setting.

8.2.1.5 For VCR sound, select either Mono or Stereo depending on the capability of your VCR

- Mono
- Stereo

8.2.1.6 VCR control allows you to select the control method that suits your VCR

- Off
- Easy recording so called “Prepare Record”
- Record Link

For more details consult chapter 10.4

INSTALLATION	Channels	09:35
TV channels ◀▶	<ul style="list-style-type: none"> ▼ 001 BBC ONE ✓ 002 BBC TWO ▶ ✓ 003 ITV 1 004 Channel 4 ✓ 005 Five ✓ 006 ITV 2 ✓ 007 BBC THREE 009 Teletext ▼ 	
Radio channels ○		
Update ○		
Auto activation ○		
Update now ○		
OK Select BACK Return	Enable/Disable this TV channel in all channel lists	

8.2.2 Channel installation

From “Installation” menu, you selected “Channels” and pressed ▶ button.

A new menu is drawn to control the features below:

- Installation of the TV channels.
- Installation of the RADIO channels.
- Enable or disable automatic update of channels.
- Enable or disable installation of scrambled channels.
- Start searching for new channels.

The selection is now on “TV channels”.

- You can scroll down or up with the ▼ or ▲ button to choose the required option.
- For each option, you can press on ▶ button to access its setting sub options.

8.2.2.1 TV channels, shows a complete list of TV channels found during the scanning process

- You can scroll down or up with the ▼ or ▲ button to select a channel.

- You can press the **OK** button to enable or disable the channel.

IMPORTANT: All non-tagged channels are disabled and consequently not visible in all channel lists.

8.2.2.2 Radio channels, shows a complete list of Radio channels found during the scanning process

- You can scroll down or up with the ▼ or ▲ button to select a channel.
- You can press the **OK** button to enable or disable the channel.

IMPORTANT: All non-tagged channels are disabled and consequently not visible in all channel lists.

8.2.2.3 “Update mode allows you to select whether channels are automatically updated


- You can scroll down or up with the ▼ or ▲ button to choose the wanted sub option.
- You can press the **OK** button to store your choice.

8.2.2.4 Auto activation allows you to select whether all channels or only free to air channels are updated

- You can scroll down or up with the ▼ or ▲ button to choose the wanted sub option.
- You can press the **OK** button to store your choice.

8.2.2.5 Update now

Press the **OK** button to start the new update of channels.

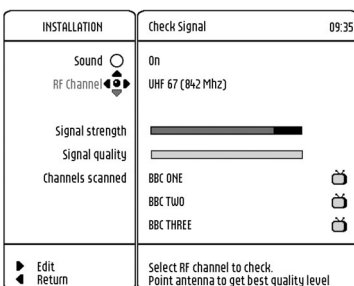

8.2.3 Check signal quality / check your aerial

From “Installation” menu, you selected “Antenna Positioning” and pressed ► button.

This menu is used to help positioning your antenna and checking the availability of signals on specific UHF channels.

Positioning your antenna:

- Two bar graphs help you pointing your antenna by indicating the signal strength and the signal quality.
- When signal quality is medium or good, the available channels present on this channel are indicated.

By activating the Sound output, a modulated sound will help you to define the best position of your antenna without requiring you to watch the TV screen.

You can also select the UHF channel you want to use during the positioning process.

installation	Software	09:35
Current software New software Software update	XXXXXX No new software detected Automatic	
► Edit ◀ Return	Update receiver software automatically? DO NOT UNPLUG THE RECEIVER DURING DOWNLOAD	

8.2.4 Software

To keep you up-to-date with the development in Digital Television and / or to make new features available, your receiver is prepared to receive software updates. Do not worry... this update is part of normal transmissions. Simply follow the on screen instructions.

Your receiver is automatically set up to accept upgrades for your DTR I500. If you would like to be prompted each time a new upgrade is available, then switch the toggle to “Manual”.

Note: Upgrades will enhance your box and help ensure the smooth operation of your receiver when new software is released. We advise that you accept any downloads that are offered.

From “Installation” menu, you selected “Software” and pressed ► button.

A new menu is drawn to:

- Indicate the current version of the software code.
- Indicate whether a new update of the software has been detected.
- Confirm that the update is accepted. If so, the download will take place when the box is switched to standby.

The selection is now on “Install”.

- You can press the ► button to access the sub options.

Note: if “Automatic” sub option has been selected, Software download will start automatically next time you will put your receiver in standby, without notification. You may find this an easier way to accept downloads.

TIMERS		09:35
Edit Remove Disable recording	Free timer BBC ONE TUES 18 MARS 08:10 TO 10:20 BBC ONE THU 20 MARS 18:10 TO 20:05 BBC FOUR THU 20 MARS 20:15 TO 20:30 BBCi FRI 21 MARS 19:15 TO 20:30 Free timer Free timer	
OK Select BACK Cancel	Select a recording or a reminder to edit it	

8.2.5 Timers (schedule, delete, edit, conflict...)

- Press MENU button to open the main menu.
- The selection is on the “Timers” option.
- Press the ► button to access the “Timers” sub-options.

The selection is now on “Edit a timer”.

TIMER	Edit	09:35
Timer <input type="radio"/>	Record	
TU/Radio <input type="radio"/>	TV	
Channel <input type="text"/>	001 BBC ONE	
Date <input type="radio"/>	21/03	Friday, 21 March 2003
Start time <input type="radio"/>	09:40	
End time <input type="radio"/>	11:40	(160')
Repeat <input type="radio"/>	Once	
Parental control <input type="radio"/>	On	
▶ Enter ◀ Return	Select the channel to record	

8.2.6 Edit a timer

- From the Edit a Timer selected sub menu.
- Select a “Free timer” you want to edit or a timer you want to modify by using down or up with the ▼ or ▲ button
- Press the ► button to access the “Timers” detailed sub-options.
- The following fields can be modified:
 - Timer type (Record or Reminder).
 - Channel type (TV or Radio).
 - The Channel to record.
 - The recording date (Up to one year in advance).
 - The starting time.
 - The ending time.
 - The repeating configuration (Once, Every Day, Every Weekday, Every Week).
 - Parental Control (On, Off).

Note: Every Weekday is used to record series transmitted only during weekdays.

8.2.7 Remove a timer via the MENU

- From the Remove a Timer selected sub menu
- Select the timer you want to remove by using down or up with the ▼ or ▲ button
- Press the OK button to remove the timer.

8.2.8 Disable Recording (Manage conflicts)

Concept:

- Timers can be enabled and disabled.
- A timer can be activated only if it is not in conflict with another timer.
- Timers created by any other means than through this menu will always be created but enabled only if it not in conflict with a previously existing timer.


Enabling/Disabling:

- From the “Disable Recording” selected sub menu.
- Select the timer you want to disable by using down or up with the ▼ or ▲ button.
- Press the **OK** button to change the activation status of that timer. Timer cannot be enabled if another timer is in conflict with it.

Favourite lists allow you to navigate easily on your preferred channels.

By using this feature, you are able to set several favourite lists for RADIO and TV channels.

For activation of these favourite lists, refer to chapter 7.6.

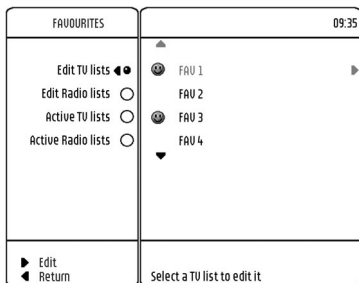

8.3 Favourite list editing


- Press MENU button to open the main menu.
 - Press once the ▼ button to bring the selection on “Favourite”.
 - Press the B button to access the “Favourite” sub options.
- The selection is now on “Edit TV favourites” item.
- You can scroll down or up with the ▼ or ▲ button to choose the TV or RADIO lists.

Note: As the menu system is similar for RADIO and TV lists, only TV features have been described in the following chapters.

8.3.1 Edit / Rename favourite list - Re-order / Re-number channels in a favourite list

From “Favourites” sub menu, the selection is on “Edit TV lists” item.

- Press the ► button to access the “Edit TV lists” sub options.
 - You can scroll down or up with the ▼ or ▲ button to choose a TV favourite list.
 - Press the ► button to access the selected TV favourite list for editing.
- The “Edit TV lists” sub menu is now drawn and the selection is on “Favourites” item.
- The content of the selected TV favourite list appears.
- You can scroll down or up with the ▼ or ▲ button to choose the required option.

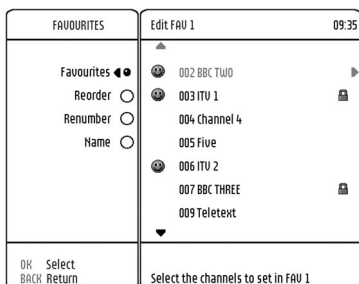

8.3.1.1 Edit the selected favourite list

From “Edit TV lists” sub menu, the selection is on “Favourites” item.

- Press the ► button to access the “Favourites” sub options.
- You can scroll down or up with the ▼ or ▲ button to choose the channel or to go through the installed list of TV channels.
- You can press OK button to tag or un-tag the selected TV channel.

8.3.1.2 Re-order channels in a favourite list

From “Edit TV lists” sub menu, the selection is on “Favourites” item.

- Press once the ▼ button to bring the selection on “Re-order”.

- Press the ► button to access the “Re-order” sub options. Unlike the first “Favourites” item, only tagged channels appear for the selected TV favourite list. To re-order one channel in the list, follow the sequence described below:
 - Scroll down or up with the ▼ or ▲ button to select the channel you wish to re-order.
 - Press **OK** button to select it for moving.
 - Select the new position by scrolling down or up with the ▼ or ▲ button.
 - Press the **OK** button to store it in the new selected position.

Note: If the selected TV favourite list is empty or contains only one element, the access to “Re-order” sub options will be blocked.

8.3.1.3 Re-number favourite channels

From “Edit TV lists” sub menu, the selection is on “Favourites” item.

- Press the ▼ button twice to bring the selection on “Re-number”.
- Press the ► button to access the “Re-number” sub options.

Unlike the first “Favourites” item, only tagged channels appear for the selected TV favourite list. To re-number a channel, follows the sequence below:

- Scroll down or up with the ▼ or ▲ button and select the channel to be re-numbered.
- Enter the new number using the DIGIT keys.
- Press on **OK** button to store the new number.

8.3.1.4 Re-name a favourite list

From “Edit TV lists” sub menu, the selection is on “Favourites” item.

- Press the ▼ button three times to bring the selection on “Name”.
- Press the ► button to access the “Name” sub options.

At this moment, you are able to modify the name of the selected favourite list. The first character of the name is selected in first...

- You scroll down or up with the ▼ or ▲ button to change the selected character from the range [0...9 , A...Z]
- Use the ► button to select the next character.
- Use the ◀ button to select the previous character.
- At the end, press the OK button to save the modification.

8.3.2 Edit preferred list

From “Favourites” sub menu, the selection is on “Edit TV favourites” item.

- Press the ▼ button twice to bring the selection to “Preferred TV lists”.
- Press the ► button to access the selected preferred TV list for editing.
- Scroll down or up with the ▼ or ▲ button.
- Press the **OK** button to tag or un-tag the selected TV list.

PARENTAL CONTROL	09:35
<input type="radio"/> PIN code <input type="radio"/> Parental control <input type="radio"/> Maturity level <input type="radio"/> Lock TV channels <input type="radio"/> Lock Radio channels <input checked="" type="radio"/> Edit parental timer <input type="radio"/> Remove parental	Change Enabled, PIN code valid until stand by Disabled Free parental timer Every day 18:00 19:00 Every week 21:00 22:35
OK Select BACK Cancel	Edit parental timer to define periods the children are authorised to watch TV

PARENTAL CONTROL	Change PIN code	09:35
<input checked="" type="radio"/> New PIN code <input type="radio"/> Confirm PIN code <input type="radio"/> Memorize	**-- ---- Validate	
OK Select Back Cancel	Enter the same PIN Code in the two entry fields and validate it	

8.4 Parental control / pin Code - lock Programme - Parental timer

- Press MENU button to open the main menu.
- Press the ▼ button twice to bring the selection on parental control.
- You are prompted to enter your PIN code.
- Enter default 0000 PIN code.
- Press the ► button to access the “Parental control” sub options.
- The selection is now on “Change PIN code”
- You can scroll down or up with the ▼ or ▲ button to choose the required option.

8.4.1 Change PIN

Press the ► button twice to open the CHANGE PIN CODE menu:

- Enter NEW PIN CODE.
- Confirm new PIN code.
- Memorize the new PIN code.

8.4.2 Parental control

This option allows you to set the security level in using the PIN code. The different options are:

- Active always when required (PIN code always asked).
- Enabled, PIN code always required
- Enabled, PIN code entry valid for 20 min
- Enabled, PIN code valid until stand-by
- Disabled (security is disabled).

8.4.3 Maturity level





This option allows you to define the age (so called maturity level) over which the PIN code entry will be needed. Set the age that suits your needs or disable the option.






Note: This automatically controls the channel lock provided the digital signal carries maturity information.

8.4.4 Lock TV or Radio channel

These options allow you to select the TV and Radio channels you wish to lock.

Follow the on screen instructions to lock channels. The relevant channels present in the favourite lists will also have the same locking status.

PARENTAL CONTROL	Edit the parental timer	09:35
Date 	21/03	Friday, 21 March 2003
Start time 	09:00	
End time 	11:40	(160')
Repeat 	Once	
▶ Edit ◀ Return	Select a date for the parental timer	

MAIN MENU		09:35
Timers 	Language	
Favourites 	Timers	
Parental control 	Banner	
Preferences 		
Installation 		
0..9 Code BACK: EXIT	Enter PIN code to change settings	

8.4.5 Edit a parental timer

This option allows you to set an authorised time window from which the PIN code entry will be necessary.

Follow the on screen instructions to set:

- Date
- Start time
- End time
- Repetition

Note: You can set up to three parental timers.

8.4.6 Del. parental timer

This option allows you to remove a parental timer.

8.5 Preferences / language - timer - banner

- Press MENU button to open the main menu.
- Select the “Preferences”.
- Press the ▶ button to access the “Preferences” sub options.

The selection is now on “Language preferences”.

- You can scroll down or up with the ▼ or ▲ button to choose the required option.

8.5.1 Language preferences

This menu option allows you to:

- Set the preferred audio language.
- Set the subtitle preferred language.
- Enable or disable subtitles.

8.5.2 Timer preferences

This menu option allows you to:

- Select when you want to be warned of a reminder.
- Select when you want to be warned of the start of a recording.
- Set the presentation of the programme to be recorded. In this way, you record a few seconds of the banner of the programme so you can identify it easily during playback.


8.5.3 Banner preferences

This option allows you to:

- Set the banner duration in between 3 and 10 seconds.
- Set the banner transparency to on or off.

9 Menu tree

English

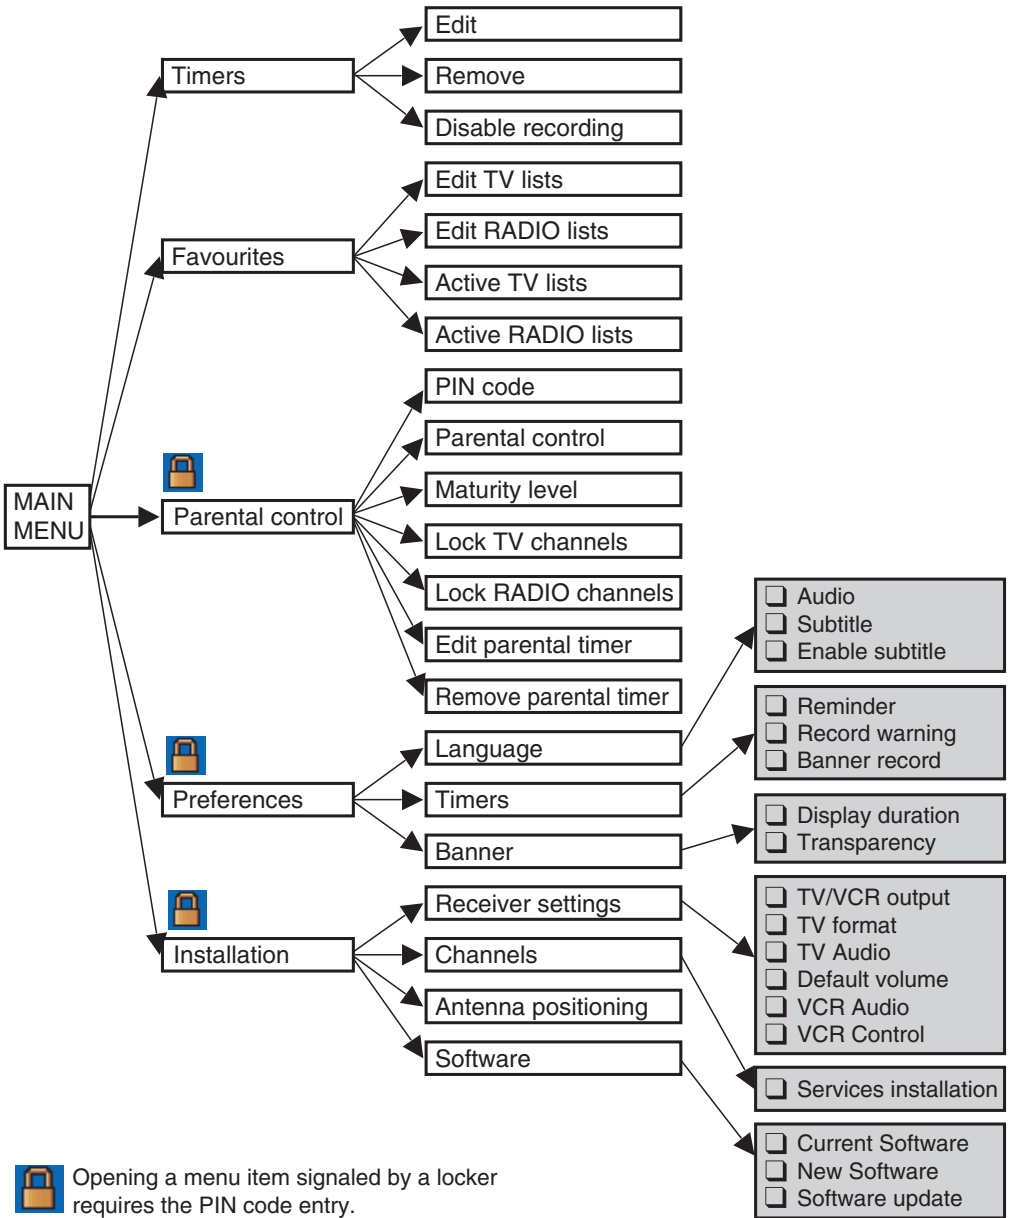

10 Advanced settings

10.1 Restore virgin mode

“Install wizard” is shown only once at the first power up of your receiver.

If you want to reinitialise your receiver and put it back to virgin / factory mode. follow the steps below.

- Disconnect your receiver from the mains.
- Keep pressing the Front Panel '+' button while re-connecting your receiver to the mains.
- The Multicoloured LED will start to blink orange while Red LED remains on.
- Release the '+' button.
- Briefly press the front Panel '+' button.
- Red LED is still on and the Multicoloured LED is blinking Red.
- Enter the following code with the remote control: '9' '9' '0' '0'.
- Once entered, the Multicoloured LED is Green. In case of a bad code entered, the Multicoloured LED stays Red.
- Wait until the receiver re-starts by displaying the First Install Wizard.

Note: After this procedure, your PIN code has also been reset to its factory setting ('0', '0', '0', '0'), and all "Favourite" lists will be lost.

10.2 Change remote control settings

If you have other equipment in your home that the Philips receivers remote control interferes with, you can select an alternative setting. Follow the sequence below:

Step 1 change the remote control setting:

- Simultaneously press number buttons 1 and 3 for 3 seconds.
- Simultaneously release both buttons.
- Press either button 3 or 4 (see below) within 60 seconds:
 - Pressing number button 4 sets the remote to the new/alternative setting.
 - Pressing number button 3 sets the remote to the default factory setting.

The remote can be tested by trying to control the receiver, if the change has been successful the remote control will no longer operate the receiver until the receiver is also changed.

Note: When the remote control is first powered up, or if the batteries are changed while a button is pressed, the default factory setting (value 3) is restored.

Step 2 change the receiver setting:

- Disconnect your receiver from the mains.
- Press and hold the '+' button on the front panel while re-connecting your receiver to the mains...
- First the red R/hand LED will come on. Then the L/hand orange LED and the R/hand red LED will be on. Next the R/hand red LED will go out and the L/hand orange LED will blink.
- At this point release the '+' button.
- Press the OK key on your remote control.
- The orange blinking LED will momentarily change to either green or red.
- If the LED momentarily turned green the new code has been accepted. Wait until only the L/hand LED is permanently illuminated either orange (your receiver is in standby) or green (your receiver is on).
- If the LED momentarily turned red the new code has not been accepted. Wait until only the L/hand LED is permanently illuminated either orange (your receiver is in standby) or green (your receiver is on). The receiver returns to the setting before the attempted change. Repeat step 2.

10.3 You forgot your PIN code / Master PIN code

If you have forgotten your PIN code, you have the possibility to reset it to the default PIN Code ('0', '0', '0', '0').

To reset the PIN Code, you have to enter the Master PIN Code in any Pin Code request menu. This will have the effect to accept the PIN Code and to reset the PIN Code to the default PIN Code of the receiver.

The Master PIN Code is the following: ('RED', '3', '8', '9', '5').

Note: Keep this code secret to prevent your children from using it.

10.4 More about Recording / Easy Recording – VCR control


10.4.1 Connection for Easy recording

This connection allows automatic recording without necessity of programming your VCR. Prior deciding for this connection method:

- Consult the user manual of your VCR / DVD Recorder to check if and how this feature is supported. Most Philips VCR and DVD Recorders support one of the two easy recording options.
- Verify that your TV and VCR both have two SCART sockets.

Incorporate your receiver in your existing installation as shown below:

- Plug your aerial lead plug into the "AERIAL IN" socket of your digital receiver.
- Connect the "RF OUT" socket of your digital receiver to the "Aerial input" socket of your VCR by means of the RF coaxial lead supplied with your digital receiver.

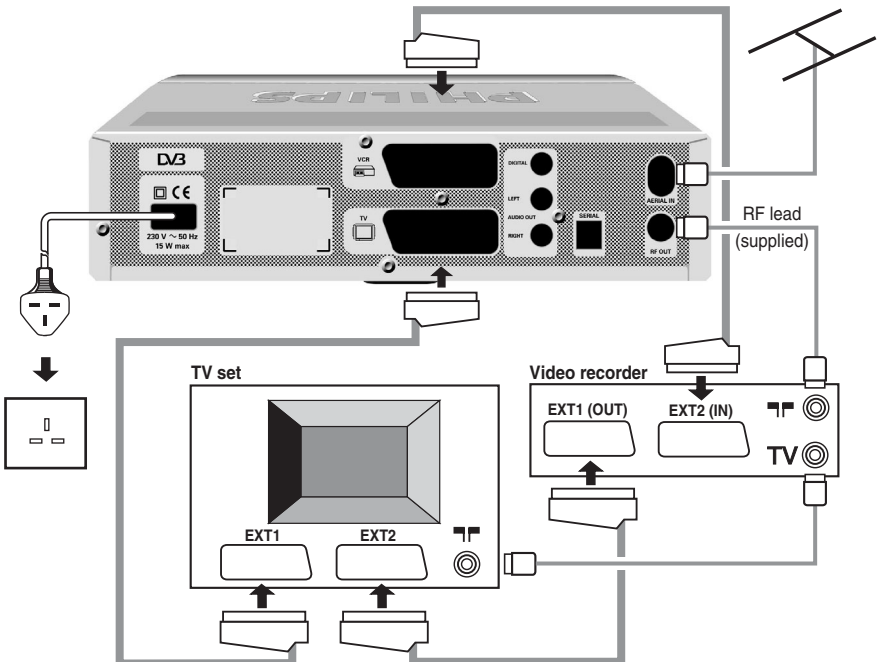

- Connect the “RF OUT” socket of your VCR to the “Aerial input” socket of your TV by means of a RF coaxial lead.
- Connect the “TV” SCART socket of your digital receiver to the “EXT1” SCART socket of your TV by means of the SCART lead supplied with your digital receiver.
- Connect the “VCR” SCART socket of your digital receiver to the “EXT2” SCART socket of your VCR (so called “IN”) by means of a SCART lead.
- Connect the “EXT1” SCART socket of your VCR (so called “ OUT “) to the “EXT2” SCART socket of your TV by means of a SCART lead.
- Plug all your equipment, excluding your digital receiver, into the mains.
- Switch on your TV and select a channel.
- Plug your digital receiver into the mains. Your digital receiver will display the WELCOME screen (the left hand LED will be illuminated green).
- Read chapter 7 to proceed with the channel scan of your digital receiver if not already done.

Note:

- *With this connection set up:*
- *You can watch digital TV while you record analogue TV.*
- *You can watch analogue TV while you record digital TV.*
- *You can record the digital TV channel you are watching without programming your VCR.*

10.4.2 Digital receiver and VCR settings

Refer to chapter 8.2.1.6 on how to enable the “Easy Recording” function of your digital receiver.

- Depending on your VCR brand and type you have to set the “VCR control” option to “Prepare Record” or “Record Link”. Refer to the user manual of your VCR alternatively try the two options to find out the most suitable.
- Set your VCR to the mode allowing control by your digital receiver.

10.4.3 How to make a recording with the VCR control feature?

- Your digital receiver , TV and VCR are connected and set according to 10.4.1-2.
- You have programmed a timer with your digital receiver.
- At timer start your VCR starts recording and at timer end your VCR stops recording under the control of your digital receiver. You no longer need VCR programming to record digital TV channels.

10.4.4 Timer / Front panel indicator

Feedback on front panel LED's:

- While a Timer is running, the Receiver is locked to prevent any inadvertent action from damaging the recording.

To indicate that the receiver is recording, the Front Panel LEDs will signal as follows:

- Right hand red LED on.
- Left hand Multicoloured LED Orange for recording during standby or Green for Recording while watching.

10.4.5 Cancel a running Timer

While a Timer is running, the Receiver is locked to prevent any inadvertent action from damaging the recording.

The following procedure allows you to cancel the current running Timer:

- Press the ‘Timer’ Key.
- Press the ‘0’ Key.
- The Receiver is now unlocked.

10.4.6 Errors during recording

Three kinds of error can occur during the recording:

- Lost of input signal.
- Lost of power.
- Locked channel.

Your Philips receiver can detect those errors during the recording, it will signal you those errors the next time you will use it by a means of an Alarm.

II Trouble shooting guide

Experiencing difficulty operating your digital receiver? Check the following points first!

For UK, the telephone number in the Worldwide guarantee leaflet should read 0870 9009070.

Problem	Possible cause	Action
No picture, no sound and no front panel indication.	Receiver is not plugged into the mains. None of the front LED's are on.	Check mains connection and press the LOW POWER button on the front of the receiver.
No picture, no sound but the front panel shows orange left hand LED on.	The receiver is in standby.	Press either P+ or P- button or any number button to bring the receiver out of standby.
No wake up at Remote Control key press and the Red right hand LED is on.	Your receiver is in Low Power Mode.	Press the Low Power Button on front panel then press any Remote Control number button to wake up your receiver.
No picture, no sound but the front panel shows the Green left hand LED on.	You are viewing standard analogue television.	Press the TV/STB button on your remote.
	The SCART connection to the TV is incorrect or is loose. Your TV has not selected the correct AV/EXT channel.	Check SCART TV connection, making sure cables are firmly pushed into the sockets. Try manually selecting the AV/EXT channel on your TV.
The remote does not operate.	A timer is running, the receiver is locked, the front LED's are either Green / Red or Orange / Red	Press successively the "TIMER" and the "0" buttons to cancel the TIMER and unlock the receiver.
	The remote control batteries have been inserted incorrectly or are dead.	Check the condition of the batteries and replace if necessary.
	You are not aiming your remote control at the receiver.	Make sure you aim the remote at the receiver and not at the TV.
You cannot find all the channels you think should be available.	The signal to your aerial may be weak.	Try retuning your receiver, following the relevant steps in chapter 7. If you are still missing channels, your aerial may need adjusting.
	Your aerial may need adjusting or your local transmitter may not be working.	Call your local dealer.

Problem	Possible cause	Action
You sometimes see a squared pattern on the screen, your picture is "Freezing" or a picture showing a TV with a noisy pattern.	There could be a transmission problem. Your aerial may have been moved, for example by severe weather. Your aerial connection have become loose or disconnected.	This is normally only a temporary situation and should correct itself. If it persists, contact ITV Digital customer channels. Check signal quality and if necessary re-align your aerial. Check all aerial connections and make sure they are all firmly pushed into sockets.
I cannot select all of my channels and the P+/- or Arrow up/down buttons do not always work.	Some channels have been selected as favourites and the favourites mode is on.	Use Fav button to select an other Favourite list. Use the All TV Channel list to see all possible TV channels.
Even if I use the number buttons I cannot access a particular channel.	The parental lock has been activated on this channel and an OSD message ask for your parental code.	Enter your parental code to access the channel or remove it as a locked channel. See sections 8.4.2 for more details.
I have forgotten my parental code.		See section 10.3
I set the timer but it did not record what I wanted.	The video was set incorrectly.	Make sure that your video is set for the same time as your digital receiver. Alternatively use one of the Easy Recording options to control automatically your VCR (see chapter 10.4)
The order of my channels has changed.	They have been re-arranged as described in section 8.3.1.2	Refer to this section to change the order again.
The on-screen displays are not as sharp as I expected.	If you have connected using SCART and you have an RGB compatible TV, one of the receiver settings could be wrong. You have connected the receiver TV SCART to a SCART socket of your TV set which is not RGB capable	Refer to chapter 8.2.1 and alter the "TV / VCR output" setting to RGB/CVBS. Check if the TV SCART socket of the TV is RGB capable, if not refer to the user manual of your TV to change the SCART connection to your TV.
The picture on some channels seems to have been stretched or squashed.	The broadcast is probably in widescreen and the receiver settings may not be correct.	Check the receiver "TV format" option setting, following the information in chapter 8.2.1. If you have a widescreen TV, you may also need to check the settings on your TV.

12 Technical specification

This product is in conformity with the requirements of the 95/47/EC directive and 2002/21/EC directives.

Video decoding

- MPEG-2 DVB compliant up to MP@ ML
- Video bit rate: up to 15 Mbit/sec
- Video format: 4:3 (letter box if source is in 16:9) and 16:9
- Resolution: up to 720x576 pixels

Audio decoding

- MPEG layer I / II

Operation/Features

- Automatic program installation via scanning
- TV & Radio modes
- Free to air reception
- 4 favourite TV lists
- 4 favourite Radio lists
- programme editing for personalised installation (delete, add, move)
- Subtitles
- Parental lock with PIN code
- Full remote controlled
- Menu controlled installation and operation using On Screen Display
- 8 VCR timers
- Automatic recording via: Timer programming and Easy recording for Philips VCR and DVD- RW
- Automatic VCR play back : Audio L/R + CVBS or RGB / Fast blanking
- Full range RF loophthrough
- Receiver compatible with services based on MHEG 5
- Now & Next ESG
- Software upgrade via over the air download
- Low power mode
- Suited for feeding a Video projector

Application system resources

Processor clock speed 166 MHz
SDRAM - CPU/Video-Graphics 16 MB
Flash memory 4 MB
Terrestrial antenna interface

- RF input: IEC 169-2 female connector
- RF output (bypass): IEC 169-2 male connector

Reception-Demodulation

- Demodulation type: COFDM 2K / 8K
- Network : MFN / SFN
- Input frequency range : UHF IV / V
- Loophthrough frequency range (MHz): 47 - 862 MHz

Connections

TV SCART

Output: CVBS or S-Video or RGB/ Fast blanking
Volume Controlled
audio L/R, RGB , Slow blanking, Fast blanking.

VCR SCART

Input: CVBS or RGB / Fast blanking, Slow blanking, Audio L/R,
Output: CVBS or S-Video Audio L/R, Slow blanking during timer if "Prepare Record" mode is activated.

Audio CINCH:

Analog audio output: L / R
Digital audio output: Dolby Digital or PCM

Serial interface: RJ 9


Accessories

- Remote control: Type RC19336002
- Scart cable
- User manual
- Worldwide Guarantee booklet
- Batteries: 2 x 1.5V type AA/R06
- RF cable
- Mains cord

Miscellaneous

- Temperature range (°C)
Operating +5 to 45
Storage -10 to +70
Mains: 230 V ~ +/-10%
50 Hz
- Power consumption: 10W max
- Standby consumption: 6 W max
- Low power mode: 1 W max
- Weight 1.400 kg
- Including packaging 2.500 kg
- Dimensions: 260x230x60

The product complies with the following European council Directives :

 - 73/23/EEC
- 93/68/EEC
- 89/336/EEC

Due to continued product improvements, this information is subject to change without notice.

