

Fisher-Price®

V4436



www.fisher-price.com



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Consumer Information



WARNING

Prevent Entanglement Injury

- Keep mobile out of baby's reach.
- Remove mobile portion of product from crib or playpen when baby begins to push up on hands and knees.
- This product may not attach to all crib designs. Do not add additional strings or straps to attach to crib or playpen.
- Use **ONLY** attached to a crib or playpen.

IMPORTANT! Always attach with all provided fasteners tightly to a crib or playpen according to the instructions. Do not add additional strings or straps to attach to a crib. Check frequently.

- Please keep this instruction sheet for future reference, as it contains important information.
- Requires three "C" (LR14) **alkaline** batteries for mobile/base operation (batteries not included).
- Adult assembly is required.
- Tool required for assembly: Phillips screwdriver (not included).
- The mobile portion of this product may be used from birth until 5 months.
- The base portion of this product may be used from birth until 24 months.
- A crib mobile is intended for visual stimulation and is not to be grasped by a child.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy. The soft toys are surface washable.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Parts



Mobile Arm

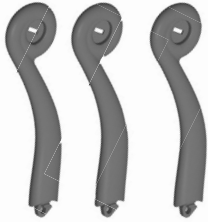

3 Thick Spokes



3 Toys



Mobile Cap




3 Thin Spokes



Base

Note: All of the screws used to assemble this toy are attached to the product. Follow these instructions carefully to fully secure the screws. Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

Battery Installation

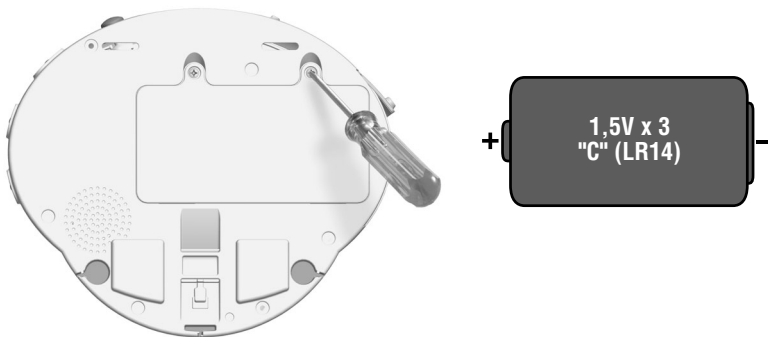

- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "C" (LR14) **alkaline** batteries.

*Hint: We recommend using **alkaline** batteries for longer battery life.*

- Replace the battery compartment door and tighten the screws.
- When sounds or motion become faint or stop, it's time for an adult to change the batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembly

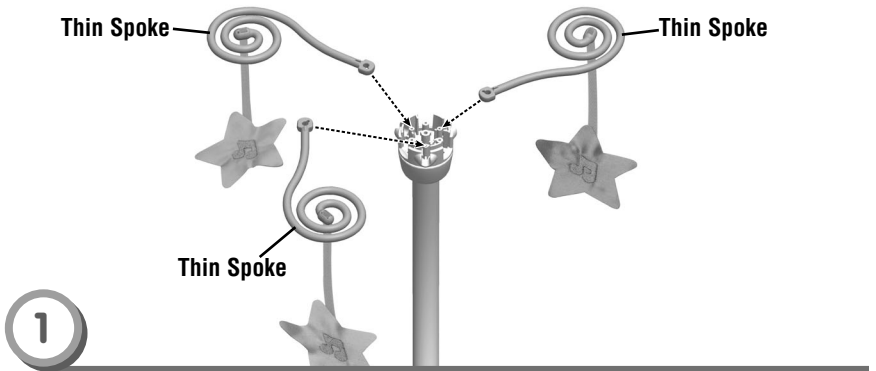


- Fit the thin mobile spokes onto the pegs on the mobile arm.

Hint: The spokes are designed to fit on alternating pegs one way. If a thin spoke does not seem to fit, try the next peg.

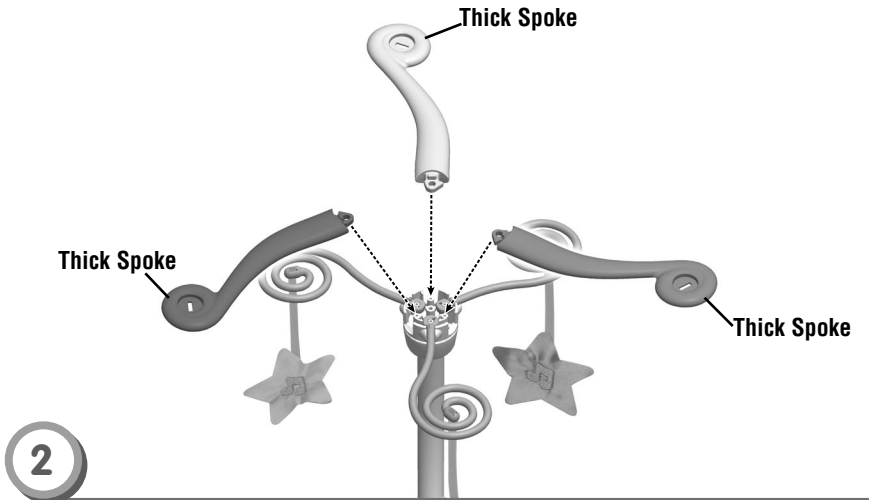


- Fit the thick mobile spokes onto the remaining pegs on the mobile arm.

Assembly


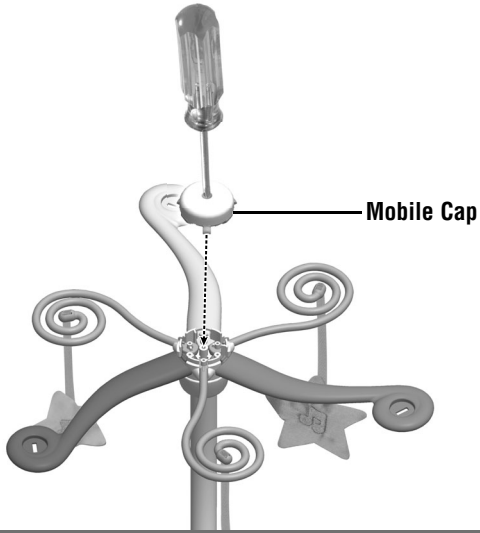


- Fit the mobile cap over the ends of the thin and thick spokes and onto the top of the mobile arm.
- Tighten the screw in the mobile cap.

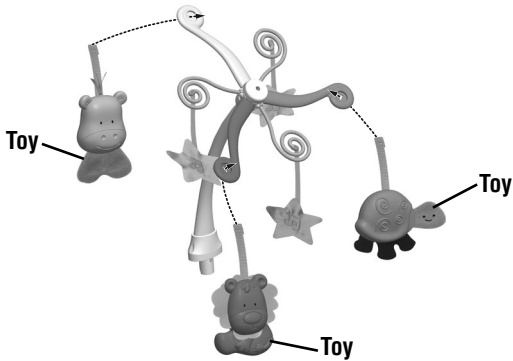

- Fit the T-end of the strap on each mobile toy through the slot in each thick spoke.
- Pull down on each toy to be sure it is secure.

Assembly

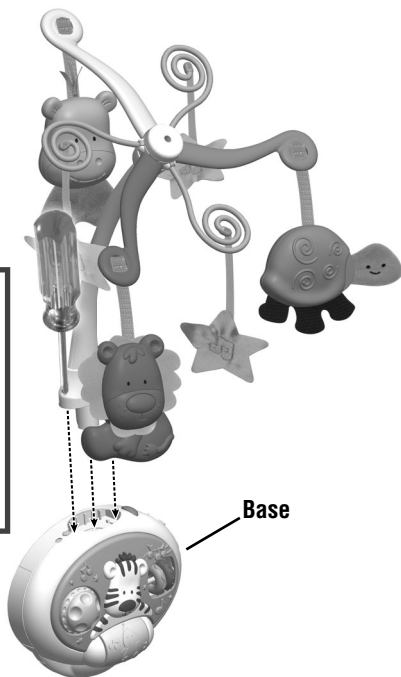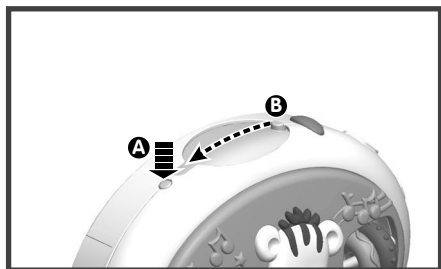


5

- First, press the button on the base next to the socket **A** and then slide the socket door open **B**.
- Fit the mobile arm into the socket in the base and tighten **both** screws.

Crib Attachment

IMPORTANT! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Do not add additional strings or straps to attach to a crib. Check frequently.

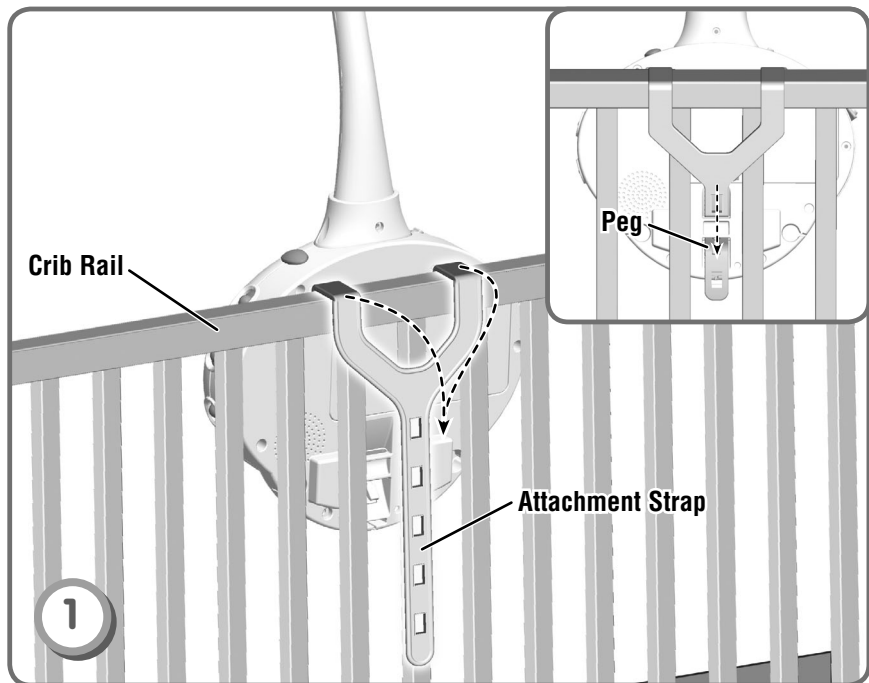


IMPORTANT! If you are attaching this toy to a crib side rail that can be lowered and raised, make sure the crib side rail is in the raised (locked) position whenever a child is in the crib.


- Position the base inside the crib.
- Wrap the attachment strap around the top of the crib rail.
- Slide the end of the attachment strap under the tabs on the back of the base.
- Fasten the attachment strap slot to the peg on the back of the base.

Note: This toy should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.

Crib Attachment

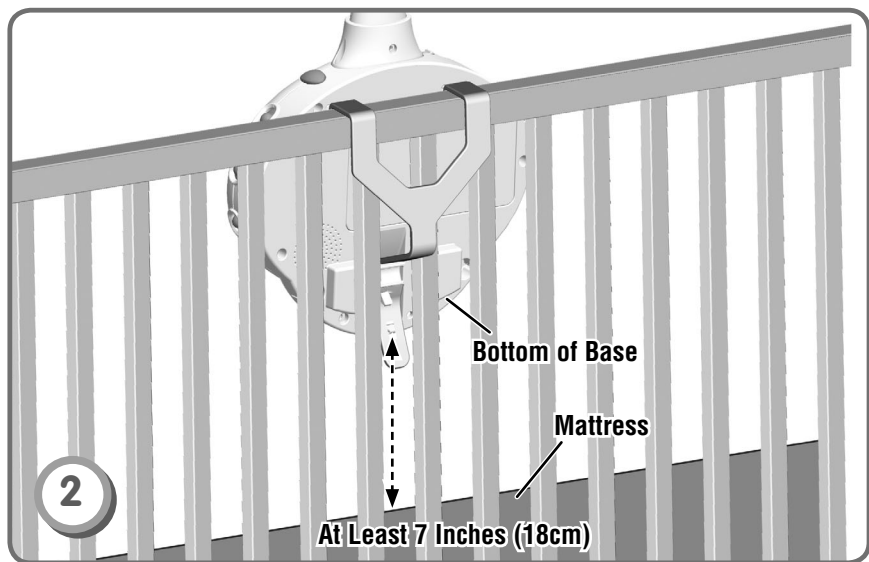


- Make sure the distance between the bottom of the product and the crib mattress is **at least 7 inches (18cm)**.
- If the distance is less than 7 inches (18cm): readjust the attachment strap to lift the product; or lower the crib mattress.

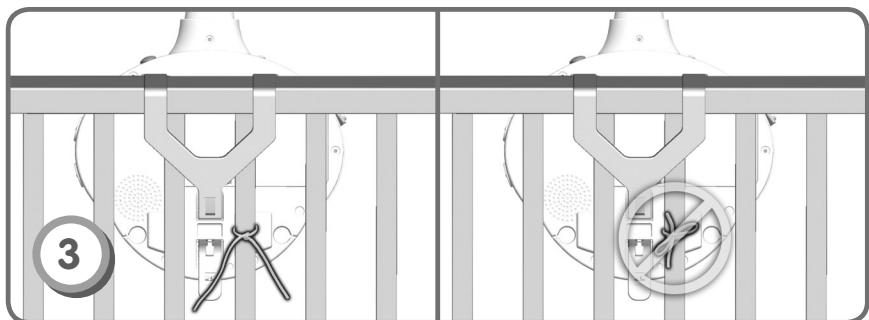

- Tie the toy's strings to a crib spindle.

Note: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

Use

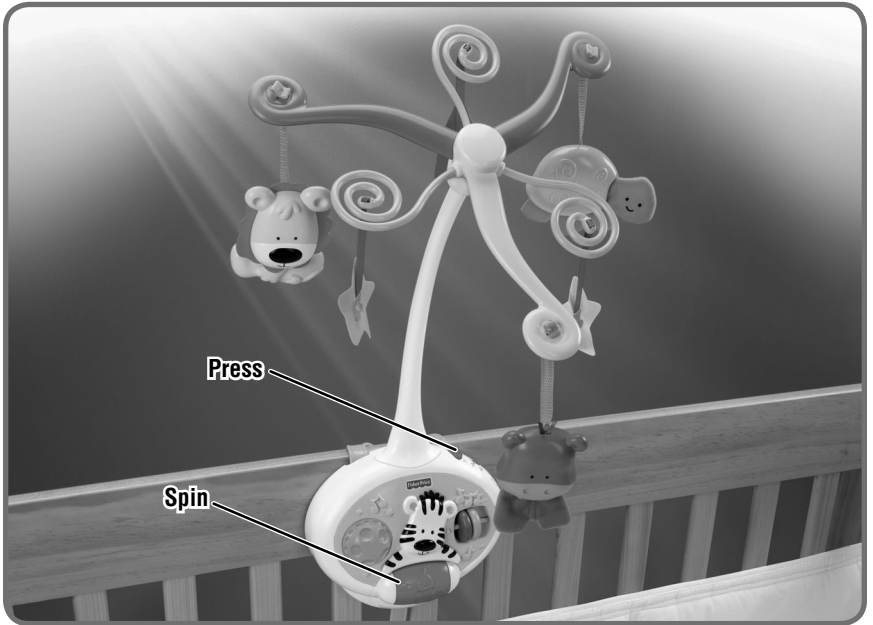

Power/Volume Switch

- Slide the switch to ON with low volume (◀) or ON with high volume (▶). When finished using the product, slide the switch OFF (○).



Music Switch

- Slide the switch to select:
 - Soothing (moon icon)
 - Active (sun icon)



Mobile Switch

- Slide the switch to select a mode:
 - Music and Motion (music note with circular arrow icon)
 - Music only (music note icon)


- Spin the roller or press the button to start the music or mobile.

Convert to Music Box

Remove the mobile and use as a music box!



- Loosen both screws in the arm near the base. Lift and remove the arm.
 - Close the socket door on top of the base.
- Hint:** *The socket door must be completely closed for use as a music box.*
- Store the mobile in a safe place for future use.

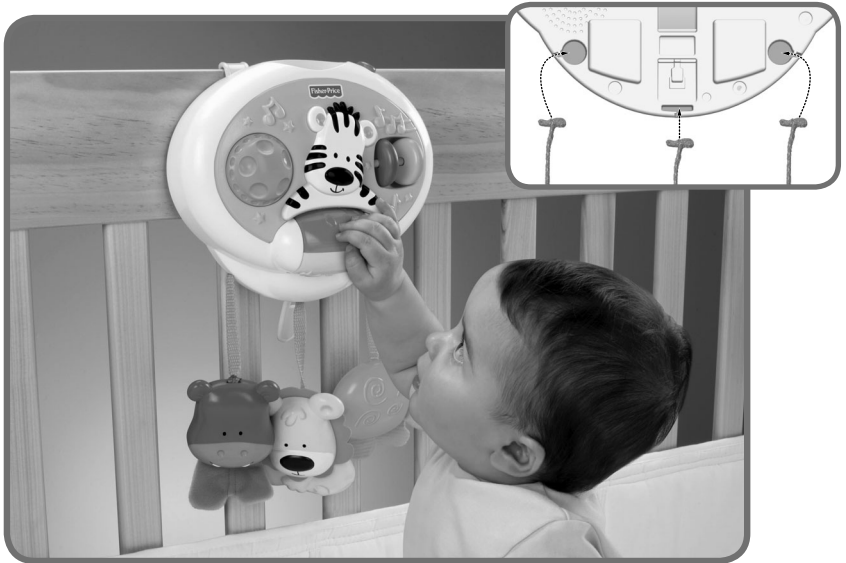

- The toys can be removed from the mobile and inserted into the slots on the base.
- Fit the T-end of the strap on each toy through the slots in the base.
- Pull down on each toy to be sure it is secure.