


NAVI-Controller

NO:A

We would like to thank you for your purchasing Beat-Sonic NAVI-Controller. Please read this user's manual carefully before using the product to ensure proper use, operation and retention of warranty services.

NAVI-Controller Operation Manual


* This product utilizes a manual switching operation so please install where it can be easily accessible.

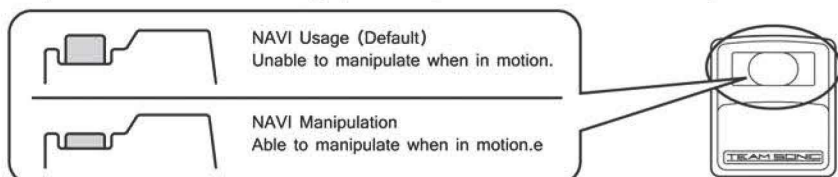


※ While manipulating NAVI, an error occurs with the car location, maintenance information, etc. Also, once the switch is back into its original position, the car location needs time to reset. (Depending on driving condition, environmental circumstance, navigation capability, etc., the time for the NAVI to return changes.)

※ No matter if the switch is on or off, the television cannot be viewed while in motion.

NAVI-Controller Installation Manual

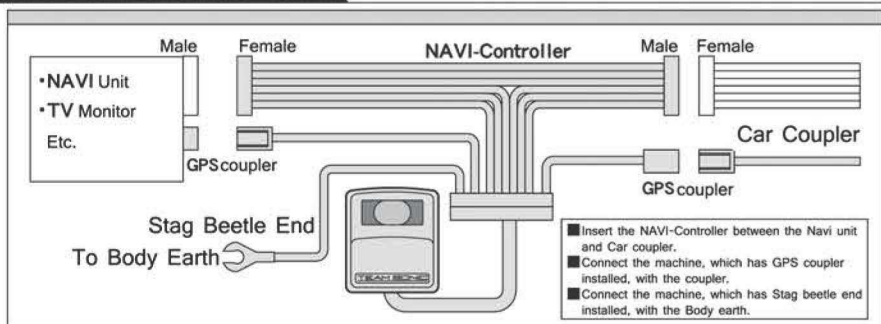

Connector Locations

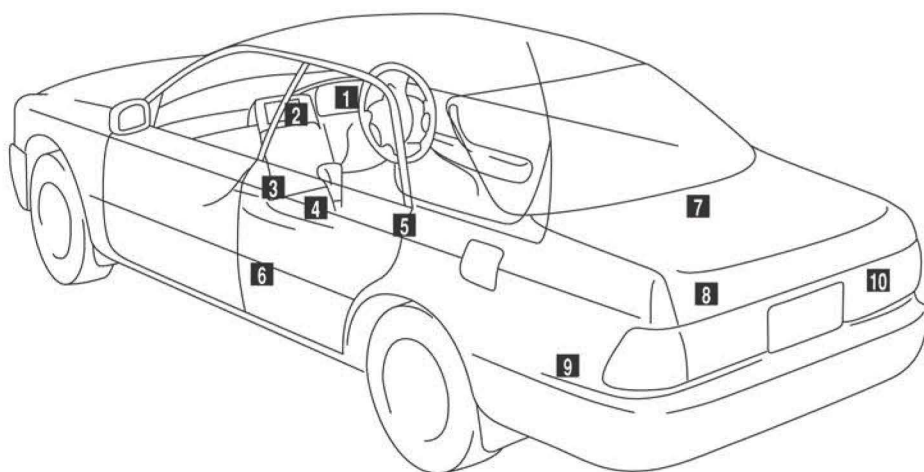

Steps

The way to separate the center panel for each brand of automobile is different, so please obtain all necessary materials from the dealer and operate with caution.

- 1 Stop car engine and disconnect the battery minus end.
- 2 Locate NAVI unit/TV monitor. Separate the seat, meter, etc. as needed.
- 3 Pull out the connector that looks similar to the NAVI-Controller's connector from the NAVI unit/TV monitor. Connect the pulled out connector to the NAVI-Controller and connect the NAVI-Controller's connector to the NAVI unit/TV monitor.
- 4 Connect the battery minus end and conduct a test drive. Check if the NAVI is able to be manipulated while driving.
 - ※ Test drive must be conducted by two or more people.
 - ※ Someone, other than the driver, must check for movement.
 - ※ If a car has a security system installed, all cables must be in the original position before testing.
- 5 If there is a problem with NAVI and television while driving, make sure the connector is connected properly.
- 6 Once everything is working properly, use the provided double-sided tape to place the NAVI-Controller in a fixed position, where it does not interfere with the switch and any other parts. After it is stable, return all separated parts to the original position and then the installation is over.

Warning: Operation

- ※ This product is made to be operated by passengers other than the driver. Driver should not be operating the NAVI while driving.

Warning: Installation

- ※ Choose an installation location where it does not interfere with driving and handling.
- ※ Make sure installation does not damage piping, tanks, wires, etc.
- ※ Do not install in places with moisture, humidity, and dust.
- ※ Beatsonic is not responsible for any problems, damages, injuries, illegal acts, etc., caused while using this product.

Warning: Before Installation

- ※ Disconnect all battery minus end while working with cables.
- ※ Always use protective tape to secure wires.



Before Maintenance Check-up

- ※ Before going into maintenance, please check the installation and harness connections.
- ※ If problem continues, disassemble the product and return to the retail location where purchased or contact Beatsonic for maintenance.
- ※ If maintenance is desired, please write the condition on paper and attach with warranty.
- ※ A fee will be charged if claiming without warranty.
- ※ Warranty can be used only when disassembling, fixing, adjusting, and changing is done by Beatsonic.

About Customer Service

- ※ Product is guaranteed from defects for 1 year from the date of purchase.
- ※ Check all writing on the warranty, such as purchased date, purchased location, etc., and keep it in a safe place for future purposes.

The location of the connector is different for each vehicle model, so after checking the package and instructions label, disassemble the TV monitor and others and then connect.

1 Back of Meter Panel

When meter panel is disassembled, NAVI unit can be found in the back. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

2 Back of TV Monitor

After disassembling the center panel, unscrew the TV monitor and pull out the unit. On the back of the TV monitor, pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to TV connector.

3 Lower inside of Audio Unit

After pulling out the center panel, the NAVI unit can be found once the TV, audio, etc., is separated. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

4 Under the Center Console

When the center console is pulled out, the NAVI unit can be found. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

5 Under the Driver's Seat

Pull forward the driver's seat and look for the NAVI unit under the seat. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

6 Under the Passenger Seat

Pull forward the passenger seat and look for the NAVI unit under the seat. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

7 Above center of Trunk

Open the trunk and disassemble the front. The NAVI unit can be found on the top, above center of the trunk. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

8 Lower center of Trunk

Open the trunk and disassemble the front. The NAVI unit can be found on the lower center of the trunk. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

9 Left of Trunk

Open the trunk and disassemble the front. The NAVI unit can be found on the left of the trunk. Pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit.

10 Right of Trunk

Open the trunk and disassemble the front. The NAVI unit can be found on the right of the trunk. Pull out the connector that resembles the NVK main system's connector and connect to NVK, the connect NVK connector to NAVI unit.

Back of NAVI Unit

Unscrew and pull out the NAVI unit. On the back of the NAVI unit, pull out the connector that resembles the NVK main system's connector and connect to NVK, then connect NVK connector to NAVI unit. (Location of NAVI unit installation is different for every vehicle so contact the dealer.)