BD-D8200A BD-D8500A

BD-HDD Combo user manual

imagine the possibilities

Thank you for purchasing this Samsung product. To receive a more complete service, please register your product at www.samsung.com/register



Key features

Blu-ray[™] Disc Features

Blu-ray Discs support the highest quality HD video available in the industry - Large capacity means no compromise on video quality.

The following Blu-ray Disc features are disc dependant and will vary.

Appearance and navigation of features will also vary from disc to disc.

Not all discs will have the features described below.

For High-Definition Playback

To view high-definition contents on a Blu-ray Disc, you need an HDTV (High Definition Television). Some Blu-ray Discs may require you to use the product's HDMI OUT to view high-definition content.

The ability to view high-definition content on Blu-ray Discs may be limited depending on the resolution of your TV.

BD-LIVE

You can use a Blu-ray Disc that supports BD-LIVE to download content provided by the disc manufacturer through a network connection.

BD-HDD Combo Features

3D

This product can play 3D contents through an HDMI cable.

To implement the 3D effect, connect a 3D device (3D-compliant AV receiver, 3D-compliant TV) to the product using an HDMI cable, and play the 3D content while wearing 3D vision glasses.

3D Conversion

When you play 2D contents, you can convert 2D into 3D contents by pressing the $2D \Rightarrow 3D$ button on the remote control.

Smart Hub

You can download various for pay or freeof-charge applications through a network connection. These applications provide a range of Internet services and content including news, weather forecasts, stock market quotes, games, movies, and music.

AllShare

You can play videos, music, and photos saved on your devices (such as your PC, mobile phones, or NAS) through a network connection.

Playing multimedia files

You can use the USB connection to play various kinds of multimedia files (MP3, JPEG, DivX, etc.) located from a USB storage device.

Digital TV

- This product have dual DTV Tuner. So user can change DTV Programme during recording a programme. As the benefit of dual tuner eliminates the unconvinience of retaining channel when you want to record it.
- Functionalities related to Digital TV (DVB) are only available in countries/areas where DVB-T (MPEG2 and MPEG4 AVC) digital terrestrial signals are broadcasted or where you are able to access to a compatible DVB-C (MPEG2 and MPEG4 AAC) cable-TV service. Please check with your local dealer the possibility to receive DVB-T or DVB-C signal.
- DVB-T is the DVB European consortium standard for the broadcast transmission of digital terrestrial television and DVB-C is that for the broadcast transmission of digital TV over cable. However, some differentiated features like EPG (Electric Programme Guide), VOD (Video On Demand) and so on, are not included in this specification. So, they cannot be workable at this moment.
- Some Digital TV functions might be unavailable in some countries or regions and DVB-C might not work correctly with some cable service providers.
- This product can record TV channel in HDD or external devices.

Safety Information

Warning

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

A	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	This symbol indicates important instructions accompanying the product.

Do not install this equipment in a confined space such as a bookcase or similar unit.

WARNING

To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

CAUTION

BD-HDD Combo USES AN INVISIBLE LASER BEAM WHICH CAN CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE BD-HDD Combo CORRECTLY AS INSTRUCTED.

CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

This product satisfies CE regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

IMPORTANT NOTE

The mains lead on this equipment is supplied with a molded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug. If it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains jack, as there is a risk of shock hazard from the bared flexible cord.

To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

The product unit accompanying this user manual is licenced under certain intellectual property rights of certain third parties.

Safety Information

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION :

- CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM (IEC 60825-1)
- THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
PRODUCTO	LÁSER CLASE 1

Precautions

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below.

Keep these operating instructions handy for future reference.

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including AV Receivers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- **11.** Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when



moving the cart/apparatus combination to avoid injury from tip-over.

- **13.** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Viewing using 3D function

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES. Read and understand the following safety information before using the 3D function.

 Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea, and headaches.

If you experience any such symptom, stop viewing 3D TV, remove the 3D Active Glasses, and rest.

- Watching 3D images for an extended period of time may cause eye strain. If you feel eye strain, stop viewing 3D TV, remove your 3D Active Glasses, and rest.
- A responsible adult should frequently check on children who are using the 3D function.
 If there are any reports of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest.
- Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.)
- Do not use the 3D function or 3D Active Glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may cause you to bump into objects, trip, and/or fall, and cause serious injury.
- When displaying 3D programme with this model, the actual screen may appear as shown below:

Screen Display		Description		
Side by Side		Same screen duplicates horizontally.		
2	Top & Bottom	Same screen duplicates vertically.		

 3D programme reception, recording and playback of this model may not fully support 3D, due to the 3D broadcast format is not yet standardized worldwide. It is not the product's malfunction or disorder.

Disc Storage & Management

Disc Handling

Disc Shape

Use discs with regular shapes. If you use an irregular of the disc (a disc with a special shape), you can damage the product.

Holding discs

 Avoid touching the surface of a disc where data has been recorded.



Blu-ray Discs

- Do not leave a Blu-ray Disc in the product for long periods of time. Remove the Blu-ray Disc from the product and store it in its case.
- Be careful not to scratch or leave fingerprints on the surface of the Blu-ray Disc.

DVD-VIDEO, Audio CD (CD-DA)

• Wipe off dirt or contamination on the disc with a soft cloth.

Disc Storage

Be careful not to damage the disc because the data on these discs is highly vulnerable to the environment.

- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.
- If you move your product suddenly from a cold place to a warm place, condensation may occur on the operating parts and lens and cause abnormal disc playback. If this occurs, unplug the product, wait for two hours, and then connect the plug to the power outlet. Then, insert the disc, and try to play back again.

Safety Information

HDD (Hard Disk Drive)

The hard disk has a high storage density, which enables long recording durations and quick access to written data. However, it can easily be damaged by shock, vibration or dust and should be kept away from magnets.

To avoid losing important data, observe the following precautions.

- Do not use the BD-HDD Combo in a place subject to extreme changes in temperature.
- Do not apply a strong shock to the BD-HDD Combo.
- Do not place the BD-HDD Combo in a location subject to mechanical vibrations or in an unstable location.
- Do not place the BD-HDD Combo on top of a heat source.
- Do not disconnect the AC power cord while the power is on.
- Do not attempt to change the hard disk. This may result in a malfunction.

Should the hard disk be damaged, you cannot recover lost data. The hard disk is only a temporary storage space.

Handling Cautions

- Do not write on the printed side with a ball-point pen or pencil.
- Do not use record cleaning sprays or antistatic sprays to clean discs. Also, do not use volatile chemicals, such as benzene or thinner.
- Do not apply labels or stickers to discs. (Do not use discs fixed with exposed tape adhesive or leftover peeled-off stickers.)
- Do not use scratch-proof protectors or covers.
- Do not use discs printed with label printers available on the market.
- Do not load warped or cracked discs.
- Before connecting other components to this product, be sure to turn them off.

- Do not move the product while it is playing a disc. The disc can be scratched or damaged and the product's internal parts can be damaged.
- Do not put a flower vase filled with water or any small metal objects on the product.
- Be careful not to put your hand into the disc slot.
- Do not place anything other than the disc in the disc slot.
- Interference from exterior sources such as lightening and static electricity can affect the normal operation of this product. If this occurs, turn the product off and on again with the **POWER** button, or disconnect and then reconnect the AC power cord to the AC power outlet. The product will operate normally.
- Be sure to remove the disc and turn off the product after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the product for long periods of time.
- To clean a disc, wipe it in a straight line from the inside to the outside of the disc.



- Do not expose the product to any liquid.
- When the AC plug is connected to a wall outlet, the product will still draw power (standby mode) when it is turned off.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The main plug is used as a disconnect device and shall stay readily operable at any time.
- Do not touch the power plug with a wet hand. Otherwise, it can cause an electric shock.
- Do not share one power socket with multiple electric devices. Otherwise, it may cause an overheat, resulting in a fire.
- If you encounter an abnormal noise, burning smell or smoke, turn off the power switch immediately and disconnect the power plug from the wall outlet. Then, contact the nearest customer centre for technical assistance. If you still use the product as it is, this may cause an electric shock or fire.

Maintenance of Cabinet

Before you clean the Blu-ray Disc's cabinet, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

Restrictions on Playback

 This product may not respond to all operating commands because some Blu-ray Disc, DVD, and CD discs allow specific or limited operation and provide only certain features during playback.

Please note that this is not a defect in the product.

 Samsung cannot guarantee that this product will play every disc bearing the Blu-ray Disc, DVD or CD logo because disc formats evolve, and problems and errors may occur during the creation of Blu-ray Disc, DVD, and CD software and/or the manufacture of discs.
 Please contact the SAMSUNG customer care centre if you have questions or encounter difficulty in playing Blu-ray Disc, DVD, or CD discs in this product. Also, refer to rest of this user manual for additional information on playback restrictions.

Contents

KEY FEATURES	 Blu-ray[™] Disc Features BD-HDD Combo Features
SAFETY INFORMATION	 Warning Precautions Important Safety Instructions Viewing using 3D function Disc Storage & Management Disc Handling
GETTING STARTED	 Before using the User Manual Disc Types and Contents your product can play Disc types your product cannot play HDD Recording Disc Types Region Code Supported File Formats Connect a USB device before using the Time shift and Recorded TV functions Blu-ray Disc Compatibility Copyright Logos of Discs the Product Can Play Accessories Front Panel Rear Panel Remote Control Setting the Remote Control to Operate Your TV TV Control Codes

CONNECTIONS	2
	2
	4
	4
	1

25 Connecting to a TV with an Audio/Video cables and RF cable

26 Connecting to a TV

- 26 Case 1 : Connecting to a TV with an HDMI Cable - Best Quality (Recommended)
- 27 Case 2 : Connecting to a TV with a Component Cable - Better Quality
- 28 Case 3 : Connecting to a TV with an Audio/Video cable Good Quality

CONNECTIONS

29 Connecting to an Audio System

- 29 Case 1 : Connecting to an Audio System (HDMI supported AV receiver) - Best Quality (Recommended)
- 30 Case 2 : Connecting to an Audio System (Stereo Amplifier) - Good Quality
- 30 Case 3 : Connecting to an Audio System (AV receiver with Dolby Digital or DTS decoder) -Better Quality

31 Connecting to the Network

Before Starting (Plug & Play)

Accessing the Settings Menu

31 Cable Network

Watch TV

Settings

Display

Network

System

Security

General

Support

Contact Samsung

Language

Audio Channel

Channel List

Channel Manager

32 Wireless Network

SET	UP 33
	33
	34
	34
	35
	36
	36
	40
	43
	44
	48
	50
	51
	51
	52
	53

BASIC FUNCTIONS

Playing a Video

54 Playback

54

55

- 54 3D Converter
 - Disc Structure
- 55 Using the Disc Menu/Title Menu/Popup Menu
- 55 Using the Disc Menu
- 55 Using the Title Menu
- 55 Playing the Title List
- 56 Using the Popup Menu

Contents

BASIC FUNCTIONS	56	Using the Search and Skip Functions
	56	Searching for a Desired Scene
	56	Skipping Chapters
	56	Slow Motion Play/Step Motion Play
	56	Slow Motion Play
	56	Step Motion Play
	57	Using the TOOLS button
	57	Moving to a Desired Scene Directly
	57	Repeating the Title or Chapter
	57	Repeating the Title or Chapter
	58	Repeating a Section
	58	Selecting the Picture Settings
	58	Selecting the Audio Language
	59	Selecting the Subtitle Language
	59	Changing the Camera Angle
	59	Selecting the Information
	59	Setting BONUSVIEW
	60	Listening to Music
	60	Playing an Audio CD (CD-DA)/MP3
	60	AMG function
	60	Repeat an Audio CD (CD-DA)/MP3
	61	Playlist
	61	Playing back a Pictures
	61	Playing JPEG files
	62	Using the TOOLS button
	62	Media Play

DTV FUNCTIONS

64 Display Screen

64 Using the TOOLS button

- 64 Picture Settings
- 64 Selecting the Audio Language
- 65 Selecting the Dual I II
- 65 Lock current channel
- 65 Add to Favourites
- 65 Signal Information

DTV FUNCTIONS

- Setting Audio Description & Subtitle Language
- Setting the Audio Description
- Setting the Subtitle Language
- 66 Viewing the Guide Screen
- 66 **Schedule Manager** 67 To Cancel or Edit S
 - To Cancel or Edit Schedule
- 67 Viewing DTV with the 3D effect
- 68 Using the Teletext Service

ADVANCED FUNCTIONS

69 Recording

65

65

65

69

- Recording the current TV channel you are watching
- 70 Watching other channels during Recording a TV channel
- Playing a Disc while Recording a TV channelTime Shift function
- 71 Playing the Recorded Title

72 Edit the Recorded Title

- 72 Renaming a Recorded Title
- 72 Splitting a Section of a Title (Divide into two)
 - Splitting a Section of a Title (Partial Delete)

73 Copy

72

- 73 Copying Videos, Music or Photos
- 73 Ripping from a Audio CD (CD-DA)

NETWORK SERVICES	74
	74
	77
	79
	81
	81
	81
	~~~

# Using Smart Hub

- 74 Starting Smart Hub for the First Time
- 77 The Settings Menu BLUE (D)
  - The Edit Mode Menu YELLOW (C)
  - The Sort Menu GREEN (B)

### 81 Samsung Apps

- 81 For Pay Apps
- 83 **BD-LIVE™**
- 83 Using the AllShare Function

# APPENDIX

- 84 Troubleshooting
- 86 Repairs
- 87 Specifications

# Getting Started

# Before using the User Manual

# Disc Types and Contents your product can play

Term	Logo	lcon	Definition	
	Biuray Biuray Bin Tay	BD-ROM	Indicates a function available on a BD-ROM or BD-RE/-R disc recorded in the BD-RE format.	
VIDEO		UVG-HW/R	Indicates a function available on a DVD-VIDEO or recorded DVD+RW/ DVD-RW(V)/DVD-R/+R discs that have been recorded and finalized.	
	-	DivX/MKV/MP4	Indicates a function available in a CD-RW/-R, DVD-RW/-R, BD-RE/-R disc or a USB storage media containing DivX, MKV, MP4 contents.	
MUSIC		Audio CD	Indicates a function available on an audio CD-RW/-R (CD-DA format).	
WUSIC	-	МРЗЛИМА	Indicates a function available in a CD-RW/-R, DVD-RW/-R, BD-RE/-R disc or a USB storage media containing MP3 or WMA contents.	
РНОТО	-	JPEG	Indicates a function available in a CD-RW/-R, DVD-RW/-R, BD-RE/-R disc or a USB storage media containing JPEG contents.	
VIDEO MUSIC PHOTO	-		Indicates a function available on the HDD.	

# 🗞 NOTE

- The product may not play certain CD-RW/-R and DVD-R because of the disc type or recording conditions.
- If a DVD-RW/-R disc has not been recorded properly in DVD video format, it will not be playable.
- Your product will not play content that has been recorded on a DVD-R at a bit-rate that exceeds 10 Mbps.
- Your product will not play content that has been recorded on a BD-R or USB device at a bit rate that exceeds 30 Mbps.

# Disc types your product cannot play

- HD DVD
- DVD-ROM/PD/ MV-Disc, etc
- DVD-RAM
  Super Audio CD (except CD layer)
- DVD-RW(VR mode)
   CVD/CD-ROM/CDV/ CD-G/CD-I/LD (CD-Gs play audio only, not graphics.)
- 3.9 GB DVD-R Disc for Authoring.

## 🗞 NOTE

- Some commercial discs and DVDs purchased outside your region may not play on this product.
- Playback may not work for some types of discs, or when you use specific operations, such as angle change and aspect ratio adjustment. Information about the discs is written in detail on the disc box. Please refer to this if necessary.
- Do not allow the disc to become dirty or scratched.
   Fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for playback.
- When you play a BD-J title, loading may take longer than a normal title or some functions may perform slowly.
- This product may not respond to all operating commands because some Blu-ray Disc, DVD, and CD discs allow specific or limited operation and provide only certain features during playback.
   Please note that this is not a defect in the product.
- Samsung cannot guarantee that this product will play every disc bearing the Blu-ray Disc, DVD or CD logo because disc formats evolve, and problems and errors may occur during the creation of Blu-ray Disc, DVD, and CD software and/or the manufacture of discs.

Please contact the SAMSUNG customer care centre if you have questions or encounter difficulty when playing Blu-ray Disc, DVD, or CD discs in this product. Also, refer to rest of this user manual for additional information on playback restrictions.

# **HDD Recording**

You can record digital broadcast on the internal HDD as below.

Broadcast	BD-D8200A (250GB)		BD-D8500A (500GB)		
Туре	Recording Time	Estimated Bitrate	Recording Time	Estimated Bitrate	
HD	208 Hrs	20 Mbps	52 Hrs	20 Mbps	
SD	102 Hrs	5 Mbps	25 Hrs	5 Mbps	

Depending on the bitrate of broadcast programme, available recording time may be decreased or increased.

# Disc Types

# **BD-ROM**

Blu-ray ROM discs can only be played back. This product can play back pre-recorded commercial BD-ROM discs.

# BD-RE/-R

Blu-ray RE/-R discs can be recorded on and played back.

This product can play back a BD-RE/-R disc recorded by other compatible Blu-ray Disc recorders.

# DVD-VIDEO

- This product can play back pre-recorded commercial DVDs (DVD-VIDEO discs) with movies.
- When switching from the first layer to the second layer of a dual-layered DVD-VIDEO disc, there may be momentary distortion in the image and sound. This is not a malfunction of the product.

# DVD-RW/-R/+R

This product can play back a DVD-RW/-R/+R disc recorded and finalized with a DVD video recorder. The ability to play back may depend on recording conditions.

# DVD+RW

• This product can play back a DVD+RW disc recorded with a DVD Video recorder. The ability to play back may depend on recording conditions.

# Audio CD (CD-DA)

- This product can play back CD-DA format audio CD-RW/-R discs.
- The product may not be able to play some CD-RW/-R discs due to the condition of the recording.

# Getting Started

# CD-RW/-R

- Use a 700MB (80 minute) CD-RW/-R disc. If possible, do not use an 800MB (90 minute) or larger disc, as the disc may not play back.
- If the CD-RW/-R disc was not recorded as a closed session, you may experience delays when playing back the beginning of the disc or all recorded files may not play.
- Some CD-RW/-R discs may not play on this product, depending on the device which was used to burn them. For contents recorded on CD-RW/-R media from CDs for your personal use, playability may vary depending on the contents and discs.

# AVCHD (Advanced Video Codec High Definition)

- This product can play back AVCHD format discs. These discs are normally recorded and used in camcorders.
- The AVCHD format is a high definition digital video camera format.
- The MPEG-4 AVC/H.264 format compresses images with greater efficiency than the conventional image compressing format.
- Some AVCHD discs use the "x.v.Colour" format. This product can play back AVCHD discs that use "x.v.Colour" format.
- "x.v.Colour" is a trademark of Sony Corporation.
- "AVCHD" and the AVCHD logo are trademarks of Matsushita Electronic Industrial Co., Ltd. and Sony Corporation.

# 🗞 NOTE

- Some AVCHD format discs may not play, depending on the recording condition.
   AVCHD format discs need to be finalized.
- "x.v.Colour" offers a wider colour range than normal DVD camcorder discs.
- Some DivX, MKV and MP4 format discs may not play, depending on the video resolution and frame rate condition.

# **Region Code**

Both products and discs are coded by region. These regional codes must match for a disc to play. If the codes do not match, the disc will not play.

The Region Number for this product is displayed on the rear panel of the product.

Disc Type	Region Code	Area		
		North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and South East Asia.		
Blu-ray Disc		Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand.		
		India, China, Russia, Central and South Asia.		
		The U.S., U.S. territories and Canada		
		Europe, Japan, the Middle East, Egypt, South Africa, Greenland		
	3	Taiwan, Korea, the Philippines, Indonesia, Hong Kong		
DVD-VIDE0	4	Mexico, South America, Central America, Australia, New Zealand, Pacific Islands, Caribbean		
	5	Russia, Eastern Europe, India, most of Africa, North Korea, Mongolia		
	6	China		

# Supported File Formats

## Notes on the USB connection

- Supported devices: USB storage media, MP3 product, digital camera, USB card reader
- Does not support if a folder or file name is longer than 128 characters.
- A certain USB/digital camera device may not be compatible with the product.
- Connect directly to the product's USB port. Connecting through another cable may raise problems with USB compatibility.
- Inserting more than one memory device to a multi-card reader may not operate properly.
- Supports the PTP protocol.
- Do not disconnect USB device during a "loading" process.
- Bigger the image resolution, the longer the delay to displaying.
- DRM applied MP3 files downloaded from a commercial site are not played back.
- If the problem of the unrecognized USB device persists or the internal file list is corrupt or a certain file could not be played, connect the USB device to the PC and format it in a proper file system, then check it again.
- If the file deleted from your PC still appears in Media Play, use "Empty Recycle Bin" on your desktop to delete it completely.
- Some USB devices supporting the power saving mode may switch the saving mode of the BD product to Off automatically when connected with each other.
- Need-to-Know List before using Media Play
  - Media Play only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers and USB HDD. (HUB is not supported.)
  - MSC supports Music, Photo and Video files, while a PTP device supports Photo files only.

- MTP (Media Transfer Protocol) is not supported.
- The file system supports FAT16, FAT32 and NTFS (read only).
- Before connecting your device to the product, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
- Do not disconnect the USB device while it is loading.
- If some devices require excessive power, USB device may be limited by the circuit safety device.
- You must remove the USB storage device safely (by performing the "Safely Remove USB" function) in order to prevent a possible damage to the USB memory. Press the MENU button to move to the home menu, and select the YELLOW (C) button and press the ENTER button.
- If you insert the disc when playing USB storage device, the device mode is changed to "DVD or CD" automatically.
- Audio CD (CD-DA), MP3 and JPEG files cannot be displayed in full screen mode.
- A Certain USB HDD Device may not be compatible with this product.

# Getting Started

# Video File Support

File Extention	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbsp)	Audio Codec
		DivX 3.11/4.x/5.1/6.0	1920x1080	6 ~ 30	8	MP3
		H.264 BP/MP/HP	1920x1080	6 ~ 30	25	AC3
*.avi	AVI	MPEG4 SP/ASP	1920x1080	6 ~ 30	8	LPCM ADPCM
		Motion JPEG	1920x1080	6 ~ 30	8	DTS Core
		DivX 3.11/4.x/5.1/6.0	1920x1080	6 ~ 30	8	MP3
		H.264 BP/MP/HP	1920x1080	6 ~ 30	25	AC3
*.mkv	MKV	MPEG4 SP/ASP	1920x1080	6 ~ 30	8	LPCM
		Motion JPEG	1920x1080	6 ~ 30	8	ADPCM DTS Core
		DivX 3.11/4.x/5.1/6.0	1920x1080	6 ~ 30	8	MP3
		H.264 BP/MP/HP	1920x1080	6 ~ 30	25	AC3
*.asf	ASF	MPEG4 SP/ASP	1920x1080	6 ~ 30	8	LPCM
		Motion JPEG	1920x1080	6 ~ 30	8	ADPCM WMA
*.wmv	ASF	Window Media Video v9	1920x1080	6 ~ 30	25	WMA
		H.264 BP/MP/HP	1920x1080	6 ~ 30	25	MP3
*.mp4 MP4	MPEG4 SP/ASP	1920x1080	6 ~ 30	8	ADPCM AAC	
	H.264 BP/MP/HP	1920x1080	6 ~ 30	25	ADPCM	
*.3gp	3GPP	MPEG4 SP/ASP	1920x1080	6 ~ 30	8	AAC HE-AAC
*.vro	VRO	MPEG2	1920x1080	24/25/30	30	AC3 MPEG
.010	VOB	MPEG1	352x288	24/25/30	30	LPCM
		MPEG1	352x288	24/25/30	30	AC3
*.mpg *.mpeg	PS	MPEG2	1920x1080	24/25/30	30	MPEG LPCM
		H.264	1920x1080	6 ~ 30	25	AAC
*.ts		MPEG2	1920x1080	24/25/30	30	AC3 AAC
*.tp	TS	H.264	1920x1080	6 ~ 30	25	MP3 DD+
*.trp	VC1	1920x1080	6 ~ 30	25	HE-AAC	

#### Limitations

- Even when the file is encoded by a supported codec mentioned above, a file might not be played if its content has a problem.
- Normal playback is not guaranteed if the file's container information is wrong or the file itself is corrupted.
- Files having higher Bit rate/frame rate than standard may stutter with sound/video playback.
- Seek (skip) function is not available if the file's index table is damaged.
- When you playback a file remotely through network connection, video playback may stutter depending on established network speed.

#### Video decoder

- Supports up to H.264 Level 4.1
- Does not support H.264 FMO/ASO/RS, VC1 SP/MP/AP L4 and AVCHD
- MPEG4 SP, ASP: Below 1280x720: 60 frames max Above 1280x720: 30 frames max
- Does not support GMC 2 or higher
- Audio decoder
- Supports WMA 7, 8, 9 and STD
- Does not support WMA 9 PRO multi-channel lossless audio decoding if number of channels is more than 2
- Does not support WMA sampling rate of 22050Hz mono
- Supports DTS Core (5.1 ch, 16 bit, 48kHz) only
- Does not support APDCM MULAW, ALAW

- Optical Media
- CD Media Bit Rate : Max 9.6Mbps
- DVD Media Bit Rate : Max 22.16Mbps

#### Supported DivX subtitle file formats

*.ttxt, *.smi, *.srt, *.sub, *.txt

#### **Music File Support**

File Extension	Container	Audio Codec	Support Range
*.mp3	MP3	MP3	-
*.wma	WMA	WMA	Compliant with WMA version 10 * Sampling rates (in kHz) - 8, 11, 16, 22, 32, 44.1, 48 * Bit rates - All bit- rates in the range 5kbps to 384kbps

# Getting Started

# Connect a USB device before using the Time shift and Recorded TV functions



Do not use a USB memory stick. We do not support a USB memory stick.

We recommend using a USB HDD with at least 5400 rpm, but a USB HDD of RAID type is not supported.

- To use the **Time shift** mode or the **Recorded TV** function, a connected USB device must be execute the **Device Format** function to proper form for recording.
  - During the device formatting, do not disconnect the device while formatting is in progress. If you format the device, all files will be deleted.
  - Before formatting your device to this product, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
- Recorded videos are DRM (digital rights managements) protected and cannot be played on a PC or other product. Note that files saved on the TV cannot be used after the main board is changed.
- If available storage is left less than 10MB during the recording, recording is finished automatically.
- If the USB device has failed the Device Performance Test, the USB device must go through the Device Format and Device Performance Test again before you record with the Guide or Channel Manager. If the device has failed the Performance Test, It cannot be used for recording.
- For more information, see your user's manual.

# Blu-ray Disc Compatibility

Blu-ray Disc is a new and evolving format. Accordingly, disc compatibility issues are possible. Not all discs are compatible and not every disc will play back. For additional information, refer to the Compliance and Compatibility Notice section of this user manual.

# Copyright

© 2011 Samsung Electronics Co.,Ltd.

All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

#### Logos of Discs the Product Can Play Blu·rəy BlurayDisc Master Audio 3D. Blu-ray Disc 3D Blu-ray Disc DTS-HD Master Audio DivX BDLIVE DOLBY. PAL TRUE Java PAL broadcast System in U.K., **BD-LIVE** Dolby TrueHD Java France, Germany, etc. Accessories Check for the supplied accessories below.

Audio/Video cable	RF cable for TV	
Batteries for Remote Control (AAA Size)	User Manual	Remote Control

# Getting Started

# Front Panel



1	REMOTE CONTROL SENSOR	Detects signals from the remote control.
2	POWER BUTTON	Turns the product on and off.
3	DISC SLOT	Inserts a disc.
4	DISPLAY	Displays the playing status, time, etc.
5	STOP BUTTON	Stops disc playback.
6	PLAY/PAUSE BUTTON	Plays a disc or pauses playback.
7	ENTER BUTTON	Selects menu items or starts a disc.
8	EJECT BUTTON	Ejects a disc.
9	USB HOST	It can be used for software upgrades and MP3/JPEG/DivX/MKV/MP4 playback.

# Rear Panel

	1	ANT OUT (TO TV)	Connects RF cable to TV antenna input.
	2	ANT IN	Connects RF cable from antenna.
	3	LAN	Use for network based services (See pages 74~83), BD-LIVE, and software upgrades using a network connection.
4	4	COMPONENT OUT	Connects to external devices that have Component video input.
ļ	5	DIGITAL AUDIO OUT (OPTICAL)	Connects to an AV receiver.
(	6	VIDEO OUT	Connects to the video input of external devices using a video cable.
	7	AUDIO OUT	Connects to the audio input of external devices using audio cables.
	8	HDMI OUT	Using an HDMI cable, connect this HDMI output terminal to the HDMI input terminal on your TV for the best quality picture or to your AV receiver for the best quality sound.

# Getting Started

# **Remote Control**

# Tour of the Remote Control



# Setting the Remote Control to Operate Your TV

# To determine whether your television is compatible, follow the instructions below.

- 1. Turn your television on.
- 2. Point the remote control towards the television.
- 3. Press the TV button to set the TV mode.
- Press and hold the TV POWER button, and then enter the two-figure code in the table to the right that corresponds to the brand of your television by pressing the appropriate number buttons.

If your television is compatible with the remote control, it will Turn off.

The remote is now programmed to operate the TV.

## 🗞 NOTE

- If several codes are listed for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

You can control certain functions of your TV with this remote control.

Button	Function
TV POWER	Used to Turn the television on and off.
Number	Used to input number directly.
TV VOL +/-	Used to adjust the volume of the television.
TV MUTE	Used to toggle the sound on and off.
PROG $(\Lambda/V)$	Used to select the desired channel.
TV SOURCE	Used to select an external source connected to the TV.

In case of Samsung TV, below buttons are also compatible with this remote control.

Button	Function
MENU	Used to move to the TV menu.
TOOLS	Used to display Tools menu.
▲▼⋖►	Used to move the cursor or select an item.
ENTER	Used to select menu items.
INFO	Used to display INFO menu.
RETURN	Return to the previous menu.
EXIT	Used to exit the menu.
COLOUR (A,B,C,D)	These buttons are used for several functions.

## 🗞 NOTE

 The functions listed above will not necessarily work on all televisions. If you encounter problems, use the TV remote control.

# Installing batteries



# 🗞 NOTE

- If the remote does not operate properly:
  - Check the polarity +/- of the batteries.
  - Check if the batteries are drained.
  - Check if the remote sensor is blocked by obstacles.
  - Check if there is any fluorescent lighting nearby.

# ! CAUTION

 Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

# Getting Started

# **TV Control Codes**

Brand	Code	Brand	
SAMSUNG	TV POWER+01, +02, +03, +04, +05,	NEWSAN	TV POWER+
UNIVOUND	+06, +07, +08, +09	NOBLEX	TV POWER+
AIWA	TV POWER+82	NOKIA	TV POWER+
ANAM	TV POWER+10, +11, +12, +13, +14,	NORDMENDE	TV POWER+
	+15, +16, +17, +18	PANASONIC	TV POWER+
BANG & OLUFSEN	TV POWER+57	PHILIPS	TV POWER+
BLAUPUNKT	TV POWER+71	PHONOLA	TV POWER+
BRANDT	TV POWER+73	PIONEER	TV POWER+
BRIONVEGA	TV POWER+57	RADIOLA	TV POWER+
CGE	TV POWER+52	RADIOMARELLI	TV POWER+
CONTINENTAL		RCA	TV POWER+
EDISON	TV POWER+75	REX	TV POWER+
DAEWOO	TV POWER+19, +20, +23, +24, +25, +26,	SABA	TV POWER+
DAEWUU	+27, +28, +29, +30, +31, +32, +33, +34	SALORA	TV POWER+
EMERSON	TV POWER+64	SANYO	TV POWER+
FERGUSON	TV POWER+73	SCHNEIDER	TV POWER+
FINLUX	TV POWER+06, +49, +57	SELECO	TV POWER+
FORMENTI	TV POWER+57	SHARP	TV POWER+
FUJITSU	TV POWER+84	SIEMENS	TV POWER+
GRADIENTE	TV POWER+70	SINGER	TV POWER+
GRUNDIG	TV POWER+49, +52, +71	SINUDYNE	TV POWER+
HITACHI	TV POWER+60, +72, +73, +75	SONY	TV POWER+
IMPERIAL	TV POWER+52	TELEAVA	TV POWER+
JVC	TV POWER+61, +79	TELEFUNKEN	TV POWER+
LG	TV POWER+06, +19, +20, +21, +22, +78	THOMSON	TV POWER+
LOEWE	TV POWER+06, +69	THOMSON	
LOEWE OPTA	TV POWER+06, +57	ASIA	TV POWER+
MAGNAVOX	TV POWER+40	TOSHIBA	TV POWER+
METZ	TV POWER+57		+52
MITSUBISHI	TV POWER+06, +48, +62, +65	WEGA	TV POWER+
MIVAR	TV POWER+52, +77	YOKO	TV POWER+
NEC	TV POWER+83	ZENITH	TV POWER+

Brand	Code
NEWSAN	TV POWER+68
NOBLEX	TV POWER+66
NOKIA	TV POWER+74
NORDMENDE	TV POWER+72, +73, +75
PANASONIC	TV POWER+53, +54, +74, +75
PHILIPS	TV POWER+06, +55, +56, +57
PHONOLA	TV POWER+06, +56, +57
PIONEER	TV POWER+58, +59, +73, +74
RADIOLA	TV POWER+06, +56
RADIOMARELLI	TV POWER+57
RCA	TV POWER+45, +46
REX	TV POWER+74
SABA	TV POWER+57, +72, +73, +74, +75
SALORA	TV POWER+74
SANYO	TV POWER+41, +42, +43, +44, +48
SCHNEIDER	TV POWER+06
SELEC0	TV POWER+74
SHARP	TV POWER+36, +37, +38, +39, +48
SIEMENS	TV POWER+71
SINGER	TV POWER+57
SINUDYNE	TV POWER+57
SONY	TV POWER+35, +48
TELEAVA	TV POWER+73
TELEFUNKEN	TV POWER+67, +73, +75, +76
THOMSON	TV POWER+72, +73, +75
THOMSON ASIA	TV POWER+80, +81
TOSHIBA	TV POWER+47, +48, +49, +50, +51, +52
WEGA	TV POWER+57
YOKO	TV POWER+06
ZENITH	TV POWER+63

# Connections

# Connecting to a TV with an Audio/Video cables and RF cable

- 1. Connect the RF cable as shown.
- Using video/audio cables, connect the VIDEO OUT (yellow) / AUDIO OUT (white and red) terminals on the rear of the product to the VIDEO IN (yellow) / AUDIO IN (white and red) terminals of your TV.
- 3. Plug in the product and TV.
- 4. Turn on the product and TV.



- The RF cable connection of this product sends only signals of TV. You must connect the Audio/Video cables to watch
  output from your product.
- Noise may be generated if the audio cable is placed too close to the power cable.
- If you want to connect to an AV receiver, please refer to the AV receiver connection pages. (See pages 29~30)
- The number and position of terminals may vary depending on your TV set. Please refer to the user manual of your TV.
- If there is only one audio input terminal on the TV, connect it to the AUDIO OUT (right/white) terminal of the product.

# Connections

# Connecting to a TV

# Case 1 : Connecting to a TV with an HDMI Cable - Best Quality (Recommended)

- 1. Using an HDMI cable, connect the HDMI OUT terminal on the rear of the product to the HDMI IN terminal of your TV.
- 2. Turn on the product and TV.
- Press the input selector on your TV remote control until the HDMI signal from the product appears on your TV screen.
  - If you have set the remote control to operate your TV (See pages 23~24), press the TV SOURCE button on the remote control and select HDMI as the external source of the TV.



- An HDMI cable outputs digital video/audio, so you don't need to connect an audio cable.
- If the product is connected to your TV in the HDMI 720p, 1080i, or 1080p output mode, you must use a High speed (category 2) HDMI cable.
- HDMI outputs only a pure digital signal to the TV.
   If your TV does not support HDCP (High-bandwidth Digital Content Protection), random noise appears on the screen.
- Depending on your TV, certain HDMI output resolutions may not work. Please refer to the user manual of your TV.
- When you connect the product to the TV using the HDMI cable for the first time or to a new TV, the HDMI output
  resolution will be automatically set to the highest supported by the TV.
- You must have an HDMI connection to enjoy videos with 3D technology.
- A long HDMI cable may cause a screen noise. If this occurs, set Deep Colour to Off in the menu.
- If you use HDMI-to-DVI cable to connect to your display device, you must also connect the AV OUT or Digital Audio OUT to your display device or an audio system to hear audio.

# Case 2 : Connecting to a TV with a Component Cable - Better Quality

- You can connect the product to your TV using Component video cables.
- You will enjoy high quality images with accurate colour reproduction. Component video separates the picture element into black and white (Y), blue (PB) and red (PR) signals to present clear and clean images. (Audio signals are delivered through the audio output.)
- 1. Using a Component video cable, connect the **COMPONENT OUT** terminals on the rear of the product to the **COMPONENT IN** terminals of your TV.
- 2. Using audio cables, connect the AUDIO OUT (white and red) terminals on the rear of the product to the AUDIO IN (white and red) terminals of your TV.
- 3. Turn on the product and TV.
- 4. Press the input selector on your TV remote control until the "COMPONENT" signal from the product appears on the TV screen.
  - If you have set the remote control to operate your TV (See pages 23~24), press the **TV SOURCE** button on the remote control and select COMPONENT as the external source of the TV.



- Depending on the manufacturer, the component terminals on your TV may be marked "R-Y, B-Y, Y " or "Cr, Cb, Y" instead of "P_B, P_R, Y". The number and position of terminals may vary depending on the TV set. Please refer to the user manual of your TV.
- You can select from a variety of resolution settings as 1080i, 720p, 576p/480p or 576i/480i, depending on the contents type. (See pages 37~39)
- The actual resolution may differ from the setting in the setup menu if you have connected both Component and HDMI cables. The resolution may also be different depending on the contents type. (See pages 37~39)

# Connections

# Case 3 : Connecting to a TV with an Audio/Video cable - Good Quality

- Using an Audio/Video cable, connect the VIDEO OUT (yellow) / AUDIO OUT (white and red) terminals on the rear of the product to the VIDEO IN (yellow) / AUDIO IN (white and red) terminals of your TV.
- 2. Turn on the product and TV.
- 3. Press the input selector on your TV remote control until the "VIDEO" signal from the product appears on the TV screen.
  - If you have set the product's remote control to operate your TV (See pages 23~24), press the TV SOURCE button on the remote control and select VIDEO as the external source of the TV.



# 🗞 NOTE

- Noise may be generated if the audio cable is placed too close to the power cable.
- If you want to connect to an AV receiver, please refer to the AV receiver connection pages. (See pages 29~30)
- The number and position of input terminals may vary depending on your TV set. Please refer to the user manual of your TV.

# ! CAUTION

Do not connect the product to your TV through a VCR. Video signals fed through VCRs may be affected by copyright
protection systems and the picture will be distorted on the television.

# **Connecting to an Audio System**

- Please turn the volume down when you turn on the AV receiver. A sudden loud sound may cause damage to the speakers and your ears.
- Set the audio output format according to the capabilities of your AV receiver. (See pages 40~43)
- The position of HDMI input terminals may vary depending on your AV receiver. Please refer to the user manual of your AV receiver.

# Case 1 : Connecting to an Audio System (HDMI supported AV receiver) - Best Quality (Recommended)

- 1. Using an HDMI cable, connect the HDMI OUT terminal on the rear of the product to the HDMI IN terminal of your AV receiver.
- 2. Using an HDMI cable, connect the HDMI OUT terminal of the AV receiver to the HDMI IN terminal of your TV.
- 3. Turn on the product, TV, and AV receiver.
- 4. Press the input select button of the AV receiver and TV to select the external input to hear sound from the player. Refer to your AV receiver's user manual to set the AV receiver's audio input.



# Connections

# Case 2 : Connecting to an Audio System (Stereo Amplifier) - Good Quality

- Using the audio cables, connect the AUDIO OUT (white and red) terminals on the rear of the product to the AUDIO IN (white and red) terminals of your Stereo Amplifier.
- Using the video signal cable(s), connect the HDMI, COMPONENT, or VIDEO OUT terminals on the rear of the product to the HDMI, COMPONENT, or VIDEO IN terminal of your TV. (See pages 26~28)
- 3. Turn on the product, TV, and Stereo Amplifier.
- Press the input select button of the Stereo Amplifier to select the external input and hear sound from the product. Refer to your Stereo Amplifier's user manual to set the Stereo Amplifier's audio input.
- Press the input selector on your TV remote control to select the video source (HDMI, Component or Video.)

# Case 3 : Connecting to an Audio System (AV receiver with Dolby Digital or DTS decoder) - Better Quality

- Using an optical cable, connect the DIGITAL AUDIO OUT (OPTICAL) terminal on the rear of the product to the DIGITAL AUDIO IN (OPTICAL) terminal of your AV receiver.
- Using the video signal cable(s), connect the HDMI, COMPONENT, or VIDEO OUT terminals on the rear of the product to the HDMI, COMPONENT, or VIDEO IN terminal of your TV. (See pages 26~28)
- 3. Turn on the product, TV, and AV receiver.
- Press the input select button of the AV receiver to select the external input in order to hear sound from the product. Refer to your AV receiver's user manual to set the AV receiver's audio input.
- Press the input selector on your TV remote control to select the video source (HDMI, Component or Video.)



# 🗞 NOTE

 If you use the Digital Audio connection described in Case 3, you will hear only front two speakers with Digital Output setting as PCM.

# **Connecting to the Network**

This product lets you use network based services (See pages 74~83) such as Smart Hub and BD-LIVE, and software upgrades when it is connected to a network. We recommend using an AP (Access Point) or IP router for the connection. For more information on router connections, refer to the user manual of the router or contact the router manufacturer for technical assistance.

# **Cable Network**

- 1. Using the Direct LAN Cable (UTP cable), connect the LAN terminal of the product to the LAN terminal of your modem or router.
- 2. To set the network options, see pages 44~48.



- Internet access to Samsung's software update server may not be allowed, depending on the router you use or your ISP's policy. For more information, contact your ISP (Internet Service Provider).
- For DSL users, please use a router to make a network connection.
- To use the AllShare function, you must connect your PC to your network as shown in the figure. The connection can be wired or wireless.

# Connections

# Wireless Network

Your product has built in Wi-Fi capability. You can connect to a network through a Wireless IP sharer (a router or modem).

To set the network options, see pages 44~48.



Networking with PC for AllShare function

Wireless IP sharer

## 🗞 NOTE

- To use a wireless network, your product must be connected to a wireless IP sharer (router). If the wireless IP sharer supports DHCP, your product can use a DHCP or static IP address to connect to the wireless network.
- Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer
  is currently being used by another device nearby, this will result in interference and communication failure.
- If Pure High-throughput (Greenfield) 802.11n mode is selected and the Encryption type is set to WEP, TKIP or TKIP-AES (WPS2Mixed) for your AP, this product will not support a connection in compliance with new Wi-Fi certification specifications.
- If your AP supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.
- You can setup a wireless network three ways:
  - Wireless (general)
  - Using WPS(PBC)
  - One Foot Connection

Wireless (general) includes both Automatic and Manual setup procedures.

- Wireless LAN, by its nature, may cause interference, depending on the operating conditions (AP performance, distance, obstacles, interference by other radio devices, etc).
- Set the wireless IP sharer to Infrastructure mode. Ad-hoc mode is not supported.
- The product supports only the following wireless security key protocols :
  - WEP(OPEN/SHARED), WPA-PSK(TKIP/AES), WPA2-PSK(TKIP/AES).
- To use the AllShare function, you must connect your PC to your network as shown in the figure. The connection can be wired or wireless.

# Setup

# Before Starting (Plug & Play)

 Turn on your TV after connecting the product. When you connect the product to a TV for the first time, product turns on automatically and the Plug & Play screen appears.

Plug & Play	
Select Country.	
Country : Australia	
G ^y Enter	

- 2. Press the ►▲▼ buttons to select the desired country, and then press the ENTER button.
- Press the ►▲▼ buttons to select the desired Clock Mode.
  - If you select **Auto** : Press the **ENTER** button.
  - If you select Manual : Press the ▲▼ ◀ ► button to set the clock, then press the ENTER button.
- 4. Press the ENTER button to start scanning.
- Press the *◄* buttons to the select the Network Settings or Watch TV, then press the ENTER button. (For more information about Network settings,

(For more information about Network settings) please refer to pages 44~48)

- 🗞 NOTE
  - When the product is connected to the TV for the first time, the product turns on automatically. This is normal operation.

## Accessing the Settings Menu

- 1. Press the **MENU** button. The home menu will be displayed.
- Press the ◀► buttons to select the desired home menu, and then press the ENTER button.
- Press the ▲▼ buttons to select the desired submenu, and then press the ENTER button.
- Press the ▲▼ buttons to select the desired item, and then press the ENTER button.
- 5. Press the **EXIT** button to exit the menu.
- Home Menu



# Setup

# 🗞 NOTE

- When the product is connected to a network, select Smart Hub from the Home menu. Download the desired content from Samsung Apps. (See pages 81~82)
- The access steps may differ depending on the menu you selected.
- The OSD (On Screen Display) may change in this product after you upgrade the software version.
- If the product is left in the home menu more than 3 minutes without being used, DTV screen will appear.
- If the product is left in the other menu including settings more than 5 minutes without being used, a screen saver will appear on your TV.

## Watch TV

- 1. Press the **MENU** button. The home menu will be displayed.
- Press the ◄► buttons to select the Watch TV.
- Press the ▲▼ buttons to select the desired submenu, then press the ENTER button.
- Press the ▲▼ buttons to select the desired item, then press the ENTER button.
- 5. Press the EXIT button to exit the menu.

## 🗞 NOTE

• The Guide menu is not displayed if you select a country to New Zealand.

# Channel List

You can see all channels searched.

 Press the CH LIST button on the remote control. The Channel List will be displayed.

# **Channel List Screen**



Shows the stored channels.

Navigation Help : Displays remote control buttons available.

- YELLOW (C) : Displays the Programme information.
- **Ch. Mode** : Shows the channel mode according to channel type. (All, TV, Radio, Data/Other)
  - Watch : Displays the selected channel.
  - Page : Moves to next or previous page.
- Press the ▲▼ buttons to select desired channel, press the ENTER button. The selected channel will be displayed.

## 🗞 NOTE

0

 By pressing the INFO button, you can watch or record the selected channel.

# **Channel Manager**

You can manage the stored channels.

# **Channel Manager Screen**



Edited Channels : Press the ◄▲▼ buttons to check edited channels.

- - Favourites (☆): Shows all favourite channel. (Favourites 1, Favourites 2, Favourites 3.....)
- 2 Shows the stored channels.

Ø

6

Navigation Help : Displays remote control buttons available.

- BLUE (D) : Sorts the list ordered by channel number or channel name.
- Page : Moves to next or previous page.
- Select : Selects desired Channel.
- Tools : Displays the Channel Manager option.
- Return : Returns to previous menu.

#### **Channel Status Display Icons**

Icons	Operations
$\checkmark$	A channel selected.
$\stackrel{\frown}{\simeq}$	A channel set as Favourites.
	A locked channel.

## Using the TOOLS button

Press the ▲▼ buttons to select the desired channel, then press the **TOOLS** button.

CI	nanne	Manager IA	II 1/2 Pages
		_	Tools
Ø	■801		Watch
1	■803	XXXXXXXXXX	Add to Favourites
5	■805		Lock
	⊠807	XXXXXXXXX	Edit Channel Number
	■809		Delete
	■811	XXXXXXXXXX	Deselect All
	■813		Select All
	■814	XXXXXXXXXX	E Enter ⊃ Return
		_	Page 🖻 Select 🗊 Tools ⊃ Retur

#### Watch

Select this to watch the channel.

## Add to Favourites / Edit Favourites

Select this to add the desired favourite channel.

#### Lock / Unlock

Select this to lock the channel.

#### Edit Channel Number

Select this to edit the channel number. If the Edit Channel Number option is not displayed in the Channel Manager, set it to Enable in the channels menu. (See page 44). This menu will be displayed only when you set the country to New Zealand.

#### Delete

Select this to delete the Channel.

#### **Deselect All**

Select this to deselect all channel.

#### Select All

Select this to select all channel.

- NOTE
  - For satellite broadcasting, editing the channel numbers may be possible depending on the specification.

# Setup

# Settings

- 1. Press the **MENU** button. The home menu will be displayed.
- Press the <► buttons to select the Settings, then press the ENTER button.
- 3. Press the ▲▼ buttons to select the desired submenu, then press the ENTER button.
- 4. Press the ▲▼ buttons to select the desired item, then press the ENTER button.
- 5. Press the EXIT button to exit the menu.

# Display

You can configure various display options such as the TV Aspect Ratio, Resolution, etc.

# **3D Settings**

Select whether to play a Blu-ray Disc with 3D contents in 3D Mode.

Audio Channel	3D Settings
Network	3D Blu-ray Playback Mode : Auto
System Language	Screen Size : 55 inch
Security	
General	♦ Move I Enter D Return
Support	HDMI Deep Color : Auto

#### **3D Blu-ray Playback Mode**

3D Blu-ray Discs are available in two formats : Blu-ray 3D and 3D only. You can choose to watch a Blu-ray 3D disc in 3D or 2D mode before playing the disc.

 Auto: Automatically detect if a connected TV has 3D capability and play a Blu-ray 3D disc in 3D or 2D accordingly or a 3D only disc in 3D if the TV supports 3D.
 3D only discs will not be played if your TV does

not support 3D.

- $3D \rightarrow 3D$ : Play 3D only and Blu-ray 3D discs in 3D mode at all times.
- 3D → 2D : Play Blu-ray 3D discs in 2D mode at all times. 3D only discs will not be played.

## 🗞 NOTE

 Depending on the content and the position of the picture on your TV screen, you may see vertical black bars on the left side, right side, or both sides.

### Screen Size

Lets you enter the actual screen size of your TV so that the product can adjust the image according to the screen size and display an optimal 3D image.

(For 3D displays bigger than 116 inches, simply setting it as 116 is a safe choice.)

## ! CAUTION

- If you want to enjoy 3D content, connect a 3D device (3D compliant AV receiver or TV) to the product's HDMI OUT port using a high-speed HDMI cable. Put on 3D glasses before playing the 3D content.
- The product outputs 3D signals only through HDMI cable connected to the HDMI OUT port.
- As the video resolution in 3D play mode is fixed according to the resolution of the original 3D video, you can not change the resolution to your preference.
- Some functions such as BD Wise, screen size adjustment, and resolution adjustment may not operate properly in 3D play mode.
- You must use a high-speed HDMI cable for proper output of the 3D signal.
- Stay at least three times the width of the screen from the TV when watching 3D images. For example, if you have a 46 inch screen, stay 138 inches (11.5 feet) from the screen.
  - Place the 3D video screen at eye level for the best 3D picture.
- When the product is connected to some 3D devices, the 3D effect may not function properly.
- "Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of the Blu-ray Disc Association.
## TV Aspect

Depending on the type of television you have, you may want to adjust the screen size setting.

- **16:9 Original** : Select when you connect the product to a 16:9 TV screen. The product will display all content in its original aspect ratio. Content formatted in 4:3 will be displayed with black bars on the left and right.
- 16:9 Full : Select when you connect the product to a 16:9 TV screen. All content will fill the full screen. Content formatted in 4:3 will be stretched.
- 4:3 Letter Box : Select when you connect the product to a 4:3 TV screen. The product will display all content in its original aspect ratio. Content formatted in 16:9 will be displayed with black bars on the top and bottom.
- 4:3 Pan-Scan : Select when you connect the product to a 4:3 TV screen. 16:9 content will have the extreme left and right portions cut off.

#### 🗞 NOTE

- Depending on the disc type, some aspect ratios may not be available.
- If you select an aspect ratio and option which is different than the aspect ratio of your TV screen, then the picture might appear to be distorted.
- If you select the 16:9 Original, your TV may display 4:3 Pillarbox (black bars on sides of picture).

### Smart Hub Screen Size

Set the Smart Hub Screen to the optimal size.

- Size 1 : Smart Hub screen size will be smaller than default. You may see some black on sides of screen.
- Size 2 : This is the default setting for Smart Hub. The product displays the normal Smart Hub screen size.
- Size 3 : This will display a larger Smart Hub screen size. The image may be too large for your TV screen.

## BD Wise (Samsung Products only)

BD Wise is Samsung's latest inter-connectivity feature.

When you connect a Samsung product and a Samsung TV with BD Wise to each other via HDMI, and BD Wise is on in both the product and TV, the product outputs video at the video resolution and frame rate of the Blu-ray Disc/DVDs.

- Off : The output resolution stays fixed at the resolution you set previously in the Resolution menu, regardless of the resolution of the disc. See Resolution below.
- On : The product outputs video at the original resolution and frame rate of the Blu-ray Disc/ DVDs.

#### 🗞 NOTE

- When BD Wise is on, the Resolution setting automatically defaults to BD Wise and BD Wise appears in the Resolution menu.
- If the product is connected to a device that does not support BD Wise, you can not use the BD Wise function.
- For proper operation of BD Wise, set the BD Wise menu of both the product and the TV to **On**.

## Resolution

Lets you set the output resolution of the Component and HDMI video signal to Auto, 1080p, 1080i, 720p, 576p/480p, or 576i/480i. The number indicates the number of lines of video per frame. The i and p indicate interlaced and progressive scan, respectively. The more lines, the higher the quality.

- Auto : Automatically sets the output resolution to the connected TV's maximum resolution.
- BD Wise : Automatically sets the resolution to the resolution of the Blu-ray Disc/DVDs if you have connected the product via HDMI to a TV with the BD Wise feature. (The BD Wise menu item appears only if BD Wise is set to **On**. See BD Wise above.)
- **1080p** : Outputs 1080 lines of progressive video.
- 1080i : Outputs 1080 lines of interlaced video.
- **720p** : Outputs 720 lines of progressive video.
- **576p/480p** : Outputs 576/480 lines of progressive video.
- 576i/480i : Outputs 576/480 lines of interlaced video.

## Resolution according to the output mode

## Blu-ray Disc/E-contents/Digital Contents playback

		HDMI / conne	cted	HD	MI / not conne	cted
Output	HDMI	Mode		Compone	ent Mode	
Setup	Blu-ray Disc	E-contents/ Digital contents	Component/ VIDEO Mode	Blu-ray Disc	E-contents/ Digital contents	VIDEO Mode
BD Wise	Resolution of Blu-ray Disc	1080p	576i/480i	-	-	-
Auto	Max. Resolution of TV input	Max. Resolution of TV input	576i/480i	-	-	-
1080p	1080p	1080p	576i/480i	-	-	-
Movie Frame : Auto (24Fs)	1080p@24F	1080p@24F	480i	-	-	-
1080i	1080i	1080i	576i/480i	576i/480i	576p/480p	576i/480i
720p	720p	720p	576i/480i	576i/480i	576p/480p	576i/480i
576p/480p	576p/480p	576p/480p	576i/480i	576i/480i	576p/480p	576i/480i
576i/480i	-	-	-	576i/480i	576i/480i	576i/480i

## DVD playback

Output	HDMI / c	onnected	HDMI / not	connected
Setup	HDMI Mode	Component/VIDEO Mode	Component Mode	VIDEO Mode
BD Wise	576i/480i	576i/480i	-	-
Auto	Max. Resolution of TV input	576i/480i	-	-
1080p	1080p	576i/480i	-	-
1080i	1080i	576i/480i	576p/480p	576i/480i
720p	720p	576i/480i	576p/480p	576i/480i
576p/480p	576p/480p	576i/480i	576p/480p	576i/480i
576i/480i	-	-	576i/480i	576i/480i

#### DTV View

	Qutout	HDMI co	nnected	HDMI not	connected
Resolution	Output	HDMI Mode	Component/ VIDEO MODE	Component Mode	VIDEO Mode
	BD Wise	1080p	576i/480i	-	-
Auto	DTV Smart Resolution "Auto"	Resolution of Broadcast stream	F70:/400:		
Auto	DTV Smart Resolution "Off"	Max Resolution of TV input	576i/480i	-	-
	1080p	1080p	576i/480i	-	-
	1080i	1080i	576i/480i	576p/480p	576i/480i
	720p	720p	576i/480i	576p/480p	576i/480i
	576p/480p	576p/480p	576i/480i	576p/480p	576i/480i
	576i/480i	-	-	576i/480i	576i/480i

### 🗞 NOTE

- DTV smart resolution is activated only when resolution option is set to Auto.
- If the TV you connected to the product does not support Movie Frame or the resolution you selected, the message "If no pictures are shown after selecting 'Yes', please wait for 15 seconds to return to the previous resolution. Do you want to change the resolution?" appears.

If you select **Yes**, the TV's screen will go blank for 15 seconds, and then the resolution will revert to the previous resolution automatically.

- If the screen stays blank after you have changed the resolution, remove all discs, and then press and hold the STOP (
  ) button on the front of the product for more than 5 seconds. All settings are restored to the factory default. Follow the steps on the previous page to access each mode and select the Display Setup that your TV will support.
- When the factory default settings are restored, all stored user BD data is deleted.
- The Blu-ray Disc must have the 24 frame feature for the product to use the Movie Frame (24Fs) mode.
- If both HDMI and Component jacks are connected and you are currently viewing Component output, the resolution is fixed to 576i/480i.

- For Copy protected DivX content, the ouput resolution of component Video is forced to 576i/480i.
- When the HDMI cable is not connected and video output is component mode, DivX contents with copy protection can only be output 576i/480i.

## **DTV Smart Resolution**

Use this function to automatically optimised screen resolution for digital broadcasts.

- Auto : Screen resolution is automatically optimised for digital broadcast.
- Off : Turn off DTV Smart Resolution.

#### 🗞 NOTE

 When you change your TV channel with this function set to Auto, according your TV, the display time of next channels may take longer than the function set to Off.

## HDMI Colour Format

Lets you set the colour space format for HDMI output to match the capabilities of the connected device (TV, monitor, etc).

- Auto : Automatically sets the product to the optimum format supported by your device.
- YCbCr (4:4:4) : If your TV supports the YCbCr colour space via HDMI, select this to output the normal YCbCr colour gamut.

## Setup

- **RGB (Standard)** : Select this to output the normal RGB colour gamut.
- RGB (Enhanced) : If you have connected the product to a DVI display device such as a monitor, select this to output the enhanced RGB colour gamut.

## Movie Frame (24Fs)

Setting the Movie Frame (24Fs) feature to **Auto** allows you to adjust the product's HDMI output to 24 frames per second for improved picture quality. You can enjoy the Movie Frame (24Fs) feature only on a TV supporting this frame rate. You can select Movie Frame only when the product is in the HDMI 1080i or 1080p output resolution modes.

- Auto : Movie Frame (24Fs) functions work.
- Off : Movie Frame (24Fs) functions are off.

## **HDMI** Deep Color

Lets you output video from the HDMI OUT jack with Deep Colour. Deep Colour provides more accurate colour reproduction with greater colour depth.

- Auto : The product outputs video with Deep Colour to a connected TV which supports HDMI Deep Colour.
- Off : The picture is output without Deep Colour.

### Still Mode

Lets you set the type of picture the product displays when you pause DVD playback.

- Auto : Automatically shows the best still picture depending on the content.
- Frame : Select when pausing a scene with a little action.
- Field : Select when pausing a scene with a lot of action.

## **Progressive Mode**

Lets you improve picture quality when viewing DVDs.

- Auto : Select to have the product automatically select the best picture quality for the DVD you're watching.
- Video : Select for the best picture quality from concert or TV show DVDs.

## Audio

## **Digital Output**

You set the Digital Output to match the capabilities of the AV receiver you've connected to the product :

- **PCM** : Choose if you have connected an HDMI supported AV receiver.
- Bitstream (Unprocessed) : Select if you have connected an HDMI supported AV receiver with Dolby TrueHD and DTS-HD Master Audio decoding capabilities.
- Bitstream (Re-encoded DTS) : Choose if you have connected an AV receiver using a Digital Optical input that can decode DTS.
- Bitstream (Re-encoded Dolby D) : Select if you don't have an HDMI supported AV receiver, but have an AV receiver with Dolby Digital decoding capabilities.

Blu-ray Discs may include three audio streams :

- Main Feature Audio : The audio soundtrack of the main feature.
- BONUSVIEW audio : An additional soundtrack such as the director or actor's commentary.
- Navigation Sound Effects : When you choose some menu navigation, Navigation Sound Effects may sound. Navigation Sound Effects are different on each Blu-ray Disc.

#### NOTE

- Be sure to select the correct Digital Output or you will hear no sound or a loud noise.
- If the HDMI device (AV receiver, TV) is not compatible with compressed formats (Dolby digital, DTS), the audio signal outputs as PCM.
- Regular DVDs do not have BONUSVIEW audio and Navigation Sound Effects.
- Some Blu-ray Discs do not have BONUSVIEW audio and Navigation Sound Effects.
- This Digital Output setup does not effect the analogue (L/R) audio or HDMI audio output to your TV.

It effects the optical and HDMI audio output when connected to an AV receiver.

## **Digital Output Selection**

Se	tup	PCI	M		ream cessed)	Bitstream (Re-encoded DTS)	Bitstream (Re-encoded Dolby D)
Conne	ection	HDMI supported AV receiver	Optical	HDMI supported AV receiver	Optical	HDMI supported AV receiver or Optical	HDMI supported AV receiver or Optical
	PCM	Up to PCM 7.1ch	PCM 2ch	PCM	PCM 2ch	Re-encoded DTS	Re-encoded Dolby Digital *
	Dolby Digital	Up to PCM 7.1ch	PCM 2ch	Dolby Digital	Dolby Digital	Re-encoded DTS	Re-encoded Dolby Digital *
	Dolby Digital Plus	Up to PCM 7.1ch	PCM 2ch	Dolby Digital Plus	Dolby Digital	Re-encoded DTS	Re-encoded Dolby Digital *
Audio Stream on Blu-ray	Dolby TrueHD	Up to PCM 7.1ch	PCM 2ch	Dolby TrueHD	Dolby Digital	Re-encoded DTS	Re-encoded Dolby Digital *
Disc	DTS	Up to PCM 6.1ch	PCM 2ch	DTS	DTS	Re-encoded DTS	Re-encoded Dolby Digital *
	DTS-HD High Resolution Audio	Up to PCM 7.1ch	PCM 2ch	DTS-HD High Resolution Audio	DTS	Re-encoded DTS	Re-encoded Dolby Digital *
	DTS-HD Master Audio	Up to PCM 7.1ch	PCM 2ch	DTS-HD Master Audio	DTS	Re-encoded DTS	Re-encoded Dolby Digital *
	PCM	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch	PCM 2ch
Audio Stream on DVD	Dolby Digital	Up to PCM 5.1ch	PCM 2ch	Dolby Digital	Dolby Digital	Dolby Digital	Dolby Digital
	DTS	Up to PCM 6.1ch	PCM 2ch	DTS	DTS	DTS	DTS
	Dolby Digital	Up to PCM 5.1ch	PCM 2ch	Dolby Digital	Dolby Digital	Re-encoded DTS	Re-encoded Dolby Digital *
	Dolby Digital Plus	Up to PCM 5.1ch	PCM 2ch	Dolby Digital Plus***	Dolby Digital	Re-encoded DTS	Re-encoded Dolby Digital *
Audio Stream of Broadcast	MPEG1	Up to PCM 5.1ch	PCM 2ch	PCM (up to 5.1ch)	PCM 2ch	Re-encoded DTS	Re-encoded Dolby Digital *
	HE-AAC	Up to PCM 5.1ch	PCM 2ch	Re-encoded Dolby Digital** (for Multichannel Programme)	Re-encoded Dolby Digital** (for Multichannel Programme)	Re-encoded DTS	Re-encoded Dolby Digital *

## Setup

Definition for Blu-ray Disc	Any		Outputs only the main feature audio stream so that your AV receiver can decode the audio bitstream. You will not hear BONUSVIEW audio or Navigation Sound Effects.	Decodes the main feature audio and BONUSVIEW audio stream together into PCM audio and adds Navigation Sound Effects, then re-encodes the PCM audio into DTS bitstream.	Decodes the main feature audio and BONUSVIEW audio stream together into PCM audio and adds Navigation Sound Effects, then re-encodes the PCM audio into Dolby digital bitstream.
--------------------------------	-----	--	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

* If the Source Stream is 2ch or mono, "Re-encoded Dolby D" Setting are not applied. Output will be PCM 2ch.

** If HE-AAC Source Stream is 2ch or 1ch, Output shall be 2ch PCM.

For Dolby Digital Plus stream on Internet Content, PCM Output via HDMI supported up to 5.1ch.

**** If the Audio Description is set to **On** and the Number of Audio Channel is more than 2, audio output will be changed Dolby Digital even if the original broadcast stream is Dolby Digital Plus. But, if the Number of Audio Channel is 2 (stereo) or 1 and Audio Description is set to **On**, Output format will be PCM.

## PCM Downsampling

Lets you set 48kHz and 96kHz PCM downsampling on or off.

- Off : Select when the AV receiver connected to the product is 96kHz compatible.
- On : Select when the AV receiver connected to the product is not 96kHz compatible. 96kHz signals will be down converted to 48kHz.

### 🗞 NOTE

 Even when PCM Downsampling is set to Off, some discs will only output downsampled audio through the optical digital outputs.

### HDMI

- If your TV is not compatible with compressed multi-channel formats (Dolby Digital, DTS), the product may output PCM 2ch downmixed audio even though you set the digital output as Bitstream (unprocessed/Re-encoded DTS/Reencoded Dolby D) on your setup menu.
- If your TV is not compatible with PCM sampling rates over 48kHz, the product may output 48kHz downsampled PCM audio even though you set PCM Downsampling to Off.

## Dynamic Range Control

You can listen at low volumes, but still hear dialog clearly.

This is only active if your product detects a Dolby Digital, Dolby Digital Plus or Dolby TrueHD signal.

- Auto : The Dynamic Range Control will be set automatically based on the information provided by the Dolby TrueHD Soundtrack.
- Off : You can enjoy the movie with the standard Dynamic Range.
- On : When Movie soundtracks are played at low volume or through smaller speakers, the system can apply appropriate compression to make low-level content more intelligible and prevent dramatic passages from getting too loud.

## **Downmixing Mode**

Lets you select how the product will downmix multi-channel audio into fewer channels.

- Normal Stereo : Downmixes the multi-channel audio into two channel stereo. Choose when connected to equipment that does not support virtual surround functions such as Dolby Pro Logic.
- Surround Compatible : Downmixes multichannel audio into surround compatible stereo. Choose when connected to equipment that supports virtual surround functions such as Dolby Pro Logic.

## DTS Neo:6 Mode

You can enjoy multi-channel sound from an Audio CD (CD-DA).

- **Off** : Outputs a 2-channel audio signal through the front speakers only.
- **Cinema** : Select to play 2-channel movie sound over multi-channels.
- Music : Select to play 2-channel music over multi-channels.

#### 🗞 NOTE

 If you are using an HDMI supported AV receiver, this option is available when you set Digital Output setup as PCM.

## Audio Sync

In some cases when the product is connected to a digital TV, the audio signal may not synchronize with the video signal. If this occurs, adjust the audio delay time to match the video signal.

• You can set the audio delay time between 0 msec and 200 msec.

Adjust it to the optimal setting.

#### 🗞 NOTE

• The audio delay time you specify may not be exact depending on the played content.

## Channel

You can configure your TV channels with features such as country and auto tune.

## Country

Select this to change the country. Enter the desired 4-digit password using the number buttons.

- 1. Press the ►▲▼ buttons to select the desired country, then press the ENTER button.
- 2. Press the RETURN button.

## Auto Tuning

Scans for all channels with active broadcast stations and stores them.

Scans for a channel automatically and stores in the product.

Automatically allocated programme numbers may not correspond to actual or desired programme numbers.

If a channel is locked using the Child Lock function, the PIN input window appears.

## Manual Tuning

Scans for a channel manually and stores in the product.

- When scanning has finished, channels are updated in the channel list.

### Transfer Channel List

This function can import or export the channel map. You should connect a USB storage to use this function. Enter your 4 digit PIN number when the PIN input screen appears.

- Import from USB : Import channel list from USB.
- Export to USB : Export channel list to USB. This function is available when USB is connected.

## Setup

## Edit Channel Number

Select this to edit the channel number in the channel manager. (See page 35)

This menu will be displayed only when you set the country to New Zealand.

- **Disable** : Select disable if you do not want to edit channel number.
- Enable : Select enable if you want to edit channel number.

## Digital Text (only New Zealand)

If the programme broadcasts with digital text, this feature is enabled.

- **Disable** : Select disable if you do not want to use digital text.
- Enable : Select enable if you want to use digital text.
- MHEG (Multimedia and Hypermedia Information Coding Experts Group) : An International standard for data encoding systems used in multimedia and hypermedia. This is at a higher level than the MPEG system which includes data-linking hypermedia such as still images, character service, animation, graphic and video files as well as multimedia data. MHEG is user runtime interaction technology and is being applied to various fields including VOD (Video-On-Demand), ITV (Interactive TV), EC (Electronic Commerce), teleeducation, teleconferencing, digital libraries and network games.

## Network

Before you begin, contact your ISP to find out if your IP address is static or dynamic. If it is dynamic, and you are using a wired or wireless connection, we recommend using the Auto procedures. If you are using a wireless connection and your router has the capability, you can use WPS(PBC) or One Foot Connection.

If your IP address is static, you must use the manual set up procedure for both wired and wireless connections.

## **Network Settings**

To begin setting up the network connection for your product, follow these steps:

- In the Home menu, press the ◄► buttons to select Settings, and then press the ENTER button.
- 2. Press the ▲▼ buttons to select **Network**, and then press the **ENTER** button.
- Press the ▲▼ buttons to select Network Settings, and then press the ENTER button.
- Press the ▲▼ buttons to select Wired, Wireless (general), WPS(PBC) or One Foot Connection, and then press the ENTER button.
- If you have a wired network, go to Wired Network below. If you have a wireless network, go to Wireless Network on pages 46~48.

#### Wired Network

- Setting Up a Wired Connection Auto
- 1. Press the ▲▼ buttons to select Wired.



 Press the ENTER button. The Network Status screen appears. The product connects to the network after the network connection is verified.

#### Setting Up a Wired Connection - Manual

If you have a static IP address or the Auto Setting does not work, you'll need to set the Network Settings values manually.

To view your Network Settings values on most Windows computers, follow these steps:

#### Windows XP

- 1. Right click the Network icon on the bottom right of the Windows desktop.
- 2. In the pop-up menu, click Status.
- **3.** On the dialog that appears, click the Support tab.
- 4. On the Support tab, click the Details button. The Network settings are displayed.

#### Windows 7

- 1. Click the Network icon on the bottom right of the Windows desktop.
- 2. In the pop-up menu, click Network and Sharing Centre.
- 3. On the dialog that appears, click the Local Area Connection or Wireless Network Connection depending on your network connection.
- 4. On the Support tab, click the Details button. The Network settings are displayed.

#### 🗞 NOTE

 Depending on your Windows version, the information may differ.

To enter the Network settings into your product, follow these steps:

- 1. Press the ▲▼ buttons to select Wired, and then press the ENTER button.
- Press the ◄► buttons to select IP Settings, and then press the ENTER button.
- **3.** On the Network Status screen, select Cancel, and then press Enter.

Display		IP Settings
Audio	IP Mode	Manual +
Channel	IP Address	0 0 0 0
	Subnet Mask	0 0 0 0
System	Gateway	0 0 0 0
Language	DNS Mode	Manual
Security	DNS Server	0 0 0 0
General		0K
Support	_	♦ Move

- 4. Press the ENTER button to select IP Mode.
- 5. Press the ▲▼ buttons to select Manual, and then press the ENTER button.
- Press the ▼ button to go to the first entry field (IP Address).
- 7. Use the number buttons on your remote to enter numbers.
- When done with each field, press the ► button to move successively to the next field. You can also use the other arrow buttons to move up, down, and back.
- 9. Enter the IP Address, Subnet Mask, and Gateway values.
- 10. Press the ▼ button to go to DNS Mode.
- Press the ▼ button to go to the first DNS entry field. Enter the numbers as above.
- Press the ENTER button to select OK. The Network Status screen appears. The product connects to the network after the network connection is verified.

## Setup

### Wireless Network

You can setup a wireless network three ways:

- Wireless (general)
- Using WPS(PBC)
- One Foot Connection

Wireless (general) includes both Automatic and Manual setup procedures.

Setting Up the Wireless Network Connection
 - Auto

Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key. The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the Auto setup process.

 Press the ▲▼ buttons to select Wireless (general).



- Press the ENTER button. When done, it displays a list of the available networks.
- Press the ▲▼ buttons to select the desired network, and then press the ENTER button. The Security screen appears.

 On the Security screen, enter your network's Pass Phrase. Enter numbers directly using your remote control.

To select a letter, press the  $\blacktriangle \lor \blacklozenge \lor$  buttons to move the cursor, then press the **ENTER** button.

isplay				Netw	ork Se	ttings			
udio	Enter s	ecurit	y key.					0 e	ntered
hannel	_								
	a	b	С	d	е	f	1	2	3
ystem	g	h	i.	j	k	1	4	5	6
anguage	m	n	0	р	q	r	7	8	9
ecurity	S	t	U	٧	W	Х	у	Z	0
eneral	a/	A	*	De	lete	Sp	ace		
upport		A P	reviou	s 🗘	Move	. 8	Enter	D F	leturn

### 🗞 NOTE

- You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem.
- When done, press the GREEN (B) button on your remote, or press the ▲▼◀► buttons to move the cursor to Done, and then press the ENTER button.

The Network Status screen appears. The product connects to the network after the network connection is verified.

Setting Up the Wireless Network Connection
 Manual

If the Auto Setting does not work, you need to enter the Network setting values manually. To view your Network Settings values on most Windows computers, follow these steps:

### Windows XP

- 1. Right click the Network icon on the bottom right of the Windows desktop.
- 2. In the pop-up menu, click Status.
- **3.** On the dialog that appears, click the Support tab.
- 4. On the Support tab, click the Details button. The Network settings are displayed.

#### Windows 7

- 1. Click the Network icon on the bottom right of the Windows desktop.
- 2. In the pop-up menu, click Network and Sharing Centre.
- On the dialog that appears, click the Local Area Connection or Wireless Network Connection depending on your network connection.
- 4. On the Support tab, click the Details button. The Network settings are displayed.
- 🗞 NOTE
  - Depending on your Windows version, the information may differ.

To enter the Network settings into your product, follow these steps:

- 1. Follow Steps 1 through 4 in the 'Setting Up the Wireless Network Connection Auto' procedure.
- When done, press the GREEN (B) button on your remote, or press the ▲▼ ◀► buttons to move the cursor to Done, and then press the ENTER button. The Network Status screen appears.
- **3.** On the Network Status screen, select Cancel, and then press Enter.
- 4. Press the **◄** buttons to select **IP Settings**, and then press the **ENTER** button.



- 5. Press the ENTER button to select IP Mode.
- 6. Press the ▲▼ buttons to select Manual, and then press the ENTER button.
- Press the ▼ button to go to the first entry field (IP Address).
- 8. Use the number buttons to enter numbers.

- When done with each field, press the ► button to move successively to the next field. You can also use the other arrow buttons to move up, down, and back.
- 10. Enter the IP Address, Subnet Mask, and Gateway values.
- 11. Press the ▼ to go to DNS Mode.
- 12. Press the ▼ button to go to the first DNS entry field. Enter the numbers as above.
- 13. Press the OK button.
- 14. The Network Status screen appears. The product connects to the network after the network connection is verified.

#### WPS(PBC)

The easiest way to set up the wireless network connection is using the WPS(PBC) function or the One Foot Connection function.

If your wireless router has a **WPS(PBC)** button, follow these steps:

1. Press the ▲▼ buttons to select WPS(PBC).



- 2. Press the ENTER button.
- Press the WPS(PBC) button on your router within two minutes. Your product automatically acquires all the network settings values it needs and connects to your network.
- 4. The Network Status screen appears. The player connects to the network after the network connection is verified.

#### **One Foot Connection**

You can set up the wireless connection automatically if you have a Samsung Wireless Router which supports One Foot Connection. To connect using the One Foot Connection function, follow these steps:

## Setup

 Press the ▲▼ buttons to select One Foot Connection.

	Network Settings
Select a netv	ork connection type.
han Wired Wireless (general) WPS(PBC) ene One Foot Connection	

- 2. Press the ENTER button.
- **3.** Place the Samsung Wireless Router within 25 cm (10 inches) of your product to connect.
- 4. Wait until the connection is automatically established.

## **Network Status**

Check whether a connection to the network and the Internet have been established.

	Netwo	ork Status	
Displ		MAC Address	XX:XX:XX:XX:XX:XX
Audio		IP Address	0.0.00
han		Subnet Mask	0.0.0.0
letw	iptime 📶	Gateway	0.0.0.0
		DNS Server	0.0.0.0
Syste	Internet is connected successfully.		
	If you have a problem using any Intern	et services, contact y	our Internet service
	If you have a problem using any Intern provider.	et services, contact y	our Internet service
		et services, contact y	your Internet service
Secu			your Internet service

## SWL(Samsung Wireless Link)

Mobile devices with Samsung Wireless Link capability can be connected to your network via this product.

- Off : Set Samsung Wireless Link off.
- On : Set Samsung Wireless Link On.
- If you select On, press the ▲▼ buttons to select the Connect SWL, then press the ENTER button. Please follow the instruction on TV Screen.
- 🗞 NOTE
  - If this product turned off, the network connection using SWL will be disconnected.

### AllShare Server Management

Manage content sharing function. You can share media contents (videos, music, photos) via the AllShare function.

- AllShare Server : Set the server function.
- Change Server Name : Set the server name. Enables you to identify the server on a network.
- Device Access Control : Configures access authorization for individual device.

## **BD-Live Internet Connection**

Set to allow or prohibit an Internet connection when you use the BD-LIVE service.

- Allow (All) : The Internet connection is allowed for all BD-LIVE contents.
- Allow (Valid Only) : The Internet connection is allowed only for BD-LIVE contents containing a valid certificate.
- **Prohibit** : No Internet connection is allowed for any BD-LIVE content.

#### 🗞 NOTE

- What is a valid certificate? When the product uses BD-LIVE to send the disc data and a request to the server to certify the disc, the server uses the transmitted data to check if the disc is valid and sends the certificate back to the product.
- The Internet connection may be restricted while you are using BD-LIVE contents.

## System

## Plug & Play

By using Plug & Play, you can set country, clock mode and Network Settings, etc. For more information about the Plug & Play function, refer to the Plug & Play section of this user manual. (See pages 33~53)

### 🗞 NOTE

 If you want to change plug & play options, you should enter the password.

## Clock

Set time-related functions.

- Clock Mode : You can set it to Auto or Manual.
- Clock Set : If Clock Mode set to Manual, the this menu will be activated.
- Time Zone : If you set the Country to Australia, and Clock Mode set to Auto, this menu will appear.
- 🗞 NOTE
  - If Timer Viewing and Timer Recording is set using GUIDE, Channel List, or Info menu, It will work based on the time information of the TV programme.
     If you set the Clock Mode to Manual and change time manually, Timer Viewing and Timer Recording function can be limited or work abnormally.

## Anynet+(HDMI-CEC)

Anynet+ is a convenient function that offers linked operations with other Samsung products that have the Anynet+ feature.

To operate this function, connect this product to a Samsung TV with an HDMI cable.

With Anynet+ on, you can operate this product using a Samsung TV remote control and start disc playback simply by pressing the **PLAY** ( ) button on the TV's remote control.

For more information, please see the TV user manual.

- Off : Anynet+ functions will not work.
- On : Anynet+ functions will work.

### 🗞 NOTE

- This function is not available if the HDMI cable does not support CEC.
- If your Samsung TV has an Anynet+ logo, then it supports the Anynet+ function.
- Depending on your TV, certain HDMI output resolutions may not work.
   Please refer to the user manual of your TV.
- If you press the Play button of TV when product is in DTV mode, Time Shift function will start.

## **Device Management**

Manage internal HDD and external devices. You can manage options such as device format and default recording device.

)isplay Audio	Plug & Play Device Management
Channel letwork System Language Security General	Device Format Checking Device Device Performance Test Default Recording Device :HDD
Support	♦ Move

- Device Format : Format the device.
- Checking Device : Checks for errors on the device.
- Device Performance Test : Test the recording performance of the device.
- **Default Recording Device** : Select default recording device.

### By HDD

- 1. Select the **Default Recording Device**, and then press the **ENTER** button.
- 2. Select recording device to HDD. (You can also check available storage in this menu.)

lisplay Judio	Plug & Play Default Recording Device	
hannel letwork	HDD XXX.XX GB/XXX.XX G	В
System	Select default device for recording.	
anguage	HDD Internal storage	
ecurity eneral	a en abc Recordable	
upport	🗘 Move 🖃 Enter 🗅 Retur	'n

## Setup

## By External Device

- 1. In Stop mode, connect the external storage device to the USB port on the front panel of the product.
- 2. Select the **Device Format**, and then press the **ENTER** button. Device format will be started.
- 3. Select the **Default Recording Device**, and then press the **ENTER** button.

Display Audio	Plug & Play Default Recording Device	
Channel Network	HDD XXX.XX GB/	XXX.XX GB
System	Select default device for recording.	
Language Security	HDD Internal stora	ge
General Support	\$ Move ⊕' Enter	C Return

 Select recording device to connected external device. (You can also check available storage in this menu.)

## 🗞 NOTE

- It may take several times to detect a connected external device.
- The total size of device must have at least 375MB of free space to use the time shift function.
- In case of USD HDD is used for recording, Don't plug-out USB HDD Device during format.
- Recording Function is supported only for DTV.
- Recording Function is not supported for data channel.
- Maximum length of Recording or Time shift is affected by available size of storage device and the Video resolution of TV Programme.

## **BD** Data Management

Enables you to manage the downloaded contents from a Blu-ray Disc that supports the BD-LIVE service.

You can check the device information including the storage size, delete the BD data.

- Current Device : Displays the current device.
- Total Size : Displays the total size of the device. (Storage)
- Available Size : Displays the available size of the device. (Storage)
- Delete BD Data : Press this to delete the BD data.

#### 🗞 NOTE

• The total size of BD Data Management may differ, depending on the conditions.

## DivX® Video On Demand

View DivX® VOD Registration Codes to purchase and play DivX® VOD contents.

## Reset

All settings will revert to the default except for the network and Smart Hub settings.

#### 🗞 NOTE

• The default password is 0000.

## Language

You can select the language you prefer for the Home menu, disc menu, etc.

- **On-Screen Menu** : Select the language for the on-screen displays.
- **BD/DVD Disc Menu** : Select the language for the disc menu displays.
- **BD/DVD Audio** : Select the language for disc audio language.
- **BD/DVD Subtitle** : Select the language for disc subtitle language.
- DTV Primary Audio : Select the language for DTV primary audio language.
- **DTV Secondary Audio** : Select the language for DTV secondary audio language.
- DTV Primary Subtitle : Select the language for DTV primary subtitle language.
- DTV Secondary Subtitle : Select the language for DTV secondary subtitle language.
- DTV Primary Teletext : Select the language for DTV primary teletext language.
- DTV Secondary Teletext : Select the language for DTV secondary teletext language.

#### 🗞 NOTE

 The selected language will only appear if it is supported on the disc or broadcast channel.

## Security

This function works in conjunction with Blu-ray Disc/DVDs that have been assigned an age rating or numeric rating that indicates the maturity level of the content. These numbers help you control the types of Blu-ray Disc/DVDs that your family can watch.

When you access this function, the security screen appears. Enter the your Security password. (The default password is 0000.)

## **DTV Channel Lock**

You can lock some channels using the Channel Lock function so that children cannot watch them.

- Off : DTV Channel Lock will not work.
- **On** : DTV Channel Lock will work.

## **DTV Program Rating Lock**

This function works in conjunction with DTV that have been assigned a rating, which helps you control the types of DTV that your family watches. Select the rating level you want to set.

## **BD** Parental Rating

Prevent playback of Blu-ray Discs with specific age ratings unless a password is entered.

## **DVD** Parental Rating

Prevent playback of DVDs with specific numerical ratings unless a password is entered.

A larger number indicates that the programme is intended for adult use only. For example, if you select up to Level 6, discs that contain Level 7, 8 will not play.

## Change PIN

Change the 4-digit password used to access security functions.

#### If you forgot your password

- 1. Press the **MENU** button to display home menu with no disc inserted.
- Press the STOP (
  ) button on the front panel of the product for more than 5 seconds. All settings will revert to the factory settings.

#### 🗞 NOTE

• When the factory default settings are restored, all the user stored BD data will be deleted.

## General

## **Energy Saving**

You can reduce power consumption by setting the front panel to turn off automatically when the product is in standby mode.

- Off : Set not to use the energy saving function.
- **On** : Turn off the front panel automatically when the product is in standby mode.

## Light Effect

You can adjust the light effect on the product.

- Always On : Activate Light Effect at all times. It is recommended for continuous display for commercial or demonstration use.
- Auto : Activate Light Effect when you turn the product on or off and when you insert or eject a disc. This is recommended for home use.
- Off : Turn Light off.

## Advanced Music Copy

When you copy music files, information can be updated automatically. The copying time may be increased.

- Off : Turn Advanced Music Copy Off.
- On : Turn Advanced Music Copy On.

### 🗞 NOTE

• This feature is available only when the product is connected to the network.

## Setup

- This can be used if you copy from an external device such as USB/ODD/AllShare to the HDD.
- This will not work if you copy from the HDD to an external device.

## Network Remote Control

The Network Remote Control function lets you control your product from a remote device such as a smart phone through a wireless connection to your local area network.

To use the Network Remote Control function, follow these steps:

- 1. Select On in the Network Remote Control menu.
- 2. Install the Samsung network remote control application to control your product on your compatible portable device.
- 3. Make sure your portable device and your product are connected to the same wireless router.
- Start the application on your portable device. The application should find your product and display it on a list.
- 5. Select the product.
- If this is the first time you are using the function, it will ask you to allow or deny remote control of the product. Select Allow.
- **7.** Follow the instructions that came with the application to control the product.

## Support

## Software Upgrade

The Software Upgrade menu allows you to upgrade the product's software for performance improvements or additional services.

## By Internet

To upgrade by Internet, follow these steps:

- Select By Internet, and then press the ENTER button. The Connecting to Server message appears.
- If there is a download available, the Download pop-up appears with a progress bar and the download starts.

- When the download is complete, the Upgrade Query window appears with three choices: Upgrade Now, Upgrade Later, or Don't Upgrade.
- If you select Upgrade Now, the product upgrades the software, turns off, and then turns on automatically.
- If you do not make a selection in one minute or select Upgrade Later, the product stores the new upgrade software. You can upgrade the software later using the Via Download function.
- 6. If you select Don't Upgrade, the product cancels the upgrade.

### 🗞 NOTE

- Your product must be connected to the Internet to use the By Internet function.
- The upgrade is complete when the product turns off, and then turns on again by itself.
- Never turn the product off or back on manually during the update process.
- Samsung Electronics shall take no legal responsibility for product malfunction caused by an unstable Internet connection or consumer negligence during a software upgrade.
- If you want to cancel the upgrade while the upgrade software is downloading, press the ENTER button.

## By Channel

Upgrade software using the broadcasting signal.

## By USB

To upgrade by USB, follow these steps:

- 1. Visit www.samsung.com/bluraysupport.
- 2. Download the latest USB software upgrade zip archive to your computer.
- Unzip the zip archive to your computer. You should have a single folder with the same name as the zip file.
- 4. Copy the folder to a USB flash drive.
- No disc should be inserted in the product, and then insert the USB flash drive into the USB port of the product.
- 6. In the product's menu, go to Settings > Support > Software Upgrade.
- 7. Select By USB.

## 🗞 NOTE

- No disc should be inserted in the product when you upgrade the software using the USB Host jack.
- When the software upgrade is done, check the software details in the Software Upgrade menu.
- Do not turn off the product during the software upgrade. It may cause the product to malfunction.
- Software upgrades using the USB Host jack must be performed with a USB memory flash stick only.

#### By Disc

To upgrade by Disc, follow these steps:

- 1. Visit www.samsung.com/bluraysupport.
- 2. Download the latest disc software upgrade zip archive to your computer.
- **3.** Unzip the zip archive to your computer. You should have a single folder with the same name as the zip file.
- 4. Write the folder onto a disc. We recommend a CD-R or DVD-R.
- 5. Finalize the disc before you remove it from your computer.
- 6. Insert the disc into product.
- 7. In the product's menu, go to Settings > Support > Software Upgrade.
- 8. Select By Disc.
- 🗞 NOTE
  - When the system upgrade is done, check the software details in the Software Upgrade menu.
  - Do not turn off the product during the Software Upgrade. It may cause the product malfunction.

### Via Download

The Via Download option lets you upgrade using a file the product downloaded earlier but you decided not to install immediately or a file downloaded by the product in Standby Mode (See Download in Standby Mode below).

To upgrade Via Download, follow these steps:

- If upgrade software has been downloaded, you will see the software version number to the right of Via Download.
- 2. Select Via Download, and then press the ENTER button.

- The product displays a message asking if you want to upgrade. Select Yes. The product begins the upgrade.
- 4. When the update is complete, the product turns off automatically, and then turns on.

#### 🗞 NOTE

- When the system upgrade is done, check the software details in the Software Upgrade menu.
- Do not turn off the product during the Software Upgrade. It may cause malfunction to the product.

#### Download in Standby Mode

You can set the Download in Standby Mode function so that the product downloads new upgrade software when it is in Standby mode. In Standby mode, the product is off, but its Internet connection is active. This allows the product to download upgrade software automatically, when you are not using it.

To set Download in Standby Mode, follow these steps:

- Press the ▲▼ buttons to select Download in Standby Mode, and then press the ENTER button.
- Select the desired downloaded time. If you select Off, the product will notify you with a pop up message when new upgrade software is available.

If you select the desired downloaded time, the product will automatically download new upgrade software when it is in Standby mode with the power off.

If it downloads new upgrade software, the product will ask you if you want to install it when you turn the product on.

#### 🗞 NOTE

 To use the Download in Standby Mode function, your product must be connected to the Internet.

## Contact Samsung

Provides contact information for assistance with your product.

## Basic Functions

## Playing a Video

## Playback

1. Push a disc into the product with the disc's label facing up.



2. Press the PLAY ( 🕞 ) button.

## Playback related buttons

PLAY ()	Starts playback.
STOP (🔳)	<ul><li>Stops playback.</li><li>If you press the button once : The stop position is memorized.</li><li>If you press the button twice : The stop position is not memorized.</li></ul>
PAUSE (	Pauses playback.

## 🗞 NOTE

- For some discs, pressing the **STOP** ( ) button once may not memorize the stop position.
- Video files with high bit rates of 20Mbps or more strain the product's capabilities and may stop playing during playback.

## 3D Converter

This function can convert the 2D output of 2D contents into 3D.

- 1. Connect this product to a TV that supports 3D using an HDMI cable.
- When you play 2D contents, press the 2D⇒3D button on the remote control to convert 2D into 3D contents.

 You can toggle between 2D and 3D by pressing the 2D⇒3D button repeatedly. If you are playing 3D contents in the 3D mode, you cannot use this function.

#### 🗞 NOTE

- You can't convert 2D contents into 3D or use the 2D⇒3D button In the following cases:
  - When the product is not connected with an HDMI cable
  - When the connected TV does not support 3D
  - When you are playing 3D contents (disc, file).
- 2D content is converted into the following 3D formats:
  - 1080p 24fps : Output to 1080p 24 fps 3D.
  - Others : Output to 720p 3D.
  - Photo files : Output to 720p 3D.
- 2D content that the product can convert to 3D:
  - 2D content that supports 3D conversion
  - Smart Hub content, DVD Video, BD-ROM, VCD, Video files, photo files, DTV programme, and recorded DTV programme.
- When you use the 3D converter, the BONUSVIEW function is not available. (Depending on the disc, a black outline appears.)
- Some viewers may experience discomfort while viewing 3D contents such as dizziness, nausea, and headaches.

## Adjusting the 3D Depth

The 3D Depth function lets you adjust the 3D depth of 2D to 3D conversions. Values range from 1 to 10. The higher the number, the deeper the 3D depth.

- 1. When you are viewing converted 3D contents, press the **TOOLS** button.
- Press the ▲▼ buttons to select 3D Depth, and then press the ENTER button.
- 3. Adjust the 3D Depth using the ◀► buttons.

## **Disc Structure**

The content of discs are usually divided as shown below.

Blu-ray Disc, DVD-VIDEO

6

### • Audio CD (CD-DA)

• track 1 • • track 2 • • track 3 • • track 4 • • track 5 •

6

#### • MP3, WMA, DivX, MKV and MP4

## 🗞 NOTE

- Playback during recording converts the media into profile 1.0, while normal playback only supports profile 2.0. In such cases, the following limitations are applied:
  - BONUSVIEW is not available.
  - Browsable slideshow audio is not available. (Audio may not be produced in Disc Menu mode for some discs.)

## Using the Disc Menu/Title Menu/ Popup Menu

## Using the Disc Menu



1. During playback, press the **DISC MENU** button on the remote control. Press the ▲▼ ◄► buttons to make a selection, and then press the ENTER button.

#### NOTE

 Depending on the disc, the menu items may differ and this menu may not be available.

## Using the Title Menu



1. During playback, press the TITLE MENU button on the remote control.



 Press the ▲▼◀► buttons to make the desired selection, then press the ENTER button.

### 🗞 NOTE

 Depending on the disc, the menu items may differ and this menu may not be available.

## Playing the Title List

1. During playback, press the DISC MENU or TITLE MENU button.



POPUP

 Press the ▲▼ buttons to select an entry you want to play from the Title List, and then press the ENTER button.

### 🗞 NOTE

• If your disc has a playlist, press the **GREEN (B)** button to go to the playlist.

## **Basic Functions**

## Using the Popup Menu

1. During playback, press the **POPUP MENU** button on the remote control.



 Press the ▲▼ ◄► buttons or ENTER button to select the desired menu.

#### 🗞 NOTE

• Depending on the disc, the menu items may differ and this menu may not be available.

### Using the Search and Skip Functions

During play, you can search quickly through a chapter or track, and use the Skip function to jump to the next selection.

## Searching for a Desired Scene



• During playback, press the **SEARCH** (

Each time you press the **SEARCH** ( •• • ) button, the playback speed will change as follows:

	,
HDD, BD-ROM, BD-RE/-R, DVD-RW/-R, DVD+RW/+R, DVD-VIDEO	
DivX, MKV, MP4	$  1 \rightarrow 1 \rightarrow 2 \rightarrow 3 $ $  4 1 \rightarrow 4 2 \rightarrow 4 3 $

 To return to normal speed playback, press the PLAY ( ▶) button.

## 🗞 NOTE

- The product does not play sound in search mode.

## **Skipping Chapters**



• During playback, press the SKIP ( Impl) button.

If you press the **SKIP** ( ) button, the disc moves to the next chapter.

If you press the **SKIP** (Inc) button, the disc moves to the beginning of the chapter. One more press makes the disc move to the beginning of the previous chapter.

## Slow Motion Play/Step Motion Play

## **Slow Motion Play**



• In pause mode, press the SEARCH ( >>> ) button.

Each time you press the **SEARCH** ( $\blacktriangleright$ ) button, the playback speed will change as follows:  $1/4 \vdash 1/2$ 

• To return to normal speed playback, press the **PLAY** ( ) button.

### 🗞 NOTE

• The product does not play sound in Slow mode.

## **Step Motion Play**



- In pause mode, press the PAUSE ( ) button.
   Each time you press the PAUSE ( ) button, a new frame appears.
- To return to normal speed playback, press the **PLAY** ( ▶) button.

### 🗞 NOTE

• The product does not play sound in Step mode.

## Using the TOOLS button

During playback, you can operate the disc menu by pressing the **TOOLS** button.



## Tools Menu Screen

## <BD-ROM / DVD>



#### <HDD>



#### 🗞 NOTE

Depending on the disc, the Tools menu may differ.

## Moving to a Desired Scene Directly



- 1. During playback, press the TOOLS button.
- Press the ▲▼ buttons to select Title Search, Chapter Search, or Time Search.
- Press the ◄► or number button to select desired Title, Chapter or Time, then press the ENTER button.

## Repeating the Title or Chapter



To repeat the disc title or chapter.

Depending on the disc, the Repeat function may not be available.

1. During playback, press the **TOOLS** button.



- 2. Press the  $\blacktriangle \nabla$  buttons to select Repeat Mode.
- Press the ◄► buttons to select Chapter or Title, then press the ENTER button.
- 4. To return to normal play, press the **TOOLS** button again.
- 5. Press the ▲▼ buttons to select **Repeat Mode**.
- Press the <> buttons to select Off, then press the ENTER button.

## Repeating the Title or Chapter



Repeat the disc title or all.

Depending on the disc, the Repeat function may not be available.

1. During playback, press the **TOOLS** button.



- Press the ▲▼ buttons to select Repeat Mode, then press the ◀► buttons to select Title or All.
- 3. To return to normal play, press the **TOOLS** button again.
- Press the ▲▼ buttons to select Repeat Mode.
- Press the <> buttons to select Off, the press the ENTER button.

## **Basic Functions**

## **Repeating a Section**



1. During playback, press the **TOOLS** button.



- 2. Press the ▲▼ buttons to select Repeat Mode.
- 3. Press the **◄** buttons to select **Repeat A-B**, then press the **ENTER** button.
- 4. Press the ENTER button at the point where you want repeat play to start (A).
- 5. Press the ENTER button at the point where you want repeat play to stop (B).
- 6. To return to normal play, press the **TOOLS** button again.
- 7. Press the ▲▼ buttons to select Repeat Mode.
- 8. Press the **◄** buttons to select **Off**, and then press the **ENTER** button.
- 🕲 NOTE
  - If you set point (B) before 5 seconds has lapsed, a prohibition message appears.
  - Depending on the disc, the menu items may differ and this menu may not be available.

## Selecting the Picture Settings



This function enables you to adjust video quality when the product is connected to a TV.

- 1. During playback, press the **TOOLS** button.
- Press the ▲▼ buttons to select Picture Settings, and then press the ENTER button.
- Press the ◄► buttons to select the desired Picture Settings, and then press the ENTER button.
  - **Dynamic** : Choose this setting to increase Sharpness.
  - **Normal** : Choose this setting for most viewing applications.

- Movie : This is the best setting for watching movies.
- User : Lets you adjust the advanced settings.

#### 🔊 NOTE

 When you use BD wise function, this menu will not appear.

## Selecting the Audio Language



You can also operate this function by pressing the **AUDIO** button on the remote control.



- 1. During playback, press the **TOOLS** button.
- 2. Press the ▲▼ buttons to select Audio.
- Press the <► buttons to select the desired audio language.</li>

#### 🗞 NOTE

- The ◄► indicator will not appear on the screen if the BONUSVIEW section does not contain any BONUSVIEW audio settings.
- Information about the main feature/BONUSVIEW mode will also appear if the Blu-ray Disc has a BONUSVIEW section.
   Press the ◀► button to switch between main feature and BONUSVIEW audio modes.
- The languages available through the Audio Language function depend on the languages that are encoded on the disc. This function or certain languages may not be available.
- A Blu-ray Disc can contain up to 32 audio languages and a DVD up to 8.
- Some Blu-ray Discs may allow you to select either the PCM or Dolby digital audio soundtrack in English.
- If you press the AUDIO button on the remote control, Audio bar appears.
   Press the RETURN button to remove the Audio bar.

## Selecting the Subtitle Language



You can also operate this function by pressing the **AD/SUBTITLE** button on the remote control.



- 1. During playback, press the **TOOLS** button.
- 2. Press the ▲▼ buttons to select Subtitle.
- Press the ◀► buttons to select the desired subtitle language.

#### 🗞 NOTE

- Depending on the Blu-ray Disc / DVD, you may be able to change the desired subtitle in the Disc Menu. Press the DISC MENU button.
- This function depends on the selection of subtitles that are encoded on the disc and may not be available on all Blu-ray Discs/DVDs.
- A Blu-ray Disc can contain up to 255 subtitle languages and a DVD up to 32.
- Information about the main feature/BONUSVIEW mode will also appear if the Blu-ray Disc has a BONUSVIEW section.
- This function changes both the primary and secondary subtitles at the same time.
- The total number of primary and secondary subtitles are displayed respectively.
- If you press the AD/SUBTITLE button on the remote control, the subtitle bar appears.
   Press the RETURN button to remove the subtitle bar.

## Changing the Camera Angle



When a Blu-ray Disc/DVD contains multiple angles of a particular scene, you can use the ANGLE function.

- 1. During playback, press the **TOOLS** button.
- 2. Press the ▲▼ buttons to select Angle.
- Press the ◀► buttons to select the desired Angle.

## Selecting the Information



This function enables you to check the contents information including the name and size, etc.

1. During playback, press the **TOOLS** button.



 Press the ▲▼ buttons to select the Detailed Information, then press the ENTER button.

## Setting BONUSVIEW



The BONUSVIEW feature allows you to view additional content (such as commentaries) in a small screen window while the movie is playing. This function is only available if the disc has the BONUSVIEW feature.

- 1. During playback, press the TOOLS button.
- Press the ▲▼ buttons to select BONUSVIEW Video or BONUSVIEW Audio.
- Press the ◀► buttons to select the desired BONUSVIEW.
- NOTE
  - If you switch from BONUSVIEW Video, BONUSVIEW Audio will change automatically in accordance with BONUSVIEW Video.
  - 2D contents are playing convert into 3D, bonusview function is not available. (Depending on discs, black outline may be shown)

## **Basic Functions**

## Listening to Music



## Playing an Audio CD (CD-DA)/MP3

- 1. Insert an Audio CD (CD-DA) or an MP3 Disc.
  - For an Audio CD (CD-DA), the first track plays automatically.
  - For an MP3 disc, press the ▲▼ buttons to select Music, then press the ENTER button.

## Audio CD (CD-DA)/MP3 Screen Elements



0	Displays the music information.
2	Displays the playlist.
3	Displays buttons available.
4	Shows the current play time/total play time.
6	Displays the current playback status.
6	Displays the repeated playback status.

 Press the ▲▼ buttons to select the track you want to play, and then press the ENTER button.

## AMG function

You can use AMG function to display the information of an Audio CD (CD-DA).

 Insert an Audio CD (CD-DA). If your disc has a CD information, the below pop-up screen will be displayed.

	CD Information
F	Multiple items of CD information found. Select the appropriate item of CD information.
00	Thinking of Paradise Shinhwa

### 2. Press the ENTER button.

The CD information will be displayed and the first track will be played automatically.

### 🗞 NOTE

 When the product is disconnected from the network, it may not retrieve the CD information from the Audio CD (CD-DA) if it's the latest version.

## Repeat an Audio CD (CD-DA)/MP3

1. During the Playlist playback, press the **TOOLS** button.



- Press the ▲▼ buttons to select Repeat Mode, and then press the ◀► buttons to select the desired repeat mode.
- Press the ▲▼ buttons to select Shuffle Mode, and then press the ◀► buttons to select the On or Off.
- 4. Press the ENTER button.

Off	Songs are played in the order in which they were recorded.
(CD) One Song	The current song is repeated.
(CC) All	All songs are repeated.
(⊐¢) Shuffle Mode	The random option plays songs in random order. To operate this function, please set the shuffle mode to <b>On</b> .

## Playlist

- 1. Insert an Audio CD (CD-DA) or an MP3 Disc.
  - For an Audio CD (CD-DA), the first track plays automatically.
  - For an MP3 disc, press the ▲▼ buttons to select Music, then press the ENTER button.
- To move to the Music List, press the STOP (
   or RETURN button.
   The Music List screen appears.
- 3. Press the YELLOW (C) button.
- Press the ▲▼ ◄► buttons to move to a desired track, and then press the ENTER button. A check appears on the track. Repeat this procedure to select additional tracks.

• Au		1/2 Page Selected Items : 3
•	TRACK 001           00.43           TRACK 003           04.41           TRACK 005           08.43           TRACK 007           04.96	TRACK 002           03.56           TRACK 004           TRACK 005           TRACK 006           03.52
	Close Edit Mode 🔲	→ Page 🖾 Tools 😅 Select つ Return

5. To remove a track from the list, move to the track, and then press the ENTER button again.

The check on the track is cancelled.

6. When done, press the **TOOLS** button.

 Press the ▲▼ buttons to select Play Selected, and then press the ENTER button. The tracks you selected will be played automatically.

Music	
TRACK 001	TRACK 001         00:43           00:43         TRACK 002           03:56         TRACK 003           04:41         Detail
<u> </u>	
Audio CD	⊕ Enter 🖾 Tools ⊃ Return

8. To go to the Music List, press the **RETURN** button.

#### 🗞 NOTE

 You can create a playlist with up to 99 tracks on Audio CDs (CD-DA).

#### **Playing back a Pictures**



## **Playing JPEG files**

- 1. Insert a JPEG disc.
- 2. Press the ▲▼ buttons to select Photos, and then press the ENTER button.
- Press the ▲▼ ◀► buttons to select the folder you want to play, and then press the ENTER button.
- Press the ▲▼ ◄► buttons to select the photo you want to play, and then press the ENTER button.

### 🗞 NOTE

• You can't enlarge the subtitle and PG graphic in the full screen mode.

## **Basic Functions**

## Using the TOOLS button

You can use various function by pressing the **TOOLS** button.





- Start Slide Show : Select to start the slide show.
- **Background Music** : Select to listen to music while viewing a picture.
- Background Music Setting : Select to set the background music setting.
- **Zoom** : Select to enlarge the current picture. (Enlarged up to 4 times)
- Rotate : Select to rotate the picture. (This will rotate the picture either clockwise or counter clockwise.)
- Picture Settings : Select this if you want to adjust the picture quality.
- Information : Shows the picture information including the name and size, etc.
- 🗞 NOTE
  - To enable the background music function, the photo file must be in the same storage media as the music file. However, the sound quality can be affected by the bit rate of the MP3 file, the size of the photo, and the encoding method.

## Using the Slide Show function

- 1. Press the TOOLS button.
- Press the ▲▼ buttons to select Start Slide Show, and then press the ENTER button. The Slide Show starts.
- 3. To pause the slide show, press the **TOOLS** button again.



- Press the ▲▼ buttons to select Pause Slide show, and then press the ENTER button.
- 5. You can also set the slide show speed and effect using the same method.

## Media Play

Media Play will enable you to play HDD/USB contents or the contents transferred to your PC using the AllShare function.

For more information about AllShare, refer to page 83.

1. Press the **MENU** button. The home menu will be displayed.



2. In Stop mode, connect the USB storage device to the USB port on the front panel of the product.



- 3. Press the ENTER button.
- Press the ▲▼ ◀► buttons to select the desired Videos, Music, or Photos, and then press the ENTER button.
- 5. For playing back Video, Music or Photo files, see pages 54~62.
- 🗞 NOTE
  - You must remove the USB storage device safely (by performing the "Safely Remove USB" function) in order to prevent a possible damage to the USB memory. Press the MENU button to move to the Home menu, select the YELLOW (C) button, and then press the ENTER button.
  - If you insert a disc when playing a USB storage device, the device mode changes to "DVD or CD" automatically.

## DTV Functions

## **Display Screen**

- 1. After Tuning is completed, you can watch TV channel.
- To change TV channels, press the PROG
   (∧/∨) button. (To move TV channel directly,
   press the channel numbers of desired TV
   channel using the number buttons on the
   remote control.)



- If you want to watch TV after seeing Bluray/DVD/CD or any other contents including Internet contents via Smart Hub or Allshare, press the MENU button on your remote control to go Home menu.
- If tuning is already completed, you can move to DTV mode by pressing MENU button again.
- 🗞 NOTE
  - The icon may differ depending on the service information of signal.

## Using the TOOLS button

Press the **TOOLS** button while you are viewing a channel.



• Tools Menu Screen



## **Picture Settings**

- 1. Press the **TOOLS** button while you are viewing a channel.
- Press the ▲▼ buttons to select Picture Settings, then press the ENTER button. For more information about this menu, please refer to page 58.

## Selecting the Audio Language

- 1. Press the **TOOLS** button while you are viewing a channel.
- Press the ▲▼ buttons to select the Audio Language.
- Press the ◄► buttons to select the desired Audio Language, then press the ENTER button.

## Selecting the Dual I II

You can also operate this function by pressing the **AUDIO** button on the remote control.

- 1. Press the **TOOLS** button while you are viewing a channel.
- 2. Press the ▲▼ buttons to select the Dual I II.
- 3. Press the **◄** buttons to select the desired Audio, then press the **ENTER** button.

## Lock current channel

You can lock a TV channel by setting PIN.

- 1. Press the **TOOLS** button while you are viewing a channel.
- Press the ▲▼ buttons to select Lock current channel then press the ENTER button. PIN setting menu appears.
- Enter 4-digit PIN number. If PIN setting is finished, Viewing locked channel is impossible unless you unlock.
- 4. If you want unlock a lock channel, press TOOLS button while you are viewing Lock Channels.
- 5. Press ▲▼ to select Lock current channel, then press the ENTER button.
- 6. Enter PIN to unlock a TV channel.
- NOTE
  - Lock current channel menu can be displayed when the country set to Netherlands.

## Add to Favourites

- 1. Press the **TOOLS** button while you are viewing a channel.
- Press the ▲▼ buttons to select the Add to Favourites, then press the ENTER button.
- 3. Press the ▲▼ buttons to edit the desired channel, then press the ENTER button.
- Press the <> buttons to select the OK, then press the ENTER button.

## Signal Information

- 1. Press the **TOOLS** button while you are viewing a channel.
- Press the ▲▼ buttons to select the Signal Information, then press the ENTER button. You can check the signal information.

## Setting Audio Description & Subtitle Language

## Setting the Audio Description

You can add a verbal description to the main audio to help the visually impaired.

- 1. Press AD/SUBTITLE button while you are viewing a TV channel.
- Press ▲▼ buttons to select Audio Description, then press the ENTER button.
- If you select On, volume menu will be activated. Adjust the audio description volume from 0~100.
- 🗞 NOTE
  - You can also toggle Audio Description by pressing AD/SUBTITLE button once again after you press AD/SUBTITLE button first time.

## Setting the Subtitle Language

- 1. Press the AD/SUBTITLE button while you are viewing a TV channel.
- 2. Press ▲▼ button to select Subtitle menu, then press the ENTER button.

## DTV Functions

- Subtitle : You can set it to On or Off. If you select On, the Subtitle Mode and Subtitle Language will be activated.
- Subtitle Mode : Select the desired subtitle mode.
- **Subtitle Language** : Select the desired subtitle language.

## Viewing the Guide Screen

The EPG (Electronic Programme Guide) information is provided by broadcasters. Using channel schedules provided by broadcasters, you can specify channels you want to watch in advance so that the channel automatically changes to the selected channel at the specified time. Channel entries may appear blank or out of date depending on a channel status.

If you set the Country to New Zealand , Guide screen and Functional Specification on this manual may differ.

You can also operate this function by pressing the **GUIDE** button on the remote control.



- 1. Press the **MENU** button. The home menu will be displayed.
- Press the ◀► buttons to select the Watch TV.
- Press the ▲▼ buttons to select the Guide, then press the ENTER button. The guide screen will be displayed.
- Guide Screen



0	Displays the channel screen.
2	Displays the channel information.
3	Displays the current date and time.
0	<ul> <li>Nevigation Help : Displays remote control buttons available.</li> <li>RED (A) : To set the programme schedule.</li> <li>YELLOW (C) : It displays channel from now to 24 hours after. If you select YELLOW (C) button, GREEN (B) button will be displayed. Press this to display the list of channels before 24 hours.</li> <li>BLUE (D) : To change the Channel View (All, TV, Radio, Data/Other, Favourites 1,2,3)</li> <li>PROG (A/V) buttons : Go to previous page or next page.</li> <li>ENTER button</li> <li>When you select a programme currently being broadcast, you can watch the selected channel in the full screen.</li> <li>When you select a programme scheduled to broadcast, you can set the Timer viewing or Timer recording. Press the ◄ button to select the Timer viewing or Timer recording, then press the ENTER button again. The Timer icon appears on the guide screen.</li> </ul>
6	Displays the Stored channels.

6 Displays view mode.

## Schedule Manager

Make sure that clock must be set before operating this function. (See page 49)

If you set the Country to New Zealand, you can go to schedule manager through home menu. In the home menu, go to Watch TV >Schedule Manager.

You can also operate this function by pressing the **GUIDE** button on the remote control.



- 1. Press the **MENU** button. The home menu will be displayed.
- 2. Press the ◀► buttons to select the Watch TV.
- Press the ▲▼ buttons to select the Guide, then press the ENTER button. The guide screen will be displayed.

- Press the ▲▼ ◄ ▶ buttons to select the channel you want to set Timer Recording (or Timer Viewing), press the RED (A) button.
- 5. Press the ENTER button.
- Press the ◀► buttons to select Timer Viewing or Timer Recording, then press the ENTER button.



- 7. Fill the input items using ▲▼ ◀► buttons, then press the ENTER button.
- 8. Press the ENTER button again.
- 🗞 NOTE
  - If the programme is set to Timer Viewing or Timer Recording in the schedule manager, the Timer icon does not appear on the guide screen.

## To Cancel or Edit Schedule

- 1. Press the RED (A) button in the guide screen.
- Press the ▲▼◀► buttons to select the scheduled channel you want to cancel or edit, then press the ENTER button.
- Press the ◄► buttons to select the Cancel Schedules or Edit, then press the ENTER button.
- 🗞 NOTE
  - If the reserved programme is edited in the schedule manager, the Timer icon does not appear on the guide screen.

## Viewing DTV with the 3D effect

You can experience 3D effect with all live TV programme and recorded TV programme.

- During watching the TV programme or playing recorded TV programme, press the 2D→3D button on your remote control. The 3D menu will appear.
  - 2D⇒3D : Changes a 2D image to 3D.
  - Side by Side : Displays two images next to each other.
  - **Top and bottom** : Displays one image above another.

 3D
Using the LEFT / RiGHT keys on the remote control, select the con suitable for the picture on screen.
 ↔ Move 🖼 Enter 📲 Exit
a company with

- 2. Press the ◀► buttons to select the desired 3D mode, then press the ENTER button.
- If you press the 2D⇒3D button once more during 3D viewing, displayed image will be changed into 2D mode.

#### 🗞 NOTE

- If you change TV channel during watching DTV in 3D mode of Side by Side mode, displayed image will be changed into 2D mode automatically.
- When 3D effect of Side by Side mode is enabled, you can not adjust 3D mode.
- If TV programme is not support Side by Side, Top and Bottom mode or Auto Detection function, 3D menu selection OSD is not appear.

## DTV Functions

## **Using the Teletext Service**

If DTV programme supports teletext signal, you can use teletext service. For Teletext information is displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

- 1. Press TTX/MIX button while you are viewing a TV channel.
- 2. By pressing the TTX/MIX button repeatedly, you can change or exit the teletext mode.



(E) (size) : Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.

(E3) (hold) : Holds the display at the current page, in the case that there are several secondary pages that follow automaticially. To undo, press it again.

Colour buttons (red, green, yellow, blue) : If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by pressing the coloured buttons. Press the colour corresponding to the topic of your choice. A new colourcoded page is displayed. Items can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

**(**sub-page) : Displays the available sub-page.

6	(page up) : Displays the next Teletext page.
0	€ (page down) : Displays the previous Teletext page.
8	(index) : Displays the index (contents) page at any time while you are viewing Teletext.
9	(E.) (mode) : Selects the Teletext mode (LIST/ FLOF). If pressed during LIST mode, switches the mode to List savemode. In List save mode, you can save a Teletext page into a list using the (E) (store) button.
0	(reveal) : Displays the hidden text (answers to quiz games, for example). To display the normal screen, press it again.
0	(ancel) : Shrinks the Teletext display to overlap with the current broadcast.

## Typical Teletext page



Part	Contents
А	Selected page number.
В	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
Е	Text.
F	Status information. FASTEXT information.

### 🗞 NOTE

 Teletext TTX/MIX control is available only when the DTV programme support teletext signal.

0

6

4

## Advanced Functions

## Recording

This product can record in HDD or external devices.

### Before recording

Please check the default recording device and available storage size in Device management. (For more information about device management, please refer to pages 49~50)

# Recording the current TV channel you are watching

- Press the PROG (A/V) or number buttons to select a TV Channel you want to record.
- 2. Press the REC ( ) button.



- If you want to adjust length of the recording, press the REC (
  ) button during the recording.
- Press the ▲▼ buttons to select the desired length of the recording, then press the ENTER button.

## To pause recording

- 1. Press the **REC PAUSE** ( ) button to pause a recording in progress.
- 2. Press the REC PAUSE ( ) or REC ( ) button resume recording.

## To stop recording

- Press the STOP ( ) button to stop a recording in progress. The message "Recording completed." will appear.
- When you are recording a TV channel other than you are watching now, press the STOP (
  ) button, then message appears as below.



- 3. Press the **<** ► buttons to select **Yes**, then press the **ENTER** button to stop recording.
- During these process, there are no need to change TV channels to the channel under recording.

## Playback control during recording

During recording a TV channel, you can search scene or move to the beginning point of recording.

- SEARCH ( <>>> ) buttons : Search the desired scene.
   >>> 1 → >>> 2 → >>> 3 →
- 2. SKIP ( Im ) button : Return to the beginning point of recording.
- 3. SKIP (Im) button : Jump to the same scene with Live TV.
- 5. ► button : Jump to + 20 sec from current position.d
- 6. PAUSE ( ) button : Pause the scene while keeping recording progress.
- STOP (
  ) button : If you are watching the past scene, the playback point will jump to the same scene with Live TV. If you are watching same scene with Live TV, recording will be stopped.

## Advanced Functions

## **Checking Recordable Time**

You can check recordable time in your HDD.

- In the Home menu, press the ◄► buttons to select My contents.
- Press the ▲▼ buttons to select the Recorded TV, and then press the ENTER button. The Recorded TV List will be displayed.
- 3. Press ◀ button to select HDD, then press INFO button.
- 🗞 NOTE
  - After formatting, the capacity of HDD is displayed as roughly 93% when compared to the vendor specification of HDD.
     This product store some data in HDD for functional

I his product store some data in HDD for functional purpose.

 If available storage is left less than 10MB during the recording, recording is finished automatically.

## Watching other channels during Recording a TV channel

While a TV programme is being recorded, you can also watch other free TV channels.

However, you can not watch scrambled TV channels while other TV channel is being recorded.

 During the recording, press the PROG (∧/V) or number buttons to change the channel you want to watch.

## 🗞 NOTE

- Recored files of less than 10 seconds are not saved.
- If the free space available for recording and multimedia files in the HDD is less than 10MB, recording will be not enabled.

# Playing a Disc while Recording a TV channel

You can play a disc while you are recording a TV channel.

## When disc is already loaded before start recording

- 1. Press the **MENU** button on your remote while recording a TV channel.
- In the Home menu, press the ◄► buttons to move to My Devices.

 Press the ▲▼ buttons to select a disc to play and press the ENTER button.

#### When Disc is not loaded

- 1. Insert a disc into Disc Slot.
- 2. Disc will be loaded and played while keeping recording.
- 🗞 NOTE
  - This product supports Blu-ray Video, DVD Video and CD-DA.

## Playing Recorded TV contents while Recording a TV channel

- 1. Press the **MENU** button on your remote while recording a TV channel.
- In the Home menu, press the ◄► buttons to move to My Contents.
- 3. Press the ENTER button to Recorded TV.

#### 🗞 NOTE

- To stop recording, please change operation mode to DTV view and press the STOP ( ) button.
- The TV programme under recording is not displayed at 'Recorded TV' page in 'My contents'.

## Time Shift function

You can pause a live TV or start watching the TV programme from the beginning point you started Time Shift function.

## Start Time Shift function with PAUSE button

- 1. When you are watching a TV channel, press the **PAUSE** ( ) button.
- The image of TV programme will be paused, and then Time Shift bar will appear.
   II Pause is displayed on the left side of Time Shift bar.

## Start Time Shift with PLAY button

- 1. When you are watching a TV channel, press the **PLAY** ( ▶) button.
- 2. The Time Shift function starts and the Time Shift bar will appear. Live TV is displayed on the left side of Time Shift bar.



## Time Shift information

You can see current information about Time Shift function.

- 1. Press the ENTER button on your remote while Time Shift function is enabled.
- 2. Time Shift bar appears as below.
- Time Shift Screen



0	Mode Display : Shows current status of Time Shift function.
0	Shows current playback point.
8	Shows recorded time by Time Shift function.
4	Shows progress bar.

## Playback control button during Time Shift function is enabled

- SEARCH ( → ▷ ) buttons : Search the desired scene.
   → 1 → → 2 → → 3 →
  - $\blacktriangleright 4 \rightarrow \blacktriangleright 5 \rightarrow \blacktriangleright 6 \rightarrow \blacktriangleright 7$
  - $441 \rightarrow 442 \rightarrow 443 \rightarrow$
  - $4 \rightarrow 4 5 \rightarrow 4 6 \rightarrow 4 7$
- 2. SKIP ( Im ) button : return to the beginning of Time Shift.
- 3. SKIP ( Imi ) button : Shows same scene with Live TV.
- 4. ◀ button : Jump to 20 sec from current positon.
- 5. ► button : Jump to + 20 sec from current position.

- 6. PAUSE ( ) button : Pause the scene while keeping Time shift operation.
- STOP (
  ) button : If you are watching the past scene, playback point will jump to the same scene with Live TV. If you are watching the same scene with Live TV, the Time shift function will be stopped.

## To stop Time Shift

- If Time Shift bar is not in PAUSE or PAST mode, press STOP (
  ) button. The message "Do you want to stop Timeshift." will appear.
- 2. Select Yes button and press ENTER button to stop Time Shift.
- If the Time Shift bar is in PAUSE or PAST mode, Time Shift mode will be changed into Live TV when you press STOP (
  ) button first time.
- 4. Press **STOP** (**•**) button again, then same message with above image appears.
- 5. Select Yes then press the ENTER button.

### **Playing the Recorded Title**

- In the Home menu, press the ◄► buttons to select the My Contents.
- Press the ▲▼ buttons to select the Recorded TV, and then press the ENTER button. The Recorded TV List will be displayed.
- Press the ▲▼ ◀► buttons to select the title you want to play, then press the ENTER button.

The selected title will be played back.

- 4. During the playback, press the ENTER button. Display five scenes as thumbnails.
- Press the ◄► buttons to select desired scene, then press the ENTER button to start playback from the beginning of the scene.

## Advanced Functions

## Edit the Recorded Title

- 1. In the Recorded TV screen, press the **YELLOW (C)** button to display check box.
- 2. Press the ENTER button to select the desired title you want to edit.
- 3. Press the TOOLS button.
- Press the ▲▼ buttons to select the Edit, then press the ENTER button.



## Renaming a Recorded Title

Follow Steps 1 through 4 in the 'Edit the Recorded Title'.

1. Press the **◄** buttons to select the **Rename**, then press the **ENTER** button.



- Select the desired characters using the ▲▼◀► buttons, then press the ENTER button.
- Press the ▲▼ ◀► buttons to select Done, then press the ENTER button.

# Splitting a Section of a Title (Divide into two)

Follow Steps 1 through 4 in the 'Edit the Recorded Title'.

 Press the ◄► buttons to select the Split, then press the ENTER button.

15	X	T	<u>@</u>	Part 1 00:00:00	Select Split
man of hall		A halls	<u>e</u>	Part 2 00:00:00	Return
Play		00:00:22 / 00:04:37			
			00	00	

- 2. Using the playback-related buttons, move to a point for splitting and then press the ENTER button.
- 3. Press the ENTER button to select Split.
- Press the ◄> buttons to select Yes, then press the ENTER button. The split title is divided into two, and the following titles will be shifted down by one.
- 5. Press the ENTER button to select OK.
- 🗞 NOTE
  - The minimum length of split section should be longer than 10 seconds.

# Splitting a Section of a Title (Partial Delete)

 Press the ◄► buttons to select the Partial Delete, then press the ENTER button.


- Press the ENTER button at the starting point. The image and starting point time is displayed in the section deletion starting point window.
  - Select the start and end points of the section you want to delete using the playback related buttons.
- Press the ENTER button at the end point. The image and end point time is displayed in the Section deletion ending point window.
- 4. Press the ENTER button to select Delete.
- Press the <> buttons to select OK, then press the ENTER button.
- 🗞 NOTE
  - The minimum length of delete section should be longer than 10 seconds.

#### Copy

## Copying Videos, Music or Photos

Contents	HDD/DISC/ AllShare → USB	DISC/USB/ AllShare → HDD	HDD/DISC/ USB → AllShare
Music	Supported	Supported	Supported
Photos	Supported	Supported	Supported
Videos	Supported	Supported	Supported

- Disc (CD-DA/CD-R/CD-RW, DVD±R(Finalise)/ DVD+RW/DVD-RW(Finalise)) → HDD or USB
- PTP USB is not available when you copy to USB.
- The copy function is not supported if the device is formatted with NTFS.
- The broadcast signal can be recorded on HDD but copy feature is not supported.
- 1. Press the **MENU** button. The home menu will be displayed.
- In Stop mode, connect the USB storage device to the USB port on the front panel of the product.
- 3. Press the ENTER button.
- Press the ▲▼ ◀ ► buttons to select the Music, then press the ENTER button.

- 5. Press the YELLOW (C) button to display the check box.
- 6. Press the ENTER button to check desired track.
- 7. Press the TOOLS button.

🫹 m8	30 Music	1/2 Page
() <b>2</b>	My Playlist (0) Imp 10 10 10 10 10 10 10 10 10 10 10 10 10	Tools areh Add to My Playlist Play Selected Contents Copy Select All Deselect All
	🕻 Play Mode 🚺 Sorting 🖃 Sele	Enter O Return

- 8. Press the ▲▼ buttons to select the Copy, then press the ENTER button.
- Press the ENTER button again. To cancel the copying in progress, press the STOP (
  ) button.

## Ripping from a Audio CD (CD-DA)

- Insert an Audio CD (CD-DA), then press the STOP (
  ) or RETURN button to move to the Music List.
- 2. Press the YELLOW (C) button to display the check box.
- 3. Press the ENTER button to check desired track.
- 4. Press the TOOLS button.

۰ ۹ AL	Idio CD   Music 1/2 Page
۲	TRACK 001         Page         Play Selected           7400         TRACK 003         TRACK 003         TRACK 003           7400         TRACK 003         TRACK 005         TRACK 005           750         TRACK 005         TRACK 005         TRACK 005           750         TRACK 005         TRACK 005         TRACK 005
	Close Edit Mode 《 * Page 第 Tools @ Select つ Return

 Press the ▲▼ buttons to select the Ripping, then press the ENTER button.

You can enjoy various network services such as Smart Hub or BD-LIVE by connecting the product to your network.

Read the following instructions before using any network service.

- 1. Connect the product to the network. (See pages 31~32)
- 2. Configure the network settings. (See pages 44~48)

## **Using Smart Hub**

Using Smart Hub, you can stream movies, videos, and music from the Internet, access various for pay or free-of-charge applications and view them on your TV. Application content includes news, sports, weather forecasts, stock market quotes, maps, photos, and games.

You can also start this function by pressing the **SMART HUB** button on the remote control.



# Starting Smart Hub for the First Time

To start Smart Hub for the first time, follow these steps :

1. Go to the Home menu.



2. Press the **◄** buttons to select **Internet**, and then press the **ENTER** button.

- 3. The Smart Hub screen appears. In a few cases, the Country screen appears immediately after.
- If the Country screen has appeared, press the ▲▼ buttons to select your country, then press the ENTER button.
- 🗞 NOTE
  - Certain applications are available only in certain countries.
- The Terms of Service Agreement screen appears. If you want to agree, press the ◄► buttons to select Agree, then press the ENTER button.
- 🗞 NOTE
  - Screens can take a few seconds to appear.
- The Service Update screen appears and installs a number of services and applications. When done, it closes. The applications and services downloaded are displayed on the Smart Hub screen. This may take some time.

### 🗞 NOTE

- Smart Hub may close momentarily during the installation process.
- A number of screens may appear after installation. You can press the ENTER button to close them or let them close on their own.
- To start an application, press the ▲▼ ◀ ► buttons to highlight a widget, then press the ENTER button.

#### Smart Hub at a Glance

a

0

6

4

6



**Commercial**: Displays the Smart Hub Guide, an introduction to the product, and new application introductions.

Your Video : Provides recommendations for videos based on your tastes.

- Lets you see movie recommendations based on your previous preferences.
- Lets you select a movie, displays a list of VOD (Video on Demand) providers that have the movie, and then lets you choose a provider for streaming. (Streaming is unavailable in some areas.)
- For instructions to use Your Video, please visit www.samsung.com.

**Search** : Provides an integrated search of your video providers and connected AllShare devices.

- Usable while using Smart Hub (except when you are watching a Blu-ray Disc).
- For easy access, use the **SEARCH** button on the remote control.
- For instructions to use search function, please visit www.samsung.com.
- **Samsung Apps** : You can download various for pay or free-of-charge application services.

**Recommended** : Displays recommended contents managed by Samsung.

**Navigation Help** : Displays the remote control buttons you can use to navigate in Smart Hub.

- RED (A) : To log in to Smart Hub.
- **GREEN (B)** : To sort the applications.
- YELLOW (C) : To edit the applications.
- BLUE (D) : To change the settings of Smart Hub.

 My Applications : Displays your personal gallery of applications which you can add to, modify, and delete.

#### 🗞 NOTE

6

- Samsung Electronics takes no legal responsibility for any interruption of the Smart Hub service caused by the service provider for any reason.
- The Smart Hub service downloads and processes data via the Internet so that you can enjoy the Internet contents on your TV screen.
   If the Internet connection is unstable, the service may be delayed or interrupted.
   Furthermore, the product may turn off automatically in response to conditions on the Internet.
   If this occurs, check the Internet connection and try again.
- Application services may be provided in English only and the contents available may vary, depending on your area.
- For more information about a Smart Hub service, visit the web site of the applicable service provider.
- The services provided are subject to change by the Smart Hub service provider without notice.
- The Smart Hub service contents may differ depending on the product's firmware version.

## Using the Keypad

Through your remote, you can use the On-Screen Keypad to enter letters, numbers, and symbols.



0	The current keypad. Use to enter letters, numbers, and symbols.
0	Press the <b>DISC MENU</b> button on the remote control to shift the input mode. : ab, Ab, AB, numbers or icons.
3	Displays the current input mode.
4	Press the <b>GREEN (B)</b> button on the remote control to change the input method. (T9 or ABC)
6	Press the <b>TOOLS</b> button on the remote control to change the language.
6	Press the <b>TITLE MENU</b> button on the remote control to delete a character.

### **Entering Text, Numbers and Symbols**

To enter text, press the number button on the remote that corresponds to the letter you want to enter. Press the button rapidly to enter a letter that is not the first letter listed on the On-Screen keypad button. For example, if you want to enter the letter b, press the 2 button on your remote rapidly twice. To enter the first letter listed on a button, press, release, and then wait. To move within the text, use the Arrow buttons. To delete text, move the cursor to the right of the character you want to delete, and then press the **TITLE MENU** button. To change case or enter numbers or punctuation, press the **DISC MENU** button.

## Creating an Account

To establish your own, exclusive, configuration of Smart Hub, create your own Smart TV Account. To create an account, follow these steps:

1. Press the RED (A) button on your remote



control. The Create Account screen appears.

- Press the ▲▼ ◀► buttons to select Create Account, and then press the ENTER button.
- On the next screen, select Smart TV ID, and then press the ENTER button. An entry screen and keypad appear.
- 4. Use the keypad to enter your e-mail address. This will serve as your ID.

#### 🗞 NOTE

- The keypad works like the keypad on a cell phone.
- When done, press the ENTER button to select OK, and then press the ENTER button again. The Create Account screen re-appears.
- 6. Select **Password**, and then press the **ENTER** button. An entry screen and a keypad appear.
- Use the keypad to enter a password. The password can be any combination of letters, numbers, and symbols.
- 🗞 NOTE
  - Press the RED (A) button on your remote to show or hide the password as you enter it.

- When done, press the ENTER button to select OK, and then press the ENTER button again. The Create Account screen re-appears.
- 9. Select Confirm password, and then press the ENTER button.
- 10. Repeat Steps 7 and 8.
- When the Create Account screen re-appears, select Create Account, and then press the ENTER button. The Confirmation window appears.
- Select OK, and then press the ENTER button. The Continue to Register Service window appears.
- 13. Select Go Register, and then press the ENTER button.
- 14. The Register Service Account Window appears.
  - If you have existing accounts with any of the listed providers, you can associate the provider account and the provider account password with your Smart TV Account. Registration makes it easier to access the providers web site. For registration instructions, go to Step 2 in Account Management under the Settings Menu.
  - If you don't have existing provider accounts or do not want to register existing accounts at this time, select OK, and then press the ENTER button. You can also let the window close on its own in about a minute.

#### NOTE

- You must use an e-mail address as an ID.
- You can register up to 10 User Accounts.
- You do not need an account to use Smart Hub.

### Account Log In

To log in to your Smart TV Account, follow these steps:

- With the Smart Hub main screen displayed on your TV, press the RED (A) button on your remote. The Create Account screen appears.
- 2. Select the Down Arrow next to the Smart TV ID field, and then press the ENTER button.

- Select your ID from the list that appears, and then press the ENTER button. The Create Account screen re-appears.
- Select Password, and then press the ENTER button. An entry screen and a keypad appears.
- Using the keypad and your remote, enter your password. When done, press the ENTER button, select OK, and then press the ENTER button again.

#### 🗞 NOTE

 If you want Smart Hub to enter your password automatically, select Remember my Smart TV ID and password after you have entered your password, and then press the ENTER button. A check appears. Smart Hub will now enter your password automatically when you select or enter your ID.

## The Settings Menu - BLUE (D)

The Settings Menu Screen gives you access to account management, service manager, reset, and properties functions.

To access the Settings Menu, and then select a menu item, follow these steps:

- 1. Press the **BLUE (D)** button on your remote.
- Press the ▲▼ to select a menu item, and then press the ENTER button.

The functions on the Settings Menu screen are described below.

#### NOTE

 The Service Manager item listed in the Settings Menu is not available for BD-HDD Combo.

#### Account Management

The Account Management Menu contains functions that let you register your service provider accounts, change your Smart Hub password, and delete or deactivate your Smart TV ID.

#### **Register Service Account**

If you have existing accounts with any of the providers listed by the Register Service Account function, you can associate the provider account and the provider account password with your Smart TV Account. If you associate the account, you will be able to log onto the account through Smart Hub easily, without entering your account name or password.

To use the Register Service Account function, follow these steps:

- In the Account Management menu, select Register Service Account, and then press the ENTER button. The Register Service Account Window appears.
- Press the ▲▼ buttons to select a Service Provider you want to associate with your Smart TV Account, and then press the ENTER button.

#### 🗞 NOTE

- If you have a Samsung apps account and you want to use the Samsung Apps function in Smart Hub, you must register your Samsung Apps account here. See pages 81~82 for more information.
- Press the ▲▼ buttons to select Register, and then using your remote and the on-screen Keypad, enter your site ID and password. When done, press the ENTER button.

#### 🗞 NOTE

- This is the ID and password you normally use to access your account on this site.
- If you have entered the ID and password correctly, the Registered Successfully message appears.
- 5. If you pressed **OK**, repeat Steps 2 through 4 to associate another Service Provider.
- 6. When you are done, press the **RETURN** button.

### Change Password

The Change Password function lets you change your Smart Hub password. To change the password, follow these steps:

- 1. Select Change Password, and then press the ENTER button.
- 2. Enter your current password. The next screen appears.
- 3. On the next screen, enter a new password on the first line. Enter it again on the second line to confirm.
- The Changing Password Complete message screen appears. Press the ENTER button or wait for the screen to close - about 5 seconds.

### Remove from TV Account list

The Remove Service Accounts function cancels all your current registered Service Accounts that you registered on the Register Service Account screen.

#### **Deactivate Account**

The Deactivate Account function deactivates your Smart TV Account and deletes it and all your account settings entirely from Smart Hub.

### Reset

The Reset function initializes all downloaded widgets, erases all user accounts and settings from the product, and resets all Smart Hub settings to the factory default settings. It then restarts Smart Hub as if it were starting for the first time. Your account, however, remains on the Smart Hub server. To log into your account, enter your ID and password on the Create Account screen.

To use the Reset function, follow these steps:

- In the Settings menu, select Reset, and then press the ENTER button. The Reset screen appears.
- Enter the your Security password. This is the password you entered if you set up a BD or DVD Parental rating (See page 51). If you did not, enter 0000.

- 3. After a few moments, Smart Hub automatically resets. The screen may go black, then Smart Hub re-appears. In a few moments, it starts the re-initialization procedure.
- To complete the re-initialization, go to Step 4 in Starting Smart Hub for the First Time. (See page 74)
- 🗞 NOTE
  - If you forgot your password, press the STOP (
     button on the front panel of the product for more than
     5 seconds with no disc inserted.

### Properties

The Properties menu item lists three functions that display information about Smart Hub :

#### Detail

Lists information about Smart Hub including version number, the number of services installed, memory usage, and the unique product ID.

#### **Terms of Service Agreement**

Displays the Terms of Service Agreement.

## The Edit Mode Menu - YELLOW (C)

The functions in the Edit Mode menu let you manipulate the widgets in the My Applications section of the Smart Hub screen. Using these functions, you can lock and unlock access to some widgets, New Folder and move widgets to them, rename folders, delete widgets, and change the position of widgets on the screen.

To access the Edit Mode Menu, and then select a menu item, follow these steps:

- 1. Press the YELLOW (C) button on your remote. The Edit Mode menu bar appears on the bottom of the screen.
- Press the ▲▼ ◀► to select a menu item, and then press the ENTER button.

The functions in the Edit Mode Menu bar are described below.

#### 🗞 NOTE

- Some menu items may not appear on the screen. To see these items, press the ◀► to move to the screen edge, and then press one more time to reveal the items.
- You can close the bar by highlighting the X on the bottom right side, and then pressing the ENTER button.

### Move

The Move function lets you change the screen position of a widget. To use the Move function, follow these steps:

- 1. Press the YELLOW (C) button on your remote.
- 2. Select a widget, and then press the ENTER button. A check appears above the widget.
- 3. Press the ▲▼ ◀► to select Move, and then press the ENTER button. A position change icon appears above the widget.
- Press the ▲▼ ◄► to move the icon. Press the ENTER button when the icon is in the position of your choice. The widget moves to its new location.

### Move to Folder

The Move to Folder function lets you move a widget to a folder. To use the Move to Folder function, follow these steps:

- 1. Press the YELLOW (C) button on your remote.
- 2. Select a widget, and then press the ENTER button. If you already create a folder, the widget can be moved.
- Press the ▲▼ ◄► to select Move to Folder, and then press the ENTER button. The Move to Folder window opens.
- Press the ▲▼ ◄► to select a folder, and then press the ENTER button. The Move to Folder message appears, and then closes. The widget has been moved to the folder.

#### To Access Widgets in a Folder

- 1. Close the Edit Mode menu.
- In My Applications, press the ▲▼ ◀► to select a folder, and then press the ENTER button. The folder opens.
- Select a widget, and then press the ENTER button. The widget's application or service starts.

#### To Edit Items in a Folder

Select a folder, and then press the **ENTER** button. The folder opens.

Press the **YELLOW (C)** button on your remote. The Edit buttons appear at the bottom of the screen.

These buttons work the same as the Edit Mode menu buttons on the main screen. For example, to move a widget back to the My Applications main screen:

- 1. Select the widget.
- 2. Select Move to Folder, and then press the **ENTER** button. The Move to Folder window appears.
- Select My Applications, and then press the ENTER button. The Move to Folder window closes and the widget returns to the main My Applications screen.

#### New Folder

The New Folder function lets you create and name new folders. Once you have created a folder, you can move widgets into it. To use the New Folder function, follow these steps:

- 1. Press the YELLOW (C) button on your remote.
- Press the ▲▼ ◄► to move the cursor to New Folder, and then press the ENTER button. The New Folder window and a keypad appear.
- 3. Use the keypad to enter the name of the folder, and then press the **ENTER** button. The New Folder screen closes and the New Folder appears on the Smart Hub screen.

#### Rename Folder

The Rename Folder function lets you rename folders. To use the Rename Folder function, follow these steps:

- 1. Press the YELLOW (C) button on your remote.
- Press the ▲▼ ◀► to select a folder, and then press the ENTER button.
- Press the ▲▼ ◄► to select Rename a Folder, and then press the ENTER button. The Folder Rename window and a keypad appears.
- 4. Use the keypad to enter a new name, and then press the **ENTER** button. The Rename window closes and the new name appears below the folder.

### Lock

The Lock function lets you lock some widgets in My Applications so they can not be opened without entering the Parental Security Code.

To use the Lock function, follow these steps:

- 1. Press the YELLOW (C) button on your remote.
- Press the ▲▼ ◄► to select a widget, and then press the ENTER button. If the widget can be locked, the Lock menu item is enabled.
- 3. Press the ▲▼ ◀► to select Lock, and then press the ENTER button. The Lock Service window appears.
- Enter your Parental Security Code (See page 51). If you have not created a Parental Security Code, enter 0000.
- Press the ENTER button. The Lock Service window appears confirming the lock, and then closes. A lock symbol appears next to the widget.

## Unlock

- 1. Press the YELLOW (C) button on your remote.
- Press the ▲▼ ◀► to select a locked widget, and then press the ENTER button.
- 3. Press the ▲▼◀► to select Unlock, and then press the ENTER button. The Lock Service window appears.
- Enter the Parental Security Code (See page 51). If you have not created a Parental Security Code, enter 0000.
- 5. Press the ENTER button. The Lock Service Released window appears confirming the lock has been release, and then closes.

### Delete

The Delete function lets you delete widgets from My Applications. To use the Delete function, follow these steps:

- 1. Press the YELLOW (C) button on your remote.
- 2. Press the ▲▼ ◀► to select a widget, and then press the ENTER button.
- Press the ▲▼◀► to select Delete, and then press the ENTER button. The message, "Do you want to delete selected item(s)?" appears.
- 4. Select Yes, and then press the ENTER button. The widget is deleted.

## The Sort Menu - GREEN (B)

The functions in the Sort Menu let you sort the widgets in My Applications by Name, Date, Frequency (of use), and Category. If you manually change the position of a widget, the Sort Menu automatically highlights User Defined when you start it.

To sort the widgets in My Applications, follow these steps:

- 1. Press the GREEN (B) button on your remote.
- Press the ◄► to select a sorting method, and then press the ENTER button. Smart Hub sorts the widgets by the method you have chosen.

#### Samsung Apps

Samsung Apps lets you download for pay or free-of-charge applications and services to your product and view or use them on your TV. These applications and services include videos, music, photos, games, news, sports, etc. Widgets for the new apps appear in My Applications. Additional applications and services are added regularly.

## For Pay Apps

To download for pay apps, you need to create a Samsung Apps account and add a credit card to the account.

To create a Samsung Apps account, please visit www.samsung.com

#### 🗞 NOTE

- This service may not provided in some countries.

### Accessing the Samsung Apps Screen

To access Samsung Apps, press the ▲▼◀► buttons to navigate to the Samsung Apps area on the Smart Hub main screen, and then press the **ENTER** button. The Samsung Apps screen appears.

NOTE

 If this is the first time you are accessing this screen, the terms of service window appears. If you want to agree, Select Agree, and then press the ENTER button.

### Using the Samsung Apps Screen

To use the Samsung Apps screen, follow these steps:

- Press the ◄► buttons to move to the category list on the left.
- Press the ▲▼ to highlight a category. In a few seconds, the Samsung Apps screen displays the applications in that category. The Sort tabs appear across the top.
- 3. Press the ► button to move to the displayed applications or services.

- Press the ▲▼ ◄► buttons to select an application or service, and then press the ENTER button. The Application Details screen appears describing the service or application.
- Select Download Now, and then press the ENTER button. If the application or service is free, it downloads and runs. If not, and there is a fee, follow the directions on the screen to complete the download.

### 🗞 NOTE

- Some apps are free to download, but require registration with the provider or a paid account with the provider to use.
- Widgets for applications and services you have downloaded from Samsung Apps appear in My Applications.

## Sort By Tabs

You can access the Sort By tabs on the top of the screen using the ▲▼ ◀ ► buttons. Each tab displays the services or applications in the category you chose, sorted by the criteria on the tab (Recommended, Most Downloaded, Most Recent, Name).

You can also use the **BLUE (D)** button on your remote to access the Sort By tabs. Each time you press the **BLUE (D)** button, you change the display from one sort tab to the next.

## Samsung Apps by category

The following categories are available:

- What's New? : Displays newly registered applications.
- Video : Displays various video media such as movies, TV shows, and short length videos.
- Game : Displays various games such as sudoku and chess.
- **Sports** : Displays various sports media services such as match information, images, and short length videos.
- Lifestyle : Includes various lifestyle media services such as music, personal photo management tools, and social networking such as Facebook and Twitter.
- Information : Includes various information services such as news, stocks, and weather.
- Other : Includes other miscellaneous services.

## My Account

My Account gives you access to your Samsung Apps order and download history, and to the My Apps Cash screen. You must have a Samsung Apps account to access this information.

## Help

If you have questions about Samsung Apps, check Help first. If none of the tips apply, please visit the www.samsung.com.

To use the Help function, follow these steps:

- Press the ▲▼ ◀► buttons to select Help, and then press the ENTER button.
- 2. Press the ▲▼ to scroll the Help text.

# Using the colored buttons on your remote with Samsung Apps

- RED (A) (Login) : To log into your Smart TV Account.
- GREEN (B) (Thumbnail View/List View) : To toggle applications between Thumbnail and List view.
- BLUE (D) (Sort By) : To sort the applications in a category by Recommended, Most Downloaded, Most Recent, or Name.
- Return : To return to the previous menu.

### 🗞 NOTE

 The Internet contents services may be added or deleted by providers without notice.

For instructions to use Your Video or Search Function, please visit www.samsung.com

### **BD-LIVE™**

Once the product is connected to the network, you can enjoy various movie-related service contents using a BD-LIVE compliant disc.

- Check the size of the remaining memory. The total size of HDD must have at least 1GB of free space to accommodate the BD-LIVE services.
- 2. Insert a Blu-ray Disc that supports BD-LIVE.
- 3. Select an item from various BD-LIVE service contents provided by the disc manufacturer.
- 🗞 NOTE
  - The way you use BD-LIVE and the provided contents may differ, depending on the disc manufacturer.

#### Using the AllShare Function

AllShare lets you play music, video, and photo files located in your PC or your DLNA compatible mobile phone or NAS on the product.

To use AllShare with your product, you must connect the product to your network (See pages 31~32).

To use AllShare with your PC, you must install AllShare software on your PC.

If you have a DLNA compatible mobile phone or NAS, you can use AllShare without any additional software.

You can download the PC software and get detailed instructions for using AllShare from the Samsung.com web site.

#### Auto Back up

You can save and play video, photos, and music saved in Samsung products using Auto backup to this product without USB connecting.

When the external device is connected to this product for the first time, Device Access Control message pop-up appears on this product's display. If you want to use Auto Backup function, select Allow.

Device Access Control setting is able to set in AllShare Server Management. (See page 48)

#### 🗞 NOTE

- The Auto Backup function cannot be used these following functions at the same time.
  - Playing back files (Recorded TV, Videos, Photos, Music) or access to browser, in My Contents or My Devices menu.
  - Software Upgrade
  - HDD Format, Performance test, Device test
  - Network Settings.

# Appendix

## Troubleshooting

## Before requesting service, please check the following.

PROBLEM	SOLUTION
No operation can be performed with the remote control.	<ul> <li>Check the batteries in the remote control. They may need replacing.</li> <li>Operate the remote control at a distance of no more than 6.1m.</li> <li>Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote control to reset it. Reinstall batteries and try to operate the remote control again.</li> </ul>
Disc does not play.	<ul><li>Ensure that the disc is installed with the label side facing up.</li><li>Check the region number of the Blu-ray Disc/DVD.</li></ul>
Disc Menu does not appear.	Ensure that the disc has disc menus.
The prohibition message appears on the screen.	<ul> <li>This message appears when an invalid button is pressed.</li> <li>The Blu-ray Disc/DVD's software doesn't support the feature (e.g., angles).</li> <li>You've requested a title or chapter number or search time that is out of range.</li> </ul>
Play mode differs from the Setup Menu selection.	• Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.
The screen ratio cannot be changed.	<ul><li>The Screen Ratio is fixed on your Blu-ray Disc/DVD.</li><li>This is not a problem with the product.</li></ul>
No audio.	Make sure you have selected the correct Digital Output in the Audio Options Menu.
The screen is blocked	<ul> <li>If the HDMI output is set to a resolution your TV cannot support (for example, 1080p), you may not see a picture on your TV.</li> <li>Press the MENU button to display home menu. Press the STOP ( ) button on the front panel of the product for more than 5 seconds with no disc inserted.</li> <li>When the factory default settings are restored, all stored user BD data is deleted.</li> </ul>

PROBLEM	SOLUTION
Forgot password	<ul> <li>Press the <b>MENU</b> button to display home menu. Press the <b>STOP</b> ( ) button on the front panel of the product for more than 5 seconds with no disc inserted. Don't use this unless absolutely necessary.</li> <li>When the factory default settings are restored, all stored user BD data is deleted.</li> </ul>
If you experience other problems.	<ul> <li>Go to the contents and find the section of the user manual that contains the explanations regarding the current problem, and follow the procedure once again.</li> <li>If the problem still cannot be solved, please contact your nearest Samsung authorized service centre.</li> </ul>
The picture is noisy or distorted	<ul><li>Make sure that the disc is not dirty or scratched.</li><li>Clean the disc.</li></ul>
No HDMI output.	<ul> <li>Check the connection between the TV and the HDMI jack of the product.</li> <li>Check if your TV supports 576p/480p, 720p, 1080i, 1080p HDMI input resolution.</li> </ul>
Abnormal HDMI output screen.	<ul> <li>If random noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).</li> </ul>
AllShare function	
I can see folders shared through AllShare, but I cannot see the files.	<ul> <li>AllShare shows only files corresponding to the Image, Music, and Movie categories. Files that do not correspond to these categories may not be displayed.</li> </ul>
Video is played intermittently.	<ul> <li>Check if the network is stable.</li> <li>Check if the network cable is properly connected and if the network is not overloaded.</li> <li>The wireless connection between the DLNA compatible device and the product is unstable. Check the connection.</li> </ul>
AllShare connection between BD-HDD Combo and PC is unstable.	<ul> <li>The IP address under the same subnetwork should be unique. If they are not, IP interference can cause this phenomenon.</li> <li>Check if you have a firewall enabled. If so, disable the firewall function.</li> </ul>

# Appendix

PROBLEM	SOLUTION
BD-LIVE	
I cannot connect to the BD-LIVE server.	<ul> <li>Check whether the network connection is successful or not by using the Network Status menu. (See page 48)</li> <li>The total size of device must have at least 1 GB of free space to accommodate the BD-Live service. You can check the available size in BD Data Management. (See page 50)</li> <li>Check whether the BD-Live Internet Connection menu is set to Allow(All).</li> <li>If all above fails, contact the contents provider or update the product to the latest firmware.</li> </ul>
When using the BD-LIVE service, an error occurs.	The total size of device must have at least 1GB of free space to accommodate the BD-LIVE service. You can check the available size in BD Data Management. (See page 50)
Recording	
"Performance test failed." message appears, and also Timer recording and Time Shift function does not work.	<ul> <li>Using lower quality USB storage device not supporting Recording function can cause this kind of problem.</li> <li>It is recommended to use USB HDD storage device.</li> <li>Recommended specification of USB HDD is at least 5400 rpm.</li> <li>USB HDD of RAID type is not supported.</li> </ul>

### 🗞 NOTE

• When the factory default settings are restored, all stored user BD data is deleted.

## Repairs

If you contact us to repair your product, an administration fee may be charged if either:

- 1. An engineer is called out to your home at your request and there is no defect in the product.
- 2. You bring the unit to a repair centre and there is no defect in the product.

We will provide you with the amount of the administration fee before we make a home visit or begin any work on your product.

We recommend you read this manually thoroughly, search for a solution on line at www.samsung.com, or contact Samsung Customer Care before seeking to repair your product.

	Spe	cifications	
	Weight	3.6 Kg	
Ormanal	Dimensions	430 (W) X 299 (D) X 64 (H) mm	
General	Operating Temperature Range	+5°C to +35°C	
	Operating Humidity Range	10 % to 75 %	
	BD (Blu-ray Disc)	Reading Speed : 4.917 m/sec.	
	DVD (Digital Versatile Disc)	Reading Speed : 3.49 ~ 4.06 m/sec.	
	DVD (DIGITAL VELSATILE DISC)	Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.	
Disc	CD : 12 cm (COMPACT DISC)	Reading Speed : 4.8 ~ 5.6 m/sec.	
	CD : 12 CITI (CUIVIPAUT DISC)	Maximum Play Time : 74 min.	
		Reading Speed : 4.8 ~ 5.6 m/sec.	
	CD : 8 cm (COMPACT DISC)	Maximum Play Time : 20 min.	
	Composite Video	1 Channel : 1.0 Vp-p (75Ω load)	
	composite video	Blu-ray Disc/DVDs : 576i/480i	
		Y : 1.0 Vp-p (75Ω load)	
Video Output	Component Video	P _R : 0.70 Vp-p (75Ω load)	
		P _B : 0.70 Vp-p (75Ω load)	
		Blu-ray Disc : 576i/480i	
		DVD : 576p/480p, 576i/480i	
Video/Audio	HDMI	1080p, 1080i, 720p, 576p/480p	
VIUEO/AUUIO	וואוטוו	PCM audio, Bitstream audio	
Audio Output	Analogue Audio Output	2 Channel, (2Vrms ± 10%)	
Audio Output	Digital Audio Output	Optical	
	Ethernet	10/100BASE-TX Terminal	
Network	Wireless LAN	Built-in	
	Security	WEP(OPEN/SHARED)	
notifolit		WPA-PSK(TKIP/AES)	
		WPA2-PSK(TKIP/AES)	
	WPS(PBC)	Supported	
HDD Capacity	BD-D8200A	250 GB	
	BD-D8500A	500 GB	

- Design and specifications are subject to change without prior notice.

- For the power supply and power consumption, refer to the label attached to the product.

- Weight and dimensions are approximate.

# Appendix

## **Compliance and Compatibility Notice**

NOT ALL discs are compatible

- Subject to the restrictions described below and those noted throughout this Manual, including the Disc Type and Characteristics section of this user manual, disc types that can be played are: pre-recorded commercial BD-ROM, DVD-VIDEO, and Audio CD (CD-DA) discs; BD-RE/-R, DVD-RW/-R discs; and CD-RW/-R discs.
- Discs other than the above cannot and/or is not intended to be played by this product. And some of the above discs may not play due to one or more reasons provided below.
- Samsung cannot assure that this product will play every disc bearing the BD-ROM, BD-RE/-R, DVD-VIDEO, DVD-RW/-R, DVD+RW/+R and CD-RW/-R logos, and this product may not respond to all operating commands or operate all features of every disc. These and other disc compatibility and product operation issues with new and existing format discs are possible because:
  - Blu-ray is a new and evolving format and this product may not operate all features of Blu-ray Discs because some features may be optional, additional features may have been added to the Blu-ray Disc format after the production of this product, and certain available features may be subject to delayed availability;
  - not all new and existing disc format versions are supported by this product;
  - new and existing disc formats may be revised, changed, updated, improved and/or supplemented;
  - some discs are produced in a manner that allows specific or limited operation and feature during playback;
  - some features may be optional, additional features may have been added after the production of this product or certain available features may be subject to delayed availability;
  - some discs bearing the BD-ROM, BD-RE/-R, DVD-VIDEO, DVD-RW/-R, DVD+RW/+R and CD-RW/-R logos may still be non-standardized discs;
  - some discs may not be played depending on their physical state or recording conditions;
  - problems and errors can occur during the creation of Blu-ray Disc, DVD software and/or the manufacture of discs;
  - this product operates differently than a standard DVD product or other AV equipment; and/or
  - for reasons noted throughout this user manual and for other reason(s) discovered and posted by SAMSUNG customer care centre.
- If you encounter disc compatibility or product operation problems, please contact SAMSUNG customer care centre.
  - You may also contact SAMSUNG customer care centre for possible updates on this product.
- For additional information on playback restrictions and disc compatibility, refer to the Precautions, Before Reading the user manual, Disc Types and Characteristics, and Before Playing sections of this user manual.

## **Copy Protection**

 Because AACS (Advanced Access Content System) is approved as content protection system for Blu-ray Disc format, similar to use of CSS (Content Scramble System) for DVD format, certain restrictions are imposed on playback, analogue signal output, etc., of AACS protected contents. The operation of this product and restrictions on this product may vary depending on your time of purchase as those restrictions may be adopted and/or changed by AACS after the production of this product. Furthermore, BD-ROM Mark and BD+ are additionally used as content protection system for Blu-ray Disc format, which imposes certain restrictions including playback restrictions for BD-ROM Mark and/or BD+ protected contents. To obtain additional information on AACS, BD-ROM Mark, BD+, or this product, please contact SAMSUNG customer care centre.

- Many Blu-ray Disc/DVDs are encoded with copy protection. Because of this, you should only connect your Product directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected Blu-ray Disc/DVDs.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.
- Under the U.S. Copyright laws and Copyright laws of other countries, unauthorized recording, use, display, distribution, or revision of television programs, videotapes, Blu-ray Discs, DVDs, and other materials may subject you to civil and/or criminal liability.
- For BD-HDD Combo progressive scan output : CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTRE.

### Network Service Disclaimer

All content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device. THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED. EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO. WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

# Appendix

## Licence

- Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under licence under U.S. Patent #s : 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio, and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
- DivX
  - ABOUT DIVX VIDEO : DivX[®] is a digital video format created by DivX, Inc.
     This is an official DivX Certified[®] device that plays DivX video.
     Visit www.divx.com for more information and software tools to convert your files into DivX video.
  - ABOUT DIVX VIDEO-ON-DEMAND : This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.
  - DivX Certified® to play DivX® video up to HD 1080p, including premium content.
  - DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under licence.
  - Covered by one or more of the following U.S. patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks
   HDMI Licensing LLC in the United States and other countries.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners
- Rovi Flow-Down Licence Terms (Terms of Use)
  - This application incorporates software and technology of Rovi Corporation ("Rovi"). The Rovi software and technology (collectively, the "Rovi Technology") allows End Users to access music-related data ("Rovi Data") over the Internet and otherwise from proprietary Rovi databases (the "Rovi Databases") located on Rovi servers (the "Rovi Servers") and to perform other functions. You may access and use Rovi Data only by means of the intended End User functions of this application software.
  - You agree that you will use the Rovi Data, the Rovi Technology, and the Rovi Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Rovi Data to any third party. You agree not to use or exploit Rovi Data, the Rovi Technology, the Rovi Databases, or the Rovi Servers, except as expressly permitted herein.
  - You agree that your non-exclusive licence to access the Rovi Databases and to use the Rovi Data, the Rovi Technology, and the Rovi Servers will terminate if you violate these restrictions. If your licence terminates, you agree to cease any and all use of the Rovi Data, the Rovi Technology, and the Rovi Servers. Rovi reserves all rights in Rovi Data, the Rovi Technology, and Rovi Servers, including all ownership rights. You agree that Rovi may enforce its rights under this Agreement against you directly in its own name.







**DOLBY** 

- Rovi reserves the right to delete data from the Rovi Databases or to change data categories for any cause that Rovi deems sufficient. No warranty is made that the Rovi Technology or Rovi Servers are error-free or that functioning of Rovi Technology or Rovi Servers will be uninterrupted. Rovi is not obligated to provide you with any new enhanced or additional data types or categories that Rovi may choose to provide in the future and is free to discontinue its online services at any time.
- The data you submit to use will not be personal data or personally identifiable data, but rather only data respecting music albums and associated data that does not appear in the Rovi Lookup Database. You certify that to the best of its knowledge the album to which the submitted data corresponds is commercially available and that you End User are lawfully permitted to submit the data.
- To the extent that you, the End User, provide any information or original works of authorship to be added to Rovi Databases, you represent and warrant that you are the sole author of such work(s) and further hereby assign to Rovi all rights of copyright therein, including the right to register the copyright in such work(s) as part of the Rovi Database.
- THE ROVITECHNOLOGY AND EACH ITEM OF ROVI DATA ARE LICENCED TO YOU "AS IS." ROVI MAKES NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, REGARDING THE ACCURACY OF ANY ROVI DATA ON THE ROVI SERVERS. ROVI DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. ROVI DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE ROVI TECHNOLOGY OR ANY ROVI SERVER. IN NO CASE WILL ROVI BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES RESULTING FROM YOUR USE OF ROVI DATA, THE ROVI TECHNOLOGY OR OTHERWISE.
- Open Source Licence Notice
  - In the case of using open source software, Open Source Licences are available on the product menu.
- Blu-ray Disc[™], Blu-ray[™], and the logos are trademarks of Blu-ray Disc Association.

## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Area	Contact Centre 🖀	Web Site
North Americ	a	
Canada	1-800-SAMSUNG (726-7864)	www.samsung.com
Mexico	01-800-SAMSUNG (726-7864)	www.samsung.com
U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com
Latin Americ	a	
Argentine	0800-333-3733	www.samsung.com
Brazil	0800-124-421 / 4004-0000	www.samsung.com
Chile	800-SAMSUNG (726-7864)	www.samsung.com
Colombia	01-8000112112	www.samsung.com
Costa Rica	0-800-507-7267	www.samsung.com
Dominica	1-800-751-2676	www.samsung.com
Ecuador	1-800-10-7267	www.samsung.com
El Salvador	800-6225	www.samsung.com
Guatemala	1-800-299-0013	www.samsung.com
Honduras	800-7919267	www.samsung.com
Jamaica	1-800-234-7267	www.samsung.com
Nicaragua	00-1800-5077267	www.samsung.com
Panama	800-7267	www.samsung.com
Peru	0-800-777-08	www.samsung.com
Puerto Rico	1-800-682-3180	www.samsung.com
Trinidad & Tobago	1-800-SAMSUNG (726-7864)	www.samsung.com
Venezuela	0-800-100-5303	www.samsung.com
Europe		
Albania	42 27 5755	-
Austria	0810 - SAMSUNG (7267864, € 0.07/min)	www.samsung.com
Belgium	02-201-24-18	www.samsung.com/ be (Dutch) www.samsung.com/ be_fr (French)
Bosnia	05 133 1999	-
Bulgaria	07001 33 11	www.samsung.com
Croatia	062 SAMSUNG (062 726 7864)	www.samsung.com
Czech	800-SAMSUNG (800-726786) Samsung Zrt., česká organizační složka, Oasis Florenc, Soko- lovská394/17, 180 00, Praha 8	www.samsung.com
Denmark	70 70 19 70	www.samsung.com
Finland	030 - 6227 515	www.samsung.com
France	01 48 63 00 00	www.samsung.com
Germany	01805 - SAMSUNG (726-7864 € 0,14/Min)	www.samsung.com
Hungary	06-80-SAMSUNG (726-7864)	www.samsung.com
Italia	800-SAMSUNG (726-7864)	www.samsung.com
Kosovo	+381 0113216899	-
Luxemburg	261 03 710	www.samsung.com
Macedonia	023 207 777	=
Montenegro	020 405 888	-
Netherlands	0900-SAMSUNG (0900- 7267864) (€ 0,10/Min)	www.samsung.com
Norway	815-56 480	www.samsung.com
Poland	0 801 1SAMSUNG (172678) / 022-607-93-33	www.samsung.com
Portugal	80820-SAMSUNG (726-7864)	www.samsung.com
Rumania	1. 08010 SAMSUNG (72678) doar din rețeaua Romtelecom, tarif local 2. 021.206.01.10 - din orice rețea, tarif normal	www.samsung.com

Area	Contact Centre 🖀	Web Site
Serbia	0700 Samsung (0700 726 7864)	www.samsung.com
Slovakia	0800-SAMSUNG (726-7864)	www.samsung.com
Spain	902-1-SAMSUNG (902 172 678)	www.samsung.com
Sweden	0771 726 7864 (SAMSUNG)	www.samsung.com
onodon		www.samsung.com/ch
Switzerland	0848-SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ ch_fr/(French)
U.K	0330 SAMSUNG (7267864)	www.samsung.com
Eire	0818 717100	www.samsung.com
Lithuania	8-800-77777	www.samsung.com
Latvia	8000-7267	www.samsung.com
Estonia	800-7267	www.samsung.com
CIS		
Russia	8-800-555-55-55	www.samsung.com
Georgia	8-800-555-555	-
Armenia	0-800-05-555	-
Azerbaijan	088-55-55-555	-
Kazakhstan	8-10-800-500-55-500 (GSM: 7799)	www.samsung.com
Uzbekistan	8-10-800-500-55-500	www.samsung.com
Kyrgyzstan	00-800-500-55-500	www.samsung.com
Tadjikistan	8-10-800-500-55-500	www.samsung.com
Ukraine	0-800-502-000	www.samsung.ua www.samsung.com/ ua_ru
Belarus	810-800-500-55-500	-
Moldova	00-800-500-55-500	-
Asia Pacific		
Australia	1300 362 603	www.samsung.com
New Zealand	0800 SAMSUNG (0800 726 786)	www.samsung.com
China	400-810-5858 / 010-6475 1880	www.samsung.com
Hong Kong	(852) 3698 4698	www.samsung.com/hk www.samsung.com/ hk_en/
India	3030 8282 / 1800 110011 / 1800 3000 8282 / 1800 266 8282	www.samsung.com
Indonesia	0800-112-8888 / 021-5699- 7777	www.samsung.com
Japan	0120-327-527	www.samsung.com
Malaysia	1800-88-9999	www.samsung.com
Philippines	1-800-10-SAMSUNG(726-7864) / 1-800-3-SAMSUNG(726-7864) / 1-800-8-SAMSUNG(726-7864) / 02-5805777	www.samsung.com
Singapore	1800-SAMSUNG (726-7864)	www.samsung.com
Thailand	1800-29-3232 / 02-689-3232	www.samsung.com
Taiwan	0800-329-999	www.samsung.com
Vietnam	1 800 588 889	www.samsung.com
<ul> <li>Middle East</li> </ul>		
Bahrain	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
Jordan	800-22273	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Oman	800-SAMSUNG (726-7864)	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
Turkev	444 77 11	www.samsung.com
Turkoy		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
	800-SAMSUNG (726-7864)	www.samsung.com
U.A.E	800-SAMSUNG (726-7864) 0800-SAMSUNG (726-7864)	www.samsung.com

English Cinavia Notice : This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be in interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004 - 2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

Français Avis Cinavia : Ce produit utilise la technologie Cinavia pour limiter l'utilisation de copies illégales de certains films et vidéos disponibles dans le commerce et de leur bande sonore. Lorsqu'une utilisation illégale ou une reproduction interdite est détectée, un message s'affiche et la lecture ou la reproduction s'interrompt. De plus amples renseignements sur la technologie Cinavia sont disponibles auprès du Centre d'information des consommateurs en ligne de Cinavia sur http://www.cinavia.com. Pour obtenir des renseignements supplémentaires par la poste sur Cinavia, envoyez votre demande avec votre adresse au : Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

Ce produit intègre une technologie sous licence de Verance Corporation protégée par le brevet américain 7,369,677 et d'autres brevets américains et internationaux déposés ou en attente, de même que par des droits d'auteur et le secret industriel pour certains aspects de cette technologie. Cinavia est une marque de commerce de Verance Corporation. Copyright 2004-2010 Verance Corporation. Tous droits réservés par Verance. Il est interdit de tenter de démonter l'appareil et d'en étudier le fonctionnement en vue de le reproduire.

Español Aviso de Cinavia: Este producto utiliza tecnología Cinavia para limitar el uso de copias no autorizadas de algunas películas de producción comercial, videos y sus bandas sonoras. Cuando se detecta el uso de una copia no autorizada, aparecerá un mensaje y se interrumpirá la reproducción o la copia.

Información adicional sobre la tecnología Cinavia se facilita en el Centro de información al cliente en línea de Cinavia en http://www.cinavia.com. Para solicitar información adicional sobre Cinavia por correo, envíe una tarjeta con su dirección postal a: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, EE.UU.

Este producto incorpora tecnología de propietario bajo licencia de Verance Corporation y está protegido mediante la patente en EL.UU. 7.369.677 y otras patentes en EE.UU. y en otros países pendientes, así como por copyright y la protección de secreto comercial de ciertos aspectos tecnológicos. Cinavia es una marca comercial de Verance Corporation. Copyright 2004-2010 Verance Corporation. Todos los derechos reservados por Verance. La ingeniería inversa o desensamblaje están prohibidos. Português Nota da Cinavia: Esse produto usa tecnologia Cinavia para limitar o uso de cópias não autorizadas de filmes e vídeos produzidos comercialmente e sua trilha sonora. Quando se detecta o uso proibido de uma cópia não autorizada, aparece uma mensagem e a reprodução ou cópia é interrompida. Há mais informações sobre a tecnologia Cinavia na Central Cinavia on-line de informações ao cliente, em http://www.cinavia.com. Para solicitar mais informações sobre a Cinavia pelo correio, envie um cartão postal com seu endereco para: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA. Esse produto incorpora tecnologia proprietária sob licenca da Verance Corporation e protegida pela Patente 7.369.677 dos EUA e outras patentes nos EUA e no mundo todo, emitidas e pendentes, além de direitos autorais e proteção ao segredo comercial de certos aspectos dessa tecnologia. Cinavia é uma marca registrada da Verance Corporation, Copyright 2004-2010 Verance Corporation, Todos os direitos reservados à Verance. É proibido realizar engenharia reversa ou desmontagem.

Français Avis de Cinavia : Ce produit utilise la technologie Cinavia pour limiter l'utilisation de copies non autorisées de certains films et vidéos commerciaux ainsi que leurs bandes son. Lorsqu'une copie non autorisée est détectée, un message est affiché et la lecture ou la copie est interrompue. Des informations complémentaires concernant la technologie Cinavia sont disponibles sur le site http:// www.cinavia.com du Centre d'information consommateur Cinavia. Pour toute demande d'informations complémentaires concernant Cinavia par courrier, veuillez écrire à l'adresse suivante : Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA. Ce produit intègre la technologie de protection de la propriété sous licence Verance Corporation protégée par les brevets américains 7.369.677 et d'autres brevets américains et internationaux accordés et en attente ainsi que la protection des droits d'auteur et de l'information commerciale confidentielle pour certains aspects de cette technologie. Cinavia est une margue commerciale de Verance Corporation. Copyright 2004-2010 Verance Corporation. Tous droits réservés par Verance. Il est interdit de tenter de démonter l'appareil et d'en étudier le fonctionnement en vue de le reproduire.

Italiano Avvertenza Cinavia : Questo prodotto utilizza tecnologia Cinavia per limitare l'uso di copie non autorizzate di film e video commerciali e relative tracce audio. Se viene rilevato l'uso proibito di una copia non autorizzata, viene visualizzato un messaggio che interrompe la riproduzione o la copia. Per maggiori informazioni sulla tecnologia Cinavia consultare il centro online di informazioni ai consumatori di Cinavia all'indirizzo http://www.cinavia.com. Per richiedere maggiori informazioni su Cinavia per e-mail, inviare un messaggio con il proprio indirizzo a: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA. Questo prodotto è dotato di tecnologia proprietaria di Verance Corporation ed è protetto dal brevetto U.S.A. 7.369.677 e da altri brevetti U.S.A. e di altri Paesi registrati e in attesa di registrazione, di una protezione del copyright e del segreto aziendale per alcuni aspetti di tale tecnologia. Cinavia è un marchio di Verance Corporation. Copyright 2004-2010 Verance Corporation, Verance, Tutti i diritti riservati, Sono vietati il reverse engineering o lo smontaggio.

Português Aviso Cinavia : Este produto utiliza tecnologia Cinavia para limitar a utilização não autorizada de cópias de alguns filmes e vídeos produzidos comercialmente e respectivas bandas sonoras. Quando a utilização proibida de uma cópia não autorizada é detectada, é apresentada uma mensagem e a reprodução ou cópia é interrompida. Poderá obter mais informações sobre a tecnologia Cinavia no Centro de Informação ao Consumidor Online da Cinavia em http://www.cinavia. com. Para solicitar informações adicionais sobre a Cinavia por correio, envie um bilhete postal com a sua morada para: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA. Este produto incorpora tecnologia proprietária ao abrigo da licenca da Verance Corporation e protegida pela patente americana, 7.369.677 e outras patentes dos EUA e de outros países, emitidas ou cuja aprovação esteja pendente, bem com direitos de autor e protecção de segredo comercial para determinados aspectos da tecnologia mencionada. A Cinavia é uma marca comercial da Verance Corporation. Direitos de autor 2004-2010 Verance Corporation. Todos os direitos reservados pela Verance. É proibido qualquer procedimento de desmontagem ou montagem.

Español Aviso de Cinavia : Este producto utiliza tecnología Cinavia para limitar el uso de copias no autorizadas de algunas películas de producción comercial, videos y sus bandas sonoras. Cuando se detecta el uso de una copia no autorizada, aparecerá un mensaje y se interrumpirá la reproducción o la copia. Información adicional sobre la tecnología Cinavia se facilita en el Centro de información al cliente en línea de Cinavia en http://www.cinavia.com. Para solicitar información adicional sobre Cinavia por correo, envíe una tarjeta con su dirección postal a: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, EL:UU.

Este producto incorpora tecnología de propietario bajo licencia de Verance Corporation y está protegido mediante la patente en EE.UU. 7.369.677 y otras patentes en EE.UU. y en otros países pendientes, así como por copyright y la protección de secreto comercial de ciertos aspectos tecnológicos. Cinavía es una marca comercial de Verance Corporation. Copyright 2004-2010 Verance Corporation. Todos los derechos reservados por Verance. La ingeniería inversa o desensamblaje están prohibidos.

**Nederlands** Opmerking betreffende Cinavia : Dit product maakt gebruik van Cinavia-technologie om het gebruik van illegale exemplaren van sommige commercieel geproduceerde films en video's en de soundtracks ervan te beperken. Wanneer wordt gedetecteerd dat een illegale kopie wordt gebruikt, wordt een bericht weergegeven en zal het afspelen of kopiëren worden onderbroken. U vindt meer informatie over Cinavia-technologie bij het Cinavia Online Consumer Informatie over Cinavia via de post wenst te ontvangen, stuurt u een postkaart met uw postadres naar. Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

Dit product omvat bedrijfseigen technologie onder licentie van de Verance Corporation en wordt beschermd door U.S. Patent 7.369.677 en andere Amerikaanse en internationale patenten die zijn verstrekt of nog in behandeling zijn, naast de bescherming van copyrights en bedrijfsgeheimen voor bepaalde aspecten van dergelijke technologie. Cinavia is een handelsmerk van Verance Corporation. Copyright 2004-2010 Verance Corporation. Alle rechten voorbehouden door Verance. Reverseengineering of demontage is verboden.

Dansk Bemærkning vedr. Cinavia : Dette produkt anvender Cinavia-teknologi til begrænsning af ikkeautoriseret kopiering af visse kommercielt producerede film og videoer samt deres lydspor. Når forbudt anvendelse af en ikke-autoriseret kopi detekteres, vises en meddelelse, og afspilning eller kopiering bliver afbrudt. Flere informationer om Cinavia-teknologi fås hos Cinavias onlineforbrugerinformationscenter på http:// www.cinavia.com. For at få flere informationer om Cinavia p. post kan du sende et postkort med din postadresse til: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

Dette produkt anvender producentspecifik teknologi under licens fra Verance Corporation og er beskyttet af USA-patent 7.369.677 og andre USA- og vendensomfattende patenter, både allerede udstedte og under ansøgning, samt copyright og beskyttelse af handelshemmeligheder for visse dele af sådan teknologi. Cinavia er et varemærke tilhørende Verance Corporation. Copyright 2004-2010 Verance Corporation. Alle rettigheder forbeholdes Verance. Reverse engineering eller adskillelse er forbut.

Cinavia-ilmoitus: Tämä tuote käyttää Cinaviatekniikkaa rajoittaakseen joidenkin kaupallisesti tuotettujen elokuvien ja videoiden sekä niiden ääniraitojen luvattomien kopioiden käyttöä. Kun luvattoman kopion kielletty käyttö tunnistetaan, viesti tulee näkyviin ja toisto tai kopiointi keskeytetään. Saat lisätietoja Cinavia-tekniikasta Cinavia Online Consumer Information Centre -kuluttajakeskuksesta osoitteessa http://www.cinavia.com. Voit pyytää lisätietoja Cinaviasta postitse lähettämällä postikortin, joka sisältää postiosoitteesi. osoitteeseen: Cinavia Consumer Information Centre, P.O. Box 86851. San Diego, CA, 92138, USA.

Tässä tuotteessa käytetään valmistajien tekniikkaa Verance Corporationin lisenssillä. Käyttöä suojaavat USA:n patentin 7,369,677 ja muut USA:n sekä maailmanlaajuiset myönnetyt ja vireillä olevat patentit sekä tiettyien tekniikan osien tekiiänoikeus- ja kauppasalaisuussuojat. Cinavia on Verance Corporationin tavaramerkki. Copyright 2004-2010 Verance Corporation. Verance pidättää kaikki oikeudet. Käytetyn salaustekniikan purkaminen on kielletty.

Norsk Cinavia-merknad : Dette produktet bruker Cinaviateknologi for å begrense bruken av uautoriserte kopier av enkelte kommersielt produserte filmer, videoer og deres lydspor. Når det detekteres forbudt bruk av en uautorisert kopi, vises en melding og avspillingen eller kopieringen vil bli avbrutt. Mer informasion om Cinaviateknologien finner du hos Cinavias forbrukersenter på http://www. cinavia. com. For mer informasjon om Cinavia via regulær post, send et postkort med din postadresse til: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

Dette produktet innbefatter proprietær teknologi på lisens fra Verance Corporation og er beskyttet av amerikansk patent 7,369,677 og andre amerikanske og verdensomfattende patenter og patentsøknader, samt beskyttelse av copyright og forretningshemmeligheter for visse aspekter av slik teknologi. Cinavia er et varemerke som tilhører Sonv Corporation. Copyright 2004-2010 Verance Corporation. Alle rettigheter forbeholdt for Verance. Omvendt utvikling eller demontering er forbudt.

Svenska Cinavia-meddelande : Den här produkten använder Cinavia-teknik för att begränsa antalet obehöriga kopior på vissa kommersiellt producerade filmer och videor och deras ljudspår. Om en förbjuden användning av en obehörig kopia upptäcks visas ett meddelande och uppspelningen eller kopieringen avbryts. Mer information om Cinavia-tekniken erbjuds av Cinavia Online Consumer Information Centre på adressen http://www.cinavia.com. För att begära ytterligare information om Cinavia via post, skicka ett vykort med din adress till: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA,

Den här produkten införlivar egendomsteknik på licens från Verance Corporation och skyddas av det amerikanska patentet 7,369,677 och andra patent i USA och internationellt och väntande patent, samt upphovsrätt och varumärkesskydd för vissa delar av sådan teknik. Cinavia är ett varumärke som tillhör Verance Corporation. Upphovsrätt 2004-2010 Verance Corporation. Med ensamrätt för Verance. Reverse engineering och nedmontering är förbjudet.

Česky Upozornění k technologii Cinavia : Tento přístroj využívá technologii Cinavia k omezení použití neoprávněných kopií některých komerčních filmů a videí a jejich zvukových stop. Při zjištění zakázaného použití neautorizované kopie se zobrazí hlášení a přehrávání nebo kopírování je přerušeno. Další informace o technologii Cinavia naleznete v Online středisku informací pro spotřebitele na webu http://www.cinavia.com. Další informace o technologii Cinavia si můžete vyžádat také poštou. Pošlete svou korespondenční adresu na adresu: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138. USA.

Tento přístroj využívá proprietární technologii licencovanou společností Verance Corporation a je chráněn patentem USA č. 7 369 677 a dalšími vydanými a přihlášenými patenty ve Spojených státech amerických a dalších zemích. Na některé aspekty této technologie se také vztahuje ochrana autorských práv a obchodního tajemství. Cinavia je ochranná známka společnosti Verance Corporation. Copyright 2004-2010 Verance Corporation. Všechna práva whrazena společností Verance. Zpětná analýza a převod do strojového kódu jsou zakázány.

Deutsch Cinavia Hinweise : Dieses Gerät nutzt die Cinavia Technologie um die Erstellung illegaler Kopien kommerziell produzierter Filme und Videos sowie deren Soundtracks zu verhindern. Wenn die verbotene Nutzung einer illegalen Kopie festgestellt wird, erscheint eine Meldung und die Wiedergabe bzw. der Kopiervorgang werden abgebrochen. Mehr Informationen über die Cinavia Technologie finden Sie im Online Kundeninformationszentrum unter http://www.cinavia. com. Wenn Sie zusätzliche Informationen über Cinavia über E-Mail erhalten möchten, senden Sie bitte eine Postkarte mit Ihrer E-Mail Adresse an: Cinavia Consumer Information Centre, P.O. Box 86851. San Diego, CA, 92138, USA.

Dieses Gerät nutzt geschützte Technologie unter der Lizenz von Verance Corporation und ist durch das U.S. Patent 7.369.677 und andere in der USA und weltweit ausgestellten & angemeldeten Patenten sowie durch die Urheberrechte und die Sicherung von Betriebsgeheimnissen bestimmter Aspekte dieser Technologie geschützt. Cinavia ist eine Handelsmarke von Verance Corporation. Copyright 2004-2010 Verance Corporation. Alle Rechte vorbehalten für Verance Reverse Engineering oder Demontage sind verboten.

Magyar Cinavia figyelmeztetés : A készülék a Cinavia technológiáiát használia a kereskedelmi forgalomban lévő filmek és videók, valamint hangsávjaik illetéktelen másolásának megakadályozására. Ha illetéktelen másolat tiltott használatát érzékeli, a készülék megjelenít egy üzenetet, és a lejátszás vagy másolás félbeszakad.

A Cinavia technológiáról további információkat a Cinavia Online ügyfélszolgálaton kaphat a http:// www.cinavia.com címen. További információk a Cinaviáról postai úton küldjön egy levelezőlapot a postacímével a következő címre: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

A termék egy szerzői jogvédelmi technológiát alkalmaz, mely eljárást a Verance Corporation birtokol, és az USA-ban bejegyzett 7,369,677 számú szabadalom, illetve más, az USÁban és máshol bejegyzett szabadalmak és szerzői jogok védenek, és az ilyen technológiákra vonatkozó kereskedelmi titkok. A Cinavia a Verance Corporation védiegve, Copyright 2004-2010 Verance Corporation, A Verance minden jogot fenntart. A rendszer visszafejtése vagy visszafordítása tilos.

Suomi

Polski Komentarz Cinavia : Urządzenie to korzysta z technologii Cinavia w celu ograniczenia wykorzystania nieupoważnionych kopii pewnych filmów i obrazów wideo wyprodukowanych w celach komercyjnych, oraz ich ścieżek dźwiekowych. W przypadku wykrycia zakazanego użycia nieautoryzowanej kopij, zostanie wyświetlony komunikat i proces odtwarzania i kopiowania zostanie zatrzymany. Wiecej informacji o technologii Cinavia można uzyskać w Centrum obsługi klienta Cinavia online: http:// www.cinavia.com. Aby poprosić o przesłanie dodatkowych informacii o Cinavia poczta, wyślii kartke ze swoim adresem pocztowym na adres: Centrum informacii konsumenta Cinavia, P.O. Box 86851, San Diego, CA, 92138, USA. Urządzenie to zostało wyprodukowane z zastosowaniem technologii własnościowej na licencji firmy Verance Corporation, i jest chronione amerykańskim patentem 7.369.677 oraz innymi patentami Stanów Zjednoczonych i innych krajów, wydanymi i wydawanymi, oraz prawami autorskimi, a także chroniony tajemnicą handlową obejmującą określone aspekty takiej technologii. Cinavia jest znakiem towarowym firmy Verance Corporation. Copyright 2004-2010 Verance Corporation. Wszystkie prawa zastrzeżone przez firmę Verance. Niedozwolone jest odtwarzanie wsteczne (ang. reverse engineering) i rozmontowywanie urządzenia.

Siovensky Upozornenie na technológiu Cinavia : Tento výrobok využíva technológiu Cinavia na obmedzenie používania neoprávnených kópií niektorých komerčne vyrábaných filmov a videi a ich zvukových záznamov. Keď sa zistí, že došlo k zakázanému použitiu neoprávnenej kópie, zobrazí sa správa a prehrávanie alebo kopírovanie sa preruší.

Viac informácií o technológií Cinavia nájdete na on-line informačnom centre pre spotrebiteľov Cinavia na lokalite http://www.cinavia.com. Ak cheete požiadať o zaslanie ďalších informácií o technológií Cinavia poštou, zašlite list s vašou poštovou adresou na adresu: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

Tento výrobok obsahuje súkromnú technológiu na základe licencie od spoločnosti Verance Corporation, ktorá je chránená americkým patentom č. 7 369 677 a ďalšími patentmi a patentovými prihláškami v USA a na celom svete, pričom niektoré aspekty tejto technológie podliehajú aj ochrane autorským právom a ochrane obchodného tajomstva. Cinavia je obchodná značka spoločnosti Verance Corporation. Autorské práva 2004 - 2010 Verance Corporation. Spoločnosť Verance si vyhradzuje všetky práva. Spätná analýza alebo prevod do strojového kódu sú zakázané.

Slovenščina) Obvestilo o tehnologiji Cinavia: Ta izdelek uporablja tehnologijo Cinavia za omejitev uporabe nepooblaščenih kopij nekaterih komercialno posnetih filmov in videoposnetkov ter njihovih zvočnih posnetkov. Kadar naprava zazna uporaba nepooblaščene kopije, se bo prikazalo sporočilo in predvajanje ali kopiranje se bo prekinilo. Već informacij o tehnologiji Cinavia najdete v spletnem informacijskem središču za stranke Cinavia na http://www.cinavia.com. Če želite prejeti dodatne informacije o tehnologiji Cinavia po pošti, nam pošljite svoj domaći naslov na: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

Ta izdelek vsebuje lastniško tehnologijo z licenco družbe Verance Corporation in je zaščiten z ameriškim patentom 7,369,677 ter drugimi izdanimi ali vloženimi ameriškimi in svetovnimi patenti, kot tudi z zakoni o varstvu pravic in nerazkrivanju poslovnih skrivnosti za določene vidike takšne tehnologije. Cinavia je blagovna znamka družbe Verance Corporation. Avtorske pravice 2004-2010 Verance Corporation. Vse pravice si pridržuje družba Verance. Obratno inženirstvo in razstavljanje sta prepovedana. Български Бележка за Cinavia : Този продукт използва технологията Cinavia, за да ограничи използването на неоторизирани копия на някои филми, видеоклипове и саундтраци. Когато се засече забранено ползване на неоторизирано копие, ще се покаже съобщение и възпроизвеждането или копирането ще се прекъсне. Повече информация за технологията Cinavia се предоставя от онлайн центъра за информация за клименти на Cinavia на http://www.cinavia.com. За да поискате допълнителна информация от Cinavia по пощата, изпратете запитванията с вашия пощенки адрес на: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

Този продукт използва фирмена технология под лиценз от Verance Corporation и е защитен с патент на САЩ 7,369,677 и други издадени и заявени патенти в САЩ и по целия свят, както и от защита на авторското право и търговските тайни за определени аспекти от такава технология. Cinavia е търговска марка на Verance Corporation. Copyright 2004-2010 Verance Corporation. Всички права запазени от Verance. Забранен е инженеринт или демонтиране в обратен ред.

**Română** Notă din partea Cinavia : Acest aparat utilizează tehnologie Cinavia pentru a limita utilizarea unor copii neautorizate ale unor filme sau materiale video produse spre comercializare, precum şi a coloanelor sonore asociate acestora. Dacă este detectată utilizarea liegală sa unei copii neautorizate, va fi afişat un mesaj şi redarea sau copierea este întreruptă. Pentru informații suplimentare despre tehnologia Cinavia, consultați Centrul online de informații pentru consumatori Cinavia, la adresa http://www.cinavia.com. Pentru a solicita prin poştă informații suplimentare despre Cinavia, trimiteți un plic timbrat cu adresa dvs. la: Cinavia Consumer Information Centre, P.O. Box 68651, San Diego, CA, 92138, USA.

Acest aparat încorporează tehnologie de proprietate sub licență de la Verance Corporation și este protejat de către brevetul SUA 7.369.677 și de către alte brevete din SUA și din întreaga lume emise și în curs de emitere, precum și de către legea drepturilor de autor și a secretului comercial privind anumite aspecte ale acestei tehnologii. Cinavia este o marcă comercială a Verance Corporation. Copyright 2004-2010 Verance Corporation. Toate drepturile sunt rezervate de Verance. Este interzisă demontarea sau dezasamblarea produsului.

Ελληνικά Ειδοποίηση τεχνολογίας Cinavia : Αυτό το προϊόν χρησιμοποιεί τεχνολογία Cinavia για τον περιορισμό της χρήσης μη εξουσιοδοτημένων αντιγράφων ορισμένων ταινιών και βίντεο που διατίθενται στο εμπόριο, καθώς και της ηχητικής επένδυσής τους. Αν ανιχνευτεί απαγορευμένη χρήση ενός μη εξουσιοδοτημένου αντιγράφου, εμφανίζεται ένα μήνυμα και διακόπτεται η αναπαραγωγή ή αντιγραφή. Περισσότερες πληροφορίες για την τεχνολογία Cinavia παρέχονται στο Διαδικτυακό κέντρο πληροφόρησης πελατών της Cinavia, στη διεύθυνση http://www.cinavia.com. Για να ζητήσετε πρόσθετες πληροφορίες σχετικά με την τεχνολογία Cinavia μέσω ταχυδρομείου. στείλτε μια κάρτα με την ταχυδρομική διεύθυνσή σας στο: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA. Το προϊόν αυτό ενσωματώνει αποκλειστική τεχνολογία που χρησιμοποιείται κατόπιν αδείας από τη Verance Corporation. η οποία προστατεύεται από το δίπλωμα ευρεσιτεχνίας Η.Π.Α. με αριθμό 7.369.677 και άλλα διπλώματα ευρεσιτεχνίας που έχουν εκδοθεί και εκκρεμούν στις Η.Π.Α. και διεθνώς, καθώς και από προστασία πνευματικών δικαιωμάτων και εμπορικών μυστικών για ορισμένα στοιχεία της συνκεκριμένης τεχνολογίας. Η επωνυμία Cinavia είναι εμπορικό σήμα της Verance Corporation. Πνευματικά δικαιώματα 2004-2010 Verance Corporation. Με την επιφύλαξη παντός δικαιώματος από τη Verance. Απαγορεύεται η αποσυμπίληση ή ανακατασκευή κώδικα.

Hrvatski Obavijest o tehnologiji Cinavia : ovaj proizvod rabi tehnologiju Cinavia kako bi se ograničila uporaba neovlaštenih kopija nekih komercijalno proizvedenih filmova i videozapisa i njihovih zvučnih zapisa. Kada se otkrije zabranjena uporaba neovlaštene kopije, prikazat će se poruka i prekinut će se reproduciranje i kopiranje. Ostale informacije o tehnologiji Cinavia dostupne su u mrežnom informacijskom centru za korisnike tvrtke Cinavia na http://www.cinavia. com. Kako biste zatražili dodatne informacije o tehnologiji Cinavia putem pošte, pošaljite nam dopis na poštansku adresu: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, SAD.

Ovaj proizvod sadržava zakonom zaštićenu tehnologiju pod licencom korporacije Verance i zaštićen je američkim patentom 7,369,677 i ostalim američkim i svjetskim patentima koji su izdanje i čije je izdanje u tijeku, kao i zaštitama autorskih prava i poslovnih tajni za određene aspekte te tehnologije. Cinavia je zaštitni znak korporacije Verance. Autorsko pravo 2004-2010 Verance Corporation. Sva prava pridržava Verance. Zabranjeni su obrruti inženjering i rastavljanje.

Srpski Cinavia obaveštenje : Ovaj proizvod koristi Cinavia tehnologiju za ograničenje upotrebe neovlašćenih kopija nekih komercijalno proizvedenih filmova i video zapisa i zvučnih zapisa. Kada se otkrije upotreba neovlašćene kopije, prikazaće se poruka i reprodukcija ili kopiranje će biti prekinuto.

Više informacija o Cinavia tehnologija dostupne su na internet informacionom centru za potrošače Cinavia na adresi http://www.cinavia. com. Da biste zatražili dodatne informacije o Cinavia-i putem pošte, pošaljite razglednicu sa vaše e-adrese: Cinavia Consumen Information Centre, P.O. Box 86851, San Diego, CA, 92138, SAD.

Ovaj proizvod sadrži tehnologiju u vlasništvu pod licencom kompanije Verance Corporation i zaštićen je američkim patentom 7,369,677 i drugim američkim i svetskim patentima koji su potvrđeni ili su na čekanju, kao i zaštitom autorskih prava i poslovne tajne za određene aspekte takve tehnologije. Cinavia je zaštitni znak kompanije Verance Corporation. Copyright 2004-2010 Verance Corporation. Sva prava zadržana od strane kompanije Verance. Reinženjering ili demontaža su zabranjeni.

Қазақша Сinavia ескертуі : Бұл өнімде коммерциялық фильм мен бейнелердің және олардың саунд-тректерінің рұқсатсыз көшірмелерін шектеу үшін Сіnavia технологиясы пайдаланылады. Пайдалануға тыйым салынған рұқсатсыз көшірмені пайдалану анықталса, хабар көрсетіледі және ойнату немесе көшіру үзіледі. Сіпаvіа технологиясы туралы косымша акпарат http://www.cinavia.com торабындағы Сіпаvіа желілік тұтынушылар туралы ақпарат орталығында берілген. Сіпаvіа туралы қосымша ақпаратты пошта арқылы сұрау үшін пошта мекенжайыңыз бар ашықхатты мына мекенжайға жіберіңіз : Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA. Бул Verance корпорациясынын лицензиясы бар жекеменшік технологияны қамтиды және АҚШ-тың 7,369,677 патентімен, әрі шығарылған және күтүдегі басқа АҚШ және дүниежүзілік патенттермен, сондай-ак, авторлык кұқықтармен және осындай технологияның белгілі бір жактарын күпия корғаныспен корғалған. Cinavia – Verance корпорациясының сауда белгісі. Авторлық құқықтар, 2004-2010 Verance корпорациясы. Барлық құқықтар Verance корпорациясымен корғалған. Кері жобалауға және бөлшектеуге тыйым салынады.

Русский Уведомление о Cinavia: Данный продукт оснащен технологией Cinavia, которая не позволяет использовать незаконно сделанные копии серийно изготавливаемых записей фильмов и видео, а также музыку из этих фильмов и видео. В случае обнаружения использования незаконно сделанной копии на экране появится соответствующее сообщение. и процесс воспроизведения или копирования будет прерван. Дополнительные сведения о технологии Cinavia представлены на сайте Центра информации для потребителей Cinavia по agpecy: http://www.cinavia.com. Чтобы запросить дополнительные сведения о технологии Cinavia по почте. отправьте нам открытку с вашим почтовым адресом: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA. Данный продукт оснащен запатентованной технологией с лицензией от Verance Corporation и защищенной патентом США 7,369,677 и другими патентами США и международными патентами, изданными и рассматриваемыми, а определенные аспекты этой технологии — авторскими правами и охраной секретов производствам. Cinavia является товарным знаком корпорации Verance Corporation. Verance Corporation, 2004-2010 гг. Все права защищены корпорацией Verance. Инженерный анализ и разборка запрещены.

Українська Зауваження щодо Cinavia: у цьому продукті використовується технологія Cinavia, що обмежує використання несанкціонованих копій деяких комерційних кінофільмів і відеозаписів. а також використаних у них звукових доріжок. У разі виявлення забороненого використання несанкціонованої копії, відобразиться відповідне повідомлення, а відтворення або копіювання буде призупинено. Додаткові відомості про технологію Cinavia можна знайти в Інформаційному онлайн-центрі Cinavia за веб-адресою http://www.cinavia.com. Шоб надіслати запит на отримання додаткової інформації про Cinavia поштою, надішліть поштову листівку зі своєю поштовою адресою на таку адресу: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, СА. 92138. USA. У цьому продукті використано запатентовану технологію. ліцензовану компанії Verance Corporation і захищену патентом США 7 369 677 та іншими всесвітніми патентами, виданими та такими, що очікують затвердження, а також авторським правом і принципами охорони таємниць виробництва певних аспектів цієї технології. Сіпаvia є торговельною маркою Verance Corporation. Авторське право належить корпорації Verance Corporation, 2004-2010 pp. Усі права належать корпорації Verance. Забороняється вносити зміни до конструкції продукту або розбирати його.

繁體中文 Cinavia 聲明:本產品使用 Cinavia 技術來限制 使用某些商業製造的電影和視訊及其聲道的未經授權副本。當偵測 到禁止使用的未經授權副本時,將會顯示一則訊息,並且播放或複 製動作將會中斷。

Cinavia 技術的詳細資訊在 Cinavia 線上消費者資訊中心中提供,網址為:http://www. cinavia.com。若要透過郵件請求關於 Cinavia 的其他資訊,請將含有您的郵寄地址的明信片寄往:Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

本产品融合了在获得 Verance Corporation 许可并且受美国专利 7.369,677 以及其他在盖和世界各地已公布和正在申请的专利保护 ,并且受此类技术特定方面的版权和商业秘密保护。 Cinavia 是 Verance Corporation 的商标。2004-2010 Verance Corporation 版权所有。Verance

保留一切权利。严禁进行逆向工程和反汇编。

▶ 中国语 → Cinavia 声明:本产品使用 Cinavia 技术来限制使用 一些商业制造的电影和视频及其声道的未获得授权的副本。检测到 禁止使用未获得授权的副本的情况时,将会显示消息,并且播放或 复制将会中断。

有关 Cinavia 技术的更多信息,在 Cinavia

在线消费者信息中心提供,网址如下: http://www.

cinavia.com。要通过邮件请求关于 Cinavia

的更多信息,请将含有您的邮寄地址的明信片寄往: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138. USA.

本产品融合了在获得 Verance Corporation 许可并且受美国专利 7,369,677 以及其他在盖和世界各地已公布和正在申请的专利保护 ,并且受此类技术特定方面的版权和商业秘密保护。 Cinavia 是 Verance Corporation 的商标。2004-2010 Verance Corporation 版权所有。Verance

保留一切权利。严禁进行逆向工程和反汇编。

עגונב העדוה עברית לכומצום: שמתשמ הז רצומ: אינג העדוה עברית יתלב םיקתעהב שומישה תא ליבגהל ידכ Cinavia תיגולונכטב תיגולונכטב שומישה תא ליבגהל ידכ Cinavia תיגולונכטב ההוזי רשאכ. בהלש לוקה יספו תירחסמ הקפהב ביטרס לש םייקוח וא הלעפה לכו העדוה ךכ לע גצות ,יקוח יתלב קתועב רוסא שומיש.

דיגאת םעטמ ווישיר תחת תיניינק היגולונכט בלשמ הז רצומ סיטנטפו 7,369,677 יאקירמא טנטפ ידי לע וגומ אוהו Verance סייולתו סידמוע מהש וא ולבקתהש סירחא סיימלועו סיאקירמא סיבה רובע סיירחסמ תודוסו סירצוי תויוכז לע הנגה ידי לע מג ומכ סיבה רובע ירחסמ למס אודוסו ביצוי תויוכז לע היגולונכט לש סימיוסמ ראב לש ירחסמ למס אוד Cinavia וזכ היגולונכט לש סימיוסמ Verance. דיגאת לש ירסמי Verance. או אורוחאל הסדנה עצבל רוסיא לח ארוחאל הסדנה עצבל רוסיא לח רצומה קוריפ.

### Thai ประกาศเกี่ยวกับ Cinavia :

ผลิดภัณฑ์นี้ใช้เทคโนโลยี Cinavia เพื่อจำกัดการใช้งานแผ่น ที่ไม่ได้รับอนุญาตของฟิล์มและวิดีโอและเทร็กเสียงที่ผลิตม าเพื่อการค้าบางแผ่น เมื่อพบการใช้งานต้องหามของแผ่นที่ไ ม่ได้รับอนุญาต ข้อความจะปรากฏขึ้นและการเล่นหรือการคัด ออกจะหยุดทำงาน

ข้อมูลเพิ่มีเดิมเกี่ยวกับเทคโนโลยี Cinavia มีให้ที่ศูนย์ ข่อมูลลูกค้าทางออนไลน์ของ Cinavia ที่ http://www. cinavia.com หากต้องการขอรับข้อมูลเพิ่มเติมเกี่ยวกับ Cinavia ทางไปรษณีย์ ส่งโปสการ์ดที่มีที่อยู่ของคุณไป ที่: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA

ผลิตภัณฑ์นี้รวมเอ้าเทคโนโลยีเอ่กสิทธิ์เฉพาะภายใต้การอ นุญาดจาก Verance Corporation และได้รับความคุ้มครอง โดยสิทธิบัตรสหรัฐฯ เลขที่ 7,369,677 และสิทธิบัตรสหรัฐ ฯ อื่นๆ และทั่วโลกที่ประกาศแล้วและรอการพิจารณา รวม ทั้งฉิขสิทธิ์และการป้องกันความลับทางการค้าในบางด้าน ของเทคโนโลยีดังกล่าว Cinavia เป็นเครื่องหมายการค้าข อง Verance Corporation ฉิขสิทธิ์ 2004-2010 Verance Corporation สงวนสิทธิ์ทั้งหมดโดย Verance ห้ามดำเนิน การทางวิศวกรรมย์อนกลับหรือถอดขึ้นส่วนผลิตภัณฑ์

**Türkçe** Cinavia Notice : This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Centre at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

This product incorporates proprietary technology under licence from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

Indonesia Pemberitahuan Cinavia : Produk ini menggunakan teknologi Cinavia untuk membatasi penggunaan tanpa izin salinan film dan video tertentu yang diproduksi secara komersial serta soundtracknya. Apabila penggunaan salinan tanpa izin yang dilarang terdeteksi, pesan akan ditampilkan dan pemutaran atau penyalinan akan dihentikan.

Informasi selengkapnya tentang teknologi Cinavia tersedia di Pusat Informasi Pelanggan Online Cinavia di http://www.cinavia.com. Untuk meminta informasi tambahan mengenai Conavia melaui pos, kirimkan kartu pos dengan alamat surat Anda ke: Cinavia Consumer Information Centre,P.O.Box 86851, San Diego, CA, 92138, USA.

Produk ini menerapkan teknologi milik sendiri berdasarkan lisensi dari Verance Corporation dan dilindungi oleh Paten AS 7,369,677 dan paten AS dan di seluruh dunia lainnya yang terdaftar dan dalam pendaftaran, serta perlindungan hak cipta dan rahasia dagang atas aspek tertentu dari teknologi tersebut. Cinavia adalah merek dagang dari Verance Corporation. Hak Cipta 2004-2010 Verance Corporation. Semua hak dimiliki oleh Verance. Rekayasa balik atau pembongkaran dilarang. Tiếng Việt Thông báo của Cinavia: Sản phẩm này sử dụng công nghệ Cinavia để hạn chế việc sử dụng các bản sao trải phép một số bộ phim và video được sản xuất thương mại và các đoạn âm thanh của chúng. Khi bị phát hiện sử dụng bản sao trải phép, một thông bảo sẽ được hiển thị và việc phát lại hoặc sao chép sẽ bị gián đoạn. Thông tin khác về công nghệ Cinavia được cung cấp tại Trung tâm thông tin dành cho người tiêu dùng trực tuyến Cinavia ở địa chỉ http://www.cinavia.com. Để yêu cầu thông tin khác về Cinavia qua thư, hãy gưi một danh thiếp kèm theo địa chỉ nhận thư của bạn đến: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

Sản phẩm này tích hợp công nghệ độc quyền theo giấy phép của Verance Corporation và được bảo hộ bởi Bảng sáng chế Hoa Kỳ 7,369,677 và các bảng sáng chế của Hoa Kỳ và trên toàn thế giới khác đã được cấp và đang chờ cấp cũng như sự bảo vệ bí mật thương mại và bản quyền đối với các khía cạnh cụ thể của công nghệ đó. Cinavia là nhãn hiệu của Verance Corporation. Bản quyền 2004-2010 Verance Corporation. Mọi quyền được bảo lưu bởi Verance. Nghiêm cấm thiết kế đối chiếu và tháo rời sản phẩm.

اللغة العربية إش Cinavia : يستخدم هذا المنتج تقنية Cinavia للحد من استخدام النسخ غير المرخص بها من بعض الأفلام ومقاطع الفيديو التي يتم إنتاجهاً للأغراض التجارية ومسارات الصوت المتاحة بها. وعند اكتشاف الاستخدام المحظور لنسخة غير معتمدة، يتم عرض رسالة وستتم مقاطعة التشغيل أو النسخ . يتم توفير المزيد من المعلومات حول تقنية Cinavia في مركز معلومات مستهلك Cinavia على الإنترنت في الموقع http://www.cinavia.com. لطلب المزيد من المعلومات حول Cinavia عبر البريد، قم بإرسال البطاقات البريدية مع عنوانك البريدي إلى: Cinavia Consumer Information Centre، P.O. Box .USA (91) San Diego, CA (11/0) يشتمل هذا المنتج على تقنية مملوكة للشركة بموجب ترخيص من شركة وهي خاضعة لحماية براءة الاختراع الأمريكية Verance Corporation رقم ٧,٣٦٩,٦٧٧ وغيرها من براءات الاختراع الأمريكية والعالمية الأخرى التي تم إصدارها والمعلقة بالإضافة إلى حماية حقوق الطبع والنشر علامة تجارية Cinavia والأسرار التجارية لأوجه معينة لهذه التقنية. تعد حقوق الطبع والنشر للأعوام من .Verance Corporation. خاصبة لشركة يتم حفظ كل . ۲۰۰۶ Verance Corporation إلى ۲۰۱۰ محفوظة لشركة يحظر إجراء الهندسة العكسية أو تفكيك هذا .Verance الحقوق لصالح المنتج



