 
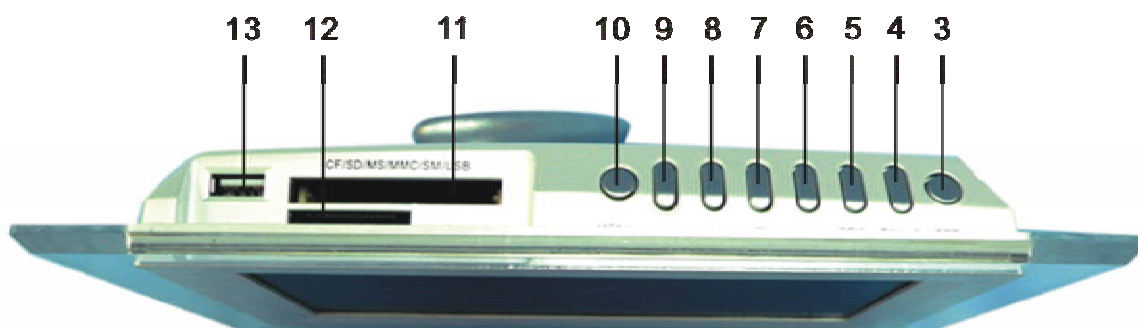 


1. Introduction:

This chapter introduce the parts of the Digital Photo Displayer. Before use please read the User Manual carefully.

1. Main Panel Introduction:

- | | |
|------------------------------|-----------------------------|
| (1).Display area | (9). – (Decrease/move left) |
| (2).IR Receive window | (10).MENU |
| (3).OFF | (11).CF jacket |
| (4).ON/ ► | (12).MMC/SD/MS jacket |
| (5).REW | (13).USB port |
| (6).▲ (Move up) | (14).Video/Audio Input |
| (7).▼ (Move down) | (15). Video/Audio Output |
| (8). + (Increase/move right) | (16). Earphone Output |

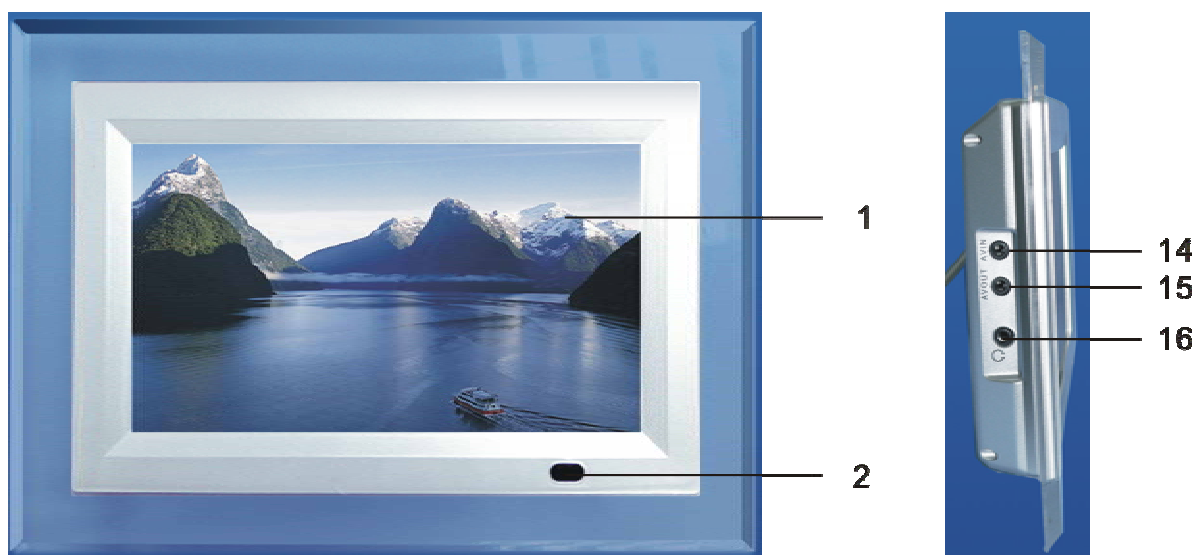

Key controller

2. Remote controller introduction



(1) : Power switch

(2) : Setting panel
 SEL: -----Display setting menu +/-:-----Set increase/Decrease

(3) : Function panel
 Music: -----Music mode key Photo: -----Photo mode key
 Movie: -----Movie mode key File: ----- File management mode key
 Return: -----Back to Main menu

(4)  Setup: Enter General Setup Page

(5) : Control panel

Enter/Menu-----Confirm/Play key : Direction Key

(6)  Time: Movie Time Show Mode.



(7) : Volume control panel

Vol-:-----Volume decrease

Vol+:-----Volume increase



(8) :-----AV input/output key



(9) :Play control panel

II: -----Pause key

■: -----Stop key

◀◀: -----Speed backward, unsuited for photo mode

▶▶: -----Speed forward, unsuited for photo mode

◀◀: -----Last file key

▶▶: -----Next file key



(10) N/P or Video: -----NTSC/PAL/Multi display mode option.



(11) Audio: -----Audio output mode (dependent on your media file)



(12) Slide/Disp: -----Picture slide mode.



(13) Zoom: -----Enter zoom in/out mode

 


(14) Slow: -----Movie slow motion key



(15) Mode: -----Enter upward mode

3. Caution.

The Digital Photo Displayer powered by AC ADAPTOR  12V ----15A.


The Digital Photo Displayer use external memory: USB DISK/SD Card/MMC Card/MS Card/CF Card.

4. Quick Start Guide


The information showed:

When the DPD is playing photo or movie, there are two Information Display Windows.

 These two windows will show information about various operations.

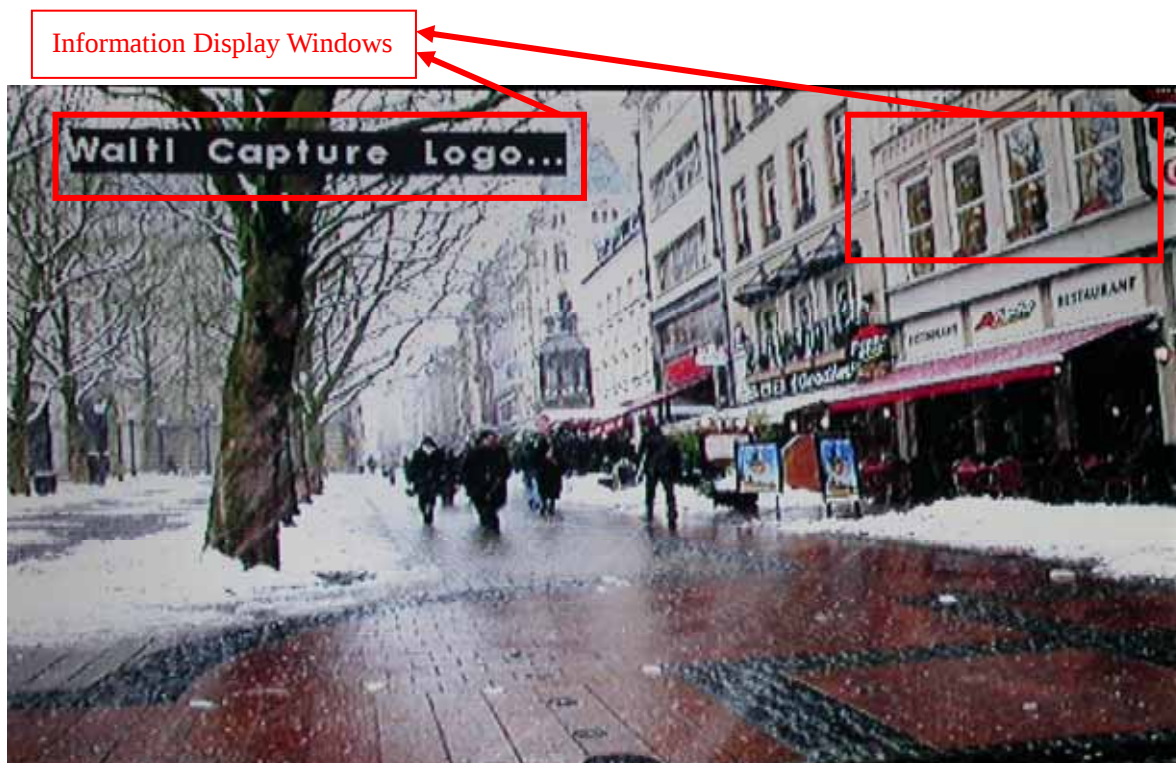

The function menu show:

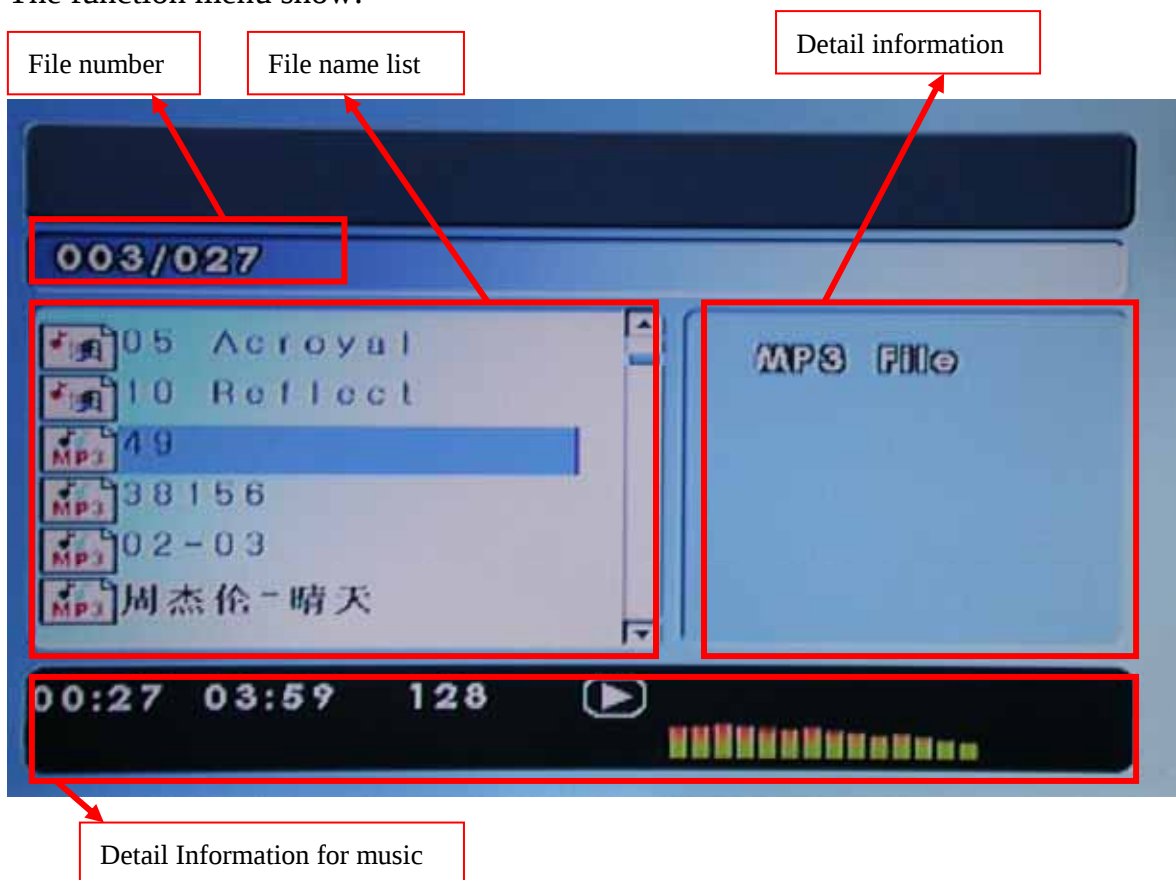 

Setting Bar:

Press Menu button (Remote Controller key: SEL), and a Setting Bar will display in the center of DPD window. Press +/- button (Remote Controller key: +/-) to change the parameter of DPD.

 


4.1 How to start DPD.


Connect the DPD power. The DPD would show 'No media available' and 'Please insert a media device'.



Plug your external memory into DPD. The DPD supported 3 type of external memory at the same time. But each external memory is isolated.

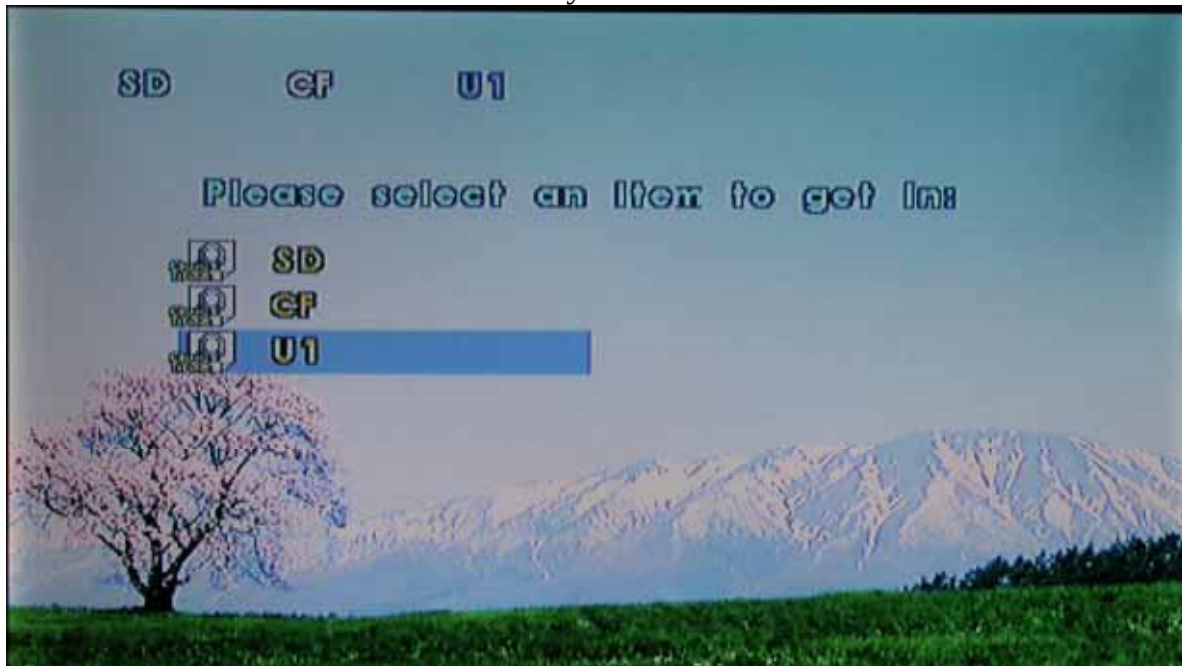

Press ON/▶|| (Remote Controller key: Enter/Menu) enter main menu.

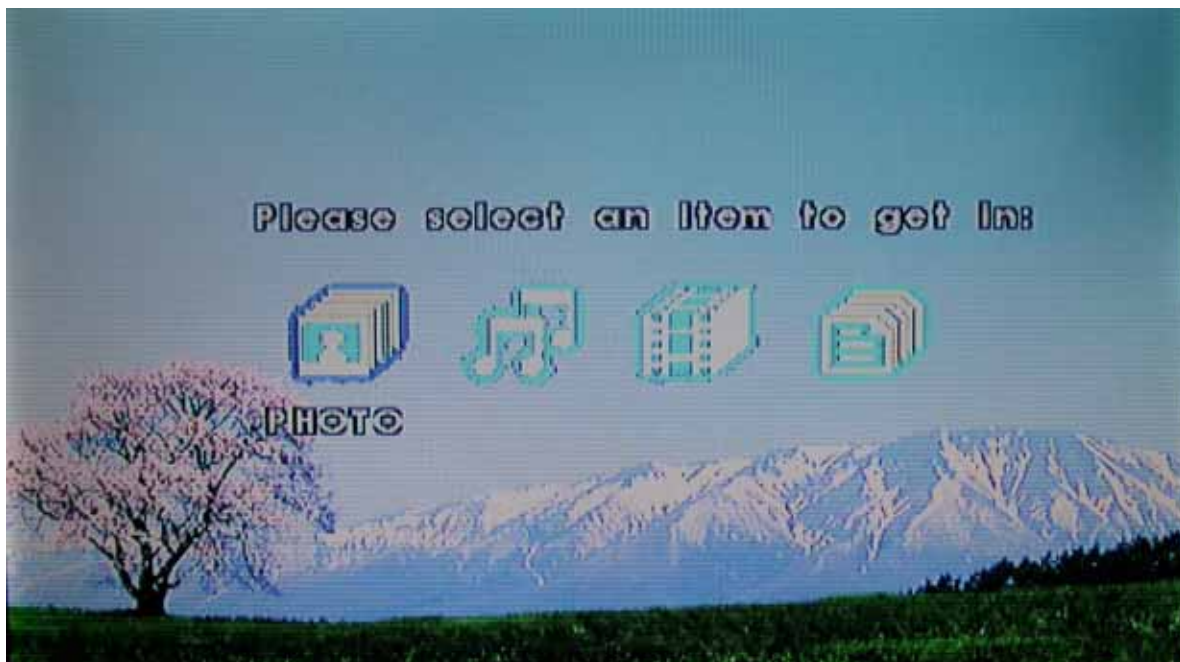 


Press +/- (Remote Controller key: Direction Key) to select function menu. There are 4 function mode: Photo, Music, Movie, Folder. Then press ON/▶ (Remote Control key: Enter/Menu) to select function.

4 function menu as below:


Photo function menu:



 Music function menu:

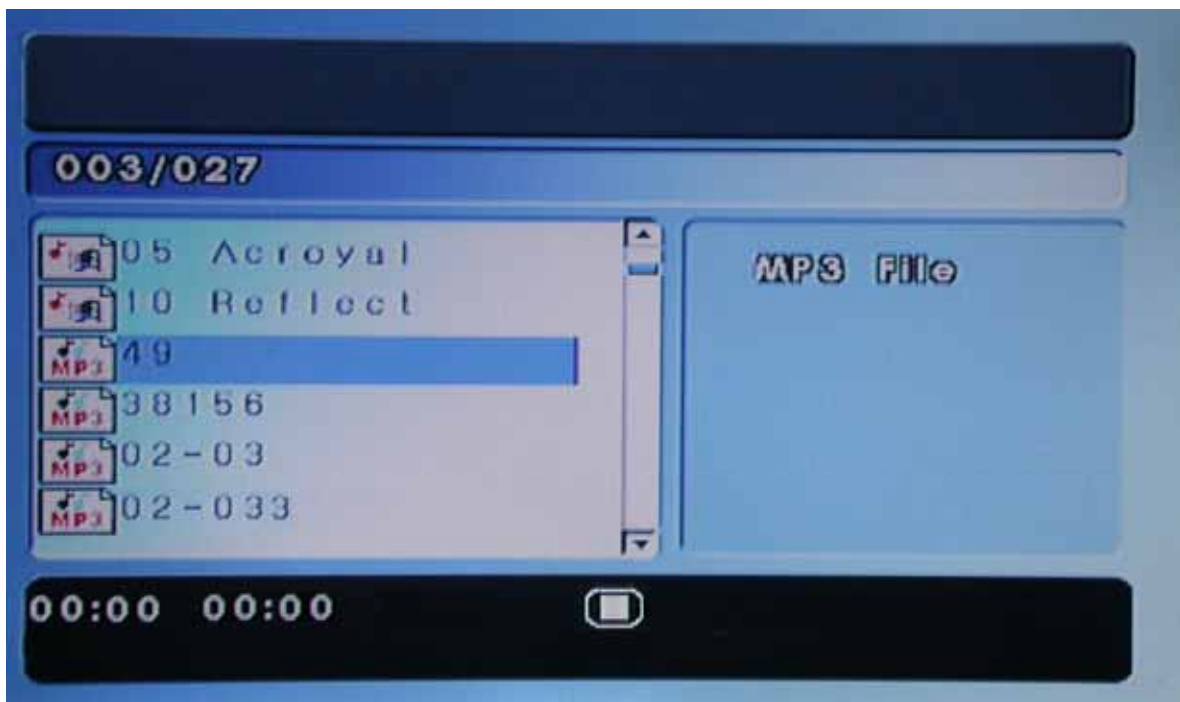

Movie function menu:

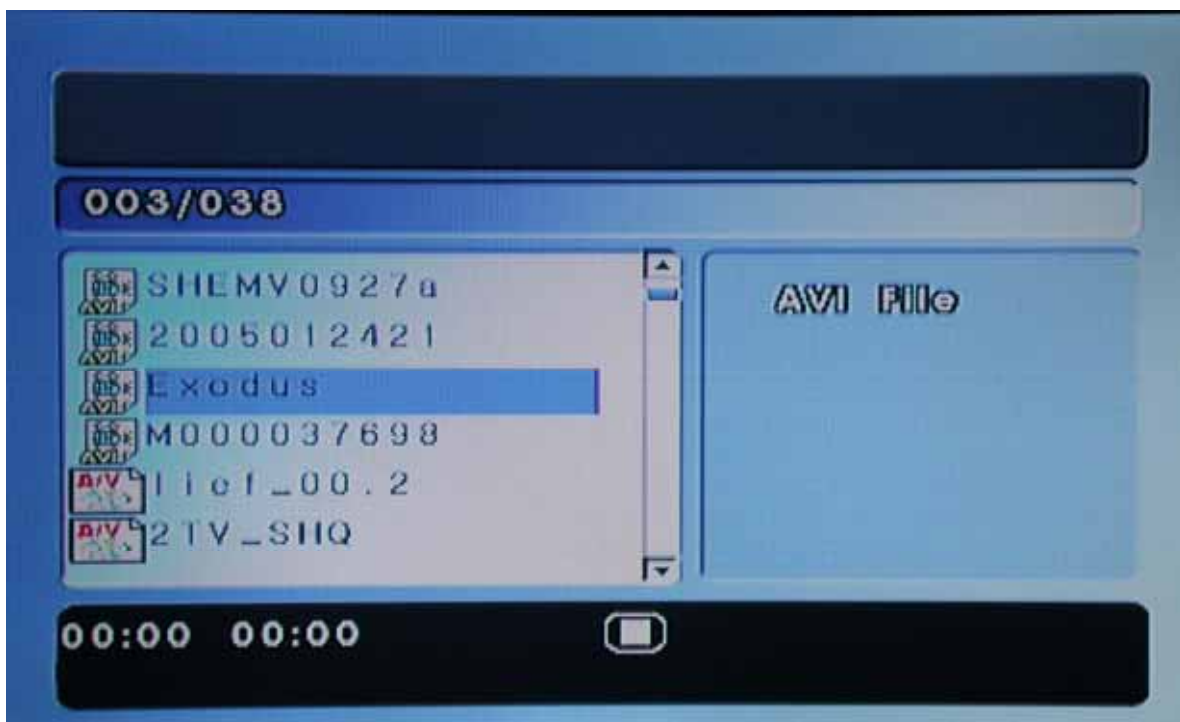 

Folder function menu:



4.3 Photo function quick start:

When you are in the Photo function menu, press ▲/▼ (Remote Controller key:  Direction Key) to select the Photo file you like. Then press ON/▶ (Remote Controller key: Enter/Menu) start to display photos.



Press REW button (Remote Controller key: Return) to stop display photo and return to the main menu.

4.3 Music function quick start:

When you are in the Music function menu, press ▲/▼ (Remote Controller key:  Direction Key) to select the music file your like. Then press ON/▶|| (Remote Controller key: Enter/Menu) start to play music.



Press Menu button (Remote Controller key: SEL) to start Setting Bar, and press 5 times to select volume adjust mode.

Press OFF button (Remote Controller key: ) to stop play music. REW button (Remote Controller key: Return) to return to the main menu.

4.4 Movie function quick start:

When you are in the Movie function menu, press ▲/▼ (Remote Controller key:  Direction Key) to select the music file your like. Then press ON/▶|| (Remote Controller key: Enter/Menu) to start to play movie.



Press OFF button (Remote Controller key: ) to stop play movie. REW button (Remote Controller key: Return) return to the main menu.

5. Photo Display function:

5.1 How to enter photo display mode:

In the main menu, press +/- (Remote Controller key: ) Direction Key) to select photo display function. Then press ON/▶ (Remote Controller key: Enter/Menu) to enter photo display function menu.



How to display photo:

Press ▲/▼ (Remote Controller key: ) Direction Key) to select the Photo file you like. Then press ON/▶ (Remote Controller key: Enter/Menu) to start to display photos.



Display mode function:

Press ON/▶|| (Remote Controller key: I I) to stop/play photo.

Press Remote Controller key: ◀◀ or ▶▶ to advance or backward photo.

Press Remote Controller key:  /  to change photo slide mode. There are 18 type wipe function.

Press Remote Controller key:  to enter/exit zoom in/out mode. Press ◀◀ to zoom out the photo. Press ▶▶ to zoom in the photo.

Press ▲/▼/+/− (Remote Controller key:    ) to rotate the photo.

How to browse photo:

When the photo displaying press Remote Controller key ■ to enter browse photo mode.



Press ▲/▼/+/- (Remote Controller key: ) to select the photo you like and to select control key (Slide Show/Menu/Prev/Next).

Slide show: Enter photo display mode.

Menu: Enter Remote Key Function guide.

Prev: Go to Prev-page.

Next: Go to Next page.

Press ON/▶|| (Remote Controller key: Enter/Menu) to confirm what you select.

4. Special Operation instruction

(1).Picture browsing with music background function: Play MP3 files first, then press PHOTO key on remote control to enter Picture browse mode.

(2).Picture zoom in/out function: Press Zoom key on remote control, press Quick forward key to zoom in the picture, press Quick back key to zoom out the picture.

7 inch Digital Photo Displayer User Manual

4. Features

(1).Insert the memory card with photo files to the memory card slot in Digital Photo Displayer to browse pictures.

(2).It is compatible with files from digital camera;

(3).It can play Mpeg1, Mpeg2, MP3, Mpeg4, avi, JPEG format file;

(4).Built-in speaker.

Brightness-----350cd/m2

Contrast-----300:1

Viewable angle-----60 Degree (H), 60 Degree (V)

Pixels-----480(H) X RGB X 234(V)

Viewable range-----154.08mm (H) X 86.58mm (V)

Power supply-----input: DC12V/1.5A

Usage environment---10~60degree

Dimension-----230mm X 162mm X 70mm

Weight-----605g

5. Function

- (1)Support CF, SD, MS, MMC, SM Flash card.
- (2)Support USB port (Note: this port can only read file storied in U disk, and can not read file storied in HD).
- (3)SLIDE SHOW function optional:
 - A: picture browsing with music background
 - B: single picture playing
 - C: single music playing
- (4)Picture can be rotated from different angle, zoom in or zoom out, and you can set the stay time.
- (5)Video and Audio output.
- (6)Multi-language operation interface.
- (7)Usage environment: 10~60degree, Environment humidity: 15~85%;
- (8)TFT monitor, the product body can rotate 90degree.

Note: When reset to factory setting, the display images will headstand. It is the normal default setting.

Packing list accessories:

- | | |
|---------------------------------|-------------|
| a) LCD monitor | 1PCS |
| b) Adapter | 1PCS |
| c) Remote control | 1PCS |
| d) AV cable | 1PCS |
| e) Double track earphone | 1PCS |
| f) User manual | 1PCS |

Changes may occur without prior notice.