

USER MANUAL



CD MP3 PLAYER

SY-933

Welcome

Welcome to Sytech! Thank you for purchasing the new Portable CD player SY-933CDMP3. Please read this manual carefully before operating your product and pay close attention to the precautions which are mentioned below. Store this user manual in a safe place for future reference



The Red book Digital Audio logo is present in all discs and players ensuring compatibility

 
CAUTION

This symbol refers to possible hazards to the machine or other objects


To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Location of Controls:

Top View

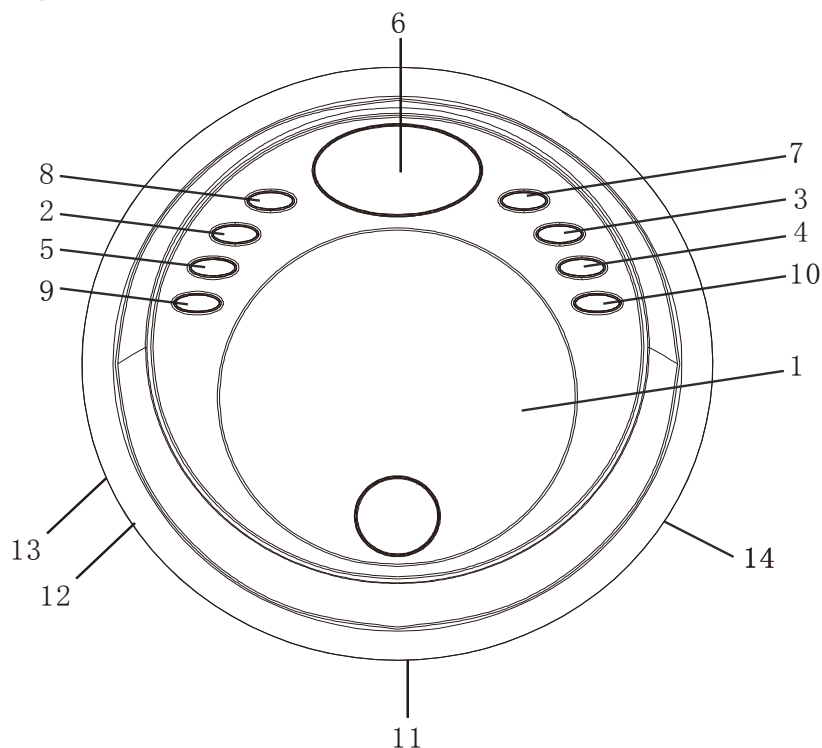

Side/Bottom View

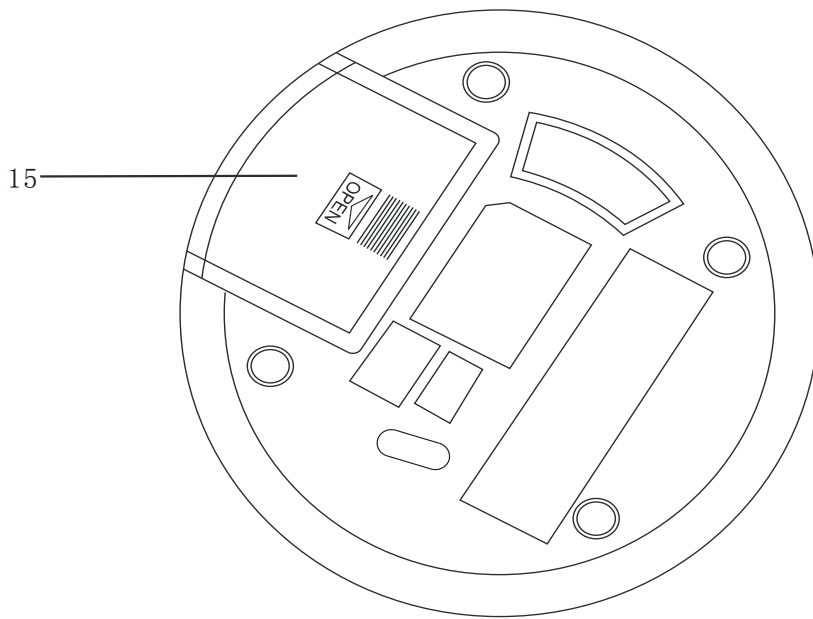 

- | | |
|--------------------------------|---------------------------|
| 1. CD Door | 9. VOL(Volume)-button |
| 2. SKIP/SEARCH ◀◀ (-)button | 10. VOL(Volume)+button |
| 3. SKIP/SEARCH ▶▶ (+)button | 11. CD Door Open switch |
| 4. MODE button | 12. PHONES jack |
| 5. PROG(Program)button | 13. LINE OUT jack |
| 6. LCD Display | 14. DC==4.5V IN jack (⊖⊕) |
| 7. PLAY/PAUSE ▶▶ button | 15. Battery compartment |
| 8. ■/OFF(Stop/Power Off)button | |

 
AC Operation

To operate the unit using the AC power, connect a 4.5V DC ,600mAh AC adaptor with center positive ⊖⊕ (not included) to the DC IN jack on the right side of the CD player and then to a wall outlet with AC 120V_,60Hz. The batteries are automatically disconnected when the AC adaptor used.

Battery Installation

Install or replace the batteries when the low battery power indicator "BATT" appears on the LCD display.

1. Open the battery compartment door on the bottom of unit by sliding it out and lifting.
2. Insert two (2)"AA"size batteries (not included) following the polarity markings on the bottom of the cabinet.
Alkaline batteries are recommended for a longer playing time.
3. Insert the battery door back into position.



Battery Precautions

Follow these precautions when using a battery in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment.
Reversed batteries may cause damage to the device.

3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of batteries in fire, batteries may explode or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.

Operation

CD/MP-3 Playback:

1. Slide the CD Door Open switch to the right to open the CD Door.
2. Place a CD or MP3-CD disc on the center spindle, with the printed side facing up.
3. Close the CD door.
4. Press the PLAY/PAUSE button to turn on the unit .The unit will play the first track automatically.
5. Press the VOL (Volume) +/- buttons to adjust the volume level as desired.
6. During playback:
 - A. Press the PLAY/PAUSE buttons to adjust volume level as desired.
 - B. Press the SKIP/SEARCH buttons to skip tracks.
 - C. Press and hold the SKIP/SEARCH buttons to fast forward to a specific section of the track.
7. To stop playback, press the STOP■ button. Press the STOP■ button again to turn the unit off.

Repeat/Random Playback:

CD:

During playback, press the MODE button repeatedly to set the play mode as:

1. Press the MODE button once: The REP (Repeat) icon will appear on the display and the unit will play the current track repeatedly until the STOP■ button is pressed.
2. Press the MODE button twice: The ALL REP (All repeated) icon will appear on the display. The unit will now play all the tracks in the current disc repeatedly until the STOP■ button is pressed.
3. Press the MODE button three times: The INTRO (Introduction) icon will appear on the display. Then press the SKIP/SEARCH▶▶ button and the unit will play the first 10 seconds of each track. Press the PLAY/PAUSE▶|| button to play the current track.
4. Press the MODE button four times: The RAND (Random) icon will appear on the display. The unit will play the tracks on the current disc in random order.

CD MP3:

During playback, press the MODE button repeatedly to set the play mode as :

1. Press the MODE button once: The REP (Repeat) icon will appear on the display and the unit will play the current track repeatedly until the STOP■ button is pressed.
2. Press the MODE button twice: The ALBUM REP icon will appear on the display. The unit will play all the tracks in the current album until the STOP■button is pressed.
3. Press the MODE button three times: The ALL ALBUM REP icon will appear on the display. The unit will play all the tracks in current disc repeatedly until the STOP ■ button is pressed.
4. Press the MODE button three times: The INTRO (Introduction) icon will appear on the display. Then press the SKIP/SEARCH▶▶ button and the unit will play the first 10 seconds of each track. Press the PLAY/PAUSE▶|| button to play the current track.
5. Press the MODE button four times: The RAND (Random) icon will appear on the display. The unit will play the tracks on the current disc in random order

Programmed Playback:

CD:

UP to 20 tracks can be programmed to play in a certain order. Please follow the instructions as follows:

1. In STOP mode, press the PROG. (Program) button and "P-01 00" will appear on the display whilst the "00" will be blinking.
2. Select the first specific track to be programmed by pressing the SKIP/SEARCH ►► or ◄◄ buttons.
3. Press the PROG. Button once again to store the selected track into the memory.
4. Repeat steps 2 and 3 until all the specific tracks stored into the memory.
5. Press the PLAY/PAUSE ►|| button to start playback.
6. When finished listening, press the STOP ■ button to stop. Press the STOP ■ button once again to turn it off.

CD MP3:

UP to 64 tracks can be programmed to play in a certain order. Please follow the instructions as follows:



1. In STOP mode, press the PROG. (Program) button and "P-01 01" will appear on the display whilst "01" will be blinking. (01=the number of Album).
2. Select the album number of the first specific track to be programmed by pressing the SKIP/SEARCH ►► or ◄◄ buttons then press the PROG. (Program) button.
3. Press the SKIP/SEARCH ►► or ◄◄ buttons to select the number of the specific track.
4. Press the PROG. Button again to store the selected track into the memory.
5. Repeat the same procedures until all the specific tracks are stored into the memory.
6. Press the PLAY/PAUSE ►|| button to start the playback.
7. When finished listening, press the STOP ■ button to stop. Press it again to erase the memory of the program. Press it three times to power off the unit.

Line Out Jack

Connect the unit to the external audio source by means of a 3.5mm stereo audio cable (Cable not included). Press the VOL (Volume)+/- buttons to adjust the output level.

CD care

  - Treat the disc carefully. Handle the disc only by its edges.
- Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers, etc. To the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning Kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched). When cleaning the disc, wipe in straight lines from the center of the compact disc to the outer edge of the disc. Never wipe in circular motions.

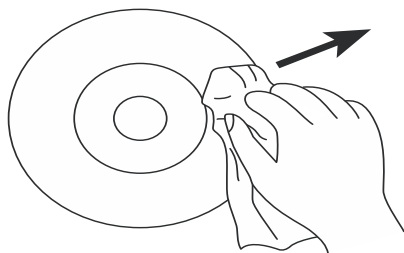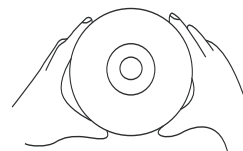

- This unit is designed to play only compact discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly. Compact Discs should be stored in their cases after each use to avoid damage.




- Do not expose compact discs to direct sunlight, high humidity, humidity, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the compact disc.
- Do not stick or write anything on either side of the compact disc, Sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- Caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.
- Never use abrasive detergents to clean the unit
- Do not wet or immerse the unit in water
- Do not wash under a running tap – this will damage the player.

Cleaning the CD lens

It is very important to clean the CD lens occasionally. Use a cotton swab and some alcohol (90°). Carefully clean the lens as shown in the image below. You can purchase a cleaning kit specifically for cleaning the CD lens.

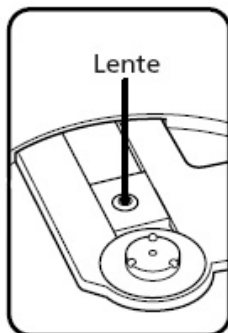

Troubleshooting

SYMPTOM	CAUSE	SOLUTION
Unit will not Turn on.	Weak or dead batteries.	Replace batteries.
	Batteries not inserted correctly.	Make sure the polarities are properly matched.
	AC adaptor not connected.	Check the connection of AC adaptor.
Disc will not play.	CD door not closed.	Close the CD door.
	Disc inserted incorrectly.	Reinsert disc correctly.
	Dirty or defective disc.	Try another disc.
	Moisture condensation on disc.	Wipe disc with soft cloth.
No sound from ear	Ear bud plug not inserted	Reinsert ear bud plug correctly.

bud	correctly.	
	VOLUME control set to minimum.	Increase volume.
	Weak batteries.	Replace batteries.
	Defective disc.	Try another disc.

Specifications

System: Digital Audio System CD.

Converter D/A: 1 Bit

Frequency sampling / 8 fs

Frequency response: 20-20,000Hz

Power source: DC 4.5V "AA" x 2 batteries

AC 110-240V. 50/60Hz.

Output power: 5.5mW.

Weight: Aprox: 213 g

Dimensions: 14.3 x 2.8 cm.

Accessories: AC adaptor; In-Ear neodymium earphones,

User manual.

Declaration of Conformity

Manufacturer Name: Satyatrade S. L.

Address: Pol.Ind.La Raya. C/ Guadalquivir, 2.

Camarma de Esteruelas, 28816 Madrid

Tel: 902 430 967

Fax: 91 8864285

NIF: B83254763

Manufacturing country: China

Description: Portable CD player

Sytech® SY-933CDMP3 complies with the following directives:

CE Standard: Directive 2004/108/EC

ROHS Standard: 2011/65/EU Restriction of Hazardous Substances

Signed: Ajeet Nebhwani Utamchandani

Sole Administrator

