



Spend a little Live a lot.



Spend a little Live a lot.

User Manual

TERRIS POWERBANK



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
Visit us at www.aldi.com.

AFTER SALES SUPPORT

GB 0800 / 328 6020
IRE 00800 / 4467 5888
info@globaltronicssupport.com

Model: PWB 654 Product code: 92652 11/2015

3
YEARS
WARRANTY




Contents

Overview	3
Product contents/device parts.....	4
General information.....	5
Reading and storing the user manual	5
Explanation of symbols	5
Safety	6
Proper use.....	6
Safety notes	7
First use.....	11
Checking the powerbank and product contents	11
Charging the powerbank.....	11
Charging electrical devices.....	13
Cleaning.....	14
Storage	16
Removing the built-in rechargeable battery.....	16
Technical data	18
Declaration of conformity.....	19
Disposal.....	19
Disposing of the packaging	19
Disposing of old devices	19
Warranty card.....	21
Warranty conditions.....	22

Product contents/device parts

- 1 Powerbank
- 2 Input 1 (USB)
- 3 Output 1 (micro USB)
- 4 On/Off button
- 5 Output 2 (USB)
- 6 Input 2 (micro USB)
- 7 LED
- 8 Output 3 (USB)

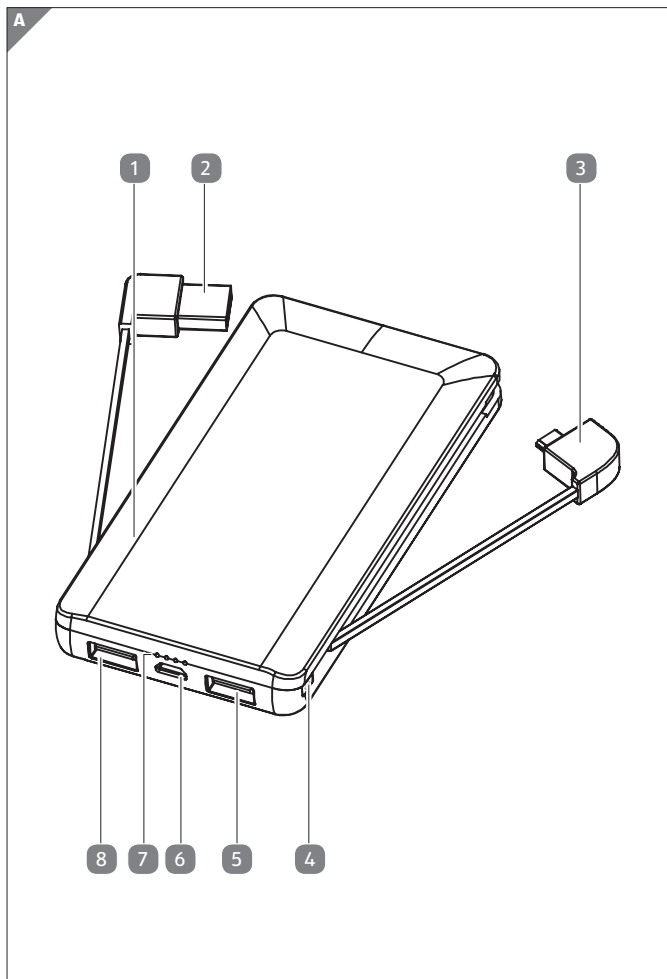

General information

Reading and storing the user manual



This user manual contains important information on start-up and handling.

Before using the powerbank, please read through the user manual carefully. This particularly applies for the safety notes. Failure to comply with the user manual may result in damage to the powerbank.

The user manual is based on the standards and rules in force in the European Union. When abroad, you must also observe country-specific guidelines and laws.

Store the user manual for future use. If you pass the powerbank on to third parties, please be absolutely sure to include this user manual.

This user manual can be downloaded in PDF format from our website www.gt-support.de.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the powerbank or on the packaging.

 **WARNING!**

This signal symbol/word designates a hazard with moderate degree of risk which may lead to death or severe injury if not avoided.

⚠ CAUTION!

This signal symbol/word designates a hazard with low risk that, if not avoided, may result in minor or moderate injury.

NOTICE!

This signal word warns against potential damages to property.



This symbol provides you with useful supplementary information on assembly or operation.



Declaration of conformity (see chapter “Declaration of conformity”): Products marked with this symbol meet all applicable Community regulations for the European Economic Area.

Safety

Proper use

The powerbank is designed exclusively for charging electrical devices in accordance with its technical data (e.g. mobile phone, touch pad, MP3 player). Do not use the powerbank to charge devices, which do not correspond to its technical data. The powerbank is only intended for private use and is not suitable for commercial purposes.

Only use the powerbank as described in this user manual. Any other use is considered improper and may result in damage to property.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety notes



Risk of injury!

Improper handling of the powerbank may result in injury and damage to property.

- Do not open the housing; instead, have a qualified professional perform the repairs. Contact a qualified workshop for this. Liability and warranty claims are waived in the event of repairs performed by the user, improper connection of the device or incorrect operation.
- Only parts that comply with the original device data may be used for repairs. Electrical and mechanical parts, which are essential for providing protection against sources of danger, are located in this device.

- Never submerge the powerbank in water or other liquids.
- Keep the powerbank away from open fire and hot surfaces.
- Never expose the powerbank to direct sunlight.
- Never use the powerbank in environments with explosive or flammable materials. There is a risk of fire and explosion.
- Never expose the powerbank to mechanical shocks.
- Only charge the powerbank by connecting it to the USB port of a computer or by connecting it with a charging adapter with a USB port. Do not use any other chargers.
- Never store the powerbank such that there is a risk of it falling in a tub or sink.
- Make sure that children do not insert any objects in the powerbank.

⚠ WARNING!

Danger for children and persons with impaired physical, sensory or mental capacities (e.g. partially disabled persons, older persons with reduced physical and mental capacities) or lack of experience and knowledge (e.g. older children).

- This powerbank may be used by children ages eight and over as well as persons with impaired physical, sensory or mental capacities or those lacking experience and knowledge if they are supervised or have been instructed in how to safely use the powerbank and have understood the risks associated with using it. Children must not play with the powerbank. Cleaning and user maintenance must not be performed by unsupervised children.
- Keep children under eight years of age away from the powerbank.
- Do not leave the powerbank unattended while in use.

- Do not allow children to play with the packaging wrapper. Children may get caught in it when playing and suffocate.

⚠ WARNING!

Danger of explosion!

Batteries may explode if they are excessively heated up.

- Do not heat up the powerbank and do not throw it in an open fire.
- Do not short circuit the powerbank.

NOTICE!

Risk of damage!

Improper handling of the powerbank may damage the powerbank.

- Never submerge the powerbank in water or other liquids.
- Keep the powerbank away from open fire and hot surfaces.
- Do not use the powerbank in the rain or in a wet environment. If the powerbank still gets damp, immediately dry it off.

First use

Checking the powerbank and product contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointy objects, you may quickly damage the powerbank.

- Be very careful when opening.
 1. Check to make sure that the delivery is complete.
 2. Take the powerbank **1** out of the packaging.
 3. Check whether the powerbank exhibits any damages. If this is the case, do not use the powerbank. Contact the manufacturer via the service address indicated on the warranty card.
 4. Remove the packaging material and all protective foils.

Charging the powerbank

Your powerbank is shipped in a partially charged state. Fully charge the powerbank before you use it for the first time.

The powerbank is designed to be used without additional cables. The built-in connector cable/input 1 (USB) **2** serves to charge the powerbank.

The built-in connector cable/output 1 (micro USB) **3** is intended for charging your tablet or smartphone.

If the device you would like to charge requires a different kind of connection, use your original charging cable and connect it with output 3 (USB) **8** or output 2 (USB) **5** of the powerbank.

1. Insert input 1 (USB) **2** in the USB port of a computer or mains adapter to charge the powerbank.

Alternatively, you can also connect a micro USB connector cable with the input 2 (micro USB) **6**.



The charge level is indicated by the illumination of the LEDs. If all four LEDs are illuminated, the powerbank is fully charged.

2. Disconnect input 1 (USB) **2** or input 2 (micro USB) **6** from the computer or the adapter when the charging process is complete.

Battery capacitance

Battery capacitance	Symbol
0 % to 25 %	1st LED flashes
26 % to 50 %	1st LED lights up, 2nd LED flashes*
51 % to 75 %	1st and 2nd LED light up, 3rd LED flashes*
76 % to 99 %	1st, 2nd and 3rd LED light up, 4th LED flashes*
Fully charged	All four LEDs light up

*LED only flashes during the charging process

If all four LEDs **7** are illuminated, the powerbank is fully charged.

Charging electrical devices

The powerbank has three outputs.

Output 1 **3** is equipped with a micro USB connector cable and is intended for charging your tablet or smart-phone. You can also connect this output with an “Apple Lightning to Micro USB Adapter”* to charge the next generation of your Apple products.

The powerbank is designed for the compact storage of the connected adapter in the housing.

If the device you would like to charge requires a different kind of connection, use your original charging cable and connect it with output 3 **8** or output 2 **5** of the powerbank.

If you would like to charge high-performance devices like tablets, use output 1 **3** or output 3 **8** as they are capable of supplying up to 2.1 A.

* not included in the product contents



If multiple outputs are used at the same time, the charging current is distributed among the individual outputs (max. 2.1 A).

1. Connect the powerbank **1** with the electrical device.
2. Push the On/Off button **4**. The LEDs light up and the powerbank will start charging the device.
3. Disconnect the powerbank from the electrical device to complete the charging process.

Cleaning

NOTICE!

Risk of short circuit!

Water that has penetrated the housing may cause a short circuit.

- Never immerse the powerbank in water.

- Make sure that no water penetrates the housing.

NOTICE!

Risk due to improper operation!

Improper handling of the powerbank may result in damage.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles, as well as sharp or metallic cleaning utensils such as knives, hard scrapers and the like. They could damage the surfaces.
 - Do not in any case put the powerbank in the dishwasher, washing machine, microwave or oven. It would be destroyed as a result.
1. Wipe the powerbank **1** off with a damp cloth.
 2. Then let the powerbank dry completely.

Storage

- Store the powerbank in a dry, cool location out of the reach of children.
- Do not store the powerbank near sources of heat or such that it is exposed to direct sunlight, e.g. behind glass panes in the car.
- Only store the powerbank in a discharged state. Deep discharge can irreversibly damage the rechargeable battery.
- Never store the powerbank for prolonged periods in a discharged state; instead, always be sure to recharge it.

Removing the built-in rechargeable battery



This device is operated with a rechargeable lithium polymer rechargeable battery that must be removed before disposing of the device.

⚠ WARNING!

Risk of injury!

You will need a certain amount of manual skill to remove the rechargeable battery. Otherwise, you could injure yourself.

- If you do not have any experience handling tools, have someone, who is capable of removing the rechargeable battery properly, do so.

⚠ WARNING!**Fire hazard!**

Improper handling of the rechargeable battery may cause it to overheat and explode.

- When removing the rechargeable battery, make sure it is not damaged.
- Do not disassemble the rechargeable battery once it is removed.
- Never short circuit the rechargeable battery. The contacts on the removed rechargeable battery must not be connected with metallic objects.
- Only remove the rechargeable battery in order to dispose of the device.

Removing the rechargeable battery will destroy the device. Do not put a dismantled device back into service.

1. Switch the powerbank **1** on with the On/Off button **4** and charge a connected device until the rechargeable battery is completely discharged.

2. Use a flat-headed screwdriver to separate the housing shells, which are snapped into one another.
3. Sever the two cables running from the circuit board to the rechargeable battery one after another.
4. Remove the rechargeable battery, which is fixed in place with adhesive strips, from the housing shell.
5. Remove the rechargeable battery. Make the rechargeable battery and the device available for suitable disposal separately.

Technical data

Model:	PWB 654
Article number:	92652
Rechargeable battery:	Lithium polymer rechargeable battery 3.7 V DC, 5200 mAh
Inputs:	5 V $\overline{=}$, 2.1 A
Outputs:	5 V $\overline{=}$, 2.1 A (max.)
Operating temperature:	0–35 °C
Weight:	135 g
Dimensions (W x D x H):	approx. 64 × 129 × 13 mm

As our products undergo continual development and improvement, technical changes and changes to the product design are possible.

This user manual can also be downloaded as a PDF file from our homepage **www.gt-support.de**.

Declaration of conformity



The product is guaranteed to conform with legally prescribed standards. For the complete declaration of conformity, visit the website **www.gt-support.de**.

Disposal

Disposing of the packaging



Dispose of the packaging separated into single type materials. Dispose of cardboard and carton as waste paper and foils via the recyclable material collection service.

Disposing of old devices

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



Old devices must not be disposed of with household waste!

If at some point it is no longer possible to use the powerbank, each consumer is **required by law to dispose of old devices separately from their household waste**, e.g. at a collection point in their community/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical

equipment is marked with the symbol shown here.

Batteries and rechargeable batteries must not be disposed of with household waste!



As the end user you are required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances* or not, to a collection point run by the communal authority or borough or to a retailer, so that they can be disposed of in an environmentally friendly manner. Dispose of the removed rechargeable battery at a collection point!

* labelled with: Cd = cadmium, Hg = mercury, Pb = lead

TERRIS

WARRANTY CARD POWERBANK

Your details:

Name _____

Address _____


 _____ E-mail¹ _____

Date of purchase * _____

* We recommend you keep the receipt with this warranty card.
¹for status reports for repair

Location of purchase _____


Description of malfunction:

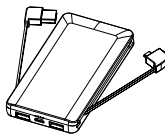

If **after contacting the manufacturer** you are requested to return the faulty product please return the completed warranty card together with it.

Globaltronics Service Center
c/o Bridges Logistics
PO Box 1125
Bromley
BR1 9TW
UNITED KINGDOM
Info@globaltronicsupport.com

AFTER SALES SUPPORT

 **GB 0800 / 328 6020**
IRE 00800 / 4467 5888

 **Info@globaltronicsupport.com**

MODEL: PWB 654 PRODUCT CODE:92652 11/2015

Free hotline

P051000228



GB

IRE

Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits in addition to your statutory rights:

Warranty period: **3 years** from date of purchase.

6 months for wear parts and consumables under normal and proper conditions of use (e.g. rechargeable batteries).

Costs: Free repair/exchange.
No transport costs.

Hotline: Free hotline.

ADVICE: Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.

In order to make a claim under the warranty, please send us:

- the faulty item together with the original purchase receipt and the completed warranty card.
- the faulty product with all components included in the packaging.

The warranty does not cover damage caused by:

-
- **Accident or unanticipated events** (e.g. lightning, water, fire).
 - **Improper use or transport.**
 - **Disregard of the safety and maintenance instructions.**
 - Other **improper treatment or modification.**

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights. In the event that a product is received for repair, neither the service company nor the seller will assume any liability for data or settings possibly stored on the product by the customer.
