

# GPS Watch Phone Tracker (V1.0\_GPS)



3-in-one design: Wrist Watch + Watch Phone + Invisiable GPS Tracker

Model No.: GPS-202C (GW101)



**UVI Group Corporation**  
SECURITY & AUTOMOTIVE  
永為國際集團有限公司

## [UVI Group Corporation](#)

11C, HaiYue Building, HuiJing Garden,  
Nanshan Technology Park, Shenzhen, China

**Tel: +86-755-83315079    Mobile: +86-1860-7550 6905**

**E-mail: [kc@uvigroup.com.cn](mailto:kc@uvigroup.com.cn)    Website: [www.uvi-group.com](http://www.uvi-group.com)**


Please read the user manual carefully before using and abide by it. Please refer to the real product if any appearance or color changes!

## 1. Accessory pictures



Please refer to the real product accessories.

## 2. Appearance

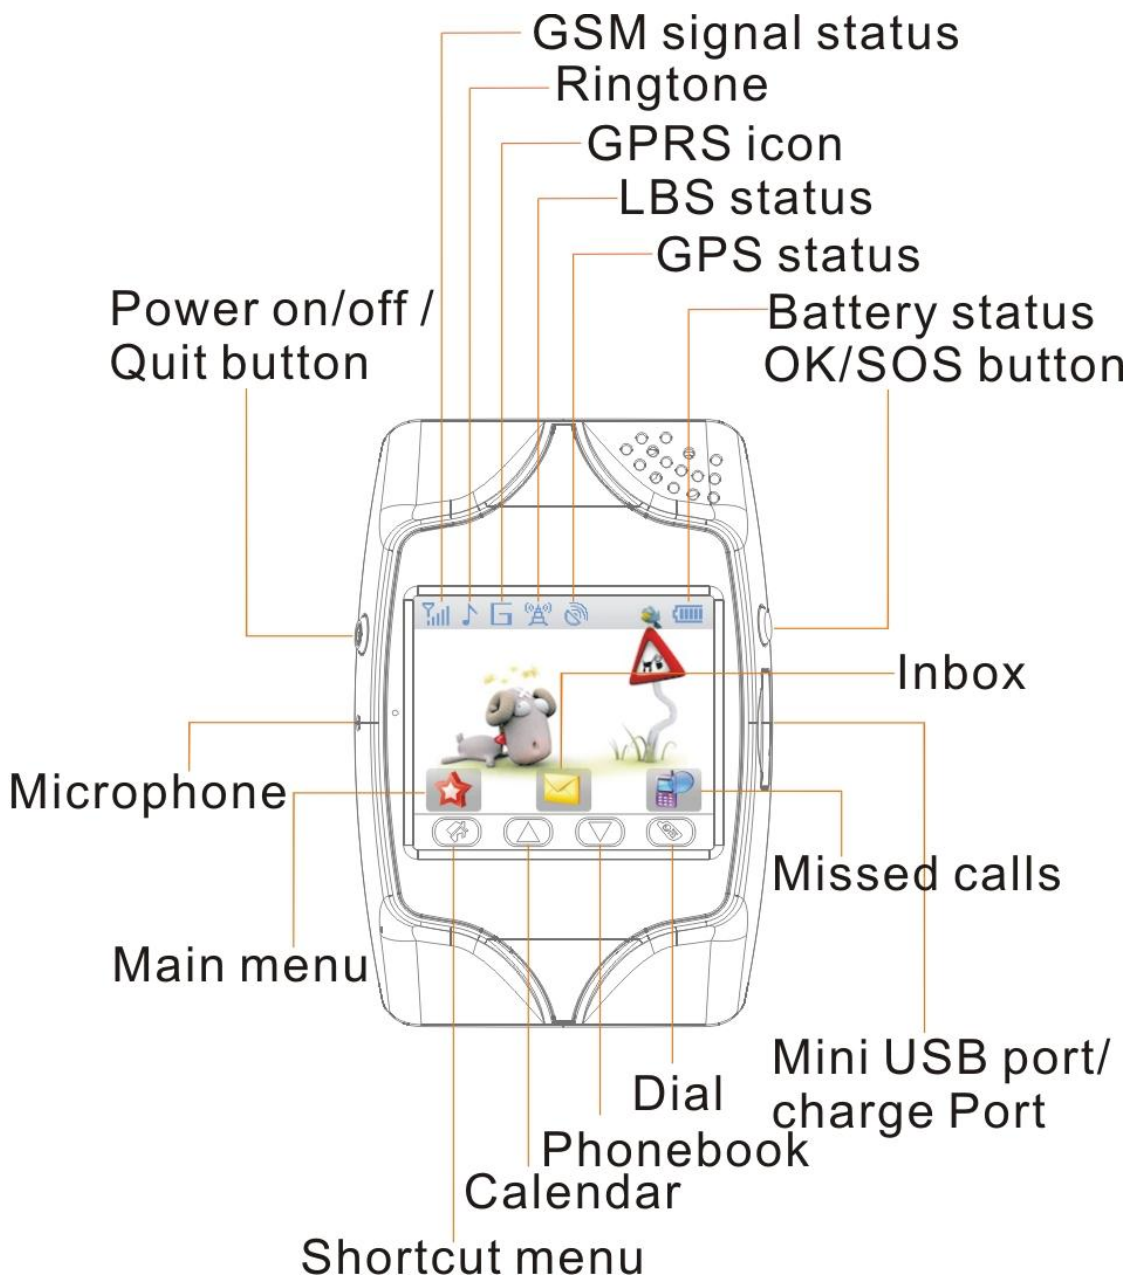

## 3. Operation manual

### 3.1 power on/off

#### 3.1.1 Power on

Long press the power button to turn on the mobile.

If there is prompt “insert the SIM card”, please power it off and check the SIM card.




#### 3.1.2 Power off

Long press the power key to turn off the mobile. The mobile is power off after displaying the flash on LCD.



## 3.2 UI Display

In the top of the screen is phone status information bar. It displays GSM signal status, ringtone, GPRS icon, battery status, LBS status etc.

In the middle of the screen displays the operator's name of the SIM card and time.

In the bottom of the screen displays  main menu,  inbox,  missed calls.

## 3.3 Make a call

In idle mode, tap the icon  on the bottom right corner to enter the dialing interface. Tap the numerical keypad by the stylus and enter the number you want to dial in the cursor flashing box, then tap  to make a call.


### 3.3.1 Dialing status

Tap the dial icon on the bottom of the screen and then input any number, it will enter the dialing status.

A flickering stick indicates the location of the cursor.

Pressing “\*” button twice to input “+”, which can be used to make international calls. Pressing “\*” button three times to input “P”, which can be used for automatic DTMF function (dial the extension number automatically), such as 075521097618P613.

### 3.3.2 Connecting status

In the dialing mode, tap : inputting numbers to enter the connecting status.

If the number is not in the phonebook, the number will be displayed; otherwise the name will be displayed.

Press hang-up button or tap cancel icon to end the call.

## 3.4 Receive a call

When there is an incoming call, the ring will be sound or the handset will vibrate.

If the number is not in the phonebook, the number will be displayed; otherwise the name.



Press OK button to receive a call, or tap “answer” on the left bottom screen; press hang-up button to refuse the call.

## 3.5 Conversations

### 3.5.1 Conversation process

- The conversation begins once connected.
- LCD display: number or the name, call duration

### 3.5.2 Function operation

- During the conversation, enter the conversation options, press hang-up button  to conclude it;
- Press  icon on the bottom middle of the screen to use the numeric buttons. If you make a new call, the current call will remain.
- Hang-up button: conclude the conversation

- In the function menu, you can press left functional button or tap “Back” to quit some menu options; short press hang-up button to return standby mode directly.

## 4. Function menus

### 4.1 My Buddy (my friends)

You can choose the following functions in “My friends”:

- Add friends: Add new entry to the SIM or the mobile
- Search friends: Search the linkman by his name
- Delete friends: Delete all the records on SIM or the mobile, or one by one.
- Copy friends: Copy contact information from SIM to mobile or from mobile to SIM.

### 4.2 Family number

It can be set 4 family numbers, which can be used for quick-dial or SOS emergency call.

Family numbers must be chosen in my friends group and can be added and modified pictures.

### 4.3 My message

#### 4.3.1 SMS

Enter into message menu interface from main menu interface.

Enter into message menu by taping “my message”.

If the memory is not full, the message will be saved into SIM card or mobile (user preset). If the memory is full, the early message will be deleted automatically when receiving new message.

#### 4.3.2 Write a message

After entering into write message interface, the operation way is under below:

When edit, directly use handwriting input or tap the input method on the bottom screen, select smart English (ABC, abc), number input, then its edit interface will change into the corresponding input method interface.

When write a message, tap “option”, there are the following operation: finish/insert numbers/names /input method to edit.

#### 4.3.3 Inbox

You can check the existed messages in inbox and reply, delete, forward or delete all.

#### 4.3.4 Outbox

You can check the messages you have saved in the out box which is already sent and send, edit, delete or delete all.

#### 4.3.5 Message settings

Enter into the sub menu, you can set the options under below:

- Memory status: view the memory status of the SIM card or the mobile.
- Default storage: SIM card or the mobile

## 4.4 Call log

Your mobile can store 10 recent missed numbers/ dialed numbers/ received numbers each. You can view it via menu


### 4.4.1 Delete call log

You can delete all the lists, or you can choose to delete the lists separately.

## 4.5 My settings

Main menu interface, enter into settings menu interface.

### 4.5.1 Touch-screen adjusting

You have to adjust the screen when you feel that the reaction is not correct. Click  center until there is a prompt that the adjustment has been completed. If it is not possible to adjust it well, please restore to factory default.

### 4.5.2 Phones settings

- Language: English and Chinese
- Time and date

Set the city: choose time zone

Time setting: set the current time and date

Time format: 12 hours or 24 hours

- Power on/off on time: you can set 4 different times
- Input method: choose a default input method
- LCD backlight: able to set five brightness
- Wallpaper: to choose main screen wallpaper

### 4.5.3 Ringtone settings

Ringtone setting :set incoming call ring, alarm clock ring, Power on/off ring, message ring and key tone ;

Ring volume : adjust the volume of ring, 1-7 level for options.

Reminding type: Select one way of ring: only ring, only vibration, vibration and ring, ring after vibration.

### 4.5.4 Recover factory settings

In this menu, input the phone lock password 1234, then the phone will restore to the factory settings.

## 4.6 Tools

### 4.6.1 Calendar

### 4.6.2 Alarm clock

There are 5 alarm clocks for you to choose. You can set it according to need. If certain one is not activated, there is no icon before it.

## 5. Settings and applications

### 5.1 Screen lock

Lock: In standby status, press power on/off button and then press OK button.

Unlock: In lock status, press power on/off button and then press OK button.

Note: The operation should be finished within 3s.

### 5.2 Switch interface

In standby status, short press power on/off button to switch interface among alarm clock interface, time

interface and main interface.

Short press power on/off button one time in time interface or two times in alarm clock interface to return the main interface.

### 5.3 Operation guide

Preparation before operation

- 1) Open the packaging box to check the device model number and the accessories, if have any question please contact your distributor.
- 2) To select SIM card: the watch phone needs to insert a GSM SIM card, please refer to the suggestion of distributor, or check it by yourself. To activate the GPRS function, please make sure the access method of the SIM card with your operator.
- 3) To install the SIM card: firstly open the back cover of the device, remove the battery, and put the model face of SIM card downward, insert it to SIM card slot correctly, then cover it .

Notice: If your SIM card has been approved to input SIM PIN, please refer to your user guide and cancel it. Please power off the device before inserting or removing the SIM card.

## 6. Operation

### 6.1 Charge

Keep the phone full charge in the first use.

6.1.1 Travel charger: Connect the phone with it and keep charge for 4 hours

6.1.2 USB charge: Connect the phone with PC by USB wire and keep charge for 4 hours

## 7. SOS emergency calls

Press SOS button for more than 3s to activate GPS automatically. Twice vibration will be happened, then the device will send a LBS locating sms to the specific number, e.g.:“Emergency call (LBS): nearby Bao’an Road Bao’an District, Shenzhen, Guangdong (22.571,113.876)”. Then it will dial the specific numbers by cycle, if there’s no response after all the number been dialed for three cycles, it will stop. After dialing the specific numbers, if GPS is located, the device will send an accurate address information, e.g.: “Emergency call(LBS): Bao’an Road, Bao’an District, Shenzhen, Guangdong (N22.57139,E113.87710)”. If GPS is not located in 5 minutes, the device will not send the accurate address information.

Notice: To realize this function, please set specific numbers first.

## 8 GPS locating function

GPS will be activated automatically with flashing Blue LED after power on the device, If GPS is located in 5 minutes, GPS LED keeps in solid bright and the device will send accurate address information to the server, then the GPS will be off automatically. If GPS is not located after 5 minutes, GPS will be off and the blue LED will in dark state.

GPS will turn off after 5 minutes if the device stays in the area without GPS signal cover.

At this time, GPS timing locating function will be activated. The default time interval is 30 minutes. The GPS will start updating data every 30 minutes.

## 9. Activate GPS and check location

When GPS is off, there are following three different ways to activate it

## 9.1 Online to activate GPS

GPS will be ON only during the setting time. If you want to activate GPS at any other time, you can click “Start GPS” on the platform. The device will start GPS after receiving the command from the platform.

**Notice:** Please ask your dealer for the platform website.

## 9.2 SMS to activate GPS

Only 4 specific numbers can check location via sms command. If using other numbers, the device will reply: Error:110.

### ● 9.2.1 Ask address information

SMS command: **DW**

If the command sent successfully, the device will reply LBS address information.

If GPS is located in 5 minutes, the device will reply accurate GPS address information. If it is not located in 5 minutes, then no accurate GPS address information.

Example of LBS address information: “Current location (LBS): nearby Bao’an Road Bao’an District, Shenzhen, Guangdong (22.571,113.876)”.

Example of GPS address information: “Accurate location (GPS):Bao’an Road, Bao’an District, Shenzhen, Guangdong (N22.57139,E113.87710)

### ●9.2.2 Ask coordinates

SMS command: **WHERE#**

Device will reply the coordinates:

e.g. Lat:N22.571285,Lon:E113.877115,Course:42.20,Speed:0.0740,DateTime:10-11-23 22:28:51

### ●9.2.3 Ask Google link

SMS command: **URL#**

Device will reply the google link.

e.g.: <DateTime:10-11-23 23:42:51>

<http://maps.google.com/maps?q=N22.571490,E113.877103>

**Notice:** GPS can only be located outdoor. It can not be located indoor, or the shade of tree, or tall building where has low GPS or even no GPS signal. While LBS can be located in anywhere has GSM signal.

## 10. Global locating platform checking

Device will send location information to the server after power on. You can check the device location via platform.

Please ask your dealer for the platform website.

LBS locating is not accurate. If you want accurate information, please activate GPS. The accurate range is around 10 meters.

**Notice:** The SIM card must be available for GPRS.