

INDEX



A

AC Drive

- Cover: 1-6
- Dimensions: 2-4
- External Parts and Labels: 1-6
- Heat Sink Fins: 1-6
- Input Mode Switch (Sink/Source): 1-6
- Introduction to DuraPulse GS3 AC drive: 1-3
- Keypad: 1-6
- Model Number Explanation: 1-5
- Mounting Screw Holes: 1-6
- Nameplate Information: 1-5
- Nameplate Label: 1-6
- Purpose of AC drives: 1-3
- Selecting the Proper Drive Rating: 1-3
- Serial Communication Port: 1-6
- Specifications: 1-7
- Terminal Diagrams: 2-13
- Terminals - braking: 1-6
- Terminals - control: 1-6
- Terminals - power: 1-6
- Ventilation Slots: 1-6

Accessories: 2-23, A-1a

- Braking Resistors: A-20
- Braking Units: A-20
- Configuration Cable: A-48
- Configuration Software: A-47
- EMI Input Filters: A-29
- Ethernet Interface: A-45
- External Accessories: 2-23
- Fans, Cooling: A-51
- Feedback Card: A-41
- Fuses and Fuse Kits: A-38
- Keypad Cables: A-48
- Miscellaneous: A-48
- Part Numbering: A-2
- Reactors, Line: A-2
- Remote Panel Adapter: A-49
- RF Filter: A-37
- Spare Keypad: A-48

AFD: 1-3

Air Flow and Minimum Clearances: 2-3

Ambient Conditions: 1-10, 2-2

Analog Input Parameter Setup Examples: 4-46

Auto Restart after Fault: 4-58

Auto-tune Procedure: 3-14

AVERTISSEMENT: w-2

B

Braking Resistor Dimensions: A-24

Braking Resistors: A-20

Braking Units: A-20

C

- Cable, Configuration: A-48
- Cables, Keypad: A-48
- Cables, PLC Communication: 5-14 thru 5-18, A-46
- Canadian Electrical Code (CEC): 2-12
- Capacitors, recharge: 6-2
- Circuit Connections: 2-11
- Circuit Protection Devices: 2-11, 2-12
- Communicating with AutomationDirect PLCs: 5-14
 - CLICK Modbus Programming: 5-23
 - Configure the PLC: 5-19
 - DirectLOGIC Modbus Programming: 5-38
 - Drive Parameters: 5-19
 - Ethernet Connection: 5-18
 - GS-EDRV(100) Ethernet Interface: 5-18
 - PLC Wiring Connections: 5-14
- Communicating with Third-party Devices: 5-67
 - ASCII: 5-67
 - command code: 5-70
 - Communication Protocol: 5-2, 5-69
 - data characters: 5-70
 - Data Format: 5-68
 - Entivity Studio: 5-67
 - KEPSERVER: 5-67
 - MODSCAN: 5-67
 - RTU: 5-67
 - Think & Do Live: 5-67
- Communications - Optimizing: 5-74
- Communications Delay: 5-74, 5-76, 5-77, 5-78
- Communications Parameters Summary: 5-2
- Configuration Software: A-47
- Contactors: 2-11, 2-23
- Contents, Table of: c-1
- Control Circuit Terminals: 2-20
- Control Wiring Diagrams: 2-21
- Cooling Fans: A-51
- Copy Keypad Function: 3-16
- cUL: 2-12

D

- DC Injection: 4-23
- Decrease Speed: 4-30, 4-34
- Default - Restore Parameters to Default: 4-74
- Digital Keypad: 3-2
- Dimensions: 2-4
- Display: 3-2

E

- Electronic Motor Operated Potentiometer: 4-34
- EMI (Electro Magnetic Interference): 2-12
- EMI Input Filters: A-29
- Enclosure: 2-3
- Encoders: A-42
- Environment: 1-10, 2-2
- Error Codes: 5-11
- Errors - Keypad: 6-7
- Errors - Serial Comm: 6-7
- Ethernet Interface: A-45
- Examples: Analog Input Parameter Setup: 4-46
- External Base Block: 4-30, 4-33
- External Fault: 4-30, 4-31, 4-76
- External Fault - Serial Comm: 4-76
- External Reset: 4-30, 4-31

F

- FA-ISOCAN: 5-16
- Fail-safe: w-1
- Fault Messages: 6-3
- Fault Reset - External DI: 4-30
- Fault Reset - Keypad: 3-3
- Fault Reset - Serial Comm: 4-76
- Fault-tolerant: w-1
- Feedback Card: A-41
- Filter - EMI: 2-23
- Filter - RF: 2-23
- Firmware Version: 4-2, 4-76
- Frequency Output: 2-20, 2-21, 4-39
- Function Keys: 3-3
- Fuses: 2-23
- Fuses and Fuse Kits: A-38

G

GFCI (Ground Fault Circuit Interrupt): 2-12
Grounding: w-3, 2-11
GS-EDRV(100): 5-18

H

Hazardous Voltage: 2-11
Heat: 2-3
High Risk Activities: w-1

I

Increase Speed: 4-30, 4-34
Input Disable: 4-30, 4-35
Inspection and Maintenance: 6-2
Installation: 2-3
Inverter: 1-3

J

Jog: 4-30, 4-32, 4-76

K

Keypad: 3-2
 Copy Keypad Function: 3-16
 Manual Keypad Control: 4-30, 4-32
 Write Parameter Settings to Drive: 3-18
 Write Parameter Settings to Keypad: 3-17
Keypad Cables: A-48
Keypad, Spare: A-48

L

LCD Display: 3-2
LED Indicators: 3-2
Line Start Lockout: 4-64
Lock Parameters: 4-74

M

Maintenance and Inspection: 6-2
Manual Keypad Control: 4-30, 4-32
Marques de commerce: w-2
Memory Addresses for Drive Status: 5-11
Memory Addresses for Parameters: 5-4
Minimum Clearances and Air Flow: 2-3
Miscellaneous Accessories: A-48
MODBUS RTU: 5-14, 5-19, 5-23, 5-38, 5-67
Motors - Single-phase: 2-12
Motors - Three-phase: 1-3, 2-12
Mounting Enclosure: w-3
Multi-Speed Bits: 4-30, 4-32

N

National Electrical Code (NEC): w-1, 2-12
National Electrical Manufacturers Association (NEMA): w-1, 1-2
National Fire Code: w-1
Network Adapter - FA-ISOCAN: 5-16
Notes: 1-2

O

Optimizing Communications: 5-74
Overload Protection: 4-57

P

- Parameters: 4-1
- Parameters - Communications Parameters Summary: 5-2
- Parameters - Detailed Listings: 4-15
 - 2nd Analog Input Gain - P4.16: 4-44
 - 2nd Analog Input Offset - P4.15: 4-43
 - 2nd Analog Input Offset Polarity - P4.14: 4-43
 - 2nd Source of Frequency Command - P4.13: 4-42
 - 2nd Source of Operation Command - P3.31: 4-39
 - Accel 1 to Accel 2 Frequency Transition - P1.08: 4-21
 - Accel S-Curve - P1.03: 4-19
 - Acceleration Time 1 - P1.01: 4-18
 - Acceleration Time 2 - P1.05: 4-20
 - Analog Input Gain - P4.03: 4-41
 - Analog Input Offset - P4.02: 4-40
 - Analog Input Offset Polarity - P4.01: 4-40
 - Analog Input Reverse Motion Enable - P4.04: 4-41
 - Analog Output Gain - P4.12: 4-42
 - Analog Output Signal - P4.11: 4-41
 - Auto Adjustable Accel/Decel - P6.06: 4-60
 - Auto Restart after Fault - P6.01: 4-58
 - Auto Voltage Regulation - P6.04: 4-59
 - Auto-torque Boost - P2.02: 4-25
 - Backlight Timer - P8.02: 4-72
 - Base-Block Time for Speed Search - P6.13: 4-62
 - Block Transfer Parameters - P9.11-P9.25: 4-75
 - Braking Voltage Level - P6.18: 4-64
 - Communication Address - P9.00: 4-73
 - Communication Protocol - P9.02: 4-73
 - Control Mode - P2.10: 4-28
 - DC Injection Current Level - P1.18: 4-23
 - DC Injection during Start-up - P1.20: 4-23
 - DC Injection during Stopping - P1.21: 4-23
 - Decel 2 to Decel 1 Frequency Transition - P1.09: 4-21
 - Decel S-Curve - P1.04: 4-20
 - Deceleration Time 1 - P1.02: 4-18
 - Deceleration Time 2 - P1.06: 4-20
 - Derivative Control (D) - P7.22: 4-69
 - Derivative Filter Time Constant - P7.24: 4-70
 - Desired Current - P3.17: 4-38
 - Desired Frequency - P3.16: 4-38
 - Desired Frequency 2 - P3.20: 4-38
 - Electronic Thermal Overload Relay - P6.00: 4-57
 - Encoder Control Output Limit - P10.04: 4-79
 - Encoder Loss Detection - P10.05: 4-79
 - Encoder Pulses Per Revolution - P10.00: 4-78
 - Encoder Type Input - P10.01: 4-78
 - Fault Records - P6.31-P6.36: 4-65
 - Feedback Signal Loss Detection Time - P7.26: 4-70
 - Firmware Version - P9.39: 4-76
 - Frequency Output (FO) Scaling Factor - P3.30: 4-39
 - Frequency Scale Factor - P8.01: 4-72
 - GS Series Number - P9.41: 4-77
 - Input Terminal for PID Feedback - P7.00: 4-66
 - Integral Control - P10.03: 4-78
 - Integral Control (I) - P7.21: 4-69
 - Jog Speed: 4-55
 - Keypad PID Setpoint - P7.10: 4-68
 - Line Start Lockout - P6.30: 4-64
 - Loss of AI2 Signal (4-20mA) - P4.05: 4-41
 - Lower Bound of Output Frequency - P6.16: 4-63
 - Manufacturer Model Information - P9.42: 4-77
 - Maximum Allowable Power Loss Time - P6.12: 4-62
 - Maximum Speed Search Current Level - P6.14: 4-62
 - Mid-point Frequency - P2.04: 4-26
 - Mid-point Voltage - P2.05: 4-26
 - Minimum Output Frequency - P2.06: 4-26
 - Minimum Output Voltage - P2.07: 4-26
 - Momentary Power Loss - P6.02: 4-58

(Parameters - Detailed Listings – continued)

- Motor Auto Tune - P0.05: 4–16
- Motor Base Frequency - P0.02: 4–15
- Motor Base RPM - P0.03: 4–16
- Motor Line-to-Line Resistance R1 - P0.06: 4–17
- Motor Maximum RPM - P0.04: 4–16
- Motor Nameplate Amps - P0.01: 4–15
- Motor Nameplate Voltage - P0.00: 4–15
- Motor No-Load Current - P0.07: 4–17
- Multi-Function Inputs (DI) - P3.01-P3.10: 4–29
- Multi-Function Output (RO) - P3.11: 4–36
- Multi-Function Outputs (DO) - P3.11-P3.14: 4–36
- Multi-Speeds - P5.01-P5.15: 4–56
- Over-current Stall Prevention during Accel - P6.10: 4–61
- Over-current Stall Prevention during Operation - P6.11: 4–61
- Over-Torque Detection Level - P6.08: 4–60
- Over-Torque Detection Mode - P6.07: 4–60
- Over-Torque Detection Time - P6.09: 4–60
- Over-Voltage Stall Prevention - P6.05: 4–59
- Over-Voltage Stall Prevention Level - P6.17: 4–64
- Parameter Copy - P9.40: 4–77
- Parameter Lock - P9.07: 4–74
- PID Deviation Level - P3.18: 4–38
- PID Deviation Time - P3.19: 4–38
- PID Feedback Gain - P7.03: 4–67
- PID Feedback Loss Operation - P7.27: 4–71
- PID Feedback Loss Preset Speed - P7.28: 4–71
- PID Multi-setpoints - P7.11-P7.17: 4–68
- PID Output Frequency Limit - P7.25: 4–70
- PID Setpoint Gain - P7.06: 4–67
- PID Setpoint Offset - P7.05: 4–67
- PID Setpoint Offset Polarity - P7.04: 4–67
- PID Setpoint Source - P7.02: 4–67
- Proportional Control - P10.02: 4–78
- Proportional Control (P) - P7.20: 4–69
- PV 100% Value - P7.01: 4–67
- PWM Carrier Frequency - P2.08: 4–27
- Restore to Default - P9.08: 4–74
- Reverse Operation Inhibit - P6.03: 4–58
- Select Method for 2nd Accel/Decel - P1.07: 4–21
- Serial Comm Direction Command - P9.28: 4–76
- Serial Comm External Fault - P9.29: 4–76
- Serial Comm Fault Reset - P9.30: 4–76
- Serial Comm JOG Command - P9.31: 4–76
- Serial Comm RUN Command - P9.27: 4–76
- Serial Comm Speed Reference - P9.26: 4–76
- Skip Frequency 1 - P1.10: 4–22
- Skip Frequency 2 - P1.11: 4–22
- Skip Frequency 3 - P1.12: 4–22
- Skip Frequency 4 - P1.13: 4–22
- Skip Frequency 5 - P1.14: 4–22
- Skip Frequency Band - P1.17: 4–22
- Slip Compensation - P2.01: 4–25
- Source of Frequency Command - P4.00: 4–40
- Source of Operation Command - P3.00: 4–29
- Start-point for DC Injection - P1.22: 4–23
- Stop Methods - P1.00: 4–18
- Time Out Detection - P9.04: 4–74
- Time Out Duration - P9.05: 4–74
- Torque Compensation Time Constant - P2.03: 4–25
- Transmission Speed - P9.01: 4–73
- Trim Mode Select - P4.18: 4–45
- Trim Reference Frequency - P4.17: 4–44
- Upper Bound for Integral Control - P7.23: 4–70
- Upper Bound of Output Frequency - P6.15: 4–63
- User Defined Display Function - P8.00: 4–72
- Volts/Hertz Settings - P2.00: 4–24
- Parameters - Lock: 4–74
- Parameters - Memory Addresses: 5–4
- Parameters - Restore to Default Settings: 4–74

(P – continued)

- Parameters - Summary: 4–2
 - Analog Parameters: 4–7
 - Communications Parameters: 4–12
 - Digital Parameters: 4–5
 - Display Parameters: 4–12
 - Encoder Feedback Parameters: 4–14
 - Motor Parameters: 4–2
 - PID Parameters: 4–11
 - Presets Parameters: 4–8
 - Protection Parameters: 4–9
 - Ramp Parameters: 4–3
 - Volts/Hertz Parameters: 4–4
- Parameters available in firmware versions: 4–2
- PID Disable: 4–30, 4–35
- PID Parameters: 4–66
- PID Setpoint Bits: 4–30, 4–32
- PLC - compatible ADC PLC modules: B–2
- PLC - connections to ADC PLC modules: B–8
- PLC, GS3 communicate with ADC: 5–14
 - CLICK Modbus Programming: 5–23
 - DirectLOGIC Modbus Programming: 5–38
- Power Circuit Terminals: 2–13
- Power Supply: 2–23
- Power Wiring Diagrams: 2–18
- Programming the AC Drive: 3–5

Q

- Quickstart: 3–6

R

- Reactor: 2–23
- Reactors, Line: A–2
 - Wiring Connections: A–17
- Recharge capacitors: 6–2
- Remote Panel Adapter: A–49
- Reset Speed to Zero: 4–30, 4–35
- Resistor - braking: 2–23
- Revision History of User Manual: h–1
- RF Filter: A–37

S

- Safety Codes: w–1, 2–12
 - Canadian Electrical Code (CEC): 2–12
 - cUL: 2–12
 - National Electrical Code (NEC): w–1, 2–12
 - National Electrical Manufacturers Association (NEMA): w–1
 - National Fire Code: w–1
 - UL: 2–11, 2–12
- Safety Information: w–1, w–3
- Second Accel/Decel Time: 4–30, 4–33
- Serial Communication Port: 1–6, 4–76, 5–14, 5–67
- Short Circuit Withstand: 1–7, 2–12
- Software, Configuration: A–47
- Source Select: 4–30, 4–35
- Special Symbols: 1–2
 - Notes: 1–2
 - Warnings: 1–2
- Specifications
 - Control Circuit Terminals: 2–20
 - Main Circuit Wiring Terminals: 2–17
- Specifications, GS3 AC Drives: 1–7
- Speed Hold: 4–30, 4–34
- Status Addresses: 5–11
- Status Monitor: 5–11
- Status of the Drive - Keypad Display: 3–4
- Storage Conditions: 2–2
- Supplemental Publications: 1–2
 - National Electrical Manufacturers Association (NEMA): 1–2

T

- Table of Contents: c–1
- Technical Support: 1–2
- Terminal Diagrams: 2–13
- Trademarks: w–1
- Troubleshooting: 6–3

U

UL: 2-11, 2-12

Underwriters Laboratories, Inc.: 2-12

User Manual Revision History: h-1

V

VFD: 1-3

W

Warning Messages: 6-7

Warnings: w-1, w-3, 1-2, 2-11

Warranty Information: w-1

Wiring Diagrams - control circuit: 2-21

Wiring Diagrams - power circuit: 2-18

Wiring Specifications: 2-17

Wiring Warnings: w-3, 2-11

Wiring; 1st/2nd Source Select: 4-35

Wiring; Braking Resistors: 2-18

Wiring; Braking Units: 2-18

Wiring; Digital Output: 4-36

Wiring; EMI Filters: A-36

Wiring; External Fault: 4-31

Wiring; Feedback Card GS3-FB: A-42

Wiring; Line Reactors: A-17

Wiring; Multi- Speed / PID SP: 4-32

Wiring; Relay Output: 4-36

Wiring; RF Filters: A-37

Wiring; Start/Stop/Direction: 4-29

Write Parameter Settings to Drive: 3-18

Write Parameter Settings to Keypad: 3-17

**BLANK
PAGE**