

# ES-20 Orbital Shaker-Incubator



Operating Manual Certificate

for versions: V.2AD V.2AE

# Contents

- 1. Safety Precautions
- 2. General Information
- 3. Getting Started
- 4. Operation
- 5. Specifications
- 6. Maintenance
- 7. Warranty and Claims
- 8. Declaration of Conformity

# 1. Safety Precautions

The following symbols mean:



**Caution!** Make sure you have fully read and understood the present Manual before using the equipment. Please pay special attention to sections marked by this symbol.

#### GENERAL SAFETY

- · Use only as specified in the operating manual provided.
- The unit should be saved from shocks and falling.
- The unit must be stored and transported only in a horizontal position (see marking on the package).
- After transportation or storage keep the unit under room temperature for 2-3hrs before connecting it to the electric circuit.
- Use only cleaning and decontamination methods recommended by the manufacturer.
- Do not make modifications in design of the unit.

#### ELECTRICAL SAFETY

- Connect only to electric circuit with voltage corresponding to that on the serial number label.
- Ensure that the electric circuit switch and the plug are easily accessible during use.
- Disconnect the unit from the electric circuit before moving.
- · Disconnect the power cord plug from power socket to turn off the unit.
- After moving the unit check the shaker control cable connections.
- Do not plug the unit into an ungrounded power socket, and do not use an ungrounded extension lead.
- If liquid penetrates into the unit, disconnect it from the electric circuit and have it checked by a repair and maintenance technician.

#### DURING OPERATION

• Do not impede the platform motion.

- Do not operate the unit in premises with aggressive or explosive chemical mixtures.
- Do not disconnect the shaker control cable when the unit is switched on.
- Do not operate the unit if it is faulty or has been installed incorrectly.
- Do not use outside laboratory rooms.
- Do not place a load exceeding the maximum load value mentioned in the Specifications section of this Manual.

#### **BIOLOGICAL SAFETY**

• It is the user's responsibility to carry out appropriate decontamination if hazardous material is spilt on or penetrates into the equipment.

# 2. General Information

The ES-20 is a compact desktop Orbital Shaker-Incubator used for mixing of biological liquids as well as for the incubation and cultivation of biological liquids according to the program set by the operator.

Built-in microprocessor thermocontroller provides constant temperature control in the incubator chamber and allows you to set and maintain the temperature inside the incubator from 5°C above ambient. Forced heated air circulation inside the transparent plexiglass chamber guarantees even temperature distribution. Dismountable construction makes transportation easy.

Orbital shaking is controlled by the digital tachometer (rpm) and digital timer regardless of the temperature. The unit is equipped with the direct-drive system ensuring most reliable stable long-time operation (up to 30 days non-stop mixing).

The ES-20 is easy to operate. The two-line LCD display shows both set and actual values for temperature, time and speed.

The device consists of thermal regulation and control block, shaking block and a plexiglass chamber.

The following elements are located on the front panel:

- power switch (fig. 1/1);
- display (fig. 1/2);
- control buttons (fig. 1/3).

The following elements are located on the rear panel:

- shaking block control cable (fig. 1/4);
- socket for connecting the power cord (fig. 1/5);
- fuse holder (fig.1/6).

Five interchangeable platform types allow using the shaker for:

- growing cell cultures in flasks and other laboratory glassware;
- extracting tissue samples at physiological temperatures;
- other sample preparation processes.

The device is applicable in all the areas of medicine, biotechnology and microbiology laboratory research.

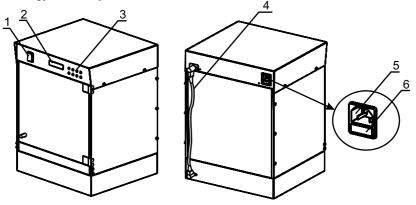


Fig.1 Unit construction

# 3. Getting started

3.1. **Unpacking.** Remove packing materials carefully and retain them for future shipment or storage of the unit. Examine the unit carefully for any damage incurred during transit. The warranty does not cover in-transit damage.

#### 3.2. Complete set. Package contents:

#### Standard set

-	- ES-20 Orbital Shaker-Incubator	1 piece
-	- spare fuse (inside fuse holder)	1 piece
-	- power cord	1 piece
-	- control cable	1 piece
-	- Operating Manual; Certificate	1 сору
-	- ES-20 Orbital Shaker-Incubator Assembling instruction	1 сору
	Optional accessories	
-	UP-12 platform <b>0</b>	on order
-	PP-4 platform <b>2</b>	on order
-	P-12/100 platform	on order
-	P-6/250 platform <b>9</b>	on order
-	• P-16/88 platform <b>9</b>	on order
-	HB-200 holder 🛛	on order




#### 3.3. Set up:

- assemble the unit using the enclosed ES-20 Orbital Incubator Shaker Assembling Instruction as a guide;
- place the unit on the horizontal even working surface;
- remove protective film from the display;
- connect the shaker control cable (fig.1/4) into the corresponding sockets on the rear of thermostatic and shaking blocks;
- Plug the mains cable into the socket on the rear (fig.1/5) and position the unit so that there is easy access to the power switch and connector.

#### 3.4. Platform installation:

- Install the platform by inserting the pins on the bottom side of the platform into the holes on the supporting platform on the shaker.

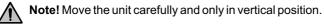

# 4. Operation

- 4.1. Connect the unit to a grounded power socket. Set the **Power** switch to position I (ON).
- 4.2. The display will turn on with the upper line (set p.) showing the previously set time, speed and temperature and the lower line (actual p.) showing current readings of the same parameters (STOP time, 000 rpm, incubator temperature °C, which automatically starts rising according to the temperature set in the upper line).

#### Setting the parameters

Use the readings in the upper line of the display (set p.), while setting the parameters required.

#### Setting time (Time)

4.3. Using the ▲ and ▼ Time keys (Fig. 2/1) set the required working time interval in hours and minutes (increment - 1 min). Pressing the key for more than 3 sec will increase the increment.

#### Setting speed (RPM)

4.4. Using the ▲ and ▼ RPM keys (Fig. 2/2) set the required shaking speed (increment 10 RPM). Pressing the key for more than 3 sec will increase the increment.

#### Setting temperature(Temp.°C)

4.5. Using the ▲ and ▼ Temp. keys (Fig. 2/3) set the required temperature (increment 0.1°C). Pressing the key for more than 3 sec will increase the increment.

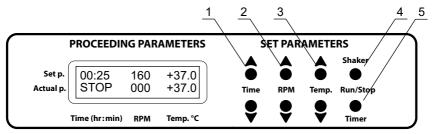


Fig.2 Control panel



**Caution!** The chamber heating can be turned off only by setting the temperature value below 25  $^{\circ}$ C (the display will show OFF - Temp. $^{\circ}$ C - Set p.).

The set parameters can also be changed during operation.

#### **Program execution**

- 4.6. Place samples on the platform.
- 4.7. Press the Shaker-Run/Stop key (Fig. 2/4). The platform will start rotating and the timer indicator will start counting up the time interval (with 1 min precision).
  Note! If the rotation speed is set to zero, pressing Shaker-Run/Stop key starts the timer but the platform does not move.
- 4.8. After finishing the program (after the set time elapses) the platform motion will stop and the timer will be showing the flashing reading STOP accompanied by the repetitive sound signal until the **Shaker-Run/Stop** key is pressed.
- Caution! At the end of the set time period the platform movement is stopped automatically, but the heating can be stopped ONLY manually by reducing the temperature using the ▼ Temp. key (Fig. 2/3 the lower key) till the OFF sign appears in the upper line of the display.
- 4.9. If the working time is not set (the timer indicator in the upper line shows 00:00), pressing the **Shaker-Run/Stop** key will start continuous operation of the unit (with countdown timer in the lower line and indication OFF in the upper line) until the **Shaker-Run/Stop** key is pressed again.
- 4.10. The timer can be reset during operation if required. Press the**Timer-Run/Stop** key twice (Fig. 2/5) (first to stop the timer, second to restart the timer).
- 4.11. The platform motion can be stopped at any time by pressing the Shaker-Run/Stop key. In this case the program realisation and the platform motion will stop and the timer will switch into the STOP mode saving previously set time. Press the Shaker-Run/Stop key to repeat the operation with the same time and speed.
- 4.12. After finishing the operation set the power switch, located on the rear panel of the unit, in position O (Off) and disconnect the external power supply with from electric circuit.

# 5. Specifications

The unit is designed for operation in cold rooms, incubators and closed laboratory rooms at ambient temperature from  $+4^{\circ}$ C to  $+40^{\circ}$ C and maximum relative humidity 80% for temperatures up to 31°C decreasing linearly to 50% relative humidity at 40°C.

5.1. Temperature setting range	+25°C + 42°C
5.2. Temperature control range	5°C above ambient + 42°C*
5.3. Temperature setting resolution	0.1°C
5.4. Speed control range	
5.5. Maximum load	2.5 kg
5.6. Orbit	10 mm
5.7. Digital time setting	1 min – 96 hrs (increment 1 min)
5.8. Continuous operating time, not more	
Recommended interval between operati	on sessions not less than 8 hours
5.9. Display	2x16 signs, LCD
5.10. Dimensions of the inner chamber	305x260x250 mm
5.11. Dimensions	340x340x435 mm
5.12. Current/power consumption230 V,	0.7 A / 160 W or 120 V, 1.6 A / 170 W
5.13.Voltage	230 V, 50/60 Hz or 120 V, 50/60 Hz
5.14. Weight**	
* In cold room the unit provides stable thermo	static temperature control up to 30°C

 In cold room the unit provides stable thermostatic temperature control up to 30°C above room temperature.

Optional accessories	Description	Catalogue number
PP-4	Metallic flat platform with non-slip rubber mat. Working dimensions 215 x 215 mm	BS-010108-BK
UP-12	Universal platform with adjustable bars for different types of flasks, with non-slip rubber mat. Working dimensions 265 x 185 mm	BS-010108-AK
HB-200	Additional holder for UP-12	BS-010108-FK
P-12/100	Platform with clamps for flasks, 100 ml (12 places) Working dimensions 250 x 190 mm	BS-010108-EK
P-6/250	Platform with clamps for flasks, 250 ml (6 places) Working dimensions 250 x 190 mm	BS-010108-DK
P-16/88	Platform with spring holders for up to 88 tubes up to 30 mm diameter (e. g. 10 ml, 15 ml, 50 ml tubes) Working dimensions 275 x 205 x 75 mm	BS-010116-BK

\*\* Accurate within ±10%.

Biosan is committed to a continuous programme of improvement and reserves the right to alter design and specifications of the equipment without additional notice.

## 6. Maintenance

- 6.1. If the unit requires maintenance, disconnect the unit from the electric circuit and contact Biosan or your local Biosan representative.
- 6.2. All maintenance and repair operations must be performed only by gualified and specially trained personnel.

#### 6.3. Cleaning and Care

The door and side panels are made of organic glass (poly methyl methacrylate Plexiglass®) and are prone to scuffing and scratches if improperly cleaned. Care during cleaning of the door and side panels is recommended to reduce wear of the Plexiglass surface.



**Caution!** Clean the door and side panels with a mild detergent; never use organic based compounds, pure alcohol, alcohol-containing cleaners (more than 15%) or Ammonia containing cleaners for Plexiglass! Do not use abrasive pads or cleansers.

For decontamination, it is recommended to use a special DNA/RNA removing solution (e.g. DNA-Exitus PlusTM, RNase-Exitus PlusTM).

The table below shows the interreaction of Plexiglass with ethyl alcohol and other solutions.

Liquid	Interreaction with Plexiglass
DNA-Exitus PlusTM	No reaction.
RNase-Exitus PlusTM	No reaction.
Ethyl alcohol 10-15%	No reaction.
Ethyl alcohol 30 %	Limited reaction.
Ethyl alcohol Pure	Full reaction. Do not use!
$H_2O_2$ 6%	No reaction.

Standard ethanol (75%) or other cleaning agents recommended for cleaning and decontamination of the stainless steel surfaces.

#### 6.4. Fuse replacement

Disconnect the unit from the mains. Disconnect the power cable from the socket on the rear of the shaker-incubator. Open the fuse holder (fig.1/6). Replace with the correct fuse (for 230 V, - T1 A, for 120 V - T2 A).

## 7. Warranty and Claims


- 7.1. The Manufacturer guarantees the compliance of the unit with the requirements of Specifications, provided the Customer follows the operation, storage and transportation instructions.
- 7.2. The warranted service life of the unit from the date of its delivery to the Customer is 24 months. Contact your local distributor to check availability of extended warranty.
- 7.3. If any manufacturing defects are discovered by the Customer, an unsatisfactory equipment claim shall be compiled, certified and sent to the local distributor address. Please visit www.biosan.lv, Technical support section to obtain the claim form.
- 7.4. The following information will be required in the event that warranty or postwarranty service comes necessary. Complete the table below and retain for your records.

Model	ES-20 Orbital Shaker-Incubator
Serial number	
Date of sale	

# 8. Declaration of Conformity

# **Declaration of Conformity**

Equipment name:	ES-20	
Type of equipment:	Orbital Shaker-Incubator	
Directive:	EMC Directive 2004/108/EC	
	Low Voltage Directive 2006/95/EC	
	RoHS 2011/65/EC	
	WEEE 2002/96/EC & 2012/19/EU	
Manufacturer:	SIA BIOSAN	
	Ratsupites 7, build.2, Riga, LV-1067, Latvia	
Applied Standards: EN 61326-1:		
	Electrical equipment for measurement, control and laboratory use EMC requirements. General requirements	
	EN 61010-1:	
	Safety requirements for electrical equipment for	
	measurement, control and laboratory use. General	
	requirements	
	EN 61010-2-010:	
	Particular requirements for laboratory equipment for the heating of materials	
	EN 61010-2-051:	
	Particular requirements for laboratory equipment for mixing	
	and stirring	
Ve declare that this pro	oduct conforms to the requirements of the above Directive(s)	
	( )	
A	No.	
p	CAUCO	
Svetlana Bank	Signature	
Managing dire		
	12.06.2013	

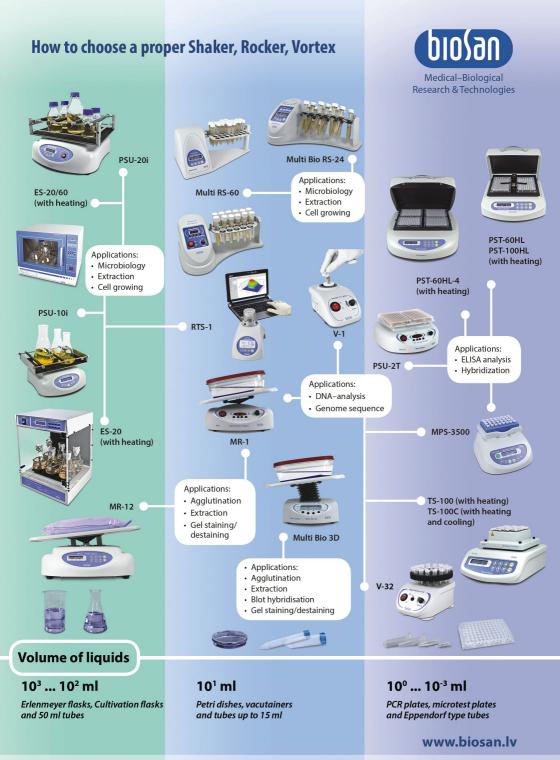

Biosan, Sia; Ratsupites 7, build. 2, Riga, LV-1067, Latvia; Phone: +371 674 261 37; Fax: +371 674 281 01; E-mail: marketing@biosan.lv