

SYLVANIA

SDVD9805



USER'S MANUAL

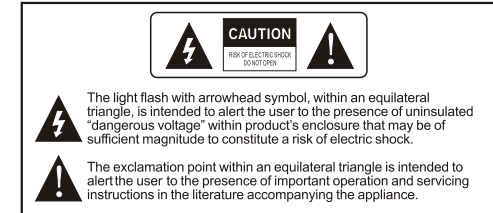 


Table Of Contents

Safety Precaution	1
Package	3
Main Features	3
Overview of Unit A/B	4
System Connection	5
The Remote Control unit A	11
The Remote Control unit B	12
Basic operation	14
System Setup	18
SD/MMC/USB Main Menu	22
Specification	27
Troubleshooting	28

Safety Precaution

Thank you for choosing our portable DVD player. It includes two DVD players. The unit applies the latest state of art electronics and is designed for use at home, in hotels and in offices etc for relaxation. The compact size makes carrying easier as well as installation. Please read the manual carefully prior to use and keep it well for future reference.



Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use this unit near water. Do not place over the unit any container with liquid inside.
- 3) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 4) Unplug this unit during lightning storms or when unused for long time.
- 5) **About Cleaning:** Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 6) Only use accessories specified by the manufacturer.
- 7) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
- 8) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Package


9" DVD Players	2
Remote Control with battery	2
AV Cable (DVD to DVD)	1
AC/DC Power Adapter	2
Cigarette Lighter Adapter	1
User Manual	1
Earphone	2
AV Cable (DVD to TV)	2
Mounting Straps	2

Main Features

- High brightness color 9" LCD screen
- Compatible with disc of DVD, VCD, MP3, CD, JPEG, etc
- Built-in stereo speaker
- Built-in rechargeable Lithium polymer battery
- Support PAL or NTSC system
- Support Multi-language OSD, speed forward/backward, repeat function
- Zoom in / out function

Overview of Unit A/B

 
Overview of Unit A

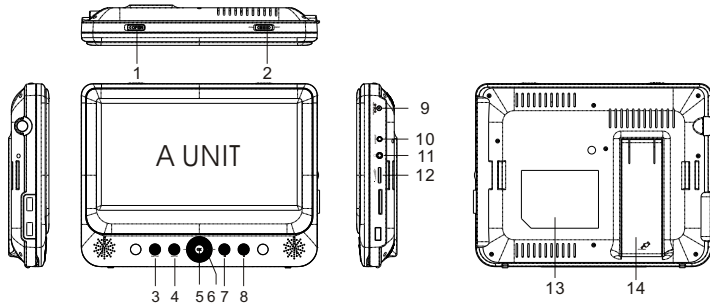

1. Open knob
2. Power ON/OFF switch
3. SETUP button
4. MUTE button
5. ▲ (⏪) / ▼ (⏩) / ◀ (⏮) / ▶ (⏭)
6. OK button
7. PLAY/PAUSE button
8. STOP button

9. DC IN 9-12V
10. AVOUT
11. Earphone jack
12. Volume knob
13. Rating label position
14. Bracket

 Overview of Unit B

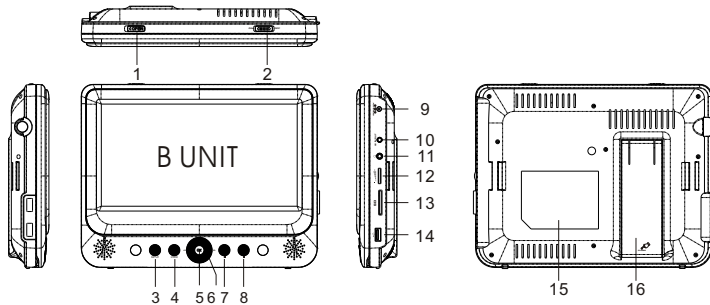


1. Open knob
2. Power ON/OFF switch
3. SETUP button
4. MODE button
5. ▲ (⏪) / ▼ (⏩) / ◀ (⏮) / ▶ (⏭)
6. OK button
7. PLAY/PAUSE button
8. STOP button

9. DC IN 9-12V
10. AVIN/OUT
11. Earphone jack
12. Volume knob
13. SD card slot
14. USB Port
15. Rating label position
16. Bracket


System Connection

Powering and installation

 Plug one end of the AC/DC power adaptor into the DC IN 9-12V jack on the right of the unit, then plug the other end into the AC power receptacle. Please refer to the following illustration.

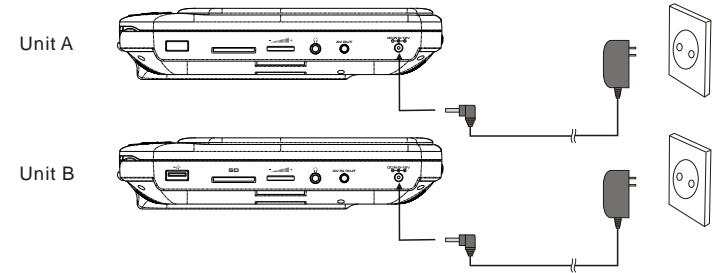

 If using car cigarette lighter adaptor to connect to the power: Plug one end of the cigarette lighter adaptor into the DC IN 9-12V jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

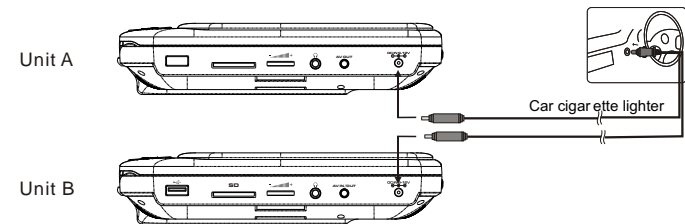


Note:

- ※ Car cigarette lighter adaptor is available to use only when the car cigarette lighter with DC 12V negative grounding.
- ※ The mains plug is used as the disconnect device, the disconnect device should remain readily operable.

Connecting To Unit A/B


1. Connect unit A and unit B with AV cable.
2. Connect the unit to power by AC/DC adapter or cigarette light adapter
3. Turn on these two units, insert a disc into the disc compartment of the main unit A, press the IN/OUT key on remote control B to change Unit B to AV IN mode, then you can see the same image on both units.
Please refer to the illustration below.

 Note:
Unit B has AV IN and AV OUT function. Unit A only has AV OUT function. So unit A can be connected to unit B and TV, unit B can only be connected to TV.

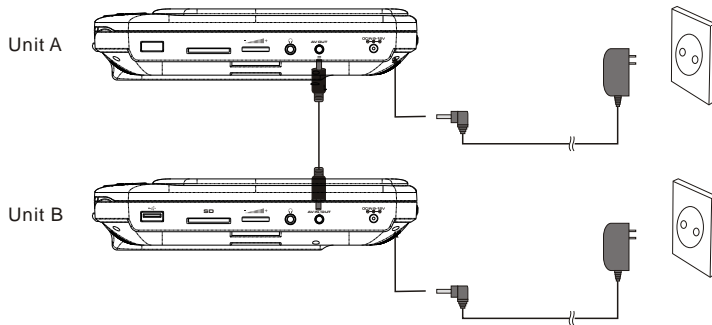


In Car Installation Guide

 1. Fitting the headrest mount to the DVD Player.

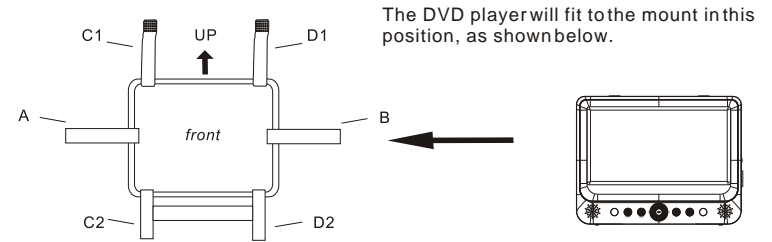


The DVD player will fit to the mount in this position, as shown below.

 Turn the headrest and player around so the backs are facing you.

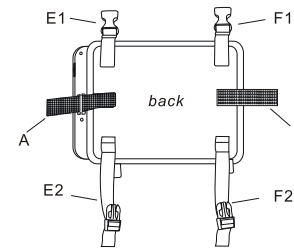

Slide the vertical straps A and B through the strap lock upon the back of the DVD Player, or monitor, as shown. Fold and secure the horizontal straps on to the back of the mount until the velcro attaches. Ensure the DVD Player or monitor is mounted centrally.

 Turn the headrest and player around so the front is facing you.

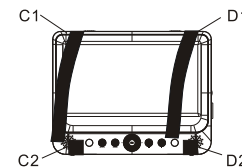


Bring straps C1, C2, D1 & D2 in front of the DVD Player and attach to the velcro as shown.


Note:
Both the headrest mounts are the same, there is no difference for DVD Player or Monitor.

2. Fitting the head rest mount to the headrest.

 a. Fitting the head rest mount to the headrest.

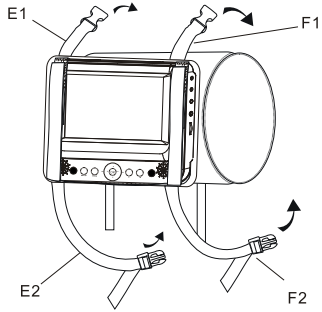

 
Fit the straps around the headrest and engage the 2 trident clips. Ensure clips are securely fastened.

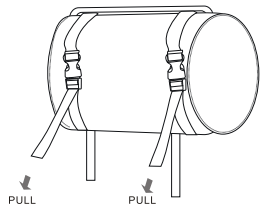


Pull the straps tight using the adjustment. Tuck the loose ends into the strap tidy.

b. Fitting the headrest mount to the seat.

 
The mount is designed for the separated headrest, some cars/vans don't have separated headrest, if the seats look like as below, you must follow the below installation to fit the mount.

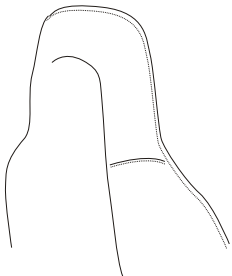

 2. Fitting the headrest mount to the headrest.

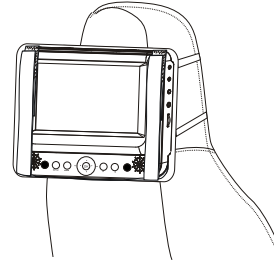

 
Let the belts crossing horizontally to the top seat and engage the 2 trident clips. Ensure clips are securely fastened.

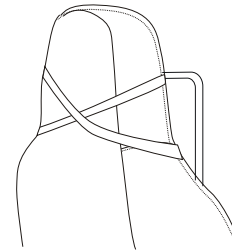

Pull the straps tight using the adjustment. Tuck the loose ends into the strap tidy.


Note:

 Be sure to complete the installation then use SDVD9805 in the car. For SDVD9805 installation is recommended that the DVD Player is on the LEFT headrest, to ensure a neat cable run to the monitor, as shown below.

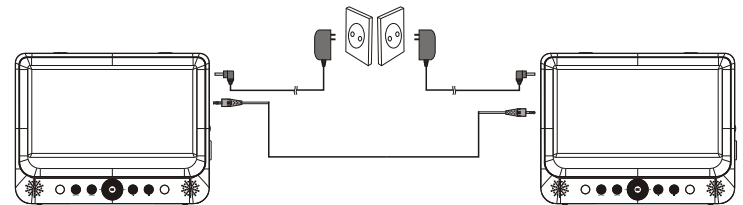


Connecting with external Speaker

 Both unit A and unit B can be connected with external speaker. Please see the following illustration.

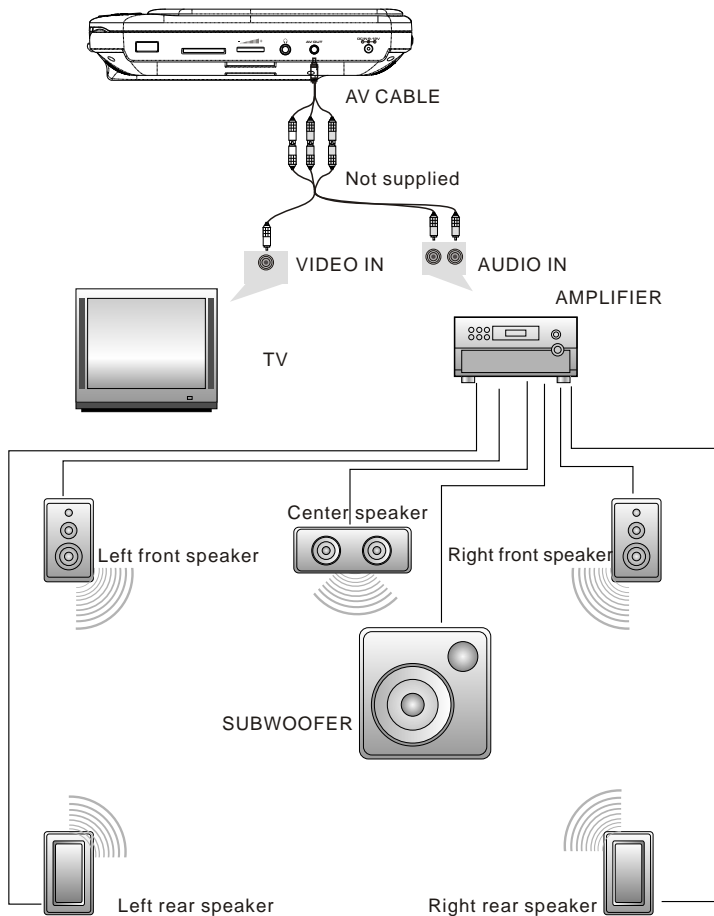


Note:
There is no 5.1 channel in the unit, however, after connecting to APM it is available to output audio in 5.1 channel.

 The Remote Control of Unit A

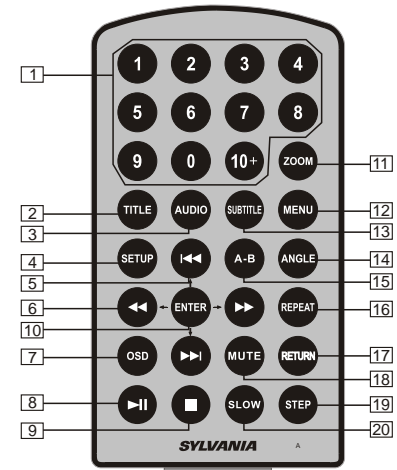

1. Number button
2. TITLE (To display title information)
3. AUDIO (To select audio language)
4. SETUP (To go to or exit setup menu)
5. ◀▶ button (To go to Previous/next chapter or scene during playing)
6. ◀▶ button (To scan forward / backward at 2, 4, 8, 16 or 32 times)
7. OSD (To display disc information during playing such as elapsed and remaining)
8. ▶|| Play/pause
9. ■ STOP (press once to stop playback, then press ▶|| to resume playback from the point where you stopped; press stop button twice to stop playback completely.)
10. ENTER (To confirm)
11. ZOOM (To zoom in the image during playback)
12. MENU (To enter or exit menu root)
13. SUBTITLE (To select subtitle language when playing DVD disc)
14. ANGLE (To change viewing angle when playing disc with multi-angle)
15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat playing)
16. REPEAT (To Repeat playing title, chapter or track)
17. RETURN (To return to the main menu)
18. MUTE (To turn mute)
19. STEP
20. SLOW

 
The Remote Control of Unit B

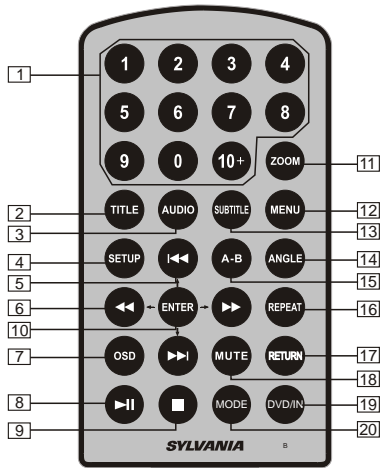


1. Number button
2. TITLE (To display title information)
3. AUDIO (To select audio language)
4. SETUP (To go to or exit setup menu)
5. \ll / \gg button (To go to Previous/next chapter or scene during playing)
6. \ll / \gg button (To scan forward / backward at 2, 4, 8, 16 or 32 times)
7. OSD (To display disc information during playing such as elapsed and remaining)
8. || Play/pause
9. \blacksquare STOP (press once to stop playback, then press || to resume playback from the point where you stopped; press stop button twice to stop playback completely.)
10. ENTER (To confirm)
11. ZOOM (To zoom in the image during playback)
12. MENU (To enter or exit menu root)
13. SUBTITLE (To select subtitle language when playing DVD disc)
14. ANGLE (To change viewing angle when playing disc with multi-angle)
15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat playing)
16. REPEAT (To Repeat playing title, chapter or track)
17. RETURN (To return to the main menu)
18. MUTE (To turn mute)
19. DVD/IN
20. MODE

The Use of Remote Control

 Please put the battery into the remote control as per illustration below.

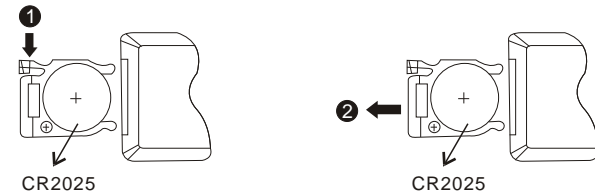

 When using remote control, make sure the infrared window is pointed to infrared receiving window of the unit. The distance between the unit and remote control must be within 3 metres. Please refer to the following illustration.

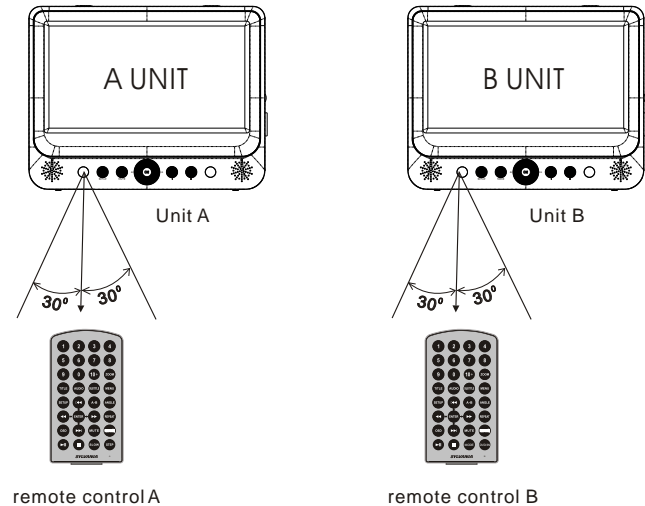

- Note:
1. To avoid falling off or place near damp environment.
 2. To avoid infrared receiving window of the unit being under direct sunlight.
 3. Please use a new battery to replace old one if the remote control doesn't work.
 4. Remote control A can only operate unit A, Remote control B can only operate unit B.

Basic Operation




Playing disc of DVD, SVCD, VCD, CD, MP3.

1. In the SourceMode ,you canpress "◀◀", "▶▶",to select "ENTER" key to enterthe source you want.



2. Open the disc door andinsert a discinto the door with the labelside facing up.
3. Close the disc door. The unit willload the discand start playing.
4. Press ■ once to stop playback; then press ▶| to resume playback from the point where you stoped; press ■ twice to stop playback completely).
5. During playback,press ▶| to pause;press it again to resume playback.
6. When the playingis finished, please turn off the power by sliding ON/OFF switch to OFF.
7. For someDVD disc with Title or Chapter menu, press "MENU" button to enter menu page, and use ◀◀ ▶▶ ◀◀ ▶▶ to select. Press "ENTER" to confirm.

 Note:
Please do not disconnect USB devices or plug out SD/MMC cards while they are working with the unit. Functional failure may occur in case of wrong operations.

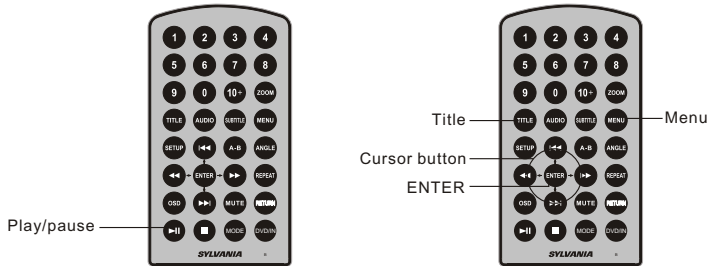


Fast Forward And Fast Backward





When playing disc of DVD,SVCD,VCD,CD, the machine can search forward or backward.

 1. Press"▶▶",the unit will search forward. Pressit repeatedly ,the machine will play at 2, 4,8, 16, 32 times of speed.

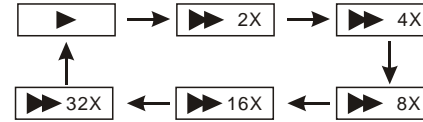

  2. Press"◀◀", the unit will search backward. Press it repeatedly,the machine will play at 2,4,8,16,32 times of speed.

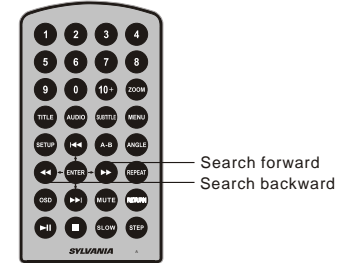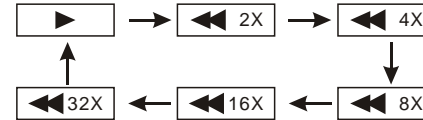

Repeat Playing



When playing disc of DVD,SVCD,VCD,CD,user can repeat playing one chapter, title or the whole disc.

For DVD disc,press"repeat"button,user can repeatplaying one Chapter;press it again to repeatplaying Title;press it the thirdtime to repeatplaying the whole disc.



For MP3 disc,press"repeat"button to repeatplaying present file;press it again to repeat playing the folder;press it the thirdtime to cancel repeat function.



For CD/VCD disc,press "repeat"button repeatedly to repeat the track and the whole disc.

 


Repeat playing of favorite scene




When playing disc of DVD,SVCD,VCD,CD,MP3,user can repeatedly play a specific section.

During playback,press "A-B" utton at a point A,then press this button again in point B,the unit will automatically repeat playing the partbetween "A-B".

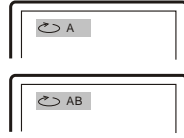

 Press it the third time,the unit will return tonormal playback.

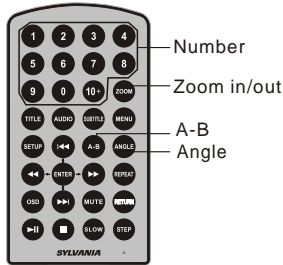

Angle



 
During playing DVD disc with multi-angle, press "Angle"button to change the display angle.

Note:
The function is available only for discs with multi-angle.

Zoom in/out


When playing disc of JPEG usercan zoom in or zoom out the image.

During playback,press Zoom button,the image will be enlarged;press it again the image will be enlarged again;press it fifth time,the image will zoom out,press it repeatedly and the image will return to normal status.

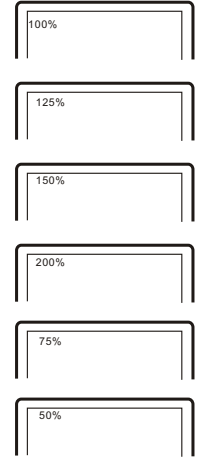


When playing disc of DVD,VCD usercan zoom in/out the image.

 During playback,press Zoom button,the image will be enlarged;press it again the image will be enlarged again;press it fourth time the image will zoom out,press it repeatedly and the image will return to normal status.

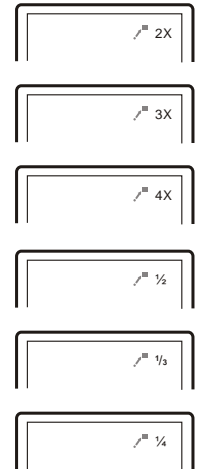

When the image is enlarged,user can press "◀▶" to move the image.

 Note:
Unit Acan't zoom out image when playing disc of DVD, VCD,SVCD.

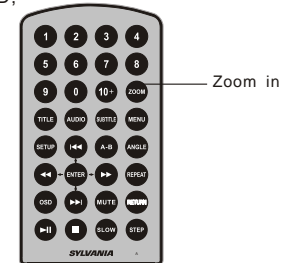


Playing JPEG File

1. Place a JPEG disc into the tray, the unit will start reading and play.
2. Press "◀▶▶▶" to select a JPEG file and press "ENTER" button to confirm.
Note: you can press "MENU" to return to the folder list. Press "▶▶" or "ENTER" to preview the file selected.
3. To rotate the picture counter-clockwise, press "◀◀"; Press "▶▶" to rotate the picture clockwise.
4. During viewing files, "⊙" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.

Playing MP3 Files In Date Disc

 1. Place MP3 disc into the disc door. Press "◀▶▶▶" or "ENTER" button to choose an MP3 file; Press "▶▶" or "ENTER" button to play the file selected.

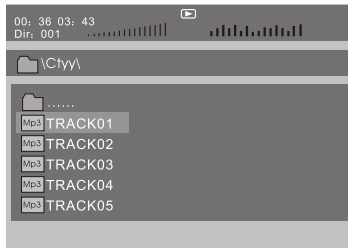




System Setup

	<p>Press Setup button, the main menu will be displayed on the screen In the General Setup Page, Press ▶▶ button to highlight this item. Press ENTER button to access. Press ◀▶▶▶ button to select the setting. Press ENTER button to confirm your selection. Press ◀◀ button to exit.</p>
--	---


General Setup Page





	<p>TV display: Enter this option, user can set screen display format (Normal/PS, Normal/LB, Wide) The default is "Wide" Note: ☆ The function depends on the display ratio with which the DVD disc is recorded. ☆ Please choose "Wide(16:9)" when using a 16:9 wide screen TV set.</p>
	<p>Angle Mark: Enter this option to set the angle during playback. Optional setting: ON, OFF The default is ON</p>
	<p>OSD Language: In the option user can set OSD menu language (English, French, German, Italian). The default is English</p>
	<p>Screen Saver: Enter this option to set whether to activate the screen saver function. The default is ON.</p>

   Video Setup Page

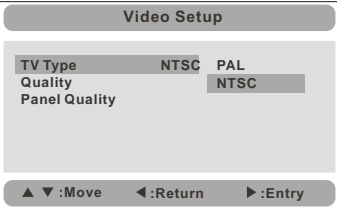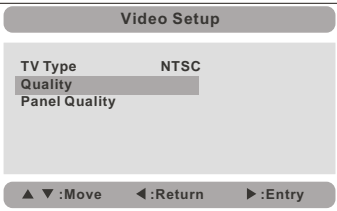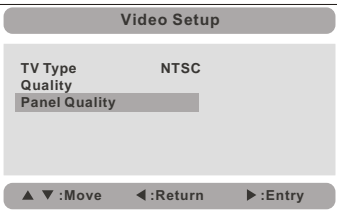	<p>TV Type: Enter this option to select TV type(PAL,NTSC) The default isNTSC.</p> <p>Note: Only unitB has the "Quality" item, unitA does not have.</p>
	<p>Set the Video Quality of AV OUT</p>
	<p>Set the Video Quality of PANEL</p>

 
Preference Page

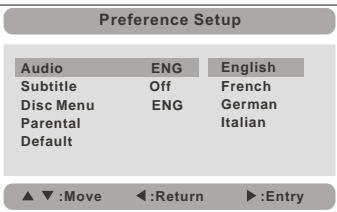	<p>Audio: Enter this option,user can select preferred audio language for DVDs. The default is English.</p> <p>Note: ☆ The audio language depend on the material on each disc. ☆ User can also change the audio language durin g playback by pressing the Audio button.</p>
---	---

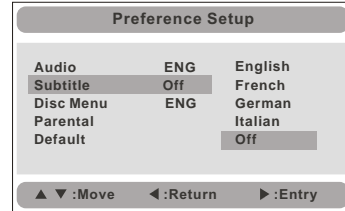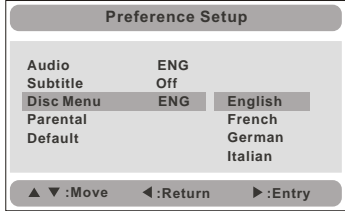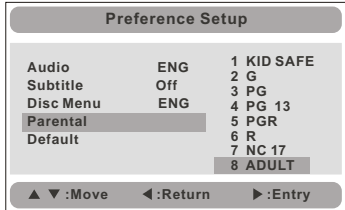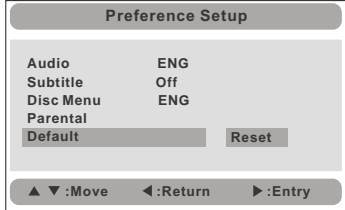    	<p>Subtitle: Select your preferred language to show the subtitles on the screen. The default is OFF The subtitle languages depend on the information available on each disc, You can also change the subtitle language during playback by press the SUBTITLE button.</p>
	<p>Disc Menu: This function allows you to choose the menu language stored on the disc. The default is English. Note: the disc menu languages depend on the information available on the disc.</p>
	<p>Parental: Enter this option to set the parental control level to some unsuitable disc scenes being watched by the children. Optional parental control levels: KID SAFE, G, PG, PG 13, PGR, R, NC17, ADULT. The default is ADULT. The default password: 8888.</p>
	<p>Default: Select this item and press ENTER button to reset.</p>

SD/MMC/USB Main Menu

 P22-P26 is only available for UNITB, not available for UNITA

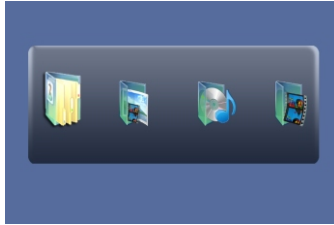

After entering the SD/MMC or USB, the system will show Main Menu which includes 4 Function ICONS. You can select them by "◀▶" and press "ENTER" key to confirm.



Browser Mode
Please refer to P23 for detail explanation



Photo Mode
Please refer to P23 -24 for detail explanation



 
Music Mode
Please refer to P24 for detail explanation



Movie Mode
Please refer to P25 for detail explanation

Note:
Media cards formatted in exFAT file system are not supported.

Browser mode

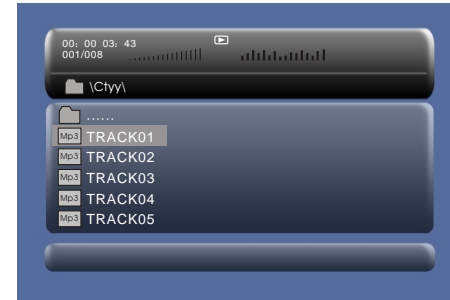

In the Browser Mode, the system will show the list of file and folder.
"◀", "▶", "ENTER" key: select and play
"▶": Enter the folder
"◀": Quit the folder

Note:
If you want to return to the Main Menu, please make sure the system is in list of file or folder status, then press "RETURN" KEY.

Photo mode



In the Photo Mode, the System will show the thumbnail Mode first.
"◀", "▶", "◀◀", "▶▶", "ENTER": select and play.
Slide Show: play the JPEG.
Menu: Enter the Help Menu.
Prev: Page Up.
Next: Page Down.

When playing JPEG :

1. To rotate the picture counter-clockwise, press "◀◀"; Press "▶▶" to rotate the picture clockwise
2. Press OSD button when viewing pictures, you can select different refresh mode as follows:
 1. from top to bottom
 2. from bottom to top
 3. from left side to right side
 4. from right side to left side
 5. from left top to right bottom
 6. from right top to left bottom
 7. from left bottom to right top
 8. from right bottom to left top
 9. from horizontal center to both sides
 10. from vertical center to both sides
 11. from top and bottom to center
 12. from right and left to center
 13. from four window's top side to bottom side
 14. from four window's left side to right side
 15. from 4 edges to center
3. During viewing files, "⊘" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.
4. When viewing JPEG files, press "■" and "RETURN" key, pictures will be displayed in thumbnail mode, press "◀◀▶▶◀▶▶▶" or "ENTER" button to select one picture to view.

Note :

If you want to return the Main Menu, please press "RETURN" key in the thumbnail mode.

Music mode



In the Music Mode, the system will show the list of music file, like Mp3 and soon.

Press "◀◀", "▶▶", "ENTER", select and play.

Press "◀◀ ▶▶" to fast forward/backward MP3 during playing.

Press "◀▶" to select the function button when in "stop" status.

 
Page-: Page Up.

▶: play

Page+: Page Down

Note: Press "Return" Key to Return to the Main Menu.

Movie mode

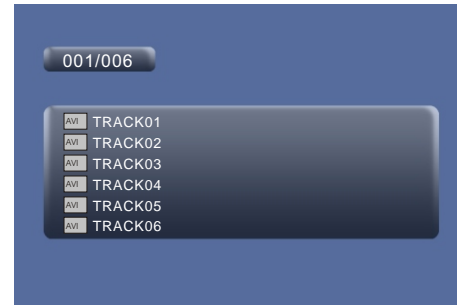

In the Movie Mode, the system will show the list of Movie file, like AVI and so on. "◀◀", "▶▶", "ENTER" Key: Select and Play.

When playing movie you can press "MENU" and "Return" Key to back to the list of movie file status. And if you want to Return to the Main Menu, Please Press "Return" key in list of Movie file status.

CD RIPPING

During playing the CD/HDCD disc, you can enter CD Ripping function. By pressing subtitle button, DVD player will be able to change the CD format into MP3 format, and then store it in the USB or SD card.

CD RIP			
Options		Track	
Speed	Normal	Track 01	03:36
Bitrate	128kbps	Track 02	03:36
Create Id3	Yes	Track 03	03:36
Device	USB 1	Track 04	03:36
		Track 05	03:36
		Track 06	03:36
		Track 07	03:36
SUMMARY			
Selected Track	0		
Selected Time	00:00		
Start	Exit	All	None

Speed: In this item, you can set the rip speed: Normal or Fast.

Bitrate: In this item, you can set the bitrate. It has 6 choices, 128Kbps, 192Kbps, 256Kbps, 320Kbps, 96Kbps and 112Kbps.

Create ID3: In this item, you can create ID3 when playing CD text.

 
Device: This item indicates whether USB or SD CARD is connected with DVD player.

Exit: Exit to the previous menu.

All: Select all the files in the disc for conversion and storage.

None: Cancel the selection.

Start: Move the cursor to the item and press "ENTER" button, the conversion begins. During the converting, you can select "CANCEL" to stop it.

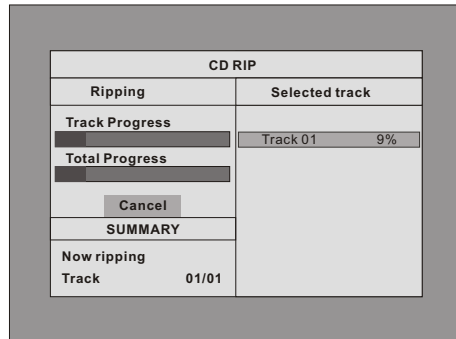

Specification

Compatible disc: DVD/VCD/CD/MP3

Signal system: PAL/NTSC

Panel size: 9 inch

Frequency response: 20 Hz to 20 kHz

Video output: 1 Vp-p/75 Ohm, unbalanced

Audio output: 1.4 Vrms/10 k Ohm

Audio S/N: Better than 80 dB

Dynamic range: Better than 85 dB

Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm

Power source: DC 9-12 V

Power consumption: 10 W

Operating temperature: 0~40°C

Weight (2 DVD Player): 1.1 / 1.1 kg

Dimensions (2 DVD Player) (W x D x H): 245x190x41.9/245x190x41.9 mm

Battery Type: Li Polymer

Note:

1. The quality and speed for reading JPEG photos depend on the resolution and compression ratio of the photos. Some JPEG photos may not be played due to the disc quality and the formats.
2. Some DVD+R/RW, DVD-R/RW, CD-R/RW disc may not be played due to the quality on burning conditions.

Rechargeable Battery Use

The machine utilizes long-life Li polymer battery for portable power supply. The battery has no "Memory Effect" and thus can be recharged safely regardless of whether the battery is fully or partially discharged. It's enough to recharge no longer than 4H each time, fully recharged battery can last about 2.5 hours with earphone.

Precautions related to Battery Recharge

The battery can be only recharged when turning power to OFF state, and keep continuous power supply, the red light will be on, and the light will turn yellow when it's fully charged.

 
Using and Maintaining Rechargeable Battery

1. The normal working temperature is: 0°C ~40°C;
2. Always unplug AC/DC power supply for the unit when not in use;
3. Heat will create during playing, it's normal, while avoid long time playing and unattendance;
4. Avoid having the unit collide with any objects, and place away from all possible heat sources or damp areas.

Caution:

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Removal Of Waste Battery

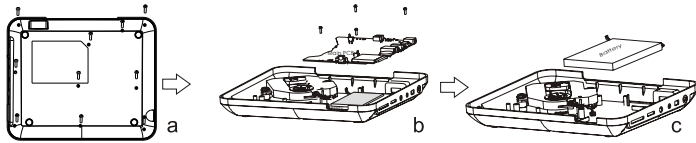

Before to discard EOL unit, please remove the waste battery by below steps:

 
- a. Pull out the screws on the bottom cover by the screwdriver to unpack the unit.
- b. Pull out the screws on the Main PCB board by the screwdriver to unpack the PCB board and then the battery can be seen.
- c. Remove the battery socket from the board.



If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic equipment Directive)

Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.

Troubleshooting

PROBLEM	SOLUTION
No sound or distorted sound	Make sure the machine is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon  appears on screen	The feature or action cannot be completed at this time because: 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range.
Picture is distorted	The disc might be damaged. Try another disc; it is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	Some discs have sections that prohibit rapid scanning or chapter skip; if you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.