

User Manual

Thank you for using our company's products, please read the user manual carefully before using this product. When you start to use this equipment, we believe that you have read the user manual carefully.

Attentions:



Secure Startup: Avoid turning on the equipment in the very dry or humid environment, to prevent damaging of the equipment;



Using qualified maintenance services: Only qualified maintenance personnel can repair the equipment, Please do not dismantle the equipment by yourself




Connected to other devices: When connected to other

equipments, please read the user manual of the equipment to obtain detailed safety instructions, do not connect to other device that the equipment not equipped with.



Backup Important data of this equipment please do a back up, any error operational methods resulting in paper loss, the company shall not be responsible for.

Host Interface:

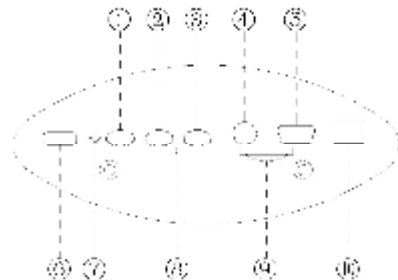

- ①Video/Photograph
- ②Laser Light On/Off
- ③Playback
- ④TV OUT
- ⑤Mini USB
- ⑥Mode Change Switch
- ⑦MIC/LED Indicator Light
- ⑧Reset
- ⑨TF Slot
- ⑩DC Port

Operation Instruction:

Note: The following operations are required to operate in standby mode and ensure that the identified T-Flash card was inserted to the card slot properly.

Power On: When connect vehicle power supply, the device will automatic turn on and enters the standby state. If not connect the vehicle power, press ① for three seconds, the green light is on, it indicates that the device is turned on and has entered standby mode.

In tandby status, It is motion detection mode if ⑥ in the "M" position; it is video mode if ⑥ in the "V" position; it is photograph mode if ⑥ in the "P" position

Laser light: In tandby status, Press ② key, laser light is on, loosen ② key, laser light

is off.

Motion Detection: In standby Status, move ⑥ to "M" position, it indicates that the equipment has entered the motion detection mode, when the camera lens detects moving objects that start recording, then blue light is on. It will Automatic record video for ten minutes and save the file when the moving objects detected. If the moving object is detected continuously, the device will automatic record video continuously.

Video: In standby Status, move ⑥ to "V" position, short press ① once, blue light is on, then entered to video mode. In vide mode, short press ① once, two seconds later the green light on, video files saved automatically, the device automatic returns to standby mode; if need video recording one more time, please repeat the above operation. The device default to save a video every five minutes.

Photograph: In standby status, move ⑥

to "P" position, short press ① key once, the blue light flashes means that the photo shooting is completed and has been automatic return to the standby mode, for more photos, please repeat the above operation.

TV OUT: Use the matching TV cable, connect this device with the equipment which supported by AV IN, press ③ enter into TV OUT state. After that, press ③ again then can view next file, when viewing the video file, press ① key to play the current video file. When playing video files, short press ③ once to stop the play and change to reverse play status, press ① to reverse play.

Power Off: No connect vehicle power, press ① key for two seconds, all the lights are off, means that equipment has been power off. If you disconnect the vehicle power, the device will automatic power off after ten seconds.

Note: When the vehicle power connect with this equipment, please do not turn off

by manual or Reset the equipment.

Time watermarks: Video files with time watermarks. it can be modified, we did not adjust the time of equipments when it comes from factory, if you found it is not accurate, it's easy to adjust by yourself, just use the USB cable and connect the equipment to the computer, After the computer display that found the movable disk (must be insert identifiable TF card), run the CD-ROM, and double click the file "Time.bat" to run, then the equipment automatic change the time to the display-time of computer. After that, pull out equipment from computer, then restart and power off once. The modification of time is finished.

PC Camera: Press ① key and hold it, insert the computer USB, then enter the PC Camera Mode.

Charging: In the course of using, if red light twinkling constantly, means that the electric volume of the host is low, this

device equipped with a DC5V car charger for battery recharge, in the course of charging, if the red light is twinkling constantly, it means it is charging. When red light stops twinkling and then keeps on, it means the recharging finished. please pull out the machine from computer in time, to prevent batteries being damaged.

FAQ:

Q: Why it does not have any response after pressing the ① continuously.

A: Because all operation needs going back to the standby mode, then we can do the next step. The particular operation is written in the manual.

Q: Why the time watermark is not accurate enough after updating the system time?

A: Because the battery support the working of system time. Please do not

exhaust the battery and charge the battery in time, or keep the battery full and adjust the time before you use it.

Q: Why I can not find the mobile hard disk after the equipment is connected to the computer?

A: Please confirm your computer's operating system. It can identify and install the correspond drivers automatically in WINDOWS98SE/ME/2000/X P/MAS OS/LINUX. WINDOWS 98 system need to install drivers which is recorded in the CD-ROM.

Q: Why the picture is not so clear?

A: The equipment does not possess the function of preventing free of shaking, Please keep your hands and the object do not shake.