

TEAC[®]

PCD400i

CD Boombox with Docking for iPod



USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

TEAC[®] WARRANTY REGISTRATION

Please read this warranty card.
Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.

Warranty Terms & Conditions

1. TEAC warrants to the original retail purchaser only, that this product is free from defects in material and workmanship under normal domestic use and authorises free service during the warranty period at any TEAC Authorised Service Centre only. TEAC warranty only applies to products purchased, used and serviced in Australia.
2. Subject to the terms herein, this warranty effectively covers the equipment as specified in the Warranty Periods Table below from the date of purchase.

TEAC PRODUCT	WARRANTY PERIOD
Plasma TV 106 cm and above	1 Year (In-Home Service/ Pick up Available)*
LCD Televisions 80 cm and above	1 Year (In-Home Service/Pick up Available)*
Televisions – 59cm and above	1 Year (In-Home Service/ Pick up Available)*
All Televisions under 59 cm	1 Year (No In-Home Service)
Digital Set Top Boxes & Module	1 Year (No In-Home Service)
VCR	1 Year (No In-Home Service)
DVD & Module	1 Year (No In-Home Service)
DVD Recorder & PVR Module	1 Year (No In-Home Service)
Audio Systems	1 Year (No In-Home Service)

3. In Home Service/Pick up* will only be provided as part of this warranty if all the following conditions are met:
 - a) The product as indicated in the Warranty Period Table.
 - b) The product is within the warranty period.
 - c) The product is located within the normal service area of the local TEAC Authorised Service Centre.

In any other situation or circumstance, where an In Home Service/Pick up* call is made, a service fee will be charged by the Service Provider including a travel fee if outside normal service area.

If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

Where In-Home service/Pick up* is not available, the purchaser is required to send the product to the nearest TEAC Authorised Service Centre for repair. In this event, a copy of this warranty card and a copy of your receipt of purchase must be enclosed to be a valid warranty. Such equipment or part must be sent freight prepaid to your nearest TEAC Authorised Service Centre. After the repair, the product will be available for collection by or return to the purchaser at purchaser's cost. The warranty does not cover freight or insurance. In all cases of transit damage or lost, a claim must be filed against the carrier by the purchaser, even if shipment is arranged by TEAC. TEAC in-home service may also be available at a fee upon request.

4. Accessories, Remote, including power adaptors, AV box, TV tuners, etc, are warranted to be defect free for 1 year.
5. Replacement of spare parts under normal usage; except cabinet, front panel, knob, removable accessories, battery, consumable, AC cord, connecting cord and other accessories, are warranted as specified in Warranty Periods Table, and will be repaired or replaced at the sole judgement of TEAC.
6. The warranties hereby conferred do not extend to, and exclude, any cost associated with the installation, de-installation or re-installation of a product (be it in-home or otherwise), including costs related to the mounting, demounting or remounting of any screen, (and any other ancillary activities), delivery, handling, freighting, transportation or insurance of the product or any part thereof or replacement of and do not extend to, and exclude, any damage or loss occurring by reason of, during, associated with, or related to such installation, de-installation, re-installation or transit.
7. Normal customer maintenance as described in the owner's manual is not covered by this warranty (such as cleaning VCR heads etc.)
8. Service will be provided only during normal business hours and under safety conditions and circumstances.
9. This warranty does not apply to equipment showing abuse, damage or that it may have been tampered with, altered or repaired outside any TEAC Authorised Service Centre. If so, the warranty will be void.
***Your nearest Authorised TEAC Service Centre is listed in your Owner's Manual, please refer to TEAC website for up to date list.**
10. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
11. In no event will TEAC be responsible or liable for indirect or consequential damages from interrupted operations or other causes.
12. Warranty is not transferable to any subsequent purchaser if the product is sold during the warranty period.
13. LCD dead pixel policy, please contact TEAC Customer Care Centre on 1800 656 700 for assistance.

*** Extended promotional warranty may apply to certain products**

(for more info please contact: service@teac.com.au)

In home service administration fee is applied after 1st year of warranty.



WARRANTY PROCEDURES

Please keep this information for your own records.

Please refer to the owner's manual to ensure that you have followed the correct installation and operating procedures.

1. Read owner's manual carefully
2. If you require Warranty Service, please contact the TEAC Authorised Service Centre
3. Please have your purchase receipt as your proof of purchase and the following details completed for a valid Warranty.

Owner's Name

Owner's Address

Postcode

Model Name/No.

Serial No.

Dealer's Name

Dealer's Address

Postcode

4. Please ensure that your product is packed appropriately upon return to the service centre.

If you have any other queries regarding service or warranty please contact the TEAC Customer Care Centre below:



service@teac.com.au

www.teac.com.au

1800 656 700

 


CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

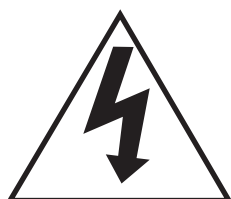

DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

 
Unpacking and Installation:

Unpack your unit carefully. We recommend that you save the packaging in case you ever need to store your unit. To avoid damage, never place the unit or its batteries near radiators, in front of heating vents, under direct sunlight or near water.

 
 
Safety - Important

- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.
- To completely disconnect the power input, the mains plug of the apparatus shall be disconnected from the mains.
- The mains plug of the apparatus should not be obstructed OR should be easily accessed during intended use.”
- The marking information is located at the bottom of apparatus.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Batteries shall not be exposed to excessive heat such as sun light, fire, etc.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- If the unit is not to be used for a long time, please remove the batteries / AC power cord first.
- If you are using DC battery operation, please remove the AC power cord first.



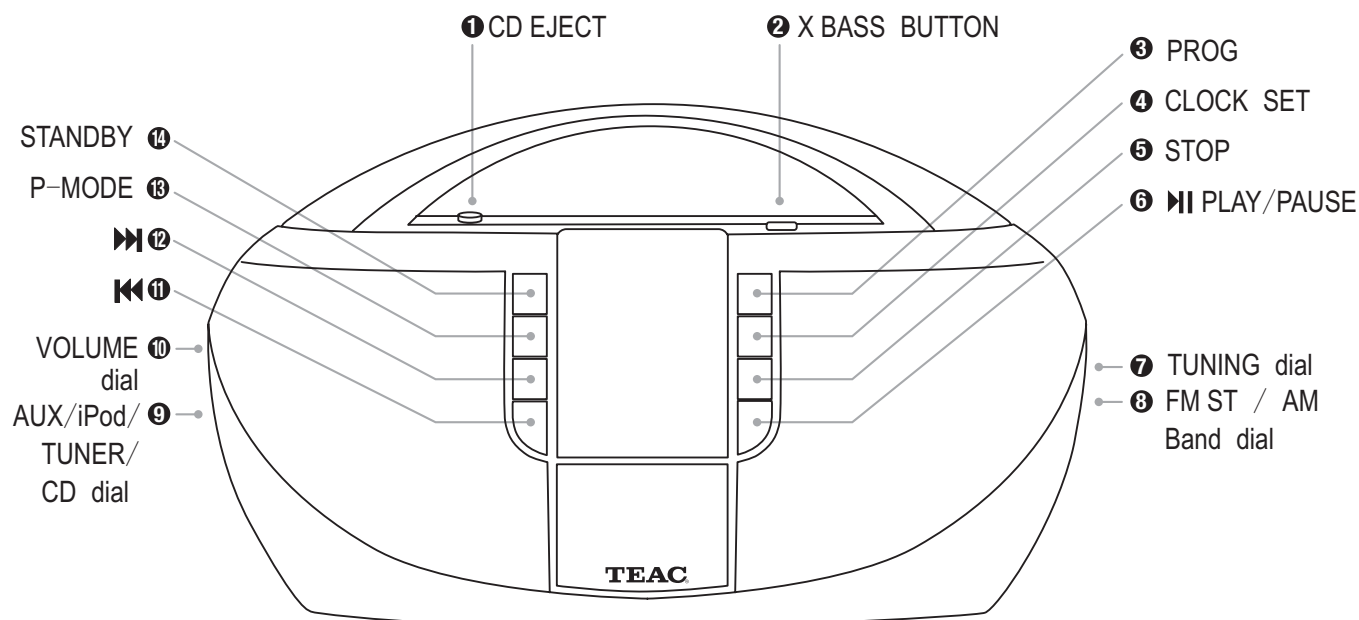



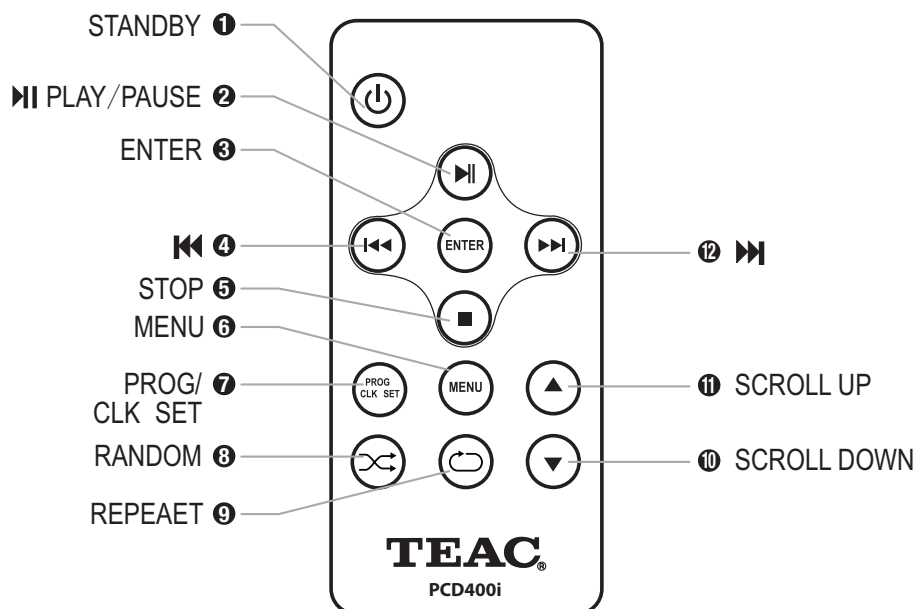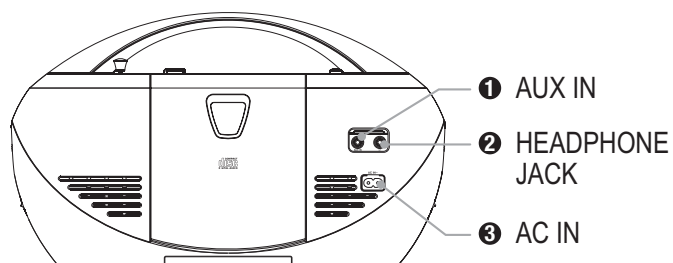



CONTROLS




Made for iPod touch, iPod classic, iPod, iPod nano, iPod mini



  
Compatible iPods chart

	Model	Output	Charge
	iPod 4th Gen	Audio	Yes
	iPod 4th Gen Photo	Audio	Yes
	iPod 4th Gen Color	Audio	Yes
	iPod 5th Gen & iPod Classic	Audio	Yes
	Mini 1st & 2nd Gen	Audio	Yes
	Nano 1st & 2nd Gen	Audio	Yes
	Nano 3rd Gen	Audio	Yes
	Nano 4th Gen	Audio	Yes
	iPod Touch 1st Gen	Audio	Yes
	iPod Touch 2nd Gen	Audio	Yes

 
Box contents

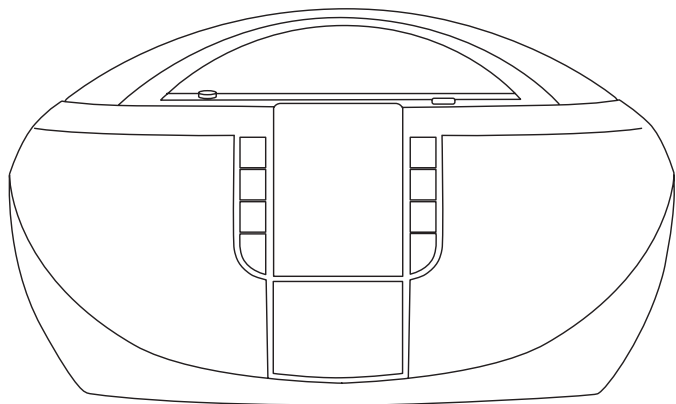


Main unit

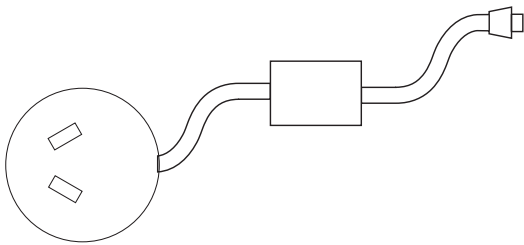 


AC power cable with SAA plug

 

iPod dock adapters

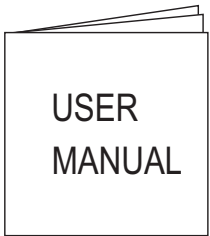 

User manual

 


Remote control







Features:

- CD player with 20 programmable preset tracks.
- Universal iPod dock – see compatibility chart.
- FM/AM radio.
- LCD screen.
- Bass Boost (X Bass).
- Navigate iPod menus with remote control.
- Auxiliary input for use with external audio devices.
- Power from mains or 8 x C sized batteries (batteries not included).

Getting started:

- Plug the AC power cable into the back of the unit and then into the mains supply.
- Press the **STANDBY** button on the unit or  on the remote control to power on / off.
- To select the mode, slide the switch on the side of the speaker to choose between **AUX / iPod / TUNER / CD**.

To use with iPod:

- Slide the **AUX / iPod / TUNER / CD** switch at the side of the unit to select iPod mode.
- Select and insert the correct iPod docking adapter to suit your iPod.
- Carefully insert your iPod into the dock, playback will start automatically.
- To play or pause a track – press  on the unit or remote control.
- To stop a track – press  on the unit or remote control.
- To scan through tracks – press  /  on the unit or remote control.
- To adjust the volume – turn the **VOLUME** dial on the unit.
- To navigate your iPod menus, you must use the remote control:
 - Use the **MENU** button to navigate through the iPod menus.
 - Use the arrow buttons to navigate the various options in the iPod menus.
 - Use the **ENTER** button to confirm your selection.
 - Use  /  buttons to activate repeat or random playing.

To use with CD:

- Slide the **AUX / iPod / TUNER / CD** switch at the side of the unit to select **CD** mode. And press the **CD OPEN** button.
- Carefully insert your disc into the CD slot, the disc will automatically be read.
- To play or pause a track – press **▶||** on the unit or remote control.
- To stop a track – press **■** on the unit or remote control.
- To scan through tracks – press **◀◀ / ▶▶** on the unit or remote control.
- To adjust the volume – turn the **VOLUME** dial on the unit.

(a) Repeat / Random play:

Press either the **↺ / ↻** buttons on the remote control or **P-MODE** button on the unit:

- To repeat the current track – press **↺** or **P-MODE** once, **REPEAT** will appear on the screen.
- To repeat the whole CD – press **↺** or **P-MODE** twice, **REPEAT ALL** will appear on the screen.
- To play tracks at random – press **↻** once or **P-MODE** three times, **RANDOM** will appear on the screen.
- To clear the function – press **↺ / ↻** or **P-MODE** until the **REPEAT & RANDOM** icon disappear.

(b) To program specific tracks:

- Load the CD you wish to program and make sure it is not playing.
- Press the **PROG** button once, the display will flash.
- Use **◀◀ / ▶▶** to find the track you wish to programme (Press **PROG** to store).
- Repeat above step until you have stored all the tracks you wish to store.
- To play the stored sequence, press **▶||** button.
- To clear the memory, press the **■** button once.

To use as a Radio:

- Slide the **AUX / iPod / TUNER / CD** switch at the side of the unit to select **TUNER** mode.
- Slide the **FM ST / AM** Band dial at the side of the unit to select either **FM** or **AM**.
- Use the **TUNING** dial at the unit to scan through radio frequencies.
- To adjust the volume – turn the **VOLUME** dial on the unit.

Warning!

This unit has built-in AM ferrite bar antenna, which provides adequate reception in most areas. If AM reception is weak, turn the unit to improve reception. If FM reception is weak, adjust the length and the angle of the FM antenna.

Use with other audio devices:

- Slide the **AUX / iPod / TUNER / CD** switch at the side of the unit to select **AUX** mode.
- Plug one end of a 3.5mm audio cable (not included) into the AUX port on the rear of the PCD400i and connect the other end into your external audio device's headphone-out or line-out jack.
- Activate your external audio device.
- This will allow you to broadcast the external device's sound through the PCD400i speakers.

Warning!

The remote will not control devices connected via 3.5mm cable.

To set the clock:

In standby mode press and hold the **CLK SET** button on the main unit or remote control and select either 24 hour or 12 hour setting using **◀/▶** buttons (Press **CLK SET** button to save).

The hour display will start flashing, press **◀/▶** buttons to adjust the hour (Press **CLK SET** to save).

 
The minute display will start flashing, press **◀/▶** buttons to adjust the minutes (Press **CLK SET** to finish all clock setting)

Battery Operation

Before installing batteries (not included), ensure that the unit is disconnected from the mains supply.

Remove the battery compartment cover on the back of the unit by carefully pushing back the battery cover. The battery cover can then be lifted away.

Fit 8 x 1.5V C-size batteries (not included), referring to the polarity markings inside the battery compartment. Never mix old and new batteries. Finally, replace the cover. For battery operation, switch off the mains supply and remove the cable from the power socket, battery operation will be selected automatically.

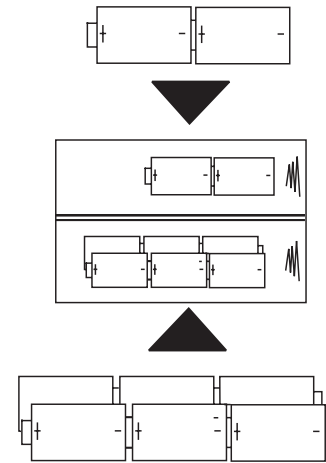

CAUTION!

Danger of explosion if batteries are incorrectly replaced. Replace only with the equivalent type. If you are not going to use your unit for an extended period, please remove the batteries to avoid damage.

 
Remote Control Operation

You must remove the spacer before using the remote for the first time. To remove the spacer, pull off the small tab that is extending outside the battery compartment as shown.

The main functions of this system can be operated by pressing the controls on the front panel of the main unit, or by pressing the corresponding buttons on the remote control.

You should point the remote control at the remote sensor on the front panel. The effective operating range of the remote control is approximately 10 - 15 feet.

Please note that bright sunlight can interfere with the operation of the remote control. If the remote operation is unsatisfactory, try darkening the room before changing the remote battery. The battery should last at least 12 months or longer under normal operating conditions.

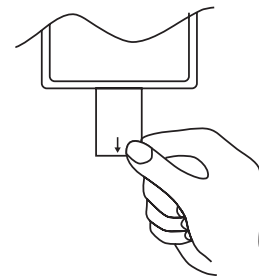


Changing the Lithium Battery

When the operation of the remote becomes intermittent or the main unit no longer responds to the remote commands, it is probably time to change the remote battery.



Open the battery compartment by squeezing the battery compartment-locking tab as shown and slide the battery holder out of the battery compartment.

 Remove the exhausted battery and install a fresh **CR2025** battery in the battery holder with the “+” facing up as shown, then slide the battery holder back into the battery compartment.

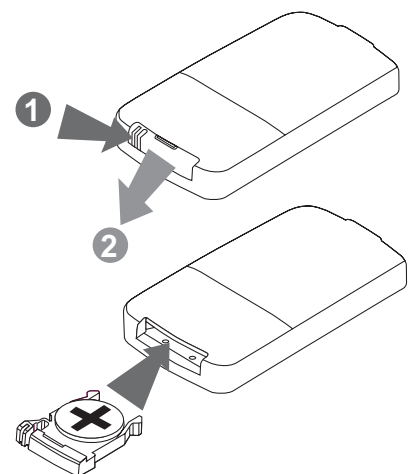

Caring for Compact Discs

  - Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the discs periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit. If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched). When cleaning the disc, wipe in straight lines from the centre of the disc to the outer edge of the disc. Never wipe in circular motions.

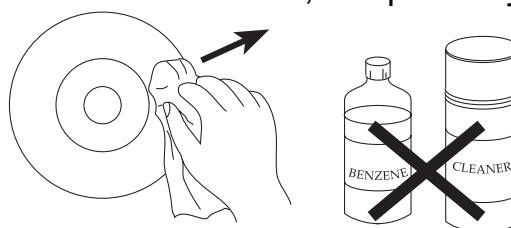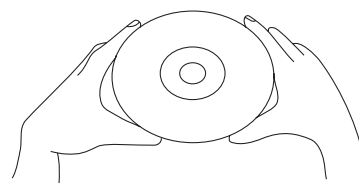

- This unit is designed to play discs bearing the identification logo as shown here. Other discs may not conform to the CD standard and may not play properly.



- Discs should be stored in their cases after each use to avoid damage.
- Do not expose discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments or ink may damage the surface.

Caring of the Cabinet

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Be cautious when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

To Clean the Lens

If the lens is dirty, your player may skip or may not play a CD

- Open the CD door.
- Use a camera lens blower/brush to blow on the lens once or twice, brush the dust or particles off the lens then blow again.
- To remove fingerprints, use a dry cotton swab to wipe from the middle to outer edge of the lens.

Specification

Voltage Rating:	AC 240V 50Hz DC 12V (UM-2 x 8pcs)
Loud Speaker:	3 inch, 4 ohm, 5W
Power Output 10% THD:	2.5W
Remote Battery:	CR2025 x1pcs
DC Battery:	UM2 X 8pcs
Frequency Range:	FM 87.5 ~ 108 MHz AM 522 ~ 1620 KHz
S/N Ratio:	45 dB
Frequency Response:	100 ~ 10000 Hz +/- 6 dB
Supported Disc Type:	For CD, CD-R, CD-RW format only
Power Consumption:	25W
Unit Weight:	2.25 Kgs
Unit Dimensions	390 mm(L) x 135mm (D) x 230mm (H)

NOTE: Specification is subject to change without prior notice. Weight and dimensions are approximate.



TEAC CUSTOMER CARE CENTRE (TCCC)

Free call: 1800 656 700

Between Monday to Friday – EST 9AM to 5PM